


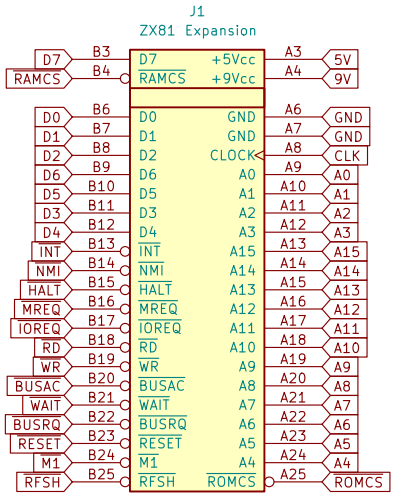


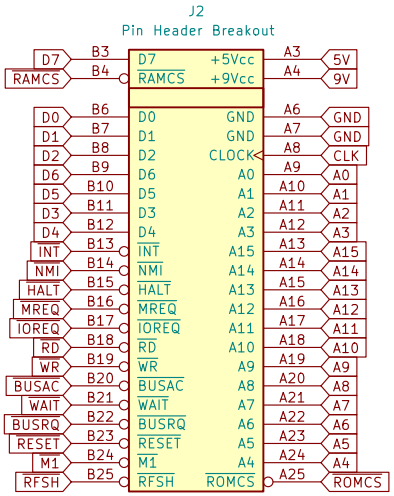

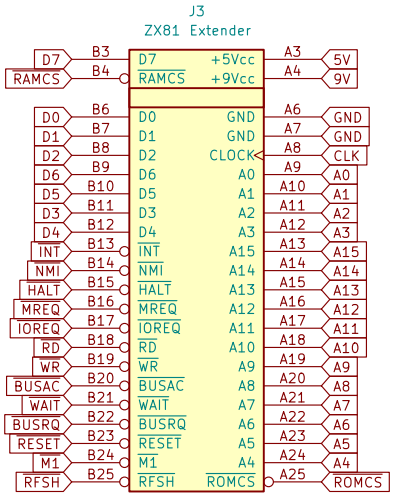



To get the [RESET] button to work two link wires are required, as indicated on the PCB.

Based on ZX81 Bus Extender by Thomas Kolbeck
https://github.com/zxinfo-diy-electronics/zx81-bus-extender

Brett Hallen

Sheet: /
File: ZX81_Expansion_Breakout.kicad_sch

Title: ZX81 Expansion Breakout

Size: A4	Date: 20/Oct/2026	**Rev: Issue 2**
KiCad E.D.A. 10.0.3		Id: 1/1