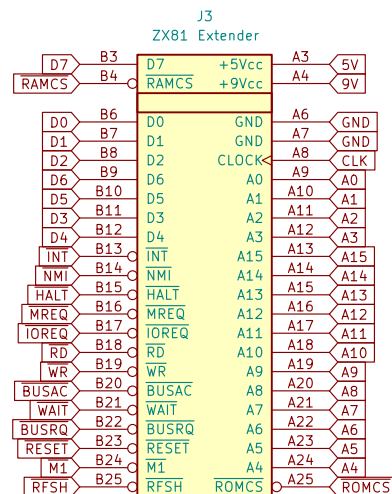
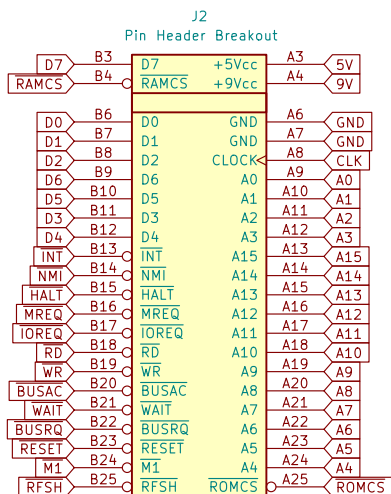
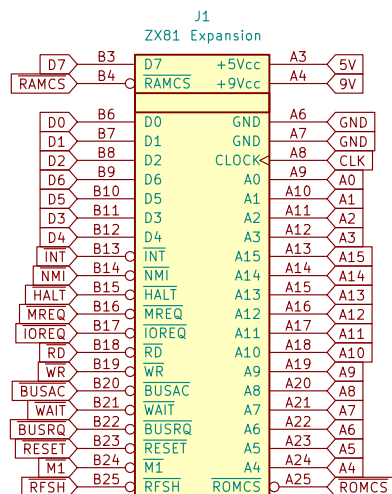


To get the [RESET] button to work two link wires are required, as indicated on the PCB.

Based on ZX81 Bus Extender by Thomas Kolbeck
<https://github.com/zxinfo-diy-electronics/zx81-bus-extender>

Brett Hallen

Sheet: /
 File: ZX81_Expansion_Breakout.kicad_sch

Title: ZX81 Expansion Breakout

Size: A4
 KiCad E.D.A. 10.0.3

Rev: Issue 1
 Id: 1/1