


1. CCHD957 XO adapter KIT

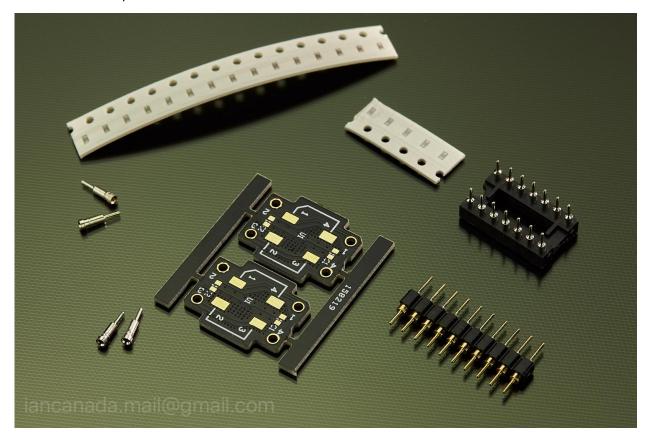


2. Assemble CCHD957 XO and other SMT capacitors to both side according to the schematic

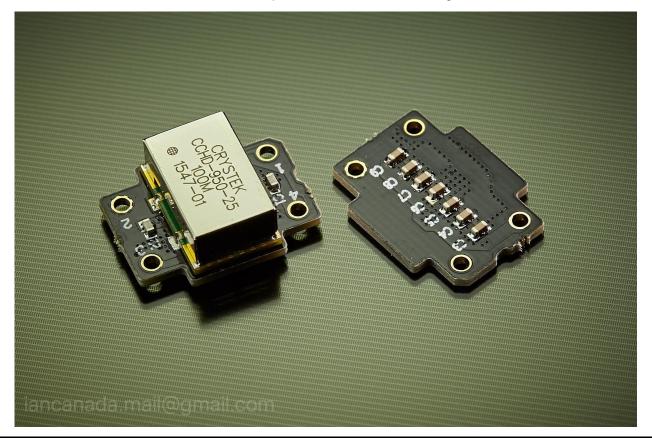


3. Peel the gold plated pins off the supplied SIP connector

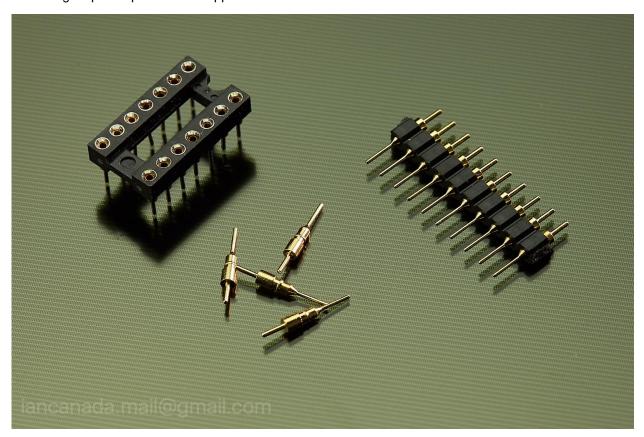


4. Insert the 4 extension pins into the IC socket. Insert the gold plated pins from top (see direction in picture)

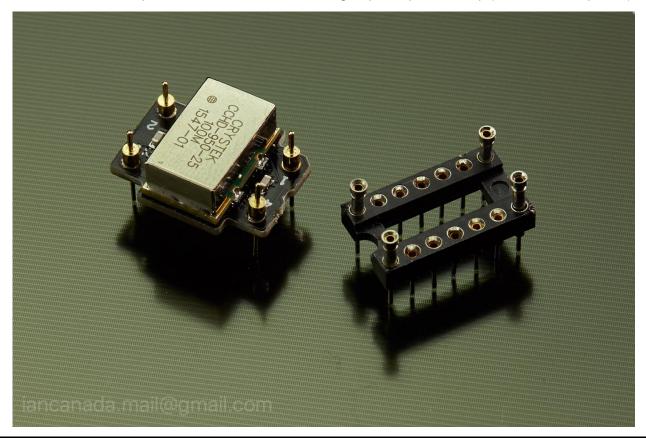

5. Plug the gold plated pins into the extension pins in opposite direction. Solder them at the PCB bottom side

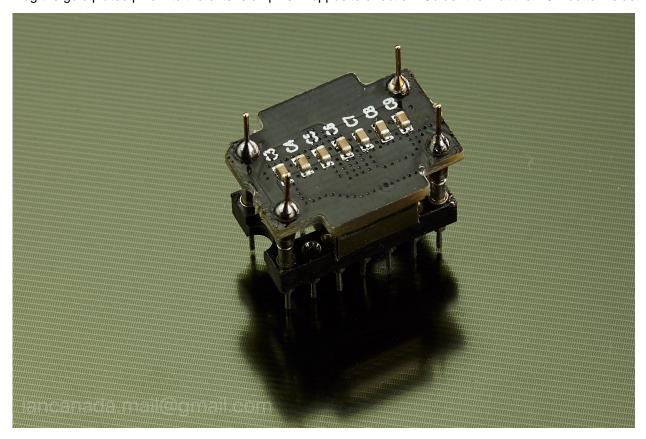

6. Gold plated pins should be assembled in this way

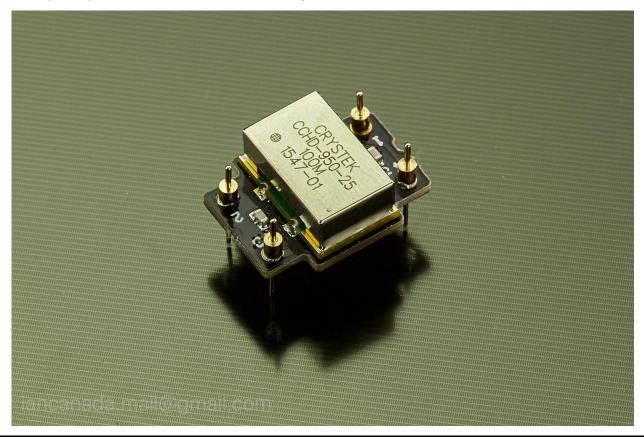

7. Cut the top pins using a side cuter. Assembling job finished.



8. Plug them into the sockets of FifoPi to upgrade clocks of system



9. Plug them into the sockets of McDualXO board to upgrade clocks of system

