Nanomade Lab

CapaForce© Kit Driver Manual

SEPTEMBRE 2024






Driver Installation

On Windows device open **Device Manager**.


If the driver is installed, one port should be named Silicon Labs CP210x USB to UART Bridge in the **Ports (COM & LPT)** drop-down list, as shown in the picture below.



If the driver is not installed, one of the ports should appear with a yellow warning triangle next to it in the **Other devices** drop-down list:

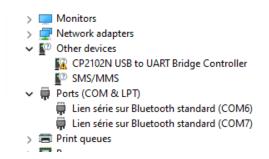


Right-click on this port and select **Update driver**.

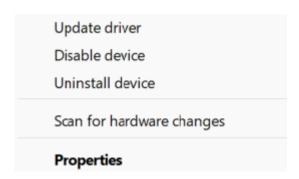




The following window should appear:

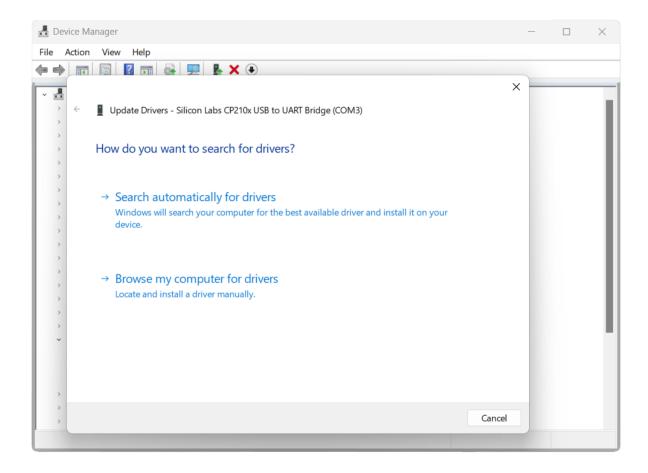

Select Browse my computer for drivers, then Browse on the following window:



Search for the CP210x_Universal_Windows_Driver folder on your device then click on Next then Close.

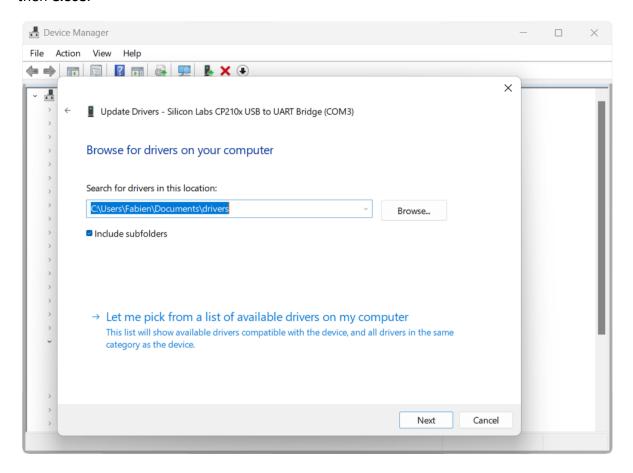

The driver should be installed and the **Silicon Labs CP210x USB to UART Bridge** port should appear in the Device Manager as shown below.