



Samsung Galaxy A15 Screen Assembly Replacement

Follow this guide to replace the screen...

Written By: Nick Schultz



INTRODUCTION

Follow this guide to replace the screen assembly (including the frame) on a Samsung Galaxy A15.

To reassemble the device, you'll need replacement adhesive for the back cover, vibration motor, and earpiece speaker. You'll also need a replacement battery - the old one shouldn't be reused due to potential creasing or other damage during the removal process.



🔧 TOOLS:

[iFixit Opening Picks \(Set of 6\)](#) (1)
[iOpener](#) (1)
[Hair Dryer](#) (1)
[Suction Handle](#) (1)
[Spudger](#) (1)
[Phillips #00 Screwdriver](#) (1)
[Angled Tweezers](#) (1)
[SIM Card Eject Tool](#) (1)
[Isopropyl Alcohol \(90% or Greater\)](#) (1)

⚙️ PARTS:

[Tesa 61395 Tape](#) (1)
[Stretch Release Battery Adhesive](#) (1)

Step 1 — Prepare the phone for disassembly

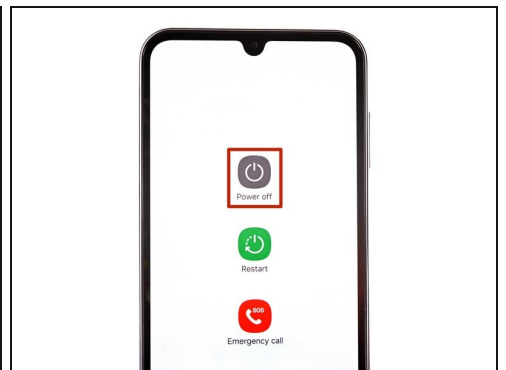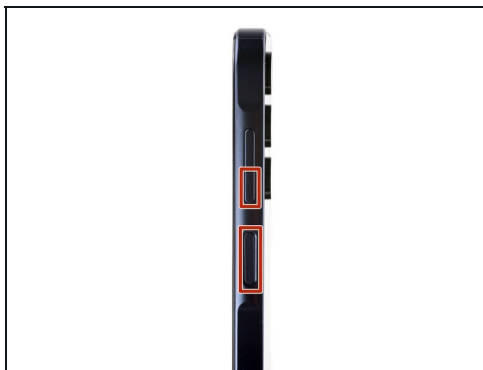

⚠️ Let the phone's battery drain below 25% before starting this repair. A charged lithium-ion battery may catch fire if damaged.

- Unplug all cables and completely power off the phone.
 - Press and hold the power and volume down buttons at the same time to bring up the shutdown menu.

Step 2 — Heat the right edge



- [Heat an iOpener](#) and apply it to the right edge of the back cover for two minutes.
- ⓘ A [hair dryer](#) may also be used, but be careful not to overheat the phone—the display, internal battery, and plastic back are susceptible to heat damage. The phone should be just too hot to touch comfortably.

Step 3




- While you're waiting for the adhesive to soften, here is some useful information:
 - There's adhesive securing the back cover around the perimeter of the frame.
- ⓘ There is an additional layer of adhesive towards the bottom of the phone. Apart from this area, you should not be deeper than 4 mm from the edge.

Step 4 — Insert an opening pick



- Apply a suction handle to the back cover, as close to the center of the right edge as possible.
- Pull up on the suction handle with strong, steady force to create a gap between the cover and the frame.
 - ❗ If you have trouble, apply more heat to further soften the adhesive.
- Insert an opening pick into the gap.

Step 5 — Slice the adhesive

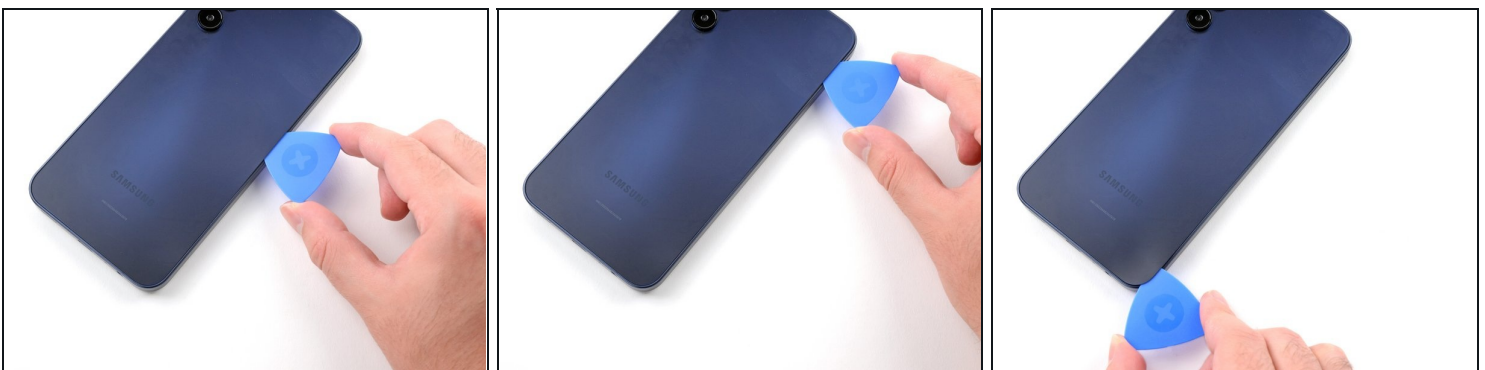

- Slide the opening pick along the right edge between the back cover and the frame to slice through the adhesive.
- Leave the opening pick in the bottom right corner to keep the adhesive from resealing.

Step 6



- Reheat your iOpener and apply it to the bottom of the back cover for two minutes.

Step 7



- Insert another opening pick in the bottom right corner and slide it along the bottom edge to slice through the adhesive.
- Leave this opening pick in the bottom left edge to prevent the adhesive from resealing.

Step 8



- Reheat your iOpener and apply it to the left side of the back cover for two minutes.

Step 9



- Insert another opening pick in the bottom left corner and slide it along the left edge to slice through the adhesive.
- Leave this opening pick in the top left corner to prevent the adhesive from resealing.
⚠ Only insert the pick up to 4 mm deep to avoid damaging the rear cameras or flash.

Step 10



- Reheat your iOpener and apply it to the top of the back cover for two minutes.

Step 11



- Insert another opening pick in the top left corner at the same depth and slide it along the top edge to slice through the adhesive.
- Leave this opening pick in the top right corner to prevent the adhesive from resealing.

Step 12 — Unfasten the camera clips



- Insert an opening pick along the top edge of the phone and twist it gently to unfasten the camera clips.
 - Slide the opening pick around the edge of the camera modules to unfasten the remaining camera clips.
- ⚠ Only insert the pick up to 4 mm to avoid damaging the rear cameras or flash.

Step 13 — Slice remaining adhesive



- Once the adhesive around the edges is loose, insert an opening pick deeper into the bottom edge from the bottom left corner.
- Slide the pick deeper into the phone across the bottom edge, slicing the remaining adhesive.

Step 14 — Remove the back cover




- Lift and remove the back cover.

★ During reassembly:

- ⓘ This is a good point to power on the phone and test all functions before sealing it up. Be sure to power the phone back down completely before you continue working.
- Remove any adhesive chunks with a pair of tweezers or your fingers. Apply heat and isopropyl alcohol (90% or greater) if you're having trouble removing the adhesive.
- If you're using custom-cut adhesives, [follow this guide](#).
- If you're using double-sided tape, [follow this guide](#).

Step 15 — Remove the SIM tray

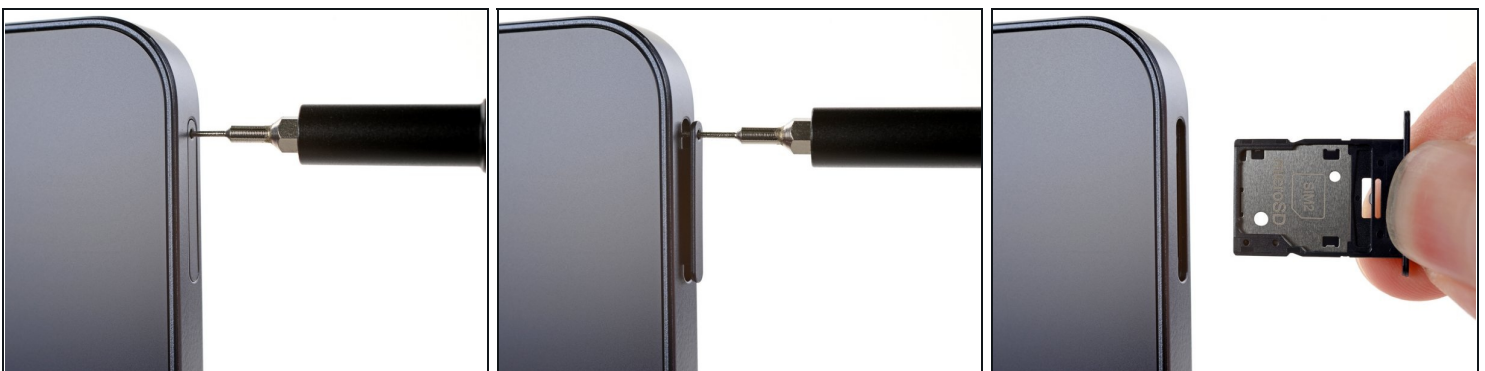


- Insert a SIM card eject tool, [bit](#), or a straightened paperclip into the hole on the SIM tray, located towards the top of the phone on the left edge.
- Press in firmly to eject the tray and remove it.

Step 16 — Remove the frame screws




- Remove the fifteen 4 mm-long screws connecting the frame to the chassis.

Step 17 — Disconnect the fingerprint button

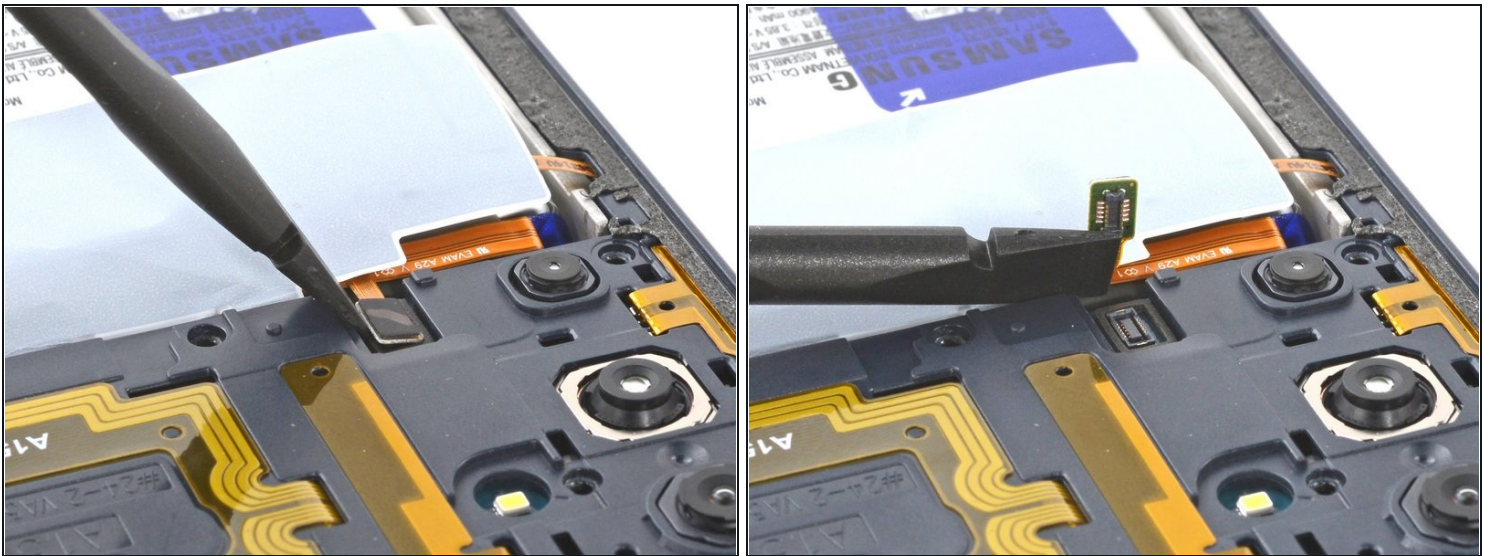


- Use the flat end of a spudger to pry up and disconnect the fingerprint button [press connector](#) from the motherboard.

Step 18 — Unfasten the frame clips

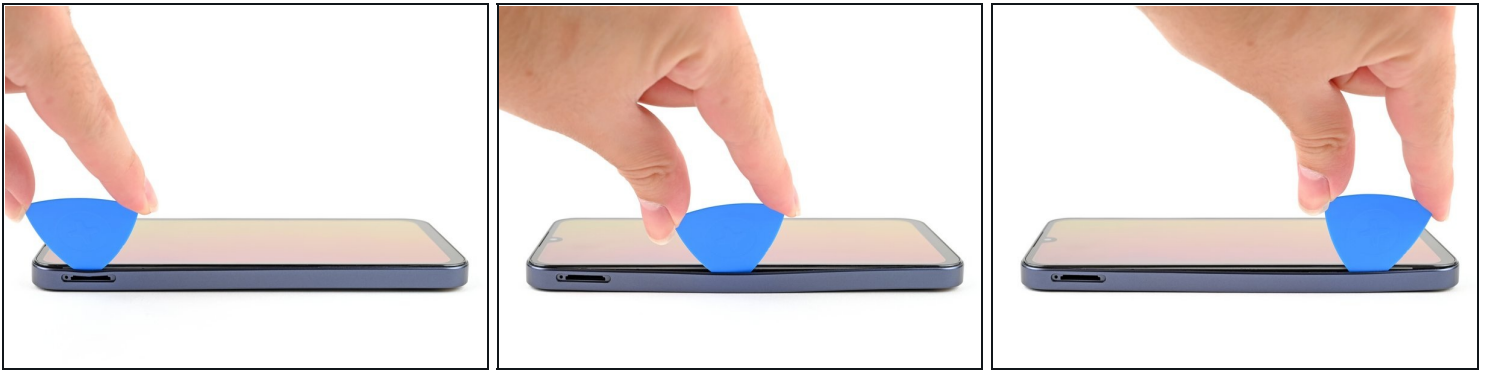

- Flip the phone over so the screen is facing up.
- Insert an opening pick between the screen and the SIM card tray cutout to form a gap between the frame and the phone.
- Slide the opening pick down the left edge of the device to unfasten the frame clips.

Step 19

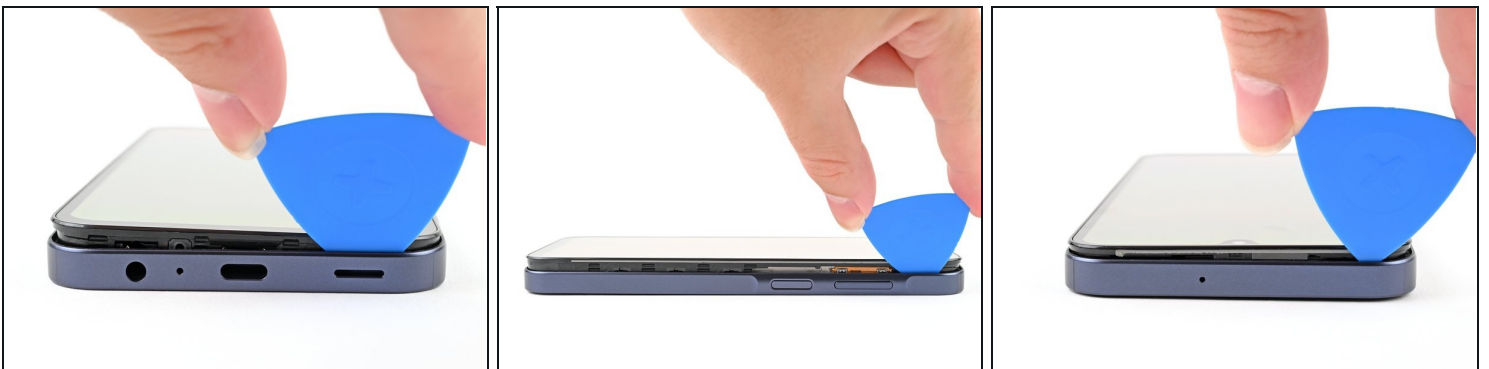


- Continue sliding the opening pick around the perimeter of the phone until all of the clips are unfastened.
 - ① If the opening pick comes out of the phone, re-insert it at the last unfastened corner.

Step 20 — Remove the frame




- Pull the frame straight off of the phone.

Step 21 — Disconnect the battery

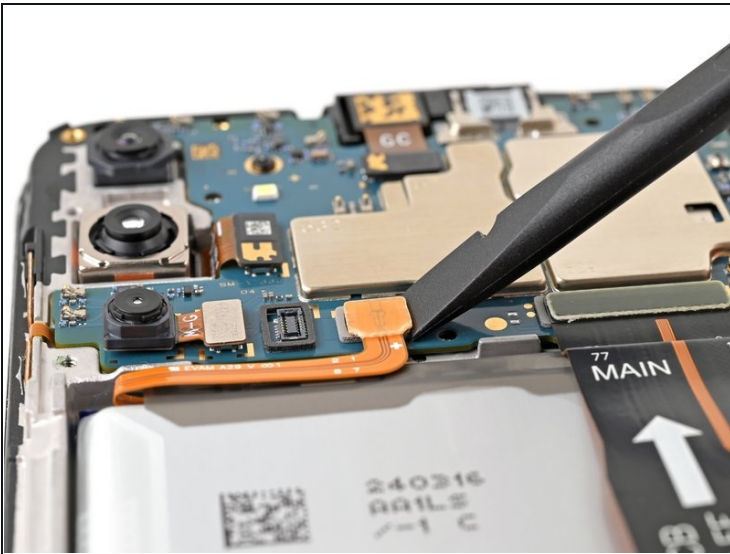

- Use the flat end of a spudger to lift up and disconnect the battery press connector from the motherboard.


Step 22 — Disconnect the interconnect cable

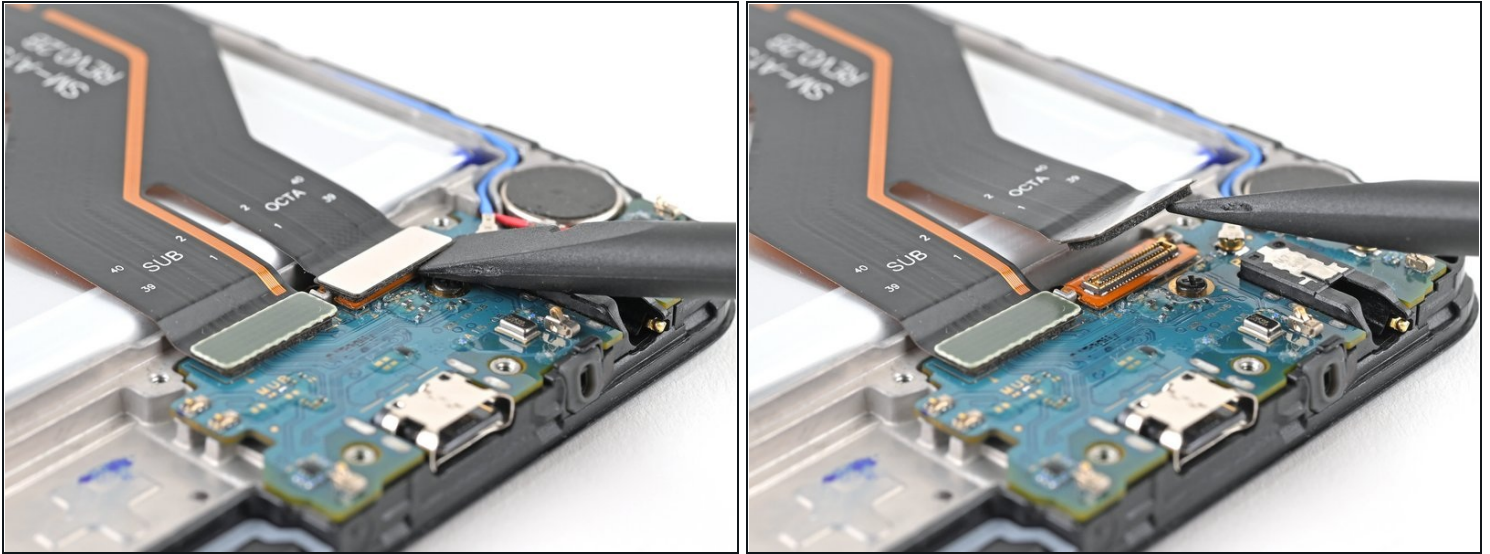

❶ The connector labeled "OCTA" is not connected to the board but rather the display cable connector. Make sure you disconnect the connectors from each other.


- Insert the flat end of a spudger under the overhang of the top "OCTA" cable connector.
- Pry up the top connector away from the bottom one until they're disconnected.

Step 23

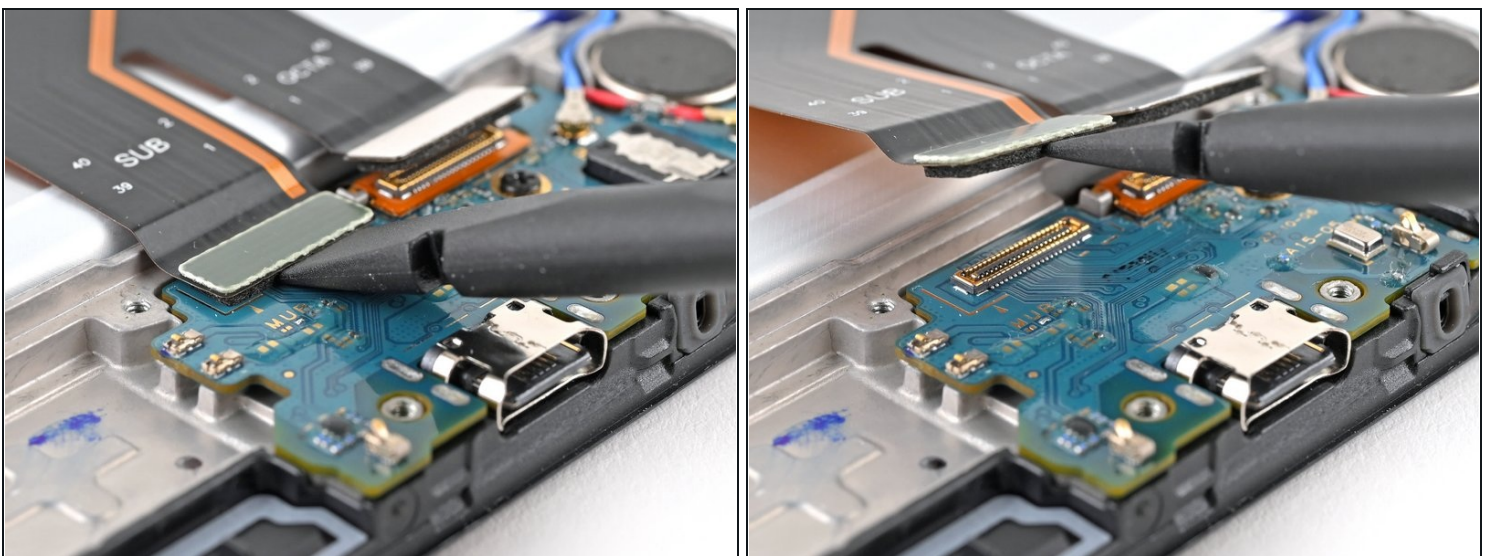


- Use the flat end of a spudger to pry up the "SUB" connector from the daughterboard and disconnect it.

Step 24

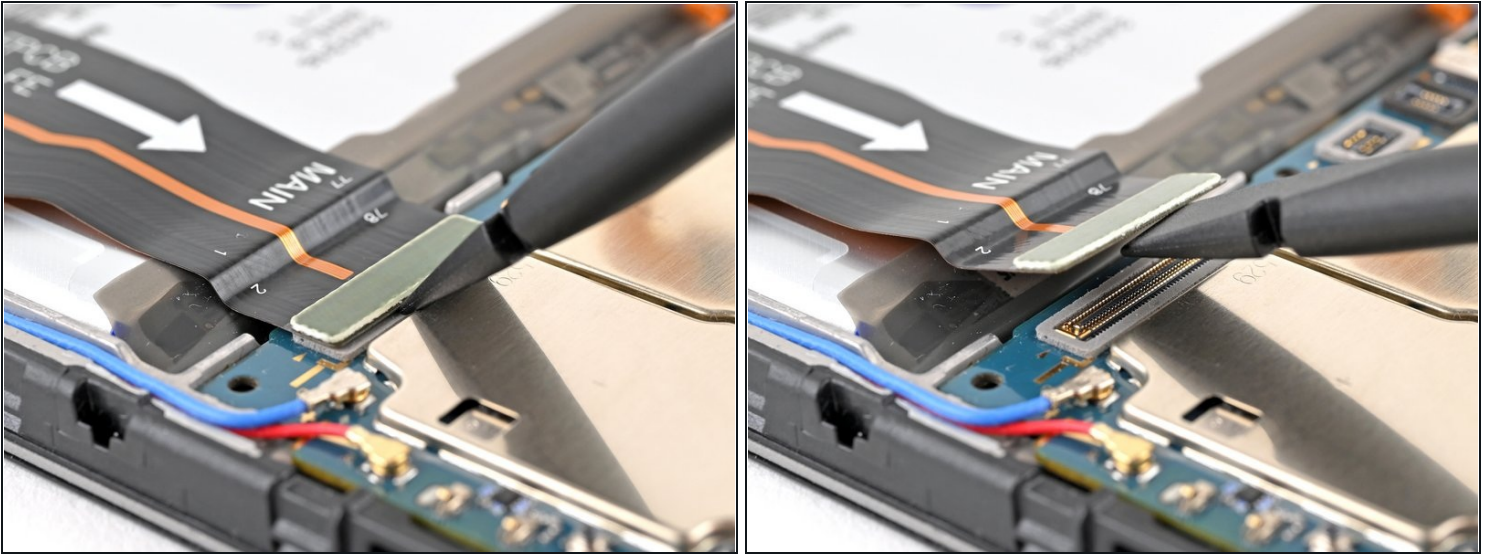

- Use the flat end of a spudger to pry up the "MAIN" connector from the motherboard and disconnect it.

Step 25 — Remove the interconnect cable

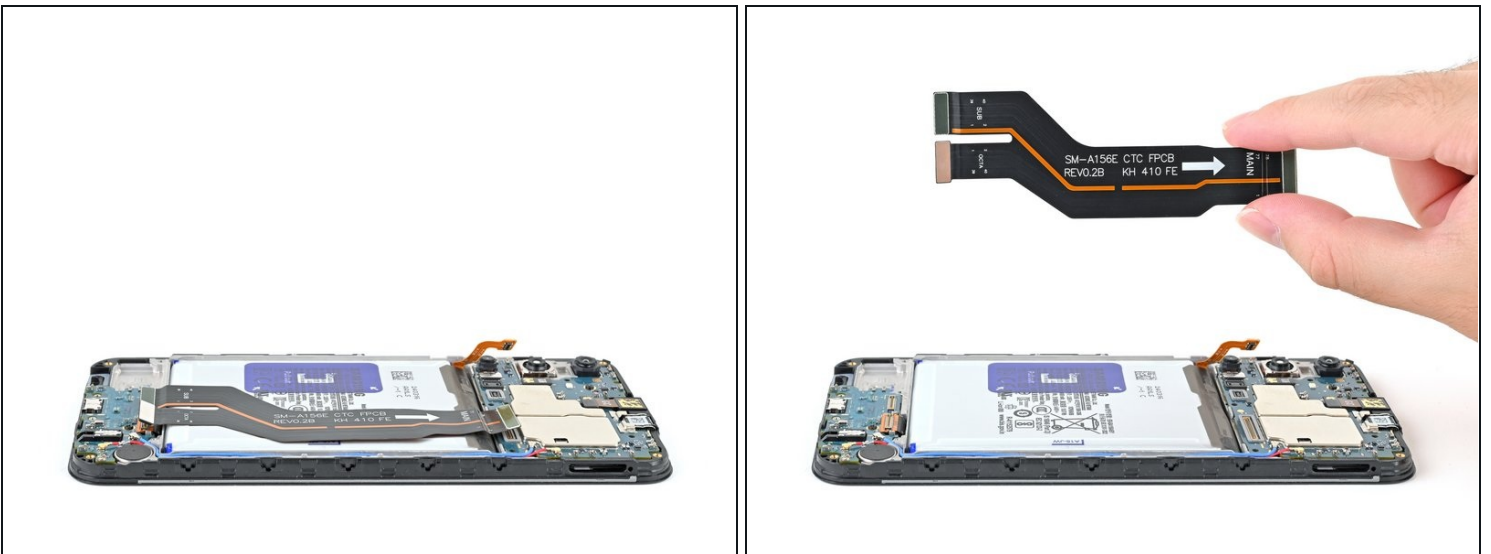


- Pick up the interconnect cable and remove it from the phone.

Step 26 — Peel up the pull tabs



- Peel up the blue battery pull tab until you can grab it with your fingers.

Step 27

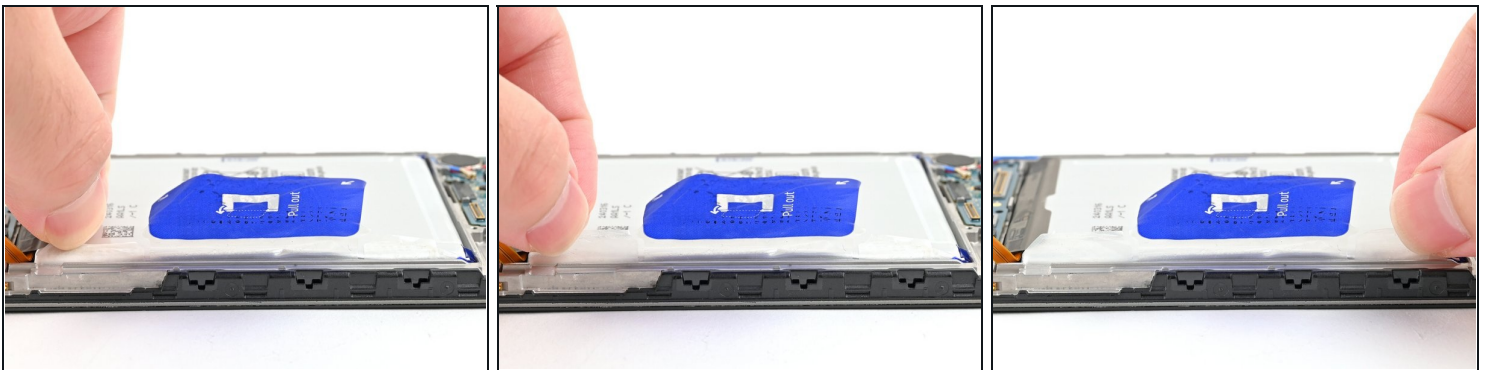

- Use your fingers to peel the two small tabs from the top and bottom corners of the battery's left edge.
 - ① If these tabs aren't fully separated, you won't be able to lift the battery in the next step.

Step 28 — Separate the battery adhesive



⚠ Take care not to crease or bend the battery—it can leak dangerous chemicals and/or catch fire.

- With one hand, fold the two upper and lower tabs out of the way of the battery and firmly hold down the frame.
- Pull up on the blue battery pull tab with strong, steady force until the battery is separated from its adhesive in the phone.
- ① If the battery doesn't budge, apply a few drops of isopropyl alcohol (90% or greater) beneath the battery, wait a few minutes, and try again.

Step 29 — Remove the battery adhesive




- Completely peel off the remaining battery adhesive attached to the frame of the phone.

Step 30 — Remove the battery




- Remove the battery and its film.

Step 31 — Detach the display cable connector

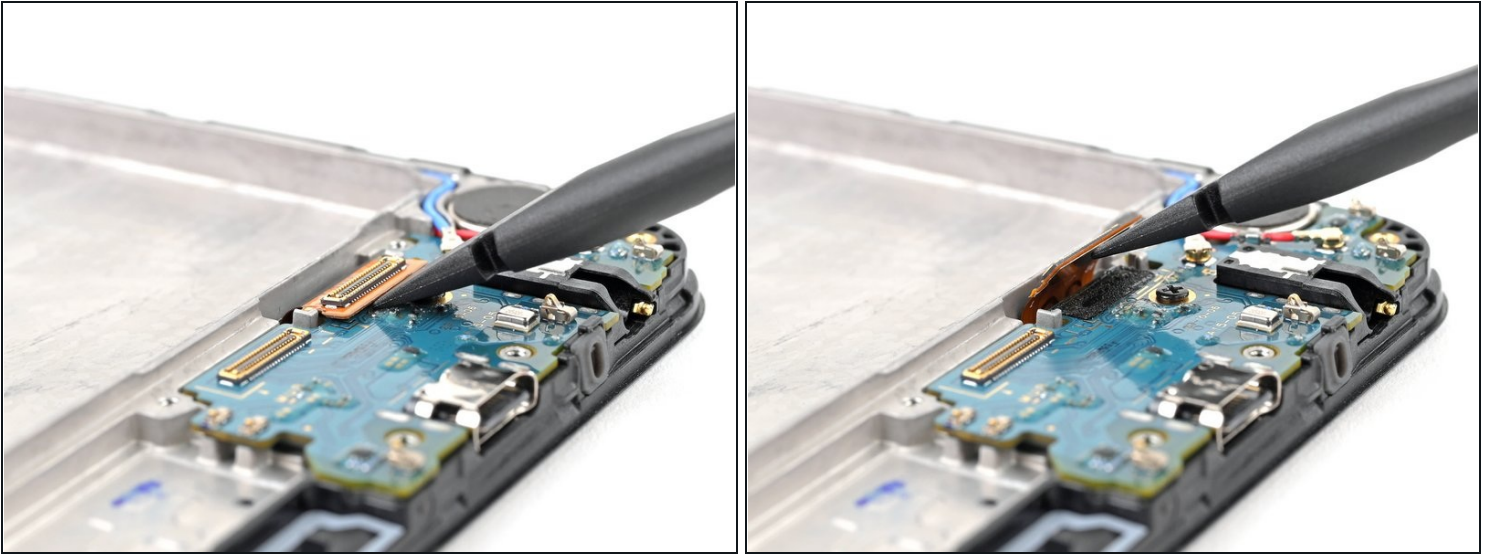



- Insert the flat end of a spudger underneath the display ribbon connector and pry it off of the board.

Step 32 — Remove the daughterboard screw

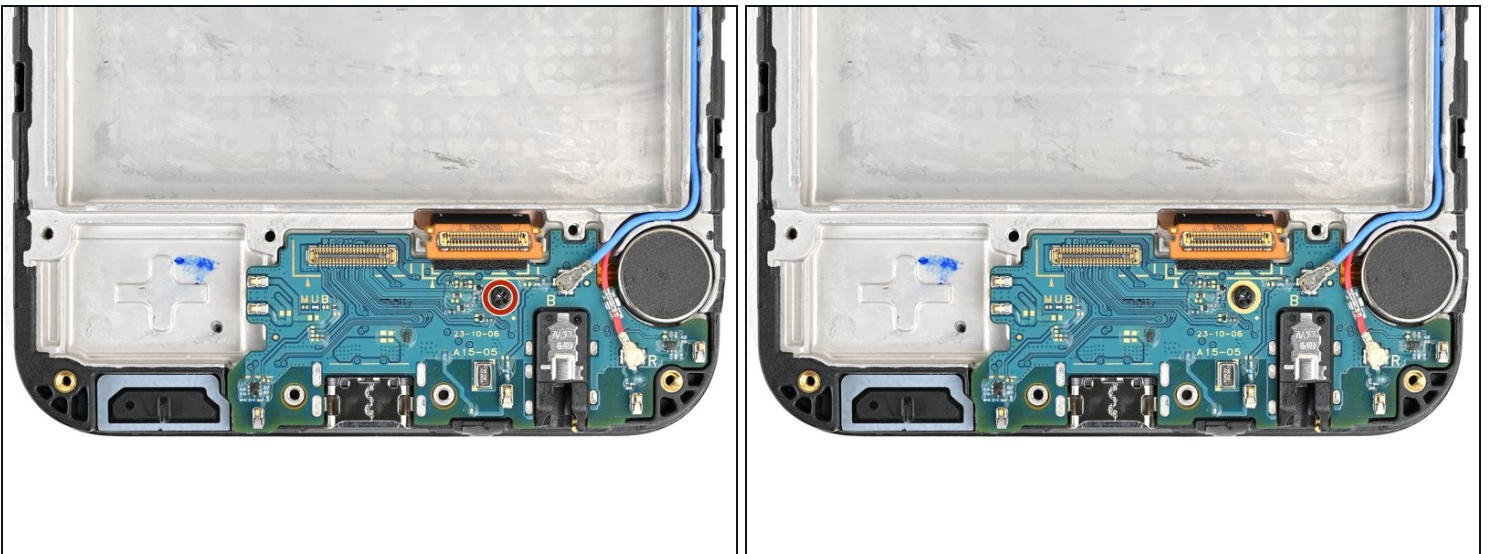



- Use a Phillips screwdriver to remove the 3 mm-long screw securing the daughterboard to the phone.

Step 33 — Remove the motherboard screw

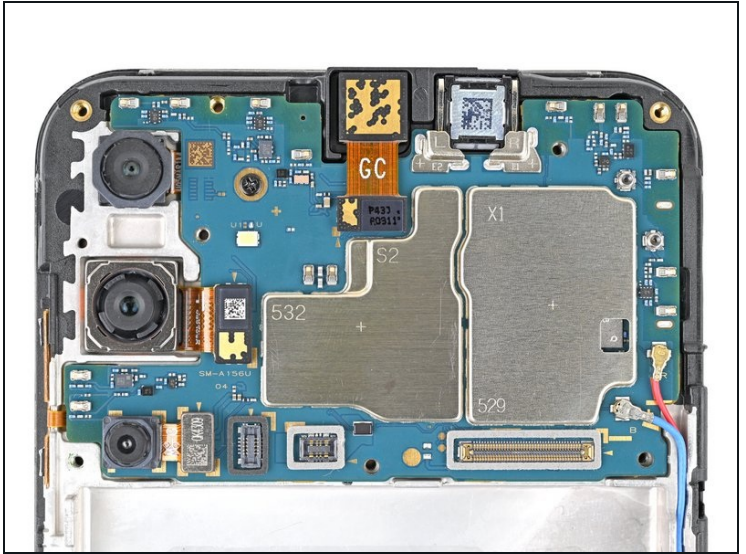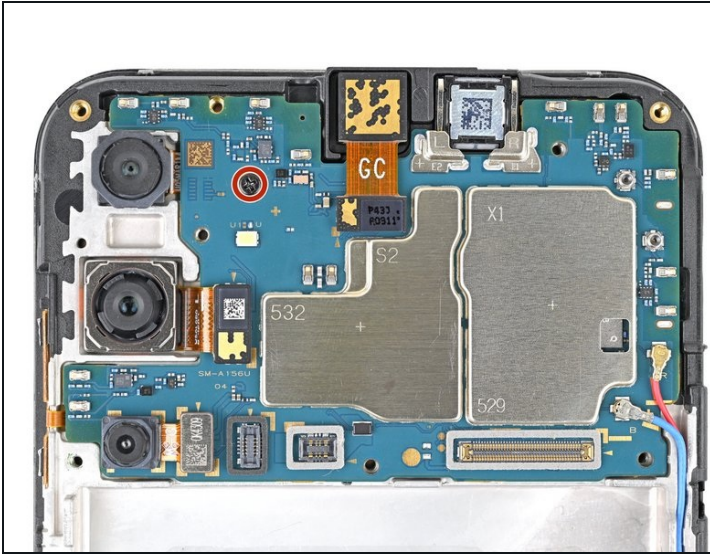

- Use a Phillips screwdriver to remove the 3 mm-long screw securing the motherboard to the phone.

Step 34 — Remove the boards

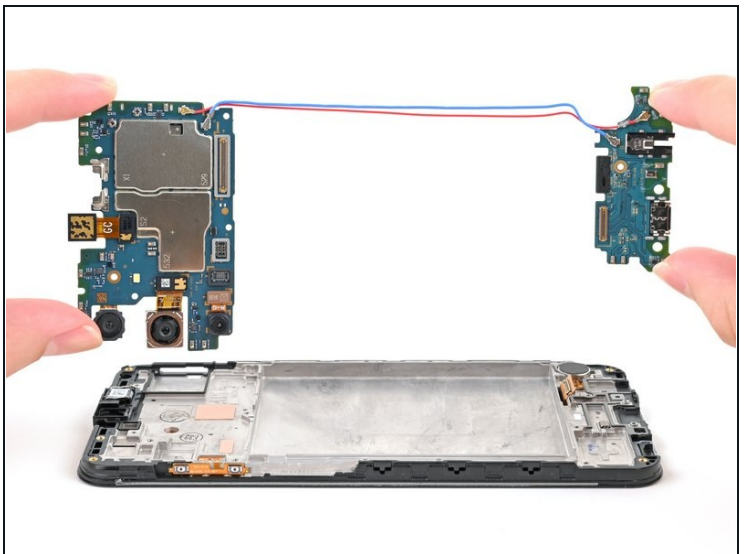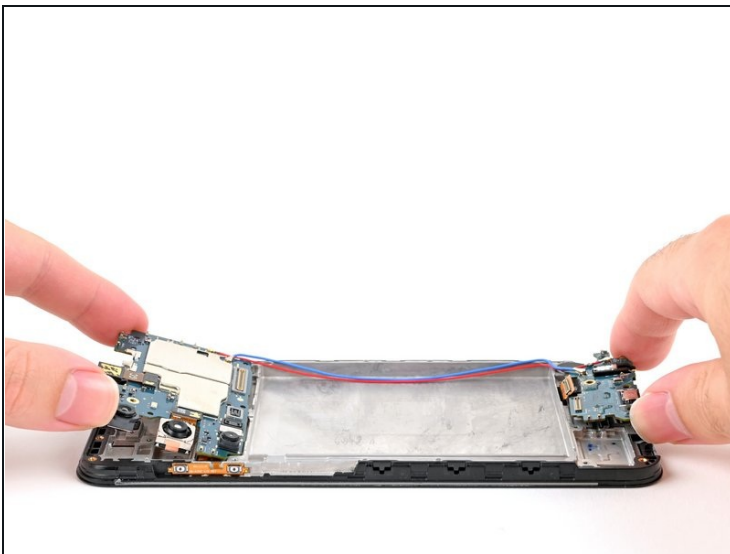

- Grab the motherboard and daughterboard by their edges and pull them together straight up and out of the phone.
⚠ Be careful not to strain on the antenna cables connecting the two boards. If it feels stuck, gently pull up on it until it is free.

Step 35 — Remove the vibration motor



- Insert one tip of angled tweezers into the gap beneath the vibration motor closest to the bottom of the phone.
- Grab the vibration motor with the tweezers and lift it up and out of the phone.

Step 36 — Remove the earpiece speaker



- Insert the tip of angled tweezers into the gap next to the earpiece speaker. Get underneath the earpiece speaker and gently pry it up.
- Lift the earpiece speaker out of the phone.

Step 37 — Only the screen assembly remains



- You're now left with the screen assembly.
- ☑ Compare your new replacement part to the original part—you may need to transfer remaining components or remove adhesive backings from the new part before you install it.

To reassemble your device, follow these instructions in reverse order.

Take your e-waste to an [R2 or e-Stewards certified recycler](#).

Repair didn't go as planned? Try some [basic troubleshooting](#), or ask our [Answers community](#) for help.