MODULE - 2

A AND L INSTRUCTIONS & INT 21H AND INT 10H PROGRAMMING

ARITHMETIC & LOGIC INSTRUCTIONS AND PROGRAMS

INTRUCTIONS SET DESCRIPTION:

UNSIGNED ADDITION AND SUBTRACTION:

Unsigned numbers are defined as data in which all the bits are used to represent data and no bits are set aside for the positive or negative sign. This means that the operand can be between 00 and FFH (0 to 255 decimal) for 8-bit data, and between 0000 and FFFFH (0 to 65535 decimal) for 16-bit data.

	Unsigned numbers
255	FFH
254	FEH
132	84H
131	83H
130	82H
129	81H
128	80H
- 1	
4 3	04H
3	03H
2	02H
1	01H
0	00H

	Signed numbers
+127	7FH
+126	7EH
+2	02H
+1	01H
+0	00H
-1	FFH
-2	FEH
	$\overline{}$
-124	84H
-125	83H
-126	82H
-127	81H
-128	80H

Addition of Unsigned Numbers:

ADD destination, source ; destination = destination + source

- ✓ The instructions ADD and ADC are used to add two operands. The destination operand can be a register or in memory. The source operand can be a register, in memory, or immediate.
- ✓ Remember that memory-to-memory operations are never allowed in x86 Assembly language.
- ✓ The instruction could change any of the ZF, SF, AF, CF, or PF bits of the flag register, depending on the operands involved. The overflow flag is used only in signed number operations.

```
Show how the flag register is affected by
       MOV-
              AL, OF5H
       ADD
              AL, OBH
Solution:
        F5H
                     1111 0101
                    0000 1011
        OBH
       100H
                     0000 0000
After the addition, the AL register (destination) contains 00 and the flags are as follows:
CF = 1, since there is a carry out from D7
SF = 0, the status of D7 of the result
PF = 1, the number of 1s is zero (zero is an even number)
AF = 1, there is a carry from D3 to D4
ZF = 1, the result of the action is zero (for the 8 bits)
```

With addition, two cases will be discussed:

CASE1: Addition of Individual Byte and Word Data:

```
Write a program to calculate the total sum of 5 bytes of data. Each byte represents the daily
wages of a worker. This person does not make more than $255 (FFH) a day. The decimal data is
as follows: 125, 235, 197, 91, and 48.
                  PROG3-1A (EXE) ADDING 5 BYTES
                 60,132
 PAGE
  .MODEL SMALL
  .STACK 64
                 . DATA
              EQU 05
 COUNT
                DB 125,235,197,91,48
 DATA
                 ORG 0008H
 SUM
         .CODE
 MAIN PROC FAR
        MOV
                 AX, @DATA
     MOV
                DS, AX
        MOV CX,COUNT ;CX is the loop counter MOV SI,OFFSET DATA ;SI is the data pointer
MOV AX,00 ;AX will hold the sum

BACK:ADD AL,[SI] ;add the next byte to AL

JNC OVER ;if no carry, continue
INC AH ;else accumulate carry in AH

OVER:INC SI ;increment data pointer
DEC CX ;decrement loop counter
JNZ BACK ;if not finished, go add next byte
MOV SUM,AX ;store sum
MOV AH,4CH
        MOV
                 AH, 4CH
        INT
                 21H
                                  ;go back to OS
 MAIN ENDP
        END
                 MAIN
```

Program 3-1a

These numbers are converted to hex by the assembler as follows: 125 = 7DH, 235 = 0EBH, 197 = 0C5H, 91 = 5BH, 48 = 30H. This program uses AH to accumulate carries as the operands are added to AL register. Three iterations of the loop are shown below:

- 1. In the first iteration of the loop, 7DH is added to AL with CF = 0 and AH = 00. CX = 04 and ZF = 0.
- 2. In the second iteration of the loop, EBH is added to AL, which results in AL = 68H and CF = 1. Since a carry occurred, AH is incremented. CX = 03 and ZF = 0.
- 3. In the third iteration, C5H is added to AL, which makes AL = 2DH. Again a carry occurred, so AH is incremented again. CX = 02 and ZF = 0.

This process continues until CX = 00 and the zero flag becomes 1, which will cause JNZ to fall through. Then the result will be saved in the word-sized memory set aside in the data segment.

MICROPROCESSORS AND MICROCONTROLLERS

Although this program works correctly, due to pipelining it is strongly recommended that the following lines of the program be replaced:

Replace these lines		With th	iese lin	es	
BACK:	ADD	AL,[SI]	BACK:	ADD	AL,[SI]
	JNC	OVER		ADC	AH,00 ;add 1 to AH if CF=1
	INC	AH		INC	SI
OVER:	INC	SI			

The instruction "JNC OVER" has to empty the queue of pipelined instructions and fetch the instructions from the OVER target every time the carry is zero (CF = 0). Hence, the "ADC AH, 00" instruction is much more efficient.

The addition of many word operands works the same way. Register AX (or CX, DX, or BX) could be used as the accumulator and BX (or any general-purpose 16-bit register) for keeping the carries. Program 3-1b is the same as Program 3-1a, rewritten for word addition.

```
Write a program to calculate the total sum of five words of data. Each data value represents the
yearly wages of a worker. This person does not make more than $65,555 (FFFFH) a year. The
decimal data is as follows: 27345, 28521, 29533, 30105, and 32375.
                  PROG3-1B (EXE) ADDING 5 WORDS
 TITLE
                  60,132
 PAGE
 .MODEL SMALL
  .STACK 64
             .DATA
 COUNT EQU 05
DATA DW 27345,28521,29533,30105,32375
ORG 0010H
 SUM DW 2 DUP (?)
 ;-----
         .CODE
 MAIN PROC FAR
                AX, @DATA
         MOV
         MOV DS, AX
                 CX,COUNT ;CX is the loop counter SI,OFFSET DATA ;SI is the data pointer
         MOV
         MOV
        MOV AX,00 ;AX will hold the sum
MOV BX,AX ;BX will hold the carries
:ADD AX,[SI] ;add the next word to AX
ADC BX,0 ;add carry to BX
INC SI ;increment data pointer twice
INC SI ;to point to next word
DEC CX ;decrement loop counter
JNZ BACK ;if not finished, continue adding
MOV SUM,AX ;store the sum
MOV SUM+2,BX ;store the carries
MOV AH.4CH
 BACK: ADD
         MOV
                  AH, 4CH
         INT
                   21H
                                ;go back to OS
 MAIN ENDP
         END
                   MAIN
```

Program 3-1b

MICROPROCESSORS AND MICROCONTROLLERS

CASE2: Addition of Multiword Numbers:

```
PROG3-2 (EXE) MULTIWORD ADDITION
TITLE
           60,132
PAGE
.MODEL SMALL
.STACK 64
      . DATA
DATA1 DO
           548FB9963CE7H
      ORG 0010H
           3FCD4FA23B8DH
DATA2 DO
      ORG 0020H
DATA3 DO
     .CODE
MAIN PROC FAR
     MOV AX, @DATA
     MOV
           DS, AX
                              ;clear carry before first addition
     CLC
           SI,OFFSET DATA1 ;SI is pointer for operand1 DI,OFFSET DATA2 ;DI is pointer for operand2
     MOV
     MOV
           BX,OFFSET DATA3 ;BX is pointer for the sum
     MOV
     MOV
           CX,04
                               ;CX is the loop counter
BACK: MOV
           AX,[SI]
                                     ;move the first operand to AX
                                     ; add the second operand to AX
     ADC
           AX,[DI]
     VOM
           [BX],AX
                                     ; store the sum
     INC
           SI
                                     ; point to next word of operandl
     INC
           SI
           DI
                               ;point to next word of operand2
     INC
     INC
           DI
     INC
           BX
                               ;point to next word of sum
     INC
           BX
                               ; if not finished, continue adding
     LOOP BACK
     MOV
          AH,4CH
                              ;go back to OS
     INT
           21H
MAIN ENDP
     END
           MAIN
```

Program 3-2

- Assume, a program is needed that will add the total Indian budget for the last 100 years or the mass of all the planets in the solar system.
- In cases like this, the numbers being added could be up to 8 bytes wide or even more. Since registers are only 16 bits wide (2 bytes), it is the job of the programmer to write the code to break down these large numbers into smaller chunks to be processed by the CPU.
- o If a 16-bit register is used and the operand is 8 bytes wide, that would take a total of four iterations. However, if an 8-bit register is used, the same operands would require eight iterations.
- ✓ In writing this program, the first thing to be decided was the directive used for coding the data in the data segment. DQ was chosen since it can represent data as large as 8 bytes wide.
- ✓ In the addition of multibyte (or multiword) numbers, the ADC instruction is always used since the carry must be added to the next-higher byte (or word) in the next iteration. Before executing

MICROPROCESSORS AND MICROCONTROLLERS

- ADC, the carry flag must be cleared (CF = 0) so that in the first iteration, the carry would not be added. Clearing the carry flag is achieved by the CLC (clear carry) instruction.
- ✓ Three pointers have been used: SI for DATA1, DI for DATA2, and BX for DATA3 where the result is saved.
- ✓ There is a new instruction in that program, "LOOP xxxx", which replaces the often used "DEC CX" and "JNZ xxxx".

When "LOOP xxxx" is executed, CX is decremented automatically, and if CX is not 0, the microprocessor will jump to target address xxxx. If CX is 0, the next instruction (the one below "LOOP xxxx") is executed.

Subtraction of Unsigned Numbers:

```
SUB dest, source; dest = dest - source
```

The x86 uses internal adder circuitry to perform the subtraction command. Hence, the 2's complement method is used by the microprocessor to perform the subtraction. The steps involved is –

- 1. Take the 2's complement of the subtrahend (source operand)
- 2. Add it to the minuend (destination operand)
- 3. Invert the carry.

These three steps are performed for every SUB instruction by the internal hardware of the x86 CPU. It is after these three steps that the result is obtained and the flags are set. The following example illustrates the three steps:

```
Show the steps involved in the following:
       MOV
             AL, 3FH
                           ;load AL=3FH
           BH, 23H
      MOV
                           ;load BH=23H
             AL, BH
                           ; subtract BH from AL. Place result in AL.
       SITE
Solution:
                                   0011 1111
 AL
                    0011 1111
-BH -23
                   - 0010 0011
                                       +1101 1101 (2's complement)
       10
                                       1 0001 1100 CF=0 (step 3)
The flags would be set as follows: CF = 0, ZF = 0, AF = 0, PF = 0, and SF = 0.
The programmer must look at the carry flag (not the sign flag) to determine if the result is pos-
itive or negative.
```

 \checkmark After the execution of SUB, if CF = 0, the result is positive; if CF = 1, the result is negative and the destination has the 2's complement of the result.

MICROPROCESSORS AND MICROCONTROLLERS

Normally, the result is left in 2's complement, but the NOT and INC instructions can be used to change it. The NOT instruction performs the 1's complement of the operand; then the operand is incremented to get the 2's complement; as shown in the following example:

```
Analyze the following program:
 ; from the data segment:
 DATA1
                   4CH
 DATA2
             DB
                   6EH
 DATA3
            DB
 ; from the code segment:
        MOV DH, DATA1 ; load DH with DATA1 value (4CH)
SUB DH, DATA2 ; subtract DATA2 (6E) from DH (4CH)
                   NEXT
                                ;if CF=0 jump to NEXT target
             JNC
                   DH
DH
             NOT
                                ;if CF=1 then take 1's complement
             INC
                               ; and increment to get 2's complement
            VOM
                   DATA3, DH ; save DH in DATA3
NEXT:
Solution:
Following the three steps for "SUB DH,DATA2":
       4C
            0100 1100 0100 1100
      -6E
             0110 1110
                              1001 0010
                                         _(2's complement)
      -22
                             01101 1110 CF=1 (step 3) result is negative
```

SBB (Subtract with Borrow):

This instruction is used for multibyte (multiword) numbers and will take care of the borrow of the lower operand. If the carry flag is 0, SBB works like SUB. If the carry flag is 1, SBB subtracts 1 from the result. Notice the "*PTR*" operand in the following Example.

```
Analyze the following program:
         DD
DATA A
                      62562FAH
DATA B
              DD
                      412963BH
RESULT
              DD
              MOV AX, WORD PTR DATA A ;AX=62FA
SUB AX, WORD PTR DATA B ;SUB 963B from AX
MOV WORD PTR RESULT, AX ;save the result
              MOV AX, WORD PTR DATA A +2 ;AX=0625
              SBB AX, WORD PTR DATA B +2 ;SUB 0412 with borrow
                      WORD PTR RESULT+Z, AX
              MOV
                                                   ;save the result
Solution:
After the SUB, AX = 62FA - 963B = CCBF and the carry flag is set. Since CF = 1, when SBB
is executed, AX = 625 - 412 - 1 = 212. Therefore, the value stored in RESULT is 0212CCBF.
```

The PTR (pointer) data directive is used to specify the size of the operand when it differs from the defined size. In above Example; "WORD PTR" tells the assembler to use a word operand, even though the data is defined as a double word.

UNSIGNED MULTIPLICATION AND DIVISION:

One of the major changes from the 8080/85 microprocessor to the 8086 was inclusion of instructions for multiplication and division. The use of registers AX, AL, AH, and DX is necessary.

Multiplication of Unsigned Numbers:

In discussing multiplication, the following cases will be examined: (1) byte times byte, (2) word times word, and (3) byte times word.

<u>8-bit * 8-bit</u>	AL * BL	<u>16-bit * 16-bit</u>	AX * BX
16-bit	AX	32-bit	DX AX

byte x byte: In byte-by-byte multiplication, one of the operands must be in the AL register and the second operand can be either in a register or in memory. After the multiplication, the result is in AX.

```
RESULT DW ? ;result is defined in the data segment

MOV AL,25H ;a byte is moved to AL

MOV BL,65H ;immediate data must be in a register

MUL BL ;AL = 25 x 65H

MOV RESULT,AX ;the result is saved
```

In the program above, 25H is multiplied by 65H and the result is saved in word-sized memory named RESULT. Here, the register addressing mode is used.

The next three examples show the register, direct, and register indirect addressing modes.

```
;from the data segment:
DATA1
            DB
                    25H
DATA2
            DB
                    65H
            DW
                    ?
RESULT
;from the code segment:
      VOM
           AL, DATA1
      YOM
           BL, DATA2
                                ;register addressing mode
      MUL
           BL
      VOM
           RESULT, AX
or
      VOM
           AL, DATA1
                               ;direct addressing mode
      MUL
           DATA2
           RESULT, AX
      MOV
or
      MOV
           AL, DATA1
      MOV
           SI, OFFSET DATA2
                                ;register indirect addressing mode
      MUL
           BYTE PTR [SI]
      MOV
           RESULT, AX
```

- ✓ In the register addressing mode example, any 8-bit register could have been used in place BL.
- ✓ Similarly, in the register indirect example, BX or DI could have been used as pointers.
- ✓ If the register indirect addressing mode is used, the operand size must be specified with the help of the PTR pseudo-instruction. In the absence of the "BYTE PTR" directive in the example above,

MICROPROCESSORS AND MICROCONTROLLERS

the assembler could not figure out if it should use a byte or word operand pointed at by SI. This confusion may cause an error.

word x word: In word-by-word multiplication, one operand must be in AX and the second operand can be in a register or memory. After the multiplication, registers DX and AX will contain the result. Since word-by-word multiplication can produce a 32-bit result, DX will hold the higher word and AX the lower word.

```
DATA3
           DW
                 2378H
DATA4
           DW
                 2F79H
           DW
                 2 DUP (?)
RESULT1
           . . . .
                           ;load first operand into AX
           MOV AX, DATA3
           MUL
                DATA4
                            ;multiply it by the second operand
           MOV RESULTI, AX ; store the lower word result
           MOV RESULT1+2, DX ; store the higher word result
```

word x byte: This is similar to word-by-word multiplication, except that AL-contains the byte operand and AH must be set to zero.

```
;from the data segment:
DATA5 DB 6BH
DATA6
           DW
                 12C3H
RESULT3
          DW
                2 DUP (?)
; from the code segment:
           MOV AL, DATA5
                            ;AL holds byte operand
           SUB AH, AH ; AH must be cleared MUL DATA6 ; byte in AL mult. by word operand
           MOV BX,OFFSET RESULT3 ; BX points to product
           MOV [BX], AX
                                  ;AX holds lower word
                                 ';DX holds higher word
           MOV [BX] +2, DX
```

Table: Unsigned Multiplication Summary

Multiplication	Operand 1	Operand 2	Result	
byte × byte	AL	register or memory	AX	
word × word	AX	register or memory	DX AX	
word × byte	AL = byte, AH = 0	register or memory	DX AX	

Division of Unsigned Numbers:

In the division of unsigned numbers, the following cases are discussed:

- 1. Byte over byte
- 2. Word over word
- 3. Word over byte
- 4. Double-word over word

<u>8-bit</u>	\underline{AL}	Q: AL	<u>16-bit</u> <u>AX</u>	Q: AX
8-bit	BL	R: AH	16-bit BX	R: DX

MICROPROCESSORS AND MICROCONTROLLERS

<u>16-bit</u>	\underline{AX}	Q: AL	<u>32-bit</u>	DA AX	Q: AX
8-bit	BL	R: AH	16-bit	BX	R: DX

In divide, there could be cases where the CPU cannot perform the division. In these cases an *interrupt* is activated. This is referred to as an *exception*. In following situations, the microprocessor cannot handle the division and must call an interrupt:

- 1. If the denominator is zero (dividing any number by 00)
- 2. If the quotient is too large for the assigned register.

In the IBM PC and compatibles, if either of these cases happens, the PC will display the "divide error" message.

byte/byte: In dividing a byte by a byte, the numerator must be in the AL register and AH must be set to zero. The denominator cannot be immediate but can be in a register or memory. After the DIV instruction is performed, the quotient is in AL and the remainder is in AH.

```
DB
                  ?
COUT1
REMAIN1
            DB
                  ?
; using immediate addressing mode will give an error
            MO♥ · AL, DATA7
                                     ; move data into AL
                AH, AH
            SUB
                                     ; clear AH
            DIV
                 10
                                     ; immed. mode not allowed!!
; allowable modes include:
;using direct mode
            VOM
                 AL, DATA7
                                     ;AL holds numerator
                                    ; AH must be cleared
            SUB
                 AH, AH
            DIV
                 DATA8
                                    ; divide AX by DATA8
            MOV QOUT1, AL
                                    ;quotient = AL = 09
            VOM
                 REMAIN1, AH
                                     ;remainder = AH = 05
jusing register addressing mode.
            VOM
                 AL, DATA7
                                     ;AL holds numerator
            SUB
                 AH, AH
                                     ; AH must be cleared
            VOM
                 BH, DATA8
                                     ; move denom. to register
            DIV
                 BH
                                     ; divide AX by BH
            MOV
                 QOUT1, AL
                                     ;quotient = AL = 09
                                     ;remainder = AH = 05
            VOM
                 REMAIN1, AH
;using register indirect addressing mode
                AL, DATA7
            MOV
                                    ;AL holds numerator
                                    ; AH must be cleared
            SUB AH, AH
            MOV BX,OFFSET DATAS
                                    ; BX holds offset of DATA8
                                     ; divide AX by DATA8
            DIV BYTE PTR [ BX]
            VOM
                 QOUT2, AX
            YOM
                 REMAIND2, DX
```

word/word: In this case, the numerator is in AX and DX must be cleared. The denominator can be in a register or memory. After the DIV; AX will have the quotient and the remainder will be in DX.

MICROPROCESSORS AND MICROCONTROLLERS

```
VOM
     AX, 10050
                   ; AX holds numerator
SUB
     DX, DX
                   ;DX must be cleared
VOM
     BX,100 .
                   ;BX used for denominator
DIV
     BX
VOM
     QOUT2, AX
                   ; quotient = AX = 64H = 100
     REMAIND2, DX ; remainder = DX = 32H = 50
VOM
```

word/byte: Here, the numerator is in AX and the denominator can be in a register or memory. After the DIV instruction, AL will contain the quotient, and AH will contain the remainder. The maximum quotient is FFH.

The following program divides AX = 2055 by CL = 100. Then AL = 14H (20 decimal) is the quotient and AH = 37H (55 decimal) is the remainder.

```
MOV AX,2055 ;AX holds numerator
MOV CL,100 ;CL used for denominator
DIV CL
MOV QUO,AL ;AL holds quotient
MOV REMI,AH ;AH holds remainder
```

Double-word/word: The numerator is in DX and AX, with the most significant word in DX and the least significant word in AX. The denominator can be in a register or in memory. After the DIV instruction; the quotient will be in AX, and the remainder in DX. The maximum quotient is FFFFH.

```
; from the data segment:
DATA1
            DD
                  105432
DATAZ
            DW
                  10000
OUOT
            DW
REMAIN
            DW
;from the code segment:
            MOV AX, WORD PTR DATA1
                                          ; AX holds lower word
            MOV
                 DX, WORD PTR DATA1+2; DX higher word of numerator
            DIV
                 DATA2
            MOV
                 QUOT, AX
                                          ; AX holds quotient
            MOV REMAIN, DX
                                          ; DX holds remainder
```

- ✓ In the program above, the contents of DX: AX are divided by a word-sized data value, 10000.
- ✓ The 8088/86 automatically uses DX: AX as the numerator anytime the denominator is a word in size.
- ✓ Notice in the example above that DATAl is defined as DD but fetched into a word-size register with the help of WORD PTR. In the absence of WORD PTR, the assembler will generate an error.

Table: Unsigned Division Summary

Division	Numerator	Denominator	Quotient	Rem.	
byte/byte	AL = byte, AH = 0	register or memory	AL1	ÁH	
word/word	AX = word, DX = 0	register or memory	AX ²	DX	
word/byte	AX = word	register or memory	AL1	AH	
doubleword/word	DXAX = doubleword	register or memory	AX ²	DX	

LOGIC INSTRUCTIONS:

Here, the logic instructions AND, OR, XOR, SHIFT, and COMPARE are discussed with examples.

AND

AND destination, source

- ✓ This instruction will perform a logical AND on the operands and place the result in the destination. The destination operand can be a register or memory. The source operand can be a register, memory, or immediate.
- ✓ AND will automatically change the CF and OF to zero, and PF, ZF, and SF are set according to the result. The rest of the flags are either undecided or unaffected.

Inp	outs	Output		
A	В	A AND B		
0	0	0		
0	1	0		
1	0	0		
1	1	1		
A — B —		— A AND B		

```
Show the results of the following:

MOV BL,35H
AND BL,0FH ;AND BL with OFH. Place the result in BL.

Solution:

35H 0 0 1 1 0 1 0 1
0FH 0 0 0 0 1 1 1 1 1
05H 0 0 0 0 0 1 0 1 Flag settings will be; SF = 0, ZF = 0, PF = 1, CF = OF = 0.
```

✓ AND can be used to mask certain bits of the operand. The task of clearing a bit in a binary number is called **masking**. It can also be used to test for a zero operand.

✓ The above code will AND DH with itself, and set ZF =1, if the result is zero. This makes the CPU to fetch from the target address XXXX. Otherwise, the instruction below JZ is executed. AND can thus be used to test if a register contains zero.

OR

- ✓ The destination and source operands are ORed and the result is placed in the destination.
- ✓ The destination operand can be a register or in memory. The source operand can be a register, memory, or immediate.
- ✓ OR will automatically change the CF and OF to zero, and PF, ZF,

In	puts	Output
A	В	A OR B
0	0	0
0	1	1
1	0	1
1	1	1
A — B —)— AOR B

and SF are set according to the result. The rest of the flags are either undecided or unaffected.

Show the results of the following: MOV AX, 0504 ; AX = 0504 OR AX, 0DA68H ; AX = DF6C Solution:

0504H 0000 0101 0000 0100 DA68H 1101 1010 0110 1000 Flags will be: SF = 1, ZF = 0, PF = 1, CF = OF = 0.

DF6C 1101 1111 0110 1100 Notice that parity is checked for the lower 8 bits only.

- ✓ The OR instruction can be used to test for a zero operand. For example, "OR BL, O"will OR the register BL with 0 and make ZF = 1, if BL is zero. "OR BL, BL" will achieve the same result.
- ✓ OR can also be used to set certain bits of an operand to 1.

XOR

- ✓ The XOR instruction will eXclusive-OR the operands and place the result in the destination. XOR sets the result bits to 1 if they are not equal; otherwise, they are reset to 0.
- ✓ The destination operand can be a register or in memory. The source operand can be a register, memory, or immediate.
- ✓ OR will automatically change the CF and OF to zero, and PF, ZF,

 and SF are set according to the result. The rest of the flags are either undecided or unaffected.

Inp	outs	Output
A	В	A XOR B
0	0	0
0	1	1
1	0	1
1	1	0
A — B —	(H)	— A XOR B

	M	V		I	DH,	54	Н		
	X	R		I	H,	7,8	Н		
Solut	ion:			-1					
54H	0	1	0	1	0	1	0	0	2
700	0	1	1	1	1	0	0	0	
78H 2C			3302	-	1	40	100		Flag settings will be: $SF = 0$, $ZF = 0$, $PF = 0$, $CF = OF = 0$.

The XOR instruction can be used to clear the contents of a register by XORing it with itself. Show how "XOR AH,AH" clears AH, assuming that AH = 45H.

Solution:

45H 01000101 45H 01000101 00 0000000

Flag settings will be: SF = 0, ZF = 1, PF = 1, CF = OF = 0.

MICROPROCESSORS AND MICROCONTROLLERS

- XOR can be used to see if two registers have the same value. "XOR BX, CX" will make ZF = 1, if both registers have the same value, and if they do, the result (0000) is saved in BX, the destination.
- ✓ XOR can also be used to toggle (invert/compliment) bits of an operand. For example, to toggle bit 2 of register AL:

XOR AL, 04H ; XOR AL with 0000 0100


✓ This would cause bit 2 of AL to change to the opposite value; all other bits would remain unchanged.

SHIFT

- o Shift instructions shift the contents of a register or memory location right or left.
- o The number of times (or bits) that the operand is shifted can be specified directly if it is once only, or through the CL register if it is more than once.
- o There are two kinds of shifts:
 - ✓ Logical for unsigned operands
 - ✓ Arithmetic signed operands.

SHR: This is the logical shift right. The operand is shifted right bit by bit, and for every shift the LSB (least significant bit) will go to the carry flag (CF) and the MSB (most significant bit) is filled with 0.

- ✓ SHR does affect the OF, SF, PF, and ZF flags.
- ✓ The operand to be shifted can be in a register or in memory, but immediate addressing mode is not allowed for shift instructions. For example, "SHR 25, CL" will cause the assembler to give an error.

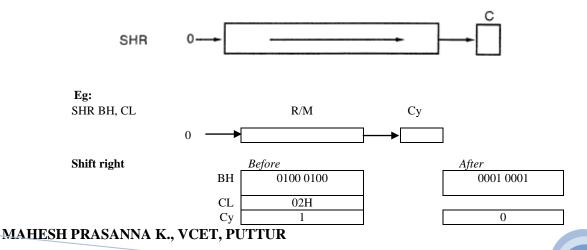

MICROPROCESSORS AND MICROCONTROLLERS

```
Show the result of SHR in the following:
       VCM
              AL, 9AH
      VOM
              CL, 3
                       ;set number of times to shift
       SHR
              AL, CL
Solution:
        9AH =
                     10011010
                     01001101
                                   CF = 0 (shifted once)
                                   CF = 1 (shifted twice)
                     00100110
                     00010011
                                    CF = 0 (shifted three times)
After shifting right three times, AL = 13H and CF = 0.
```

✓ If the operand is to be shifted once only, this is specified in the SHR instruction itself rather than placing 1 in the CL. This saves coding of one instruction:


```
MOV BX, OFFFFH ; BX=FFFFH .
SHR BX,1 ; shift right BX once only
```

✓ After the above shift, BX = 7FFFH and CF = 1.

```
Show the results of SHR in the following:
       ;from the data segment:
                             7777H
       DATA1
                     DW
       ;from the code segment:
       TIMES
                      EQU
                             4
                      MOV
                             CL, TIMES
                                            ;CL=04
                      SHR
                             DATA1, CL
                                            ; shift DATA1 CL times
Solution:
After the four shifts, the word at memory location DATA1 will contain 0777. The four LSBs are
lost through the carry, one by one, and 0s fill the four MSBs.
```

SHL: Shift left is also a logical shift. It is the reverse of SHR. After every shift the LSB is filled with 0 and the MSB goes to CF.

- ✓ SHL does affect the OF, SF, PF, and ZF flags.
- ✓ The operand to be shifted can be in a register or in memory, but immediate addressing mode is not allowed for shift instructions. For example, "SHL 25, CL" will cause the assembler to give an error.

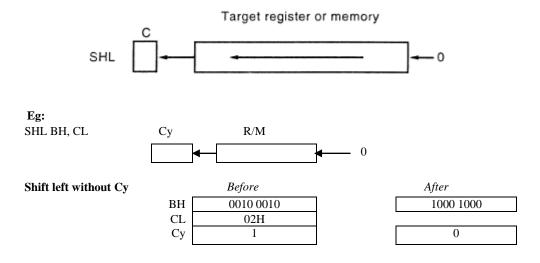

MICROPROCESSORS AND MICROCONTROLLERS

MOV MOV	DH, 6	the following:		Can also	be coded as
MOV	CL,4			MOV	DH, 6
SHL	DH, CL			SHL	DH, 1
	WELL THE			SHL	DH, 1
Solution:				SHL	DH,1
Solution:		00000110	1	SHL	DH,1
	CF=0	00001100	(shifted left once)		
	CF=0	00011000			
	CF=0	00110000		743.5	
	CF=0	01100000	(shifted four times)		
After the four		01100000 DH register has 6	(shifted four times) 0H and CF = 0.		

COMPARE of Unsigned Numbers:

```
CMP destination, source ; compare dest and src
```

- ✓ The CMP instruction compares two operands and changes the flags according to the result of the comparison. The operands themselves remain unchanged.
- ✓ The destination operand can be in a register or in memory and the source operand can be in a register, memory, or immediate.
- ✓ The compare instruction is really a SUBtraction, except that the values of the operands do not change.
- ✓ The flags are changed according to the execution of SUB. Although all the flags (CF, AF, SF, PF, ZF, and OF flags) are affected, the only ones of interest are ZF and CF.
- ✓ It must be emphasized that in CMP instructions, the operands are unaffected regardless of the result of the comparison. Only the flags are affected.

Table: Flag Settings for Compare Instruction

Compare Operands	CF	ZF	Remark
destination > source	0	0	destination – source; results $CF = 0 \& ZF = 0$
destination = source	0	1	destination – source; results $CF = 0 \& ZF = 1$
destination < source	1	0	destination – source; results $CF = 1 \& ZF = 0$

```
DATA1 DW 235FH
...

MOV AX,0CCCCH
CMP AX,DATA1 ; compare CCCC with 235F
JNC OVER ; jump if CF=0
SUB AX,AX
OVER: INC DATA1
```

✓ In the program above, AX is greater than the contents of memory location DATA1 (0CCCCH > 235FH); therefore, CF = 0 and JNC (jump no carry) will go to target OVER.

MICROPROCESSORS AND MICROCONTROLLERS

```
MOV EX,7888H
MOV CX,9FFFH
CMP EX,CX ; compare 7888 with 9FFF
JNC NEXT
ADD EX,4000H
NEXT: ADD CX,250H
```

- ✓ In the above code, BX is smaller than CX (7888H < 9FFFH), which sets CF = 1, making "JNC NEXT" fall through so that "ADD BX, 4000H" is executed.
- ✓ In the example above, CX and BX still have their original values (CX = 9FFFH and BX =7888H) after the execution of "CMP BX, CX".
- ✓ Notice that CF is always checked for cases of greater or smaller than, but for equal, ZF must be used.

```
TEMP DB ?

...

MOV AL,TEMP ; move the TEMP variable into AL

CMP AL,99 ; compare AL with 99

JZ HOT_HOT ; if ZF=1 (TEMP = 99) jump to HOT_HOT

INC BX ; otherwise (ZF=0) increment BX

...

HOT_HOT: HLT ; halt the system
```

✓ The above program sample has a variable named TEMP, which is being checked to see if it has reached 99.

In the following Program the CMP instruction is used to search for the highest byte in a series of 5 bytes defined in the data segment.

- ✓ The instruction " $CMP\ AL$, [BX]" works as follows ([BX] is the contents of the memory location pointed at by register BX).
 - If AL < [BX], then CF = 1 and [BX] becomes the basis of the new comparison.
 - If AL > [BX], then CF = 0 and AL is the larger of the two values and remains the basis of comparison.
- ✓ Although JC (jump carry) and JNC (jump no carry) check the carry flag and can be used after a compare instruction, it is recommended that JA (jump above) and JB (jump below) be used because,
 - The assemblers will unassembled JC as JB, and JNC as JA.
- ✓ The below Program searches through five data items to find the highest grade.
- ✓ The program has a variable called "Highest" that holds the highest grade found so far. One by one, the grades are compared to Highest. If any of them is higher, that value is placed in Highest.
- ✓ This continues until all data items are checked. A REPEAT-UNTIL structure was chosen in the program design.
- ✓ The program uses register AL to hold the highest grade found so far. AL is given the initial value of 0. A loop is used to compare each of the 5 bytes with the value in AL.

MICROPROCESSORS AND MICROCONTROLLERS

If AL contains a higher value, the loop continues to check the next byte. If AL is smaller than the byte being checked, the contents of AL are replaced by that byte and the loop continues.

```
Assume that there is a class of five people with the following grades: 69, 87, 96, 45, and 75.
Find the highest grade.
            PROG3-3 (EXE) CMP EXAMPLE
TITLE
            60,132
 PAGE
 .MODEL SMALL
 .STACK 64
            . DATA
           DB 69,87,96,45,75
 GRADES
           ORG
                  8000
         DB
HIGHEST
            . CODE
MAIN
            PROC FAR
                  AX, @DATA
            MOV
                  DS, AX
            MOV
                  CX,5
            MOV
                                    ; set up loop counter
                  BX,OFFSET GRADES ; BX points to GRADE data
            MOV
                 AL, AL ; AL holds highest grade found so far
            SUB
            CMP AL,[BX] ; compare next grade to highest

JA NEXT ; jump if AL still highest
AGAIN:
                                   ; jump if AL still highest
                  AL,[BX]
                                  ;else AL holds new highest
            MOV
                                    ;point to next grade
NEXT:
            INC
                  BX
            LOOP AGAIN
                                    ;continue search
                  HIGHEST, AL
                                    ;store highest grade
            MOV
            MOV
                  AH, 4CH
            INT
                  21H
                                    ;go back to OS
MAIN
            ENDP
            END
                  MAIN
```

Program 3-3

NOTE:

There is a relationship between the pattern of lowercase and uppercase letters, as shown below for *A* and *a*:

\boldsymbol{A}	0100 0001	41H
a	0110 0001	61H

The only bit that changes is d5. To change from lowercase to uppercase, d5 must be masked.

Note that small and capital letters in ASCII have the following values:

Letter	Hex	Binary		Letter	Hex	Binary
A	41	0100 0001	V2-15-00	а	61	0110 0001
В	42	0100 0010		b	62	0110 0010
C	43	0100 0011		С	63	0110 0011
		•••		***	***	
Y	59	0101 1001		у	79	0111 1001
Z	5A	0101 1010		Z	7A	0111 1010

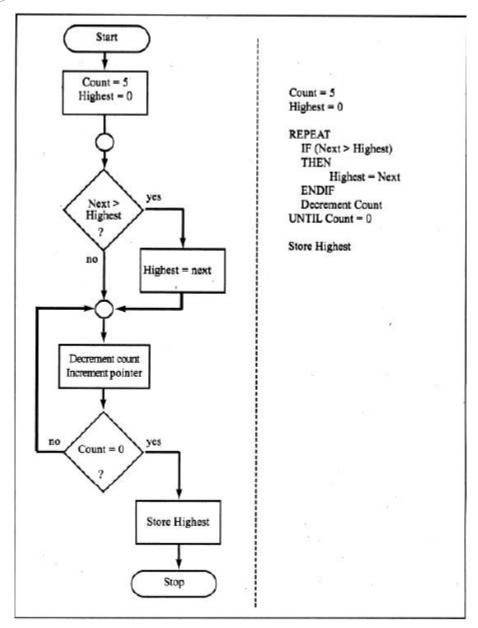


Fig: Flowchart and Pseudocode for Program 3-3

The following Program uses the CMP instruction to determine if an ASCII character is uppercase or lowercase.

- ✓ The following Program first detects if the letter is in lowercase, and if it is, it is ANDed wit h 1101 1111B = DFH. Otherwise, it is simply left alone.
- ✓ To determine if it is a lowercase letter, it is compared with 61H and 7AH to see if it is in the range a to z. Anything above or below this range should be left alone.

In the following Program, 20H could have been subtracted from the lowercase letters instead of ANDing with 1101 1111B.

MICROPROCESSORS AND MICROCONTROLLERS

```
PROG3-4 (EXE) LOWERCASE TO UPPERCASE CONVERSION
TITLE
            60,132
 PAGE
 .MODEL SMALL
 .STACK 64
            . DATA
                  'mY NAME is joe'
 DATA1
            DB
                0020H
            ORG
 DATA2
                  14 DUP(?)
      . CODE
MAIN PROC FAR
      MOV
            AX, @DATA
      MOV
           DS, AX
      MOV
            SI,OFFSET DATA1 ;SI points to original data
      MOV
            BX,OFFSET DATA2 ; BX points to uppercase data
      MOV
            CX, 14
                              ;CX is loop counter
            AL,[ SI]
AL, 61H
                              ;get next character
 BACK: MOV
      CMP
                              ;if less than `a'
      JB
            OVER
                              ; then no need to convert
      CMP
           AL, 7AH
OVER
AL, 11011111B
            AL, 7AH
                             ;if greater than `z'
                             ; then no need to convert
; mask d5 to convert to uppercase
      JA
      AND
OVER: MOV
            [ BX] ,AL
                              ;store uppercase character
                             ;increment pointer to original
      INC
            SI
      INC
            BX
                              ;increment pointer to uppercase data
      LOOP BACK
                              ; continue looping if CX > 0
      VOM
            AH, 4CH
      INT
            21H
                              ;go back to OS
 MAIN ENDP
      END
            MAIN
```

Program 3-4

BCD AND ASCII CONVERSION:

- o BCD (*binary coded decimal*) is needed because we use the digits 0 to 9 for numbers in everyday life. Binary representation of 0 to 9 is called BCD.
- o In computer literature, one encounters two terms for BCD numbers: (1) unpacked BCD, and (2) packed BCD.

Unpacked BCD:

- o In unpacked BCD, the lower 4 bits of the number represent the BCD number and the rest of the bits are 0.
 - Example: "0000 1001" and "0000 0101" are unpacked BCD for 9 and 5, respectively.
- o In the case of unpacked BCD it takes 1 byte of memory location or a register of 8 bits to contain the number.

Digit	BCD
0	0000
1	0001
2	0010
3	0011
4	0100
5	0101
6	0110
7	0111
8	1000
9	1001

MICROPROCESSORS AND MICROCONTROLLERS

Packed BCD:

- o In the case of packed BCD, a single byte has two BCD numbers in it, one in the lower 4 bits and one in the upper 4 bits.
 - For example, "0101 1001" is packed BCD for 59.
- o It takes only 1 byte of memory to store the packed BCD operands. This is one reason to use packed BCD since it is twice as efficient in storing data.

ASCII Numbers:

o In ASCII keyboards, when key "0" is activated, for example, "011 0000" (30H) is provided to the computer. In the same way, 31H (011 0001) is provided for key "1", and so on, as shown in the following list:

Kev	ASCII (hex)	Binary	BCD (unpacked)
0	30	011 0000	0000 0000
1	31	011 0001	0000 0001
2	32 .	011 0010	0000 0010
3	33	011 0011	0000 0011
4	34	011 0100	0000 0100
5	35	011 0101	0000 0101
6	36	011 0110	0000 0110
7	37	011 0111	0000 0111
8	38	011 1000	0000 1000
9	39	011 1001	0000 1001

It must be noted that, although ASCII is standard in many countries, BCD numbers have universal application. So, the data conversion from ASCII to BCD and vice versa should be studied.

ASCII to BCD Conversion:

To process data in BCD, first the ASCII data provided by the keyboard must be converted to BCD. Whether it should be converted to packed or unpacked BCD depends on the instructions to be used.

ASCII to Unpacked BCD Conversion:

To convert ASCII data to BCD, the programmer must get rid of the tagged "011" in the higher 4 bits of the ASCII. To do that, each ASCII number is ANDed with "0000 1111" (0FH), as shown in the next example. These programs show three different methods for converting the 10 ASCII digits to unpacked BCD. All use the same data segment:

ASC	DB	'9562481273'
	ORG	0010H
UNPACK	DB	10 DUP(?)

The data is defined as DB.

- In the following Program 3-5a; the data is accessed in word-sized chunks.
- The Program 3-5b used the PTR directive to access the data.

The Program 5-3c uses the based addressing mode (BX+ASC is used as a pointer.

```
MOV
                 CX,5
           MOV
                 BX, OFFSET ASC
                                   ;BX points to ASCII data
                 DI,OFFSET UNPACK ;DI points to unpacked BCD data
          MOV
                                   ; move next 2 ASCII numbers to AX
AGAIN:
           MOV
                 AX,[BX]
                 AX, OFOFH
                                   ; remove ASCII 3s
           AND
           MOV
                 [DI],AX
                                   ;store unpacked BCD
                 DI,2
                                   ; point to next unpacked BCD data
           ADD
           ADD
                 BX,2
                                   ;point to next ASCII data
           LOOP
                 AGAIN
```

Program 3-5a

	MOV	CX,5	;CX is loop counter
	MOV	BX, OFFSET ASC	;BX points to ASCII data
	MOV	DI, OFFSET UNPACK	;DI points to unpacked BCD data
AGAIN:	MOV	AX, WORD PTR [BX]	; move next 2 ASCII numbers to AX
	AND	AX, OFOFH	;remove ASCII 3s
	MOV	WORD PTR [DI], AX	;store unpacked BCD
	ADD	DI,2	;point to next unpacked BCD data
	ADD	BX,2	;point to next ASCII data
	LOOP	AGAIN	And the control of th

Program 3-5b

```
MOV
                 CX,10
                                     ;load the counter
           SUB
                 BX, BX
                                     ;clear BX
AGAIN:
                 AL, ASC[ BX]
                                     ; move to AL content of mem [BX+ASC]
           MOV
           AND
                 AL, OFH
                                     ; mask the upper nibble
           MOV
                 UNPACK[ BX] , AL
                                     ; move to mem [BX+UNPACK] the AL
           INC
                 BX
                                     ; point to next byte
                 AGAIN
                                     ;loop until it is finished
           LOOP
```

Program 3-5c

ASCII to Packed BCD Conversion:

To convert ASCII to packed BCD, it is first converted to unpacked BCD (to get rid of the 3) and then combined to make packed BCD.

For example, for 9 and 5 the keyboard gives 39 and 35, respectively. The goal is to produce 95H or 1001 0101, which is called packed BCD. This process is illustrated in detail below:

Key	ASCII	Unpacked BCD	Packed BCD
4	34	00000100	
7	37	00000111	01000111 or 47H
	ORG	0010H	*
VAL ASC	DB	.47'	
VAL BCD	DB	?	
; reminder:	DB wi	11 put 34 in	0010H location and 37 in 0011H
	MOV		VAL ASC ;AH=37,AL=34
	AND	AX, OFOFH	;mask 3 to get unpacked BCD
	XCHG.	AH, AL	; swap AH and AL.
	MOV	CL, 4	;CL=04 to shift 4 times
	SHL	AH, CL	; shift left AH to get AH=40H
	OR	AL, AH	;OR them to get packed BCD
	MOV	VAL BCD, AL	; save the result

MICROPROCESSORS AND MICROCONTROLLERS

After this conversion, the packed BCD numbers are processed and the result will be in packed BCD format. There are special instructions, such as DAA and DAS, which require that the data be in packed BCD form and give the result in packed BCD.

• For the result to be displayed on the monitor or be printed by the printer, it must be in ASCII format. Conversion from packed BCD to ASCII is discussed next.

Packed BCD to ASCII Conversion:

To convert packed BCD to ASCII, it must first be converted to unpacked and then the unpacked BCD is tagged with 011 0000 (30H).

The following shows the process of converting from packed BCD to ASCII:

Packe	d BCD	Unpacked BCD ASCII
29H		02H & 09H 32H & 39H
0010	1001	0000 0010 & 0000 1001 011 0010 & 011 1001
VAL1 BCD	DB	29Н
VAL3-ASC	DW	?
	MOV	AL, VAL1_BCD
	MOV	AH, AL ; copy AL to AH. now AH=29, AL=29H AX, 0F00FH ; mask 9 from AH and 2 from AL
	MOV	CL,4 ;CL=04 for shift
	SHR	AH,CL ;shift right AH to get unpacked BCD
	OR	AX,3030H ;combine with 30 to get ASCII
	XCHG	AH, AL ; swap for ASCII storage convention
	VOM	VAL3_ASC, AX ; store the ASCII

- After learning bow to convert ASCII to BCD, the application of BCD numbers is the next step.
- There are two instructions that deal specifically with BCD numbers: DAA and DAS.

BCD Addition and Correction:

In BCD addition, after adding packed BCD numbers, the result is no longer BCD. Look at this example:

Adding them gives 0011 1111B (3FH), which is not BCD! A BCD number can-only have digits from 0000 to 1001 (or 0 to 9). The result above should have been 17+28=45 (0100 0101).

- \checkmark To correct this problem, the programmer must add 6 (0110) to the low digit: 3F + 06 = 45H.
- The same problem could have happened in the upper digit (for example, in 52H + 87H = D9H).
 - ✓ Again to solve this problem, 6 must be added to the upper digit (D9H + 60H = 139H), to ensure that the result is BCD (52 + 87 = 139).

MICROPROCESSORS AND MICROCONTROLLERS

DAA

The DAA (*decimal adjust for addition*) instruction in x86 microprocessors is provided exactly for the purpose of correcting the problem associated with BCD addition. DAA will add 6 to the lower nibble or higher nibble if needed; otherwise, it will leave the result alone.

The following example will clarify these points:

```
DATA1
        DB 47H
DATA2
        DB 25H
DATA3
       DB?
     MOV AL, DATA1
                       ;AL holds first BCD operand
      MOV BL, DATA2
                       ;BL holds second BCD operand
      ADD AL,BL
                        ;BCD addition
      DAA
                       ;adjust for BCD addition
     MOV DATA3,AL
                       ; store result in correct BCD form
```

After the program is executed, the DATA3 field will contain 72H (47 + 25 = 72).

- ✓ Note that DAA works only on AL. In other words, while the source can be an operand of any addressing mode, the destination must be AL in order for DAA to work.
- ✓ It needs to be emphasized that DAA must be used after the addition of BCD operands and that BCD operands can never have any digit greater than 9. In other words, no A-F digit is allowed.
- ✓ It is also important to note that DAA works only after an ADD instruction; it will not work after the INC instruction.

Summary of DAA Action:

- 1. If after an ADD or ADC instruction the lower nibble (4 bits) is greater than 9, or if AF = 1, add 0110 to the lower 4 bits.
- 2. If the upper nibble is greater than 9, or if CF = 1, add 0110 to the upper nibble.

In reality there is no other use for the AF (auxiliary flag) except for BCD addition and correction. For example, adding 29H and 18H will result in 41H, which is incorrect as far as BCD is concerned. See the following code:

```
Hex
                                                                 BCD
  Hex
          BCD
                                                         53
                                                                 0010 0011
          0010 1001
  29
                                                        75
+ 18 +
          0001
                1000
                                                       D8
                                                                                   Because the upper nibble is greater than 9,
                                                                 1101 1000
                          Because AF = 1,
  41
          0100 0001
                                                      + 6
                                                                                   DAA adds 6 to upper nibble.
                          DAA adds 6 to lower nibble.
                0110
                                                                                   The final result is BCD.
                          The final result is BCD.
```

The above example shows that 6 is added to the upper nibble due to the fact it is greater than 9.

```
Eg1: ; AL = 0011 1001 = 39 BCD
; CL = 0001 0010 = 12 BCD
ADD AL, CL ; AL = 0100 1011 = 4BH
DAA ; Since 1011 > 9; Add correction factor 06.
; AL = 0101 0001 = 51 BCD
```

MICROPROCESSORS AND MICROCONTROLLERS

Eg2: ; $AL = 1001\ 0110 = 96\ BCD$

; BL = 0000 0111 = 07 BCD ; AL = 1001 1101 = 9DH

DAA ; Since 1101 > 9; Add correction factor 06

; $AL = 1010\ 0011 = A3H$

; Since 1010 > 9; Add correction factor 60 ; AL = 0000 0011 = 03 BCD. The result is 103.

More Examples:

1: Add decimal numbers 22 and 18.

MOV AL, 22H ; (AL)=22H

ADD AL, BL

ADD AL, 18H; (AL) = 3AH Illegal, incorrect answer!

DAA ; (AL) = 40H Just treat it as decimalwith CF = 0

3AH In this case, DAA same as ADD AL, 06H +06H When LS hex digit in AL is >9, add 6 to it

=40H

2: Add decimal numbers 93 and 34.

MOV AL, 93H ; (AL)= 93H

ADD AL, 34H ; (AL) = C7H, CF = 0 Illegal & Incorrect! DAA ; (AL) = 27H Just treat it as decimal with CF = 1

C7H In this case, DAA same as ADD AL, 60H +60H When MS hex digit in AL is >9, add 6 to it

=27H

3: Add decimal numbers 93 and 84.

MOV AL, 93H ; (AL) = 93H

ADD AL, 84H ; (AL) = 17H, CF = 1 Incorrect answer!

DAA ; (AL) = 77H Just treat it as decimal with CF = 1 (carry generated?)

17H In this case, DAA same as ADD AL, 60H

+60H When CF = 1, add 6 to MS hex digit of AL and treat =77H Carry as 1 even though not generated in this addition

4: Add decimal numbers 65 and 57.

MOV AL, 65H ; (AL)=65HADD AL, 57H ; (AL)=BCH

DAA ; (AL) = 22H Just treat it as decimal with CF = 1

BCH In this case, DAA same as ADD AL, 66H

+66H =22H CF = 1

5: Add decimal numbers 99 and 28.

MOV AL, 99H ; (AL)= 99H

ADD AL, 28H ; (AL) = C1H, AF = 1

DAA ; (AL) = 27H Just treat it as decimal with CF = 1

C1H In this case, DAA same as ADD AL, 66H +66H 6 added to LS hex digit of AL, as AF = 1 =27H CF = 1 6 added to MS hex digit of AL, as it is >9

6: Add decimal numbers 36 and 42.

MICROPROCESSORS AND MICROCONTROLLERS

```
MOV AL, 36H
ADD AL, 42H
DAA
; (AL) = 78H
; (AL) = 78H
Just treat it as decimal with CF = 0

78H
+00H
=78H
In this case, DAA same as ADD AL, 00H
```

The following Program demonstrates the use of DAA after addition of multibyte packed BCD numbers.

```
Two sets of ASCII data have come in from the keyboard. Write and run a program to:

    Convert from ASCII to packed BCD.

Add the multibyte packed BCD and save it.
Convert the packed BCD result to ASCII.
              PROG3-6 (EXE) ASCII TO BCD CONVERSION AND ADDITION
 TITLE
 PAGE
              60,132
 .MODE SMALL
 .STACK 64
              . DATA
                     `0649147816'
 DATA1_ASC DB
             ORG 0010H
 DATA2_ASC DB
                     `0072687188'
             ORG 0020H
 DATA3 BCD DB 5 DUP (?)
             ORG 0028H
 DATA4 BCD DB 5 DUP (?)
              ORG 0030H
 DATAS ADD DB 5 DUP (?)
              ORG 0040H
 DATA6 ASC DB 10 DUP (?)
              . CODE
 MAIN PROC FAR
            AX,@DATA
      MOV
       MOV
              DS, AX
            BX,OFFSET DATA1_ASC ;BX points to first ASCII data
DI,OFFSET DATA3_BCD ;DI points to first BCD data
CX,10 ;CX holds number bytes to convert
       MOV
       MOV
       MOV
      CALL CONV_BCD ;convert ASCII to BCD
MOV BX,OFFSET DATA2 ASC ;BX points to second ASCII data
MOV DI,OFFSET DATA4_BCD ;DI points to second BCD data
                                       ;CX holds number bytes to convert
       MOV CX, 10
       CALL CONV BCD
                                           ;convert ASCII to BCD
     CALL BCD ADD ;add the BCD operands
MOV SI,OFFSET DATA5 ADD ;SI points to BCD result
MOV DI,OFFSET DATA6 ASC ;DI points to ASCII result
     CALL BCD ADD
       MOV
             CX,05
                                           ;CX holds count for convert
       CALL CONV ASC
                                           ;convert result to ASCII
      MOV
              AH, 4CH
      INT
              21H
                                          ;go back to OS
 MAIN ENDP
```

```
;THIS SUBROUTINE CONVERTS ASCII TO PACKED BCD
CONV BCD PROC
AGAIN:
            MOV
                     AX,[BX] ; BX=pointer for ASCII data
      XCHG AH, AL
      AND AX,0F0FH ;mask ASCII 3s
PUSH CX ;save the counter
      MOV CL,4 ;shift AH left 4 bits
SHL AH,CL ;to get ready for packing
OR AL,AH ;combine to make packed BCD
MOV [DI],AL ;DI=pointer for BCD data
ADD BX,2 ;point to next 2 ASCII bytes
      INC DI
                              ;point to next BCD data
                              ;restore loop counter
      LOOP AGAIN
      RET
CONV BCD ENDP
;THIS SUBROUTINE ADDS TWO MULTIBYTE PACKED BCD OPERANDS
BCD ADD PROC
        MOV BX,OFFSET DATA3_BCD ;BX=pointer for operand 1
MOV DI,OFFSET DATA4_BCD ;DI=pointer for operand 2
MOV SI,OFFSET DATA5_ADD ;SI=pointer for sum
        MOV CX,05
        CLC
BACK: MOV AL,[BX]+4 ;get next byte of operand 1
        ADC AL,[DI]+4 ;add next byte of operand 2
                              ;correct for BCD addition
        DAA
        MOV [SI] 44, AL ; save sum
        DEC BX ;point to next byte of operand 1
                        ;point to next byte of operand 2
;point to next byte of sum
        DEC DI
        DEC SI
        LOOP
                     BACK
        RET
BCD ADD ENDP
;------
;THIS SUBROUTINE CONVERTS FROM PACKED BCD TO ASCII
CONV ASC PROC
AGAIN2: MOV AL,[SI] ;SI=pointer for BCD data
MOV AH,AL ;duplicate to unpack
      AND AX, OFOOFH ;unpack
      PUSH CX ;save counter

MOV CL,04 ;shift right 4 bits to unpack

SHR AH,CL ;the upper nibble

OR AX,3030H ;make it ASCII

XCHG AH,AL ;swap for ASCII storage convention

MOV [DI],AX ;store ASCII data

INC SI ;point to next BCD data

ADD DI.2 ;point to next ASCII data
      ADD DI,2
                             ;point to next ASCII data
       POP CX
                              ;restore loop counter
      LOOP AGAIN2
      RET
CONV ASC ENDP
       END MAIN
```

Program 3-6

BCD Subtraction and Correction:

The problem associated with the addition of packed BCD numbers also shows up in subtraction. Again, there is an instruction (DAS) specifically designed to solve the problem.

Therefore, when subtracting packed BCD (single-byte or multibyte) operands, the DAS instruction is put after the SUB or SBB instruction. AL must be used as the destination register to make DAS work.

Summary of DAS Action:

- 1. If after a SUB or SBB instruction the lower nibble is greater than 9, or if AF = 1, subtract 0110 from the lower 4 bits.
- 2. If the upper nibble is greater than 9, or CF = 1, subtract 0110 from the upper nibble.

Due to the widespread use of BCD numbers, a specific data directive, DT, has been created. DT can be used to represent BCD numbers from 0 to $10^{20} - 1$ (that is, twenty 9s).

Assume that the following operands represent the budget, the expenses, and the balance, which is the budget minus the expenses.

```
BUDGET
                  87965141012
EXPENSES
            DT
                  31610640392
BALANCE
            DT
                              ;balance = budget - expenses
      MOV
           CX,10 -
                              ;counter=10
            BX,00
      MOV
                              ;pointer=0
      CLC
                              ;clear carry for the 1st iteration
      BACK: MOVAL, BYTE PTR BUDGET[BX] ; get a byte of the BUDGET
      SBB
            AL, BYTE PTR EXPENSES[ BX]
                                      ; subtract a byte from it
      DAS
                                     ; correct the result for BCD
            BYTE PTR BALANCE[ BX] , AL ; save it in BALANCE
      MOV
      INC
                                    ;increment for the next byte
      LOOP BACK
                                     ;continue until CX=0
```

Notice in the code section above that,

- ✓ no H (hex) indicator is needed for BCD numbers when using the DT directive, and
- ✓ the use of the based relative addressing mode (BX + displacement) allows access to all three arrays with a single register BX.

```
Eg1:
                                          ; AL = 0011\ 0010 = 32\ BCD
                                          : CL = 0001\ 0111 = 17\ BCD
         SUB AL, CL
                                          ; AL = 0001 \ 1011 = 1BH
         DAS
                                          ; Subtract 06, since 1011 > 9.
                                          ; AL = 0001 \ 0101 = 15 \ BCD
Eg2:
                                          ; AL = 0010\ 0011 = 23\ BCD
                                          CL = 0101\ 1000 = 58\ BCD
         SUB AL, CL
                                          ; AL = 1100 \ 1011 = CBH
         DAS
                                          ; Subtract 66, since 1100 > 9 & 1011 > 9.
                                          ; AL = 0110\ 0101 = 65\ BCD, CF = 1.
                       ; Since CF = 1, answer is -65.
```

MICROPROCESSORS AND MICROCONTROLLERS

More Examples:

1: Subtract decimal numbers 45 and 38.

MOV AL, 45H ; (AL)= 45H

SUB AL, 38H ; (AL) = 0DH Illegal, incorrect answer!

DAS ; (AL) = 07H Just treat it as decimal with Cy = 0

0DH In this case, DAS same as SUB AL, 06H -06H When LS hex digit in AL is >9, subtract 6

=07H

2: Subtract decimal numbers 63 and 88.

MOV AL, 63H ; (AL) = 63H

SUB AL, 88H ; (AL) = DBH, Cy=1 Illegal & Incorrect!

DAS ; (AL) = 75H Just treat it as decimal with Cy = 1 (carry generated?)

DBH In this case, DAS same as SUB AL, 66H
-66H When Cy = 1, it means result is negative
=75H Result is 75, which is 10's complement of 25

Treat Cy as 1 as Cy was generated in the previous subtraction itself!

3: Subtract decimal numbers 45 and 52.

MOV AL, 45H ; (AL)= 45H

SUB AL, 52H ; (AL) = F3H, Cy = 1 Incorrect answer!

DAS ; (AL) = 93H Just treat it as decimal with Cy = 1 (carry generated?)

F3H In this case, DAS same as SUB AL, 60H
-60H When Cy = 1, it means result is negative
=93H Result is 93, which is 10's complement of 07

4: Subtract decimal numbers 50 and 19.

MOV AL, 50H ; (AL)= 50H SUB AL, 19H ; (AL) = 37H, Ac = 1

DAS ; (AL) = 31H, Just treat it as decimal with Cy =0

37H In this case, DAS same as SUB AL, 06H

-06H 06H is subtracted from AL as Ac = 1

=31H

5: Subtract decimal numbers 99 and 88.

MOV AL, 99H ; (AL)= 99H SUB AL, 88H ; (AL) = 11H

DAS ; (AL) = 11H Just treat it as decimal with Cy = 0

11H In this case, DAS same as SUB AL, 00H

-00H =11H

6: Subtract decimal numbers 14 and 92.

MOV AL, 14H ; (AL)=14H

SUB AL, 92H ; (AL) = 82H, Cy = 1

DAS ; (AL) = 22H Just treat it as decimal with Cy = 1

82H In this case, DAS same as SUB AL, 60H -60H 60H is subtracted from AL as Cy = 1 =22H 22 is 10's complement of 78


ROTATE INSTRUCTIONS:

In many applications there is a need to perform a bitwise rotation of an operand. The rotation instructions ROR, ROL and RCR, RCL are designed specifically for that purpose. They allow a program to rotate an operand right or left.


- o In rotate instructions, the operand can be in a register or memory. If the number of times an operand is to be rotated is more than 1, this is indicated by CL. This is similar to the shift instructions.
- There are two types of rotations. One is a simple rotation of the bits of the operand, and the other is a rotation through the carry.

ROR (rotate right)

In rotate right, as bits are shifted from left to right they exit from the right end (LSB) and enter the left end (MSB). In addition, as each bit exits the LSB, a copy of it is given to the carry flag. In other words, in ROR, the LSB is moved to the MSB and is also copied to CF, as shown in the diagram.




If the operand is to be rotated once, the 1 is coded, but if it is to be rotated more than once, register CL is used to hold the number of times it is to be rotated.

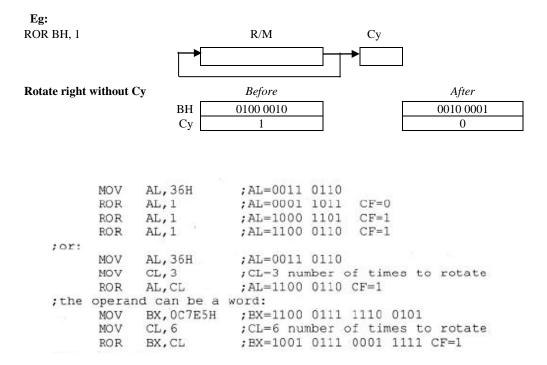


MICROPROCESSORS AND MICROCONTROLLERS

ROL (rotate left)

In rotate left, as bits are shifted from right to left they exit the left end (MSB) and enter the right end (LSB). In addition, every bit that leaves the MSB is copied to the carry flag. In other words, in ROL the MSB is moved to the LSB and is also copied to CF, as shown in the diagram.



If the operand is to be rotated once, the 1 is coded. Otherwise, the number of times it is to be rotated is in CL. Eg:

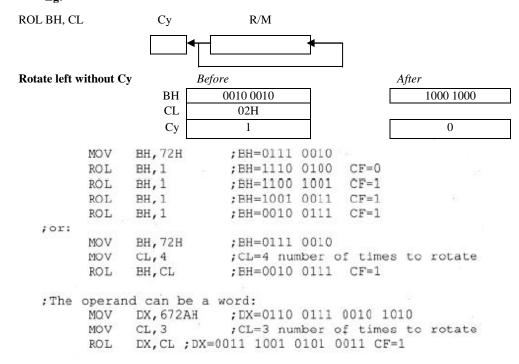

The following Program shows an application of the rotation instruction. The maximum count in Program will be 8 since the program is counting the number of 1s in a byte of data. If the operand is a 16-bit word, the number of 1s can go as high as 16.

```
Write a program that finds the number of 1s in a byte.
; From the data segment:
                         97H
DATA1
            DB
COUNT
            DB
                         ?
; From the code
                 segment:
            SUB
                   BL, BL
                                ; clear BL to keep the number of 1s
            MOV
                   DL,8
                                ;rotate total of 8 times
            MOV
                   AL, DATA1
            ROL
AGAIN:
                   AL,1
                                ;rotate it once
            JNC
                   NEXT
                                ; check for 1
            INC
                   BL
                                ; if CF=1 then add one to count
NEXT:
            DEC
                   DL
                                ;go through this 8 times
            JNZ
                   AGAIN
                                ; if not finished go back
            MOV
                   COUNT, BL
                                ; save the number of 1s
```

Program 3-7

MICROPROCESSORS AND MICROCONTROLLERS


The Program is similar to the previous one, rewritten for a word-sized operand. It also provides the count in BCD format instead of hex. Reminder: AL is used to make a BCD counter because the because, the DAA instruction works only on AL.

DATAW1	DW	97F4F	I
COUNT2	·DB	?	
			18 E
	SUB	AL, AL	; clear AL to keep the number of 1s in BCD
	MOV	DL,16	;rotate total of 16 times
	MOV	BX, DATAW1	; move the operand to BX
AGAIN:	ROL	BX,1	;rotate it once
	JNC	NEXT	; check for 1. If CF=0 then jump
	ADD	AL,1	;if CF=1 then add one to count
	DAA	39	;adjust the count for BCD
NEXT:	DEC	DL	;go through this 16 times
	JNZ	AGAIN	; if not finished go back
	MOV	COUNT2, AL	; save the number of 1s in COUNT2


Program 3-8

RCR (rotate right through carry)

In RCR, as bits are shifted from left to right, they exit the right end (LSB) to the carry flag, and the carry flag enters the left end (MSB). In other words, in RCR the LSB is moved to CF and CF is moved to the MSB. In reality, CF acts as if it is part of the operand. This is shown in the diagram.



If the operand is to be rotated once, the 1 is coded, but if it is to be rotated more than once, the register CL holds the number of times.

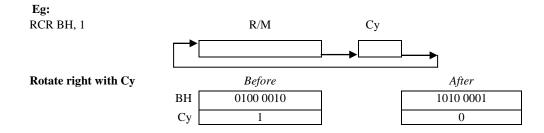


MICROPROCESSORS AND MICROCONTROLLERS


```
CLC
                                :make CF=0
      MOV
            AL, 26H
                                ;AL=0010 0110
      RCR
                                          0011 CF=0
            AL, 1
                                ;AL=0001
      RCR
                                ;AL=0000 1001 CF=1
            AL, 1
                                :AL=1000 0100 CF=1
      RCR
            AL, 1
or:
      CLC
                                ;make CF=0
      MOV
                                ;AL=0010 0110
            AL, 26H
      MOV
            CL, 3
                                ;CL=3 number of times to rotate
      RCR
            AL, CL
                                ;AL=1000 0100 CF=1
; the operand can be a word
      STC
                                ; make CF=1
      MOV
            BX, 37F1H
                                ;BX=0011 0111 1111 0001
      MOV
            CL, 5
                                ;CL=5 number of times to rotate
      RCR
            BX, CL
                                ;BX=0001 1001 1011 1111 CF=0
```

RCL (rotate left through carry)

In RCL, as bits are shifted from right to left, they exit the left end (MSB) and enter the carry flag, and the carry flag enters the right end (LSB). In other words, in RCL the MSB is moved to CF and CF is moved to the LSB. In reality, CF acts as if it is part of the operand. This is shown in the following diagram.



If the operand is to be rotated once, the 1 is coded, but if it is to be rotated more than once, register CL holds the number of times.

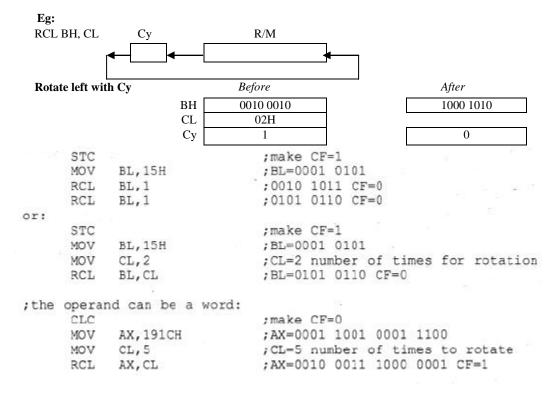

INTERRUPTS IN x86 PC

8088/86 INTERRUPTS

- o An interrupt is an external event that informs the CPU that a device needs its service. In 8088/86, there are 256 interrupts: INT 00, INT 01, . . . , INT FF (sometimes called TYPEs).
- o When an interrupt is executed, the microprocessor automatically saves the flag register (FR), the instruction pointer (IP), and the code segment register (CS) on the stack; and goes to a fixed memory location.
- o In x86 PCs, the memory locations to which an interrupt goes is always four times the value of the interrupt number. For example, INT 03 will go to address 0000CH (4 * 3 = 12 = 0CH). The following Table is a partial list of the interrupt vector table.

Table: Interrupt Vector

INT	Physical	Logical
Number	Address	Address
INT 00	00000	0000 - 0000
INT 01	00004	0000 - 0004
INT 02	00008	0000 - 0008
INT 03	0000C	0000 – 000C
INT 04	00010	0000 - 0010
INT 05	00014	0000 - 0014
		• • •
INT FF	003FC	0000 – 03FC

0003FC	CS) INT EE
	IP '	} INT FF
00018	cs	} INT 06
	IP	
00014	CS	} INT 05
	IP	
00010	CS	} INT 04 signed number overflow
	IP	
0000C	CS	} INT 03 breakpoint
	IP	
No Vas	CS	} INT 02 NMI
80000	IP .	
00004	CS	} INT 01 signed-step
	IP	
00000	cs	} INT 00 divide error
	IP.	

Interrupt Service Routine (ISR):

- ✓ For every interrupt there must be a program associated with it.
- ✓ When an interrupt is invoked, it is asked to run a program to perform a certain service. This program is commonly referred to as an *interrupt service routine* (*ISR*). The interrupt service routine is also called the *interrupt handler*.
- ✓ When an interrupt is invoked, the CPU runs the interrupt service routine. As shown in the above Table, for every interrupt there are allocated four bytes of memory in the interrupt vector table. Two bytes are for the IP and the other two are for the CS of the ISR.
- ✓ These four memory locations provide the addresses of the interrupt service routine for which the interrupt was invoked. Thus the lowest 1024 bytes (256 x 4 = 1024) of memory space are set aside for the interrupt vector table and must not be used for any other function.

Find the physical and logical addresses in the interrupt vector table associated with:

(a) INT 12H

(b) INT 8

Solution:

- (a) The physical addresses for INT 12H are 00048H-0004BH since $(4 \times 12H = 48H)$. That means that the physical memory locations 48H, 49H, 4AH, and 4BH are set aside for the CS and IP of the ISR belonging to INT 12H. The logical address is 0000:0048H-0000:004BH.
- (b) For INT 8, we have $8 \times 4 = 32 = 20$ H; therefore, memory addresses 00020H, 00021H, 00022H, and 00023H in the interrupt vector table hold the CS:IP of the INT 8 ISR. The logical address is 0000:0020H-0000:0023H.

Difference between INT and CALL Instructions:

The INT instruction saves the CS: IP of the following instruction and jumps indirectly to the subroutine associated with the interrupt. A CALL FAR instruction also saves the CS: IP and jumps to the desired subroutine (procedure).

The differences can be summarized as follows:

CALL Instruction	INT instruction	
1. A CALL FAR instruction can jump to any location within the 1M byte address range of the 8088/86 CPU.	 INT nn goes to a fixed memory location in the interrupt vector table to get the address of the interrupt service routine. 	
2. A CALL FAR instruction is used by the programmer in the sequence of instructions in the program.	2. An externally activated hardware interrupt can come-in at any time, requesting the attention of the CPU.	
3. A CALL FAR instruction cannot be masked (disabled).	3. INT nn belonging to externally activated hardware interrupts can be masked.	
4. A CALL FAR instruction automatically saves only CS: IP of the next instruction on the stack.	4. INT nn saves FR (flag register) in addition to CS: IP of the next instruction.	
5. At the end of the subroutine that has been called by the CALL FAR instruction, the RETF (return FAR) is the last instruction. RETF pops CS and IP off the stack.	5. The last instruction in the interrupt service routine (ISR) for INT nn is the instruction IRET (interrupt return). IRET pops off the FR (flag register) in addition to CS and IP.	

Processing Interrupts:


When the 8088/86 processes any interrupt (software or hardware), it goes through the following steps:

1. The flag register (FR) is pushed onto the stack and SP is decremented by 2, since FR is a 2-byte register.

MICROPROCESSORS AND MICROCONTROLLERS

- 2. IF (interrupt enable flag) and TF (trap flag) are both cleared (IF = 0 and TF = 0). This masks (causes the system to ignore) interrupt requests from the INTR pin and disables single stepping while the CPU is executing the interrupt service routine.
- 3. The current CS is pushed onto the stack and SP is decremented by 2.
- 4. The current IP is pushed onto the stack and SP is decremented by 2.
- 5. The INT number (type) is multiplied by 4 to get the physical address of the location within the vector table to fetch the CS and IP of the interrupt service routine.
- 6. From the new CS: IP, the CPU starts to fetch and execute instructions belonging to the ISR program.
- 7. The last instruction of the interrupt service routine must be IRET, to get IP, CS, and FR back from the stack and make the CPU run the code where it left off.

The following Figure summarizes these steps in diagram form.

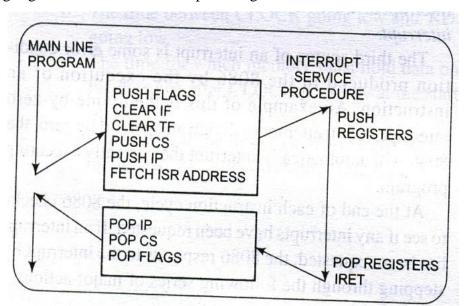

Categories of Interrupts:


INT nn is a 2-byte instruction where the first byte is for the opcode and the second byte is the interrupt number. We can have a maximum of 256 (INT 00 INT FFH) interrupts. Of these 256 interrupts, some are used for software interrupts and some are for hardware interrupts.

1. Hardware Interrupts:

- o There are three pins in the x86 that are associated with hardware interrupts. They are INTR (interrupt request), NMI (non-maskable interrupt), and INTA (interrupt acknowledge).
- o INTR is an input signal into the CPU, which can be masked (ignored) and unmasked through the use of instructions CLI (clear interrupt flag) and STI (set interrupt flag).

MICROPROCESSORS AND MICROCONTROLLERS

- o If IF = 0 (in flag register), all hardware interrupt requests through INTR are ignored. This has no effect on interrupts coming from the NMI pin. The instruction CLI (clear interrupt flag) will make IF = 0.
- o To allow interrupt request through the INTR pin, this flag must be set to one (IF = 1). The STI (set interrupt flag) instruction can be used to set IF to 1.
- o NMI, which is also an input signal into the CPU, cannot be masked and unmasked using instructions CLI and STI; and for this reason it is called a *non-maskable interrupt*.
- INTR and NMI are activated externally by putting 5V on the pins of NMI and INTR of the x86 microprocessor.
- When either of these interrupts is activated, the x86 finishes the instruction that it is executing, pushes FR and the CS: IP of the next instruction onto the stack, then jumps to a fixed location in the interrupt vector table and fetches the CS: IP for the interrupt service routine (ISR) associated with that interrupt.
- At the end of the ISR, the IRET instruction causes the CPU to get (pop) back its original FR and
 CS: IP from the stack, thereby forcing the CPU to continue at the instruction where it left off when the interrupt came in.
- Intel has embedded "INT 02" into the x86 microprocessor to be used only for NMI.
- Whenever the NMI pin is activated, the CPU will go to memory location 00008 to get the address (CS: IP) of the interrupt service routine (ISR) associated with NMI.
- Memory locations 00008, 00009, 0000A, and 0000B contain the 4 bytes of CS: IP of the ISR belonging to NMI.
- The 8259 programmable interrupt controller (PIC) chip can be connected to INTR to expand the number of hardware interrupts to 64.

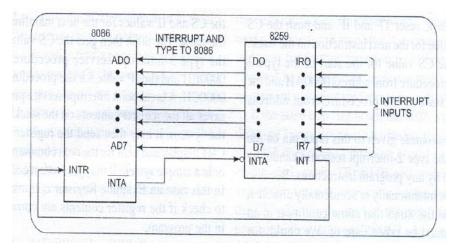

MICROPROCESSORS AND MICROCONTROLLERS

2. Software Interrupts:

- o If an ISR is called upon as a result of the execution of an x86 instruction such as "*INT nn*", it is referred to as software interrupt, since it was invoked from software, not from external hardware.
- o Examples of such interrupts are DOS "INT 21H" function calls and video interrupts "INT 10H".
- o These interrupts can be invoked in the sequence of code just like any other x86 instruction.
- o Many of the interrupts in this category are used by the MS DOS operating system and IBM BIOS to perform essential tasks that every computer must provide to the system and the user.
- O Within this group of interrupts there are also some *predefined functions* associated with some of the interrupts. They are "*INT 00*" (divide error), "*INT 01*" (single step), "*INT 03*" (breakpoint), and "*INT 04*" (signed number overflow). Each is described below.
- The rest of the interrupts from "INT 05" to "INT FF" can be used to implement either software or hardware interrupts.

Functions associated with INT 00 to INT 04:

Interrupts INT 00 to INT 04 have predefined tasks (functions) and cannot be used in any other way.

INT 00 (divide error)

- ✓ This interrupt belongs to the category of interrupts referred to as conditional or exception interrupts. Internally, they are invoked by the microprocessor whenever there are conditions (exceptions) that the CPU is unable to handle.
- ✓ One such situation is an attempt to divide a number by zero. Since the result of dividing a number by zero is undefined, and the CPU has no way of handling such a result, it automatically invokes the divide error exception interrupt.
- ✓ In the 8088/86 microprocessor, out of 256 interrupts, Intel has set aside only INT 0 for the exception interrupt.
- ✓ INT 00 is invoked by the microprocessor whenever there is an attempt to divide a number by
- ✓ In the x86 PC, the service subroutine for this interrupt is responsible for displaying the message "DIVIDE ERROR" on the screen if a program such as the following is executed:

```
MOV AL,92 ;AL=92
SUB CL,CL ;CL=0
DIV CL ;92/0=undefined result
```

✓ INT 0 is also invoked if the quotient is too large to fit into the assigned register when executing a DIV instruction. Look at the following case:

MICROPROCESSORS AND MICROCONTROLLERS

```
MOV AX, OFFFFH ; AX=FFFFH
MOV BL, 2 ; BL=2
DIV BL ; 65535/2 = 32767 larger than 255
; maximum capacity of AL
```

INT 01 (single step)

- ✓ In executing a sequence of instructions, there is a need to examine the contents of the CPU's registers and system memory. This is often done by executing the program one instruction at a time and then inspecting registers and memory. This is commonly referred to as single-stepping, or performing a trace.
- ✓ Intel has designated INT 01 specifically for implementation of single-stepping. To single-step, the trap flag (TF) (D8 of the flag register), must be set to 1. Then after execution of each instruction, the 8088/86 automatically jumps to physical location 00004 to fetch the 4 bytes for CS: IP of the interrupt service routine, which will dump the registers onto the screen.
- ✓ Intel has not provided any specific instruction for to set or reset (unlike IF, which uses STI and CLI instructions to set or reset), the TF; one can write a simple program to do that. The following shows how to make TF = 0:

- ✓ Recall that, TF is D8 of the flag register.
- \checkmark To make TF = 1, one simply uses the OR instruction in place of the AND instruction above.

INT 02 (non-maskable interrupt)

- ✓ All Intel x86 microprocessors have a pin designated NMI. It is an active-high input. Intel has set aside INT 2 for the NMI interrupt. Whenever the NMI pin of the x86 is activated by a high (5 V) signal, the CPU jumps to physical memory location 00008 to fetch the CS: IP of the interrupt service routine associated with NMI.
- ✓ The NMI input is often used for major system faults, such as power failures. The NMI interrupt will be caused whenever AC power drops out. In response to this interrupt, the microprocessor stores all of the internal registers in a battery-backed-up memory or an EEPROM.

INT 03 (breakpoint)

✓ To allow implementation of breakpoints in software engineering, Intel has set aside INT 03.

- In single-step mode, one can inspect the CPU and system memory after the execution of each instruction, a breakpoint is used to examine the CPU and memory after the execution of a group of instructions.
- ✓ INT 3 is a 1-byte instruction; where as all other "*INT nn*" instructions are 2-byte instructions.

INT 04 (signed number overflow)

- ✓ This interrupt is invoked by a signed number overflow condition. There is an instruction associated with this, INTO (interrupt on overflow).
- ✓ The CPU will activate INT 04 if OF = 1. In cases, where OF = 0, the INTO instruction is not executed; but is bypassed and acts as a NOP (no operation) instruction.
- ✓ To understand this, look at the following example: Suppose in the following program; DATA1= $+64 = 0100\ 0000$ and DATA2 = $+64 = 0100\ 0000$. The INTO instruction will be executed and the 8088/86 will jump to physical location 00010H, the memory location associated with INT 04. The carry from D6 to D7 causes the overflow flag to become l.
- ✓ Now, the INTO causes the CPU to perform "INT 4" and jump to physical location 00010H of the vector table to get the CS: IP of the service routine.

Suppose that the data in the above program was DATA1 = +64 and DATA2 = +17. In that case, OF would become 0; the INTO is not executed and acts simply as a NOP (no operation) instruction.

x86 PC AND INTERRUPT ASSIGNMENT:

- o Of the 256 possible interrupts in the x86;
 - ✓ some are used by the PC peripheral hardware (BIOS)
 - ✓ some are used by the Microsoft operating system
 - ✓ the rest are available for programmers of software applications.

For a given ISR, the logical address is F000:FF53. Verify that the physical address is FFF53H.

Solution:

Since the logical address is F000:FF53, this means that CS = F000H and IP = FF53H. Shifting left the segment register one hex digit and adding it to the offset gives the physical address FFF53H.

INT 21H & INT 10H PROGRAMMING

The INT instruction has the following format:

INT xx; the interrupt number xx can be 00 - FFH

Interrupts are numbered 00 to FF; this gives a total of 256 interrupts in x86 microprocessors. Of these 256 interrupts, two of them are the most widely used: INT 10H and INT 21H.

BIOS INT 10H PROGRAMMING:

- o INT 10H subroutines are burned into the ROM BIOS of the x86-based IBM PC and compatibles and are used to communicate with the computer's screen video. The manipulation of screen text or graphics can be done through INT 10H.
- There are many functions associated with INT 10H. Among them are changing the color of characters or the background color, clearing the screen, and changing the location of the cursor.
- o These options are chosen by putting a specific value in register AH.

Monitor Screen in Text Mode:

✓ The monitor screen in the x86 PC is divided into 80 columns and 25 rows in normal text mode (see the following Fig). In other words, the text screen is 80 characters wide by 25 characters long.

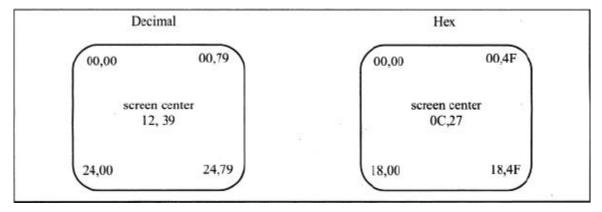


Fig: Cursor Locations (row, column)

- ✓ Since both a row and a column number are associated with each location on the screen, one can move the cursor to any location on the screen simply by changing the row and column values.
- ✓ The 80 columns are numbered from 0 to 79 and the 25 rows are numbered 0 to 24. The top left comer has been assigned 00, 00 (row = 00, column = 00). Therefore, the top right comer will be 00, 79 (row = 00, column = 79).
- \checkmark Similarly, the bottom left comer is 24, 00 (row = 24, column = 00) and the bottom right corner of the monitor is 24, 79 (row = 24, column = 79).

INT 10H Function 06H: Clearing the Screen

To clear the screen before displaying data; the following registers must contain certain values before INT 10H is called: AH = 06, AL = 00, BH = 07, CX = 0000, DH = 24, and DL = 79. The code will look like this:

```
VOM
      AH. 06
                  ;AH=06 to select scroll function
      AL, 00
MOV
                  ;AL-00 the entire page
      BH, 07
VOM
                  ;BH=07 for normal attribute
      CH,00
                  ;CH=00 row value of start point
VOM
VOM
      CL,00
                  ;CL=00 column value of start point
      DH, 24
                 ;DH=24 row value of ending point
VOM
VOM
      DL, 79
                 ;DL=79 column value of ending point
                  ; invoke the interrupt
      10H
INT
```

- ✓ Remember that DEBUG assumes immediate operands to be in hex; therefore, DX would be entered as 184F. However, MASM assumes immediate operands to be in decimal. In that case DH = 24 and DL = 79.
- ✓ In the program above, one of many options of INT 10H was chosen by putting 06 into AH. Option AH = 06, called the scroll function, will cause the screen to scroll upward.
- ✓ The CH and CL registers hold the starting row and column, respectively, and DH and DL hold the ending row and column.
- ✓ To clear the entire screen, one must use the top left cursor position of 00, 00 for the start point and the bottom right position of 24, 79 for the end point.
- ✓ Option AH = 06 of INT 10H is in reality the "scroll window up" function; therefore, one could use that to make a window of any size by choosing appropriate values for the start and end rows and columns.
- ✓ To clear the screen, the top left and bottom right values are used for start and stop points in order to scroll up the entire screen. It is more efficient coding to clear the screen by combining some of the lines above as follows:

```
MOV AX,0600H ;scroll entire screen
MOV BH,07 ;normal attribute
MOV CX,0000 ;start at 00,00
MOV DX,184FH ;end at 24,79 (hex = 18,4F)
INT 10H ;invoke the interrupt
```

INT 10H Function 02: Setting the Cursor to a Specific Location

- ✓ INT 10H function AH = 02 will change the position of the cursor to any location.
- ✓ The desired position of the cursor is identified by the row and column values in DX, where DH = row and DL = column.
- ✓ Video RAM can have multiple pages of text, but only one of them can be viewed at a time. When AH = 02, to set the cursor position, page zero is chosen by making BH = 00.

MICROPROCESSORS AND MICROCONTROLLERS

```
Write the code to set the cursor position to row = 15 = 0FH and column = 25 = 19H.
Solution:
      MOV
            AH,02
                        ;set cursor option
      MOV
            BH,00
                         ; page 0
            DL,25
      VOM
                         ; column position
      MOV
            DH,15
                         ; row position
                          ;invoke interrupt 10H
      INT
             10H
```

```
Write a program that (1) clears the screen and (2) sets the cursor at the center of the screen.
```

Solution:

The center of the screen is the point at which the middle row and middle column meet. Row 12 is at the middle of rows 0 to 24 and column 39 (or 40) is at the middle of columns 0 to 79. By setting row = DH = 12 and column = DL = 39, the cursor is set to the screen center.

```
;clearing the screen

MOV AX,0600H ;scroll the entire page

MOV BH,07 ;normal attribute

MOV CX,0000 ;row and column of top left

MOV DX,184FH ;row and column of bottom right

INT 10H ;invoke the video BIOS service

;setting the cursor to the center of screen

MOV AH,02 ;set cursor option

MOV BH,00 ;page 0

MOV DL,39 ;center column position

MOV DH,12 ;center row position

INT 10H ;invoke interrupt 10H
```

INT 10H Function 03: Get Current Cursor Position

In text mode, it is possible to determine where the cursor is located at any time by executing the following:

```
MOV AH,03 ;option 03 of BIOS INT 10H
MOV BH,00 ;page 00
INT 10H ;interrupt 10H routine
```

- ✓ After execution of the program above, registers DH and DL will have the current row and column positions, and CX provides information about the shape of the cursor.
- ✓ The reason that page 00 was chosen is that the video memory could contain more than one page of data, depending on the video board installed on the PC.
- ✓ In text mode, page 00 is chosen for the currently viewed page.

Attribute Byte in Monochrome Monitors:

✓ There is an attribute associated with each character on the screen.

MICROPROCESSORS AND MICROCONTROLLERS

- The attribute provides information to the video circuitry, such as color and intensity of the character (foreground) and the background.
- ✓ The attribute byte for each character on the monochrome monitor is limited. The following Fig shows bit definitions of the monochrome attribute byte.

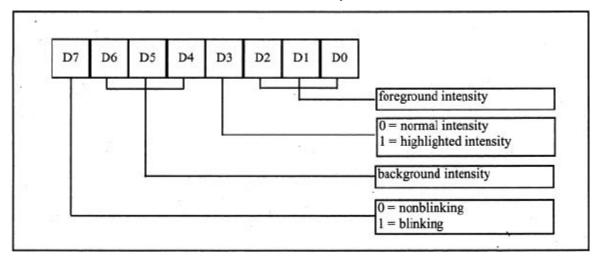


Fig: Attribute Byte for Monochrome Monitors

The following are some possible variations of the attributes shown in the above Fig.

Binary		Hex	Result						
0000	0000	00	white	on	white	(no	display)		
0000	0111	07	white	on	black	nor	mal		
0000	1111	OF	white	on	black	high	hlight		
1000	0111	87	white	on	black	bli	nking		
0111	0111	77	black	on	black	(no	display)		
0111	0000	70	black	on	white				
1111	0000	FO	black	on	white	bli	nking		

Write a program using INT 10H to:

- (a) Change the video mode.
- (b) Display the letter "D" in 200H locations with attributes black on white blinking (blinking letters "D" are black and the screen background is white).
- (c) Then use DEBUG to run and verify the program.

Solution:

(a) INT 10H function AH = 00 is used with AL = video mode to change the video mode. Use AL = 03.

```
MOV AH,00 ;SET MODE OPTION
MOV AL,03 ;CHANGE THE VIDEO MODE
INT 10H ;MODE OF 80X25 FOR ANY COLOR MONITOR
```

MICROPROCESSORS AND MICROCONTROLLERS

(b) With INT 10H function AH = 09, one can display a character a certain number of times with specific attributes.

```
MOV AH,09 ;DISPLAY OPTION

MOV BH,00 ;PAGE 0

MOV AL,44H ;THE ASCII FOR LETTER "D"

MOV CX,200H ;REPEAT IT 200H TIMES

MOV BL,0F0H ;BLACK ON WHITE BLINKING

INT 10H
```

(c) Reminder: DEBUG assumes that all the numbers are in hex.


```
C>debug
-A
1131:0100 MOV AH,00
1131:0102 MOV AL,03 ;CHANGE THE VIDEO MODE
1131:0104 INT 10
1131:0106 MOV AH,09
1131:0108 MOV BH,00
1131:010A MOV AL,44
1131:010C MOV CX,200
1131:010F MOV BL,F0
1131:0111 INT 10
1131:0113 INT 3
1131:0114
```

Now see the result by typing in the command -G Make sure that IP = 100 before running it.

As an exercise, change the BL register to other attribute values given earlier. For example, BL = 07 white on black, or BL = 87H white on black blinking.

Attribute Byte in CGA Text Mode:

The bit definition of the attribute byte in CGA text mode is shown in the following Fig.

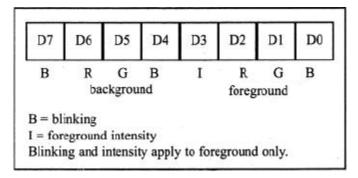

From the bit definition, it can be seen that, the background can take eight different colors by combining the prime colors red, blue, and green. The foreground can be any of 16 different colors by combining red, blue, green, and intensity.

MICROPROCESSORS AND MICROCONTROLLERS

Binary Hex		Hex	Color effect
0000	0000	00	Black on black
0000	0001	01	Blue on black
0001	0010	12	Green on blue
0001	0100	14	Red on blue
0001	1111	1F	High-intensity white on blue

The following Program shows the use of the attribute byte in CGA mode.

```
Write a program that puts 20H (ASCII space) on the entire screen. Use high-intensity white on
a blue background attribute for any characters to be displayed.
Solution:
                        ;SET MODE OPTION
           AH,00
            AL, 03
      VCM
                          ; CGA COLOR TEXT MODE OF 80 × 25
            10H
      INT
             AH, 09
                        ; DISPLAY OPTION
             BH, 00
                        ; PAGE 0
            AL,20H
                         ;ASCII FOR SPACE
             CX,800H
                         ; REPEAT IT 800H TIMES
             BL, 1FH
                          ; HIGH-INTENSITY WHITE ON BLUE
             10H
      TMT
```

Graphics: Pixel Resolution and Color:

- o In the text mode, the screen is viewed as a matrix of rows and columns of characters.
- o In graphics mode, the screen is viewed as a matrix of horizontal and vertical pixels.
- The number of pixels varies among monitors and depends on monitor resolution and the video board.
- o There are two facts associated with every pixel on the screen:
 - ✓ The location of the pixel
 - ✓ Its attributes, color, and intensity
- o These two facts must be stored in the video RAM.
- o Higher the number of pixels and colors, the larger the amount of memory is needed to store.
- o The CGA mode can have a maximum of 16K bytes of video memory.
- This 16K bytes of memory can be used in three different ways:
 - ✓ Text mode of 80 x 25 characters: Use AL = 03 for mode selection in INT 10H option AH = 00. In this mode, 16 colors are supported.
 - ✓ Graphics mode of resolution 320 x 200 (medium resolution): Use AL = 04. In this mode, 4 colors are supported.
 - \checkmark Graphics mode of resolution 640 x 200 (high resolution): Use AL = 06. In this mode, only 1 color (black and white) is supported.

MICROPROCESSORS AND MICROCONTROLLERS

Hence, with a fixed amount of video RAM, the number of supported colors decreases as the resolution increases.

Table: The 16 Possible Colors

I	R	G	В	Color	I	R	G	В	Color
0	0	0	0	Black	1	0	0	0	Gray
0	0	0	1	Blue	1	0	0	1	Light Blue
0	0	1	0	Green	1	0	1	0	Light Green
0	0	1	1	Cyan	1	0	1	1	Light Cyan
0	1	0	0	Red	1	1	0	0	Light Red
0	1	0	1	Magenta	1	1	0	1	Light Magenta
0	1	1	0	Brown	1	1	1	0	Yellow
0	1	1	1	White	1	1	1	1	High Intensity White

INT 10H and Pixel Programming:

To draw a horizontal line, choose values for the row and column to point to the beginning of the line and then continue to increment the column until it reaches the end of the line, as shown in Example below:

```
Write a program to: (a) clear the screen, (b) set the mode to CGA of 640 \times 200 resolution, and
(c) draw a horizontal line starting at column = 100, row = 50, and ending at column 200, row 50.
Solution:
    MOV AX,0600H ;SCROLL THE SCREEN
MOV BH,07 ;NORMAL ATTRIBUTE
MOV CX,0000 ;FROM ROW-00,COLUMN-00
      VOM
               DX,184FH ;TO ROW=18H,COLUMN=4FH
               10H ;INVOKE INTERRUPT TO CLEAR SCREEN
AH,00 ;SET MODE
AL,06 ;MODE = 06 (CGA HIGH RESOLUTION)
10H ;INVOKE INTERRUPT TO CHANGE MODE
       INT
       MOV
        MOV
      MOV CX,100 ;START LINE AT COLUMN =100 AND ROW DX,50 ;ROW = 50
BACK: MOV AH, OCH
       MOV AH,OCH ; AH=OCH TO DRAW A LINE
MOV AL,O1 ; PIXELS = WHITE
        INT 10H ; INVOKE INTERRUPT TO DRAW LINE
       INC CX
                            ; INCREMENT HORIZONTAL POSITION
        CMP CX,200 ; DRAW LINE UNTIL COLUMN = 200
        JNZ
              BACK
```

DOS INTERRUPT 21H:

- o INT21H is provided by DOS, which is BIOS-ROM based.
- O When the OS is loaded into the computer, INT 21H can be invoked to perform some extremely useful functions. These functions are commonly referred to as *DOS INT 21H* function calls.

INT 21H Option 09: Outputting a String of Data to the Monitor

- ✓ INT 21H can be used to send a set of ASCII data to the monitor. To do that, the following registers must be set: AH = 09 and DX = the offset address of the ASCII data to be displayed.
- ✓ The address in the DX register is an offset address and DS is assumed to be the data segment. INT 21H option 09 will display the ASCII data string pointed at by DX until it encounters the dollar sign "\$".
- ✓ In the absence of encountering a dollar sign, DOS function call 09 will continue to display any garbage that it can find in subsequent memory locations until it finds "\$".

```
DATA_ASC DB 'The earth is but one country','S'

MOV AH,09 ;option 09 to display string of data

MOV DX,OFFSET DATA_ASC ;DX= offset address of data

INT 21H ;invoke the interrupt
```

INT 21H Option 02: Outputting a Single Character to the Monitor

✓ To output a single character to the monitor, 02 is put in AH, DL is loaded with the character to be displayed, and then INT 21H is invoked. The following displays the letter "J'.

```
MOV AH,02 ;option 02 displays one character
MOV DL,'J' ;DL holds the character to be displayed
INT 21H ;invoke the interrupt
```

INT 21H Option 01: Inputting a Single Character, with Echo

This function waits until a character is input from the keyboard, and then echoes it to the monitor. After the interrupt, the input character (ASCII value) will be in AL.

```
MOV AH,01 ;option 01 inputs one character
INT 21H ;after the interrupt, AL = input character (ASCII)
```

The Program 4-1 does the following:

- 1. clears the screen
- 2. sets the cursor to the center of the screen, and
- 3. starting at that point of the screen, displays the message "This is a test of the display routine".

```
TITLE
             PROG4-1 SIMPLE DISPLAY PROGRAM
PAGE
             60,132
             .MODEL SMALL
             .STACK 64
             . DATA
MESSAGE DB 'This is a test of the display routine','$'
      .CODE
MAIN PROC FAR
     ATAGO, XA VCM
     MOV DS, AX
     MOV DS,AX
CALL CLEAR ;CLEAR THE SCREEN
CALL CURSOR ;SET CURSOR POSITION
CALL DISPLAY ;DISPLAY MESSAGE
      MOV AH, 4CH
             21H
                                  ; GO BACK TO DOS
      INT
MAIN ENDP
; THIS SUBROUTINE CLEARS THE SCREEN
CLEAR PROC
     MOV AX,0600H ;SCROLL SCREEN FUNCTION
MOV BH,07 ;NORMAL ATTRIBUTE
MOV CX,0000 ;SCROLL FROM ROW=00,COL=00
MOV DX,184FH ;TO ROW=18H,COL=4FH
INT 10H ;INVOKE INTERRUPT TO CLEAR SCREEN
      RET
CLEAR ENDP
;THIS SUBROUTINE SETS THE CURSOR AT THE CENTER OF THE SCREEN
CURSOR PROC
     MOV AH,02 ;SET CURSOR FUNCTION

MOV BH,00 ;PAGE 00

MOV DH,12 ;CENTER ROW

MOV DL,39 ;CENTER COLUMN

INT 10H ;INVOKE INTERRUPT TO SET CURSOR POSITION
      RET
CURSOR ENDP
; THIS SUBROUTINE DISPLAYS A STRING ON THE SCREEN
DISPLAY PROC
      MOV AH,09 ;DISPLAY FUNCTION
      MOV DX,OFFSET MESSAGE ; DX POINTS TO OUTPUT BUFFER
                     ; INVOKE INTERRUPT TO DISPLAY STRING
      INT 21H
      RET
DISPLAY ENDP
      END MAIN
```

Program 4-1

INT 21H Option 0AH: Inputting a String of Data from the Keyboard

- ✓ Option 0AH of INT 21H provides a means by which one can get data from the keyboard and store it in a predefined area of memory in the data segment.
- \checkmark To do this; the register options are: AH = 0AH and DX = offset address at which the string of data is stored.
- ✓ This is commonly referred to as a buffer area.

MICROPROCESSORS AND MICROCONTROLLERS

- DOS requires that a buffer area be defined in the data segment and the first byte specifies the size of the buffer. DOS will put the number of characters that came in through the keyboard in the second byte and the keyed-in data is placed in the buffer starting at the third byte.
- ✓ For example, the following program will accept up to six characters from the keyboard, including the return (carriage return) key. Six locations were reserved for the buffer and filled with FFH.
- ✓ The following shows portions of the data segment and code segment:

```
ORG 0010H
DATA1 DB 6,?,6 DUP (FF);0010H=06, 0012H to 0017H = FF

MOV AH,0AH ;string input option of INT 21H
MOV DX,OFFSET DATA1 ;load the offset address of buffer
INT 21H ;invoke interrupt 21H
```

 \checkmark The following shows the memory contents of offset 0010H:

```
0010 0011 0012 0013 0014 0015 0016 0017 
06 00 FF FF FF FF FF FF
```

- ✓ When this program is executed, the computer waits for the information to come in from the keyboard.
- ✓ When the data comes in, the IBM PC will not exit the INT 21H routine until it encounters the return key.
- ✓ Assuming the data that was entered through the keyboard was "USA" <RETURN>, the contents of memory locations starting at offset 0010H would look like this:

```
0010 0011 0012 0013 0014 0015 0016 0017-
06 03 55 53 41 0D FF FF
USACR
```

✓ The step-by-step analysis is given below:

```
0010H = 06

0011H = 03

The keyboard was activated three times (excluding the RETURN key) to key in the letters U, S, and A.

0012H = 55H

This is the ASCII hex value for letter U.

0013H = 53H

This is the ASCII hex value for letter S.

0014H = 41H

This is the ASCII hex value for letter A.

This is the ASCII hex value for CR (carriage return).
```

✓ The 0AH option of INT 21H accepts the string of data from the keyboard and echoes (displays) it on the screen as it is keyed in.

Use of Carriage Return and Line Feed:

- o In the Program 4-2, the EQU statement is used to equate CR (carriage return) with its ASCII value of 0DH, and LF (line feed) with its ASCII value of 0AH.
- This makes the program much more readable. Since the result of the conversion was to be displayed in the next line, the string was preceded by CR and LF.

- In the absence of CR the string would be displayed wherever the cursor happened to be.
- o In the case of CR and no LF, the string would be displayed on the same line after it had been returned to the beginning of the line.

```
;Program 4-2 performs the following: (1) clears the screen, (2) sets
;the cursor at the beginning of the third line from the top of the
;screen, (3) accepts the message "IBM perSonal COmputer" from the
;keyboard, (4) converts lowercase letters of the message to uppercase,
;(5) displays the converted results on the next line.

TITLE PROG4-2
PAGE 60,132
.MODEL SMALL
.STACK 64
```

```
. DATA
BUFFER DB
                 22,?,22 DUP (?)
                                            ; BUFFER FOR KEYED-IN DATA
          ORG 18H
                  CR, LF, 22 DUP (?), '$' ; DATA HERE AFTER CONVERSION
DATAREA DB
; DTSEG
           ENDS
CR EQU ODH
    EQU OAH
;-----
     . CODE
MAIN PROC FAR
    MOV AX, @DATA
     MOV DS, AX
                      ;CLEAR THE SCREEN
;SET CURSOR POSITION
;INPUT A STRING INTO BUFFER
;CONVERT STRING TO UPPERCASE
;DISPLAY STRING DATAREA
     CALL CLEAR
     CALL CURSOR
     CALL GETDATA
     CALL CONVERT
     MOV AH, 4CH
INT 21H ;GO BACK TO DOS
MAIN ENDP
; THIS SUBROUTINE CLEARS THE SCREEN
CLEAR PROC
    MOV AX,0600H ;SCROLL SCREEN FUNCTION
MOV BH,07 ;NORMAL ATTRIBUTE
MOV CX,0000 ;SCROLL FROM ROW=00,COL=00
MOV DX,184FH ;TO ROW=18H,4FH
INT 10H ;INVOKE INTERRIPT TO CLEAR SCREEN
     INT
          10H
                               ; INVOKE INTERRUPT TO CLEAR SCREEN
     RET
CLEARENDP
; THIS SUBROUTINE SETS THE CURSOR TO THE BEGINNING OF THE 3RD LINE
CURSOR PROC
                              ; SET CURSOR FUNCTION
           AH, 02
     MOV
           BH,00
                                ; PAGE 0
     MOV
     MOV DL,01
                               ; COLUMN 1
            DH, 03
     MOV
                               ; ROW 3
     INT 10H
                               ; INVOKE INTERRUPT TO SET CURSOR
     RET
CURSOR ENDP
```

MICROPROCESSORS AND MICROCONTROLLERS

```
; THIS SUBROUTINE DISPLAYS A STRING ON THE SCREEN
DISPLAY PROC
    MOV
          AH, 09
                           ; DISPLAY STRING FUNCTION
          DX,OFFSET DATAREA ; DX POINTS TO BUFFER
    MOV
    INT 21H
                          ; INVOKE INTERRUPT TO DISPLAY STRING
    RET
DISPLAY ENDP
;THIS SUBROUTINE PUTS DATA FROM THE KEYBOARD INTO A BUFFER
          AH,OAH
GETDATA PROC
          AH, OAH ; INPUT STRING FUNCTION DX,OFFSET BUFFER ; DX POINTS TO BUFFER
    MOV
    MOV
                        ; INVOKE INTERRUPT TO INPUT STRING
    INT
          21H
    RET
GETDATA ENDP
THIS SUBROUTINE CONVERTS ANY SMALL LETTER TO ITS CAPITAL
    MOV BX,OFFSET BUFFER
                               GET THE CHAR COUNT
    MOV
         CL,[ BX] +1
    SUB
         CH, CH
                                 ;CX = TOTAL CHARACTER COUNT
                                ; INDEXING INTO BUFFER
    MOV
         DI,CX
         BYTE PTR[ BX+DI] +2,20H ; REPLACE CR WITH SPACE
    MOV
          SI,OFFSET DATAREA+2 ;STRING ADDRESS
    MOV
AGAIN: MOV AL,[BX]+2
                                ;GET THE KEYED-IN DATA
                                ;CHECK FOR 'a'
;IF BELOW, GO TO NEXT
    CMP
          AL, 61H
    JB
          NEXT
                              ;CHECK FOR 'z'
          AL,7AH
    CMP
    JA
          NEXT
                                 ; IF ABOVE GO TO NEXT
          AL,11011111B
                                ;CONVERT TO CAPITAL
    AND
NEXT: MOV [SI], AL
                                ; PLACE IN DATA AREA
    INC
         SI
                                ;INCREMENT POINTERS
    INC
          BX
    LOOP AGAIN
                                ;LOOP IF COUNTER NOT ZERO
    RET
CONVERT ENDP
    END
         MAIN
```

Program 4-2

- o The Program 4-3 prompts the user to type in a name. The name can have a maximum of eight letters.
- o After the name is typed in, the program gets the length of the name and prints it to the screen.

```
TITLE PROG4-3 READS IN LAST NAME AND DISPLAYS LENGTH
PAGE 60,132
.MODEL SMALL
.STACK 64 (?)
```

. DATA

MICROPROCESSORS AND MICROCONTROLLERS

```
MESSAGE1
        DB
                'What is your last name?','$."
          ORG 20H
               9,?,9 DUP (0)
          DB
BUFFER1
          ORG 30H
               CR, LF, 'The number of letters in your name is: ','$'
MESSAGE2 DB
        EQU 08
ROW
         EQU 05
COLUMN
        EQU ODH ; EQUATE CR WITH ASCII CODE FOR CARRIAGE RETURN EQU OAH ; EQUATE LF WITH ASCII CODE FOR LINE FEED
          .CODE
MAIN
         PROC FAR
    MOV AX, @DATA
    MOV DS, AX
    CALL CLEAR
    CALL CURSOR
    MOV AH, 09 ; DISPLAY THE PROMPT
    MOV DX,OFFSET MESSAGE1
    INT
          21H
                           GET LAST NAME FROM KEYBOARD
         AH, OAH
    MOV
         DX,OFFSET BUFFER1
    MOV
    INT
          21H
         BX,OFFSET BUFFER1 ; FIND OUT NUMBER OF LETTERS IN NAME
    MOV
    MOV CL,[BX+1] ;GET NUMBER OF LETTERS OR CL,30H ;MAKE IT ASCII
    MOV MESSAGE2+40,CL ; PLACE AT END OF STRING
MOV AH.09 ; DISPLAY SECOND MESSAGE
    MOV DX, OFFSET MESSAGE2
    INT
         21H
         AH, 4CH
    MOV
                    ; GO BACK TO DOS
    INT
          21H
MAIN ENDP
CLEAR PROC
                           ; CLEAR THE SCREEN
    MOV AX,0600H
    MOV BH, 07
    MOV CX,0000
    MOV DX, 184FH
         10H
    INT
    RET
CLEAR ENDP
;-----
CURSOR PROC
                                 ;SET CURSOR POSITION
    MOV AH, 02
    MOV BH, 00
    MOV DL, COLUMN
    MOV DH, ROW
    INT 10H
    RET
CURSOR ENDP
    END MAIN
```

Program 4-3

MICROPROCESSORS AND MICROCONTROLLERS

o Program 4-4 demonstrates many of the functions described:

Write a program to perform the following: (1) clear the screen, (2) set the cursor at row 5 and column 1 of the screen, (3) prompt "There is a message for you from Mr. Jones. To read it enter Y". If the user enters 'Y' or 'y' then the message "Hi! I must leave town tomorrow, therefore I will not be able to see you" will appear on the screen. If the user enters any other key, then the prompt "No more messages for you" should appear on the next line.

```
TITLE PROGRAM 4-4

PAGE 60,132
.MODEL SMALL
.STACK 64

;
.DATA

PROMPT1 DB 'There is a message for you from Mr. Jones.'
DB 'To read it enter Y','$'

MESSAGE DB CR,LF,'Hi! I must leave town tomorrow,'
DB 'therefore I will not be able to see you','$'

PROMPT2 DB CR,LF,'No more messages for you','$'

;DTSEG ENDS
CR EQU ODH
LF EQU OAH
;
```

```
. CODE
MAIN PROC FAR
    MOV AX, @DATA
    MOV DS, AX
    CALL CLEAR ;CLEAR THE SCREEN .
CALL CURSOR ;SET CURSOR POSITION MOV AH,09 ;DISPLAY THE PROMPT
    MOV
          DX,OFFSET PROMPT1
    INT
          21H
          AH,07 ;GET ONE CHAR, NO ECHO
    MOV
     INT
          21H
          AL,'Y' ; IF 'Y', CONTINUE
     CMP
     JZ
          OVER
    CMP
          AL,'y'
          OVER
    JZ
          AH,09 ;DISPLAY SECOND PROMPT IF NOT Y
    MOV
          DX,OFFSET PROMPT2
    MOV
     INT
          21H
    JMP
          EXIT
         AH, 09 ; DISPLAY THE MESSAGE
OVER: MOV
          DX,OFFSET MESSAGE
    MOV
    INT
          21H
EXIT: MOV
          AH, 4CH
                     ; GO BACK TO DOS
    INT
          21H
MAIN
         ENDP ·
                     CLEARS THE SCREEN
CLEAR PROC
    MOV AX,0600H
    MOV BH,07
    MOV CX,0000
    MOV DX,184FH
    INT
          10H
    RET
         ENDP
```

MICROPROCESSORS AND MICROCONTROLLERS

CURSOR PRO	oc .	; 5	SET	CURSOR	POSITION	5.0
VOM	AH,02					
MOV	BH,00					
MOV	DL,05	; COLUMN	5			
MOV	DH, 08	; ROW 8				
INT	10H					
RET -						
CURSOR EN	DP					
END	MAIN					114

Program 4-4

INT 21H Option 07: Keyboard Input without Echo

- ✓ Option 07 of INT 21H requires the user to enter a single character but that character is not displayed (or echoed) on the screen.
- ✓ After execution of the interrupt, the PC waits until a single character is entered and provides the character in AL.

```
MOV AH,07 ;keyboard input without echo
```

Using the LABEL Directive to Define a String Buffer:

- A more systematic way of defining the buffer area for the string input is to use the LABEL directive.
- o The LABEL directive can be used in the data segment to assign multiple names to data. When used in the data segment it looks like this:

name LABEL attribute

o The attribute can be BYTE, WORD, DWORD, FWORD, QWORD, or TBYTE.

JOE LABEL BYTE TOM DB 20 DUP(0)

> By: MAHESH PRASANNA K., DEPT. OF CSE, VCET.

ate ate ate ate ate ate ate ate at