


# GrowthPulse Node - Wiring

Heltec WiFi LoRa 32 V3 (HTIT-WB32LAF). Drawn to match the labels printed on your board.

## 1. Where the pins are - TOP row, USB-C on the right

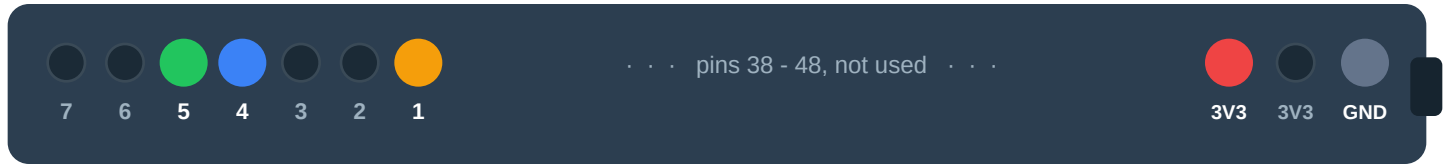

Signal pins (5, 4, 1) are at the LEFT end. 3V3 and GND are at the RIGHT end.

USB-C

## 2. Power the board: USB-C, or the 5V and GND pins on the bottom row.

## 3. Connect each sensor (sensor pin -> board pin)



\* the 3-pin DHT22 module already has its 10k resistor built in - just wire +, out, -.

### Remember

All three sensors get VCC from 3V3 and GND from GND. Power sensors on 3V3 only - never 5V.