


Morefine M6 to Voron printer

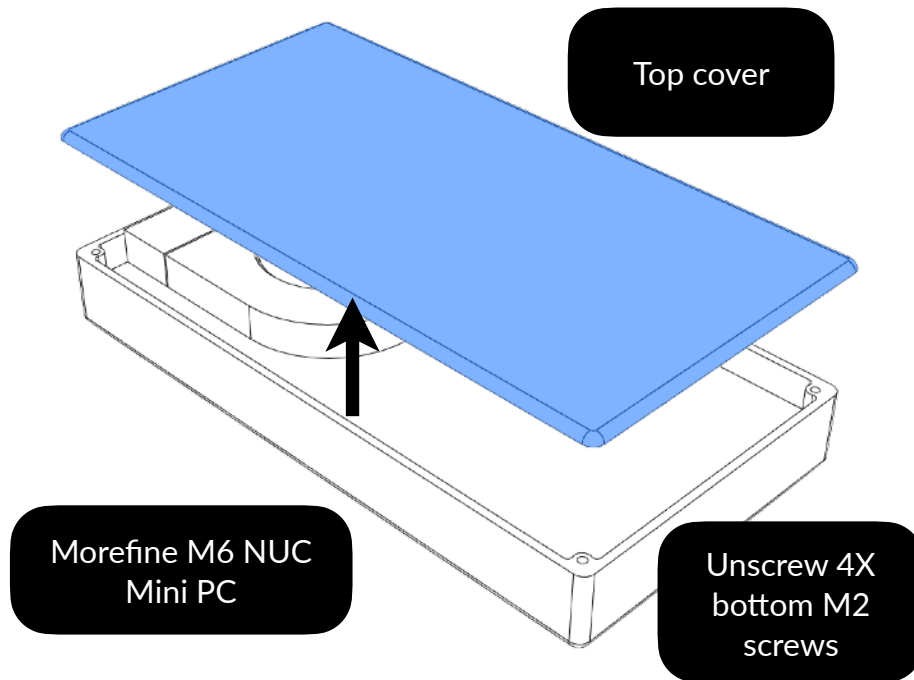

It is recommended to remove the fan grill by removing the top cover. It may void the device warranty.

Models are illustrated. Devices shown in real world look different.
Different models may vary.


When in doubt, wear an ESD wrist strap that connects to earth ground.


For downsized Voron printers / Voron Printers for Ants and Voron 0, head to the next page.

For spec Voron Trident, Voron 2, Voron Switchwire and printers that use DIN rails as controller mount, skip to page 5.


Installation for downsized Voron printers / Voron Printers for Ants and Voron 0

Some printer models do not support some or other models of mini PC.

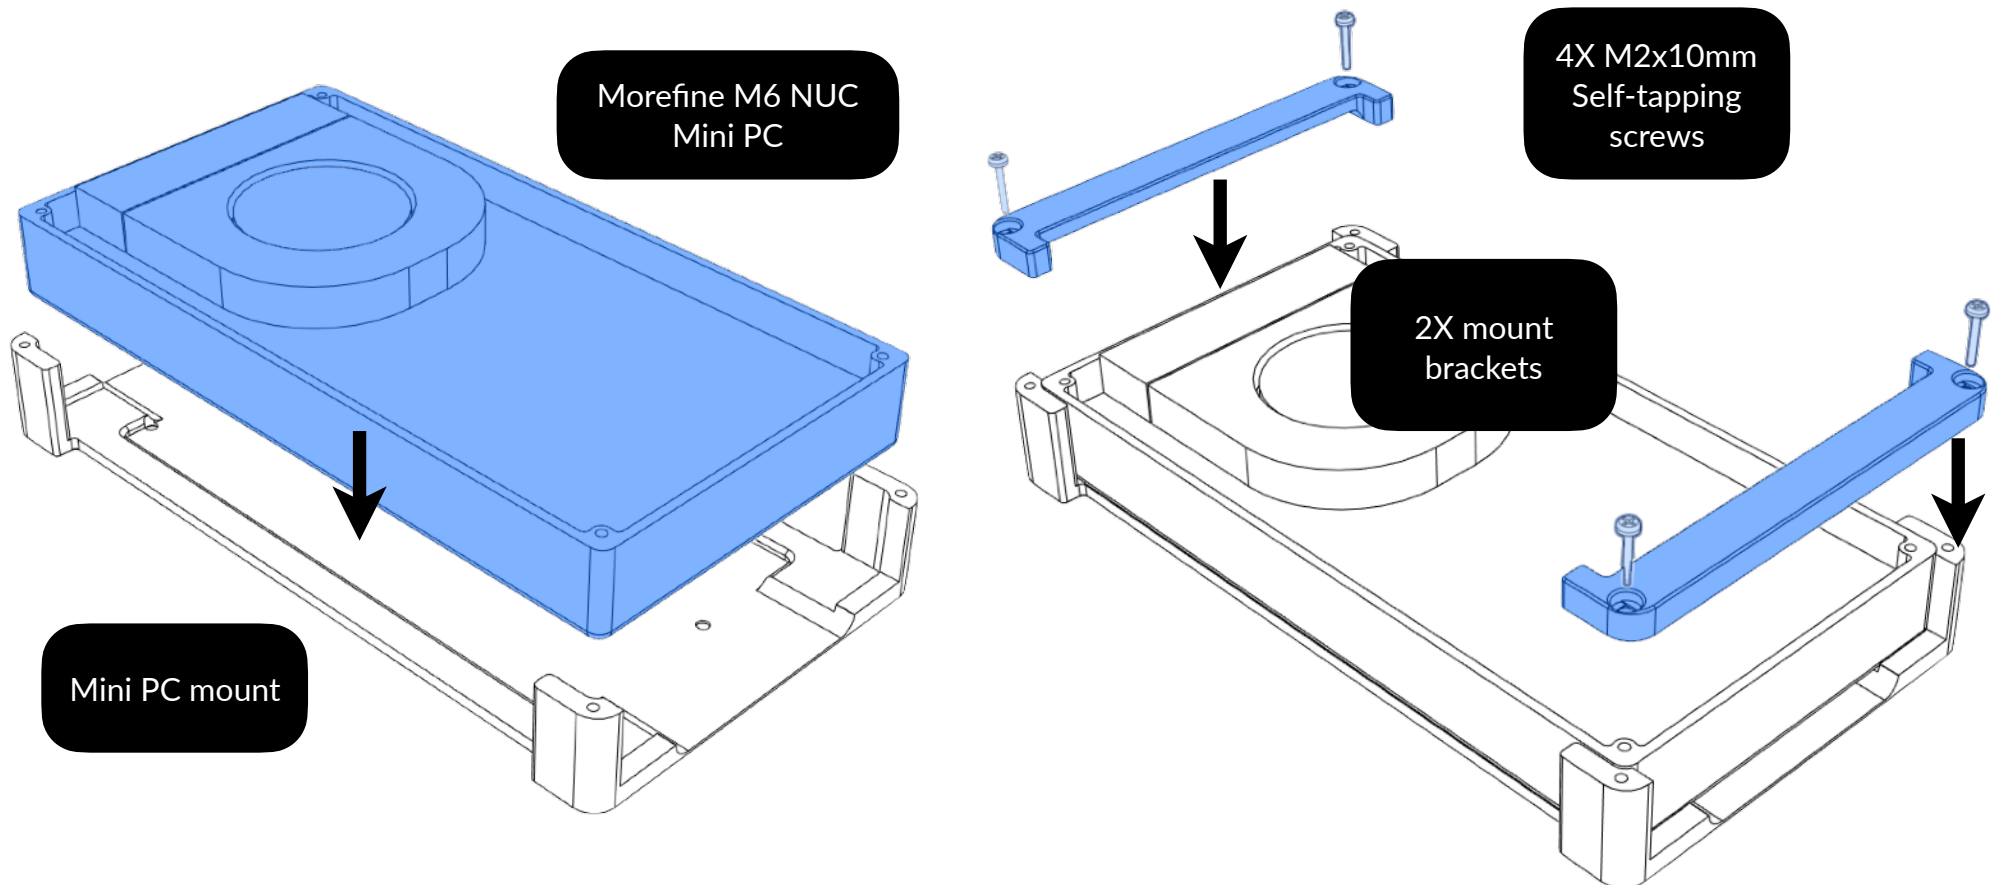


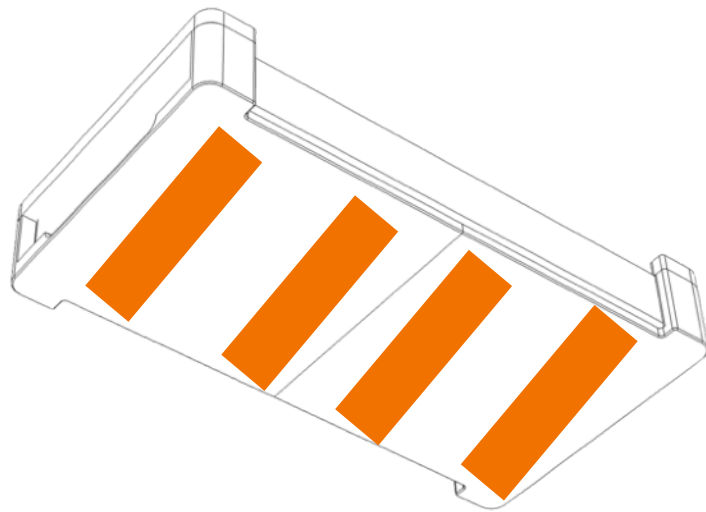

Stick the bottom with
at least 4 strips of VHB
(for 10mm width)

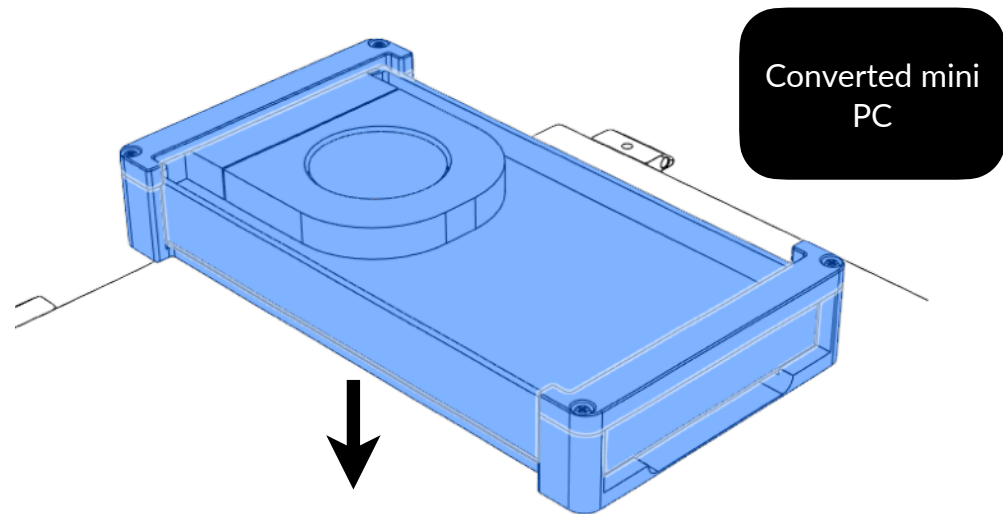


Converted mini
PC

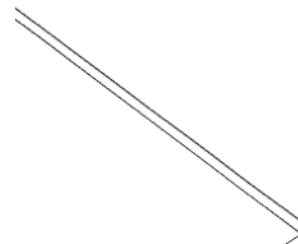


Ground or upside-down cover
placement (bottom, deck or side
covers)

Text description: use the double-sided 3M VHB tape that should be included in Voron BOM to stick the bottom of the mount, and then stick it to the deck, bottom or the inside the back of the printer.

Installation for spec Voron Trident, Voron 2 and Voron Switchwire with DIN rail

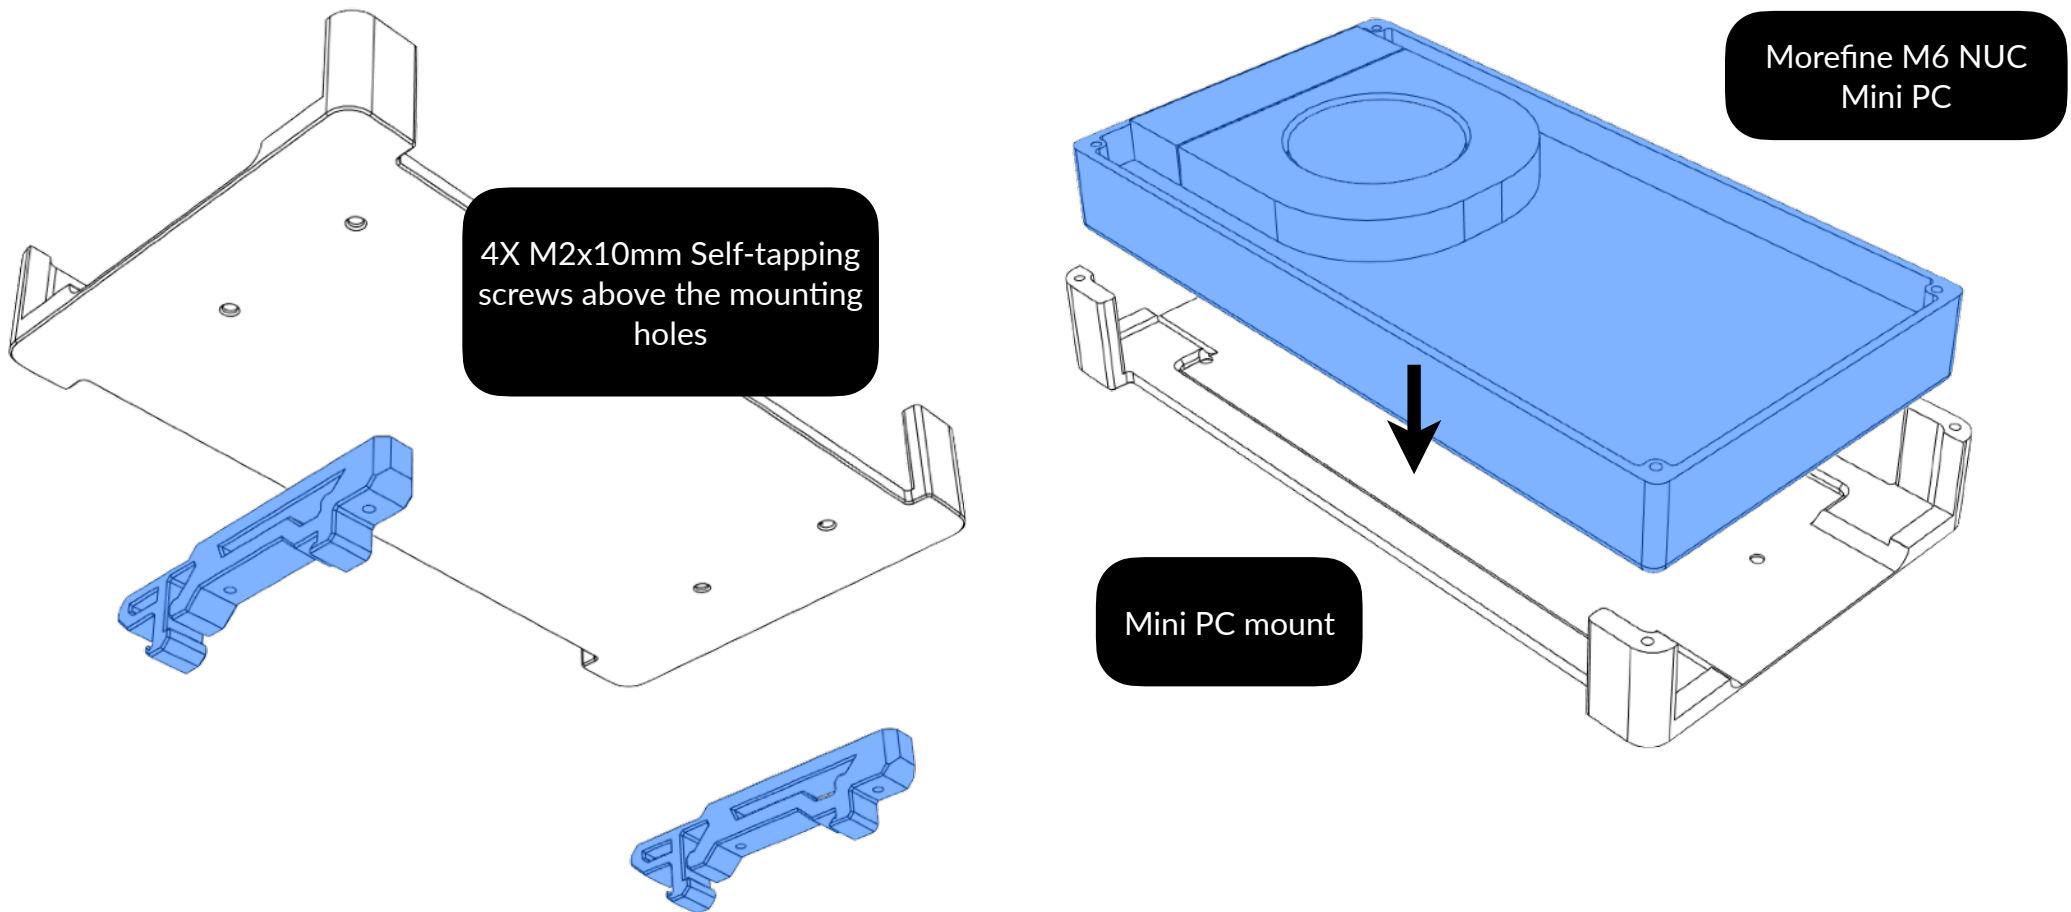

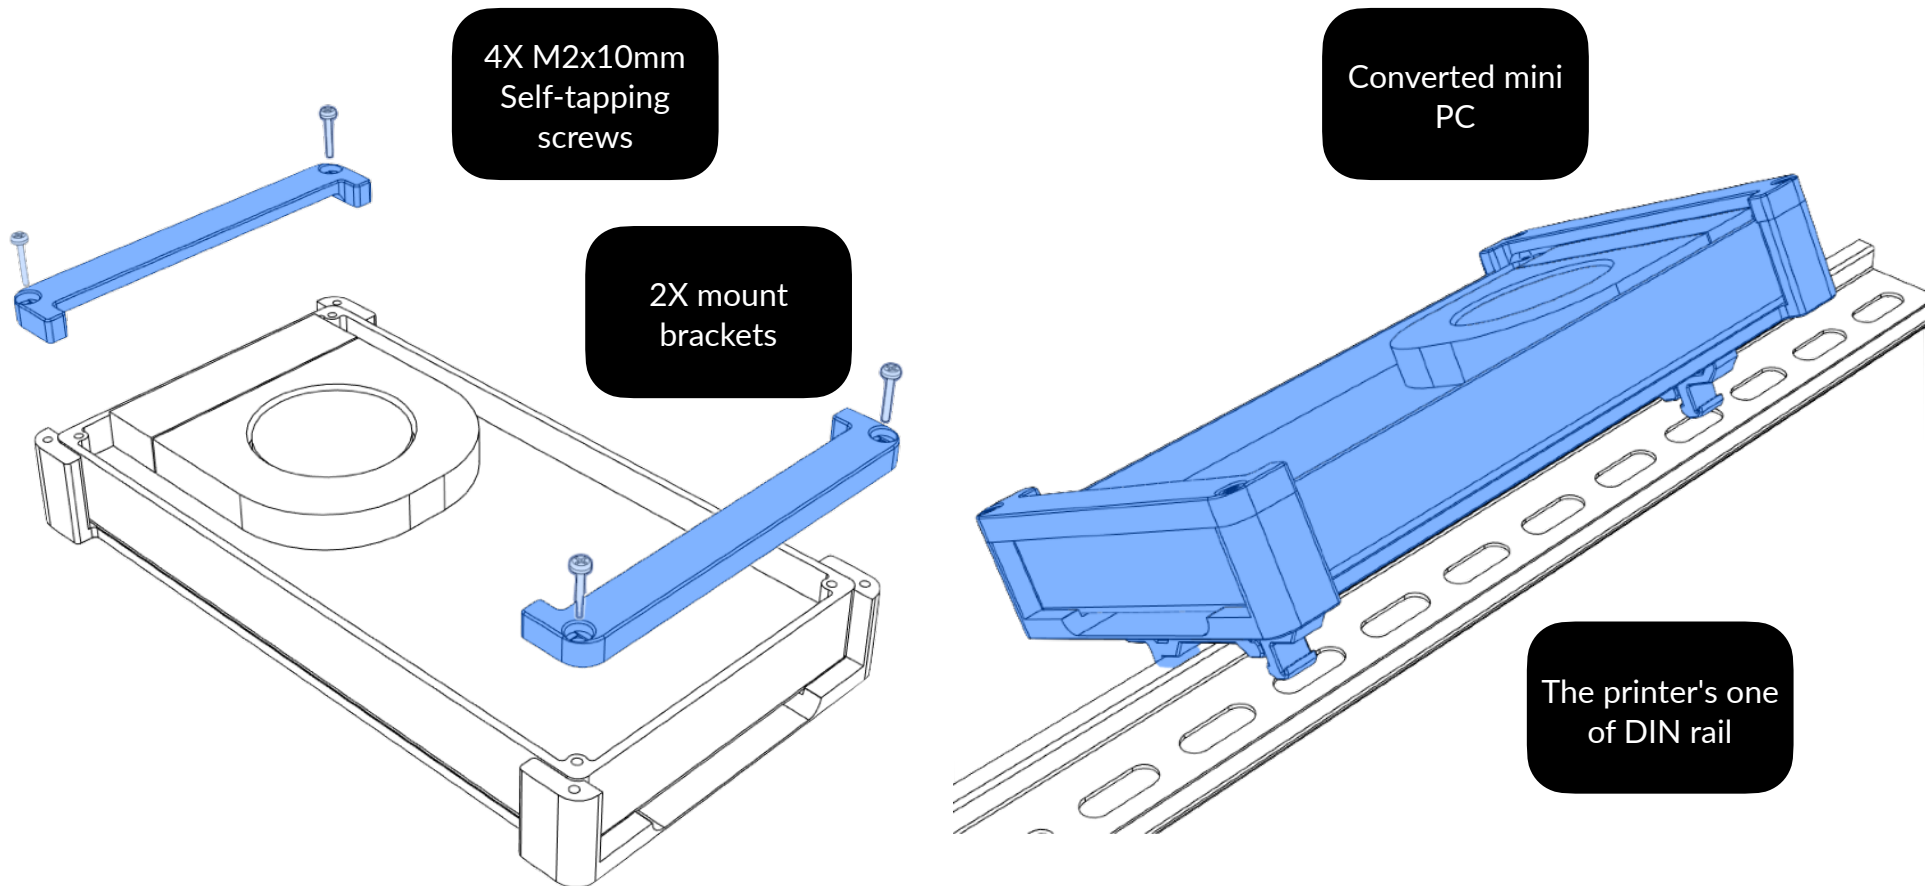

Text description: install the DIN brackets that was found in original Voron printer repository using M2x10mm self-tapping screws, then install the NUC Mini PC to the mount from the first step, and then install the mounted PC to the DIN rail.