
# 微逆升级作业指引

# Microinverter Upgrade Quick Guide

## ① 作业流程 Process Flow

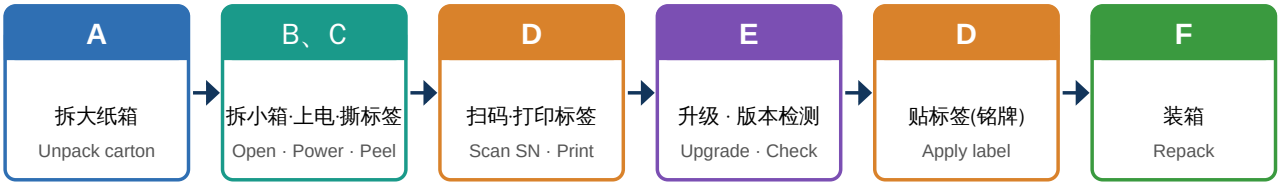


## ② 人员分工 Staffing (6 people)

| 岗位 Station | 人数 Staff | 工作内容 Tasks |
|---|---|---|
| A | 1 | 拆大纸箱,交给 D<br>Open large carton, hand it to D |
| B, C | 2 | 拆小纸箱 → 上电 → 撕旧标签<br>Open small box → power on → peel old label |
| D | 1 | 扫码 SN → 打印标签;合格后将标签贴在铭牌上<br>Scan SN → print label; after pass, stick label on nameplate |
| E | 1 | 升级 MCU1 → MCU2 → 版本检测;分出合格 / 不良品<br>Upgrade MCU1 → MCU2 → version check; sort pass / fail |
| F | 1 | 装回原箱,核对数量与批次<br>Repack into original carton, check qty & batch |

### ! 升级提醒 Upgrade Reminder

1. 每次同时升级 4 台设备。
   Upgrade **4 units** at a time.
2. 先升级 MCU1,完成后等待 红灯由闪烁变常亮、蓝灯熄灭,再升级 MCU2。
   Upgrade **MCU1** first. Wait until **red LED is steady** (no longer blinking) and **blue LED is off**, then start MCU2.
3. MCU2 同理:等待红灯常亮、蓝灯熄灭。
   Same for **MCU2**: wait for red LED steady and blue LED off.
4. 两侧完成后,执行 版本检测程序。
   When both are done, run the **version check program**.

## ③ 关键要求 Key Rules

| | |
|---|---|
| SN 一致<br>**SN match** | 扫码、标签、设备三者一致,贴标前核对<br>Scan, label and device must match |
| 不混批<br>**No mixing** | 一次只处理一个批次<br>One batch at a time |
| 不良品隔离<br>**Isolate fails** | 升级失败 / 灯态异常:暂停、标记、上报,不贴标、不装箱<br>Failed or abnormal LED: stop, mark, report; never label or pack |
| 升级中禁止<br>**During upgrade** | 断电、拔线、移动设备<br>No power cut, unplugging or moving |
| 数量核对<br>**Qty check** | 投入数 = 良品 + 不良品 + 异常品<br>Input = pass + fail + abnormal |