

View from Top side (Scale 2:1)

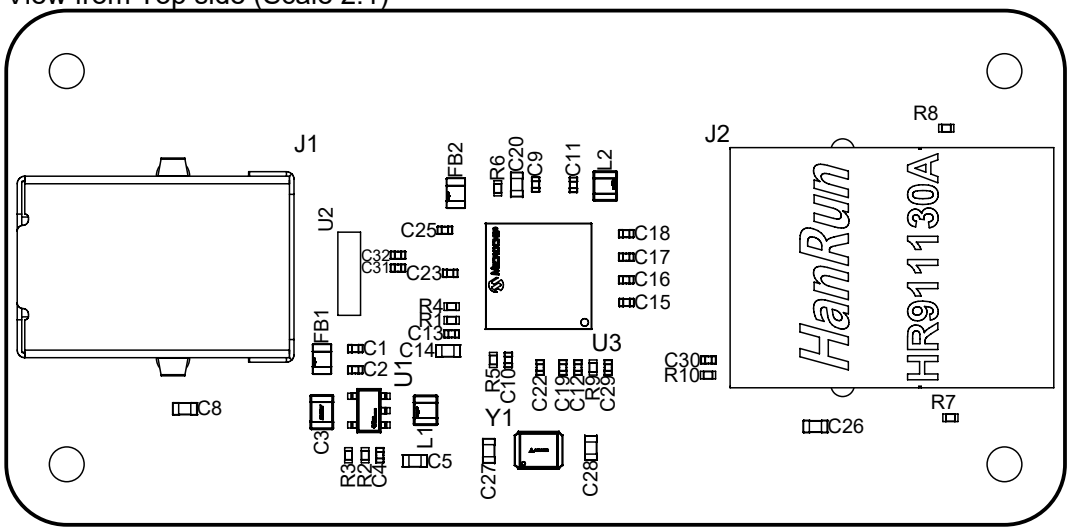

View from Bottom side (Scale 2:1)

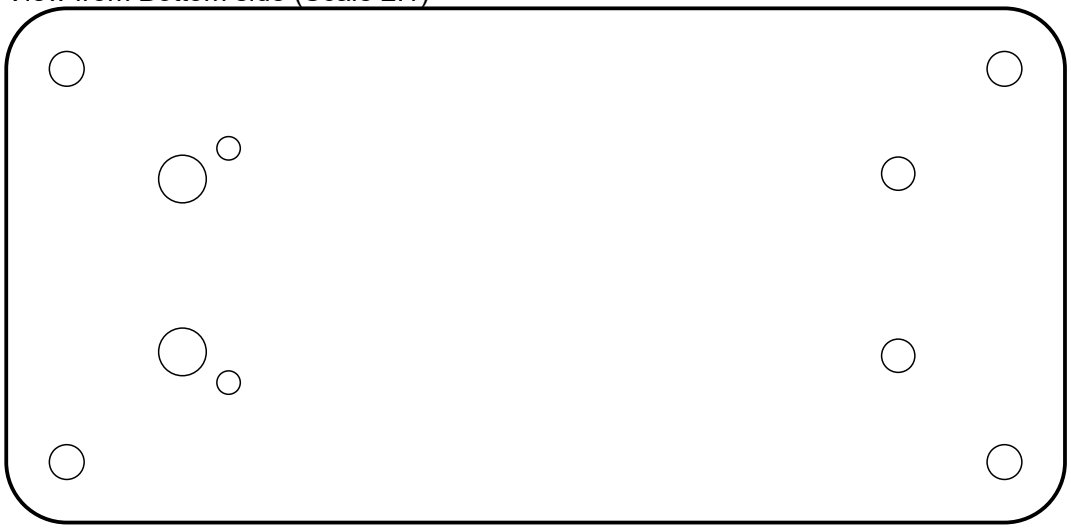

ASSEMBLY NOTES — RevA

1. Assemble PCB in accordance with the RevA BOM, CPL and assembly drawing.
2. Fit components at the designated PCB locations and orientations.
3. Observe component polarity, pin-1 identification and connector orientation.
4. Refer to the RevA BOM for component values, manufacturer and part numbers.
5. Components are shown on the top side; no bottom-side components are indicated.
6. Inspect solder joints, component alignment and orientation after assembly.
7. Any component substitution or assembly deviation requires approval before implementation.

Drawing title	PCB Assembly Drawing
Project	LAN7800 USB 3.0 Gigabit Ethernet Adapter
Drawing number	LAN7800_USB_Ethernet_RevA_Assembley
Revision	RevA
Sheet	1 of 1
Units	mm
Scale	As indicated on views