
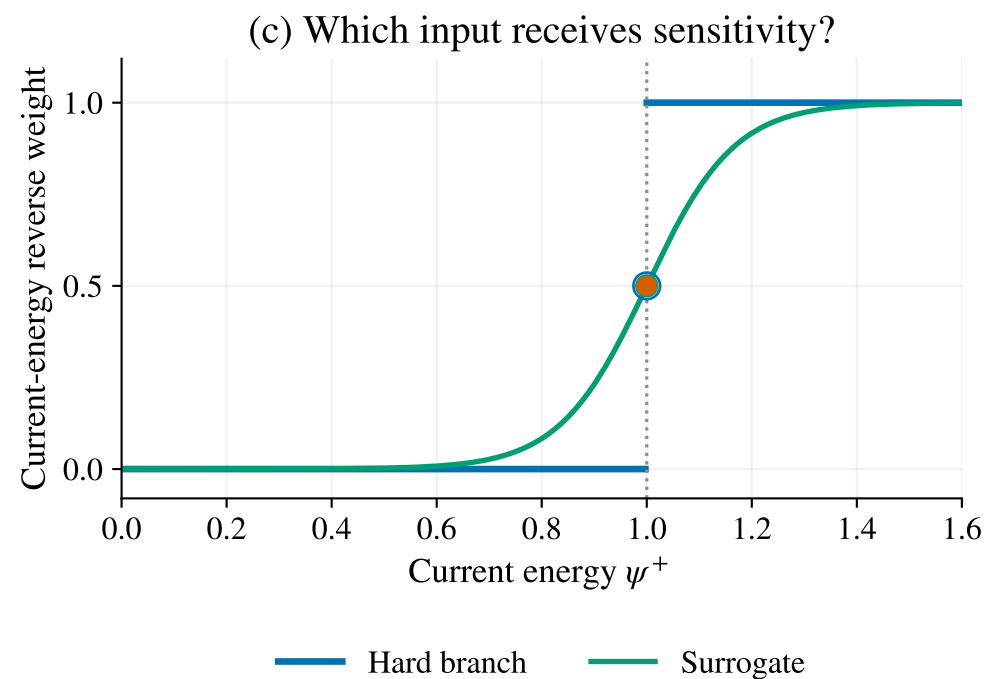
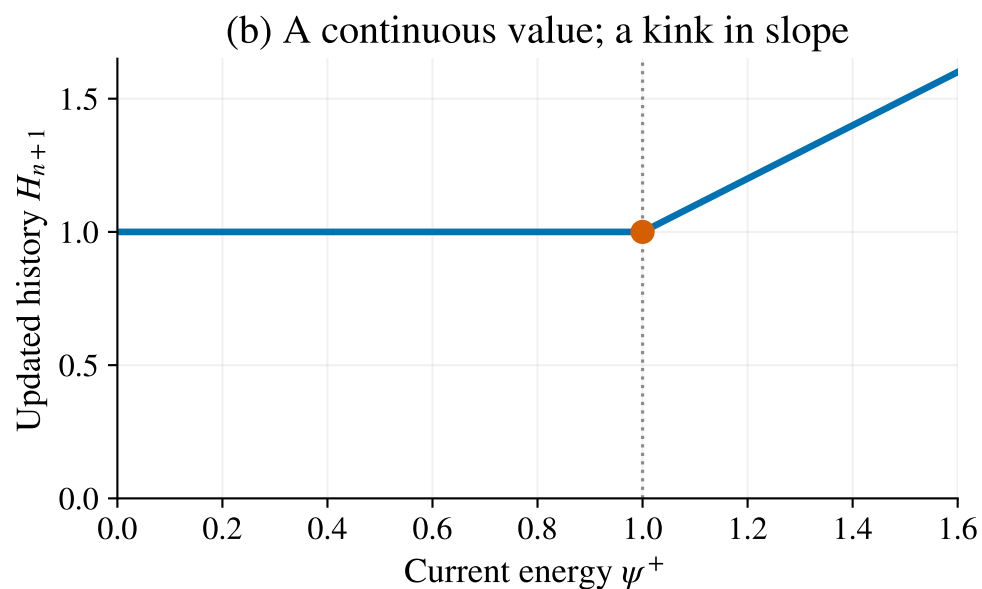


Step 6 of 9: energy, memory and reverse sensitivity

Tie: the hard maximum has a kink here.

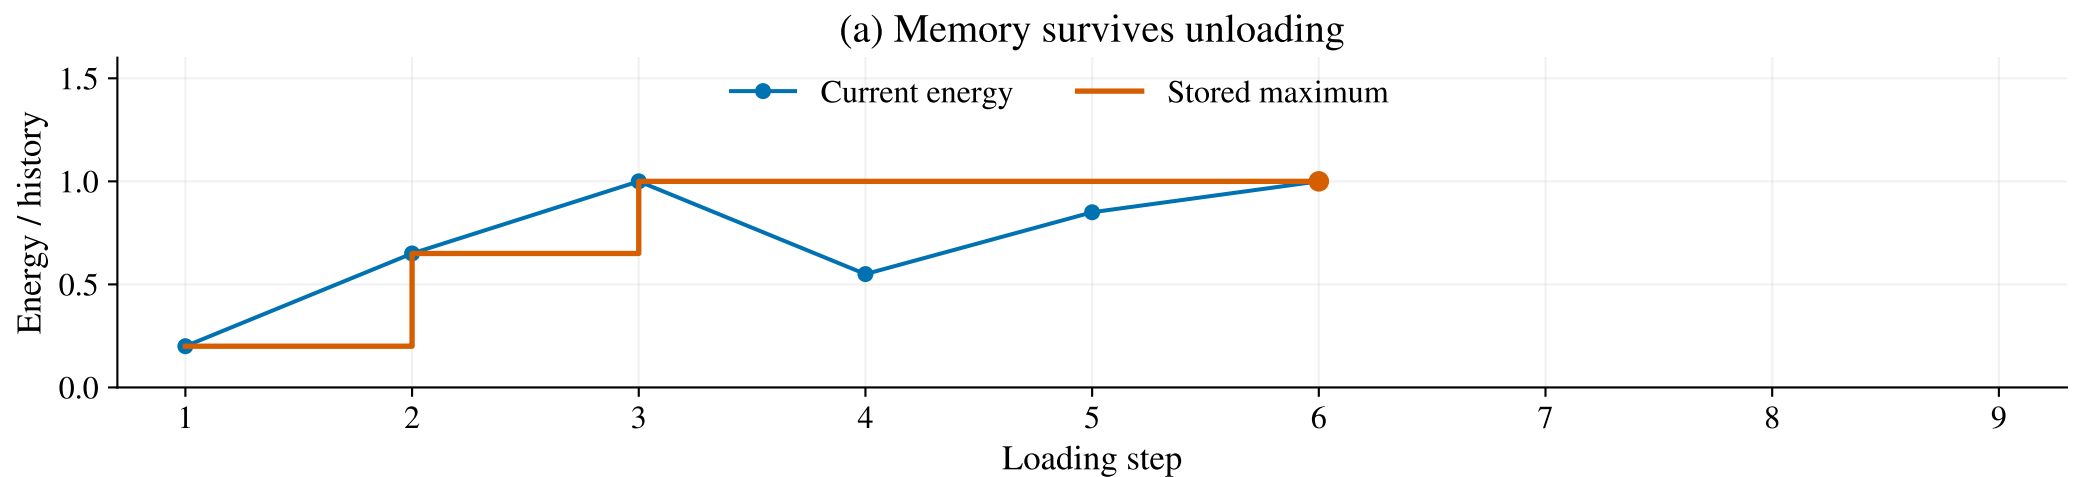

Dimensionless teaching example at one material point. Sigmoid scale = 12.