
## In CoMPASS

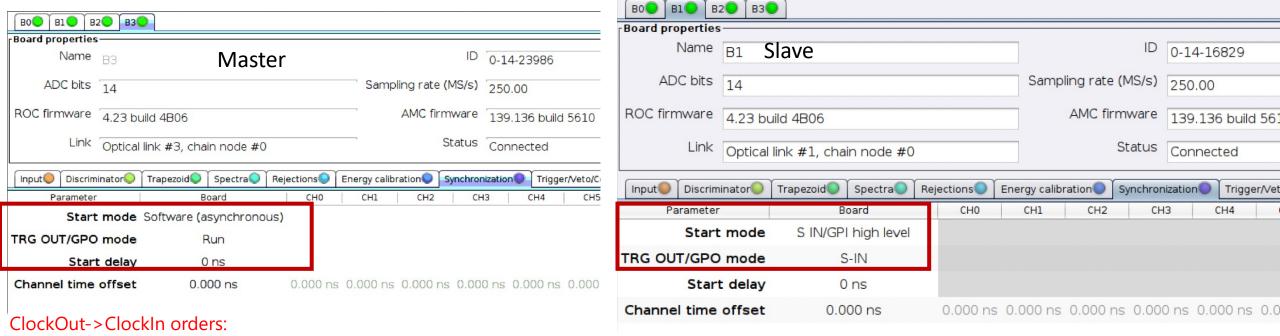

Master Board must be « last » optical link, then optical links of Slave Boards must be in decaying order

## COMMENT

In this way, all slaves are waiting the S-IN signal to start the ACQ. and the master started the last. when the master started ACQ by software, the TRG-OUT will flip from 0 to 1, and all salves will see a 1 and reset clock and start ACQ at the same time as the master.