



USB-C CONNECTOR

16-pin USB-C receptacle in USB 2.0 mode. Max current 3A.

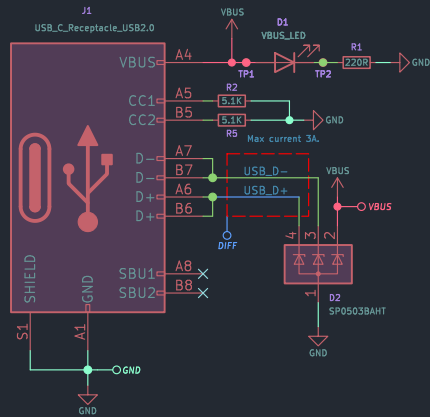


CH340G/C

USB 2.0 to serial converter.

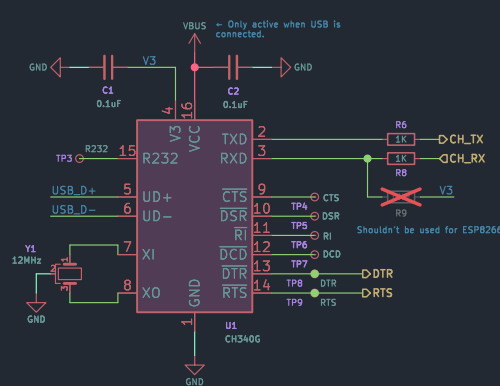


AUTO-PROGRAM

Auto reset and boot mode circuit. Uses DTR and RTS signals from the USB-Serial converter.

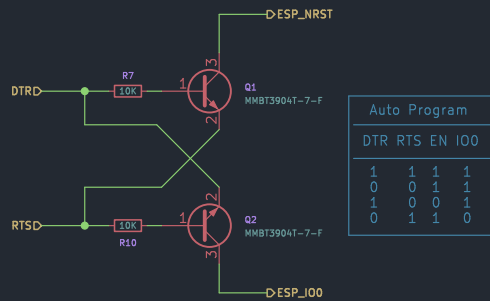


PUSH-BUTTONS

ESP reset and boot mode push-buttons for manual operation. Also include solder points for external switches.

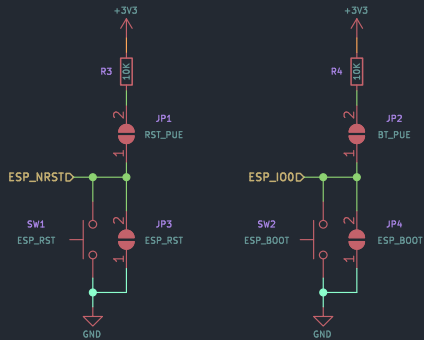


USB-C PADS

Allows soldering wires to the USB signals.

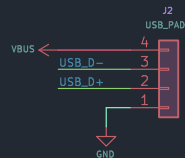


3.3V LDO

3.6-12V in, 3.3V out, 0.6V @ 500mA, PSRR 75dB (120Hz)

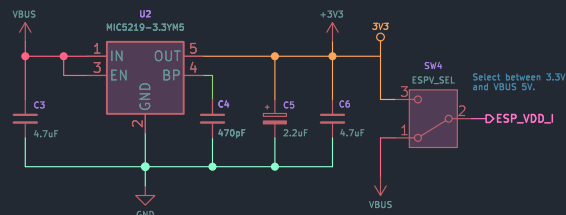


TARGET CONNECTORS

Generic connector for connecting to the target ESP.

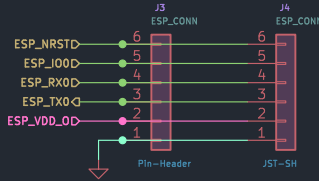


TARGET POWER CONTROL

Controls the power to the target through a load switch. You can also control the power through the DTR signal if it's connected.

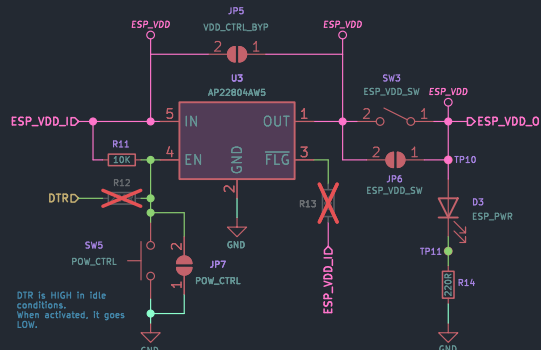

CONNECTOR – ESP-PROG

Allows to use the official ESP-Prog cables.

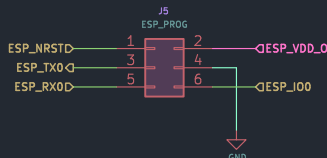



UART SWAP SWITCH

Swaps the TX-RX signals with a DPDT slide switch.



UART LEDs

Indicates activity on the UART lines.

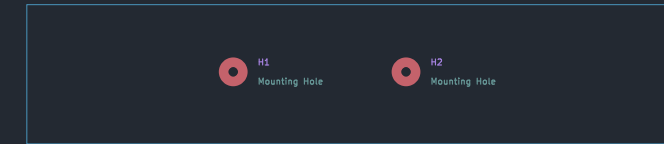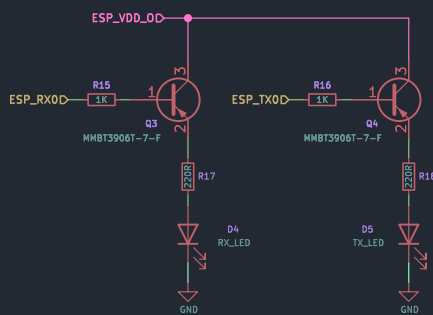

CIRCUITSTATE
WWW.CIRCUITSTATE.COM

<https://www.circuitstate.com>

GitHub: <https://github.com/CIRCUITSTATE/ESPNut-D1>

Licence: MIT Open-Source Licence

ESP32 & ESP8266 Serial Auto-Programmer
Designed by: Vishnu Mohanan (@vishnumaiea, @vizmohanan)
CIRCUITSTATE Electronics LLP (www.circuitstate.com)
Sheet: /
File: ESPNut-D1.kicad_sch

Title: ESPNut-D1

Size: A3 Date: 2025-08-02

KiCad E.D.A. 9.0.3

Rev: 0.3

Id: 1/1