

GB1B AMD Spartan-7 EVB GPIO 핀맵 xdc 파일에 추가

<http://www.crz-tech.com/>

<http://cafe.naver.com/embeddedcrazyboys>

Crazy Embedded Laboratory

Document History

Revision	Date	Change note
1.0	2026.05.29	First draft



1. J4 Expansion Connector	4
---------------------------------	---


1. J4 Expansion Connector

J4 Expansion Connector에 40PIN MAP은 아래와 같다.

Pin Name	NO	NO	Pin Name
VCC3V3	1	2	VCC5V
B1	3	4	VCC5V
B2	5	6	GND
A2	7	8	B3
GND	9	10	A3
A4	11	12	B5
A5	13	14	GND
E13	15	16	B6
VCC3V3	17	18	A10
C12	19	20	GND
A12	21	22	D12
A13	23	24	B13
GND	25	26	B14
C14	27	28	D13
D14	29	30	GND
H12	31	32	E12
J11	33	34	GND
J12	35	36	K12
K11	37	38	L12
M12	39	40	M11

GPIO 핀 이름과 회로도에 보고 핀 번호와 매칭을 하면 된다.

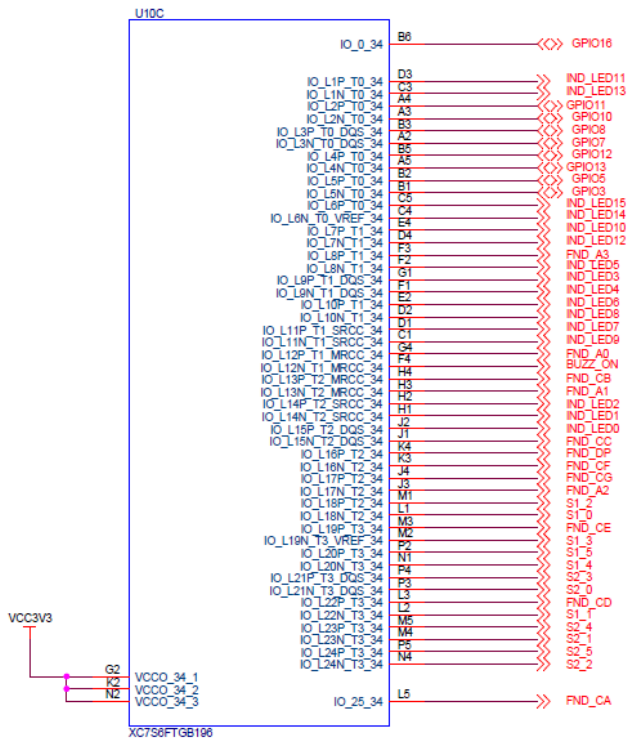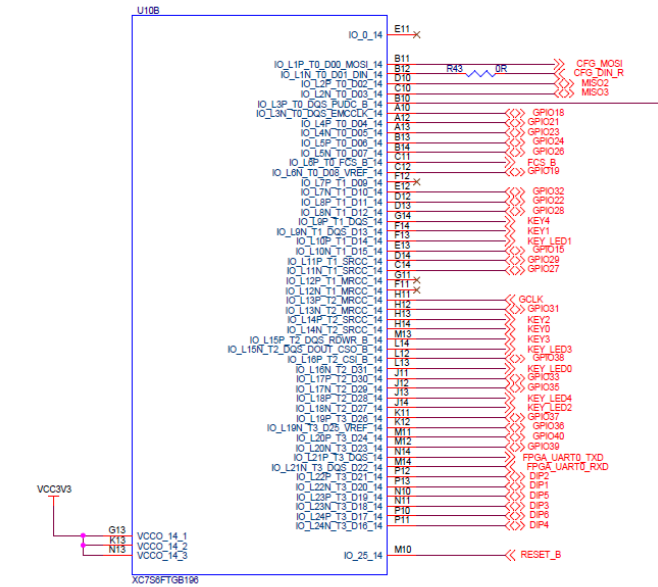

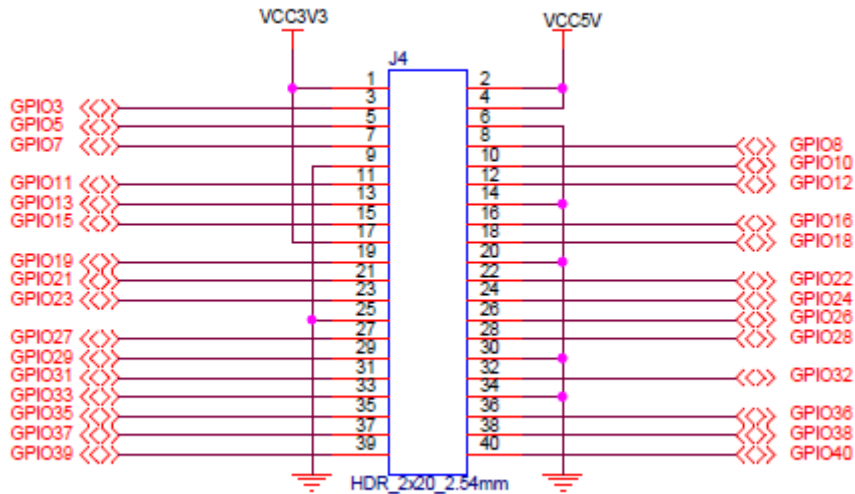

1.1 xdc 파일에 추가

GPIO에 대한 설정은 아래와 같이 된다.

GPIO

```
set_property IOSTANDARD LVCMOS33 [get_ports GPIO3]
set_property PACKAGE_PIN B1 [get_ports GPIO3]
```

```
set_property IOSTANDARD LVCMOS33 [get_ports GPIO5]
set_property PACKAGE_PIN B2 [get_ports GPIO5]
```

```
set_property IOSTANDARD LVCMOS33 [get_ports GPIO7]
set_property PACKAGE_PIN A2 [get_ports GPIO7]
```

```
set_property IOSTANDARD LVCMOS33 [get_ports GPIO11]
set_property PACKAGE_PIN A4 [get_ports GPIO11]
```

```
set_property IOSTANDARD LVCMOS33 [get_ports GPIO13]
set_property PACKAGE_PIN A5 [get_ports GPIO13]
```

```
set_property IOSTANDARD LVCMOS33 [get_ports GPIO15]
set_property PACKAGE_PIN E13 [get_ports GPIO15]
```

```
set_property IOSTANDARD LVCMOS33 [get_ports GPIO19]
set_property PACKAGE_PIN C12 [get_ports GPIO19]
```

```
set_property IOSTANDARD LVCMOS33 [get_ports GPIO21]
set_property PACKAGE_PIN A12 [get_ports GPIO21]
```

```
set_property IOSTANDARD LVCMOS33 [get_ports GPIO23]
set_property PACKAGE_PIN A13 [get_ports GPIO23]
```

```
set_property IOSTANDARD LVCMOS33 [get_ports GPIO27]
set_property PACKAGE_PIN C14 [get_ports GPIO27]
```

set_property IOSTANDARD LVCMOS33 [get_ports GPIO29]
set_property PACKAGE_PIN D14 [get_ports GPIO29]

set_property IOSTANDARD LVCMOS33 [get_ports GPIO31]
set_property PACKAGE_PIN H12 [get_ports GPIO31]

set_property IOSTANDARD LVCMOS33 [get_ports GPIO33]
set_property PACKAGE_PIN J11 [get_ports GPIO33]

set_property IOSTANDARD LVCMOS33 [get_ports GPIO35]
set_property PACKAGE_PIN J12 [get_ports GPIO35]

set_property IOSTANDARD LVCMOS33 [get_ports GPIO37]
set_property PACKAGE_PIN K11 [get_ports GPIO37]

set_property IOSTANDARD LVCMOS33 [get_ports GPIO39]
set_property PACKAGE_PIN M12 [get_ports GPIO39]

set_property IOSTANDARD LVCMOS33 [get_ports GPIO8]
set_property PACKAGE_PIN B3 [get_ports GPIO8]

set_property IOSTANDARD LVCMOS33 [get_ports GPIO10]
set_property PACKAGE_PIN A3 [get_ports GPIO10]

set_property IOSTANDARD LVCMOS33 [get_ports GPIO12]
set_property PACKAGE_PIN B5 [get_ports GPIO12]

set_property IOSTANDARD LVCMOS33 [get_ports GPIO16]
set_property PACKAGE_PIN B6 [get_ports GPIO16]

set_property IOSTANDARD LVCMOS33 [get_ports GPIO18]
set_property PACKAGE_PIN A10 [get_ports GPIO18]

set_property IOSTANDARD LVCMOS33 [get_ports GPIO22]
set_property PACKAGE_PIN D12 [get_ports GPIO22]

set_property IOSTANDARD LVCMOS33 [get_ports GPIO24]
set_property PACKAGE_PIN B13 [get_ports GPIO24]

set_property IOSTANDARD LVCMOS33 [get_ports GPIO26]
set_property PACKAGE_PIN B14 [get_ports GPIO26]

set_property IOSTANDARD LVCMOS33 [get_ports GPIO28]
set_property PACKAGE_PIN D13 [get_ports GPIO28]

set_property IOSTANDARD LVCMOS33 [get_ports GPIO32]
set_property PACKAGE_PIN E12 [get_ports GPIO32]

set_property IOSTANDARD LVCMOS33 [get_ports GPIO36]
set_property PACKAGE_PIN K12 [get_ports GPIO36]

set_property IOSTANDARD LVCMOS33 [get_ports GPIO38]
set_property PACKAGE_PIN L12 [get_ports GPIO38]

set_property IOSTANDARD LVCMOS33 [get_ports GPIO40]
set_property PACKAGE_PIN M11 [get_ports GPIO40]