Cache Design

CS 1541 Wonsun Ahn



Oracle Cache

- CPU Cycles = CPU Compute Cycles + Memory Stall Cycles
- Oracle cache: a cache that never misses
 - In effect, Memory Stall Cycles == 0
 - o Impossible, since even with infinite capacity, there are still cold misses
 - But useful to set **bounds** on performance
- Real caches may approach performance of oracle caches but can't exceed
- What metric can we use to compare and evaluate real cache designs?
 - AMAT (Average Memory Access Time)



AMAT (Average Memory Access Time)

- AMAT (Average Memory Access Time) is defined as follows:
 - O AMAT = hit time + (miss rate × miss penalty)
 - o **Hit time:** time to get the data from cache when we hit
 - Miss rate: what percentage of cache accesses we miss
 - o Miss penalty: time to get the data from lower memory when we miss
 - Shouldn't it be hit rate × hit time?
 - Hit time is incurred regardless of hit or miss
 - It is more aptly called access time (the time to search for the data)
- Hit time, miss rate, miss penalty are the 3 components of a cache design
 - When evaluating a cache design, we need to consider all 3
 - Cache designs trade-off one for the other
 - E.g. a large cache trade-offs longer hit time for smaller miss rate
 - Whether trade-off is beneficial depends on the resulting AMAT




Cache Design Parameter 1: Number of Levels




AMAT for Multi-level Caches

- For a single-level cache (L1 cache):
 - \circ AMAT(L1) = L1 hit time + (L1 miss rate × DRAM access time)



- For a multi-level cache (L1, L2 caches):
 - \circ AMAT(L2) = L1 hit time + (L1 miss rate × L1 miss penalty)
 - \circ L1 miss penalty = L2 hit time + (L2 miss rate × DRAM access time)
 - AMAT(L2) = L1 hit time + L1 miss rate × L2 hit time
 + L1 miss rate × L2 miss rate × DRAM access time





AMAT for Multi-level Caches

For L2 Cache to be worth it, AMAT(L1) > AMAT(L2) needs to be true.

```
L1 Cache

L1 hit time

L1 miss rate × DRAM access time

>?

L1 Cache

L1 hit time

L2 Cache

L1 miss rate × L2 hit time

DRAM Memory

L1 miss rate × L2 miss rate × DRAM access time
```

- AMAT(L1) AMAT(L2)
 - = (L1 miss rate L1 miss rate \times L2 miss rate) \times DRAM access time
 - L1 miss rate \times L2 hit time
 - = L1 miss rate \times ((1 L2 miss rate) \times DRAM access time L2 hit time) > 0
- \rightarrow (1 L2 miss rate) × DRAM access time > L2 hit time
- → Benefit from reduced DRAM accesses > Penalty from L2 accesses

AMAT for Multi-level Caches

- (1 L2 miss rate) × DRAM access time > L2 hit time
 - \circ Let's assume L2 miss rate = 0.9 and DRAM access time = 100 cycles: (1 0.9) \times 100 > L2 hit time L2 hit time < 10
 - If L2 hit time can be kept below 10 cycles, worth it to install L2 cache
- So, should we install the L2 cache, or not? That depends on the program!
 - Locality in program determines cache capacity required for 0.9 miss rate
 - o If we can design a cache with hit time < 10 for that capacity, go for it
- Again, shows design decisions are heavily impacted by needs of software



Cache Design Parameter 2: Cache Size



Impact of Cache Size (a.k.a. Capacity) on AMAT

- AMAT = hit time + (miss rate × miss penalty)
- Larger caches are good for miss rates
 - More capacity means you can keep around cache blocks for longer
 - Means you can leverage more of the pre-existing temporal locality
 - o If entire working set can fit into the cache, no capacity misses!
- But larger caches are **bad** for **hit times**
 - Longer wires and larger decoders mean longer access time
- Exactly why there are multiple levels of caches
 - o Frequently accessed data where hit time is important stays in L1 cache
 - o Rarely accessed data which is part of a larger working set stays in L3



What cache size(s) should I choose?

- How should each cache level be sized?
- That depends on the application
 - Working set sizes of the application at various levels. E.g.:
 - Small set of data accessed very frequently (typically stack variables)
 - Medium set of data accessed often (currently accessed data structure)
 - Large set of data accessed rarely (rest of program data)
 - o Ideally, cache levels and sizes would reflect working set sizes.
- Simulate multiple cache levels and sizes and choose one with lowest AMAT
 - Simulate on the applications that you care about
 - o In the end, it must be a **compromise** (giving best average AMAT)



Cache Design Parameter 3: Cache Block Size



Impact of Cache Block Size on AMAT


- AMAT = hit time + (miss rate × miss penalty)
- Cache block (a.k.a. cache line)
 - Unit of transfer for cache data (typically 32 or 64 bytes)
 - o If program accesses any byte in cache block, entire block is brought in
 - Each level of a multi-level cache can have a different cache block size
- Impact of larger cache block size on miss rate
 - Maybe smaller miss rate due to better leveraging of spatial locality
 - Maybe bigger miss rate due to worse leveraging of temporal locality (Bringing in more data at a time may push out other useful data)
- Impact of larger cache block size on miss penalty
 - With a limited bus width, may take multiple transfers for a large block
 - o E.g. DDR 4 DRAM bus width is 8 bytes, so 8 transfers for 64-byte block
 - Could lead to increase in miss penalty



Cache Block Size and Miss Penalty

- On a miss, the data must come from lower memory
- Besides memory access time, there's transfer time
- What things impact how long that takes?
 - The size of the cache block (words/block)
 - The width of the memory bus (words/cycle)
 - The speed of the memory bus (cycles/second)
- So the transfer time will be:

$$\frac{\text{seconds}}{\text{block}} = \frac{1}{\frac{\text{cycles}}{\text{second}} \times \frac{\text{words}}{\text{cycle}}} \times \frac{\text{words}}{\text{block}} \times \frac{\text{block}}{\text{block size}}$$
bus speed bus width

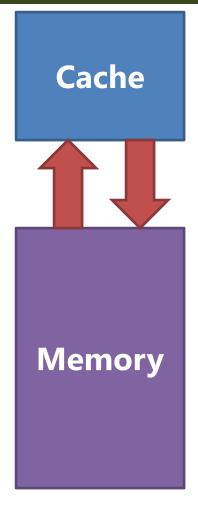



What cache block size should I choose?

- Again, that depends on the application
 - How much spatial and temporal locality the application has
- Simulate multiple cache block sizes and choose one with lowest AMAT
 - o Simulate on benchmarks that you care about and choose best average
 - You may have to simulate different combinations for multi-level caches



Cache Design Parameter 4: Cache Associativity



Mapping blocks from memory to caches

- Cache size is much smaller compared to the entire memory space
 - Must map all the blocks in memory to limited CPU cache
- Does this sound familiar? Remember branch prediction?
 - Had similar problem of mapping PCs to a limited BHT
 - O What did we do then?
 - We hashed PC to an entry in the BHT
 - On a hash conflict, we replaced old entry with more recent one
- We will use a similar idea with caches
 - Hash memory addresses to entries in cache
 - On a conflict:
 - Replace old cache block with more recent one
 - Or, chain multiple cache blocks on to same hash entry



Impact of Cache Associativity on AMAT

- Depending on hash function and chaining, a cache is either:
 - Direct-mapped (no chaining allowed)
 - Set-associative (some chaining allowed)
 - Fully-associative (limitless chaining allowed)
- Impact of more associativity on miss rate
 - Smaller miss rate due to less misses due to hash conflicts
 - Misses due to hash conflicts are called conflict misses
 - A third category of misses besides cold and capacity misses
- Impact of more associativity on hit time
 - Longer hit time due to need to search through long chain



Direct-mapped Caches



Assumptions

- Let's assume for the sake of concise explanations
 - 8-bit memory addresses
 - 4-byte (one word) cache block sizes
- Of course these are not typical values. Typical values are:
 - o 32-bit or 64-bit memory addresses (32-bit or 64-bit CPU)
 - 32-byte or 64-byte cache blocks sizes (for spatial locality)
 - o But too many bits in addresses are going to give you a headache
- According to our assumption, here's a breakdown of address bits

Upper 6 bits: Offset of cache block within main memory

Lower 2 bits: Byte offset within 4-byte cache block

When I refer to addresses, I will sometimes omit the lower 2 bits
 (When we talk about cache block transfer, that part is irrelevant)

Direct-mapped Cache Hash Function


• Each memory address maps to **one** cache block

No chaining allowed so no need to search

• Implementing this is relatively simple

For this 8-entry cache, to find **cache block index**, take the lowest 3 cache block offset bits in address.

But if our program accesses **001000**, then **000000**, how do we tell them apart? Tags!

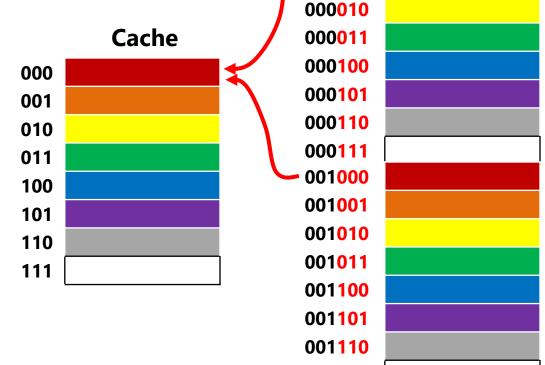

000000

000001

001111



Memory


Tags

Each cache block has a tag that indicates the original memory location

This seems redundant...

For address 110011, 011 is the block index, and 110 is the tag.

	Ta	ag	Data
000	001	000	DEADBEEF
001			
010			
011	110	011	CAFEFACE
100	101	100	B0DECA7
101			
110			
111			

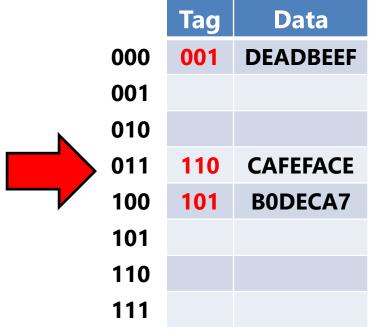


How do we tell what entries are empty/full?

Just add another bit (a **valid** bit)!



Address Bits Breakdown

- Now with the following parameters:
 - 8-bit memory addresses
 - 4-byte cache block sizes
 - 8-block cache
- How would we breakdown the memory address bits?

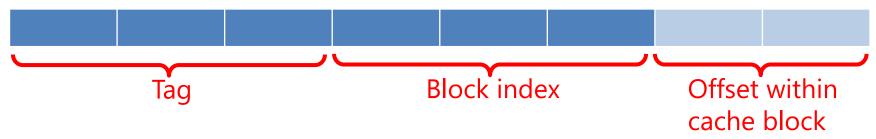


- First, the correct cache block is accessed using the block index
- Then, the tag is compared to the cache block tag
- If matched, offset is used to access specific byte within block



Example: A Direct-mapped Cache

- When the program first starts, we set all the valid bits to 0.
 - Signals all cache lines are empty
- Now let's try a sequence of reads... do these **hit** or **miss?** How do the cache contents change?

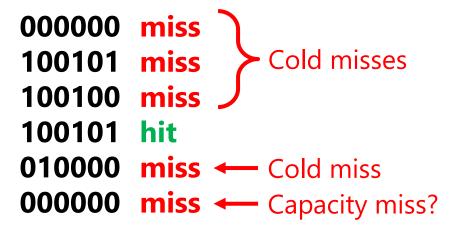

	V	Tag	Data
000	1	010	something
001	0		
010	0		
011	0		
100	1	100	something
101	1	100	something
110	0		
111	0		



Conflict Misses

- What should we call 2nd miss on **000000**?
 - Awkward to call it a capacity miss (It's not like capacity was lacking)
 - Let's call it a conflict miss

000000	miss
100101	miss Cold misses
100100	miss J
100101	hit
010000	miss ← Cold miss
000000	miss ← Copalicitymisss?

	V	Tag	Data
000	1	010	something
001	0		
010	0		
011	0		
100	1	100	something
101	1	100	something
110	0		
111	0		



Types of Cache Misses (Revised)

- Besides cold misses and capacity misses, there are conflict misses
- Cold miss (a.k.a. compulsory miss)
 - Miss suffered when data is accessed for the first time by program

Capacity miss

- Miss on a repeat access suffered due to a lack of capacity
- When the program's working set is larger than can fit in the cache

Conflict miss

- Miss on a repeat access suffered due to a lack of associativity
- Associativity: degree of freedom in associating cache block with an index
- Direct mapped caches have no associativity
 - Since cache blocks are directly mapped to a particular block index



Associative caches



Flexible block placement

- Direct-mapped caches can have lots of **conflicts**
 - Multiple memory locations "fight" for the same cache line
- Suppose we had a 4-block direct-mapped cache
 - As before, 4-byte per cache block
 - Memory addresses are 8 bits.
- The following locations are accessed in a loop:
 - 0 0, 16, 32, 48, 0, 16, 32, 48...
 - o or 000000, 000100, 001000, 001100, ...

	V	Tag	Data
00	1	0011	
)1	0		
0	0		
1	0		

• What would happen?

- They will all land on the same block index, and all conflict miss!
- o Those other 3 blocks are not even getting used!
- O What if we used the space to chain conflicting blocks?



Full associativity

• Let's make our 4-block cache **4-way set-associative**.

V	Tag	D
1	000000	*0

V	Tag	D
1	001100	*48

V	Tag	D
1	000100	*16

V	Tag	D
1	001000	*32

- What's the difference?
 - Now a hashed location can be associated with any of the 4 blocks
 - Analogous to having a hash conflict chain 4-entries long
 - The 4 cache blocks are said to be part of a cache set
 - When set size == cache size, it is said to be fully associative
- Let's do that sequence of reads again: 0, 16, 32, 48, 0, 16, 32, 48...
- Notice tag is now bigger, since there are no block index bits
 - Or set index bits in this context (just one set, so none needed)
- Now cache holds the entire working set: no more misses!



Example: A 2-way Set-Associative Cache

- 16-block 2-way set-associative cache
- Let's try the same stream of accesses as direct-mapped cache
- Yay! 2nd access to **000000** is no longer a conflict miss!


000000	miss
100101	miss
100100	miss
100101	hit
010000	miss
000000	hit

Set	V	Tag	Data	V	Tag	Data
000	1	000	something	1	010	something
001	0			0		
010	0			0		
011	0			0		
100	1	100	something	0		
101	1	100	something	0		
110	0			0		
111	0			0		



Address Bits Breakdown

A fully associative cache (doesn't matter how many blocks):

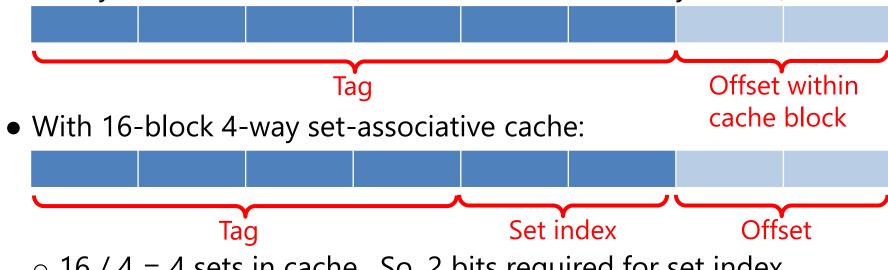

- \circ 16 / 4 = 4 sets in cache. So, 2 bits required for set index.
- With 64-block 8-way set-associative cache:



30


Want More Examples?

- Try out the Cache Visualizer on the course github:
 - https://github.com/wonsunahn/CS1541_Spring2022/tree/main/resources/cache_demo
 - Courtesy of Jarrett Billingsley
- Visualizes cache organization for various parameters
 - Cache block size
 - Number of blocks in cache (capacity)
 - Cache associativity



Associativity is Costly

- Associativity requires complex circuitry and may increase hit time
- Full associativity is only used for very small caches
 - And where a cache miss is extremely costly
- Usually caches are 2-, 4-, or maybe 8- way set-associative

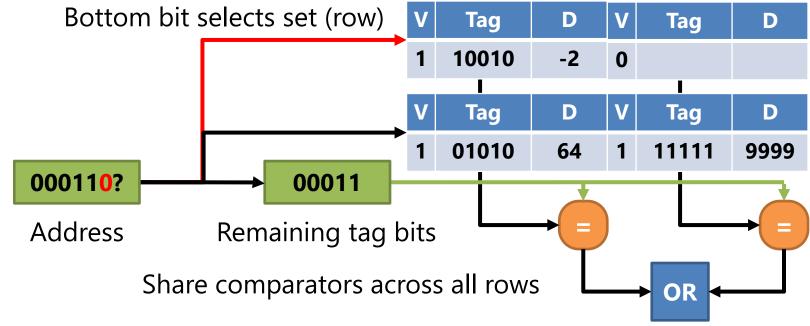



Cache Design Parameter 5: Cache Replacement Policy



Cache Replacement

• If we have a cache miss and no empty blocks, what then?

V	Tag	D
1	000000	*0

V	Tag	D				
1	001100	*48				

V	Tag	D
1	000001	*4

V	Tag	D
1	001000	*32

- Let's read memory address 4 (**000001**00).
 - O Uh oh. That's a miss. Where do we put it?
- With associative caches, you must have a **replacement scheme**.
 - O Which block to evict (kick out) when you're out of empty slots?
- The simplest replacement scheme is **random**.
 - Just pick one. Doesn't matter which.
- What would make more sense?
 - o How about taking temporal locality into account?



LRU (Least-Recently-Used) Replacement

• When you need to evict a block, kick out the oldest one.

1	V	Tag	D	V	Tag	D	V	Tag	D	V	Tag	D
	1	000001	*4	1	001100	*48	1	000100	*16	1	001000	*32
4 reads old			1 read	old		3 reads	old		2 reads	old		

- Our read history looked like 0, 16, 32, 48. How old are the blocks?
- Now we want to read address 4. Which block should we replace?
- But now we must maintain the age of the blocks
 - o Easy to say. How do we keep track of this in hardware?
- Have a saturating counter for each cache block indicating age
 - When accessing a set, increment counter for each block in set
 - On a cache hit, reset counter to 0 (most recently used)



Impact of LRU on AMAT

- AMAT = hit time + (miss rate × miss penalty)
- Impact of LRU on miss rate
 - Smaller miss rate due to better leveraging of temporal locality (Recently used cache lines more likely to be used again)
- Saturating counter for LRU uses bits and adds to amount of metadata
 - Cache tag, the valid bit, the saturating counter are all metadata
 - o Every bit you spend on metadata is a bit you don't spend on real data
 - Spending many bits on counter may reduce capacity for real data
 - o This may lead to a **larger miss rate**, if LRU is not very effective

