

## TECHNICAL MANUAL

### AVIATION UNIT AND INTERMEDIATE MAINTENANCE FOR ARMY MODEL HELICOPTERS

**UH-60A    NSN 1520-01-035-0266 (EIC: RSA)**

**UH-60L    NSN 1520-01-298-4532 (EIC: RSM)**

**EH-60A    NSN 1520-01-082-0686 (EIC: RSB)**

**HH-60A    NSN 1520-01-459-9468 (EIC: RSN)**

**HH-60L    NSN 1520-01-471-6743 (EIC: RSI)**

This manual, dated 20 June 2008, supersedes TM 1-1520-237-23-20, dated 15 December 2007.

This information is furnished upon the condition that it will not be released to another nation without the specific authority of the Department of the Army of the United States, that it will be used for military purposes only, that individual or corporate rights originating in the information, whether patented or not, will be respected, that the recipient will report promptly to the United States, any known or suspected compromise, and that the information will be provided substantially the same degree of security afforded it by the Department of Defense of the United States. Also, regardless of any other markings on the document, it will not be downgraded or declassified without written approval of the originating United States agency.

**DISTRIBUTION STATEMENT D** - Distribution authorized to the Department of Defense and U.S. DOD contractors only, for official use or for administrative or operational purposes. This determination was made on 15 June 2003. Other requests for this document must be referred to Commander, US Army Aviation and Missile Command, ATTN: SFAE-AV-UH/L, Redstone Arsenal, AL 35898-5000.

**WARNING** - This document contains technical data whose export is restricted by the Arms Export Control Act (Title 22 U.S.C., Section 2751 *et seq.*) or the Export Administration Act of 1979, as amended, Title 50, U.S.C., App. 2401 *et seq.* Violations of these export laws are subject to severe criminal penalties. Disseminate in accordance with provisions of DoD Directive 5230.25.

**DESTRUCTION NOTICE** - Destroy by any method that will prevent disclosure of contents or reconstruction of the document.

---

## HEADQUARTERS, DEPARTMENT OF THE ARMY

### 20 JUNE 2008



## WARNING SUMMARY

Personnel performing operations, procedures, and practices which are included or implied in this technical manual shall observe the following warnings. To disregard these warnings and precautionary information can cause serious injury, death, or an aborted mission.

### WARNING

**FIRST AID** - refer to FM 4-25-11.

**AC POWER** - before applying ac power to the helicopter, make sure that the area around the stabilator is clear of personnel and equipment. Should the stabilator be in any position other than trailing edge fully down, it may reposition automatically to fully down when ac power is applied.

**CARBON MONOXIDE** - during cold weather operations when preheating is necessary, all personnel shall become acquainted with the various types of heaters and where they are to be used. Be careful of accumulations of carbon monoxide and damage to heat-sensitive equipment.

**CONSUMABLE MATERIALS** - observe all cautions and warnings on the containers when using consumables. When applicable wear necessary protective gear during handling and use. If a consumable is flammable or explosive, MAKE SURE consumable and its vapors are kept away from heat, spark, and flame. MAKE SURE helicopter is properly grounded and firefighting equipment is readily available for use.

**SAFETY PINS** - make sure all safety pins are installed in ejector racks prior to performing any maintenance. To disregard this warning can cause serious injury, death, or an aborted mission.

**ELECTRICAL GROUNDING OF THE HELICOPTER** - army regulations require the grounding of the helicopter when doing all fueling and defueling operations. Do not operate helicopter electrical switches, except those essential for servicing during fueling and defueling. Do not smoke or use flame during fueling and defueling operations.

**HIGH VOLTAGE** - there are dangerous voltages in the helicopter. Use extreme care when working with equipment having these voltages.

**HYDRAULIC SYSTEMS** - there are dangerous high hydraulic system pressures in the helicopter. Use extreme care when working on systems having this pressure.

**USE OF FIRE EXTINGUISHER** - when fire extinguishers are used in a confined area, ventilate immediately. Serious injury or death could result if the area is not ventilated or the user does not use a self-contained breathing device.

**MAIN ROTOR PYLON SLIDING COVER** - when opening and closing main pylon sliding cover, keep hands away from sharp edges near track, mating end, and especially ventilation blower inlet hole.

**TECHNICAL ACETONE** - is extremely flammable and toxic to eyes, skin, and respiratory tract. Wear protective gloves and goggles/face shield. Avoid repeated or prolonged contact. Use only in well ventilated areas (or use approved respirator as determined by local safety/industrial hygiene personnel). Keep away from open flames, sparks, hot surfaces or other sources of ignition.

**ALKALINE AQUEOUS CLEANER** - alkaline cleaner is harmful to skin and eyes. Use adequate ventilation. Operators should wear protective gloves, aprons, and goggles. Upon contact with cleaning compound, wash affected area for at least 20 minutes with clean water. Seek medical attention.

**CLEANING COMPOUND SOLVENT** - cleaning Compound Solvent is combustible and toxic to eyes, skin, and respiratory tract. Wear protective gloves and goggles/face shield. Avoid repeated or prolonged contact. Use only in well-ventilated areas (or use approved respirator). Keep away from open flames or other sources of ignition.

**ELECTRON** - use electron in well ventilated area only. Avoid prolonged breathing of vapors. Avoid bodily contact. The use of chemical gloves and chemical splash goggles are required. Do not use near heat, spark or flame. This solvent is reactive with acids and oxidizers; do not mix or cross-apply with other chemicals. Organic vapor respirator with dust and mist filter is recommended when solvent is spray applied. Keep containers closed between applications.

- Provide mechanical ventilation if used in confined spaces. Coordinate the use of this material with your supporting industrial hygiene and safety offices. Ensure you read and understand the material safety data sheet (MSDS) for electron prior to use.

**ISOPROPYL ALCOHOL** - isopropyl alcohol is a volatile and flammable liquid which must be kept away from flame and other ignition sources. It must be used only in well ventilated area. Personnel must wear protective gloves and eye protection. Excessive inhalation of vapors or contact with skin must be avoided. If contact occurs with eyes or skin, flush area thoroughly with water. If ingestion occurs, induce vomiting and call a doctor. Remove to fresh air if overexposed to vapor.

**DS-108** - use in well ventilated area. Avoid breathing vapors. Organic vapor respirator with dust and mist filter is recommended. May be harmful by inhalation, ingestion, or skin absorption. Avoid bodily contact. Chemical safety glasses/goggles and chemical resistant gloves are required. Combustible, keep away from heat, spark, or flame. Vapors are heavier than air and may travel over a distance to an ignition source and then flash back. Do not mix or cross apply with other chemicals.

**LOCKWIRE** - in critical applications use lockwire instead of safety cable which is specifically prohibited from use in critical applications. The use of safety cable is restricted in these specific applications with a warning.

**PURPOSE OF A WARNING** - alerts personal to operation, procedure, practice, etc., which if not strictly observed, could result in personal injury or loss of life.

---

INSERT LATEST CHANGED PAGES/WORK PACKAGES. DESTROY SUPERSEDED DATA.

**LIST OF EFFECTIVE PAGES/WORK PACKAGES**

Dates of issue for original and changed pages / work packages are:

Original      0      20 June 2008

TOTAL NUMBER OF PAGES FOR FRONT AND REAR MATTER IS 54 AND TOTAL NUMBER OF  
WORK PACKAGES IS 6 CONSISTING OF THE FOLLOWING:

| Page / WP<br>No.      | *Change<br>No. | Page / WP<br>No.            | *Change<br>No. | Page / WP<br>No.              | *Change<br>No. |
|-----------------------|----------------|-----------------------------|----------------|-------------------------------|----------------|
| Volume 20 Title ..... | 0              | Chapter 20 Title Page ..... | 0              | WP 1805 00 (468 pgs) .....    | 0              |
| a - b .....           | 0              | WP 1800 00 (10 pgs) .....   | 0              | Glossary-1 - Glossary-2 ..... | 0              |
| A .....               | 0              | WP 1801 00 (6 pgs) .....    | 0              | Index-1 - Index-45 .....      | 0              |
| B Blank .....         | 0              | WP 1802 00 (130 pgs) .....  | 0              | Index-46 Blank .....          | 0              |
| i .....               | 0              | WP 1803 00 (28 pgs) .....   | 0              |                               |                |
| ii Blank .....        | 0              | WP 1804 00 (20 pgs) .....   | 0              |                               |                |

\* Zero in this column indicates an original page or work package.

**A/B Blank**



HEADQUARTERS,  
DEPARTMENT OF THE ARMY  
WASHINGTON, D.C., 20 June 2008

## AVIATION UNIT AND INTERMEDIATE MAINTENANCE FOR

### Army Models Helicopters

UH-60A (NSN 1520-01-035-0266) (EIC: RSA)

UH-60L (NSN 1520-01-298-4532) (EIC: RSM)

EH-60A (NSN 1520-01-082-0686) (EIC: RSB)

HH-60A (NSN 1520-01-459-9468) (EIC: RSN)

HH-60L (NSN 1520-01-471-6743) (EIC: RSI)

### REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS.

You can improve this manual. If you find any mistakes or if you know of a way to improve these procedures, please let us know. Mail your letter or DA Form 2028 (Recommended Changes to Publications and Blank Forms), located in the back of this manual, directly to: Commander, US Army Aviation and Missile Command, ATTN:AMSAM-MMC-MA-NP, Redstone Arsenal, AL 35898-5000. A reply will be furnished to you. You may also send in your comments electronically to our E-mail address: [2028@redstone.army.mil](mailto:2028@redstone.army.mil) or by fax 256-842-6546/DSN 788-6546. For the World Wide Web use: <https://amcom2028.redstone.army.mil>. Instructions for sending an electronic 2028 may be found at the back of this manual immediately preceding the hard copy 2028.

**DISTRIBUTION STATEMENT D** - Distribution authorized to the Department of Defense and U.S. DOD contractors only, for official use or for administrative or operational purposes. This determination was made on 15 June 2003. Other requests for this document must be referred to Commander, US Army Aviation and Missile Command, ATTN: SFAE-AV-UH/L, Redstone Arsenal, AL 35898-5000.

**WARNING** - This document contains technical data whose export is restricted by the Arms Export Control Act (Title 22, U.S.C., Section 2751 *et seq.*) or the Export Administration Act of 1979, as amended, Title 50, U.S.C., App. 2401 *et seq.* Violations of these export laws are subject to severe criminal penalties. Disseminate in accordance with provisions of DoD Directive 5230.25.

**DESTRUCTION NOTICE** - Destroy by any method that will prevent disclosure of contents or reconstruction of the document.

## TABLE OF CONTENTS

|                                         | WP Sequence No. |
|-----------------------------------------|-----------------|
| CHAPTER 20 - SUPPORTING INFORMATION     |                 |
| References.....                         | 1800 00         |
| Maintenance Allocation Chart (MAC)..... | 1801 00         |

\*This manual, dated 20 June 2008, supersedes TM 1-1520-237-23-20, dated 15 December 2007.

## TABLE OF CONTENTS - CONTINUED

|                                                | <b>WP Sequence No.</b> |
|------------------------------------------------|------------------------|
| Maintenance Allocation Chart.....              | 1802 00                |
| Expendable and Durable Items List.....         | 1803 00                |
| Critical Safety Item (CSI) Program.....        | 1804 00                |
| Illustrated Field Manufacture Items List ..... | 1805 00                |



**CHAPTER 20**  
**SUPPORTING INFORMATION**  
**FOR**  
**ARMY MODEL HELICOPTERS UH-60A, UH-60L,**  
**EH-60A, HH-60A, AND HH-60L**



---

**UNIT LEVEL****REFERENCES**

---

**SCOPE**

This work package lists all field manuals, forms, technical manuals and miscellaneous publications referenced in this manual.

**MILITARY STANDARDS**

|                |                                                                                                                                                                          |
|----------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ASME-Y14.38    | Abbreviations And Acronyms                                                                                                                                               |
| ASTM-E1417     | Liquid Penetrant Examination, Standard Practice For                                                                                                                      |
| MIL-STD-1168   | Department Of Defense Standard Practice, Ammunition Lot Numbering And Ammunition Data Card                                                                               |
| MIL-STD-1686   | Electrostatic Discharge Control Program For Protection Of Electrical And Electronic Parts, Assemblies And Equipment (Excluding Electrically Initiated Explosive Devices) |
| MIL-STD-2073-1 | DOD Standard Practice For Military Packaging                                                                                                                             |
| SAE-AMS2644    | Inspection Material, Penetrant                                                                                                                                           |

**TECHNICAL BULLETINS**

|                   |                                                                                                                                             |
|-------------------|---------------------------------------------------------------------------------------------------------------------------------------------|
| TB 1-1500-341-01  | Aircraft Components Requiring Maintenance Management And Historical Data Reports                                                            |
| TB 9-1300-385     | Munitions Restricted Or Suspended                                                                                                           |
| TB 43-0108        | Handling, Storage And Disposal Of Army Aircraft Components Containing Radioactive Materials                                                 |
| TB 43-0211        | Aeronautical Equipment Army Oil Analysis Program (AOAP)                                                                                     |
| TB 55-9150-200-24 | Engine And Transmission Oils, Fuels And Additives For Army Aircraft                                                                         |
| TB 750-25         | Maintenance Of Supplies And Equipment: Army Test, Measurement And Diagnostic Equipment (TMDE) Calibration And Repair Support (C&RS) Program |

**DEPARTMENT OF THE ARMY REGULATIONS**

|           |                                   |
|-----------|-----------------------------------|
| AR 385-40 | Accident Reporting And Records    |
| AR 385-95 | Army Aviation Accident Prevention |
| AR 95-1   | Flight Regulations                |

**DEPARTMENT OF THE ARMY FIELD MANUALS**

|             |                                                     |
|-------------|-----------------------------------------------------|
| FM 1-563    | Fundamentals And Procedures Of Airframe Maintenance |
| FM 3-04.500 | Army Aviation Maintenance                           |
| FM 3-5      | NBC Decontamination                                 |

---

**DEPARTMENT OF THE ARMY FIELD MANUALS** - Continued

|             |                                                                          |
|-------------|--------------------------------------------------------------------------|
| FM 10-67-1  | Concepts And Equipment Of Petroleum Operations                           |
| FM 10-450-3 | Multiservice Helicopter Sling Load: Basic Operations And Equipment       |
| FM 10-450-4 | Multiservice Helicopter Sling Load: Single-Point Load Rigging Procedures |
| FM 10-450-5 | Multiservice Helicopter Sling Load: Dual-Point Rigging Procedures        |
| FM 4-25.11  | First Aid                                                                |
| FM 38-700   | Packaging Of Materiel For Preservation                                   |
| FM 38-701   | Packing Of Materiel For Packing                                          |

**DEPARTMENT OF THE ARMY PAMPHLETS**

|             |                                                                                         |
|-------------|-----------------------------------------------------------------------------------------|
| PAM 25-30   | Consolidated Index Of Army Publications And Blank Forms                                 |
| PAM 738-751 | Functional Users Manual For The Army Maintenance Management System - Aviation (TAMMS-A) |

**DEPARTMENT OF THE ARMY TECHNICAL MANUALS**

|                    |                                                                                                                                                                                                     |
|--------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| TM 1-1500-204-23-1 | Aviation Unit Maintenance (AVUM) And Aviation Intermediate Maintenance (AVIM) Manual For General Aircraft Maintenance (General Maintenance And Practices) Volume 1                                  |
| TM 1-1500-204-23-2 | Aviation Unit Maintenance (AVUM) And Aviation Intermediate Maintenance (AVIM) Manual For General Aircraft Maintenance (Pneudraulics Maintenance And Practices) Volume 2                             |
| TM 1-1500-204-23-3 | Aviation Unit Maintenance (AVUM) And Aviation Intermediate Maintenance (AVIM) Manual For General Aircraft Maintenance (Maintenance Practices For Fuel And Oil Systems) Volume 3                     |
| TM 1-1500-204-23-4 | Aviation Unit Maintenance (AVUM) And Aviation Intermediate Maintenance (AVIM) Manual For General Aircraft Maintenance (Electrical And Instrument Maintenance Procedures And Practices) Volume 4     |
| TM 1-1500-204-23-5 | Aviation Unit Maintenance (AVUM) And Aviation Intermediate Maintenance (AVIM) Manual For General Aircraft Maintenance (Propeller, Rotor, And Powertrain Maintenance Practices) Volume 5             |
| TM 1-1500-204-23-6 | Aviation Unit Maintenance (AVUM) And Aviation Intermediate Maintenance (AVIM) Manual For General Aircraft Maintenance (Hardware And Consumable Materials) Volume 6                                  |
| TM 1-1500-204-23-7 | Aviation Unit Maintenance (AVUM) And Aviation Intermediate Maintenance (AVIM) Manual For General Aircraft Maintenance (Nondestructive Testing And Flaw Detection Procedures And Practices) Volume 7 |
| TM 1-1500-204-23-8 | Aviation Unit Maintenance (AVUM) And Aviation Intermediate Maintenance (AVIM) Manual For General Aircraft Maintenance (Machine And Welding Shop Practices) Volume 8                                 |
| TM 1-1500-204-23-9 | Aviation Unit Maintenance (AVUM) And Aviation Intermediate Maintenance (AVIM) Manual For General Aircraft Maintenance (Tools And Ground Support Equipment) Volume 9                                 |

---

**DEPARTMENT OF THE ARMY TECHNICAL MANUALS - Continued**

|                     |                                                                                                                                                                                                                                                                                                                               |
|---------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| TM 1-1500-204-23-10 | Aviation Unit Maintenance (AVUM) And Aviation Intermediate Maintenance (AVIM) Manual For General Aircraft Maintenance (Sheet Metal Shop Practices) Volume 10                                                                                                                                                                  |
| TM 1-1500-250-23    | Aviation Unit And Aviation Intermediate Maintenance For General Tie-Down And Mooring On All Series Army Models, AH-64, UH-60, CH-47, UH-1, AH-1, OH-58 Helicopters                                                                                                                                                            |
| TM 1-1500-328-23    | Aeronautical Equipment Maintenance Management Policies And Procedures                                                                                                                                                                                                                                                         |
| TM 1-1500-335-23    | Nondestructive Inspection Methods                                                                                                                                                                                                                                                                                             |
| TM 1-1500-343-23    | Organizational/Unit And Intermediate Maintenance For Avionics Cleaning And Corrosion Prevention/Control                                                                                                                                                                                                                       |
| TM 1-1500-344-23-1  | Cleaning And Corrosion Control Volume 1 Corrosion Program and Corrosion                                                                                                                                                                                                                                                       |
| TM 1-1500-344-23-2  | Cleaning And Corrosion Control Volume 2 Aircraft                                                                                                                                                                                                                                                                              |
| TM 1-1500-344-23-3  | Cleaning And Corrosion Control Volume 3 Avionics And Electronics                                                                                                                                                                                                                                                              |
| TM 1-1500-344-23-4  | Cleaning And Corrosion Control Volume 4 Consumable Materials                                                                                                                                                                                                                                                                  |
| TM 1-1520-237-CL    | Operator's And Crewmember's Checklist Army Models UH-60A Helicopter, UH-60L Helicopter, EH-60A Helicopter                                                                                                                                                                                                                     |
| TM 1-1520-237-MTF   | Maintenance Test Flight Manual UH-60A Helicopter, UH-60L Helicopter, EH-60A Helicopter                                                                                                                                                                                                                                        |
| TM 1-1520-237-PMD   | Preventive Maintenance Daily Inspection Checklist For Army Models UH-60A, UH-60L, EH-60A, HH-60A, And HH-60L Helicopters                                                                                                                                                                                                      |
| TM 1-1520-237-PMI   | Phase Maintenance Inspections, Periodic Inspection Checklist For Army Models UH-60A, UH-60L, EH-60A, HH-60A, And HH-60L Helicopters                                                                                                                                                                                           |
| TM 1-1520-237-PMS   | Preventive Maintenance Services 40-Hour Inspection Checklist For Army Models UH-60A, UH-60L, EH-60A, HH-60A, And HH-60L Helicopters                                                                                                                                                                                           |
| TM 1-1520-237-S     | Preparation For Shipment Of Army Models UH-60A, UH-60L, EH-60A, HH-60A, And HH-60L Helicopters                                                                                                                                                                                                                                |
| TM 1-1520-237-10    | Operator's Manual For UH-60A Helicopter, UH-60L Helicopter, EH-60A Helicopter                                                                                                                                                                                                                                                 |
| TM 1-1520-237-23P-1 | Aviation Unit And Intermediate Maintenance Repair Parts And Special Tool Lists (Including Depot Maintenance Repair Parts And Special Tools) For Helicopter, Utility Tactical Transport, UH-60A (NSN 1520-01-035-0266) EH-60A (1520-01-082-0686) UH-60L (1520-01-298-4532) HH-60A (1520-01-459-9468) HH-60L (1520-01-471-6743) |
| TM 1-1520-237-23P-2 | Aviation Unit And Intermediate Maintenance Repair Parts And Special Tool Lists (Including Depot Maintenance Repair Parts And Special Tools) For Helicopter, Utility Tactical Transport, UH-60A (NSN 1520-01-035-0266) EH-60A (1520-01-082-0686) UH-60L (1520-01-298-4532) HH-60A (1520-01-459-9468) HH-60L (1520-01-471-6743) |

---

**DEPARTMENT OF THE ARMY TECHNICAL MANUALS** - Continued

---

|                     |                                                                                                                                                                                                                                                                                                                               |
|---------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| TM 1-1520-237-23P-3 | Aviation Unit And Intermediate Maintenance Repair Parts And Special Tool Lists (Including Depot Maintenance Repair Parts And Special Tools) For Helicopter, Utility Tactical Transport, UH-60A (NSN 1520-01-035-0266) EH-60A (1520-01-082-0686) UH-60L (1520-01-298-4532) HH-60A (1520-01-459-9468) HH-60L (1520-01-471-6743) |
| TM 1-1520-237-23P-4 | Aviation Unit And Intermediate Maintenance Repair Parts And Special Tool Lists (Including Depot Maintenance Repair Parts And Special Tools) For Helicopter, Utility Tactical Transport, UH-60A (NSN 1520-01-035-0266) EH-60A (1520-01-082-0686) UH-60L (1520-01-298-4532) HH-60A (1520-01-459-9468) HH-60L (1520-01-471-6743) |
| TM 1-1520-237-23P-5 | Aviation Unit And Intermediate Maintenance Repair Parts And Special Tool Lists (Including Depot Maintenance Repair Parts And Special Tools) For Helicopter, Utility Tactical Transport, UH-60A (NSN 1520-01-035-0266) EH-60A (1520-01-082-0686) UH-60L (1520-01-298-4532) HH-60A (1520-01-459-9468) HH-60L (1520-01-471-6743) |
| TM 1-1520-237-23P-6 | Aviation Unit And Intermediate Maintenance Repair Parts And Special Tool Lists (Including Depot Maintenance Repair Parts And Special Tools) For Helicopter, Utility Tactical Transport, UH-60A (NSN 1520-01-035-0266) EH-60A (1520-01-082-0686) UH-60L (1520-01-298-4532) HH-60A (1520-01-459-9468) HH-60L (1520-01-471-6743) |
| TM 1-1520-237-23-1  | Aviation Unit And Intermediate Maintenance For Army Models UH-60A, UH-60L, EH-60A, HH-60A, And HH-60L Helicopters Chapter 1                                                                                                                                                                                                   |
| TM 1-1520-237-23-2  | Aviation Unit And Intermediate Maintenance For Army Models UH-60A, UH-60L, EH-60A, HH-60A, And HH-60L Helicopters Chapter 2 Troubleshooting Procedures                                                                                                                                                                        |
| TM 1-1520-237-23-3  | Aviation Unit And Intermediate Maintenance For Army Models UH-60A, UH-60L, EH-60A, HH-60A, And HH-60L Helicopters Chapter 3 Troubleshooting Procedures                                                                                                                                                                        |
| TM 1-1520-237-23-4  | Aviation Unit And Intermediate Maintenance For Army Models UH-60A, UH-60L, EH-60A, HH-60A, And HH-60L Helicopters Chapter 4 Troubleshooting Procedures                                                                                                                                                                        |
| TM 1-1520-237-23-5  | Aviation Unit And Intermediate Maintenance For Army Models UH-60A, UH-60L, EH-60A, HH-60A, And HH-60L Helicopters Chapter 5 Maintenance Instructions                                                                                                                                                                          |
| TM 1-1520-237-23-6  | Aviation Unit And Intermediate Maintenance For Army Models UH-60A, UH-60L, EH-60A, HH-60A, And HH-60L Helicopters Chapter 6 Maintenance Instructions                                                                                                                                                                          |
| TM 1-1520-237-23-7  | Aviation Unit And Intermediate Maintenance For Army Models UH-60A, UH-60L, EH-60A, HH-60A, And HH-60L Helicopters Chapter 7 Maintenance Instructions                                                                                                                                                                          |
| TM 1-1520-237-23-8  | Aviation Unit And Intermediate Maintenance For Army Models UH-60A, UH-60L, EH-60A, HH-60A, And HH-60L Helicopters Chapter 8 Maintenance Instructions                                                                                                                                                                          |

---

**DEPARTMENT OF THE ARMY TECHNICAL MANUALS** - Continued

|                     |                                                                                                                                                       |
|---------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------|
| TM 1-1520-237-23-9  | Aviation Unit And Intermediate Maintenance For Army Models UH-60A, UH-60L, EH-60A, HH-60A, And HH-60L Helicopters Chapter 9 Maintenance Instructions  |
| TM 1-1520-237-23-10 | Aviation Unit And Intermediate Maintenance For Army Models UH-60A, UH-60L, EH-60A, HH-60A, And HH-60L Helicopters Chapter 10 Maintenance Instructions |
| TM 1-1520-237-23-11 | Aviation Unit And Intermediate Maintenance For Army Models UH-60A, UH-60L, EH-60A, HH-60A, And HH-60L Helicopters Chapter 11 Maintenance Instructions |
| TM 1-1520-237-23-12 | Aviation Unit And Intermediate Maintenance For Army Models UH-60A, UH-60L, EH-60A, HH-60A, And HH-60L Helicopters Chapter 12 Maintenance Instructions |
| TM 1-1520-237-23-13 | Aviation Unit And Intermediate Maintenance For Army Models UH-60A, UH-60L, EH-60A, HH-60A, And HH-60L Helicopters Chapter 13 Maintenance Instructions |
| TM 1-1520-237-23-14 | Aviation Unit And Intermediate Maintenance For Army Models UH-60A, UH-60L, EH-60A, HH-60A, And HH-60L Helicopters Chapter 14 Maintenance Instructions |
| TM 1-1520-237-23-15 | Aviation Unit And Intermediate Maintenance For Army Models UH-60A, UH-60L, EH-60A, HH-60A, And HH-60L Helicopters Chapter 15 Maintenance Instructions |
| TM 1-1520-237-23-16 | Aviation Unit And Intermediate Maintenance For Army Models UH-60A, UH-60L, EH-60A, HH-60A, And HH-60L Helicopters Chapter 16 Maintenance Instructions |
| TM 1-1520-237-23-17 | Aviation Unit And Intermediate Maintenance For Army Models UH-60A, UH-60L, EH-60A, HH-60A, And HH-60L Helicopters Chapter 17 Maintenance Instructions |
| TM 1-1520-237-23-18 | Aviation Unit And Intermediate Maintenance For Army Models UH-60A, UH-60L, EH-60A, HH-60A, And HH-60L Helicopters Chapter 18 Maintenance Instructions |
| TM 1-1520-237-23-19 | Aviation Unit And Intermediate Maintenance For Army Models UH-60A, UH-60L, EH-60A, HH-60A, And HH-60L Helicopters Chapter 19 Maintenance Instructions |
| TM 1-1520-237-23-20 | Aviation Unit And Intermediate Maintenance For Army Models UH-60A, UH-60L, EH-60A, HH-60A, And HH-60L Helicopters Chapter 20 Supporting Information   |
| TM 1-1520-253-CL    | Operator's And Crewmember's Checklist Army Models HH-60A Helicopter HH-60L Helicopter                                                                 |
| TM 1-1520-253-MTF   | Maintenance Test Flight Manual HH-60A Helicopter HH-60L Helicopter                                                                                    |
| TM 1-1520-253-10    | Operator's Manual For HH-60A Helicopter HH-60L Helicopter                                                                                             |
| TM 1-1520-253-13&P  | Operator's Aviation Unit And Intermediate Maintenance Manual For Army Model HH-60A And HH-60L Helicopter Medical Equipment                            |

---

**DEPARTMENT OF THE ARMY TECHNICAL MANUALS** - Continued

|                     |                                                                                                                                                                                                                                                                                                                                                                                              |
|---------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| TM 1-1520-265-23    | Aviation Unit Maintenance (AVUM) And Aviation Intermediate Maintenance (AVIM) Manual Nondestructive Inspection Procedures For H-60 Helicopter Series                                                                                                                                                                                                                                         |
| TM 1-1680-320-13&P  | Aviation Unit And Intermediate Maintenance (Including Repair Parts And Special Tools List) For High Performance Rescue Hoist Assembly Part No. 42305R1, (NSN 1680-01-058-3671)                                                                                                                                                                                                               |
| TM 1-2840-248-23    | Aviation Unit And Intermediate Maintenance Manual For Engine, Aircraft Turboshaft Models T700-GE-700, T700-GE-701, T700-GE-701C, T700-GE-701D/CC                                                                                                                                                                                                                                             |
| TM 1-2840-248-23P   | Aviation Unit And Intermediate Maintenance Repair Parts And Special Tools List (Including Depot Maintenance Repair Parts And Special Tools) For Engine Assembly, T700-GE-700, PN 6035TOOG01, (NSN 2840-01-070-1003)(TO 2J-T700-4)                                                                                                                                                            |
| TM 1-4920-475-13&P  | Operator's Unit And Direct Support Maintenance Manual Including Repair Parts And Special Tools List For Fuel Cell Corrosion Inspection (FCCI) Kit (P/N 1011688)                                                                                                                                                                                                                              |
| TM 1-6625-724-13&P  | Operator's, Aviation Unit, And Intermediate Maintenance Manual, Including Repair Parts And Special Tools List For Test Set, Aviation Vibration Analyzer (AVA) With Version 7.01 PN 29313107 (NSN 6625-01-282-3746)                                                                                                                                                                           |
| TM 5-315            | Firefighting And Rescue Procedures In Theaters Of Operations                                                                                                                                                                                                                                                                                                                                 |
| TM 9-1095-208-13&P  | Operator's, Unit, And Direct Support Maintenance For Dispenser, Mine: M139, For Ground Volcano 5-Ton Mounting Kit, And Volcano UH-60A And Uh-60L                                                                                                                                                                                                                                             |
| TM 9-1377-200-20    | Unit Maintenance Manual For Cartridges, Cartridge Actuated Devices, And Propellant Actuated Devices                                                                                                                                                                                                                                                                                          |
| TM 11-1520-237-23P  | Aviation Unit And Intermediate Avionics Maintenance Repair Parts And Special Tool List For Helicopters, Utility Tactical Transport UH-60A NSN 1520-02-035-0266 UH-60L NSN 1520-01-298-4532 HH-60A NSN 1520-01-459-9468 HH-60L NSN 1520-01-471-6743                                                                                                                                           |
| TM 11-1520-237-23-1 | Aviation Unit And Intermediate Maintenance Manual UH-60A Utility Helicopter (NSN 1520-01-035-0266) (EIC:RSA), UH-60L Utility Helicopter (1520-01-298-4532) (EIC:RSM), HH-60A Medical Evacuation Helicopter (1520-01-459-9468 (EIC:N/A), And HH-60L Medical Evacuation Helicopter (NSN 1520-01-471-6743) Volume No. 1 UH-60A/L General Information, Navigational, And Command Instrument Sets |
| TM 11-1520-237-23-2 | Aviation Unit And Intermediate Maintenance Manual UH-60A Utility Helicopter (NSN 1520-01-035-0266) (EIC:RSA), UH-60L Utility Helicopter (1520-01-298-4532) (EIC:RSM), HH-60A Medical Evacuation Helicopter (1520-01-459-9468 (EIC:N/A), And HH-60L Medical Evacuation Helicopter (NSN 1520-01-471-6743) Volume No. 2 UH-60A/L Automatic Flight Control Set                                   |



---

**DEPARTMENT OF THE ARMY TECHNICAL MANUALS** - Continued

|                     |                                                                                                                                                                                                                                                                                                                                                                                                            |
|---------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| TM 11-1520-237-23-3 | Aviation Unit And Intermediate Maintenance Manual UH-60A Utility Helicopter (NSN 1520-01-035-0266) (EIC:RSA), UH-60L Utility Helicopter (1520-01-298-4532) (EIC:RSM), HH-60A Medical Evacuation Helicopter (1520-01-459-9468 (EIC:N/A), And HH-60L Medical Evacuation Helicopter (NSN 1520-01-471-6743) Volume No. 3 UH-60A/L Communication Sets                                                           |
| TM 11-1520-237-23-4 | Aviation Unit And Intermediate Maintenance Manual UH-60A Utility Helicopter (NSN 1520-01-035-0266) (EIC: RSA), UH-60L Utility Helicopter (1520-01-298-4532) (EIC:RSM),HH-60A Medical Evacuation Helicopter (1520-01-459-9468 (EIC:N/A), And HH-60L Medical Evacuation Helicopter (NSN 1520-01-471-6743) Volume No. 4 UH-60A/L Aircraft Survivability Equipment                                             |
| TM 11-1520-237-23-5 | Aviation Unit And Intermediate Maintenance Manual UH-60A Utility Helicopter (NSN 1520-01-035-0266) (EIC:RSA), UH-60L Utility Helicopter (1520-01-298-4532) (EIC:RSM), HH-60A Medical Evacuation Helicopter (1520-01-459-9468 (EIC:N/A), And HH-60L Medical Evacuation Helicopter (NSN 1520-01-471-6743) Volume No. 5 HH-60A General Information And Navigational Sets                                      |
| TM 11-1520-237-23-6 | Aviation Unit And Intermediate Maintenance Manual UH-60A Utility Helicopter (NSN 1520-01-035-0266) (EIC:RSA), UH-60L Utility Helicopter (1520-01-298-4532) (EIC:RSM), HH-60A Medical Evacuation Helicopter (1520-01-459-9468 (EIC:N/A), And HH-60L Medical Evacuation Helicopter (NSN 1520-01-471-6743) Volume No. 6 HH-60A Command Instrument Sets And Mission Equipment                                  |
| TM 11-1520-237-23-7 | Aviation Unit And Intermediate Maintenance Manual UH-60A Utility Helicopter (NSN 1520-01-035-0266) (EIC:RSA), UH-60L Utility Helicopter (1520-01-298-4532) (EIC:RSM), HH-60A Medical Evacuation Helicopter (1520-01-459-9468 (EIC:N/A), And HH-60L Medical Evacuation Helicopter (NSN 1520-01-471-6743) Volume No. 7 HH-60A Automatic Flight Control Set                                                   |
| TM 11-1520-237-23-8 | Aviation Unit And Intermediate Maintenance Manual UH-60A Utility Helicopter (NSN 1520-01-035-0266) (EIC:RSA), UH-60L Utility Helicopter (1520-01-298-4532) (EIC:RSM), HH-60A Medical Evacuation Helicopter (1520-01-459-9468 (EIC:N/A), And HH-60L Medical Evacuation Helicopter (NSN 1520-01-471-6743) Volume No. 8 HH-60A Communication Sets, Aircraft Survivability Equipment, Appendixes, And Glossary |
| TM 11-1520-249-23-1 | Aviation Unit And Intermediate Maintenance Avionics General Information Manual For EH-60A Helicopter (NSN 1520-01-082-0686) (EIC:RSB)                                                                                                                                                                                                                                                                      |
| TM 11-1520-249-23-2 | Aviation Unit And Intermediate Maintenance, Avionics Fault Isolation Procedures Manual For EH-60A Helicopter (NSN 1520-01-082-0686) (EIC:RSB)                                                                                                                                                                                                                                                              |
| TM 11-1520-249-23-3 | Aviation Unit And Intermediate Maintenance For Avionics Maintenance Task Manual For EH-60A Helicopter (NSN 1520-01-082-0686) (EIC:RSB)                                                                                                                                                                                                                                                                     |
| TM 11-1520-249-23P  | Aviation Unit And Intermediate Maintenance Repair Parts And Special Tools List For Army Model EH-60A Helicopter System Electronic Configuration                                                                                                                                                                                                                                                            |

---

**DEPARTMENT OF THE ARMY TECHNICAL MANUALS** - Continued

---

|                       |                                                                                                                                                                                                                                                                                                                                                                     |
|-----------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| TM 11-5855-300-23&P   | Aviation Unit And Intermediate Maintenance Manual Including Repair Parts And Special Tools List For Heads Up Display AN/AVS-7(V)1 (NSN 5855-01-424-2284) AN/AVS-7(V)7 (5855-01-459-5023) AN/AVS-7(V)8 (5855-01-459-5024) (EIC:N/A)                                                                                                                                  |
| TM 11-5865-200-12     | Operator's And Aviation Unit Maintenance Manual For Aviation Unit Maintenance (AVUM) Countermeasures Sets, AN/ALQ-144A(V)1 (NSN 5865-01-299-5859) And AN/ALQ-144A(V)3 (5865-01-299-5860)                                                                                                                                                                            |
| TM 11-5865-200-34-1   | Intermediate Direct Support And Intermediate General Support Maintenance Manual For Aviation Intermediate Maintenance (AVIM) For Countermeasures Sets AN/ALQ-144A(V)1 (NSN 5865-01-299-5859) And AN/ALQ-144A(V)3 (NSN 5865-01-299-5860)                                                                                                                             |
| TM 11-6140-203-14-1   | Operator's, Organizational, Direct Support, And General Support Maintenance Manual For Aircraft And Nonaircraft Nickel-Cadmium Batteries (General)                                                                                                                                                                                                                  |
| TM 11-6140-203-14-4&P | Operator's, Organizational, Direct Support And General Support Maintenance (Including Repair Parts And Special Tools Lists) For Nickel-Cadmium Battery, BB-693A/U (NSN 6140-01-072-3123)                                                                                                                                                                            |
| TM 11-6140-203-23&P   | Aviation Unit And Intermediate Maintenance Manual (Including Repairs Parts And Special Tools List) For Aircraft Sealed Lead-Acid Batteries (SLAB) And Nickel-Cadmium Batteries (NiCAD) D8565/11-1, BB-432B/A, BB-433A/A, BB-476/A, BB-558/A, BB-678A/A, BB-708/U, BB-176/A                                                                                          |
| TM 32-5865-012-10     | Operation Instructions For Special Purpose Countermeasures System, AN/ALQ-151(V)2, (NSN 5865-01-132-1303) (EIC: L55)                                                                                                                                                                                                                                                |
| TM 38-250             | Preparing Hazardous Materials For Military Air Shipments                                                                                                                                                                                                                                                                                                            |
| TM 43-0104            | General Use Of Rosan Fasteners                                                                                                                                                                                                                                                                                                                                      |
| TM 55-1500-322-24     | Maintenance Of Aeronautical Antifriction Bearings For Organizational, Intermediate And Depot Maintenance Levels                                                                                                                                                                                                                                                     |
| TM 55-1500-323-24     | Installation Practices For Aircraft Electric And Electronic Wiring                                                                                                                                                                                                                                                                                                  |
| TM 55-1500-342-23     | Army Aviation Maintenance Engineering Manual For Weight And Balance                                                                                                                                                                                                                                                                                                 |
| TM 55-1500-345-23     | Painting And Marking Of Army Aircraft                                                                                                                                                                                                                                                                                                                               |
| TM 55-1730-229-12     | Operator And Organizational Maintenance Manual Power Unit, Aviation, Multi-Output GTED Electrical, Hydraulic, Pneumatic (AGPU) Wheel Mounted, Self-Propelled, Towable AC 400Hz, 3ph, 0.8Pf, 115/200V, 30Kw, DC 28, vdc 700 Amps, Pneumatic 60 lbs/min. At 40 PSIG Hydraulic 15 GPM At 33 PSIG. DOD Model Mep-360A, Class Precise, Hertz 400, (NSN 1730-01-144-1897) |
| TM 55-2620-200-24     | Inspection, Maintenance Instructions, Storage, And Disposition Of Aircraft Tires And Inner Tubes                                                                                                                                                                                                                                                                    |
| TM 55-2835-208-23     | Aviation Unit And Intermediate Maintenance Gas Turbine Engine (Auxiliary Power Unit - APU) Model T-62T-40-1 Part Numbers 116305-100 And 116305-200 (NSN 2835-01-083-9978) And (2835-01-166-9129)                                                                                                                                                                    |

---

**DEPARTMENT OF THE ARMY TECHNICAL MANUALS - Continued**

|                     |                                                                                                                                                                               |
|---------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| TM 55-2835-209-23   | Aviation Unit And Aviation Intermediate Maintenance, Engine Assembly, Gas Turbine (GTCP36-150 (BH)) PN 3800480-1 (NSN 2835-01-337-3670)                                       |
| TM 55-4920-402-13&P | Operator's Aviation Unit And Intermediate Maintenance Manual (Including Repair Parts And Special Tools Lists) For Vibrex Balancing Kit, Part No. B4591 (NSN 4920-01-040-7816) |
| TM 750-244-1-2      | Procedures For The Destruction Of Life Support Equipment To Prevent Enemy Use                                                                                                 |
| TM 750-244-1-5      | Procedures For The Destruction Of Aircraft And Associated Equipment To Prevent Enemy Use                                                                                      |

**DEPARTMENT OF THE NAVY TECHNICAL MANUALS**

|                   |                                                                                                                                               |
|-------------------|-----------------------------------------------------------------------------------------------------------------------------------------------|
| NAVAIR 17-15BAD-1 | Operation And Maintenance Instructions With Illustrated Parts Breakdown Naval Aircraft And Naval Aircraft Support Equipment Storage Batteries |
|-------------------|-----------------------------------------------------------------------------------------------------------------------------------------------|

**END OF WORK PACKAGE**



---

## UNIT LEVEL

### MAINTENANCE ALLOCATION CHART (MAC)

---

## INTRODUCTION

### Aviation Maintenance Allocation Chart

This MAC assigns maintenance functions in accordance with the Aviation Maintenance concept for Army aviation. These maintenance levels, Aviation Unit Maintenance (AVUM), Aviation Intermediate Maintenance (AVIM), and Depot Maintenance are depicted in the MAC as:

AVUM, which corresponds to an O Code in the Repair Parts and Special Tools List (RPSTL).

AVIM, which corresponds to an F Code in the Repair Parts and Special Tools List (RPSTL).

DEPOT, which corresponds to a D Code in the Repair Parts and Special Tools List (RPSTL)

The maintenance to be done below depot and in the field is described as follows:

### Aviation Unit Maintenance (AVUM)

AVUM activities will be staffed and equipped to perform high frequency "On-Aircraft" maintenance tasks required to retain or return aircraft systems to a serviceable condition. The maintenance capability of the AVUM will be governed by the Maintenance Allocation Chart (MAC) and limited by the amount and complexity of Ground Support Equipment (GSE), facilities required, authorized manning strength, and critical skills available. The range and quantity of authorized spare modules/components will be consistent with the mobility requirements dictated by the air mobility concept. (Assignments of maintenance tasks to divisional company size aviation units will consider the overall maintenance capability of the division, the requirement to conserve personnel and equipment resources, and air mobility requirements.)

**Company Size Aviation Units.** Perform those tasks which consist primarily of preventive maintenance repair and replacement functions associated with sustaining a high level of aircraft operational readiness. Perform maintenance inspections and servicing to include preflight, daily, intermediate, periodic (or phased), and special inspections, as authorized by the MAC or higher headquarters. Identify the cause of equipment/system malfunctions using applicable technical manual troubleshooting instructions, Built-In-Test Equipment (BITE), installed aircraft instruments, or Test, Measurement, and Diagnostic Equipment (TMDE). Replace worn or damaged modules/components that do not require complex adjustments or system alignment and which can be removed/installed with available skills, tools, and ground support equipment. Perform operational and continuity checks and make minor repairs to the electrical system. Inspect, service and make operational, capacity, and pressure checks to hydraulic systems. Perform servicing, functional adjustments, and minor repair/replacement to the flight control, propulsion, power train and fuel systems. Accomplish airframe repair that does not require extensive disassembly, jiggling, or alignment. The manufacture of airframe parts will be limited to those items which can be made with tools and equipment found in current air mobile tool and shop sets. Evacuate unserviceable modules/components and end items beyond repair capability of AVUM to the support AVIM.

**Less than Company Size Aviation Units.** Aviation elements organic to brigade, group, battalion headquarters, and detachment size units are normally small and have less than 10 aircraft assigned. Maintenance tasks performed by these units will be those which can be accomplished by the aircraft crew chief or assigned aircraft repairman and will normally be limited to preventive maintenance, inspections, servicing, spot painting, module/component fault diagnosis, and replacement of selected modules/components. Repair functions will normally be accomplished by the support AVIM unit

### Aviation Intermediate Maintenance (AVIM)

Provides mobile, responsive "one-stop" maintenance support. (Maintenance functions which are not conducive to sustaining air mobility will be assigned to depot maintenance).

---

**INTRODUCTION** - Continued

May perform all maintenance functions authorized to be done at AVUM. Repair of equipment for return to user will emphasize support or operational readiness requirements. Authorized maintenance includes replacement and repair of modules/components and end items which can be done efficiently with available skills, tools, and equipment.

Establishes the Direct Exchange (DX) program for AVUM units by repairing selected items for return to stock when such repairs cannot be done at the AVUM level.

Inspects, troubleshoots, performs diagnostic tests, repairs, adjusts, calibrates, and aligns aircraft system modules/components. AVIM units will have capability to determine the serviceability of specified modules/components removed prior to the expiration of the Time Between Overhaul (TBO) or finite life. Module/component disassembly and repair will support the DX program and will normally be limited to tasks requiring cleaning and the replacement of seals, fittings, and items of common hardware. Airframe repair and fabrication of parts will be limited to those maintenance tasks which can be done with available tools and test equipment. Unserviceable repairable modules/components and end items which are beyond the capability of AVIM to repair will be evacuated to Depot Maintenance.

Performs aircraft weight and balance inspections and other special inspections which exceed AVUM capability.

Provides quick response maintenance support, including aircraft recovery and air evacuation, on-the-job training, and technical assistance through the use of mobile maintenance contact teams.

Maintains authorized operational readiness float aircraft.

Provides collection and classification services for serviceable/unserviceable materiel.

Operates a cannibalization activity in accordance with AR 710-2 (Supply Policy Below the Wholesale Level) and DA PAM 710-2-2 (Supply Support Activity System Manual Procedures). (The aircraft maintenance company within the maintenance battalion of a division will do AVIM functions consistent with air mobility requirements and conservation of personnel and equipment resources. Additional intermediate maintenance support will be provided by the supporting non-divisional AVIM unit.)

**Use of the MAC****NOTE**

Approved item names are used throughout the MAC. Generic terms/nomenclatures (if any) are expressed in parentheses and are not to be considered as official terminology.

This MAC assigns maintenance functions to the lowest level of maintenance, based on past experience and these considerations:

- Skills available
- Work time required
- Tools and test equipment required and/or available.

Only the lowest level of maintenance authorized to perform a maintenance function is indicated. If the lowest maintenance level cannot perform all tasks of any single maintenance function (e.g., test, repair), then the higher maintenance level(s) that can accomplish additional tasks will also be indicated.

A maintenance function assigned to a maintenance level will automatically be authorized to be performed at any higher maintenance level.

A maintenance function that cannot be done at the assigned level of maintenance for any reason may be evacuated to the next higher maintenance level. Higher maintenance levels will perform the maintenance functions of lower maintenance levels when required by the commander who has the authority to direct such tasking.

---

**INTRODUCTION** - Continued

The assignment of a maintenance function will not be construed as authorization to carry the related repair parts or spares in stock. Information to requisition or otherwise secure the necessary repair parts will be as specified in the associated RPSTL.

Normally there will be no deviation from the assigned level of maintenance. In cases of operational necessity, at the request of a lower maintenance level and on a one-time basis, transfer of maintenance functions to the lower level may be accomplished by specific authorization of the maintenance officer of the higher level of maintenance to which the function is assigned. The special tools, equipment, etc. required by the lower level of maintenance to perform this function will be furnished by the maintenance level to which the function is assigned. This transfer of a maintenance function to a lower maintenance level does not relieve the higher maintenance level of the responsibility of the function. The higher level of maintenance will provide technical supervision and inspection of the function being performed at the lower level.

**Maintenance Functions**

Maintenance functions will be limited to and defined as follows:

**Inspect.** To determine the serviceability of an item by comparing its physical, mechanical, and/or electrical characteristics with established standards through examination (e.g., by sight, sound, or feel).

**Test.** To verify serviceability by measuring the mechanical, pneumatic, hydraulic, or electrical characteristics of an item and comparing those characteristics with prescribed standards.

**Service.** Operations required periodically to keep an item in proper operating condition, i.e., to clean (includes decontaminate, when required), to preserve, to drain, to paint, or to replenish fuel, lubricants, chemical fluids, or gases.

**Adjust.** To maintain or regulate, within prescribed limits, by bringing into proper or exact position, or by setting the operating characteristics to specified parameters

**Align.** To adjust specified variable elements of an item to bring about optimum or desired performance

**Calibrate.** To determine and cause corrections to be made or to be adjusted on instruments of test, measuring, and diagnostic equipment used in precision measurement. Consists of comparisons of two instruments, one of which is a certified standard of known accuracy, to detect and adjust any discrepancy in the accuracy of the instrument being compared

**Remove/Install.** To remove and install the same item when required to perform service or other maintenance functions. Install may be the act of emplacing, seating, or fixing into position a spare, repair part, or module (component or assembly) in a manner to allow the proper functioning of an equipment or system.

**Replace.** To remove an unserviceable item and install a serviceable counterpart in its place. "Replace" is authorized by the MAC and assigned maintenance level is shown as the third position code of the Source, Maintenance, and Recoverability (SMR) code.

**Repair.** The application of maintenance services, including fault location/troubleshooting, removal/installation, disassembly/assembly procedures, and maintenance actions to identify troubles and restore serviceability to an item by correcting specific damage, fault, malfunction, or failure in a part, subassembly, module (component or assembly), end item, or system

**INTRODUCTION** - Continued**NOTE**

The following definitions are applicable to the "repair" maintenance function:

Services. Inspect, test, service, adjust, align, calibrate, and/or replace.

Fault location/troubleshooting. The process of investigating and detecting the cause of equipment malfunctioning; the act of isolating a fault within a system or Unit Under Test (UUT)

Disassembly/assembly. The step-by-step taking apart (or breakdown) of a spare/functional group coded item to the level of its least component identified as maintenance significant (i.e., assigned an SMR code) for the level of maintenance under consideration.

Actions. Welding, grinding, riveting, straightening, facing, machining, and/or resurfacing.

**Overhaul.** That maintenance effort (service/action) necessary to restore an item to a completely serviceable/operational condition as prescribed by maintenance standards in appropriate technical publications. Overhaul is normally the highest degree of maintenance done by the Army. Overhaul does not normally return an item to like new condition

**Rebuild.** Those services/actions necessary for the restoration of unserviceable equipment to a like new condition in accordance with original manufacturing standards. Rebuild is the highest degree of materiel maintenance applied to Army equipment. The rebuild operation includes the act of returning to zero those age measurements (e.g., hours/miles) considered in classifying Army equipments/components

**Explanation of Columns in the MAC**

Columns (1) and (2) - Functional Groups. The functional groupings in the sample below identify maintenance significant components, assemblies, subassemblies, and modules with the next higher assembly.

| Group Number | System                                                                                                                                                                                      | Group Number | System                                                                                                                                           |
|--------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------|--------------------------------------------------------------------------------------------------------------------------------------------------|
| 04           | POWER PLANT                                                                                                                                                                                 |              |                                                                                                                                                  |
| 0401         | ENGINE, GENERAL Servicing, handling inspection requirements, overhaul and retirement schedules. External lines and hoses. (As applicable.)                                                  | 0405         | ACCESSORY GEAR BOX (ACCESSORY SECTION MODULE) Input and output gears, seals, chip detector, housings, drive shaft, bearings.                     |
| 0402         | COMPRESSOR SECTION (COLD SECTION MODULE) Rotor, blades, vanes, impeller, stators, inlet guide vanes, mainframe, particle separator, bleed valve, bearings, seals, external lines and hoses. | 0406         | FUEL SYSTEM Fuel control, fuel boost pump, governors, fuel filter assembly, sequence valve, fuel manifold, fuel nozzle, external lines and hoses |



**INTRODUCTION** - Continued

| <b>Group Number</b> | <b>System</b>                                                                                                                                          | <b>Group Number</b> | <b>System</b>                                                                                                                                                                               |
|---------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 0403                | COMBUSTION SECTION (HOT SECTION MODULE)<br>Liners, nozzles, stators, rotor, seals, couplings, blades.                                                  | 0407                | ELECTRICAL SYSTEM<br>Electrical control units, exciters, thermocouples, ignition harness, electrical cables, history record, torque over speed sensor, Np sensor, external lines and hoses. |
| 0404                | POWER-TURBINE (POWER TURBINE MODULE) Nozzles, rotors, blades, exit guide vanes, exhaust frame, drive shaft, bearings, seals, external lines and hoses. | 0408                | OIL SYSTEM Tanks, oil filter, oil cooler, lube and scavenger pumps, oil filter bypass sensor, external lines and hoses.                                                                     |

Column (3) Maintenance Function. Column (3) lists the functions to be performed on the items listed in column (2).

Column (4) Maintenance Level. The maintenance levels AVUM, AVIM, and DEPOT are listed on the MAC with individual columns that include the work times for maintenance functions at each maintenance level. Work time presentations such as "0.1" indicate the average time (expressed in manhours in whole hours or decimals) it requires a maintenance level to perform a specified maintenance function. If a work time has not been established, the columnar presentation will indicate "--". Maintenance levels higher than the level of maintenance indicated are authorized to perform the indicated function

Column (5) Tools and Equipment Reference Code. Column (5) specifies, by code, those common tool sets (not individual tools), common TMDE, and special tools, special TMDE, and special support equipment required to perform the designated function

Column (6) Remarks Code. When applicable, this column contains a letter code, in alphabetical order, which is keyed to the remarks.

**Explanation of Columns in the Tools and Test Equipment Requirements**

Column (1) Tool or Test Equipment Reference Code. The tool or test equipment reference code correlates with a code used in column (5) of the MAC. An asterisk, "\*" following the Tool or Test Equipment Reference Code indicates that the tool is also included in the UH-60 Peculiar Ground Support Equipment Deployment Support Kit (PGSE DSK), NSN: 1560-01-531-0523, which is fielded as a supplemental issue to the AVUM SET NO 2, or the AVIM TOOL CRIB.

Column (2) Maintenance Level. The lowest level of maintenance authorized to use the tool or test equipment.

Column (3) Nomenclature. Name or identification of the tool or test equipment.

Column (4) National Stock Number (NSN). The NSN of the tool or test equipment.

Column (5) Tool Number. The manufacturer's part number.

**Explanation of columns in the Remarks**

Column (1) Remarks Code. The code recorded in column (6) of the MAC.

**INTRODUCTION** - Continued

Column (2) Remarks. This column lists information pertinent to the maintenance function being performed as indicated in the MAC.

**END OF WORK PACKAGE**

**UNIT LEVEL**  
**MAINTENANCE ALLOCATION CHART**

**MAINTENANCE ALLOCATION CHART**

**Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters.**

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION                                           | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|--------------------------------------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                                              |                                | AVUM<br>(0)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 0                      | "Aircraft System EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L" | INSPECT                        | 1.9                      |             |              |                                     | D                      |
|                        |                                                              | TEST                           | 1.0                      |             |              |                                     |                        |
|                        |                                                              | REPLACE                        | 0.3                      |             |              |                                     |                        |
|                        |                                                              | REPAIR                         | 0.7                      |             |              |                                     |                        |
|                        |                                                              | OVERHAUL                       |                          |             | --           |                                     |                        |
| 01                     |                                                              |                                |                          |             |              |                                     |                        |
| 0101                   | Clean                                                        |                                | 2.5                      |             |              | 121 191                             |                        |
| 0102                   | Moor                                                         |                                | 0.3                      |             |              | 188                                 | B                      |
| 0103                   | Tow                                                          |                                | 0.3                      |             |              | 121 187                             | B                      |
| 0104                   | Jack                                                         |                                | 0.8                      |             |              | 121 194 195                         |                        |
| 0105                   | Hoist                                                        |                                | 0.5                      |             |              |                                     | B                      |
|                        |                                                              |                                |                          | 0.5         |              |                                     |                        |
| 0106                   | Protective Covers                                            | REPLACE                        | 0.8                      |             |              | 189 190 191                         |                        |
| 0107                   | Fold/Spread Main Rotor Blades                                |                                | 0.8                      |             |              | 117 189 190                         |                        |
| 0108                   | Fold/Spread Tail Rotor Blades                                |                                | 0.8                      |             |              | 117 196                             |                        |

## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION     | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                        |                                | AVUM<br>(O)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 0109                   | Fold/Spread Tail Pylon |                                | 0.6                      |             |              | 161 192 193                         |                        |
| 0110                   | Preservation           |                                | 1.0                      |             |              | 70                                  | B                      |
| 0111                   | Weight and Balance     |                                |                          | --          |              | 108                                 |                        |
| 0112                   | Spot Painting          |                                | 0.5                      |             |              |                                     |                        |
| 0113                   | Sub-Assembly Painting  |                                |                          |             | 0.5          |                                     |                        |
| 0114                   | Complete Painting      |                                |                          |             | 48.0         |                                     |                        |
| 0115                   | Transport              |                                | 14.3                     |             |              | 82 189 190<br>192 193               |                        |
| 02                     | Airframe Systems       | INSPECT                        | 2.0                      |             |              | 117 121                             |                        |
| 0201                   | Nose Section           | INSPECT                        | 0.4                      |             |              |                                     |                        |
|                        |                        | REPLACE                        | --                       |             |              | 117 121                             | B                      |
|                        |                        | REPAIR                         | 1.2                      |             |              | 117 121                             | B                      |
|                        |                        |                                |                          | 5.3         |              | 37 105 114                          | B                      |
|                        |                        |                                |                          |             | --           |                                     |                        |
| 020101                 | Nose Door Assembly     | INSPECT                        | 0.3                      |             |              |                                     | C                      |
|                        |                        | ADJUST                         | 0.4                      |             |              | 117 121                             | B                      |
|                        |                        | REPLACE                        | 1.3                      |             |              | 105 117 121<br>137                  |                        |
|                        |                        | SERVICE                        | 1.5                      |             |              |                                     |                        |
|                        |                        | REPAIR                         | 1.8                      |             |              | 37 105 114                          |                        |
|                        |                        |                                |                          | 2.4         |              | 37 117                              | B                      |

## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION                                      | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|---------------------------------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                                         |                                | AVUM<br>(0)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 020102                 | "Cockpit Doors, LH/<br>RH"                              | INSPECT                        | 0.3                      |             |              |                                     |                        |
|                        |                                                         | ADJUST                         | 1.1                      |             |              | 117 121                             |                        |
|                        |                                                         | REPLACE                        | 0.4                      |             |              | 117 121                             | B                      |
|                        |                                                         | REPAIR                         | 2.0                      |             |              | 21 37 120<br>121                    | B                      |
|                        |                                                         |                                |                          | 2.3         |              | 37 105 114<br>116                   | B                      |
| 02010201               | Cockpit Doors Jettison<br>Components                    | REPLACE                        | 0.7                      |             |              | 1 21 117                            |                        |
| 02010202               | Window Assembly and<br>Vent Window                      | REPLACE                        | 0.8                      |             |              | 21 117 132                          |                        |
| 02010203               | Hinge Fittings and<br>Support                           | REPLACE                        | 1.1                      |             |              | 117                                 |                        |
|                        |                                                         | REPAIR                         | 0.6                      |             |              | 116 117 154                         |                        |
| 020103                 | Glare Shield                                            |                                |                          | 1.1         |              | 117                                 |                        |
|                        |                                                         | REPLACE                        | 0.8                      |             |              | 117                                 | B                      |
| 02010301               | Glare Shield Lamps<br>(See Functional<br>Groups 091003) | REPAIR                         | 1.6                      |             |              |                                     |                        |
|                        |                                                         |                                |                          |             |              |                                     |                        |
| 020104                 | Instrument Panel                                        | REPLACE                        | 7.6                      |             |              | 4 21 115<br>117 121                 | B                      |
|                        |                                                         | REPAIR                         | 1.4                      |             |              | 37 117                              |                        |

## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION                          | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|---------------------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                             |                                | AVUM<br>(O)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 020105                 | Avionics Compartment Cover                  | REPLACE                        | 0.2                      |             |              | 117                                 |                        |
| 02010501               | Center Console Extension                    | REPAIR                         |                          | 0.5         |              | 114 117 121                         |                        |
|                        |                                             | REPLACE                        | 1.0                      |             |              | 114 117 121                         |                        |
| 020106                 | "Vibration Absorber, Nose (Spring Type)"    | INSPECT                        | 0.2                      |             |              |                                     |                        |
|                        |                                             | REPLACE                        | 0.8                      |             |              | 114 117                             |                        |
|                        |                                             | REPAIR                         | 0.9                      |             |              | 1 4 20 21                           |                        |
|                        |                                             |                                |                          | 1.6         |              | 1 21 106<br>114                     |                        |
|                        |                                             | ADJUST                         | 1.2                      |             |              | 21 117                              |                        |
| 020106A                | "Vibration Absorber, Nose (Box Frame)"      | REPLACE                        | 0.6                      |             |              | 114 117                             |                        |
|                        |                                             | REPAIR                         | 0.8                      |             |              | 1 4 20 21                           |                        |
|                        |                                             | ADJUST                         | 1.2                      |             |              | 21 117                              |                        |
|                        |                                             | INSPECT                        | 0.2                      |             |              |                                     |                        |
| 020107                 | Cockpit Windows and Windshield Installation | INSPECT                        | 0.2                      |             |              |                                     | C                      |
|                        |                                             | TEST                           | 0.2                      |             |              | 114 121                             | B                      |
|                        |                                             | REPLACE                        | 5.5                      |             |              | 114 121 170                         |                        |
|                        |                                             | SERVICE                        | 0.1                      |             |              |                                     |                        |
| 020108                 | Seat Installation Pilot and Copilot         | INSPECT                        | 0.5                      |             |              |                                     |                        |

## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION                                     | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|--------------------------------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                                        |                                | AVUM<br>(0)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 02010801               | Restraint System Pilot and Copilot Seat                | REPLACE                        | 2.0                      |             |              | 4 21 105<br>114 117 121             | B                      |
|                        |                                                        | REPAIR                         | 2.3                      |             |              | 4 21 117                            |                        |
|                        |                                                        | SERVICE                        | 0.4                      |             |              |                                     |                        |
|                        |                                                        | ADJUST                         | 0.3                      |             |              | 117                                 |                        |
|                        |                                                        | INSPECT                        | 0.2                      |             |              |                                     |                        |
| 02010802               | Tubes Straps and Supports Pilot and Copilot Seat       | REPLACE                        | 0.7                      |             |              | 4 21 114<br>117 121 128             |                        |
|                        |                                                        | REPAIR                         | 1.3                      |             |              | 4 21 117                            | B                      |
|                        |                                                        | SERVICE                        | 0.4                      |             |              |                                     |                        |
|                        |                                                        | INSPECT                        | 0.5                      |             |              |                                     |                        |
|                        |                                                        | REPLACE                        | 1.4                      |             |              | 4 21 105<br>114 116                 |                        |
| 02010803               | Seat Track Rollers and Bearings Pilot and Copilot Seat | ADJUST                         | 0.3                      |             |              | 117                                 | B                      |
|                        |                                                        | INSPECT                        | 0.1                      |             |              |                                     |                        |
|                        |                                                        | REPLACE                        | 3.4                      |             |              | 4 21 105<br>114 117 121             | B                      |
| 02010804               | "Armored Wing, Pilot and Copilot Seat"                 | REPAIR                         | 0.2                      |             |              | 117 154                             |                        |
|                        |                                                        | INSPECT                        | 0.1                      |             |              |                                     |                        |
|                        |                                                        | REPLACE                        | 3.4                      |             |              | 105 114 117<br>121 132              | B                      |

## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION                                                            | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|-------------------------------------------------------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                                                               |                                | AVUM<br>(O)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 0202                   | Mid-Fuselage Section                                                          | REPAIR                         | 0.2                      |             |              | 117 154                             |                        |
| 020201                 | Troop/Gunners Seat<br>(UH-60A and UH-60L)                                     | INSPECT                        | 0.2                      |             |              |                                     | F                      |
|                        |                                                                               | REPLACE                        | 1.1                      |             |              | 117                                 |                        |
|                        |                                                                               | REPAIR                         | 1.3                      |             |              | 117                                 |                        |
|                        |                                                                               | SERVICE                        | 0.5                      |             |              |                                     |                        |
| 02020101               | "Restraint System,<br>Troop/Gunners Seat<br>(UH-60A and UH-60L) "             | INSPECT                        | 0.2                      |             |              |                                     | F                      |
|                        |                                                                               | REPLACE                        | 0.9                      |             |              | 21 117                              |                        |
|                        |                                                                               | TEST                           | 0.2                      |             |              |                                     |                        |
| 02020102               | "Energy Attenuators,<br>Troop/Gunners Seat<br>(UH-60A and UH-60L) "           | INSPECT                        | 0.2                      |             |              |                                     | F                      |
|                        |                                                                               | REPLACE                        | 1.3                      |             |              | 21 117                              |                        |
| 02020103               | "Supports, Upper and<br>Lower, Troop/Gunners<br>Seat (UH-60A and<br>UH-60L) " | INSPECT                        | 0.1                      |             |              |                                     | F                      |
|                        |                                                                               | REPLACE                        | 1.3                      |             |              | 117                                 |                        |
| 020202                 | Mission Operator Seat<br>Assembly (EH-60A)                                    | INSPECT                        | 0.2                      |             |              |                                     | G                      |
|                        |                                                                               | REPLACE                        | 1.1                      |             |              |                                     |                        |
|                        |                                                                               | REPAIR                         | 13.3                     |             |              | 105 121 117                         |                        |



## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION                                               | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|------------------------------------------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                                                  |                                | AVUM<br>(0)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 02020201               | Operator Seat Track Assembly (EH-60A)                            | SERVICE                        | 0.4                      |             |              |                                     |                        |
|                        |                                                                  | INSPECT                        | 0.5                      |             |              | 105 114 117<br>121                  | G                      |
|                        |                                                                  | REPLACE                        | 1.5                      |             |              |                                     |                        |
|                        |                                                                  | REPAIR                         | 3.0                      |             |              |                                     |                        |
| 020203                 | "Gunnery Window, Forward and Aft (UH-60A and UH-60L)"            | INSPECT                        | 0.2                      |             |              | 114 121                             | B                      |
|                        |                                                                  | REPLACE                        | 1.7                      |             |              | 114 121                             | B                      |
|                        |                                                                  | REPAIR                         | 0.9                      |             |              | 37 93 105<br>114 121                | B                      |
|                        |                                                                  | SERVICE                        | 0.2                      |             |              |                                     |                        |
| 02020301               | "Gunnery Window, Latch Assembly (UH-60A and UH-60L)"             | REPLACE                        | 0.6                      |             |              | 114                                 |                        |
|                        |                                                                  | REPAIR                         | 0.3                      |             |              | 117                                 |                        |
| 02020302               | "Gunnery Window, Upper/Lower Track Assembly (UH-60A and UH-60L)" | INSPECT                        | 0.3                      |             |              |                                     |                        |
|                        |                                                                  | REPLACE                        | 1.4                      |             |              | 114 117                             |                        |
|                        |                                                                  | REPAIR                         | 0.9                      |             |              | 117 132                             |                        |
|                        |                                                                  | SERVICE                        | 0.2                      |             |              |                                     |                        |
| 020204                 | Troop/Cargo Door Assembly                                        | INSPECT                        | 0.5                      |             |              |                                     |                        |
|                        |                                                                  | REPLACE                        | 2.3                      |             |              | 114 117                             |                        |
|                        |                                                                  | REPAIR                         | 2.6                      |             |              | 114 117                             |                        |

## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION                                               | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|------------------------------------------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                                                  |                                | AVUM<br>(O)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 02020401               | Troop/Cargo Door<br>Windows                                      | SERVICE                        | 0.1                      |             |              |                                     |                        |
|                        |                                                                  | INSPECT                        | 0.1                      |             |              |                                     |                        |
|                        |                                                                  | REPLACE                        | 0.3                      |             |              | 117                                 |                        |
|                        |                                                                  | REPAIR                         | 1.2                      |             |              |                                     |                        |
|                        |                                                                  | REPAIR                         |                          | 1.3         |              | 114 117                             |                        |
| 0202040101             | "Jettison Windows,<br>Jettison Mechanism"                        | SERVICE                        | 0.2                      |             |              |                                     |                        |
|                        |                                                                  | REPLACE                        | 0.2                      |             |              |                                     |                        |
|                        |                                                                  | REPAIR                         | 0.9                      |             |              | 117                                 |                        |
|                        |                                                                  | TEST                           | 0.1                      |             |              |                                     |                        |
|                        |                                                                  | TEST                           |                          | 1.4         |              | 117 121                             |                        |
| 02020402               | Troop/Cargo Door As-<br>sembly Upper and<br>Lower Track Assembly | INSPECT                        | 0.3                      |             |              |                                     |                        |
|                        |                                                                  | REPLACE                        | 1.8                      |             |              | 117                                 |                        |
|                        |                                                                  | REPAIR                         | 1.3                      |             |              | 117                                 |                        |
| 02020403               | Troop/Cargo Door As-<br>sembly Latch<br>Mechanism                | INSPECT                        | 0.2                      |             |              |                                     |                        |
|                        |                                                                  | REPLACE                        | 0.7                      |             |              | 117                                 |                        |
|                        |                                                                  | REPAIR                         | 0.4                      |             |              | 117                                 |                        |
| 02020404               | Troop/Cargo Door<br>Seals                                        | REPLACE                        | 1.1                      |             |              | 117                                 |                        |

## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION                | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|-----------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                   |                                | AVUM<br>(0)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 02020405               | Troop/Cargo Door Fairing          | REPLACE                        | 0.6                      |             |              | 117                                 |                        |
|                        |                                   | REPAIR                         | 1.4                      |             |              | 37 117                              |                        |
| 020205                 | Soundproofing Panel Installation  | SERVICE                        | 0.5                      |             |              |                                     |                        |
|                        |                                   | INSPECT                        | 0.2                      |             |              | 117 121                             |                        |
|                        |                                   | REPLACE                        | 1.6                      |             |              | 117 121                             | B                      |
|                        |                                   | REPAIR                         | 0.7                      |             |              | 37 105                              | B                      |
|                        |                                   |                                |                          | 1.4         |              | 37 105                              |                        |
| 02020501               | Drip Pan Main Transmission        | INSPECT                        | 0.2                      |             |              |                                     |                        |
|                        |                                   | REPLACE                        | 0.7                      |             |              | 117 121                             |                        |
|                        |                                   | REPAIR                         | 1.2                      |             |              | 37 105                              |                        |
|                        |                                   |                                |                          | 1.9         |              | 37 105                              |                        |
| 020206                 | Cabin Floor Panel Installation    | INSPECT                        | 0.3                      |             |              |                                     |                        |
|                        |                                   | INSPECT                        | 2.6                      |             |              | 117                                 | AG                     |
|                        |                                   | REPLACE                        | 2.6                      |             |              | 117 121                             |                        |
|                        |                                   | REPAIR                         | 1.6                      |             |              | 37 105                              |                        |
| 02020601               | "Access Panel, Cargo Hook"        | REPLACE                        | 0.4                      |             |              | 117 121                             |                        |
|                        |                                   | REPAIR                         | 1.6                      |             |              | 114                                 |                        |
| 020207                 | Interface Panel Assembly (EH-60A) | INSPECT                        | --                       |             |              | 99 117                              | G                      |

## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION                                      | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE               | (6)<br>REMARKS<br>CODE |
|------------------------|---------------------------------------------------------|--------------------------------|--------------------------|-------------|--------------|---------------------------------------------------|------------------------|
|                        |                                                         |                                | AVUM<br>(0)              | AVIM<br>(F) | DEPOT<br>(D) |                                                   |                        |
| 020208                 | Flight Test Receptacle<br>(EH-60A)                      | REPLACE                        | --                       |             |              | 99 117                                            |                        |
|                        |                                                         | REPAIR                         | --                       |             |              |                                                   |                        |
|                        |                                                         | INSPECT                        | --                       |             |              |                                                   |                        |
|                        |                                                         | REPLACE                        | --                       |             |              |                                                   |                        |
|                        |                                                         | REPAIR                         | --                       |             |              |                                                   |                        |
| 020209                 | Head Liner Assembly<br>(EH-60A)                         | INSPECT                        | --                       |             |              | 117                                               | G                      |
|                        |                                                         | REPLACE                        | --                       |             |              |                                                   |                        |
|                        |                                                         | REPAIR                         | --                       |             |              |                                                   |                        |
|                        |                                                         | INSPECT                        | --                       |             |              |                                                   |                        |
|                        |                                                         | REPLACE                        | --                       |             |              |                                                   |                        |
| 020210                 | "Support Assembly,<br>Head Liner (EH-60A)<br>"          | REPAIR                         | --                       |             |              | 124                                               | G                      |
|                        |                                                         | INSPECT                        | --                       |             |              |                                                   |                        |
|                        |                                                         | REPLACE                        | --                       |             |              |                                                   |                        |
|                        |                                                         | REPAIR                         | --                       |             |              |                                                   |                        |
|                        |                                                         | INSPECT                        | --                       |             |              |                                                   |                        |
| 020211                 | "Vibration Absorber,<br>Mid-Fuselage (Spring<br>Type) " | REPLACE                        | --                       |             |              | 117                                               | G                      |
|                        |                                                         | REPAIR                         | --                       |             |              |                                                   |                        |
|                        |                                                         | INSPECT                        | 0.2                      |             |              |                                                   |                        |
|                        |                                                         | REPLACE                        | 0.8                      |             |              |                                                   |                        |
|                        |                                                         | REPAIR                         | 0.9                      |             |              |                                                   |                        |
| 020211A                | "Vibration Absorber,<br>Mid-Fuselage (Box<br>Frame)"    |                                |                          | 1.6         |              | 114 117<br>1 4 20 21<br>1 21 106<br>114<br>21 117 |                        |
|                        |                                                         | INSPECT                        | 0.2                      |             |              |                                                   |                        |
|                        |                                                         | ADJUST                         | 1.2                      |             |              |                                                   |                        |
|                        |                                                         | REPAIR                         |                          |             |              |                                                   |                        |
|                        |                                                         | REPLACE                        |                          |             |              |                                                   |                        |

## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION                               | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|--------------------------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                                  |                                | AVUM<br>(0)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 020212                 | "Vibration Absorber,<br>Mid-Fuselage (Roll)"     | REPLACE                        | 0.6                      |             |              | 114 117                             |                        |
|                        |                                                  | REPAIR                         | 0.8                      |             |              | 1 4 20 21                           |                        |
|                        |                                                  | ADJUST                         | 1.2                      |             |              | 21 117                              |                        |
|                        |                                                  | REPLACE                        | 0.5                      |             |              | 114 117                             |                        |
|                        |                                                  | REPAIR                         | 0.8                      |             |              | 1 4 20 21                           |                        |
| 020213                 | External Power<br>Receptacle                     |                                |                          | 1.1         |              | 4 21 117<br>128                     |                        |
|                        |                                                  | INSPECT                        | 0.6                      |             |              |                                     |                        |
|                        |                                                  | REPAIR                         | 0.7                      |             |              | 114 117                             |                        |
| 020214                 | Main Landing Gear<br>(MLG) Fitting As-<br>sembly | REPAIR                         | 2.6                      |             |              | 117 154                             |                        |
| 020215                 | "Jackpad, Mid-<br>Fuselage "                     | INSPECT                        | 0.1                      |             |              |                                     |                        |
|                        |                                                  | REPLACE                        | 0.2                      |             |              | 117 128                             |                        |
| 0203                   | Wire Strike Protection<br>System (WSPS)          | INSPECT                        | 0.1                      |             |              |                                     |                        |
|                        |                                                  | REPLACE                        | 0.6                      |             |              | 20 21 117<br>130                    |                        |
| 0204                   | Landing Gear Fairings<br>and Steps               | INSPECT                        | 0.2                      |             |              |                                     |                        |
|                        |                                                  | REPAIR                         |                          |             |              | 37 117                              |                        |
| 020401                 | Drag Beam Support<br>Fairings                    | INSPECT                        | 0.1                      |             |              |                                     |                        |

## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION                                                                           | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|----------------------------------------------------------------------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                                                                              |                                | AVUM<br>(O)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 020402                 | Step Assembly                                                                                | REPLACE                        | 0.6                      |             |              | 117                                 |                        |
|                        |                                                                                              | REPAIR                         | 1.1                      |             |              | 115 117                             |                        |
|                        |                                                                                              | REPLACE                        | 0.7                      |             |              | 21 117                              |                        |
|                        |                                                                                              | REPAIR                         | 0.5                      |             |              | 154                                 |                        |
| 020403                 | Cabin Steps                                                                                  | REPLACE                        | 0.4                      |             |              | 21 117                              |                        |
| 020404                 | "Fairing, Upper/Lower,<br>Landing Gear (w/wo<br>External Stores Sup-<br>port System (ESSS))" | REPLACE                        | 0.3                      |             |              | 117                                 |                        |
| 020405                 | "Fairing, External<br>Stores Support System<br>(ESSS) Fitting and<br>Platform"               | REPAIR                         | 1.1                      |             |              | 117                                 |                        |
|                        |                                                                                              | REPLACE                        | 0.5                      |             |              | 117                                 |                        |
|                        |                                                                                              | REPAIR                         | 1.2                      |             |              | 117                                 |                        |
| 020406                 | "Cap Fairing, External<br>Stores Support System<br>(ESSS) Fitting "                          | REPLACE                        | 0.3                      |             |              | 117                                 |                        |
|                        |                                                                                              | REPAIR                         | 1.1                      |             |              | 117                                 |                        |
| 0205                   | Main Rotor Pylon                                                                             | INSPECT                        | 0.5                      |             |              |                                     | H                      |
| 020501                 | "Sliding Cover, Main<br>Rotor Pylon"                                                         | INSPECT                        | 0.5                      |             |              |                                     | I                      |
| 02050101               | "Latch Mechanism,<br>Sliding Cover"                                                          | REPLACE                        | 0.9                      |             |              | 117                                 |                        |
|                        |                                                                                              | REPAIR                         | 1.3                      |             |              | 37 93 117                           |                        |
|                        |                                                                                              | INSPECT                        | 0.2                      |             |              |                                     |                        |
|                        |                                                                                              |                                |                          |             |              |                                     |                        |

## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION                         | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|--------------------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                            |                                | AVUM<br>(0)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 02050102               | "Vertical Rollers, Sliding Cover"          | REPLACE                        | 0.9                      |             |              | 117                                 |                        |
|                        |                                            | ADJUST                         | 0.3                      |             |              | 117                                 |                        |
|                        |                                            | INSPECT                        | 0.2                      |             |              |                                     |                        |
| 02050103               | "Horizontal Rollers, Sliding Cover"        | REPLACE                        | 0.9                      |             |              | 117                                 |                        |
|                        |                                            | INSPECT                        | 0.2                      |             |              |                                     |                        |
|                        |                                            | REPLACE                        | 0.6                      |             |              | 117                                 |                        |
| 020502                 | Work Platform                              | INSPECT                        | 0.2                      |             |              |                                     |                        |
|                        |                                            | REPLACE                        | 0.5                      |             |              | 117                                 |                        |
|                        |                                            | REPAIR                         | 0.7                      |             |              | 37 117                              |                        |
| 020503                 | Air Inlet Fairings                         | INSPECT                        | 0.1                      |             |              |                                     |                        |
|                        |                                            | REPLACE                        | 0.5                      |             |              | 117                                 |                        |
|                        |                                            | REPAIR                         | 0.7                      |             |              | 37 117                              |                        |
| 020504                 | "APU Access Cover, Main Rotor Pylon"       | INSPECT                        | 0.3                      |             |              |                                     |                        |
|                        |                                            | REPLACE                        | 1.8                      |             |              | 117                                 |                        |
|                        |                                            | REPAIR                         | 1.3                      |             |              | 117                                 |                        |
| 020505                 | "APU Exhaust Fairing, Main Rotor Pylon"    | INSPECT                        | 0.1                      |             |              |                                     |                        |
|                        |                                            | REPLACE                        | 0.4                      |             |              | 117                                 |                        |
| 020506                 | "Oil Cooler Access Door, Main Rotor Pylon" | INSPECT                        | 0.5                      |             |              |                                     |                        |

## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION                                                | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|-------------------------------------------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                                                   |                                | AVUM<br>(0)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 020507                 | "Infrared (IR) Jammer,<br>Fairing and Panel,<br>Main Rotor Pylon" | REPLACE                        |                          |             |              | 117                                 |                        |
|                        |                                                                   | INSPECT                        | 0.2                      |             |              |                                     |                        |
| 020508                 | Rear Pylon Fairing                                                | REPLACE                        | 0.8                      |             |              | 117                                 |                        |
|                        |                                                                   | INSPECT                        | 0.2                      |             |              |                                     |                        |
|                        |                                                                   | REPLACE                        | 1.4                      |             |              | 117                                 |                        |
|                        |                                                                   | REPAIR                         | 1.7                      |             |              | 117                                 |                        |
| 020509                 | "Transmission Covers,<br>Main Rotor Pylon,<br>Forward/Aft/LH/RH"  | REPLACE                        | 0.3                      |             |              | 117                                 |                        |
|                        |                                                                   | REPAIR                         |                          |             |              | 37 105                              |                        |
| 020510                 | "Engine Cowling,<br>Main, Rotor Pylon<br>(MRP)"                   | INSPECT                        | 0.2                      |             |              |                                     |                        |
|                        |                                                                   | REPLACE                        | 1.7                      |             |              | 117                                 |                        |
|                        |                                                                   | REPAIR                         | 0.9                      |             |              | 117                                 |                        |
|                        |                                                                   |                                |                          | 2.2         |              | 117                                 |                        |
| 02051001               | "Engine Cowling,<br>Latch Mechanism"                              | INSPECT                        | 0.1                      |             |              |                                     |                        |
|                        |                                                                   | REPLACE                        | 1.3                      |             |              | 117                                 |                        |
| 020511                 | APU Panel                                                         | INSPECT                        | 0.1                      |             |              |                                     |                        |
|                        |                                                                   | REPLACE                        | 2.3                      |             |              | 117                                 |                        |
| 020512                 | Yaw Pushrod Boot and<br>Shroud                                    | INSPECT                        | 0.1                      |             |              |                                     |                        |



## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION                                             | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|----------------------------------------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                                                |                                | AVUM<br>(0)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 0206                   | Transition Section                                             | REPLACE                        | 0.6                      |             |              | 117                                 |                        |
|                        |                                                                | INSPECT                        | 2.6                      |             |              |                                     | K AD                   |
| 020601                 | "Access Door, Transition Section (EH-60A, HH-60A, and HH-60L)" | INSPECT                        | 0.2                      |             |              |                                     | G                      |
|                        |                                                                | REPLACE                        | 1.7                      |             |              | 114 117                             |                        |
|                        |                                                                | REPAIR                         | 0.9                      |             |              | 114 117                             |                        |
|                        |                                                                | ADJUST                         | 0.4                      |             |              | 117                                 |                        |
|                        |                                                                | SERVICE                        | 0.1                      |             |              |                                     |                        |
| 020602                 | Fuel Sump Drain Door                                           | INSPECT                        | 0.1                      |             |              |                                     |                        |
|                        |                                                                | REPLACE                        | 0.3                      |             |              | 114 117                             |                        |
|                        |                                                                | REPAIR                         | 0.7                      |             |              | 114 117                             |                        |
| 020603                 | Gravity Refuel Door                                            | INSPECT                        | 0.1                      |             |              |                                     |                        |
|                        |                                                                | REPLACE                        | 0.3                      |             |              | 114 117                             |                        |
|                        |                                                                | REPAIR                         | 0.7                      |             |              | 114 117                             |                        |
| 020604                 | Pressure Refuel Door                                           | INSPECT                        | 0.1                      |             |              |                                     |                        |
|                        |                                                                | REPLACE                        | 0.3                      |             |              | 114 117                             |                        |
|                        |                                                                | REPAIR                         | 0.7                      |             |              | 114 117                             |                        |
| 020605                 | Pneumatic Start Door                                           | INSPECT                        | 0.1                      |             |              |                                     |                        |
|                        |                                                                | REPLACE                        | 0.3                      |             |              | 114 117                             |                        |
|                        |                                                                | REPAIR                         | 0.7                      |             |              | 114 117                             |                        |

## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION                                                              | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|---------------------------------------------------------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                                                                 |                                | AVUM<br>(O)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 020606                 | "Door Hinges, WL<br>210.0, WL 230.0, WL<br>250.0"                               | INSPECT                        | 0.1                      |             |              |                                     |                        |
|                        |                                                                                 | REPLACE                        | 0.3                      |             |              | 114 117                             |                        |
|                        |                                                                                 | REPAIR                         | 0.7                      |             |              | 114 117                             |                        |
| 020607                 | Shelving Installation                                                           | REPAIR                         | 1.5                      |             |              | 115 117                             |                        |
| 020608                 | Fuel Cell Corrosion<br>Inspection                                               | INSPECT                        |                          | 3.0         |              | 223                                 | AO                     |
| 0207                   | Tailcone Section                                                                | INSPECT                        | 0.7                      |             |              |                                     |                        |
| 020701                 | "Fairings, Drive Shaft<br>Cover"                                                | INSPECT                        | 0.1                      |             |              |                                     |                        |
|                        |                                                                                 | REPLACE                        | 0.3                      |             |              | 21 114 117                          |                        |
|                        |                                                                                 | REPAIR                         | 0.6                      |             |              | 37 114 117                          |                        |
| 020702                 | "Drive Shaft Supports,<br>STA 410.54, STA<br>470.98, STA 531.43,<br>STA 591.38" | INSPECT                        | 0.1                      |             |              |                                     |                        |
|                        |                                                                                 | REPLACE                        | 6.3                      |             |              | 114 117 185                         |                        |
|                        |                                                                                 | ALIGN                          | 2.4                      |             |              | 114 117 185                         |                        |
| 020703                 | Fairing Assembly Tail<br>Landing Gear                                           | INSPECT                        | 0.1                      |             |              |                                     |                        |
|                        |                                                                                 | REPLACE                        | 0.7                      |             |              | 117                                 |                        |
|                        |                                                                                 | REPAIR                         | 1.1                      |             |              | 117                                 |                        |
| 020704                 | Access Cover                                                                    | REPLACE                        | 0.3                      |             |              | 117                                 |                        |
| 020705                 | Jack Pad                                                                        | INSPECT                        | 0.1                      |             |              |                                     |                        |

## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION                                       | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|----------------------------------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                                          |                                | AVUM<br>(O)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 0208                   | Tail Rotor Pylon Assembly                                | REPLACE                        | 0.3                      |             |              | 117                                 | AM                     |
|                        |                                                          | INSPECT                        | 0.8                      |             |              |                                     |                        |
|                        |                                                          | REPLACE                        | 16.9                     |             |              | 4 21 66 96<br>115 117 128<br>130    |                        |
|                        |                                                          | REPAIR                         | 7.4                      |             |              |                                     |                        |
| 020801                 | "Trailing Edge Fairing/<br>Antenna, Tail Rotor<br>Pylon" | INSPECT                        | 0.1                      | 26.8        |              |                                     |                        |
|                        |                                                          | REPLACE                        | 0.3                      |             |              | 21 114 117<br>216                   |                        |
|                        |                                                          | REPAIR                         | 0.6                      |             |              | 37 114 117                          |                        |
| 020802                 | "Lower Pylon Fairing,<br>Tail Rotor Pylon"               | INSPECT                        | 0.1                      |             |              |                                     |                        |
|                        |                                                          | REPLACE                        | 0.4                      |             |              | 21 114 117                          |                        |
|                        |                                                          | REPAIR                         | 0.6                      |             |              | 37 114 117                          |                        |
| 020803                 | "Cambered Fairing,<br>Tail Rotor Pylon"                  | INSPECT                        | 0.1                      |             |              |                                     |                        |
|                        |                                                          | REPLACE                        | 0.5                      |             |              | 21 114 117                          |                        |
|                        |                                                          | REPAIR                         | 1.6                      |             |              | 37 114 117                          |                        |
| 020804                 | "Tail Rotor Gearbox<br>Fairing, Forward and<br>Aft"      | INSPECT                        | 0.1                      |             |              |                                     |                        |
|                        |                                                          | REPLACE                        | 0.9                      |             |              | 21 114 117                          |                        |

## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION                                      | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|---------------------------------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                                         |                                | AVUM<br>(O)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 020805                 | Stabilator/Tail Pylon<br>Fairing                        | REPAIR                         | 2.1                      |             |              | 37 114 117                          |                        |
|                        |                                                         | INSPECT                        | 0.1                      |             |              |                                     |                        |
|                        |                                                         | REPLACE                        | 0.3                      |             |              | 21 114 117                          |                        |
| 020806                 | "Leading Edge Fairing/<br>Antenna, Tail Rotor<br>Pylon" | REPAIR                         | 0.6                      |             |              | 37 114 117                          |                        |
|                        |                                                         | INSPECT                        | 0.1                      |             |              |                                     |                        |
|                        |                                                         | REPLACE                        | 0.3                      |             |              | 21 114 117                          |                        |
| 020807                 | Intermediate Gearbox<br>Fairing                         | REPAIR                         | 0.8                      |             |              | 37 114 117                          |                        |
|                        |                                                         | INSPECT                        | 0.1                      |             |              |                                     |                        |
|                        |                                                         | REPLACE                        | 0.9                      |             |              | 21 114 117                          |                        |
| 020808                 | Tail Rotor Pylon Steps                                  | REPAIR                         | 2.1                      |             |              | 37 114 117                          |                        |
|                        |                                                         | INSPECT                        | 0.1                      |             |              |                                     |                        |
|                        |                                                         | REPLACE                        | 0.8                      |             |              | 114 117                             |                        |
| 020809                 | "Tail Rotor Pylon,<br>Canted Hinge<br>Bulkhead"         | INSPECT                        | 0.6                      |             |              |                                     |                        |
|                        |                                                         | INSPECT                        |                          | 0.9         |              |                                     |                        |
|                        |                                                         | REPLACE                        |                          | 7.7         |              | 21 114 117                          |                        |
| 020810                 | "Tail Rotor Pylon, Ac-<br>tuator Attach Fitting"        | REPAIR                         | 8.1                      |             |              | 114 117                             |                        |
|                        |                                                         |                                |                          | 17.9        |              | 114 117                             |                        |
|                        |                                                         | INSPECT                        | 0.3                      |             |              |                                     | AD                     |

## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION                                           | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|--------------------------------------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                                              |                                | AVUM<br>(0)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 02081001               | "Tail Rotor Pylon, Ac-<br>tuator Attach Fitting<br>Bearings" | REPLACE                        | 1.7                      |             |              | 114 117                             | AD                     |
|                        |                                                              | REPAIR                         | 2.8                      |             |              | 114 117                             |                        |
|                        |                                                              | INSPECT                        | 0.3                      |             |              |                                     |                        |
| 0209                   | Stabilator Assembly                                          | REPLACE                        | 2.8                      |             |              | 114                                 | Q AF                   |
|                        |                                                              | INSPECT                        | 0.6                      |             |              | 21                                  |                        |
|                        |                                                              | REPLACE                        | 2.2                      |             |              | 114 117                             |                        |
|                        |                                                              | REPAIR                         | 4.9                      |             |              | 37 93 114<br>117                    |                        |
| 020901                 | "Tip Cap, Stabilator<br>Assembly"                            | OVERHAUL                       |                          |             | --           |                                     |                        |
|                        |                                                              | INSPECT                        | 0.3                      |             |              |                                     |                        |
|                        |                                                              | REPLACE                        | 1.0                      |             |              | 37 114 116<br>117                   |                        |
| 020903                 | "Hinge Fitting, Actua-<br>tor Attach Stabilator,<br>LH/RH"   | REPAIR                         | 4.0                      |             |              | 105 108 114                         | Q                      |
|                        |                                                              | INSPECT                        | 0.6                      |             |              |                                     |                        |
|                        |                                                              | REPLACE                        | 2.2                      |             |              | 114 117                             |                        |
| 020902                 | "Fitting, Actuator At-<br>tach, Stabilator"                  | REPAIR                         |                          | 2.0         |              | 105 108 114<br>154                  |                        |
|                        |                                                              | INSPECT                        | 0.6                      |             |              |                                     |                        |
|                        |                                                              | REPLACE                        |                          |             | 2.2          | 114 117                             |                        |
|                        |                                                              | REPAIR                         | 3.5                      |             |              | 114 117 171                         |                        |

## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION                          | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|---------------------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                             |                                | AVUM<br>(0)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 020904                 | Position Sensor Limit<br>Switch Assembly    | REPLACE                        | 1.3                      |             |              | 20 21 114<br>115                    |                        |
|                        |                                             | REPAIR                         |                          |             |              | 117                                 |                        |
|                        |                                             |                                |                          | 1.6         |              | 101 115                             |                        |
| 020905                 | "Grounding Strap, Sta-<br>bilator Actuator" | REPLACE                        | 0.4                      |             |              | 117                                 | L                      |
| 020906                 | Stabilator Actuator<br>Assembly             | INSPECT                        | 0.2                      |             |              |                                     | Q                      |
|                        |                                             | ADJUST                         | 1.6                      |             |              | 68 114 115<br>117 131               |                        |
|                        |                                             | REPLACE                        | 3.0                      |             |              | 21 96 114<br>115 117 130            |                        |
|                        |                                             | REPAIR                         | 2.1                      |             |              | 114 115 117<br>130 132              |                        |
|                        |                                             |                                |                          | 3.4         |              | 21 101 114<br>115 130               |                        |
|                        |                                             |                                |                          |             | --           |                                     |                        |
|                        |                                             | SERVICE                        | 0.3                      |             |              |                                     |                        |
| 02090601               | Stabilator Actuator                         | INSPECT                        |                          |             | 0.6          | 115                                 |                        |
|                        |                                             | REPAIR                         |                          |             | 4.8          | 115                                 |                        |
| 020907                 | Forward Fairing                             | REMOVE                         |                          |             | 1.7          | 117                                 |                        |
|                        |                                             | REPAIR                         |                          |             | 1.2          | 117                                 |                        |
| 03                     | Landing Gear Systems                        |                                |                          |             |              |                                     |                        |
| 0301                   | Main Landing Gear<br>Installation           | INSPECT                        | 0.3                      |             |              |                                     |                        |

## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION                                 | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|----------------------------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                                    |                                | AVUM<br>(0)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 030101                 | "Drag Beam and Axle<br>Assembly, LH/RH"            | INSPECT                        | 0.3                      |             |              |                                     | I AD                   |
|                        |                                                    | INSPECT                        | 0.2                      |             |              |                                     | AL                     |
|                        |                                                    | REPLACE                        | 1.2                      |             |              | 117 121                             |                        |
|                        |                                                    | REPAIR                         | 0.3                      |             |              | 117 121                             |                        |
| 03010101               | "Axle Assembly, LH/<br>RH"                         | INSPECT                        | 0.1                      |             |              |                                     |                        |
|                        |                                                    | REPLACE                        | 0.6                      |             |              | 117 121                             |                        |
| 03010102               | "Jackpad and Tie<br>Down Ring Drag<br>Beam, LH/RH" | INSPECT                        | 0.1                      |             |              |                                     |                        |
|                        |                                                    | REPLACE                        | 0.3                      |             |              | 117 121                             |                        |
| 03010103               | Support Fitting Bear-<br>ings Drag Beam            | INSPECT                        | 0.1                      |             |              |                                     |                        |
|                        |                                                    | REPLACE                        | 1.4                      |             |              | 117 121                             |                        |
| 03010104               | Weight-On-Wheels<br>(WOW) Switch Instal-<br>lation | INSPECT                        | 0.1                      |             |              |                                     | I                      |
|                        |                                                    | ADJUST                         | 0.8                      |             |              | 115 117                             |                        |
|                        |                                                    | REPLACE                        | 1.5                      |             |              | 115                                 |                        |
| 030102                 | "Shock Strut Assembly,<br>RH/LH"                   | INSPECT                        | 0.3                      |             |              |                                     |                        |
|                        |                                                    | SERVICE                        | 3.1                      |             |              | 14 117 121                          |                        |
|                        |                                                    | REPLACE                        | 2.7                      |             |              | 117 121                             |                        |
|                        |                                                    | REPAIR                         | 4.2                      |             |              | 117 121                             |                        |

## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION                             | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|------------------------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                                |                                | AVUM<br>(0)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 03010201               | Kneeling Valve                                 | SERVICE                        | 0.4                      | 3.6         | --           | 14 117 121                          |                        |
|                        |                                                | OVERHAUL                       |                          |             |              |                                     |                        |
|                        |                                                | SERVICE                        | 0.1                      |             |              |                                     |                        |
|                        |                                                | REPLACE                        | 1.9                      |             |              | 5 117 121                           |                        |
| 030103                 | "Wheel and Tire As-<br>sembly, LH/RH"          | REPAIR                         |                          | 0.8         |              | 103 117                             |                        |
|                        |                                                | INSPECT                        | 0.2                      |             |              |                                     |                        |
|                        |                                                | REPLACE                        | 1.2                      |             |              | 44 95 116<br>117 121 229            |                        |
| 03010301               | Main Landing Gear<br>(MLG) Wheel As-<br>sembly | SERVICE                        | 0.2                      |             |              |                                     |                        |
|                        |                                                | INSPECT                        | 0.4                      |             |              |                                     |                        |
|                        |                                                |                                |                          | 1.5         |              | 108 117                             |                        |
|                        |                                                | REPAIR                         | 3.5                      |             |              | 117 121                             |                        |
| 03010302               | Main Landing Gear<br>(MLG) Tire                |                                |                          | 2.8         |              | 96                                  |                        |
|                        |                                                | INSPECT                        | 0.2                      |             |              |                                     |                        |
|                        |                                                | REPLACE                        | 2.2                      |             |              | 117 121 229                         |                        |
|                        |                                                | SERVICE                        | 0.3                      |             |              | 44 95                               |                        |
| 0302                   | Main Landing Gear<br>(MLG) Brake System        | SERVICE                        | 1.7                      |             |              | 14                                  |                        |
| 030201                 | "Wheel Brake As-<br>sembly, LH/RH"             | INSPECT                        | 0.3                      |             |              |                                     |                        |



## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION         | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|----------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                            |                                | AVUM<br>(0)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 030202                 | Master Brake Cylinder      | REPLACE                        | 2.4                      |             |              | 117 121                             |                        |
|                        |                            | REPAIR                         |                          | 3.2         |              | 108 117                             |                        |
|                        |                            | INSPECT                        | 0.5                      |             |              |                                     |                        |
| 030203                 | Parking Brake Valve        | REPLACE                        | 2.3                      |             |              | 14 117                              |                        |
|                        |                            | REPAIR                         |                          | 3.0         |              | 14 46 103                           |                        |
|                        |                            | INSPECT                        | 0.3                      |             |              |                                     |                        |
| 03020301               | Switch Parking Brake Valve | TEST                           | 0.2                      |             |              |                                     |                        |
|                        |                            | REPLACE                        | 1.9                      |             |              | 14 117                              |                        |
|                        |                            | REPAIR                         |                          | 2.1         |              | 14 46 103                           |                        |
| 030204                 | Slave Mixer Valve          | TEST                           | 0.4                      |             |              |                                     |                        |
|                        |                            | REPLACE                        | 0.8                      |             |              | 115                                 |                        |
|                        |                            | ADJUST                         | 0.4                      |             |              |                                     |                        |
| 030205                 | Tubes and Hoses            | INSPECT                        | 0.1                      |             |              |                                     |                        |
|                        |                            | REPLACE                        | 1.8                      |             |              | 14 117                              |                        |
|                        |                            | REPAIR                         |                          | 2.2         |              | 14 46 103                           |                        |
| 030206                 | Valve and Handle Mechanism | REPLACE                        | 0.8                      |             |              | 117 121                             |                        |
|                        |                            | REPAIR                         | 0.4                      |             |              | 15                                  |                        |
| 0303                   | Tail Landing Gear          | REPLACE                        | 0.8                      |             |              |                                     |                        |
|                        |                            | INSPECT                        | 0.4                      |             |              |                                     |                        |

## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION                                    | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|-------------------------------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                                       |                                | AVUM<br>(0)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 030301                 | "Shock Strut Assembly,<br>Tail Landing Gear<br>(TLG)" | INSPECT                        | 0.3                      |             |              |                                     |                        |
|                        |                                                       | SERVICE                        | 2.9                      |             |              | 12 117 121                          |                        |
|                        |                                                       | REPLACE                        | 2.2                      |             |              | 117 121                             |                        |
|                        |                                                       | REPAIR                         | 4.1                      |             |              | 14 117 121                          |                        |
|                        |                                                       |                                |                          | 3.4         |              | 117 121                             |                        |
| 03030101               | Kneeling Valve                                        |                                |                          |             | --           |                                     |                        |
|                        |                                                       | SERVICE                        | 0.2                      |             |              |                                     |                        |
|                        |                                                       | REPLACE                        | 1.9                      |             |              | 17 117 121                          |                        |
| 030302                 | "Yoke Assembly, Tail<br>Landing Gear (TLG)"           | REPAIR                         |                          | 0.8         |              | 103 117                             |                        |
|                        |                                                       | INSPECT                        | 0.7                      |             |              |                                     |                        |
|                        |                                                       | REPLACE                        | 1.3                      |             |              | 117 121                             |                        |
| 030303                 | "Fork Assembly, Tail<br>Landing Gear (TLG)"           |                                |                          | 3.3         |              | 96                                  |                        |
|                        |                                                       | ADJUST                         | 0.6                      |             |              |                                     |                        |
|                        |                                                       | INSPECT                        | 0.7                      |             |              |                                     |                        |
|                        |                                                       | REPLACE                        | 1.3                      |             |              | 117 121                             |                        |
| 03030301               | Axle Assembly                                         | REPAIR                         | 1.5                      |             |              | 96 117 121                          |                        |
|                        |                                                       |                                |                          | 2.6         |              |                                     |                        |
|                        |                                                       |                                |                          |             | --           |                                     |                        |
| 03030301               | Axle Assembly                                         | REPLACE                        | 0.9                      |             |              | 117                                 |                        |

## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION                                                           | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|------------------------------------------------------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                                                              |                                | AVUM<br>(0)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 030304                 | "Wheel and Tire As-<br>sembly, Tail Landing<br>Gear (TLG)"                   | SERVICE                        | 0.3                      |             |              |                                     |                        |
|                        |                                                                              | INSPECT                        | 0.2                      |             |              |                                     |                        |
|                        |                                                                              | REPLACE                        | 1.2                      |             |              | 44 95 116<br>117 121 229            |                        |
| 03030401               | "Main Landing Gear<br>(MLG) Wheel As-<br>sembly, Tail Landing<br>Gear (TLG)" | SERVICE                        | 0.2                      |             |              |                                     |                        |
|                        |                                                                              | INSPECT                        | 0.4                      |             |              |                                     |                        |
|                        |                                                                              |                                |                          | 1.5         |              | 108 117                             |                        |
| 03030402               | Tail Landing Gear<br>(TLG) Tire                                              | REPAIR                         | 3.5                      |             |              | 117 121                             |                        |
|                        |                                                                              |                                |                          | 2.8         |              | 96                                  |                        |
|                        |                                                                              | INSPECT                        | 0.2                      |             |              |                                     |                        |
| 030305                 | Tail Wheel Lock<br>Installation                                              | REPLACE                        | 2.2                      |             |              | 117 121 229                         |                        |
|                        |                                                                              | SERVICE                        | 0.3                      |             |              | 44 95                               |                        |
|                        |                                                                              | INSPECT                        | 0.2                      |             |              |                                     |                        |
| 03030501               | Tail Landing Gear<br>(TLG) Lock Actuator<br>Assembly                         | INSPECT                        | 0.1                      |             |              |                                     |                        |
|                        |                                                                              | TEST                           | 0.1                      |             |              |                                     |                        |
|                        |                                                                              | REPLACE                        | 0.6                      |             |              | 117                                 |                        |
|                        |                                                                              | REPAIR                         |                          |             | --           |                                     |                        |

## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION                                    | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|-------------------------------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                                       |                                | AVUM<br>(0)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 03030502               | Tail Landing Gear<br>(TLG) Lock<br>Mechanism Assembly | INSPECT                        | 0.1                      |             |              |                                     |                        |
|                        |                                                       | REPLACE                        | 0.4                      |             |              | 117                                 |                        |
|                        |                                                       | SERVICE                        | 0.3                      |             |              |                                     |                        |
|                        |                                                       | SERVICE                        | 0.2                      |             |              |                                     |                        |
| 04                     | Powerplant Installation                               |                                |                          |             |              |                                     |                        |
| 0401                   | Engine Assembly                                       | INSPECT                        | 0.4                      |             |              |                                     |                        |
|                        |                                                       | REPLACE                        | 3.2                      |             |              | 52 57 64<br>115 117 118<br>214      |                        |
|                        |                                                       | TEST                           | 1.3                      |             |              |                                     |                        |
|                        |                                                       | SERVICE                        | 0.8                      |             |              |                                     | N                      |
|                        |                                                       | SERVICE                        | 1.6                      |             |              | 117                                 |                        |
| 040101                 | Demountable Power<br>Pack                             | OVERHAUL                       | 2.8                      |             |              |                                     |                        |
|                        |                                                       | OVERHAUL                       | 2.5                      |             |              |                                     |                        |
| 040102                 | Particle Separator<br>Blower                          | REPLACE                        | 0.9                      |             |              | 117                                 |                        |
| 040103                 | Fuel Boost Pump                                       | REPLACE                        | 0.7                      |             |              | 117                                 |                        |
| 040104                 | Hydromechanical<br>Control Unit (HMCU)                | REPLACE                        | 1.1                      |             |              | 117                                 |                        |
|                        |                                                       |                                |                          |             | --           |                                     |                        |
| 040105                 | History Recorder/<br>Counter                          | REPLACE                        | 0.5                      |             |              | 117                                 |                        |

## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION                                               | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|------------------------------------------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                                                  |                                | AVUM<br>(0)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 040106                 | Thermocouple As-<br>sembly                                       | REPLACE                        | 0.6                      |             |              | 117                                 |                        |
| 040107                 | Oil and Scavenger<br>Pump                                        | REPLACE                        | 1.6                      |             |              | 117                                 |                        |
| 040108                 | Bleed and Start                                                  | REPLACE                        | 0.8                      |             |              | 117                                 |                        |
| 040109                 | "Starter, Pneumatic<br>(See Functional Group<br>070101)"         |                                |                          |             |              |                                     |                        |
| 0402                   | Air Inlet                                                        | INSPECT                        | 0.2                      |             |              |                                     |                        |
|                        |                                                                  | REPLACE                        | 0.8                      |             |              | 117                                 |                        |
|                        |                                                                  | OVERHAUL                       | 0.2                      |             |              | 117                                 |                        |
|                        |                                                                  | OVERHAUL                       | 0.3                      |             |              | 117                                 |                        |
|                        |                                                                  | REPAIR                         | 0.6                      |             |              | 37                                  |                        |
| 040201                 | Anti-Icing Modulating<br>Valve (See Functional<br>Group 4010801) |                                |                          |             |              |                                     |                        |
| 0403                   | Engine Output Shaft                                              | INSPECT                        | 0.2                      |             |              | 21 117                              |                        |
|                        |                                                                  | ALIGN                          | 1.5                      |             |              |                                     | AP                     |
| 040301                 | "Engine Output Shaft<br>Assembly (70361-<br>08004-042, -043)"    | INSPECT                        | 0.2                      |             |              | 21 120                              | P                      |
|                        |                                                                  | REPLACE                        | 2.4                      |             |              | 116 117 122<br>172                  |                        |
|                        |                                                                  | REPAIR                         | 0.5                      |             |              | 117                                 |                        |
|                        |                                                                  |                                |                          |             | 0.5          |                                     |                        |

## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION                                      | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|---------------------------------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                                         |                                | AVUM<br>(0)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 040302                 | Engine Output Shaft<br>Assembly (70361-<br>08014-041)   | INSPECT                        | 0.2                      |             |              | 21 120                              | AQ                     |
|                        |                                                         | REPLACE                        | 2.4                      |             |              | 116 117 122<br>172                  |                        |
|                        |                                                         | REPAIR                         | 0.5                      |             |              | 117                                 |                        |
| 040303                 | Support Installation                                    |                                |                          |             |              |                                     |                        |
| 04030301               | Aft Mount Links                                         | INSPECT                        | 0.2                      |             |              | 96 114 117<br>135                   |                        |
|                        |                                                         | REPLACE                        | 2.7                      |             |              | 21 52 64<br>114 117                 |                        |
|                        |                                                         | REPAIR                         |                          |             | 1.2          | 117                                 |                        |
| 04030302               | Forward Support Tube<br>Assembly/Engine<br>Output Shaft | INSPECT                        |                          | 0.2         |              | 117                                 |                        |
|                        |                                                         | REPLACE                        | 2.2                      |             |              | 21 96 114<br>116 117 128            |                        |
|                        |                                                         | REPAIR                         | 2.5                      |             |              | 117                                 |                        |
| 0404                   | Exhaust Module                                          | INSPECT                        | 0.4                      |             |              |                                     | AP                     |
|                        |                                                         |                                |                          | 0.3         |              |                                     |                        |
|                        |                                                         | REPLACE                        | 1.1                      |             |              | 21 116 117<br>121                   |                        |
|                        |                                                         | REPAIR                         | 2.6                      |             |              | 116 117                             | AN                     |
|                        |                                                         |                                |                          | 4.2         |              | 117                                 |                        |
| 040401                 | Exhaust Ejector                                         | INSPECT                        | 0.1                      |             |              |                                     |                        |
|                        |                                                         |                                |                          | 0.2         |              |                                     |                        |

## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION                                                                                 | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|----------------------------------------------------------------------------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                                                                                    |                                | AVUM<br>(0)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 0405                   | Hover Infrared Sup-<br>pression System<br>(HIRSS)                                                  | REPLACE                        | 0.4                      |             |              | 96 117 121                          |                        |
|                        |                                                                                                    | REPAIR                         | 1.8                      |             |              | 114 117                             |                        |
|                        |                                                                                                    |                                |                          | 2.8         |              | 114 117                             |                        |
|                        |                                                                                                    | INSPECT                        | 0.2                      |             |              |                                     |                        |
| 040501                 | Module Assembly<br>Hover Infrared Sup-<br>pression System<br>(HIRSS)                               | INSPECT                        | 0.5                      |             |              |                                     |                        |
|                        |                                                                                                    | REPLACE                        | 2.6                      |             |              | 21 65 68 74<br>96                   |                        |
|                        |                                                                                                    | REPAIR                         |                          | 3.6         |              |                                     |                        |
|                        |                                                                                                    |                                |                          |             | 7.3          |                                     |                        |
| 040502                 | Hover Infrared Sup-<br>pression System<br>(HIRSS) Rear Panel<br>and Fairings                       | INSPECT                        | 0.1                      |             |              |                                     |                        |
| 040503                 | Hover Infrared Sup-<br>pression System<br>(HIRSS) Nacelle Fair-<br>ing and Attaching<br>Components | REPLACE                        | 0.9                      |             |              | 21 117 129                          |                        |
|                        |                                                                                                    | REPAIR                         | 3.6                      |             |              | 37 117                              |                        |
|                        |                                                                                                    | INSPECT                        | 0.2                      |             |              |                                     |                        |
|                        |                                                                                                    | REPLACE                        | 1.3                      |             |              | 117                                 |                        |
|                        |                                                                                                    | REPAIR                         | 0.9                      |             |              | 37 117                              |                        |

## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION                                                              | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|---------------------------------------------------------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                                                                 |                                | AVUM<br>(0)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 040504                 | Hover Infrared Sup-<br>pression System<br>(HIRSS) Suppressor<br>Core and Baffle | INSPECT                        | 0.7                      |             |              | 117                                 |                        |
|                        |                                                                                 | REPLACE                        | 2.9                      |             |              | 117                                 |                        |
| 040505                 | Hover Infrared Sup-<br>pression System<br>(HIRSS) Extender                      | INSPECT                        | 0.3                      |             |              |                                     |                        |
|                        |                                                                                 | REPLACE                        | 1.3                      |             |              | 117                                 |                        |
|                        |                                                                                 | ADJUST                         | 0.3                      |             |              | 117                                 |                        |
| 040506                 | Hover Infrared Sup-<br>pression System<br>(HIRSS) Bulkhead                      | REPAIR                         | 1.1                      |             |              | 114 117                             |                        |
| 0406                   | Engine Control Instal-<br>lation                                                |                                |                          |             |              |                                     |                        |
| 040601                 | Load Demand Rotary<br>Input                                                     | INSPECT                        | 0.1                      |             |              |                                     |                        |
|                        |                                                                                 |                                |                          | 0.3         |              |                                     |                        |
|                        |                                                                                 | REPLACE                        | 1.8                      |             |              | 117 214                             |                        |
| 040602                 | Power Available<br>Rotary Input                                                 | REPAIR                         |                          | 1.1         |              | 117                                 |                        |
|                        |                                                                                 | INSPECT                        | 0.1                      |             |              |                                     |                        |
|                        |                                                                                 |                                |                          | 0.3         |              |                                     |                        |
|                        |                                                                                 | REPLACE                        | 0.5                      |             |              | 117 214                             |                        |
|                        |                                                                                 | REPAIR                         |                          | 1.1         |              | 117                                 |                        |
| 040603                 | Engine Speed Control<br>Potentiometer                                           | REPLACE                        | 0.5                      |             |              |                                     |                        |



## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION                                        | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|-----------------------------------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                                           |                                | AVUM<br>(0)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 040604                 | Engine Control<br>Quadrant                                | INSPECT                        | 0.3                      |             |              |                                     |                        |
|                        |                                                           |                                |                          | 0.2         |              |                                     |                        |
|                        |                                                           | REPLACE                        | 3.2                      |             |              | 21 117                              |                        |
|                        |                                                           | REPAIR                         | 1.9                      |             |              | 21 98 115<br>117                    |                        |
|                        |                                                           |                                |                          | 1.1         |              | 98 115 117<br>214                   |                        |
|                        |                                                           | ADJUST                         | 0.9                      |             |              | 98 117                              |                        |
|                        |                                                           |                                |                          | 0.5         |              | 98 117                              |                        |
| 04060401               | "Switches, Engine<br>Control Quadrant"                    | REPLACE                        |                          | 2.2         |              | 115 117                             |                        |
| 040605                 | Engine Control Cable<br>Installation                      | REPAIR                         |                          | 0.6         |              | 117                                 |                        |
|                        |                                                           | ALIGN                          | 3.9                      |             |              | 117                                 |                        |
| 04060501               | Load Demand Push/<br>Pull Cable and Sup-<br>ports         | REPLACE                        | 0.9                      |             |              | 21 116 117                          |                        |
|                        |                                                           | INSPECT                        | 0.1                      |             |              |                                     |                        |
|                        |                                                           | REPAIR                         | 0.4                      |             |              |                                     |                        |
|                        |                                                           |                                |                          | 1.2         |              | 21 96 117<br>154 214                |                        |
| 04060502               | "Power Available Push/<br>Pull Cable, Engine<br>Fuselage" | INSPECT                        | 0.6                      |             |              |                                     |                        |
|                        |                                                           | REPLACE                        | 0.3                      |             |              | 21 116 117                          |                        |

## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION                     | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|----------------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                        |                                | AVUM<br>(0)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 04060503               | Fuel Selector Valve<br>Push/Pull Cable | INSPECT                        | 0.1                      | 1.2         |              | 21 96 117<br>154                    |                        |
|                        |                                        | REPAIR                         | 0.3                      |             |              |                                     |                        |
|                        |                                        | ALIGN                          | 1.6                      |             |              |                                     |                        |
|                        |                                        | REPLACE                        | 0.4                      |             |              |                                     |                        |
| 0407                   | Infrared (IR) Suppres-<br>sor Kit      | INSPECT                        | 0.1                      |             |              | 21 99 116<br>117                    |                        |
|                        |                                        | INSPECT                        | 0.7                      |             |              |                                     |                        |
|                        |                                        | REPLACE                        | 4.7                      |             |              |                                     |                        |
|                        |                                        | REMOVE                         | 3.8                      |             |              |                                     |                        |
| 05                     | Rotor Systems                          | REPAIR                         | 1.9                      |             |              | 21 66 74<br>114 117                 |                        |
|                        |                                        | ADJUST                         | 0.3                      |             |              |                                     |                        |
|                        |                                        | INSPECT                        | 0.4                      |             |              |                                     |                        |
|                        |                                        | SERVICE                        | 0.2                      |             |              |                                     |                        |
| 0501                   | Main Rotor Head and<br>Shaft Extension | INSPECT                        | 0.7                      |             |              | 66 74 114<br>117                    | C                      |
|                        |                                        | REPAIR                         | 1.9                      |             |              |                                     |                        |
|                        |                                        | ADJUST                         | 0.3                      |             |              |                                     |                        |
|                        |                                        | INSPECT                        | 0.4                      |             |              |                                     |                        |
| 0501                   | Main Rotor Head and<br>Shaft Extension | SERVICE                        | 0.2                      |             |              | 116 132<br>117                      | C AE                   |
|                        |                                        | INSPECT                        | 0.7                      |             |              |                                     |                        |
|                        |                                        | REPLACE                        | 7.3                      |             |              |                                     |                        |
|                        |                                        | SERVICE                        | 1.3                      |             |              |                                     |                        |

## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION           | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                              |                                | AVUM<br>(0)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 050101                 | Main Rotor Hub Assembly      | INSPECT                        | 0.7                      |             |              |                                     | P AD                   |
|                        |                              | REPAIR                         | 4.3                      |             |              | 64 72 82<br>108 117                 |                        |
|                        |                              | REPLACE                        | 60.0                     |             | 24.0         | 21 64 66 72<br>82 117 130<br>131    |                        |
| 050102                 | Spindle Assembly             | INSPECT                        | 3.8                      |             |              |                                     | AD AE                  |
|                        |                              |                                |                          | 1.8         |              |                                     |                        |
|                        |                              | REPLACE                        | 3.9                      |             |              | 66 67 117<br>128 130                |                        |
|                        |                              | REPAIR                         | 1.6                      |             |              | 117 132                             |                        |
| 05010201               | Horn Assembly                |                                |                          | 3.9         |              | 107 117 121                         |                        |
|                        |                              |                                |                          |             | 14.0         |                                     |                        |
|                        |                              | INSPECT                        | 0.3                      |             |              |                                     | AD AE                  |
|                        |                              | REPLACE                        | 1.8                      |             |              | 117                                 |                        |
| 05010202               | Elastomeric Bearing Assembly | REPAIR                         | 2.9                      |             |              |                                     |                        |
|                        |                              | INSPECT                        | 2.3                      |             |              |                                     | Q                      |
|                        |                              | REPAIR                         |                          | 3.2         |              | 27 107                              |                        |
| 05010203               | Anti-Flap Assembly           | REPLACE                        | 1.2                      |             |              | 117                                 |                        |
|                        |                              | INSPECT                        | 0.2                      |             |              |                                     |                        |
|                        |                              | REPLACE                        | 1.7                      |             |              | 64 67 117<br>128                    |                        |

## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION               | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|----------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                  |                                | AVUM<br>(0)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 05010204               | Droop Stop Assembly              | REPAIR                         | 0.5                      |             |              | 117                                 |                        |
|                        |                                  | INSPECT                        | 0.2                      |             |              |                                     |                        |
|                        |                                  | REPLACE                        | 0.6                      |             |              | 64 67 117<br>128                    |                        |
| 050103                 | "Damper Assembly,<br>Main Rotor" | REPAIR                         | 1.2                      |             |              | 117                                 |                        |
|                        |                                  | INSPECT                        | 0.3                      |             |              |                                     | Q AE                   |
|                        |                                  | REPLACE                        | 1.8                      |             |              | 5 117 128<br>130                    |                        |
|                        |                                  | REPAIR                         | 1.7                      |             |              | 5 21 117<br>133                     |                        |
|                        |                                  |                                |                          | 2.2         |              | 5 117 118<br>128 130 154            |                        |
| 050104                 | Pitch Control Rod                | SERVICE                        | 1.3                      |             |              |                                     |                        |
|                        |                                  | SERVICE                        | 1.7                      |             |              | 4 5 117 128                         |                        |
|                        |                                  | INSPECT                        | 0.2                      |             |              |                                     | Q                      |
|                        |                                  | REPLACE                        | 1.3                      |             |              | 106 117 128<br>130                  |                        |
|                        |                                  | REPAIR                         | 2.3                      |             |              | 106 130 133<br>134                  |                        |
| 050105                 | Swashplate Assembly              | ADJUST                         | 0.7                      |             |              | 117                                 |                        |
|                        |                                  | INSPECT                        | 0.4                      |             |              | 46                                  | AD                     |
|                        |                                  | REPLACE                        | 22.6                     |             |              | 4 21 64 66<br>106 117 130           |                        |
|                        |                                  | REPAIR                         | 4.5                      |             |              | 21 106 117<br>135                   |                        |

## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION              | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE      | (6)<br>REMARKS<br>CODE |
|------------------------|---------------------------------|--------------------------------|--------------------------|-------------|--------------|------------------------------------------|------------------------|
|                        |                                 |                                | AVUM<br>(O)              | AVIM<br>(F) | DEPOT<br>(D) |                                          |                        |
| 05010501               | Rotating Scissors As-<br>sembly | SERVICE                        | 0.4                      | 3.8         | 4.2          | 106                                      | Q                      |
|                        |                                 | INSPECT                        | 0.4                      |             |              | 120 135                                  |                        |
|                        |                                 | REPLACE                        | 1.8                      |             |              | 96 117 120<br>130 135                    |                        |
|                        |                                 | REPAIR                         | 3.2                      |             |              | 117 120 130                              |                        |
| 050106                 | Bifilar Assembly                |                                |                          | 1.4         |              | 96 106 117<br>130 154                    | Q                      |
|                        |                                 | INSPECT                        | 0.6                      |             |              |                                          |                        |
|                        |                                 | REPLACE                        | 7.4                      |             |              | 21 64 65 96<br>117 120 128<br>130 154    |                        |
|                        |                                 | REPAIR                         | 3.5                      |             |              | 96 120 130<br>197 198                    |                        |
| 050107                 | "Blade Assembly, Main<br>Rotor" |                                |                          | 2.8         | --           | 106 154                                  | Q P I<br>AD AK AJ      |
|                        |                                 | SERVICE                        | 0.2                      |             |              |                                          |                        |
|                        |                                 | INSPECT                        | 0.4                      |             |              |                                          |                        |
|                        |                                 | INSPECT                        |                          | 0.6         |              | 57                                       |                        |
|                        |                                 | REPLACE                        | 1.9                      |             |              | 39 64 67 75<br>76 117 128<br>136 199 230 |                        |

## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION             | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|--------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                |                                | AVUM<br>(0)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 05010701               | Tip Cap Assembly               | REPAIR                         | 7.8                      | 15.2        | --           | 27 37 39 96<br>117 137 199          | AE                     |
|                        |                                |                                |                          |             |              | 27 37 39<br>106 154 199             |                        |
|                        |                                |                                |                          |             |              | 27 37 199                           |                        |
|                        |                                | SERVICE                        | 0.7                      |             |              | 21 37 39 57<br>117                  |                        |
|                        |                                | ADJUST                         | 1.9                      |             |              | 128 138 139                         |                        |
|                        |                                | TEST                           | 2.7                      |             |              | 38 57                               |                        |
|                        |                                | ALIGN                          | 2.8                      |             |              | 50 57 120                           |                        |
|                        |                                | SERVICE                        | 0.6                      |             |              |                                     |                        |
|                        |                                | REPLACE                        | 1.5                      |             |              | 4 21 117                            |                        |
|                        |                                | REPAIR                         |                          |             |              | 117 208                             |                        |
| 05010702               | BIM® System                    | REPAIR                         | 4.3                      | 1.2         | --           |                                     |                        |
|                        |                                | REPAIR                         |                          |             |              | 38 39 57<br>117                     |                        |
|                        |                                | REPAIR                         |                          |             |              |                                     |                        |
| 0502                   | Tail Rotor Installation        | TEST                           | 0.3                      |             |              |                                     | C<br><br>M<br><br>AH R |
|                        |                                | INSPECT                        | 0.4                      |             |              |                                     |                        |
|                        |                                | INSPECT                        | 0.9                      |             |              |                                     |                        |
|                        |                                | ADJUST                         | 0.4                      |             |              |                                     |                        |
| 050201                 | Tail Rotor Blade As-<br>sembly | INSPECT                        | 0.4                      |             |              |                                     |                        |

## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION              | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|---------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                 |                                | AVUM<br>(0)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 050202                 | Pitch Beam Assembly             | REPLACE                        | 4.6                      |             |              | 4 21 65 76<br>117 128 130<br>166    | AE                     |
|                        |                                 | REPAIR                         | 8.9                      |             |              | 27 117                              |                        |
|                        |                                 |                                |                          | 2.3         |              | 21 27 96<br>117 132                 |                        |
|                        |                                 | SERVICE                        | 0.3                      |             | 6.5          |                                     |                        |
|                        |                                 | INSPECT                        | 0.2                      |             |              |                                     |                        |
| 050203                 | Pitch Control Rod As-<br>sembly | REPLACE                        | 2.5                      |             |              | 9 61 106<br>117 130 166             | AE                     |
|                        |                                 | REPAIR                         |                          | 0.9         |              | 96 120 140<br>141 154 156<br>200    |                        |
|                        |                                 | INSPECT                        | 0.3                      |             |              |                                     |                        |
|                        |                                 | REPLACE                        | 2.6                      |             |              | 117                                 |                        |
| 050204                 | Outboard Retention<br>Plate     | REPAIR                         |                          | 0.7         |              | 106 128 140<br>141                  | P AE                   |
|                        |                                 | INSPECT                        | 1.3                      |             |              | 9 128 130                           |                        |
|                        |                                 | REPLACE                        | 2.8                      |             |              | 9 117 128<br>130                    |                        |
|                        |                                 | REPAIR                         | 1.2                      |             |              | 128 140 141<br>166                  |                        |
| 06                     | Drive Systems                   |                                |                          | 0.9         |              | 96 106 154                          |                        |

## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION         | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE  | (6)<br>REMARKS<br>CODE |
|------------------------|----------------------------|--------------------------------|--------------------------|-------------|--------------|--------------------------------------|------------------------|
|                        |                            |                                | AVUM<br>(0)              | AVIM<br>(F) | DEPOT<br>(D) |                                      |                        |
| 0601                   | Main Transmission Assembly | INSPECT                        | 1.2                      |             |              | 21 117 120<br>142                    | C P AE                 |
|                        |                            | REPLACE                        | 142.7                    |             |              | 4 21 66 71<br>117 120 128<br>130 142 |                        |
|                        |                            | REPAIR                         | 11.8                     |             |              | 21 80 81<br>117 120 142              |                        |
|                        |                            | SERVICE                        | 0.8                      |             |              |                                      |                        |
| 060102                 | Main Module                | INSPECT                        | 0.6                      |             |              |                                      | AD                     |
|                        |                            | REPLACE                        | 18.6                     |             |              | 21 64 65<br>117 120 128              |                        |
|                        |                            | REPAIR                         | 1.8                      |             |              |                                      |                        |
|                        |                            | SERVICE                        | 0.5                      |             | 42.2         |                                      |                        |
| 06010201               | "Housing, Main Module"     | INSPECT                        | 0.3                      |             |              |                                      | O AD<br>I              |
|                        |                            | REPAIR                         | 1.3                      |             |              |                                      |                        |
|                        |                            |                                |                          |             | --           |                                      |                        |
|                        |                            |                                |                          |             |              |                                      |                        |
| 06010202               | Tail Takeoff Flange        | INSPECT                        | 0.3                      |             |              |                                      |                        |
|                        |                            | REPLACE                        | 2.0                      |             |              | 117 128 142                          |                        |
|                        |                            | REPAIR                         | 1.1                      |             |              | 117                                  |                        |
| 06010203               | Main Rotor Shaft           | INSPECT                        | 0.6                      |             |              |                                      | AD                     |
|                        |                            | REPLACE                        | 3.4                      |             |              | 64 117                               |                        |
|                        |                            | REPAIR                         |                          |             | --           |                                      |                        |



## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION                         | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|--------------------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                            |                                | AVUM<br>(0)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 06010204               | Gust Lock Rod And Lever                    | INSPECT                        | 0.2                      |             |              | 117 121                             |                        |
|                        |                                            | REPLACE                        | 1.3                      |             |              |                                     |                        |
| 060103                 | "Input Module, LH/<br>RH"                  | INSPECT                        | 0.8                      |             |              |                                     | R                      |
|                        |                                            | REPLACE                        | 17.6                     |             |              | 21 64 66<br>117 120 128             |                        |
|                        |                                            | REPAIR                         | 4.2                      |             |              | 19 117 121                          |                        |
|                        |                                            |                                |                          |             | 15.8         |                                     |                        |
|                        |                                            | SERVICE                        | 0.5                      |             |              |                                     | O                      |
| 06010301               | "Housing, Input<br>Module "                | REPAIR                         | 1.3                      |             |              |                                     | AD                     |
| 06010302               | Input Flange Coupling<br>(70351-08208-102) | INSPECT                        | 0.3                      |             |              | 117 120                             |                        |
|                        |                                            | REPLACE                        | 4.8                      |             |              | 117 225 226<br>228                  |                        |
|                        |                                            | REPAIR                         | 1.6                      |             |              | 117                                 |                        |
| 06010303               | Input Flange Coupling<br>(70351-08255-102) | INSPECT                        | 0.3                      |             |              | 4 117                               |                        |
|                        |                                            | REPLACE                        | 4.8                      |             |              | 117 225 227                         |                        |
|                        |                                            | REPAIR                         | 1.6                      |             |              | 117                                 |                        |
| 06010304               | "Gimbal (70361-<br>08001-101, 102, 103)"   | INSPECT                        | 0.3                      |             |              | 21 117                              |                        |
|                        |                                            | REPLACE                        | 4.8                      |             |              | 4 117 120<br>224                    |                        |

## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION             | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|--------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                |                                | AVUM<br>(0)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 06010305               | Gimbal (70361-08001-102)       | INSPECT                        | 0.3                      |             |              | 21 117                              |                        |
|                        |                                | REPLACE                        | 4.8                      |             |              | 117 120 224                         |                        |
| 060104                 | "Accessory Module, LH/RH"      | INSPECT                        | 0.6                      |             |              |                                     |                        |
|                        |                                | REPLACE                        | 17.2                     |             |              | 21 64 65<br>117 120 128             |                        |
|                        |                                | REPAIR                         | 1.8                      |             |              |                                     |                        |
|                        |                                | SERVICE                        | 0.5                      |             | 7.8          |                                     | O                      |
| 06010401               | Housing Accessory Module       | REPAIR                         | 1.3                      |             |              |                                     |                        |
| 0602                   | Chip Detection System          | INSPECT                        | 1.8                      |             |              |                                     |                        |
| 060201                 | Main Module Sump Chip Detector | INSPECT                        | 0.4                      |             |              | 117                                 | C R                    |
|                        |                                | REPLACE                        | 0.6                      |             |              | 117                                 |                        |
|                        |                                | TEST                           | 0.3                      |             |              | 89                                  |                        |
|                        |                                | SERVICE                        | 0.2                      |             |              |                                     |                        |
| 060202                 | Input Module Chip Detectors    | INSPECT                        | 0.4                      |             |              | 117                                 | C                      |
|                        |                                | REPLACE                        | 0.6                      |             |              | 117                                 |                        |
|                        |                                | TEST                           | 0.3                      |             |              | 89                                  |                        |
|                        |                                | SERVICE                        | 0.2                      |             |              |                                     |                        |
| 060203                 | Accessory Module Chip Detector | INSPECT                        | 0.4                      |             |              | 117                                 | C                      |

## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION                    | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|---------------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                       |                                | AVUM<br>(0)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 060204                 | Intermediate Gearbox<br>Chip Detector | REPLACE                        | 0.6                      |             |              | 117                                 | C R                    |
|                        |                                       | TEST                           | 0.3                      |             |              | 89                                  |                        |
|                        |                                       | SERVICE                        | 0.2                      |             |              |                                     |                        |
|                        |                                       | INSPECT                        | 0.4                      |             |              | 117                                 |                        |
|                        |                                       | REPLACE                        | 0.6                      |             |              | 117                                 |                        |
| 060205                 | Tail Gearbox Chip<br>Detector         | TEST                           | 0.3                      |             |              | 89                                  | C R                    |
|                        |                                       | SERVICE                        | 0.2                      |             |              |                                     |                        |
|                        |                                       | INSPECT                        | 0.4                      |             |              | 117                                 |                        |
|                        |                                       | REPLACE                        | 0.6                      |             |              | 117                                 |                        |
|                        |                                       | TEST                           | 0.3                      |             |              | 89                                  |                        |
| 0603                   | Transmission Lubrica-<br>tion System  | SERVICE                        | 0.2                      |             |              |                                     | 5 21 128               |
|                        |                                       | INSPECT                        | 0.4                      |             |              |                                     |                        |
|                        |                                       | REPLACE                        | 0.6                      |             |              | 117                                 |                        |
|                        |                                       | TEST                           | 0.3                      |             |              | 89                                  |                        |
|                        |                                       | SERVICE                        | 0.2                      |             |              |                                     |                        |
| 0604                   | Intermediate Gear Box                 | SERVICE                        | 1.2                      |             |              |                                     | C AE                   |
|                        |                                       | INSPECT                        | 0.1                      |             |              |                                     |                        |
|                        |                                       | REPAIR                         | 2.2                      |             |              | 117                                 |                        |
|                        |                                       | ADJUST                         | 1.0                      |             |              | 117                                 |                        |
|                        |                                       | INSPECT                        | 0.3                      |             |              | 117                                 |                        |
|                        |                                       | SERVICE                        | 1.6                      |             |              | 25                                  |                        |
|                        |                                       | REPLACE                        | 5.6                      |             |              | 4 21 114<br>117 128                 |                        |
|                        |                                       | REPAIR                         | 2.9                      |             |              | 25 80 120<br>128 142 143            |                        |

**MAINTENANCE ALLOCATION CHART** - Continued**Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued**

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION                  | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|-------------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                     |                                | AVUM<br>(0)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 060401                 | Housing Intermediate Gearbox        | INSPECT                        | 1.3                      |             | 3.8          | 117                                 | I                      |
|                        |                                     | REPAIR                         | 0.3                      |             |              |                                     | I                      |
| 0605                   | Drive Shaft Installation Tail Rotor | INSPECT                        | 0.3                      |             | --           | 117                                 | C                      |
| 060501                 | Section No. 1 Drive Shaft           | INSPECT                        | 0.8                      |             |              | 117 128                             | AE AD                  |
|                        |                                     | REPLACE                        | 1.6                      |             |              | 117 121 128                         |                        |
|                        |                                     | REPAIR                         | 2.2                      |             |              | 117 121                             |                        |
| 060502                 | Section No. 2 Drive Shaft           |                                |                          |             | 2.2          |                                     |                        |
|                        |                                     | INSPECT                        | 0.8                      |             |              | 117 128                             | AE AD                  |
|                        |                                     | REPLACE                        | 3.0                      |             |              | 117 121 128                         |                        |
| 060503                 | Section No. 3 Drive Shaft           | REPAIR                         | 2.0                      |             |              | 117 121                             |                        |
|                        |                                     |                                |                          |             | 2.8          |                                     |                        |
|                        |                                     | INSPECT                        | 0.8                      |             |              | 117 128                             | AE AD                  |
| 060504                 | Section No. 4 Drive Shaft           | REPLACE                        | 1.3                      |             |              | 117 121 128                         |                        |
|                        |                                     | REPAIR                         | 2.2                      |             |              | 117 121                             |                        |
|                        |                                     |                                |                          |             | 2.2          |                                     |                        |
| 060504                 | Section No. 4 Drive Shaft           | INSPECT                        | 0.8                      |             |              | 117 128                             | AE AD                  |

## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION                         | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|--------------------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                            |                                | AVUM<br>(0)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 060505                 | Drive Shaft Support<br>Assembly            | REPLACE                        | 2.1                      |             |              | 117 121                             |                        |
|                        |                                            | REPAIR                         | 1.4                      |             |              | 117 121                             |                        |
|                        |                                            |                                |                          |             | 1.7          |                                     |                        |
|                        |                                            | INSPECT                        | 0.2                      |             |              |                                     |                        |
|                        |                                            | REPLACE                        | 1.9                      |             |              | 80 81 117<br>142                    |                        |
| 06050501               | "Bearing, Drive Shaft<br>Support"          | REPAIR                         | 1.2                      |             |              | 120 121                             |                        |
|                        |                                            | SERVICE                        | 0.7                      |             |              | 4                                   |                        |
|                        |                                            | INSPECT                        | 0.2                      |             |              |                                     |                        |
| 06050502               | Viscous Damper Tube<br>Drive Shaft Support | REPLACE                        | 0.3                      |             |              | 120 121                             |                        |
|                        |                                            | INSPECT                        | 0.2                      |             |              |                                     |                        |
|                        |                                            | REPLACE                        | 0.3                      |             |              | 120 121                             |                        |
| 0606                   | Oil Cooler Installation                    |                                |                          |             |              |                                     |                        |
| 060601                 | Oil Cooler Assembly                        | INSPECT                        | 0.4                      |             |              |                                     | Q R                    |
|                        |                                            | REPLACE                        | 6.3                      |             |              | 64 65 75<br>117 120                 |                        |
|                        |                                            | REPAIR                         | 1.3                      |             |              | 117                                 |                        |
|                        |                                            | TEST                           | 1.8                      |             |              | 4 21 50 80                          |                        |
|                        |                                            |                                |                          |             | --           |                                     |                        |
| 06060101               | "Drive Shaft, Fan and<br>Duct, Oil Cooler" | INSPECT                        | 0.8                      |             |              | 117 128                             | AE                     |

## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION                       | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|------------------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                          |                                | AVUM<br>(O)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 0607                   | Tail Gearbox Assembly                    | REPLACE                        | 2.8                      |             |              | 120                                 | AD AE                  |
|                        |                                          | REPAIR                         | 2.1                      |             |              | 120                                 |                        |
|                        |                                          | INSPECT                        | 1.9                      |             |              | 117                                 |                        |
|                        |                                          | SERVICE                        | 1.4                      |             |              | 25 38                               |                        |
|                        |                                          | REPLACE                        | 4.5                      |             |              | 21 66 117<br>128 166                |                        |
|                        |                                          | REPAIR                         | 2.4                      |             |              | 4 21 25 65<br>80 81 117<br>120 142  |                        |
| 060701                 | Housing Tail Gearbox Assembly            | INSPECT                        | 0.4                      |             | --           |                                     | I                      |
|                        |                                          | REPAIR                         | 1.3                      |             |              | 117 120                             |                        |
| 060702                 | "Inner Retention Plate, Tail Gearbox"    | INSPECT                        | 0.9                      |             | --           | 21                                  | P AE AD                |
|                        |                                          | REPLACE                        | 2.9                      |             |              | 27 124 127                          |                        |
|                        |                                          | REPAIR                         | 0.7                      |             |              | 21 66 117<br>128                    |                        |
|                        |                                          |                                |                          |             | 6.2          |                                     |                        |
| 07                     | Pneudraulics                             |                                |                          |             |              |                                     |                        |
| 0701                   | Engine Start                             | INSPECT                        | 1.4                      |             |              |                                     |                        |
|                        |                                          | REPAIR                         | 2.1                      |             |              | 117                                 |                        |
| 070101                 | "Starter, Pneumatic 3505300, 36E144-12A" | SERVICE                        | 0.2                      |             |              | 117                                 |                        |

## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION          | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|-----------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                             |                                | AVUM<br>(0)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 070102                 | Starter Control Valve       | INSPECT                        | 0.2                      |             |              |                                     |                        |
|                        |                             | REPLACE                        | 1.0                      |             |              | 117 121                             |                        |
|                        |                             | REPAIR                         |                          |             | 4.3          |                                     |                        |
|                        |                             | SERVICE                        | 1.2                      |             |              |                                     |                        |
|                        |                             | REPLACE                        | 1.2                      |             |              | 117                                 |                        |
|                        |                             | OVERHAUL                       | 0.4                      |             |              | 117                                 |                        |
|                        |                             | OVERHAUL                       | 0.4                      |             |              | 117                                 |                        |
|                        |                             | SERVICE                        | 0.3                      |             |              |                                     |                        |
| 070103                 | Bleed Air Shutoff Valve     | REPAIR                         |                          |             | 3.4          |                                     |                        |
|                        |                             | REPLACE                        | 0.9                      |             |              | 21 117 128                          |                        |
|                        |                             | OVERHAUL                       | 0.6                      |             |              | 117                                 |                        |
|                        |                             | OVERHAUL                       | 0.7                      |             |              | 117                                 |                        |
|                        |                             | SERVICE                        | 0.2                      |             |              |                                     |                        |
|                        |                             | SERVICE                        |                          | 0.4         |              |                                     |                        |
|                        |                             | REPAIR                         |                          | 2.2         |              | 4 21 128                            |                        |
|                        |                             |                                |                          |             | --           |                                     |                        |
| 070104                 | APU Check Valve             | INSPECT                        | 0.2                      |             |              |                                     |                        |
|                        |                             | INSPECT                        |                          |             | 1.6          |                                     |                        |
|                        |                             | REPLACE                        | 0.7                      |             |              | 21 117 128                          |                        |
| 070105                 | Pneumatic Tube Installation | INSPECT                        | 0.4                      |             |              |                                     |                        |

## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION                                      | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|---------------------------------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                                         |                                | AVUM<br>(0)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 0702                   | Hydraulic System                                        | REPLACE                        | 2.2                      |             |              | 117                                 |                        |
|                        |                                                         | REPAIR                         | 0.9                      |             |              | 15                                  |                        |
|                        |                                                         | INSPECT                        | 0.7                      |             |              |                                     |                        |
|                        |                                                         | SERVICE                        | 1.3                      |             |              | 117                                 |                        |
|                        |                                                         | TEST                           | 0.5                      |             |              |                                     |                        |
|                        |                                                         | ADJUST                         | 4.9                      |             |              |                                     |                        |
| 070201                 | "Hydraulic Pump<br>Module, No. 1, No. 2,<br>and Backup" | INSPECT                        | 0.5                      |             |              |                                     |                        |
|                        |                                                         | REPLACE                        | 2.7                      |             |              | 21 117 128                          |                        |
|                        |                                                         | OVERHAUL                       | 0.4                      |             |              |                                     |                        |
|                        |                                                         | REPAIR                         | 2.1                      |             |              | 21 117 131                          |                        |
|                        |                                                         |                                |                          | 3.2         |              | 4 21 115<br>132                     |                        |
|                        |                                                         |                                |                          |             | --           |                                     |                        |
| 070202                 | No. 1 Hydraulic<br>System                               | INSPECT                        | 0.4                      |             |              |                                     |                        |
|                        |                                                         | SERVICE                        | 0.7                      |             |              | 14 117                              |                        |
|                        |                                                         | TEST                           | 0.5                      |             |              | 14 98 99<br>115 117 118             |                        |
| 07020201               | No. 1 Transfer Module<br>Manifold                       | INSPECT                        | 0.1                      |             |              |                                     |                        |
|                        |                                                         | REPLACE                        | 1.8                      |             |              | 117                                 |                        |
|                        |                                                         | REPAIR                         |                          |             | --           |                                     |                        |



## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION                         | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|--------------------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                            |                                | AVUM<br>(0)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 07020202               | No. 1 Primary Servo Manifold               | INSPECT                        | 0.1                      |             |              |                                     | R                      |
|                        |                                            | REPLACE                        | 4.8                      |             |              | 117                                 |                        |
|                        |                                            | REPAIR                         |                          |             | --           |                                     |                        |
| 07020203               | Manifold Shims                             | REPLACE                        | 9.4                      |             |              | 4 21 115<br>117 131 132             |                        |
| 07020204               | No. 1 Transfer Module                      | INSPECT                        | 0.1                      |             |              |                                     |                        |
|                        |                                            | REPLACE                        | 1.8                      |             |              | 117                                 |                        |
|                        |                                            | REPAIR                         |                          |             | --           |                                     |                        |
|                        |                                            | OVERHAUL                       | 1.9                      |             |              | 117                                 |                        |
| 0702020401             | "Pressure Switch, No. 1 Transfer Module"   | REPLACE                        | 0.7                      |             |              | 115 117                             |                        |
| 0702020402             | "Hoses and Fitting, No. 1 Transfer Module" | REPLACE                        | 0.5                      |             |              | 115 117                             |                        |
| 070203                 | No. 2 Hydraulic System                     | INSPECT                        | 0.4                      |             |              |                                     |                        |
|                        |                                            | SERVICE                        | 0.7                      |             |              | 14 117                              |                        |
|                        |                                            | TEST                           | 0.5                      |             |              | 14 98 99<br>115 117 118             |                        |
| 07020301               | No. 2 Transfer Module Manifold             | INSPECT                        | 0.1                      |             |              |                                     |                        |
|                        |                                            | REPLACE                        | 4.8                      |             |              | 117                                 |                        |
|                        |                                            | REPAIR                         |                          |             | --           |                                     |                        |
| 07020302               | No. 2 Primary Servo Manifold               | INSPECT                        | 0.1                      |             |              |                                     | R                      |

## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION                                | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|---------------------------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                                   |                                | AVUM<br>(O)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 07020303               | No. 2 Transfer Module                             | REPLACE                        | 4.8                      |             |              | 117                                 |                        |
|                        |                                                   | REPAIR                         |                          |             | --           |                                     |                        |
|                        |                                                   | INSPECT                        | 0.1                      |             |              |                                     |                        |
|                        |                                                   | REPLACE                        | 1.8                      |             |              | 117                                 |                        |
| 0702030301             | "Pressure Switch, No. 2 Transfer Module"          | REPAIR                         |                          |             | --           |                                     |                        |
|                        |                                                   | REPLACE                        | 0.7                      |             |              | 115 117                             |                        |
| 0702030302             | "Hose and Fittings, No. 2 Transfer Module"        | REPLACE                        | 0.5                      |             |              | 115 117                             |                        |
| 07020304               | No. 2 Pilot Assist Module                         | INSPECT                        | 0.1                      |             |              |                                     |                        |
|                        |                                                   | REPLACE                        | 1.8                      |             |              | 4 21 117<br>128                     |                        |
|                        |                                                   | REPAIR                         |                          | 1.2         |              | 78 103 118                          |                        |
|                        |                                                   |                                |                          |             | --           |                                     |                        |
| 0702030401             | "Pressure Switch, No. 2 Pilot Assist Module"      | REPLACE                        | 0.7                      |             |              | 115 117                             |                        |
| 0702030402             | "Thermal Relief Valve, No. 2 Pilot Assist Module" | REPLACE                        | 0.5                      |             |              | 115 117                             |                        |
| 07020305               | "Manifold, Pilot Assist and Boost Servo"          | REPLACE                        | 4.6                      |             |              | 117                                 |                        |
| 070204                 | Utility Hydraulic System                          | INSPECT                        | 0.4                      |             |              |                                     |                        |
|                        |                                                   | SERVICE                        | 0.7                      |             |              | 14 117                              |                        |

## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION                                                                  | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|-------------------------------------------------------------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                                                                     |                                | AVUM<br>(0)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 07020401               | Utility Module As-<br>sembly                                                        | TEST                           | 0.5                      |             |              | 14 98 99<br>115 117 118             |                        |
|                        |                                                                                     | INSPECT                        | 0.2                      |             |              |                                     |                        |
|                        |                                                                                     | REPLACE                        | 0.9                      |             |              |                                     |                        |
|                        |                                                                                     | REPAIR                         |                          |             | 3.4          |                                     |                        |
| 0702040101             | "Electrical Motor, Util-<br>ity Hydraulic Pump<br>(See Functional Group<br>090802)" |                                |                          |             |              |                                     |                        |
| 0702040102             | "Pressure Switch, Util-<br>ity Module"                                              | REPLACE                        | 1.7                      |             |              | 115 117                             |                        |
|                        |                                                                                     | REPAIR                         |                          |             | --           |                                     |                        |
| 0702040103             | "Hoses and Fittings,<br>Utility Module"                                             | REPLACE                        | 1.5                      |             |              | 115 117                             |                        |
|                        |                                                                                     | REPAIR                         | 0.9                      |             |              | 15                                  |                        |
| 0702040104             | Tail Rotor Servo 2nd<br>Stage Shutoff Valve                                         | REPLACE                        | 1.2                      |             |              | 117                                 |                        |
| 070205                 | "Rigid Tubing, Flex<br>Hoses, Drain Lines<br>and Self-Sealing<br>Couplings"         | REPLACE                        | 3.8                      |             |              | 118 121 128<br>144 145              |                        |
|                        |                                                                                     | REPAIR                         | 2.5                      |             |              | 15 118 121<br>128                   |                        |
| 0703                   | Secondary Hydraulic<br>Power System                                                 |                                |                          | 1.8         |              | 146 147 148                         |                        |
|                        |                                                                                     | INSPECT                        | 0.4                      |             |              |                                     |                        |
|                        |                                                                                     | SERVICE                        | 0.3                      |             |              | 14 117                              |                        |

## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION                                                         | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|----------------------------------------------------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                                                            |                                | AVUM<br>(O)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 070301                 | APU Start System                                                           | TEST                           | 0.6                      |             |              | 14 98 99<br>115 117 118             |                        |
|                        |                                                                            | INSPECT                        | 0.4                      |             |              |                                     |                        |
|                        |                                                                            | SERVICE                        | 0.3                      |             |              | 14 117                              |                        |
| 07030101               | APU Accumulator                                                            | TEST                           | 0.6                      |             |              | 14 98 99<br>115 117 118             |                        |
|                        |                                                                            | INSPECT                        | 0.3                      |             |              |                                     |                        |
|                        |                                                                            | REPLACE                        | 15.5                     |             |              | 21 114 117<br>128 130               |                        |
|                        |                                                                            | REPAIR                         |                          |             | --           |                                     |                        |
|                        |                                                                            | OVERHAUL                       | 0.4                      |             |              | 117                                 |                        |
| 0703010101             | APU Accumulator<br>(Winterization Kit)<br>(See Functional Group<br>160601) | SERVICE                        | 1.5                      |             |              | 117                                 |                        |
|                        |                                                                            |                                |                          |             |              |                                     |                        |
| 07030102               | APU Accumulator<br>Hand Pump                                               | REPLACE                        | 0.5                      |             |              | 117                                 |                        |
|                        |                                                                            | REPAIR                         | 0.3                      |             |              | 117                                 |                        |
| 07030103               | APU Start Valve                                                            | INSPECT                        | 0.3                      |             |              |                                     |                        |
|                        |                                                                            | REPLACE                        | 2.5                      |             |              | 21 114 117<br>128                   |                        |
|                        |                                                                            | REPAIR                         |                          | 1.0         |              | 117                                 |                        |
| 07030104               | Hydraulic Refill Hand<br>Pump                                              |                                |                          |             | 39.0         | 103                                 |                        |
|                        |                                                                            | REPLACE                        | 0.3                      |             |              | 117                                 |                        |

## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION   | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|----------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                      |                                | AVUM<br>(0)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 07030105               | Pressure Switch      | REPAIR                         | 0.6                      |             |              |                                     |                        |
|                        |                      | REPAIR                         |                          |             | 1.5          |                                     |                        |
|                        |                      | REPLACE                        | 0.3                      |             |              | 117                                 |                        |
|                        |                      | REPLACE                        | 0.3                      |             |              | 117                                 |                        |
|                        |                      | REPLACE                        | 0.3                      |             |              | 117                                 |                        |
| 07030106               | Pressure Gauge       | REPAIR                         | 1.3                      |             |              | 118                                 |                        |
|                        |                      |                                |                          | 0.9         |              | 103                                 |                        |
|                        |                      | REPLACE                        | 3.8                      |             |              | 118 121 128<br>144 145              |                        |
|                        |                      | REPAIR                         | 2.5                      |             |              | 15 118 121<br>128                   |                        |
|                        |                      |                                |                          | 1.8         |              | 146 147 148                         |                        |
| 08                     | Instrument Systems   | INSPECT                        | 0.7                      |             |              |                                     |                        |
|                        |                      | TEST                           | 0.3                      |             |              | 89                                  |                        |
| 0801                   | Standby Compass      |                                |                          | 2.5         |              |                                     |                        |
|                        |                      | REPLACE                        | 0.2                      |             |              | 115 132                             | Z AL                   |
|                        |                      | REPAIR                         | 0.3                      |             |              | 157                                 |                        |
| 0802                   | Master Warning Panel | TEST                           | 0.3                      |             |              | 89                                  |                        |
|                        |                      | REPLACE                        | 0.2                      |             |              | 115 132                             | Z                      |
|                        |                      | REPAIR                         | 0.3                      |             |              | 4 115 157                           |                        |
|                        |                      | TEST                           | 0.3                      |             |              | 89                                  |                        |

## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION                                    | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|-------------------------------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                                       |                                | AVUM<br>(0)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 0803                   | Instrument Panel Assembly                             |                                |                          |             |              |                                     |                        |
| 080301                 | "Caution Advisory Panel (EH-60A, UH-60A, and UH-60L)" | TEST                           | 0.1                      |             |              | 89                                  | Z                      |
|                        |                                                       | REPLACE                        | 0.8                      |             |              | 98 99 119                           |                        |
|                        |                                                       | REPAIR                         | 0.7                      |             |              | 115                                 |                        |
|                        |                                                       |                                |                          | 3.0         |              | 115 157                             |                        |
|                        |                                                       |                                |                          |             | --           |                                     |                        |
| 08030101               | "Circuit Card Assemblies, A1 through A5"              | REPLACE                        | 0.9                      |             |              | 115                                 |                        |
|                        |                                                       | REPAIR                         |                          |             | --           |                                     |                        |
| 08030102               | Caution/Advisory Panel (LED) (UH-60A and UH-60L)      | TEST                           | 0.1                      |             |              | 89                                  | Z                      |
|                        |                                                       | REPLACE                        | 0.8                      |             |              | 98 99 115 119                       |                        |
|                        |                                                       | REPAIR                         | 1.0                      |             |              | 98 115                              |                        |
|                        |                                                       |                                |                          | 1.0         |              | 115                                 |                        |
| 080302                 | Multi-Function Display (MFD) Unit (HH-60A and HH-60L) | TEST                           | 0.2                      |             |              | 89                                  | J Z                    |
|                        |                                                       | REPLACE                        | 0.4                      |             |              | 119                                 |                        |
|                        |                                                       | REPAIR                         |                          |             | --           |                                     | AC                     |
| 080303                 | Central Display Unit (CDU)                            | TEST                           | 0.4                      |             |              | 89                                  | Z                      |

## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION                         | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|--------------------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                            |                                | AVUM<br>(0)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 08030301               | "Circuit Card Assemblies, A3 through A17"  | REPLACE                        | 0.4                      |             |              | 119                                 |                        |
|                        |                                            | REPAIR                         | 1.2                      |             |              | 99 115                              |                        |
|                        |                                            |                                |                          | 1.5         |              | 115                                 |                        |
|                        |                                            |                                |                          |             | --           |                                     |                        |
| 080304                 | Pilot Display Unit (PDU)                   | REPLACE                        | 0.9                      |             |              | 115                                 |                        |
|                        |                                            | REPAIR                         |                          |             | --           |                                     |                        |
|                        |                                            | TEST                           | 0.4                      |             |              | 89                                  | Z                      |
|                        |                                            | REPLACE                        | 0.4                      |             |              | 119                                 |                        |
| 08030401               | "Circuit Card Assemblies, A3 through A7"   | REPAIR                         | 1.2                      |             |              | 99 115                              |                        |
|                        |                                            |                                |                          | 1.5         |              | 115                                 |                        |
|                        |                                            |                                |                          |             | --           |                                     |                        |
|                        |                                            | SERVICE                        | 0.1                      |             |              |                                     |                        |
| 080305                 | Vertical Speed Indicator and Lighted Bezel | REPLACE                        | 0.9                      |             |              | 115                                 |                        |
|                        |                                            | REPAIR                         |                          |             | --           |                                     |                        |
| 080305                 | Vertical Speed Indicator and Lighted Bezel | REPLACE                        | 0.4                      |             |              | 21 115 117                          | Z                      |
| 080306                 | Airspeed Indicator and Lighted Bezel       | REPLACE                        | 0.4                      |             |              | 21 115 117                          | Z                      |
| 080307                 | Barometric Altimeter and Lighted Bezel     | REPLACE                        | 0.4                      |             |              | 21 115 117                          | Z                      |

## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION                                 | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|----------------------------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                                    |                                | AVUM<br>(O)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 080308                 | Stabilator Position Indicator                      |                                |                          |             |              |                                     |                        |
| 0804                   | Clock                                              | INSPECT                        | 0.4                      |             |              | 117                                 | AL                     |
|                        |                                                    | REPLACE                        | 0.3                      |             |              | 119                                 |                        |
|                        |                                                    | REPAIR                         | 0.4                      |             |              | 117                                 |                        |
| 0805                   | Bearing-Distance Heading Indicator (BDHI) (EH-60A) | REMOVE                         | 0.5                      |             |              | 115 117                             | G                      |
| 0806                   | Instrument Installation Cabin                      |                                |                          |             |              |                                     |                        |
| 080601                 | Pitot-Static System                                | INSPECT                        | 0.3                      |             |              |                                     | AL                     |
|                        |                                                    | TEST                           | 0.4                      |             |              | 93 94                               |                        |
|                        |                                                    | INSPECT                        | 0.7                      |             |              | 203                                 |                        |
| 08060101               | Pitot-Static Head                                  | REPLACE                        | 0.7                      |             |              | 21 117                              | Y                      |
| 08060102               | Lines and Components                               | REPLACE                        | 0.6                      |             |              | 21 117                              |                        |
| 080602                 | "Signal Data Converter (SDC), No. 1 and No. 2"     | REPLACE                        | 2.0                      |             |              | 99 115                              | Z                      |
|                        |                                                    | REPAIR                         |                          | 2.3         |              | 115                                 |                        |
|                        |                                                    |                                |                          |             | --           |                                     |                        |
|                        |                                                    | TEST                           | 0.5                      |             |              | 89                                  |                        |
| 08060201               | "Circuit Card Assemblies, A4 through A11"          | REPLACE                        |                          | 0.3         |              | 115                                 |                        |
|                        |                                                    | REPAIR                         |                          |             | --           |                                     |                        |



## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION                   | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|--------------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                      |                                | AVUM<br>(0)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 08060202               | "Power Supply, A2 and A3"            | REPLACE                        |                          | 0.9         |              | 115                                 |                        |
|                        |                                      | REPAIR                         |                          |             | --           |                                     |                        |
| 080603                 | Free Air Thermometer (FAT)           | INSPECT                        | 0.2                      |             |              | 117                                 |                        |
|                        |                                      | REPLACE                        |                          |             |              |                                     |                        |
|                        |                                      | REPAIR                         |                          |             |              |                                     |                        |
| 0807                   | Chip Detector Resistor Unit          | REPLACE                        | 0.3                      |             |              | 115                                 | AA                     |
|                        |                                      | REPAIR                         |                          | 1.1         |              | 115 117                             |                        |
| 0808                   | Rotor Overspeed Reset Switch         | REPLACE                        | 0.6                      |             |              | 115                                 |                        |
| 0809                   | Global Positioning System (GPS)      |                                |                          |             |              |                                     |                        |
| 080901                 | Data Transfer Enclosure Installation | REPAIR                         | 0.5                      |             |              | 117                                 |                        |
| 080902                 | Zero Switch Installation             | REPLACE                        | 0.5                      |             |              | 115                                 |                        |
| 080903                 | Antenna Installation                 | REPLACE                        | 0.9                      |             |              | 117                                 |                        |
| 09                     | Electrical Systems                   |                                |                          |             |              |                                     |                        |
| 0901                   | Circuit Breaker Panels               | REPAIR                         | 0.3                      |             |              | 115 117                             |                        |
|                        |                                      | TEST                           | 0.2                      |             |              | 89                                  |                        |
| 0902                   | "Relay Panel, LH/RH "                | REPLACE                        | 0.7                      |             |              | 98 99 117                           | Z                      |
|                        |                                      | REPAIR                         | 0.3                      |             |              |                                     |                        |
|                        |                                      | REPAIR                         |                          | 1.1         |              | 99 117                              |                        |

**MAINTENANCE ALLOCATION CHART** - Continued**Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued**

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION                                              | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|-----------------------------------------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                                                 |                                | AVUM<br>(O)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 0903                   | No. 3 Relay Panel<br>Auxiliary Heater Kit<br>(EH-60A)           | TEST                           | 0.4                      |             | 2.1          | 99 117                              | Z                      |
|                        |                                                                 | REPLACE                        | 0.7                      |             |              | 98 99 117                           |                        |
|                        |                                                                 | REPAIR                         |                          | 1.1         |              | 99 117                              |                        |
| 0904                   | Upper Console (Power<br>Distribution)                           |                                |                          |             | 2.1          | 99 117                              |                        |
|                        |                                                                 | TEST                           | 0.4                      |             |              |                                     |                        |
|                        |                                                                 | REPAIR                         | 0.5                      |             |              | 115 117                             |                        |
| 090401                 | APU T-Handle Fire<br>Assembly (See<br>Functional Group<br>0909) | TEST                           | 0.2                      |             |              | 89                                  |                        |
|                        |                                                                 | REPLACE                        | 0.5                      |             |              | 115                                 |                        |
|                        |                                                                 | TEST                           | 0.1                      |             |              | 89                                  |                        |
| 090402                 | Information Plates                                              | REPLACE                        | 0.3                      |             |              | 117                                 |                        |
| 090403                 | Dimming Control (See<br>Functional Group<br>0909)               |                                |                          |             |              |                                     |                        |
| 0905                   | "Panel Assembly,<br>Miscellaneous Switch"                       | REPLACE                        | 0.4                      |             |              | 115                                 |                        |
|                        |                                                                 | REPAIR                         | 0.6                      |             |              | 115                                 |                        |
|                        |                                                                 |                                |                          | 0.9         |              | 115                                 |                        |
| 0906                   | AC Electrical System                                            | TEST                           | 0.7                      |             |              | 60 89                               |                        |

## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION                                             | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|----------------------------------------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                                                |                                | AVUM<br>(0)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 090601                 | "Auto Transformer, T12"                                        | REPLACE                        | 0.6                      |             |              | 115 117                             |                        |
| 090602                 | "AC Generator Contactor, K1 and K2"                            | REPLACE                        | 0.6                      |             |              | 115 117                             |                        |
| 090603                 | Current Limiters CL 4 through CL 6 and CL 1 through CL 3       | REPLACE                        | 0.5                      |             |              | 115 117                             |                        |
| 090604                 | "Generator and APU Current Transformers TB 2, TB 5, and TB 13" | REPLACE                        | 0.3                      |             |              | 115 117                             |                        |
| 090605                 | "Generator Control Unit, No. 1, No. 2, and APU"                | REPLACE                        | 0.4                      |             |              | 99 115                              | Z                      |
|                        |                                                                | REPAIR                         |                          |             | 1.4          |                                     |                        |
|                        |                                                                | TEST                           | 0.4                      |             |              |                                     |                        |
| 090606                 | "Circuit Card Assemblies, A1 and A2"                           | REPLACE                        |                          |             | 0.3          | 115                                 |                        |
|                        |                                                                | REPAIR                         |                          |             | 1.6          |                                     |                        |
|                        |                                                                | TEST                           |                          |             | 0.5          |                                     |                        |
| 090607                 | "Generator, Main, No. 1 and No. 2"                             | INSPECT                        | 0.6                      |             |              | 115                                 |                        |
|                        |                                                                | REPLACE                        | 3.2                      |             |              | 60 99 115 117                       |                        |
|                        |                                                                | REPAIR                         |                          | 4.8         |              |                                     |                        |
|                        |                                                                | TEST                           | 0.8                      |             |              |                                     |                        |
| 090608                 | "APU/External, Power, K3 "                                     | REPLACE                        | 0.6                      |             |              | 115                                 |                        |

## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION                               | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|--------------------------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                                  |                                | AVUM<br>(0)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 090609                 | External Power Receptacle                        | REPLACE                        | 0.5                      |             |              | 115                                 |                        |
| 090610                 | "Generator, APU Driven "                         | INSPECT                        | 0.4                      |             |              |                                     |                        |
|                        |                                                  | REPLACE                        | 2.2                      |             |              |                                     |                        |
|                        |                                                  | REPLACE                        |                          |             | 2.8          | 115 117                             |                        |
|                        |                                                  | REPAIR                         |                          |             |              | 60 99 115<br>117                    |                        |
|                        |                                                  | TEST                           | 0.7                      |             |              |                                     |                        |
| 090611                 | External Power Monitor                           | REPLACE                        | 0.5                      |             |              | 117                                 |                        |
| 090612                 | "AC Bus Tie Contactor, K4"                       | REPLACE                        | 0.6                      |             |              | 115                                 |                        |
| 090613                 | "AC Essential Bus Relays, K8 and K13"            | REPLACE                        | 0.4                      |             |              | 115                                 |                        |
| 090614                 | "Secondary Current Limiters, CL 16 through CL18" | REPLACE                        | 0.5                      |             |              | 115 117                             |                        |
| 090615                 | "Secondary Bus Contactor, K11"                   | REPLACE                        | 0.5                      |             |              | 115                                 |                        |
| 090616                 | "Junction Box Relays, K80, K81, and K82"         | REPLACE                        | 0.6                      |             |              | 115                                 |                        |
| 0907                   | DC Electrical System                             | INSPECT                        | 1.5                      |             |              | 98 100                              |                        |
|                        |                                                  | TEST                           | 0.9                      |             |              |                                     |                        |
| 090701                 | "Primary Bus Contactors, K16 and K6"             | REPLACE                        | 0.4                      |             |              | 117                                 |                        |
| 090702                 | "DC Essential Bus Tie Contactor, K15"            | REPLACE                        | 0.3                      |             |              | 117                                 |                        |

## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION                           | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|----------------------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                              |                                | AVUM<br>(0)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 090703                 | "DC Essential Bus Supply Relays, K9 and K10" | REPLACE                        | 0.6                      |             |              | 117                                 |                        |
| 090704                 | "Battery Relay, K9 and K10"                  | REPLACE                        | 0.8                      |             |              | 117                                 |                        |
| 090705                 | Battery                                      | TEST                           | 0.5                      |             |              |                                     | I                      |
|                        |                                              | SERVICE                        | 3.6                      |             |              | 8 98 99 101<br>122                  |                        |
|                        |                                              | REPLACE                        | 0.8                      |             |              | 115                                 |                        |
| 090706                 | Battery Conditioner/<br>Analyzer             | INSPECT                        | 0.1                      |             |              |                                     | I                      |
|                        |                                              | TEST                           | 0.3                      |             |              | 98 99                               |                        |
|                        |                                              | REPLACE                        | 0.6                      |             |              | 115                                 |                        |
|                        |                                              | REPAIR                         |                          |             | --           |                                     | AB                     |
|                        |                                              | TEST                           |                          |             |              |                                     |                        |
| 090707                 | Converter                                    | REPLACE                        | 0.7                      |             |              |                                     |                        |
|                        |                                              | REPAIR                         |                          |             | --           |                                     | AB                     |
| 090708                 | "DC Current Limiter, CL7"                    | REPLACE                        | 0.4                      |             |              | 115                                 |                        |
| 090709                 | "Power Contactor, K83 (EH-60A)"              | REPLACE                        | 0.5                      |             |              | 115                                 |                        |
| 090710                 | "Power Current Limiter, CL10 (EH-60A)"       | REPLACE                        | 0.5                      |             |              | 115                                 |                        |
| 0908                   | System Interface Components                  |                                |                          |             |              |                                     |                        |

## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION                                                                                     | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|--------------------------------------------------------------------------------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                                                                                        |                                | AVUM<br>(O)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 090801                 | Fuel Boost Pump<br>Control Panel                                                                       | REPLACE                        | 0.6                      | 1.5         |              | 117                                 |                        |
|                        |                                                                                                        | REPLACE                        | 0.3                      |             |              | 99 117                              |                        |
|                        |                                                                                                        |                                |                          |             |              | 117 157                             |                        |
| 090802                 | "Electric Motor, Utility<br>Hydraulic Pump"                                                            | INSPECT                        | 0.4                      |             | 8.0          |                                     |                        |
|                        |                                                                                                        | REPLACE                        | 1.6                      |             |              | 21 115 117<br>128                   |                        |
|                        |                                                                                                        | REPAIR                         | 0.5                      |             |              | 117                                 |                        |
|                        |                                                                                                        | TEST                           | 0.1                      |             |              | 89                                  |                        |
|                        |                                                                                                        |                                |                          |             |              |                                     |                        |
| 090803                 | "Utility Hydraulic<br>Pump Relay, K19"                                                                 | REPLACE                        | 0.4                      |             |              | 115                                 |                        |
| 090804                 | Utility Hydraulic<br>Pump Remote Circuit<br>Breaker                                                    | REPLACE                        | 0.4                      |             |              | 115                                 |                        |
| 0909                   | Dimming Controls                                                                                       | REPLACE                        | 0.5                      |             |              | 115                                 |                        |
|                        |                                                                                                        | TEST                           | 0.1                      |             |              | 89                                  |                        |
| 0910                   | Lighting Installation                                                                                  | TEST                           | 0.3                      |             |              | 89                                  |                        |
|                        |                                                                                                        | REPAIR                         | 0.5                      |             |              | 115 117                             |                        |
| 091001                 | "Cabin Dome Lights<br>(EH-60A) STA 285.0,<br>STA 320.0 (UH-60A<br>and UH-60L) STA<br>303.0, STA 374.0" | INSPECT                        | 0.1                      |             |              |                                     |                        |
|                        |                                                                                                        | REPLACE                        | 0.4                      |             |              | 117                                 |                        |

## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION                                                                                         | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|------------------------------------------------------------------------------------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                                                                                            |                                | AVUM<br>(0)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 091002                 | "Utility Lights (EH-60A) LH/RH/Center, (UH-60A and UH-60L) Pilot/Copilot/Third Light/Portable Maintenance" | REPAIR                         | 0.7                      |             |              | 115 117                             |                        |
|                        |                                                                                                            | TEST                           | 0.1                      |             |              | 89                                  |                        |
|                        |                                                                                                            | INSPECT                        | 0.1                      |             |              |                                     |                        |
| 091003                 | Glare Shield Lamps and Harness                                                                             | REPLACE                        | 0.3                      |             |              | 117                                 |                        |
|                        |                                                                                                            | REPAIR                         | 0.2                      |             |              | 115 117                             |                        |
|                        |                                                                                                            | TEST                           | 0.1                      |             |              | 89                                  |                        |
|                        |                                                                                                            | INSPECT                        | 0.1                      |             |              |                                     |                        |
|                        |                                                                                                            | REPLACE                        | 0.4                      |             |              | 117                                 |                        |
| 091004                 | Secondary Lights                                                                                           | REPAIR                         | 0.2                      |             |              | 115 117                             |                        |
|                        |                                                                                                            | TEST                           | 0.1                      |             |              | 89                                  |                        |
|                        |                                                                                                            | INSPECT                        | 0.1                      |             |              |                                     |                        |
|                        |                                                                                                            | REPLACE                        | 0.7                      |             |              | 117                                 |                        |
|                        |                                                                                                            | REPAIR                         | 0.5                      |             |              | 115 117                             |                        |
| 091005                 | Formation Lights                                                                                           | TEST                           | 0.1                      |             |              | 89                                  |                        |
|                        |                                                                                                            | INSPECT                        | 0.2                      |             |              |                                     |                        |
|                        |                                                                                                            | REPLACE                        | 0.6                      |             |              | 117                                 |                        |
|                        |                                                                                                            | REPAIR                         | 0.3                      |             |              | 115 117                             |                        |
|                        |                                                                                                            | TEST                           | 0.2                      |             |              | 89                                  |                        |

## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION           | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                              |                                | AVUM<br>(0)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 091006                 | Position Lights              | INSPECT                        | 0.2                      |             |              |                                     |                        |
|                        |                              | REPLACE                        | 0.7                      |             |              | 117                                 |                        |
|                        |                              | REPAIR                         | 0.3                      |             |              | 115 117                             |                        |
|                        |                              | TEST                           | 0.2                      |             |              | 89                                  |                        |
| 091007                 | Anti-Collision Lights        | INSPECT                        | 0.2                      |             |              |                                     |                        |
|                        |                              | REPLACE                        | 0.5                      |             |              | 117                                 |                        |
|                        |                              | REPAIR                         | 1.1                      |             |              | 115 117                             |                        |
|                        |                              | TEST                           | 0.2                      |             |              | 89                                  |                        |
| 09100701               | Power Supply Unit            | REPLACE                        | 0.7                      |             |              |                                     |                        |
|                        |                              | REPAIR                         |                          |             | --           |                                     |                        |
| 091008                 | Retractable Landing<br>Light | INSPECT                        | 0.2                      |             |              |                                     |                        |
|                        |                              | REPLACE                        | 0.9                      |             |              | 115 117                             |                        |
|                        |                              | REPAIR                         | 0.3                      |             |              | 117                                 |                        |
|                        |                              |                                |                          |             | 1.8          | 117                                 |                        |
| 091009                 | Controllable<br>Searchlight  | TEST                           | 0.2                      |             |              | 89                                  |                        |
|                        |                              | INSPECT                        | 0.2                      |             |              |                                     |                        |
|                        |                              | REPLACE                        | 0.4                      |             |              | 117                                 |                        |
|                        |                              | REPAIR                         | 0.3                      |             |              | 115 117                             |                        |
|                        |                              |                                |                          | 0.9         |              | 117                                 |                        |
|                        |                              | TEST                           | 0.2                      |             |              | 89                                  |                        |



## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION                             | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|------------------------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                                |                                | AVUM<br>(0)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 091010                 | Cargo Hook Lighting<br>(UH-60A and UH-<br>60L) | INSPECT                        | 0.1                      |             |              |                                     |                        |
|                        |                                                | REPLACE                        | 0.3                      |             |              | 117                                 |                        |
|                        |                                                | TEST                           | 0.1                      |             |              | 89                                  |                        |
| 091011                 | ICS Panel Flood<br>Lights Panel                | INSPECT                        | 0.1                      |             |              |                                     |                        |
|                        |                                                | REPLACE                        | 0.2                      |             |              | 117                                 |                        |
|                        |                                                | TEST                           | 0.1                      |             |              | 89                                  |                        |
| 091012                 | Ignition Switch                                | REPLACE                        | 0.5                      |             |              | 115 117                             |                        |
| 0911                   | ARC-220(V) HF<br>Radio and TSEC/KY-<br>100     | INSPECT                        | 1.0                      |             |              |                                     |                        |
| 10                     | Fuel Systems                                   | INSPECT                        | 0.8                      |             |              | 117                                 |                        |
|                        |                                                | SERVICE                        | 0.4                      |             |              | 117                                 |                        |
| 1001                   | Main Fuel Cell                                 | INSPECT                        | 0.8                      |             |              |                                     |                        |
|                        |                                                | REPLACE                        | 35.4                     |             |              | 117                                 |                        |
|                        |                                                | TEST                           | 2.9                      |             |              | 56                                  |                        |
|                        |                                                | REPAIR                         |                          | 16.0        |              | 105 108 114<br>149                  |                        |
|                        |                                                | SERVICE                        | 3.9                      |             |              |                                     |                        |
|                        |                                                | SERVICE                        | --                       |             |              |                                     |                        |
|                        |                                                | SERVICE                        | --                       |             |              |                                     |                        |
|                        |                                                | SERVICE                        | --                       |             |              |                                     |                        |

**MAINTENANCE ALLOCATION CHART** - Continued**Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued**

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION                                          | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|-------------------------------------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                                             |                                | AVUM<br>(O)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 100101                 | Plate Assembly and Components                               | SERVICE                        | --                       |             |              |                                     |                        |
|                        |                                                             | REPLACE                        | 4.8                      |             |              | 27 124                              |                        |
|                        |                                                             | REPAIR                         | 1.1                      |             |              | 21 117                              |                        |
| 100102                 | High Level Shutoff Valves                                   | REPLACE                        | 2.4                      |             |              | 21 117                              |                        |
| 100103                 | Pressure Refuel/Defuel Valve                                | REPLACE                        | 2.5                      |             |              | 21 117                              |                        |
| 100105                 | Sump Drain Valve                                            | INSPECT                        | 0.8                      |             |              |                                     |                        |
|                        |                                                             | REPLACE                        |                          |             |              | 21 117 150                          |                        |
| 100104                 | Prime Boost Pump Check Valve                                | REPLACE                        | 0.9                      |             |              | 21 117                              |                        |
| 100106                 | Main Fuel Line Check Valve                                  | REPLACE                        | 1.1                      |             |              | 21 117                              |                        |
| 100107                 | Low Level Shutoff Valve                                     | REPLACE                        | 3.0                      |             |              | 21 117 121                          |                        |
| 100108                 | Pressure Refuel Valve                                       | INSPECT                        | 0.2                      |             |              |                                     |                        |
|                        |                                                             | REPLACE                        | 2.6                      |             |              | 21 117                              |                        |
| 100109                 | Extended Range Interconnect Hose                            | REPLACE                        | 0.7                      |             |              | 117                                 |                        |
| 100110                 | Fuel Boost Pump                                             | REPLACE                        | 1.4                      |             |              | 117 128                             | S                      |
| 100111                 | Fuel Pressure Switch                                        | REPLACE                        | 0.6                      |             |              | 21 117                              | S                      |
| 1002                   | Fuel Boost Pump Control Panel (See Functional Group 090801) |                                |                          |             |              |                                     |                        |

## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION                         | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|--------------------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                            |                                | AVUM<br>(0)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 1003                   | "Fuel Shutoff Valve,<br>Main Engine Prime" | REPLACE                        | 3.2                      |             |              | 21 117                              |                        |
|                        |                                            | REPAIR                         | 1.3                      |             |              | 117                                 |                        |
| 1004                   | Fuel System Vent<br>Valve                  | REPLACE                        | 2.3                      |             |              | 21 117                              |                        |
| 1005                   | Prime Boost Pump                           | REPLACE                        | 3.0                      |             |              | 21 117                              |                        |
|                        |                                            | REPAIR                         |                          |             | 2.1          |                                     |                        |
| 1006                   | Fuel Outlet Valve<br>Prime Boost Pump      | REPLACE                        | 16.0                     |             |              | 21 117                              |                        |
| 1007                   | Fuel Breakaway Valve<br>Prime Boost Pump   | REPLACE                        | 1.5                      |             |              | 21 117                              |                        |
| 1008                   | Fuel Selector Valve                        | REPLACE                        | 2.2                      |             |              | 21 117                              |                        |
| 1009                   | Fuel Breakaway and<br>Self Sealing Valves  | INSPECT                        | 0.9                      |             |              |                                     |                        |
|                        |                                            | REPLACE                        | 2.3                      |             |              | 21 117 128                          |                        |
| 1010                   | Fuel Drain and Vent<br>Lines               | INSPECT                        | 0.4                      |             |              |                                     |                        |
|                        |                                            | REPLACE                        | 1.7                      |             |              | 15 21 117<br>128                    |                        |
| 1011                   | Fuel System Line and<br>Hoses              | INSPECT                        | 0.6                      |             |              | 21 117                              |                        |
|                        |                                            | REPLACE                        | 2.2                      |             |              |                                     |                        |
| 1012                   | Pressure Refuel<br>Receptacle              | INSPECT                        | 1.1                      |             |              |                                     |                        |
|                        |                                            | REPLACE                        | 0.7                      |             |              | 117                                 |                        |
|                        |                                            | REPAIR                         | 0.3                      |             |              | 117                                 |                        |

## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION                                             | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|----------------------------------------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                                                |                                | AVUM<br>(O)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 101201                 | Pressure Refuel<br>Receptacle Adapter<br>and Nipple            | INSPECT                        | 1.4                      |             |              | 21 117                              |                        |
|                        |                                                                | REPLACE                        |                          |             |              |                                     |                        |
| 1013                   | Fuel Quantity System                                           |                                | 1.6                      |             |              | 34                                  |                        |
| 101301                 | Fuel Quantity Probe                                            | REPLACE                        | 0.7                      |             |              | 4 21 117                            |                        |
| 101302                 | Fuel Cell Wire Har-<br>ness                                    | REPLACE                        | 1.1                      |             |              | 21 117                              |                        |
| 101303                 | Low Level Warning<br>Conditioner                               | REPLACE                        | 0.4                      |             |              | 99 115 117                          |                        |
|                        |                                                                | TEST                           | 0.9                      |             |              |                                     |                        |
| 101304                 | Fuel Quantity Signal<br>Conditioner                            | REPLACE                        | 0.4                      |             |              | 99 115 117                          |                        |
|                        |                                                                | TEST                           | 0.6                      |             |              |                                     |                        |
| 1014                   | External Stores Sup-<br>port System (ESSS)<br>Fixed Components |                                |                          |             |              |                                     |                        |
| 101401                 | Bleed Air Lines and<br>Disconnects                             | INSPECT                        | 0.2                      |             |              |                                     |                        |
|                        |                                                                | REPLACE                        | 0.9                      |             |              | 21 117 128                          |                        |
| 101402                 | Fuel Lines and<br>Disconnects                                  | INSPECT                        | 0.3                      |             |              |                                     |                        |
|                        |                                                                | REPLACE                        | 0.9                      |             |              | 21 117 128                          |                        |
| 1015                   | Fuel Feed System                                               | SERVICE                        |                          |             |              | 153                                 |                        |
|                        |                                                                | TEST                           |                          |             |              | 21 123 128<br>151 152 153           |                        |

## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION                       | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|------------------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                          |                                | AVUM<br>(0)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 11                     | Flight Control Systems                   | INSPECT                        | 3.6                      |             |              | 117                                 |                        |
|                        |                                          | ADJUST                         | 1.7                      |             |              | 68 116 117                          |                        |
|                        |                                          | ALIGN                          | 66.1                     |             |              | 21 69 117<br>128                    |                        |
|                        |                                          | ALIGN                          | 13.1                     |             |              | 21 69 117<br>128                    |                        |
|                        |                                          | TEST                           | 0.6                      |             |              | 68 117                              |                        |
| 1101                   | Yaw Control Installa-<br>tion            |                                |                          |             |              |                                     |                        |
| 110101                 | Toe Brake Pedal                          | REPLACE                        | 1.1                      |             |              | 4 27 117                            |                        |
|                        |                                          | REPAIR                         |                          | 1.4         |              | 1 4 21 96<br>120 154 155<br>156     |                        |
| 110102                 | Boot Assembly                            | REPLACE                        | 1.1                      |             |              | 4 117                               |                        |
| 110103                 | Pedal Support As-<br>sembly              | REPLACE                        | 0.6                      |             |              | 4 21 27 117                         |                        |
|                        |                                          | REPAIR                         |                          | 1.3         |              | 96 116 117<br>120 154 156           |                        |
| 11010301               | "Trim Switch, Pedal<br>Support Assembly" | REPLACE                        | 0.3                      |             |              | 4 27 117                            |                        |
|                        |                                          | TEST                           | 0.4                      |             |              |                                     |                        |
|                        |                                          | TEST                           |                          | 0.9         |              | 117                                 |                        |
| 110104                 | Pedal Adjuster As-<br>sembly             | INSPECT                        | 0.6                      |             |              | 4 21 27 117                         | AD                     |
|                        |                                          | OVERHAUL                       | 1.1                      |             |              | 117                                 |                        |
|                        |                                          | REPAIR                         | 0.6                      |             |              | 1 117                               |                        |

## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION                                 | (3)<br>MAINTENANCE<br>FUNCTION         | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|----------------------------------------------------|----------------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                                    |                                        | AVUM<br>(O)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 110105                 | Pedal Adjuster Handle<br>and Cable                 | OVERHAUL<br>REPLACE<br>TEST<br>REPLACE | 0.9<br>1.9<br>0.3<br>1.2 | 0.8         | 14.9         | 1 4 96 120<br>154 155               | AD                     |
|                        |                                                    |                                        |                          |             |              | 21 117                              |                        |
|                        |                                                    |                                        |                          |             |              | 2 117 131                           |                        |
|                        |                                                    |                                        |                          |             |              | 117                                 |                        |
| 1102                   | "Control Installation,<br>Cyclic Pitch"            |                                        |                          |             |              |                                     |                        |
| 110201                 | "Cyclic Stick, Yoke<br>and Housing As-<br>sembly"  | INSPECT<br><br>REPLACE<br>REPAIR       | 0.1<br><br>2.2<br>1.9    |             |              |                                     |                        |
|                        |                                                    |                                        |                          |             |              | 4 21 115                            |                        |
|                        |                                                    |                                        |                          |             |              | 4 21 117<br>120 135 154             |                        |
|                        |                                                    |                                        |                          |             |              | 117                                 |                        |
| 110202                 | Boot Assembly                                      | REPLACE                                | 0.2                      |             |              | 117                                 |                        |
| 110203                 | Yoke and Housing                                   | REPLACE<br><br>ADJUST                  | 2.8<br><br>0.4           |             |              | 4 21 115<br>117                     |                        |
|                        |                                                    |                                        |                          |             |              | 117                                 |                        |
| 110204                 | Grip Assembly                                      | REPLACE                                | 1.5                      |             |              | 115                                 |                        |
| 11020401               | Grip Assembly<br>Switches (UH-60A/L<br>and HH-60A) | REPLACE<br><br>TEST                    | 0.6<br><br>0.2           |             |              | 115 132 157                         |                        |
|                        |                                                    |                                        |                          |             |              |                                     |                        |

## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION                                       | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|----------------------------------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                                          |                                | AVUM<br>(0)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 11020402               | RAD SEL Switch<br>(HH-60A and HH-60L)                    | REPLACE                        | 0.3                      |             |              | 115 132                             | AN                     |
|                        |                                                          | TEST                           | 0.2                      |             |              |                                     |                        |
| 1103                   | "Control Installation,<br>Collective Pitch"              |                                |                          |             |              |                                     | AD                     |
| 110301                 | Collective Stick As-<br>sembly                           | INSPECT                        | 0.3                      |             |              |                                     |                        |
|                        |                                                          | REPLACE                        | 3.8                      |             |              | 115 117                             |                        |
|                        |                                                          | REPAIR                         | 1.7                      |             |              | 115 117                             |                        |
|                        |                                                          |                                |                          | 2.6         |              |                                     |                        |
| 11030101               | Collective Stick                                         | INSPECT                        | 0.4                      |             |              |                                     |                        |
|                        |                                                          | REPAIR                         | 1.3                      |             |              | 115 117                             |                        |
| 110302                 | Boot Assembly                                            | REPLACE                        | 0.3                      |             |              | 117                                 |                        |
| 110303                 | Collective Stick Collet<br>Blocks                        | REPLACE                        | 1.5                      |             |              | 117                                 |                        |
| 110304                 | Collective Stick Sup-<br>port Assembly                   | REPLACE                        | 2.4                      |             |              | 117                                 |                        |
| 110305                 | Collective Stick Grip<br>Assembly                        | INSPECT                        | 0.2                      |             |              | 115 117                             |                        |
|                        |                                                          | REPLACE                        | 1.7                      |             |              |                                     |                        |
| 11030501               | "Lighted Panel, Lamps<br>and Switches, Grip<br>Assembly" | REPLACE                        | 1.1                      |             |              | 115                                 |                        |
| 110306                 | Grip Coil Cord                                           | INSPECT                        | 0.1                      |             |              |                                     |                        |
|                        |                                                          | REPLACE                        | 0.3                      |             |              | 117                                 |                        |

## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION                      | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|-----------------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                         |                                | AVUM<br>(0)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 1104                   | Controls Installation                   |                                |                          |             |              |                                     | AD                     |
| 110401                 | Yaw Pedals and<br>Adjuster Control Rods | REPLACE                        | 0.9                      |             |              | 4 21 117                            | AD AG                  |
| 110402                 | Control Rod As-<br>semblies             | INSPECT                        | 0.3                      |             |              |                                     | AD AG                  |
|                        |                                         | REPLACE                        | 3.2                      |             |              | 4 21 69 118<br>128                  |                        |
|                        |                                         | ADJUST                         | 0.6                      |             |              |                                     |                        |
|                        |                                         | REPAIR                         |                          | 1.4         |              | 96 117 132<br>135 154               |                        |
| 110403                 | Bellcranks Rod As-<br>semblies          | INSPECT                        | 0.3                      |             |              |                                     | AD                     |
|                        |                                         | REPLACE                        | 3.2                      |             |              | 4 21 69 118<br>128                  |                        |
|                        |                                         | REPAIR                         |                          | 1.4         |              | 96 117 132<br>135 154               |                        |
| 1105                   | Controls Installation                   |                                |                          |             |              |                                     | AD                     |
| 110501                 | Yaw Trim Servo                          | REPLACE                        | 1.1                      |             |              | 4 21 99 115<br>117                  | AD                     |
|                        |                                         | REPAIR                         |                          |             | --           |                                     |                        |
| 110502                 | Roll Trim Servo                         | REPLACE                        | 1.1                      |             |              | 4 21 99 115<br>117                  | AD                     |
|                        |                                         | REPAIR                         |                          |             | --           |                                     |                        |
| 110503                 | Upper Deck Torque<br>Shafts and Levers  | INSPECT                        | 0.2                      |             |              |                                     | AD                     |
|                        |                                         | REPLACE                        | 1.6                      |             |              | 4 21 69 117<br>118 129 130          |                        |



## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION                                        | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|-----------------------------------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                                           |                                | AVUM<br>(0)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 110504                 | Flight Control Rods                                       | INSPECT                        | 0.3                      |             |              |                                     | I AG                   |
|                        |                                                           | REPLACE                        | 3.2                      |             |              | 4 21 69 118<br>128                  |                        |
|                        |                                                           | ADJUST                         | 0.6                      |             |              |                                     |                        |
|                        |                                                           | REPAIR                         |                          | 1.4         |              | 96 117 132<br>135 154               |                        |
| 110505                 | Flight Control<br>Bellcranks and Shaft                    | INSPECT                        | 0.7                      |             |              |                                     | AD                     |
|                        |                                                           | REPLACE                        | 1.6                      |             |              | 4 21 117<br>135                     |                        |
|                        |                                                           | REPAIR                         |                          | 1.7         |              | 4 96 116<br>117 120 154<br>160      |                        |
| 110506                 | Flight Controls Bal-<br>ance Springs                      | REPLACE                        | 0.8                      |             |              | 117                                 |                        |
| 110507                 | Pilot Assist Module<br>(See functional group<br>07020304) |                                |                          |             |              |                                     |                        |
| 110508                 | Collective Boost Servo<br>Assembly                        | INSPECT                        | 0.2                      |             |              |                                     | AD R                   |
|                        |                                                           | REPLACE                        | 3.2                      |             |              | 21 118 128                          |                        |
|                        |                                                           | REPAIR                         | 0.3                      |             |              | 21 117                              |                        |
|                        |                                                           |                                |                          | 0.8         |              | 118 154                             |                        |
|                        |                                                           | TEST                           | 0.9                      |             | 5.4          |                                     |                        |
|                        |                                                           | TEST                           |                          | 0.9         |              |                                     |                        |

## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION                                                                               | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|--------------------------------------------------------------------------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                                                                                  |                                | AVUM<br>(O)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 11050801               | Actuator/Cylinder As-<br>sembly Collective<br>Boost                                              | TEST                           |                          |             | 1.3          | 118                                 |                        |
|                        |                                                                                                  | REPLACE                        |                          |             | 3.2          | 21 117 128                          |                        |
|                        |                                                                                                  | REPAIR                         |                          |             | 51.1         | 21 117 154                          |                        |
| 11050802               | Manifold Assembly<br>Collective Boost                                                            | TEST                           |                          | 1.0         |              | 78                                  |                        |
|                        |                                                                                                  | REPAIR                         |                          |             | 2.6          | 21 103 117<br>118                   |                        |
|                        |                                                                                                  | TEST                           |                          |             | 1.1          | 78 79 103<br>118                    |                        |
| 110509                 | Pitch Trim Servo As-<br>sembly                                                                   | INSPECT                        | 0.2                      |             |              |                                     | AD                     |
|                        |                                                                                                  | REPLACE                        | 3.2                      |             |              | 21 118 128                          |                        |
|                        |                                                                                                  | REPAIR                         | 0.2                      |             |              | 21 118                              |                        |
| 11050901               | "Stability Augmenta-<br>tion System (SAS)<br>Module Assembly,<br>Pitch Trim Servo As-<br>sembly" |                                |                          | 0.8         |              | 118 154                             | AD                     |
|                        |                                                                                                  |                                |                          |             | 5.4          |                                     |                        |
|                        |                                                                                                  | TEST                           | 0.9                      |             |              |                                     |                        |
|                        |                                                                                                  | TEST                           |                          | 0.9         |              |                                     |                        |
|                        |                                                                                                  | TEST                           |                          |             | 1.3          | 118                                 |                        |
|                        |                                                                                                  | REPLACE                        |                          | 1.1         |              | 4 21 117                            |                        |
|                        |                                                                                                  | REPAIR                         |                          | 0.3         |              | 4 21 118<br>154                     |                        |

## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION                                                                      | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|-----------------------------------------------------------------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                                                                         |                                | AVUM<br>(0)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 1105090101             | "Stability Augmentation System (SAS) Servovalve, SAS Module Assembly, Pitch Trim Servo" | OVERHAUL                       |                          | 0.9         | 2.6          | 4 21 117<br>118                     |                        |
|                        |                                                                                         | TEST                           |                          | 0.6         |              |                                     |                        |
|                        |                                                                                         | REPLACE                        |                          | 0.3         |              |                                     |                        |
|                        |                                                                                         | REPAIR                         |                          | 0.8         |              |                                     |                        |
| 1105090102             | "Stability Augmentation System (SAS) Actuator Assembly, Pitch Trim Servo"               | REPLACE                        |                          | 1.5         | 2.6          | 4 21 117                            |                        |
|                        |                                                                                         | REPAIR                         |                          |             | 3.3          | 4 21 117                            |                        |
|                        |                                                                                         | TEST                           |                          |             | --           |                                     |                        |
|                        |                                                                                         | REPLACE                        |                          |             | 3.2          | 21 117 128                          |                        |
| 11050902               | Actuator/Cylinder Assembly                                                              | REPAIR                         |                          |             | 5.4          | 21 117 128                          |                        |
|                        |                                                                                         | REPLACE                        |                          |             | 1.5          | 4 21 117                            |                        |
| 11050903               | "Electromechanical Actuator, Pitch Trim Servo"                                          | REPAIR                         |                          |             | 6.3          | 4 21 115<br>117                     |                        |
|                        |                                                                                         | TEST                           |                          |             | --           |                                     |                        |
|                        |                                                                                         | INSPECT                        | 0.2                      |             |              |                                     |                        |
| 110510                 | Roll Trim Assembly                                                                      | REPLACE                        | 3.2                      |             |              | 21 117 128                          | AD                     |
|                        |                                                                                         |                                |                          |             |              |                                     |                        |

## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION                                                    | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|-----------------------------------------------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                                                       |                                | AVUM<br>(O)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 11051001               | "Stability Augmentation System (SAS) Module Assembly, Roll Trim"      | REPAIR                         | 0.2                      |             |              | 21 117                              |                        |
|                        |                                                                       |                                |                          | 0.8         |              | 117 154                             |                        |
|                        |                                                                       | OVERHAUL                       |                          | 1.8         | 6.4          | 4 21 117                            |                        |
|                        |                                                                       | REPLACE                        |                          | 1.9         |              | 4 21 117                            |                        |
| 1105100101             | "Stability Augmentation System (SAS) Servovalve, SAS Module Assembly" | REPAIR                         |                          | 0.3         |              | 4 21 118<br>154                     |                        |
|                        |                                                                       |                                |                          |             | 2.6          |                                     |                        |
|                        |                                                                       | OVERHAUL                       |                          | 0.9         |              |                                     |                        |
|                        |                                                                       | TEST                           |                          | 0.6         |              |                                     |                        |
| 1105100102             | "Stability Augmentation System (SAS) Actuator Assembly, SAS Module"   | REPLACE                        |                          | 0.3         |              |                                     |                        |
|                        |                                                                       | REPAIR                         |                          | 0.8         |              | 4 21 118                            |                        |
|                        |                                                                       |                                |                          |             | 2.6          |                                     |                        |
|                        |                                                                       | REPLACE                        |                          | 1.5         |              | 4 117 118<br>154                    |                        |
| 11051002               | "Links and Levers, Roll Trim"                                         | REPAIR                         |                          |             | 3.3          | 4 21 117                            |                        |
|                        |                                                                       | TEST                           |                          |             | --           |                                     |                        |
|                        |                                                                       | REPLACE                        |                          | 1.2         |              | 4 21 117                            |                        |

## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION                                                                | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|-----------------------------------------------------------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                                                                   |                                | AVUM<br>(0)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 11051003               | "Cylinder Assembly,<br>Roll Trim"                                                 | REPAIR                         |                          | 0.7         |              | 4 21 117                            | AD R                   |
|                        |                                                                                   |                                |                          |             | 0.9          | 4 21 117<br>154                     |                        |
|                        |                                                                                   | REPLACE                        |                          |             | 3.2          | 21 117 128                          |                        |
| 110511                 | Yaw Boost Servo As-<br>sembly                                                     | REPAIR                         |                          |             | 5.4          | 21 117 128                          |                        |
|                        |                                                                                   | INSPECT                        | 0.2                      |             |              |                                     |                        |
|                        |                                                                                   | REPLACE                        | 2.2                      |             |              | 21 117 128                          |                        |
| 11051101               | "Stability Augmenta-<br>tion System (SAS)<br>Module Assembly,<br>Yaw Boost Servo" | REPAIR                         | 0.3                      |             |              | 21 117                              |                        |
|                        |                                                                                   |                                |                          | 0.8         |              | 117 154                             |                        |
|                        |                                                                                   |                                |                          |             | 6.4          |                                     |                        |
|                        |                                                                                   | OVERHAUL                       |                          | 1.8         |              | 4 21 117                            |                        |
|                        |                                                                                   | TEST                           | 0.7                      |             |              |                                     |                        |
|                        |                                                                                   | TEST                           |                          | 0.7         |              |                                     |                        |
|                        |                                                                                   | TEST                           |                          |             | 1.2          |                                     |                        |
|                        |                                                                                   | REPLACE                        |                          | 1.9         |              | 4 21 117                            | AD                     |
|                        |                                                                                   | REPAIR                         |                          | 0.3         |              | 4 21 118<br>154                     |                        |
|                        |                                                                                   |                                |                          |             | 2.6          |                                     |                        |
|                        |                                                                                   | OVERHAUL                       |                          | 0.9         |              | 4 21 117                            |                        |
|                        |                                                                                   | TEST                           |                          | 0.6         |              |                                     |                        |

## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION                                                    | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|-----------------------------------------------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                                                       |                                | AVUM<br>(O)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 1105110101             | "Stability Augmentation System (SAS) Servovalve, SAS Module Assembly" | REPLACE                        |                          | 0.3         |              | 4 21 117                            | AD                     |
|                        |                                                                       | REPAIR                         |                          | 0.8         |              | 4 21 118                            |                        |
|                        |                                                                       |                                |                          |             | 2.6          |                                     |                        |
| 1105110102             | "Stability Augmentation System (SAS) Actuator Assembly, SAS Module"   | REPLACE                        |                          | 1.5         |              | 4 117 118<br>154                    |                        |
|                        |                                                                       | REPAIR                         |                          |             | 3.3          | 4 21 117                            |                        |
|                        |                                                                       | TEST                           |                          |             | --           |                                     |                        |
| 11051102               | "Actuator/Cylinder Assembly, Yaw Boost Servo"                         | REPLACE                        |                          |             | 3.2          | 21 117 128                          |                        |
|                        |                                                                       | REPAIR                         |                          |             | 5.4          | 21 117 154                          |                        |
|                        |                                                                       |                                |                          |             |              |                                     |                        |
| 11051103               | "Manifold Assembly, Yaw Boost Servo"                                  | REPAIR                         |                          |             | 2.6          | 21 103 117<br>118                   |                        |
|                        |                                                                       | TEST                           |                          |             |              | 78 79 103<br>118                    |                        |
|                        |                                                                       |                                |                          |             |              |                                     |                        |
| 110512                 | Flight Control Rods and Links                                         | INSPECT                        | 0.3                      |             |              |                                     | I AD AG                |
|                        |                                                                       | REPLACE                        | 3.2                      |             |              | 4 21 69 118<br>128                  |                        |
|                        |                                                                       | ADJUST                         | 0.6                      |             |              |                                     |                        |
|                        |                                                                       | REPAIR                         |                          | 1.4         |              | 96 117 132<br>135 154               |                        |
| 110513                 | Mixer Assembly                                                        | INSPECT                        | 2.1                      |             |              |                                     | T AD                   |

## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION                            | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE   | (6)<br>REMARKS<br>CODE |
|------------------------|-----------------------------------------------|--------------------------------|--------------------------|-------------|--------------|---------------------------------------|------------------------|
|                        |                                               |                                | AVUM<br>(0)              | AVIM<br>(F) | DEPOT<br>(D) |                                       |                        |
| 11051301               | No. 3 Collective Position Sensor (UH-60L)     | REPLACE                        | 33.1                     |             |              | 4 21 69 100<br>115 117 135<br>142 158 |                        |
|                        |                                               | REPAIR                         | 1.6                      |             |              | 96 117 135<br>159                     |                        |
|                        |                                               | ADJUST                         | 0.4                      |             |              |                                       |                        |
|                        |                                               | SERVICE                        | 0.3                      |             |              |                                       |                        |
| 1105130101             | "Links/Levers and Bellcranks, Mixer Assembly" | REPLACE                        | 0.4                      |             |              | 4 21 99 115<br>117                    |                        |
|                        |                                               | REPLACE                        | 0.8                      |             |              | 4 21 69 117<br>221 222                | AD                     |
|                        |                                               | REPAIR                         |                          | 1.2         |              | 96 117 135<br>159                     |                        |
| 110514                 | Flight Control Rods/Links                     | INSPECT                        | 0.3                      |             |              |                                       | I AD AG                |
|                        |                                               | REPLACE                        | 3.2                      |             |              | 4 21 69 118<br>128                    |                        |
|                        |                                               | ADJUST                         | 0.6                      |             |              |                                       |                        |
|                        |                                               | REPAIR                         |                          | 1.4         |              | 96 117 132<br>135 154                 |                        |
| 110515                 | Primary Servo Assembly                        | INSPECT                        | 0.7                      |             |              |                                       | AD                     |
|                        |                                               | REPLACE                        | 1.9                      |             |              | 69 115 117                            |                        |
|                        |                                               | REPAIR                         | 0.3                      |             |              | 117                                   |                        |
|                        |                                               |                                |                          |             | 17.6         |                                       |                        |

## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION           | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                              |                                | AVUM<br>(O)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 11051501               | Linkage Assembly             | INSPECT                        |                          |             | 0.2          |                                     |                        |
|                        |                              | OVERHAUL                       |                          |             | 0.5          | 117                                 |                        |
|                        |                              | REPLACE                        |                          |             | 0.2          | 117                                 |                        |
| 11051502               | Servo Assembly               | INSPECT                        |                          |             | 0.8          |                                     | AD                     |
|                        |                              | REPLACE                        |                          |             | 0.9          | 117                                 |                        |
|                        |                              | REPAIR                         |                          |             | 3.6          | 117                                 |                        |
| 11051503               | Cylinder Assembly            | INSPECT                        |                          |             | 0.2          |                                     |                        |
|                        |                              | REPLACE                        |                          |             | 0.5          |                                     |                        |
|                        |                              | REPAIR                         |                          |             | 6.3          |                                     |                        |
| 110516                 | Yaw Lever and Support        | INSPECT                        | 0.3                      |             |              |                                     |                        |
|                        |                              | REPLACE                        | 1.2                      |             |              | 21 117 128<br>135                   |                        |
|                        |                              | REPAIR                         |                          | 1.7         |              | 4 96 116<br>117 120 154<br>160      |                        |
| 110517                 | Forward Quadrant and Support | REPLACE                        | 2.1                      |             |              | 4 117                               |                        |
| 110518                 | Flight Control Rods/Links    | INSPECT                        | 0.3                      |             |              |                                     | AD AG                  |
|                        |                              | REPLACE                        | 3.2                      |             |              | 4 21 69 118<br>128                  |                        |
|                        |                              | ADJUST                         | 0.6                      |             |              |                                     |                        |
|                        |                              | REPAIR                         |                          | 1.4         |              | 96 117 132<br>135 154               |                        |



## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION                           | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|----------------------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                              |                                | AVUM<br>(0)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 1106                   | Flight Control Cable and Pulleys             | INSPECT                        | 0.9                      |             |              | 70 117                              | AE                     |
| 110601                 | Cabin Section Control Cable and Pulleys      | INSPECT                        | 0.2                      |             |              |                                     |                        |
|                        |                                              | REPLACE                        | 1.6                      |             |              | 4 21 69 70<br>117 161               |                        |
| 110602                 | Tail Cone Section Control Cable and Pulleys  | INSPECT                        | 0.6                      |             |              |                                     |                        |
|                        |                                              | REPLACE                        | 3.6                      |             |              | 4 21 69 70<br>117 161               |                        |
| 110603                 | Tail Pylon Section Control Cable and Pulleys | INSPECT                        | 0.6                      |             |              |                                     |                        |
|                        |                                              | REPLACE                        | 2.1                      |             |              | 4 21 69 70<br>117 161               |                        |
| 1107                   | Tail Rotor Quadrant                          | INSPECT                        | 0.3                      |             |              |                                     |                        |
|                        |                                              | REPLACE                        | 2.6                      |             |              | 4 21 117<br>162                     |                        |
|                        |                                              | REPAIR                         | 1.1                      |             |              | 4 21 96 117<br>120 135 154<br>162   |                        |
|                        |                                              | TEST                           | 0.7                      |             |              | 89                                  |                        |
| 1108                   | Spring Cylinder and Support                  | REPLACE                        | 1.1                      |             |              | 117                                 |                        |
|                        |                                              | REPAIR                         | 0.3                      |             |              | 117                                 |                        |
| 1109                   | Tail Rotor Servo                             | INSPECT                        | 0.6                      |             |              |                                     | AD                     |
|                        |                                              | REPLACE                        | 12.6                     |             |              | 117                                 |                        |

## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION        | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|---------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                           |                                | AVUM<br>(O)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 110901                 | Pitch Control Shaft       | REPAIR                         | 1.6                      |             |              | 4 21 117<br>128 135                 |                        |
|                        |                           |                                |                          |             | 12.3         | 89                                  |                        |
|                        |                           | TEST                           | 1.0                      |             |              |                                     |                        |
|                        |                           | INSPECT                        | 0.4                      |             |              |                                     |                        |
|                        |                           | REPLACE                        | 0.7                      |             |              | 117                                 |                        |
| 12                     | Utility Systems           | REPAIR                         |                          | 0.9         |              | 117                                 |                        |
|                        |                           |                                |                          |             |              |                                     |                        |
|                        |                           |                                |                          |             |              |                                     |                        |
| 1201                   | Windshield Wiper System   | REPAIR                         | 0.4                      |             |              | 117                                 |                        |
| 120101                 | Converter Assembly        | TEST                           | 0.2                      |             |              | 89                                  |                        |
|                        |                           | REPLACE                        | 0.9                      |             |              | 117                                 |                        |
|                        |                           | OVERHAUL                       | 1.1                      |             |              | 117                                 |                        |
|                        |                           | OVERHAUL                       | 1.3                      |             |              | 117                                 |                        |
|                        |                           | INSPECT                        | 0.3                      |             |              |                                     |                        |
| 120102                 | Motor Assembly            | SERVICE                        | 0.3                      |             |              |                                     |                        |
|                        |                           | INSPECT                        | 0.2                      |             |              |                                     |                        |
|                        |                           | REPLACE                        | 0.7                      |             |              | 117                                 |                        |
|                        |                           | REPAIR                         |                          | 2.6         |              | 115 117                             |                        |
| 1202                   | Fire Extinguishing System | INSPECT                        | 0.6                      |             |              |                                     |                        |
|                        |                           | SERVICE                        | 0.8                      |             |              | 117                                 |                        |

## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION                                                | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|-------------------------------------------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                                                   |                                | AVUM<br>(O)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 120201                 | Agent Containers                                                  | REPAIR                         | 0.4                      |             |              | 4 21 115<br>117 130                 |                        |
|                        |                                                                   | TEST                           | 0.2                      |             |              | 89                                  |                        |
|                        |                                                                   | REPLACE                        | 2.8                      |             |              | 117                                 |                        |
| 120202                 | Explosive Cartridge                                               | REPAIR                         |                          |             | 5.8          |                                     |                        |
|                        |                                                                   | REPLACE                        | 0.7                      |             |              | 4 21 115<br>117                     |                        |
| 120203                 | Directional Valve                                                 | REPLACE                        | 0.7                      |             |              | 21 115 117                          |                        |
|                        |                                                                   | REPAIR                         |                          |             | 0.6          | 117                                 |                        |
| 120204                 | "APU T-Handle, Fire<br>Assembly"                                  | REPLACE                        | 0.3                      |             |              | 117                                 |                        |
|                        |                                                                   | REPAIR                         | 0.2                      |             |              | 117                                 |                        |
| 120205                 | Lines and Hoses                                                   | REPLACE                        | 0.6                      |             |              | 117                                 |                        |
| 120206                 | "T-Handle, Fire Extinguisher (See<br>Functional Group<br>040604)" |                                |                          |             |              |                                     |                        |
| 120207                 | Control Amplifiers                                                | REPLACE                        | 1.0                      |             |              | 99 115                              | Z                      |
| 1203                   | Air Inlet Anti-Ice<br>System                                      | TEST                           | 0.3                      |             |              | 89                                  |                        |
| 120301                 | Anti-Icing Modulating<br>Valve                                    | REPAIR                         | 0.4                      |             |              | 115 117                             |                        |
|                        |                                                                   | REPLACE                        | 1.1                      |             |              | 117                                 |                        |
|                        |                                                                   | REPAIR                         |                          |             | 7.2          |                                     |                        |
|                        |                                                                   | SERVICE                        | 1.4                      |             |              | 117                                 |                        |

## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION                                 | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|----------------------------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                                    |                                | AVUM<br>(O)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 12030101               | Housing Assembly<br>Anti-Icing Modulating<br>Valve | REPAIR                         |                          |             | 1.2          | 117                                 |                        |
| 1204                   | Windshield Anti-Ice                                | TEST                           | 0.3                      |             |              | 89                                  |                        |
| 120401                 | "Control Unit,<br>Windshield Anti-Ice"             | REPLACE                        | 0.4                      |             |              | 99 117                              | Z                      |
|                        |                                                    | REPAIR                         |                          |             | 1.1          | 117                                 |                        |
| 1205                   | Cargo Hook Installa-<br>tion                       | INSPECT                        | 0.2                      |             |              |                                     | I                      |
|                        |                                                    | TEST                           | 0.3                      |             |              | 89                                  |                        |
| 120501                 | "Cargo Hook, 8,000 lb"                             | REPLACE                        | 0.6                      |             |              | 21 115 117<br>130 135               |                        |
|                        |                                                    | REPAIR                         |                          |             |              | 115 117 135                         |                        |
|                        |                                                    | SERVICE                        |                          |             |              | 21 117                              |                        |
|                        |                                                    | TEST                           |                          |             | --           | 89                                  |                        |
| 120502                 | Support Fitting                                    | REPAIR                         |                          |             |              | 117 132                             |                        |
| 120503                 | Pendant Assembly                                   | INSPECT                        | 0.1                      |             |              |                                     |                        |
|                        |                                                    | REPLACE                        | 0.1                      |             |              | 115                                 |                        |
|                        |                                                    | REPAIR                         | 1.4                      |             |              | 115 116 132<br>157                  |                        |
| 1206                   | Blade Deicing System                               |                                |                          |             |              |                                     |                        |
| 120601                 | Ice-Rate Meter                                     | REPLACE                        | 0.3                      |             |              | 115 117                             |                        |
|                        |                                                    | REPAIR                         | 0.3                      |             |              | 115 117                             |                        |
| 120602                 | Blade Deice Control<br>Panel                       | REPLACE                        | 0.3                      |             |              | 115 117                             |                        |

## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION                                          | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|-------------------------------------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                                             |                                | AVUM<br>(0)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 120603                 | Blade Deice Controller                                      | REPAIR                         | 0.3                      |             |              | 115 117                             |                        |
|                        |                                                             | REPLACE                        | 0.3                      |             |              | 115 117                             |                        |
| 120604                 | Blade Deice Test Panel                                      | REPAIR                         |                          |             | --           |                                     |                        |
|                        |                                                             | REPLACE                        | 0.3                      |             |              | 99 115 117                          |                        |
|                        |                                                             | REPAIR                         | 0.4                      |             |              | 117                                 |                        |
| 120605                 | Blade Deice Electrical System                               |                                |                          | 4.1         |              | 115 157                             |                        |
|                        |                                                             |                                |                          |             |              |                                     |                        |
| 12060501               | Auxiliary Junction Box                                      | REPLACE                        | 0.3                      |             |              | 21 115 117                          |                        |
|                        |                                                             | REPAIR                         | 0.8                      |             |              | 21 115 117<br>157                   |                        |
| 12060502               | Blade Deice Junction Box                                    | REPLACE                        | 0.3                      |             |              | 21 115 117                          |                        |
|                        |                                                             | REPAIR                         |                          |             |              | 21 115 117<br>157                   |                        |
| 120606                 | Blade Deice Distrib-<br>uter and Slipring/Brush<br>Assembly | REPLACE                        | 1.7                      |             |              | 99 115 117<br>128                   | Z                      |
|                        |                                                             | REPAIR                         | 0.8                      |             |              |                                     |                        |
| 12060601               | Rotary Switch Slip<br>Ring Assembly                         | REPLACE                        |                          |             | --           |                                     |                        |
|                        |                                                             | REPAIR                         |                          |             | --           |                                     |                        |
| 120607                 | Outside Air<br>Temperature (OAT)<br>Sensor                  | REPLACE                        | 0.6                      |             |              | 117                                 |                        |
| 120608                 | Ice Detector                                                | REPLACE                        | 0.7                      |             |              | 117                                 |                        |

## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION                    | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|---------------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                       |                                | AVUM<br>(0)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 120609                 | Tail Rotor Slipring<br>Rotor Assembly | REPAIR                         |                          |             | --           |                                     |                        |
|                        |                                       | REPLACE                        | 2.9                      |             |              | 21 117 130                          |                        |
|                        |                                       | REPAIR                         |                          | 2.3         |              |                                     |                        |
| 12060901               | "Stator, Tail Rotor<br>Slipring"      | REPLACE                        | 3.4                      |             |              | 99 115 117<br>132                   |                        |
|                        |                                       | REPAIR                         | 0.3                      |             |              |                                     |                        |
| 1206090101             | "Brush Assembly, Tail<br>Rotor"       | REPLACE                        | 0.6                      |             |              | 115 117                             |                        |
|                        |                                       | REPAIR                         | 0.5                      |             |              | 115 117 157                         |                        |
|                        |                                       | SERVICE                        | 0.2                      |             |              |                                     |                        |
| 13                     | Environmental Control<br>Systems      |                                |                          |             |              |                                     |                        |
| 1301                   | Heating and Ventila-<br>tion System   | INSPECT                        | 1.5                      |             |              |                                     |                        |
|                        |                                       | INSPECT                        | 0.5                      |             |              |                                     |                        |
|                        |                                       | REPAIR                         | 1.1                      |             |              | 21 114 117                          |                        |
| 130101                 | Mixing Valve                          | INSPECT                        |                          |             |              |                                     |                        |
|                        |                                       | REPLACE                        |                          |             |              | 21 117                              |                        |
|                        |                                       | REPAIR                         |                          |             |              | 117                                 |                        |
| 130102                 | Mixture Temperature<br>Sensor         | REPLACE                        | 0.6                      |             |              | 114 117                             |                        |
|                        |                                       | REPAIR                         |                          | 0.7         |              | 117                                 |                        |
| 130103                 | Muffler Assembly                      | REPLACE                        | 1.1                      |             |              | 117                                 |                        |

## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION                        | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|-------------------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                           |                                | AVUM<br>(0)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 130104                 | Heating and Venting<br>Blower Unit        | REPLACE                        | 1.5                      |             |              | 21 117                              |                        |
|                        |                                           | REPAIR                         |                          | 1.9         |              | 115 117                             |                        |
| 130105                 | Tubes and Ducting                         | REPLACE                        | 2.1                      |             |              | 117                                 |                        |
|                        |                                           | REPAIR                         | 4.5                      |             |              |                                     |                        |
| 1302                   | Air Conditioning<br>Installation (EH-60A) | INSPECT                        | 2.4                      |             |              |                                     | G                      |
|                        |                                           | REPAIR                         | 0.8                      |             |              | 117                                 |                        |
|                        |                                           | SERVICE                        | 1.8                      |             |              | 117 128                             |                        |
|                        |                                           | SERVICE                        | 0.9                      |             |              | 117 186                             |                        |
| 130201                 | Plenum Assembly<br>(EH-60A)               | INSPECT                        | 0.5                      |             |              |                                     | G                      |
|                        |                                           | REMOVE                         | 1.9                      |             |              | 4 21 115<br>117 128                 |                        |
|                        |                                           | OVERHAUL                       | 1.3                      |             |              | 4 21 115<br>117 128                 |                        |
|                        |                                           | REPAIR                         | 0.9                      |             |              | 4 21 115<br>117 128                 |                        |
| 13020101               | Temperature Sensor<br>(EH-60A)            | REPLACE                        | 0.6                      |             |              | 115 117 128                         | G                      |
| 130202                 | Condenser Pallet As-<br>sembly (EH-60A)   | REPLACE                        |                          | 3.7         |              | 4 21 115<br>117 127 128             | G                      |
|                        |                                           | REPAIR                         | 1.2                      |             |              |                                     |                        |
|                        |                                           | REPAIR                         |                          | 1.9         |              | 4 21 115<br>117 127 128             |                        |

## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION                            | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|-----------------------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                               |                                | AVUM<br>(O)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 13020201               | "Blower, Condenser<br>Pallet (EH-60A)"        | REPLACE                        | 2.9                      |             |              | 115 117 128                         | G                      |
|                        |                                               | REPAIR                         |                          |             | --           |                                     |                        |
| 13020202               | Condenser and Transi-<br>tion Duct (EH-60A)   | REPLACE                        |                          | 1.6         |              | 4 21 115<br>117 128                 | G                      |
| 13020202               | Heat Exchanger (EH-<br>60A)                   | REPLACE                        | 2.1                      |             |              | 4 21 115<br>117 127 128             | G                      |
|                        |                                               | REPAIR                         |                          |             | --           |                                     |                        |
| 130203                 | Evaporator Pallet As-<br>sembly (EH-60A)      | INSPECT                        | 0.6                      |             |              |                                     | G                      |
|                        |                                               | REMOVE                         |                          | 3.1         |              | 4 21 115<br>117 127 128             | E J                    |
|                        |                                               | REPAIR                         | 1.2                      |             |              | 115 117 128                         |                        |
|                        |                                               |                                |                          | 1.8         |              | 115 117 128                         |                        |
| 13020301               | "Blower, Evaporator<br>Pallet (EH-60A)"       | REPLACE                        | 1.6                      |             |              | 4 21 115<br>117                     | G                      |
|                        |                                               | REPAIR                         |                          | 2.8         |              | 115 117 128                         |                        |
| 13020302               | "Compressor, Evapora-<br>tor Pallet (EH-60A)" | REPLACE                        | 3.1                      |             |              | 4 21 115<br>117 127 128             | G                      |
|                        |                                               | REPAIR                         |                          |             |              |                                     |                        |
|                        |                                               | SERVICE                        | 1.6                      |             |              |                                     |                        |
|                        |                                               |                                |                          |             | --           | 117 127                             |                        |
| 13020303               | Hot Gas Bypass (EH-<br>60A)                   | REPLACE                        |                          | 0.8         |              | 115 117 128                         | G                      |
| 13020304               | Evaporator Assembly<br>(EH-60A)               | REPLACE                        | 1.3                      |             |              | 4 21 115<br>117 127 128             | G                      |



## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION                                    | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|-------------------------------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                                       |                                | AVUM<br>(0)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 1302030401             | Evaporator Pallet Ducts (EH-60A)                      | REPAIR                         |                          |             | --           |                                     |                        |
|                        |                                                       | REPLACE                        |                          | 1.8         |              | 115 117 128                         | G                      |
| 13020305               | Filter/Dryer Evaporator Assembly (EH-60A)             | REPLACE                        | 0.5                      |             |              | 115 117 128                         | G                      |
| 130204                 | Ducting (EH-60A)                                      | INSPECT                        | 1.0                      |             |              |                                     | G                      |
|                        |                                                       | REPLACE                        | 4.6                      |             |              | 115 117                             |                        |
|                        |                                                       | REPAIR                         | 2.5                      |             |              | 115 117                             |                        |
| 130205                 | Electrical Pallet Assembly (EH-60A)                   | INSPECT                        | 0.6                      |             |              |                                     | G                      |
|                        |                                                       | REPLACE                        |                          | 2.8         |              | 2 21 115<br>117 128                 |                        |
|                        |                                                       | REPAIR                         | 1.3                      |             |              | 115 117                             |                        |
|                        |                                                       |                                |                          | 1.8         |              |                                     |                        |
| 13020501               | "Electrical Control Unit, Electrical Pallet (EH-60A)" | REPLACE                        | 2.1                      |             |              | 117                                 | G                      |
|                        |                                                       | REPAIR                         |                          |             | 1.7          | 115                                 |                        |
| 13020502               | Servicing Module (EH-60A)                             | REPLACE                        | 1.0                      |             |              | 117                                 | G                      |
| 130206                 | Emergency Control Switch (HH-60A and HH-60L)          | REPLACE                        | 0.5                      |             |              | 115 117                             | G                      |
|                        |                                                       | REPAIR                         | 0.8                      |             |              | 115 117                             |                        |
| 1303                   | Air Conditioning Installation (HH-60A and HH-60L)     | INSPECT                        | 2.4                      |             |              |                                     | J                      |

## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION                               | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|--------------------------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                                  |                                | AVUM<br>(O)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 130301                 | Condenser Pallet As-<br>sembly                   | REPAIR                         | 0.8                      |             |              | 117                                 |                        |
|                        |                                                  | SERVICE                        | 1.8                      |             |              | 117 128                             |                        |
|                        |                                                  | SERVICE                        | 0.9                      |             |              | 117 186                             |                        |
|                        |                                                  | TEST                           | 0.4                      |             |              |                                     |                        |
|                        |                                                  | REPLACE                        | 2.9                      |             |              | 117 128 186                         | J                      |
|                        |                                                  | REPAIR                         | 0.8                      |             |              |                                     |                        |
| 13030101               | Blower Assembly<br>Condenser Pallet              |                                |                          | 1.1         |              | 20 21 186                           |                        |
|                        |                                                  | TEST                           |                          | 1.5         |              |                                     |                        |
|                        |                                                  | REPLACE                        | 1.9                      |             |              | 117                                 | J                      |
|                        |                                                  | REPAIR                         |                          |             | --           |                                     | AC                     |
| 13030102               | Condenser Pallet                                 | REPLACE                        |                          | 0.7         |              | 20 21 186                           | J                      |
|                        |                                                  | REPAIR                         |                          |             | --           |                                     | AC                     |
| 13030103               | Exhaust Duct As-<br>sembly Condenser Pal-<br>let | REPLACE                        | 0.5                      |             |              | 117                                 | J                      |
|                        |                                                  | REPAIR                         | 0.3                      |             |              |                                     |                        |
| 130302                 | Electrical Pallet As-<br>sembly                  | REPLACE                        | 1.8                      |             |              | 21 115 117<br>128 186               | J                      |
|                        |                                                  | REPAIR                         |                          | --          |              |                                     | AC                     |
| 13030201               | Electrical Control Unit                          | REPLACE                        | 1.9                      |             |              | 21 115 117                          | J                      |
|                        |                                                  | REPAIR                         |                          |             | --           |                                     | AC                     |
| 13030202               | Filter/Dryer                                     | REPLACE                        | 1.1                      |             |              | 128 186                             | J                      |

## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION                                                       | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|--------------------------------------------------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                                                          |                                | AVUM<br>(0)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 13030203               | Servicing Module                                                         | REPLACE                        | 1.1                      |             |              | 26 117 127<br>128                   | J                      |
| 13030204               | Sight Glass                                                              | REPLACE                        | 1.0                      |             |              | 117 127                             | J                      |
| 13030205               | Pressure Switches                                                        | REPLACE                        | 0.9                      |             |              | 117 127                             | J                      |
| 130303                 | ECS Control Panel<br>(HH-60A and HH-<br>60L)                             | REMOVE                         | 0.4                      |             |              | 117                                 |                        |
|                        |                                                                          | REPAIR                         |                          |             | --           |                                     | AC                     |
| 130304                 | Ducting Installation                                                     | REPLACE                        | 0.7                      |             |              | 128                                 | J                      |
|                        |                                                                          | REPAIR                         | 0.2                      |             |              |                                     |                        |
| 130305                 | Evaporator Pallet As-<br>sembly                                          | REPLACE                        | 2.1                      |             |              | 117 128 186                         | J                      |
|                        |                                                                          | REPAIR                         |                          |             | --           |                                     | AC                     |
| 130306                 | Blower Assembly<br>Evaporator Assembly                                   | REPLACE                        | 1.1                      |             |              | 21 117                              | J                      |
|                        |                                                                          | REPAIR                         |                          |             | --           |                                     | AC                     |
| 14                     | Hoist and Winches                                                        |                                |                          |             |              |                                     |                        |
| 1401                   | External Electrical<br>Rescue Hoist As-<br>sembly (HH-60A and<br>HH-60L) | REPLACE                        | 7.4                      |             |              | 21 115 117<br>128                   |                        |
|                        |                                                                          | REMOVE                         | 4.9                      |             |              | 21 115 117<br>128                   |                        |
|                        |                                                                          | INSPECT                        | 0.6                      |             |              |                                     |                        |
|                        |                                                                          | REPAIR                         | 1.1                      |             |              | 115 117                             |                        |
|                        |                                                                          | SERVICE                        | 0.5                      |             |              | 117                                 |                        |

## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION                  | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|-------------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                     |                                | AVUM<br>(0)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 140101                 | Hook Assembly                       | TEST                           | 0.8                      |             |              |                                     |                        |
|                        |                                     | INSPECT                        | 0.2                      |             |              |                                     |                        |
|                        |                                     | REPLACE                        | 0.7                      |             |              | 21 99 115<br>117                    | J                      |
| 140102                 | Cable Assembly                      | INSPECT                        | 0.8                      |             |              |                                     |                        |
|                        |                                     | REPLACE                        | 1.2                      |             |              | 21 99 115<br>117                    | J                      |
| 140103                 | Cutter Assembly                     | INSPECT                        | 0.2                      |             |              |                                     |                        |
|                        |                                     | REPLACE                        | 0.4                      |             |              | 21 99 115<br>117                    | J                      |
| 140104                 | Motor Assembly                      | REPLACE                        |                          |             | 1.6          | 115 117                             | J AC                   |
|                        |                                     | REPLACE                        |                          |             | --           |                                     |                        |
| 140105                 | Fairing Assembly                    | REPLACE                        | 0.3                      |             |              | 117                                 | J                      |
|                        |                                     | REPAIR                         | 1.3                      |             |              |                                     |                        |
| 140106                 | Lower Control Panel                 | REPLACE                        | 0.8                      |             |              | 115 117                             | J AC                   |
|                        |                                     | REPAIR                         |                          |             | --           |                                     |                        |
| 140107                 | "Controller, Hand<br>Held"          | REPLACE                        | 0.2                      |             |              | 117                                 | J AC                   |
|                        |                                     | REPAIR                         |                          |             | --           |                                     |                        |
| 1402                   | "Rescue Hoist, Kit<br>Installation" | REPLACE                        | 7.4                      |             |              | 21 115 117<br>128                   |                        |
|                        |                                     | REMOVE                         | 5.8                      |             |              | 21 115 117<br>128                   |                        |
|                        |                                     | INSPECT                        | 0.6                      |             |              |                                     |                        |

## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION             | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|--------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                |                                | AVUM<br>(0)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 140201                 | Control Panel                  | REPAIR                         | 1.4                      |             |              | 115 117                             |                        |
|                        |                                | SERVICE                        | 0.5                      |             |              | 117                                 |                        |
|                        |                                | TEST                           | 0.8                      |             |              |                                     |                        |
|                        |                                | REPLACE                        | 0.6                      |             |              | 117                                 |                        |
|                        |                                | REPAIR                         | 0.2                      |             |              | 115 117                             |                        |
| 140202                 | "Bracket, Control<br>Panel"    |                                |                          | 2.7         |              | 115 117 132<br>157                  |                        |
|                        |                                | REPLACE                        | 0.4                      |             |              | 117                                 |                        |
|                        |                                | REPAIR                         | 0.8                      |             |              | 117                                 |                        |
| 140203                 | K14 Relay<br>Assembly          | REPLACE                        | 0.5                      |             |              | 115                                 |                        |
| 140204                 | Fairing Assy, Rescue<br>Hoist  | REPLACE                        | 1.5                      |             |              | 115 117                             |                        |
|                        |                                | REPAIR                         | 2.0                      |             |              |                                     |                        |
| 15                     | Auxiliary Powerplant<br>System |                                |                          |             |              |                                     |                        |
| 1501                   | APU Assembly                   | INSPECT                        | 0.7                      |             |              |                                     |                        |
|                        |                                | REPLACE                        | 5.8                      |             |              | 64 73 115<br>128 130 164            |                        |
|                        |                                | SERVICE                        | 1.1                      |             |              |                                     |                        |
|                        |                                | REPAIR                         | 3.7                      |             |              | 64 73 117<br>128 130 164            |                        |
|                        |                                |                                |                          |             | 16.4         |                                     |                        |

## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION                      | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|-----------------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                         |                                | AVUM<br>(0)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 1502                   | APU Mounts Installation                 | TEST                           | 0.9                      |             |              |                                     |                        |
|                        |                                         | INSPECT                        | 0.6                      |             |              |                                     |                        |
|                        |                                         | REPLACE                        | 1.1                      |             |              | 21 114 117<br>128                   |                        |
|                        |                                         | REPAIR                         | 1.4                      |             |              | 114 117                             |                        |
| 1503                   | "Start Motor, APU "                     | INSPECT                        | 0.6                      |             |              |                                     |                        |
|                        |                                         | REPLACE                        | 1.3                      |             |              | 21 117                              |                        |
|                        |                                         | REPAIR                         |                          | 36.0        |              |                                     |                        |
| 1504                   | Electronic Sequencing Unit              | REPLACE                        | 0.7                      |             |              | 4 21 117                            |                        |
|                        |                                         | REPAIR                         |                          |             | 5.5          |                                     |                        |
| 1505                   | Fuel Shutoff Valve                      | REPLACE                        | 0.9                      |             |              | 117                                 |                        |
|                        |                                         | REPAIR                         |                          |             | 1.1          |                                     |                        |
| 1506                   | Fuel Lines and Drain Hoses              | REPLACE                        | 1.2                      |             |              | 117                                 |                        |
| 16                     | Mission Equipment                       |                                |                          |             |              |                                     |                        |
| 1601                   | Chaff/Flare Dispenser System Kit (M130) | INSPECT                        | 0.5                      |             |              |                                     |                        |
|                        |                                         | REPLACE                        | 3.7                      |             |              | 115 117                             |                        |
|                        |                                         | REMOVE                         | 2.4                      |             |              | 115 117                             |                        |
|                        |                                         | TEST                           | 0.6                      |             |              | 98 99 115<br>117                    |                        |
| 160101                 | Electronic Module Assembly              | REPLACE                        | 0.4                      |             |              | 115 117                             |                        |

## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION                     | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|----------------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                        |                                | AVUM<br>(0)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 160102                 | Chaff Dispenser As-<br>sembly          | REPAIR                         |                          | 0.9         |              |                                     |                        |
|                        |                                        | REPLACE                        | 0.4                      |             |              | 21 115 117                          |                        |
| 160103                 | Chaff Payload Module                   | REPAIR                         |                          | 0.9         |              | 117                                 |                        |
|                        |                                        | REPLACE                        | 0.2                      |             |              | 21 115 117                          |                        |
|                        |                                        | REPAIR                         | 0.8                      |             |              | 115 117                             |                        |
| 160104                 | "Control Panel, Chaff/<br>Flare"       | REPLACE                        | 0.8                      |             |              | 21 115 117                          |                        |
|                        |                                        | REPAIR                         | 0.3                      |             |              |                                     |                        |
|                        |                                        | REPAIR                         |                          | 3.2         |              | 115 117                             |                        |
| 160105                 | Chaff Switch                           | REPLACE                        | 0.4                      |             |              | 115                                 |                        |
| 160106                 | Flare Switch (EH-60A)                  | REPLACE                        | 0.4                      |             |              | 115                                 | G                      |
| 160107                 | Flare Dispenser As-<br>sembly (EH-60A) | REPLACE                        | 0.4                      |             |              | 21 115 117                          | G                      |
| 1603                   | Armament Kit Mounts<br>Installation    | INSPECT                        | 0.2                      |             |              |                                     |                        |
|                        |                                        | REPLACE                        | 0.4                      |             |              | 117                                 |                        |
|                        |                                        | REMOVE                         | 0.3                      |             |              | 117                                 |                        |
|                        |                                        | REPAIR                         | 0.9                      |             |              | 117                                 |                        |
| 1604                   | Aeromedical Evacua-<br>tion Kit        | INSPECT                        |                          |             |              |                                     |                        |
|                        |                                        | REPLACE                        | 6.2                      |             |              | 21 115 117<br>128 130               |                        |
|                        |                                        | REMOVE                         | 5.7                      |             |              | 115 117                             |                        |

## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION          | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|-----------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                             |                                | AVUM<br>(O)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 160401                 | Pedestal Assembly           | REPAIR                         |                          |             |              |                                     |                        |
|                        |                             | TEST                           |                          |             |              |                                     |                        |
|                        |                             | REMOVE                         | 2.1                      |             |              | 21 115 117<br>128 130               |                        |
| 160402                 | Floor Support As-<br>sembly | REPAIR                         | 1.8                      |             |              | 115 117                             |                        |
|                        |                             | OVERHAUL                       | 2.8                      |             |              | 21 115 117                          |                        |
|                        |                             | REMOVE                         | 0.7                      |             |              | 117 128                             |                        |
| 160403                 | Upper Support As-<br>sembly | REPAIR                         |                          | 1.4         |              | 117                                 |                        |
|                        |                             | REMOVE                         | 0.5                      |             |              | 117                                 |                        |
|                        |                             | REPAIR                         | 1.2                      |             |              |                                     |                        |
| 160404                 | Frequency Converter         | REPAIR                         |                          | 1.0         |              | 117                                 |                        |
|                        |                             | REMOVE                         | 0.4                      |             |              | 115 117                             |                        |
|                        |                             | REPAIR                         |                          |             | --           |                                     |                        |
| 160405                 | Litter Assemblies           | INSPECT                        | 0.1                      |             |              |                                     |                        |
|                        |                             | REMOVE                         | 0.4                      |             |              | 117                                 |                        |
|                        |                             | REPAIR                         | 0.9                      |             |              | 117                                 |                        |
| 160406                 | AC Power Receptacle         | REPLACE                        | 1.1                      |             |              | 115 117                             |                        |
|                        |                             | REPAIR                         |                          | 0.9         |              | 115                                 |                        |
| 160407                 | "Seat Assembly,<br>3-Man"   | REPLACE                        | 1.3                      |             |              | 117                                 |                        |
|                        |                             | REPAIR                         | 0.7                      |             |              | 117                                 |                        |



## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION                  | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|-------------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                     |                                | AVUM<br>(0)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 1605160408             | Medical Interior Instal-<br>lation  | ADJUST                         | 0.5                      |             |              | 117                                 |                        |
|                        |                                     | SERVICE                        | 0.3                      |             |              |                                     |                        |
|                        |                                     | REPLACE                        | 6.0                      |             |              | 21 114 117                          |                        |
| 1605                   | Blackout Device<br>Kit Installation | REPLACE                        | 1.0                      |             |              | 117                                 |                        |
|                        |                                     | REMOVE                         | 0.8                      |             |              | 117                                 |                        |
|                        |                                     | REPAIR                         | 1.2                      |             |              |                                     |                        |
| 1606                   | Winterization Kit<br>Installation   | REPLACE                        | 2.1                      |             |              |                                     |                        |
|                        |                                     | REMOVE                         | 1.5                      |             |              |                                     |                        |
|                        |                                     | REPAIR                         | 1.4                      |             |              |                                     |                        |
| 160601                 | APU Accumulator                     | INSPECT                        | 0.3                      |             |              |                                     |                        |
|                        |                                     | REPLACE                        | 15.5                     |             |              | 21 114 117<br>128 130               |                        |
|                        |                                     | REPAIR                         |                          |             | --           |                                     |                        |
|                        |                                     | OVERHAUL                       | 0.4                      |             |              | 117                                 |                        |
| 160602                 | Box Assembly Relay                  | SERVICE                        | 1.5                      |             |              | 117                                 |                        |
|                        |                                     | REPAIR                         | 0.8                      |             |              | 115 117                             |                        |
|                        |                                     | INSPECT                        | 0.4                      |             |              |                                     |                        |
| 1608                   | Hydraulic Cart<br>Air Transport     | REPAIR                         | 0.9                      |             |              | 21 115 117<br>128                   | U                      |
|                        |                                     | SERVICE                        | 0.7                      |             |              |                                     |                        |
|                        |                                     | REPAIR                         | 0.8                      |             |              | 115                                 | U                      |
| 160801                 | Control Pendant                     | REPAIR                         | 0.8                      |             |              |                                     |                        |

## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION                                | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|---------------------------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                                   |                                | AVUM<br>(O)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 160802                 | Distribution Box                                  | REPLACE                        | 0.5                      |             |              | 115 117                             |                        |
|                        |                                                   | REPAIR                         |                          | 0.8         |              | 115                                 |                        |
| 160803                 | Pump and Motor<br>Assembly                        | REPLACE                        |                          | 1.1         |              | 117                                 |                        |
|                        |                                                   | REPAIR                         |                          |             | --           |                                     |                        |
| 160804                 | Filter Assembly                                   | SERVICE                        | 0.3                      |             |              | 117                                 |                        |
| 160805                 | Special Manifold                                  | REPLACE                        | 0.7                      |             |              | 117                                 | V                      |
| 160806                 | Directional Control<br>Valve                      | REPLACE                        | 0.7                      |             |              | 117                                 | W                      |
| 160807                 | Reservoir                                         | REPLACE                        | 0.5                      |             |              | 117                                 |                        |
|                        |                                                   | REPAIR                         | 0.6                      |             |              | 117                                 |                        |
| 160808                 | Hydraulic Lines                                   | REPLACE                        | 0.4                      |             |              | 117                                 |                        |
| 1609                   | External Stores Sup-<br>port System (ESSS)<br>Kit | REPLACE                        | 14.6                     |             |              | 4 21 99 114<br>115 128 130          | AD                     |
|                        |                                                   | REMOVE                         | 11.8                     |             |              | 114 115 117                         |                        |
|                        |                                                   | INSPECT                        | 2.1                      |             |              |                                     |                        |
|                        |                                                   | REPAIR                         | 1.9                      |             |              | 115 117                             |                        |
| 160901                 | Auxiliary Fuel<br>Management Control<br>Panel     | INSPECT                        | 0.2                      |             |              |                                     |                        |
|                        |                                                   | REPLACE                        | 0.6                      |             |              | 115 117                             |                        |
|                        |                                                   | REPAIR                         | 0.4                      |             |              | 115                                 |                        |
|                        |                                                   |                                |                          |             | --           |                                     |                        |
|                        |                                                   | ADJUST                         | 0.2                      |             |              | 115                                 |                        |

## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION                                                           | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|------------------------------------------------------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                                                              |                                | AVUM<br>(0)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 160902                 | Jettison Control Panel                                                       | REPLACE                        | 0.4                      |             |              | 115 117                             |                        |
|                        |                                                                              | REPAIR                         | 0.1                      |             |              | 117                                 |                        |
|                        |                                                                              |                                |                          | 2.7         |              | 115 132 157                         |                        |
| 160903                 | Fuel Vent Lines<br>Overflow Sensor                                           | REPLACE                        | 0.7                      |             |              | 115 117                             |                        |
| 160904                 | Flow Sensor Panel                                                            | REPLACE                        | 2.1                      |             |              | 115 117                             |                        |
|                        |                                                                              | REPAIR                         | 1.2                      |             |              | 115 117                             |                        |
| 160905                 | Horizontal Stores Sup-<br>port (HSS)                                         | INSPECT                        | 0.8                      |             |              |                                     |                        |
|                        |                                                                              | REMOVE                         | 2.1                      |             |              | 115 117                             |                        |
|                        |                                                                              | REPAIR                         | 1.8                      |             |              | 115 117                             |                        |
|                        |                                                                              |                                |                          | 2.9         |              | 117                                 |                        |
|                        |                                                                              |                                |                          |             | --           |                                     |                        |
| 16090501               | Vertical Support<br>Pylons (VSP)                                             | INSPECT                        | 0.3                      |             |              |                                     |                        |
|                        |                                                                              | REPLACE                        | 0.9                      |             |              | 117                                 |                        |
|                        |                                                                              | REPAIR                         | 1.1                      |             |              | 117                                 |                        |
| 1609050101             | "Vertical Support<br>Pylons (VSP) Lines<br>and Hoses, Fuel and<br>Pneumatic" | INSPECT                        |                          |             |              |                                     | X                      |
|                        |                                                                              | REPLACE                        |                          |             |              |                                     |                        |
| 16090502               | Horizontal Stores Sup-<br>port (HSS) Fairings                                | INSPECT                        | 0.3                      |             |              |                                     |                        |
|                        |                                                                              | REPLACE                        | 0.9                      |             |              | 117                                 |                        |

## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION                                                             | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|--------------------------------------------------------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                                                                |                                | AVUM<br>(0)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 16090503               | "Horizontal Stores<br>Support (HSS) Lines<br>and Hoses, Fuel and<br>Pneumatic" | REPAIR                         | 3.3                      | 0.8         |              | 37 117                              | Q X                    |
|                        |                                                                                | INSPECT                        | 0.2                      |             |              |                                     |                        |
| 16090504               | Bleed Air Regulator<br>Valve Inboard/<br>Outboard                              | REPLACE                        | 0.7                      |             |              | 117                                 |                        |
|                        |                                                                                | REPLACE                        | 0.6                      |             |              | 117                                 |                        |
|                        |                                                                                | REPAIR                         | 1.2                      |             |              | 117                                 |                        |
| 160906                 | "Support Strut, Fixed"                                                         | SERVICE                        | 0.2                      |             |              |                                     |                        |
|                        |                                                                                | INSPECT                        | 0.2                      |             |              |                                     |                        |
|                        |                                                                                | REPLACE                        | 0.9                      |             |              | 117                                 |                        |
| 160907                 | "Support Strut, Adjust-<br>able"                                               | REPAIR                         | 0.4                      |             |              |                                     |                        |
|                        |                                                                                | INSPECT                        | 0.2                      |             |              |                                     |                        |
|                        |                                                                                | REPLACE                        | 0.9                      |             |              | 117                                 |                        |
|                        |                                                                                | REPAIR                         | 1.1                      |             |              | 117                                 |                        |
| 160908                 | "Ejector Racks, BRU-<br>22A/A"                                                 | ADJUST                         | 0.4                      |             |              | 117                                 | AI                     |
|                        |                                                                                | INSPECT                        | 0.3                      |             |              |                                     |                        |
|                        |                                                                                | REPLACE                        | 0.2                      |             |              | 117                                 |                        |
|                        |                                                                                | REPAIR                         | 1.2                      |             |              | 115 117                             |                        |

## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION                                      | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|---------------------------------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                                         |                                | AVUM<br>(0)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 160909                 | "Ejector Racks, MAU-40A"                                | SERVICE                        | 0.3                      | 1.7         |              | 4 21 99 115<br>117 169              | AH AI                  |
|                        |                                                         | SERVICE                        | 0.4                      |             |              | 117                                 |                        |
|                        |                                                         | INSPECT                        | 0.5                      |             |              |                                     |                        |
|                        |                                                         | REPLACE                        | 0.2                      |             |              | 117                                 |                        |
|                        |                                                         | REPAIR                         | 1.3                      |             |              |                                     |                        |
|                        |                                                         | SERVICE                        | 0.3                      |             |              | 117                                 |                        |
| 1610                   | External Stores Support System (ESSS) Kit               | SERVICE                        | 0.4                      |             |              |                                     | A B C                  |
|                        |                                                         | INSPECT                        | 3.0                      |             |              |                                     |                        |
|                        |                                                         | REPLACE                        | 10.0                     |             |              |                                     |                        |
|                        |                                                         | REPAIR                         | 2.4                      |             |              |                                     |                        |
|                        |                                                         | TEST                           | 1.0                      |             |              |                                     |                        |
|                        |                                                         | REPLACE                        | 1.0                      |             |              |                                     |                        |
| 161001                 | External Stores Support System (ESSS) Electrical System | INSPECT                        | 2.0                      |             |              |                                     | B                      |
|                        |                                                         | TEST                           | 0.5                      |             |              |                                     |                        |
|                        |                                                         | REPAIR                         | 4.0                      |             |              | 97 114 115<br>117 121               |                        |
|                        |                                                         | REPLACE                        | 160.0                    |             |              | 114 117                             |                        |
|                        |                                                         | OVERHAUL                       |                          |             |              | 121                                 |                        |
|                        |                                                         |                                |                          |             |              |                                     |                        |

## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION                                    | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|-------------------------------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                                       |                                | AVUM<br>(0)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 1611                   | External Stores Support System (ESSS) Jettison System | INSPECT                        |                          |             | --           |                                     |                        |
|                        |                                                       | TEST                           |                          |             |              |                                     |                        |
|                        |                                                       | REPLACE                        |                          |             |              |                                     |                        |
|                        |                                                       | REPAIR                         |                          | --          |              |                                     |                        |
| 1612                   | "External Fuel Tank, 230 Gal"                         | INSPECT                        | 1.0                      |             |              |                                     | B                      |
|                        |                                                       | REPLACE                        | 2.0                      |             |              | 114 116 121                         | B                      |
|                        |                                                       | SERVICE                        | 1.0                      |             |              | 117 121                             | B                      |
|                        |                                                       | TEST                           | 1.0                      |             |              | 117 121                             | A B                    |
|                        |                                                       | REPLACE                        | 0.5                      |             |              | 114 117 121                         | B                      |
|                        |                                                       | REPAIR                         | 1.0                      |             |              | 114 117 121                         | B                      |
|                        |                                                       | OVERHAUL                       |                          |             | --           |                                     | B                      |
| 161201                 | Fuel Probes                                           | TEST                           | 0.1                      |             |              |                                     | B                      |
|                        |                                                       | REPLACE                        | 1.0                      |             |              | 114 121                             | B F                    |
|                        |                                                       | REPLACE                        | 1.0                      |             |              |                                     |                        |
| 161202                 | Tank Cables                                           | INSPECT                        | 0.2                      |             |              |                                     | B                      |
|                        |                                                       | TEST                           | 0.1                      |             |              |                                     | B                      |
|                        |                                                       | REPAIR                         | 0.2                      |             |              | 98 115 121                          | B E                    |
|                        |                                                       | REPLACE                        | 0.1                      |             |              | 114 117                             | B F                    |
|                        |                                                       | REPLACE                        | 0.1                      |             |              | 121                                 |                        |

## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION                                | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|---------------------------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                                   |                                | AVUM<br>(0)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 161203                 | Drain Valve                                       | REPLACE                        | 0.4                      |             |              | 117                                 |                        |
|                        |                                                   | REPAIR                         | 0.3                      |             |              |                                     |                        |
| 161204                 | Stabilizer Finn                                   | REPLACE                        | 1.1                      |             |              | 117                                 |                        |
| 161205                 | Access Doors                                      | REPLACE                        | 0.6                      |             |              | 117                                 |                        |
| 161206                 | Fuel Valve                                        | REPLACE                        | 0.8                      |             |              | 117                                 |                        |
| 161207                 | "Structural Repair,<br>Class I through VIII"      | REPAIR                         | 3.8                      |             |              | 116 117 123<br>132                  |                        |
| 1613                   | Auxiliary Cabin Heater<br>(UH-60A and UH-<br>60L) | TEST                           | 0.4                      |             |              | 89                                  | F                      |
| 161301                 | Aircraft Modification<br>Requirements             | REPLACE                        |                          | 6.7         |              | 21 114 115<br>117                   | F                      |
| 161302                 | Auxiliary Cabin Heater<br>Installation Kit        | REPLACE                        | 8.8                      |             |              | 21 114 116<br>117                   | F                      |
|                        |                                                   | REMOVE                         | 7.1                      |             |              | 114 115 117                         |                        |
| 16130201               | Heater Assembly                                   | REPLACE                        | 0.6                      |             |              | 115 117                             | F                      |
|                        |                                                   | REPAIR                         |                          | 1.5         |              | 115 117                             |                        |
| 16130202               | "Fan, Blower Vaneax-<br>ial"                      | REPLACE                        | 0.6                      |             |              | 115 117                             | F                      |
|                        |                                                   | REPAIR                         |                          | 1.5         |              | 115 117                             |                        |
| 16130203               | Muffler Assembly                                  | REPLACE                        | 0.6                      |             |              | 115 117                             | F                      |
|                        |                                                   | REPAIR                         | 1.5                      |             |              |                                     |                        |
| 16130204               | Cycling/Overheat<br>Thermostat                    | REPLACE                        | 0.2                      |             |              | 115 117                             | F                      |
|                        |                                                   | REPAIR                         |                          | 1.0         |              | 115 117                             |                        |

## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION                                                                      | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|-----------------------------------------------------------------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                                                                         |                                | AVUM<br>(0)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 16130205               | Distribution and Elbow Ducting                                                          | REPLACE                        | 0.2                      |             |              | 115 117                             | F                      |
|                        |                                                                                         | REPAIR                         | 1.0                      |             |              | 115 117                             |                        |
| 16130206               | Support Structure Muffler/Blower Heater Distribution Elbow Muffler                      | REPLACE                        | 1.9                      |             |              | 114 117                             | F                      |
|                        |                                                                                         | REPAIR                         | 0.3                      |             |              | 114 117                             |                        |
| 161303                 | "Duct Installation Kit, Auxiliary Cabin Heater"                                         | REPLACE                        | 6.8                      |             |              | 21 114 115 117                      | F                      |
|                        |                                                                                         | REMOVE                         | 4.1                      |             |              | 114 115 117                         |                        |
| 16130301               | "Duct Assemblies, Configuration No. 1 through Configuration No. 4 (Transition Section)" | REPLACE                        | 1.1                      |             |              | 21 114 115 117                      |                        |
|                        |                                                                                         | REPAIR                         | 2.1                      |             |              | 114 115 117                         |                        |
| 16130302               | ECS Ducts Installation Transition AFT Cabin                                             | REPLACE                        | 2.3                      |             |              | 114 117                             |                        |
| 16130303               | Bracket Assy                                                                            | INSPECT                        | 0.2                      |             |              |                                     |                        |
|                        |                                                                                         | REPLACE                        | 0.6                      |             |              | 21 117                              |                        |
|                        |                                                                                         | REPAIR                         | 1.0                      |             |              | 21 117                              |                        |
| 161304                 | "Pneumatic Ground Start, Tubes and Hoses"                                               | REPLACE                        | 0.4                      |             |              | 117                                 | F                      |
| 161305                 | Equipment Installation                                                                  |                                |                          |             |              |                                     | F                      |
| 16130501               | Control Panel                                                                           | REPLACE                        | 0.5                      |             |              | 115 117                             | F                      |



## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION                                                 | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|--------------------------------------------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                                                    |                                | AVUM<br>(0)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 16130502               | Temperature Control                                                | REPAIR                         | 1.1                      |             |              | 115 117                             | F                      |
|                        |                                                                    | REPLACE                        | 0.5                      |             |              | 115 117                             |                        |
|                        |                                                                    | REPAIR                         |                          | 1.1         |              | 115 117                             |                        |
| 161306                 | No. 3 Relay Panel                                                  | REPLACE                        | 0.7                      |             |              | 98 99 117                           |                        |
|                        |                                                                    | REPAIR                         |                          | 1.1         |              | 99 117                              |                        |
|                        |                                                                    |                                |                          |             | 2.1          | 99 117                              |                        |
| 161401                 | Converter Control Unit                                             | TEST                           | 0.4                      |             |              |                                     |                        |
|                        |                                                                    | REMOVE                         | 0.3                      |             |              | 117                                 |                        |
|                        |                                                                    | REPAIR                         | 0.2                      |             |              |                                     |                        |
| 161402                 | Signal Data Converter (SDC) (See Functional Group 080602)          |                                |                          | --          |              |                                     |                        |
| 16140201               | Signal Data Converter (SDC) Mount (see functional group 080502)    |                                |                          |             |              |                                     |                        |
| 161403                 | "Collective Stick, Toggle Switch, (See Functional Group 11030501)" |                                |                          |             |              |                                     |                        |
| 1615                   | "Engine Air Particle Separator (EAPS) Kit, APU Engine"             | REPLACE                        | 4.8                      |             |              | 21 114 116<br>117 128               |                        |
|                        |                                                                    | REMOVE                         | 3.9                      |             |              | 114 116 117<br>128                  |                        |
|                        |                                                                    | REPAIR                         | 1.2                      |             |              | 114 117                             |                        |

## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION                                     | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|--------------------------------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                                        |                                | AVUM<br>(0)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 161501                 | Particle Separator                                     | REPLACE                        | 2.4                      |             |              | 114 117                             |                        |
|                        |                                                        | REPAIR                         | 1.6                      |             |              |                                     |                        |
| 161502                 | Collector Box                                          | REPLACE                        | 1.4                      |             |              | 114 117                             |                        |
|                        |                                                        | REPAIR                         | 1.1                      |             |              |                                     |                        |
| 1616                   | "Erosion Kit, Main Rotor Blades and Tail Rotor Blades" | REPLACE                        | 2.7                      |             |              | 117                                 |                        |
| 1617                   | Volcano Mine Dispensing System                         | REPLACE                        | 6.8                      |             |              | 117 130                             |                        |
|                        |                                                        | TEST                           | 0.4                      |             |              |                                     |                        |
| 161701                 | DCU Pallet                                             | REPLACE                        | 0.2                      |             |              | 117                                 |                        |
| 161702                 | DCU                                                    | REPLACE                        | 0.4                      |             |              | 117                                 |                        |
|                        |                                                        | REPAIR                         |                          |             | --           |                                     |                        |
| 161703                 | Interface Control Panel                                | REPLACE                        | 1.1                      |             |              | 114 117                             |                        |
|                        |                                                        | REPAIR                         |                          |             |              |                                     |                        |
| 161704                 | Side Panel Assembly                                    | REPLACE                        | 1.8                      |             |              | 117                                 |                        |
|                        |                                                        | REPAIR                         | 0.9                      |             |              | 117                                 |                        |
| 161705                 | Launcher Rack                                          | REPLACE                        | 1.6                      |             |              | 117                                 | AD                     |
|                        |                                                        | REPAIR                         | 0.4                      |             |              |                                     |                        |
|                        |                                                        |                                |                          | --          |              |                                     |                        |
| 161706                 | Jettison Cartridge                                     | REPLACE                        | 0.5                      |             |              | 117                                 |                        |
| 1618                   | "Winterization Kit, Gunner's Window"                   | REPLACE                        | 1.2                      |             |              | 117                                 |                        |

## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION                                         | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|------------------------------------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                                            |                                | AVUM<br>(0)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 1619                   | APU EAPS Kit                                               | INSPECT                        | 0.2                      |             |              | 117                                 | AF                     |
|                        |                                                            | REPLACE                        | 3.8                      |             |              | 114                                 |                        |
| 1620                   | "SAFIRE System, AN/AAQ-22Q (HH-60A and HH-60L)"            | TEST                           | 1.1                      |             |              |                                     | J AC                   |
|                        |                                                            | TEST                           | 0.2                      |             |              |                                     |                        |
|                        |                                                            | INSPECT                        | 0.4                      |             |              |                                     |                        |
| 162001                 | Turret Assembly (HH-60A and HH-60L)                        | INSPECT                        | 1.1                      |             |              | 115 117                             | J                      |
|                        |                                                            | SERVICE                        | 0.4                      |             |              | 115 117                             |                        |
| 16200101               | Turret Unit (HH-60A and HH-60L)                            | REPLACE                        | 1.1                      |             |              | 115 117                             | J                      |
|                        |                                                            | REPAIR                         | 0.4                      |             |              | 115 117                             |                        |
|                        |                                                            |                                |                          |             | --           |                                     | AC                     |
|                        |                                                            | SERVICE                        | 0.3                      |             |              |                                     |                        |
|                        |                                                            | SERVICE                        | 0.5                      |             |              |                                     |                        |
|                        |                                                            | SERVICE                        | 0.6                      |             |              |                                     |                        |
| 162002                 | Forward Looking Infrared (FLIR) Imager (HH-60A and HH-60L) | REPLACE                        | 1.5                      |             |              | 115 117                             | J                      |
|                        |                                                            | REPAIR                         | 0.4                      |             |              | 115 117                             |                        |
|                        |                                                            |                                |                          |             | --           |                                     | AC                     |
| 162003                 | Central Electronics Unit (CEU) (HH-60A and HH-60L)         | REPLACE                        | 0.4                      |             |              | 115 117                             | J                      |

## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION                                      | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|---------------------------------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                                         |                                | AVUM<br>(O)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 162004                 | System Control Unit<br>(SCU) (HH-60A and<br>HH-60L)     | REPAIR                         | 0.2                      |             |              | 115 117                             | AC                     |
|                        |                                                         | REPLACE                        | 0.4                      |             |              | 115 117                             | J                      |
|                        |                                                         | REPAIR                         | 0.4                      |             | --           | 115 117                             | AC                     |
| 162005                 | Video Display Unit<br>(VDU) (HH-60A and<br>HH-60L)      | REPLACE                        | 0.4                      |             |              | 115 117                             | J                      |
|                        |                                                         | REPAIR                         | 0.2                      |             |              | 115 117                             | AC                     |
|                        |                                                         | REPAIR                         | 0.2                      |             | --           | 115 117                             | AC                     |
| 162006                 | Video Cassette Unit<br>(VCU) (HH-60A and<br>HH-60L)     | REPLACE                        | 0.4                      |             |              | 115 117                             | J                      |
|                        |                                                         | REPAIR                         | 0.2                      |             |              | 115 117                             | AC                     |
|                        |                                                         | REPAIR                         | 0.2                      |             | --           | 115 117                             | AC                     |
| 162007                 | Central Electronic Unit<br>(CEU) (HH-60A and<br>HH-60L) | REPLACE                        | 0.4                      |             |              | 115 117                             | J                      |
|                        |                                                         | REPAIR                         | 0.2                      |             |              | 115 117                             | AC                     |
|                        |                                                         | REPAIR                         | 0.2                      |             | --           | 115 117                             | AC                     |
| 1621                   | Main and Tail Landing<br>Gear Ski Kit                   |                                |                          |             |              |                                     |                        |
| 162101                 | Main Landing Gear<br>Ski Adapter                        | REPLACE                        | 0.4                      |             |              | 114 117 128                         | B                      |

## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION                | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|-----------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                   |                                | AVUM<br>(0)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 162102                 | Main Landing Gear<br>Skis         | INSPECT                        | 0.2                      |             |              | 117                                 | B                      |
|                        |                                   | REPLACE                        | 1.5                      |             |              | 21 114 117                          | B                      |
|                        |                                   | REPAIR                         | 11.0                     |             |              | 114 117                             | B                      |
| 162103                 | Tail Landing Gear Ski             | INSPECT                        | 0.1                      |             |              | 117                                 | B                      |
|                        |                                   | REPLACE                        | 1.2                      |             |              | 21 114 117                          | B                      |
|                        |                                   | REPAIR                         | 6.0                      |             |              | 114 117                             | B                      |
| 1622                   | Air Warrior                       |                                |                          |             |              |                                     |                        |
| 162201                 | MCU Power Harness                 | REMOVE                         | 0.1                      |             |              |                                     |                        |
|                        |                                   | REPLACE                        | 0.2                      |             |              |                                     |                        |
|                        |                                   | REPAIR                         | 1.5                      |             |              | 100 115                             |                        |
| 162202                 | Mask Blower Power<br>Harness      | REMOVE                         | 0.1                      |             |              |                                     |                        |
|                        |                                   | REPLACE                        | 0.2                      |             |              |                                     |                        |
|                        |                                   | REPAIR                         | 1.5                      |             |              | 100 115                             |                        |
| 162203                 | "MCU Hose Assy,<br>Crew 1 and 2"  | REMOVE                         | 0.1                      |             |              | 114                                 |                        |
|                        |                                   | REPLACE                        | 0.1                      |             |              | 114                                 |                        |
| 162204                 | "MCU Hose Assy,<br>Pilot/Copilot" | REMOVE                         | 0.1                      |             |              | 114                                 |                        |
|                        |                                   | REPLACE                        | 0.1                      |             |              | 114                                 |                        |
| 162205                 | MCU Hose Assy                     | REPAIR                         | 0.5                      |             |              | 114 217                             |                        |

## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION                                     | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|--------------------------------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                                        |                                | AVUM<br>(0)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 162206                 | Bypass Control Mount<br>Pilot/Copilot (ARA<br>Seat)    | REMOVE                         | 0.1                      |             |              | 20 114                              |                        |
|                        |                                                        | REPLACE                        | 0.1                      |             |              | 20 114                              |                        |
| 162207                 | Bypass Control Mount<br>Pilot/Copilot (Simula<br>Seat) | REMOVE                         | 0.1                      |             |              | 114                                 |                        |
|                        |                                                        | REPLACE                        | 0.1                      |             |              | 114                                 |                        |
| 162208                 | "MCU Copilot's, Crew<br>2, Crew 1 and Pilot's "        | REMOVE                         | 0.2                      |             |              | 114                                 |                        |
|                        |                                                        | REPLACE                        | 0.2                      |             |              | 114                                 |                        |
|                        |                                                        | REPAIR                         | --                       |             |              |                                     |                        |
| 162209                 | MCU Mount Assy                                         | REMOVE                         | 0.3                      |             |              | 114                                 |                        |
|                        |                                                        | REPLACE                        | 0.3                      |             |              | 114                                 |                        |
| 162210                 | MCU Resilient Mounts                                   | REMOVE                         | 0.3                      |             |              | 114                                 |                        |
|                        |                                                        | REPLACE                        | 0.3                      |             |              | 114                                 |                        |
| 162211                 | Mask Blower PDB<br>Assy                                | REMOVE                         | 0.1                      |             |              | 20 115                              |                        |
|                        |                                                        | REPLACE                        | 0.1                      |             |              | 20 115                              |                        |
| 162212                 | MCU Coolant Prepara-<br>tion                           | SERVICE                        | 0.5                      |             |              | 218 219 220                         |                        |
| 162213                 | MCU Coolant<br>Charging/Purging                        | SERVICE                        | 0.3                      |             |              | 215                                 |                        |
| 162214                 | MCU Coolant Filter                                     | REPLACE                        | 0.3                      |             |              | 114                                 |                        |
| 162215                 | MCU Cleaning                                           | REPLACE                        | 0.2                      |             |              | 114                                 |                        |

## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION                      | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|-----------------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                         |                                | AVUM<br>(0)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 1622016                | MCS & Mask Blower Assy Kit              | REMOVE                         | 6.4                      |             |              | 114                                 |                        |
|                        |                                         | REPLACE                        | 6.4                      |             |              | 114                                 |                        |
| 1623                   | Crashworthy Exterior Fuel System (CEFS) |                                |                          |             |              |                                     |                        |
| 162301                 | Pump Package                            | REPLACE                        | 2.1                      |             |              | 21 117                              |                        |
|                        |                                         | REPAIR                         |                          |             |              |                                     |                        |
| 16230101               | Fuel Pump                               | REPLACE                        | 0.5                      |             |              | 21 117                              |                        |
| 16230102               | Relay Box                               | REPLACE                        | 0.4                      |             |              | 20 117                              |                        |
| 16230103               | Inlet Manifold                          | REPLACE                        | 0.4                      |             |              | 21 117                              |                        |
| 16230104               | Outlet Manifold                         | REPLACE                        | 0.4                      |             |              | 21 117                              |                        |
| 16230105               | Flange Plug                             | REPLACE                        | 0.2                      |             |              | 21 117                              |                        |
| 16230106               | Refuel Bypass Hose                      | REPLACE                        | 1.0                      |             |              | 21 117                              |                        |
| 16230107               | Refuel Valve                            | REPLACE                        | 0.6                      |             |              | 21 117                              |                        |
| 162302                 | "Fuel Lines, Valves, and Connections"   |                                |                          |             |              |                                     |                        |
| 16230201               | STA 312 Upper Elbow                     | REPLACE                        | 0.5                      |             |              | 20 21 117                           |                        |
| 16230202               | STA 312 Lower Elbow                     | REPLACE                        | 0.5                      |             |              | 20 21 117                           |                        |
| 16230203               | VSP Fuel Hose                           | REPLACE                        | 0.6                      |             |              | 117 128                             |                        |
| 16230204               | HSS Fuel Shutoff Gate Valve             | REPLACE                        | 1.5                      |             |              | 7 20 117<br>128                     |                        |
|                        |                                         | INSPECT                        |                          |             |              |                                     |                        |
| 16230205               | HSS Root to Fuselage Fuel Hose          | REPLACE                        | 0.6                      |             |              | 21 117 128                          |                        |

**MAINTENANCE ALLOCATION CHART** - Continued**Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued**

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION                | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|-----------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                   |                                | AVUM<br>(0)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 1624                   | M4 Rifle Mount                    | REPLACE                        | 5.5                      |             |              | 117                                 |                        |
|                        |                                   | REPAIR                         | 1.0                      |             |              | 117                                 |                        |
| 162401                 | "Clamp Assembly,<br>LHS"          | REPLACE                        | 0.5                      |             |              | 117                                 |                        |
|                        |                                   | REPAIR                         | 1.0                      |             |              | 117                                 |                        |
| 162402                 | "Clamp Assembly,<br>RHS"          | REPLACE                        | 0.5                      |             |              | 117                                 |                        |
|                        |                                   | REPAIR                         | 1.0                      |             |              | 117                                 |                        |
| 17                     | Emergency Equipment               |                                |                          |             |              |                                     |                        |
| 1701                   | Fire Extinguisher                 | INSPECT                        | 0.1                      |             |              |                                     |                        |
|                        |                                   | REPLACE                        | 0.1                      |             |              |                                     |                        |
| 1702                   | First Aid Kit                     | INSPECT                        | 0.1                      |             |              |                                     |                        |
|                        |                                   | REPLACE                        | 0.1                      |             |              |                                     |                        |
| 1703                   | Crash Ax                          | INSPECT                        | 0.1                      |             |              |                                     |                        |
|                        |                                   | REPLACE                        | 0.1                      |             |              |                                     |                        |
| 18                     | Ground Support<br>Equipment       |                                |                          |             |              |                                     |                        |
| 1801                   | Maintenance Crane                 | REPLACE                        | 0.8                      |             |              | 117                                 |                        |
|                        |                                   | REPAIR                         | 1.1                      |             |              | 117                                 |                        |
|                        |                                   |                                |                          | 1.8         |              | 117                                 |                        |
|                        |                                   | REMOVE                         | 0.6                      |             |              | 117                                 |                        |
| 180101                 | "Boom Assembly, Up-<br>per Crane" | REPAIR                         | 0.6                      |             |              | 117                                 |                        |



**MAINTENANCE ALLOCATION CHART** - Continued**Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued**

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION                      | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|-----------------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                         |                                | AVUM<br>(0)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 18010101               | Tube Assembly                           | REPAIR                         | 0.4                      |             |              | 117                                 |                        |
|                        |                                         |                                |                          | 0.2         |              | 117                                 |                        |
|                        |                                         | OVERHAUL                       | 0.5                      |             |              |                                     |                        |
| 180102                 | Tube Assembly                           | REPAIR                         | 0.4                      |             |              | 117                                 |                        |
|                        |                                         | OVERHAUL                       | 0.6                      |             |              | 117                                 |                        |
| 180103                 | Gearbox Assembly                        | REPAIR                         | 0.4                      |             |              | 117                                 |                        |
| 180104                 | Beam Assembly                           | REPAIR                         | 0.4                      |             |              | 117                                 |                        |
| 180105                 | Winch Assembly                          | REPAIR                         |                          | 1.3         |              | 117                                 |                        |
| 1802                   | Tail Rotor Crane                        | REPLACE                        | 0.7                      |             |              | 117                                 |                        |
|                        |                                         | REPAIR                         | 0.9                      |             |              | 119                                 |                        |
|                        |                                         | REMOVE                         | 0.7                      |             |              | 117                                 |                        |
| 1803                   | Fuel Quantity System<br>Harness Adapter | REPAIR                         | 0.5                      |             |              | 117 157                             |                        |
| 1804                   | Maintenance Light                       | REPLACE                        | 0.2                      |             |              | 117                                 |                        |
| 1805                   | Buddy Start System                      | REPAIR                         | 0.7                      |             |              | 117                                 |                        |
|                        |                                         | REPLACE                        | 0.4                      |             |              | 201                                 |                        |
| 1806                   | Blade Clamp As-<br>sembly               | REPAIR                         | 0.4                      |             |              | 117                                 |                        |
|                        |                                         |                                |                          | 1.2         |              | 117                                 |                        |
| 1807                   | Pylon Strut Lock                        | REPAIR                         | 0.2                      |             |              | 117                                 |                        |
| 1808                   | Rigging Set                             | REPAIR                         | 0.2                      |             |              | 117                                 |                        |
|                        |                                         |                                |                          | 0.4         |              | 117                                 |                        |

## MAINTENANCE ALLOCATION CHART - Continued

Table 1. Maintenance Allocation Chart (Aviation) for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| (1)<br>GROUP<br>NUMBER | (2)<br>DESCRIPTION                       | (3)<br>MAINTENANCE<br>FUNCTION | (4) MAINTENANCE<br>LEVEL |             |              | (5)<br>TOOLS &<br>EQUIP<br>REF CODE | (6)<br>REMARKS<br>CODE |
|------------------------|------------------------------------------|--------------------------------|--------------------------|-------------|--------------|-------------------------------------|------------------------|
|                        |                                          |                                | AVUM<br>(O)              | AVIM<br>(F) | DEPOT<br>(D) |                                     |                        |
| 180801                 | "Bag Assembly, Rig-<br>ging Set"         | OVERHAUL                       |                          | 0.5         |              |                                     |                        |
| 1809                   | "Adapter, Main<br>Gearbox"               | REPAIR                         | 0.3                      |             |              | 117                                 |                        |
|                        |                                          |                                |                          | 0.7         |              | 117                                 |                        |
| 1810                   | "Adapter, Main Rotor<br>Head"            | REPAIR                         | 0.3                      |             |              | 117                                 |                        |
|                        |                                          |                                |                          | 0.7         |              | 117                                 |                        |
| 1811                   | "Adapter, Auxiliary<br>Power Unit"       | REPAIR                         | 0.3                      |             |              | 117                                 |                        |
|                        |                                          |                                |                          | 0.7         |              | 117                                 |                        |
| 1812                   | "Adapter, Infrared Sup-<br>pressor"      | REPAIR                         | 0.3                      |             |              | 117                                 |                        |
|                        |                                          |                                |                          | 0.7         |              | 117                                 |                        |
| 1813                   | "Adapter, Transmission<br>Oil Cooler"    | REPAIR                         |                          | 0.7         |              | 117                                 |                        |
| 1814                   | "Adapter, Main and<br>Tail Rotor Blades" | REPAIR                         | 0.3                      |             |              | 117                                 |                        |
| 1815                   | "Adapter Assy., Pitot-<br>Static Head"   | REPAIR                         | 0.4                      |             |              | 123 204                             |                        |

## MAINTENANCE ALLOCATION CHART - Continued

Table 2. Tools and Test Equipment Requirements for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters.

| TOOL OR TEST EQUIPMENT REF CODE | MAINTENANCE LEVEL | NOMENCLATURE                            | NATIONAL STOCK NUMBER | TOOL NUMBER   |
|---------------------------------|-------------------|-----------------------------------------|-----------------------|---------------|
| 1                               | O                 | "TORQUE WRENCH, 0 - 16 IN. OZ."         | 5120-01-208-5934      | TQSS008A      |
| 2                               | O                 | DIAL INDICATOR                          | 5120-00-177-4191      | A-A-2348      |
| 3                               | O                 | "NUMBER, TIP TARGET"                    | 4920-01-046-7360      | A3363         |
| 4                               | O                 | "TORQUE WRENCH, 0 - 30 IN. LBS"         | -                     |               |
| 5                               | O                 | FILLER AND BLEEDER                      | 4910-00-245-1832      | AF5           |
| 6                               | O                 | BREECH TEST PROBE                       | -                     | AJJ6193-44226 |
| 7                               | O                 | MULTIMETER                              | 6625-01-265-6000      | AN/PSM-45A    |
| 8                               | O                 | BATTERY CHARGER                         | 6130-01-055-1574      | AN/USM-432    |
| 9*                              | O                 | SPANNER SET                             | 5120-00-513-1754      | AN8515-1      |
| 10                              | O                 | ADAPTER MODULE                          | 4920-01-070-7563      | A4063         |
| 11                              | O                 | "APPLICATOR, SPRAY MIX "                | 4940-00-478-6996      | BB299         |
| 12                              | O                 | "TEST SET VIBRATION ANALYZER, AVIATION" | 6625-01-282-3746      |               |
| 13                              | F                 | "GENERATOR SET, GASOLINE"               | 6115-00-127-8544      | C26C          |
| 14                              | O                 | HYDRAULIC SERVICING UNIT                | 1730-00-855-6108      | C520-1000     |
| 15                              | O                 | "TOOL SET, TUBING REPAIR"               | 5180-01-026-0253      | D12102-C01-01 |

## MAINTENANCE ALLOCATION CHART - Continued

Table 2. Tools and Test Equipment Requirements for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| TOOL OR TEST EQUIPMENT REF CODE | MAINTENANCE LEVEL | NOMENCLATURE                           | NATIONAL STOCK NUMBER | TOOL NUMBER |
|---------------------------------|-------------------|----------------------------------------|-----------------------|-------------|
| 16*                             | O                 | "ADAPTER, TORQUE "                     | 5120-01-074-6573      | FRES 10     |
| 17                              | O                 | "ADAPTER, TORQUE "                     | 5120-01-074-6572      | FRES 14     |
| 18                              | O                 | "ADAPTER, TORQUE WRENCH"               | 5120-00-867-5518      |             |
| 19                              | O                 | MAGNET                                 | -                     | GGG-F-0036  |
| 20                              | O                 | "TORQUE WRENCH, 5 - 30 IN. LBS "       | -                     |             |
| 21                              | O                 | "TORQUE WRENCH, 30 - 200 IN. LBS"      | -                     |             |
| 22                              | O                 | "HEADSET, MICROPHONE "                 | -                     | H-101A/U    |
| 23                              | O                 | "APU TEST SET, SIMULATOR, TEMP/ SPEED" | 4920-01-116-2631      | H296A-1     |
| 24                              | O                 | "APU TEST SET, SIMULATOR, TEMP/ SPEED" | 4920-01-206-1856      | H296B-1     |
| 25*                             | O                 | "DRAIN ATTACHMENT, GEAR BOX"           | 4920-01-112-4937      | H538A-3     |
| 26                              | F                 | STABILATOR INDICATOR                   | 6610-01-114-9564      | ID-2279/A   |
| 27                              | F                 | BLADE REPAIR KIT                       | 4920-01-035-0324      | K747-401-1  |
| 28                              | O                 | "COMPRESSOR UNIT, RECIPROCATING"       | 4310-00-752-9634      | MIL-C-13874 |
| 29                              | F                 | "TEST SET, INDICATOR "                 | 4920-00-834-1453      | MIL-T-58092 |

## MAINTENANCE ALLOCATION CHART - Continued

Table 2. Tools and Test Equipment Requirements for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| TOOL OR TEST EQUIPMENT REF CODE | MAINTENANCE LEVEL | NOMENCLATURE                       | NATIONAL STOCK NUMBER | TOOL NUMBER     |
|---------------------------------|-------------------|------------------------------------|-----------------------|-----------------|
| 30                              | O                 | "INSERTER AND REMOVER, ELECTRICAL" | 5120-00-915-4587      | M819691-14-02   |
| 31                              | O                 | INSERT TOOL                        | -                     | M83723-31-20    |
| 32                              | O                 | "TEST SET, ELECTRONICS "           | -                     | M91             |
| 33                              | O                 | "TEST SET, ELECTRONICS "           | -                     | M92             |
| 34                              | O                 | "TEST SET, FUEL QUANTITY"          | -                     | PSD-60-1AF      |
| 35                              | O                 | "FUEL QUANTITY SYSTEM ""T"" CABLE" | -                     | PSDAF-113       |
| 36*                             | F                 | "PULLER KIT, UNIVERSAL"            | 5120-00-423-1596      | PE12/GGGP781    |
| 37                              | O                 | "KIT, FIBERGLASS REPAIR"           | 1560-00-856-9222      | S1607-7021      |
| 38*                             | O                 | CHECK FILL UNIT                    | 4920-01-204-3076      | 70700-77669-041 |
| 39                              | O                 | "CHECKING UNIT, BLADE "            | 4920-00-963-7116      | S1670-15002-2   |
| 40                              | O                 | "TOOL KIT, ELECTRONIC "            | 5180-00-064-5178      | TK-101/G        |
| 41                              | O                 | TEST FIXTURE                       | -                     | T-3430          |
| 42                              | O                 | TEST FIXTURE                       | -                     | T-23555-1       |
| 43                              | O                 | "TEST SET, INDICATOR "             | 4920-00-109-5066      | TF-579          |
| 44                              | O                 | PUMP BOOSTER CLD                   | 4320-00-390-9556      | W834            |
| 45                              | O                 | DECADE RESISTOR                    | 6625-00-246-6315      | ZM57U           |

## MAINTENANCE ALLOCATION CHART - Continued

Table 2. Tools and Test Equipment Requirements for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| TOOL OR TEST EQUIPMENT REF CODE | MAINTENANCE LEVEL | NOMENCLATURE                     | NATIONAL STOCK NUMBER | TOOL NUMBER     |
|---------------------------------|-------------------|----------------------------------|-----------------------|-----------------|
| 46                              | F                 | SPRING TESTER                    | 6635-00-717-1307      | 0301056         |
| 47                              | O                 | "TEST SET, INSULATION BREAKDOWN" | 6625-00-060-5983      | 04237404A1      |
| 48                              | O                 | "TEST SET, INSULATOR "           | 6625-00-649-3417      | 412             |
| 49                              | O                 | "PROBE, TEMPERATURE SET "        | 6685-00-728-2397      | 0790            |
| 50                              | O                 | TRACK AND BALANCE KIT            | 4920-01-040-7816      | B4591           |
| 51                              | O                 | "ADAPTER, STAND"                 | 4920-01-109-2491      | 21C7071G01      |
| 52*                             | O                 | "SLING, ENGINE"                  | 4920-01-108-3484      | 21C7081G02      |
| 53                              | O                 | "ADAPTER, TRANSPORTATION"        | 4920-01-128-3121      | 21C7082G02      |
| 54                              | O                 | "TEST SET, VERTICAL "            | 4920-01-112-5906      | 245-476853-000  |
| 55                              | O                 | "TEST SET, INDICATOR"            | 4920-01-327-1312      | 245-476854-001  |
| 56                              | O                 | "MANOMETER, VERTICAL "           | 6685-00-526-8646      | 30PA10TM        |
| 57                              | O                 | "THERMOMETER, INDICATOR "        | 6685-00-079-9115      | 389-3L          |
| 58                              | O                 | PYROMETER                        | 6685-00-080-0186      | 4000A           |
| 59                              | O                 | SOCKET WRENCH                    | 5120-00-189-7931      |                 |
| 60                              | O                 | "TEST SET, SYSTEM ANALYZER"      | 4920-01-120-7488      | 60B63-5-A       |
| 61*                             | O                 | "PULLER, PITCH BEAM "            | 5120-00-948-3923      | 65700-10048-041 |

## MAINTENANCE ALLOCATION CHART - Continued

Table 2. Tools and Test Equipment Requirements for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| TOOL OR TEST EQUIPMENT REF CODE | MAINTENANCE LEVEL | NOMENCLATURE                            | NATIONAL STOCK NUMBER | TOOL NUMBER            |
|---------------------------------|-------------------|-----------------------------------------|-----------------------|------------------------|
| 62                              | F                 | "TOOL, BEARING INSTALL"                 | 5120-01-161-2822      | 70104-08010-044 TO 046 |
| 63                              | O                 | "BOX WRENCH, SPECIAL "                  | 5120-01-105-2029      | 70700-20210-101        |
| 64                              | O                 | MAINTENANCE CRANE ASSEMBLY              | 1730-01-082-6502      | 70700-20300-042        |
| 65                              | O                 | HOISTING SLING ASSEMBLY                 | 1730-01-078-5699      | 70700-20320-042        |
| 66*                             | O                 | "SLING, AIRCRAFT MAINTENANCE"           | 1730-01-306-6973      | 70700-20320-045        |
| 67*                             | O                 | "CLAMP ASSEMBLY, BLADE"                 | 4920-01-112-4939      | 70700-20324-041        |
| 68                              | O                 | PROTRACTOR                              | -                     | F7710                  |
| 69*                             | O                 | RIGGING KIT                             | -                     | 70700-20389-042        |
| 70                              | O                 | TENSIONOMETER                           | -                     | MIL-T-38760            |
| 71                              | O                 | ADAPTER HOIST-ING                       | 3940-01-122-0442      | 70700-20420-041        |
| 72                              | O                 | ADAPTER HOIST-ING                       | 1730-01-122-8976      | 70700-20421-041        |
| 73                              | O                 | "ADAPTER HOIST-ING ASSEMBLY, APU"       | 4920-01-114-8526      | 70700-20423-041        |
| 74                              | O                 | "ADAPTER ASSEMBLY, INFRARED SUPPRESSOR" | 1730-01-122-8977      | 70700-20424-041        |
| 75                              | O                 | ADAPTER HOIST-ING                       | 1730-01-127-7500      | 70700-20425-041        |
| 76                              | O                 | "ADAPTER ASSEMBLY, TRANSMISSION"        | 1730-01-122-8978      | 70700-20426-041        |

## MAINTENANCE ALLOCATION CHART - Continued

Table 2. Tools and Test Equipment Requirements for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| TOOL OR<br>TEST<br>EQUIP-<br>MENT REF<br>CODE | MAINTENANCE<br>LEVEL | NOMENCLATURE                             | NATIONAL STOCK<br>NUMBER | TOOL NUMBER     |
|-----------------------------------------------|----------------------|------------------------------------------|--------------------------|-----------------|
| 77                                            | O                    | "TEST SET, STABI-<br>LATOR "             | 6625-01-266-1636         | 70700-20650-047 |
| 78                                            | F                    | NULLING FIXTURE                          | 4920-01-088-3225         | 70700-20675-041 |
| 79                                            | F                    | TEST BOX AS-<br>SEMBLY                   | -                        | 70700-20678-041 |
| 80*                                           | O                    | "TAIL FLANGE, SUP-<br>PORT "             | 1680-01-105-1496         | 70700-20688-041 |
| 81*                                           | O                    | "WRENCH, TAIL<br>DRIVE"                  | 4920-01-175-8964         | 70700-20687-102 |
| 82                                            | O                    | "KIT, AIR<br>TRANSPORT"                  | 1680-01-102-6037         | 70700-70002-013 |
| 83                                            | O                    | OSCILLOSCOPE                             | 6625-00-261-5127         | 7603            |
| 84                                            | F                    | SPRING TESTER                            | 6635-00-087-9500         | 719-5           |
| 85                                            | F                    | SPRING TESTER                            | 6635-00-883-1205         | 719-10MRP       |
| 86                                            | F                    | SPRING TESTER                            | 6635-00-780-1599         | 719-40          |
| 87                                            | O                    | "AMMETER,<br>CLAMP-ON "                  | -                        | 749             |
| 88                                            | O                    | ANGLE POSITION<br>INDICATOR              | -                        | 8810F1110       |
| 89                                            | O                    | "POWER UNIT,<br>AIRCRAFT "               | 1730-01-144-1897         | 83-360A         |
| 90                                            | O                    | "TESTER, PITOT<br>AND STATIC<br>SYSTEMS" | 4920-01-182-1972         | 3400-0003       |
| 91                                            | O                    | "TIEDOWN, CARGO<br>"                     | 1670-00-725-1437         | 7745720-G1      |
| 92                                            | O                    | "POWER UNIT,<br>AIRCRAFT "               | 1730-01-144-1897         | 83-360A         |



## MAINTENANCE ALLOCATION CHART - Continued

Table 2. Tools and Test Equipment Requirements for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| TOOL OR TEST EQUIPMENT REF CODE | MAINTENANCE LEVEL | NOMENCLATURE                            | NATIONAL STOCK NUMBER | TOOL NUMBER  |
|---------------------------------|-------------------|-----------------------------------------|-----------------------|--------------|
| 93                              | O                 | "DISPENSER, SEAL-ANT "                  | 5120-00-952-3507      | 850A21-2AMD6 |
| 94                              | O                 | "TEST SET, PITOT-STATIC "               | 4920-01-182-1972      | 3400-0003    |
| 95*                             | O                 | INFLATOR ASSEMBLY                       | 6685-00-124-4336      |              |
| 96                              | O                 | "INSPECTION KIT, FLUORESCENT PENETRANT" | 6850-00-826-0981      | XMA 101      |
| 97                              | F                 | INSTALLATION TOOL                       | 5120-00-781-7891      |              |
| 98                              | O                 | MULTIMETER                              | 6625-00-210-7584      |              |
| 99                              | O                 | MULTIMETER                              | 6625-01-265-6000      |              |
| 100                             | O                 | "MULTIMETER, DIGITAL "                  | -                     | AN/USM-223   |
| 101                             | F                 | "SHOP SET, ELECTRICAL"                  | 4920-00-165-1453      |              |
| 102                             | F                 | "SHOP SET, ENGINE"                      | 4920-00-224-3684      |              |
| 103                             | F                 | "SHOP SET, HYDRAULIC"                   | 4920-00-165-1454      |              |
| 104                             | F                 | "SHOP SET, MACHINE SHOP"                | 4920-00-405-9279      |              |
| 105                             | F                 | "SHOP SET, AVIATION I "                 | 4920-00-166-5505      |              |
| 106                             | F                 | "SHOP SET, POWER TRAIN"                 | 4920-00-001-4132      |              |
| 107                             | F                 | "SHOP SET, AVIATION I "                 | 4920-00-405-9270      |              |

## MAINTENANCE ALLOCATION CHART - Continued

Table 2. Tools and Test Equipment Requirements for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| TOOL OR TEST EQUIPMENT REF CODE | MAINTENANCE LEVEL | NOMENCLATURE                      | NATIONAL STOCK NUMBER | TOOL NUMBER      |
|---------------------------------|-------------------|-----------------------------------|-----------------------|------------------|
| 108                             | F                 | "SHOP SET, TOOL CRIB "            | 4920-00-472-4183      |                  |
| 109                             | F                 | "SHOP SET, WELDING "              | 4920-00-163-5093      |                  |
| 110                             | O                 | STABILATOR                        | -                     |                  |
| 111                             | O                 | "TANK, ADAPTER"                   | 1730-00-614-7194      |                  |
| 112                             | F                 | "TEST STAND, HYDRAULIC"           | 4920-00-141-8801      |                  |
| 113                             | F                 | "TESTER, SPRING, 4-400LB"         | 5120-00-937-7265      |                  |
| 114                             | O                 | "TOOLKIT, AIR-FRAME MECHANIC'S"   | 5180-00-323-4876      | SC 5180-99-B02   |
| 115                             | O                 | "TOOLKIT, ELECTRICAL REPAIRER'S"  | 5680-00-323-4915      | SC 5180-99-B06   |
| 116                             | O                 | "TOOLKIT, POWER-PLANT REPAIRER'S" | 5180-00-323-4944      | SC 5180-99-B07   |
| 117                             | O                 | "TOOLKIT, AIRCRAFT MECHANIC'S"    | 5180-01-375-6925      | SC 5180-99-B01   |
| 118                             | O                 | "TOOLKIT, HYDRAULIC REPAIRER'S"   | 5180-00-323-4891      | SC 5180-99-A03   |
| 119                             | O                 | "TOOLKIT, INSTRUMENT REPAIRER'S"  | 5180-00-323-4913      |                  |
| 120                             | O                 | "TOOLKIT, POWER-TRAIN REPAIRER'S" | 5180-00-003-5267      | SC 5180-99-B13   |
| 121                             | O                 | "TOOL KIT, AVUM NO. 1"            | 4920-00-159-8727      | SC 4920-99-CLA90 |

## MAINTENANCE ALLOCATION CHART - Continued

Table 2. Tools and Test Equipment Requirements for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| TOOL OR TEST EQUIPMENT REF CODE | MAINTENANCE LEVEL | NOMENCLATURE                       | NATIONAL STOCK NUMBER | TOOL NUMBER            |
|---------------------------------|-------------------|------------------------------------|-----------------------|------------------------|
| 122                             | O                 | "TOOL KIT, AVUM NO. 2"             | 4920-00-567-0476      | SC 4920-99-CLA9        |
| 123                             | O                 | VACUUM PUMP                        | 4310-01-434-4532      | 70700-77325-046        |
| 124                             | O                 | STOPWATCH                          | 6645-00-126-0286      |                        |
| 125                             | O                 | "TEST SET, INSULATION BREAKDOWN"   | 6625-00-802-9445      |                        |
| 126                             | O                 | COMBUSTIBLE GAS INDICATOR SET      | 6665-01-153-8474      | 51-8018                |
| 127                             | O                 | "TOOL KIT, REFRIGERATION"          | 5180-00-596-1474      |                        |
| 128                             | O                 | "TORQUE WRENCH, 150 - 1000 IN. LB" | -                     |                        |
| 129                             | O                 | HOIST ADAPTER                      | -                     | 70700-20468-041        |
| 130                             | O                 | "TORQUE WRENCH, 300 - 2500 IN. LB" | -                     |                        |
| 131                             | O                 | "TORQUE WRENCH, 0 - 300 FT. LB"    | 5120-01-034-5033      | GCG-W-686              |
| 132                             | O                 | HEAT GUN                           | -                     | LTF500                 |
| 133                             | O                 | BEARING INSTALLATION/REMOVAL KIT   | 5120-01-146-8247      | 70700-77306-041        |
| 134                             | O                 | BEARING INSTALLATION/REMOVAL KIT   | 5120-00-189-8167      | 65700-40030-041        |
| 135                             | O                 | DIAL INDICATOR                     | 5210-00-246-6121      | MIL-I-18422            |
| 136                             | O                 | MAINTENANCE SLING                  | 1730-01-311-3772      | 70700-20323-043        |
| 137                             | O                 | INSTALLATION TOOL                  | -                     | 70150-09148-041 TO 046 |

## MAINTENANCE ALLOCATION CHART - Continued

Table 2. Tools and Test Equipment Requirements for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| TOOL OR TEST EQUIPMENT REF CODE | MAINTENANCE LEVEL | NOMENCLATURE                      | NATIONAL STOCK NUMBER | TOOL NUMBER     |
|---------------------------------|-------------------|-----------------------------------|-----------------------|-----------------|
| 138                             | O                 | BALANCE WEIGHTS                   | 5310-01-096-1264      | 70106-08105-102 |
| 139*                            | O                 | TRIM TAB ADJUSTMENT SET           | 4920-01-388-6912      | 70700-20308-041 |
| 140                             | O                 | BEARING PUSHER/PULLER TOOL KIT    | 5120-01-163-5287      | 70700-77454-041 |
| 141                             | O                 | BEARING STAKING TOOL SET          | 5980-01-242-3711      | 70700-77353-041 |
| 142                             | O                 | "TORQUE WRENCH, 100 - 500 FT. LB" | -                     |                 |
| 143                             | O                 | WRENCH                            | -                     | 70700-20687-041 |
| 144                             | O                 | BACKUP RING SIZING TOOL           | 5120-01-168-8436      | 274600AT5       |
| 145                             | O                 | BACKUP RING INSTALLATION TOOL     | 5120-01-168-8435      | 274600AT6       |
| 146                             | O                 | PERMASWAGE TOOL KIT               | 5180-01-026-0253      | D12323-1-3456   |
| 147                             | O                 | SWAGING TOOL                      | -                     | D10001          |
| 148                             | O                 | PORTABLE HYDRAULIC PUMP           | 4320-00-008-8898      | D10004          |
| 149                             | O                 | CLAMP AND LOCATING DEVICE         | 4920-01-434-5107      | 320-4-44816     |
| 150                             | O                 | PROBE                             | -                     | 70357-03016-102 |
| 151                             | O                 | METERING VALVE                    | -                     | MV200           |
| 152                             | O                 | OIL/WATER SEPARATOR               | -                     | MIL-S-12928     |
| 153                             | O                 | VACUUM PRESSURE GAGE              | -                     | 25106-22B11     |

## MAINTENANCE ALLOCATION CHART - Continued

Table 2. Tools and Test Equipment Requirements for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| TOOL OR TEST EQUIPMENT REF CODE | MAINTENANCE LEVEL | NOMENCLATURE             | NATIONAL STOCK NUMBER | TOOL NUMBER     |
|---------------------------------|-------------------|--------------------------|-----------------------|-----------------|
| 154                             | O                 | ARBOR PRESS              | 3444-00-223-8353      | OO-P-636        |
| 155                             | O                 | PULLER SET               | -                     | GGG-P781        |
| 156                             | O                 | REAMER SET               | -                     | GGG-R-0018      |
| 157                             | O                 | SOLDER IRON              | 3439-00-134-9202      | 1102-0004       |
| 158                             | O                 | SLIDE CALIPER            | -                     | GGG-C-105       |
| 159                             | O                 | STACKING TOOL            | -                     | T-34214         |
| 160                             | O                 | REAMER SET               | -                     | GGG-R-00181     |
| 161                             | O                 | LOCKOUT BLOCK            | 1615-01-109-7189      | 70700-20463-041 |
| 162                             | O                 | SPRING SCALE             | -                     | AAA-S-133       |
| 163                             | O                 | DIAGNOSTIC TEST SET      | -                     | EC-26000-1      |
| 164                             | O                 | HOISTING SLING           | -                     | 70700-20323-042 |
| 165                             | O                 | "REPAIR KIT, FUEL TANK " | 1560-01-305-7909      | 052M001-501     |
| 166                             | O                 | TAIL CRANE ASSEMBLY      | 1560-01-127-2786      | 70700-20413-041 |
| 167                             | O                 | "PARTS KIT, FUEL TANK "  | -                     | 052M002-502     |
| 168                             | O                 | "PARTS KIT, FUEL TANK "  | -                     | 052M003-502     |
| 169                             | O                 | HIGH POTENTIAL TESTER    | -                     | MODEL 411A1     |
| 170                             | O                 | SHIM KIT                 | -                     | 70207-01003-043 |

## MAINTENANCE ALLOCATION CHART - Continued

Table 2. Tools and Test Equipment Requirements for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| TOOL OR TEST EQUIPMENT REF CODE | MAINTENANCE LEVEL | NOMENCLATURE                                 | NATIONAL STOCK NUMBER | TOOL NUMBER     |
|---------------------------------|-------------------|----------------------------------------------|-----------------------|-----------------|
| 171                             | O                 | "BUSHING, BEARING REMOVAL/INSTALLATION TOOL" | 4920-01-175-5934      | 70700-20129-041 |
| 172                             | O                 | ACCELEROMETER                                | 6680-01-301-8233      | 4177B           |
| 173                             | O                 | ACCELEROMETER BRACKET                        | 5342-01-086-1524      | 3383            |
| 174                             | O                 | BALANCER                                     | -                     | 177M-6A         |
| 175                             | O                 | BLEED AIR TUBE PLUG                          | 5340-01-335-2892      | 70700-20114-109 |
| 176                             | O                 | "CALCULATOR, HEWLETT-PACKARD 71B"            | -                     | HTI-104-029-10  |
| 177                             | O                 | PHOTOCELL                                    | -                     | 7598            |
| 178                             | O                 | PHOTOCELL CONTROL                            | -                     | 7400            |
| 179                             | O                 | PHOTOCELL CONTROL MOUNT BRACKET              | -                     | 70400-20114-041 |
| 180                             | O                 | PHOTOCELL CONTROL MOUNT BRACKET              | -                     | 70400-20114-044 |
| 181                             | O                 | "BUSHING, REMOVAL/INSTALLATION TOOL"         | 5120-00-980-2924      | 65700-20002-041 |
| 182                             | O                 | ROLL STAKING TOOL                            | 5120-01-216-1913      | RST2154         |
| 183                             | O                 | STAKING TOOL                                 | 5120-01-382-8668      | RST 2459        |
| 184                             | O                 | PYLON STRUT                                  | 1520-01-125-0782      | 70700-20385-041 |

## MAINTENANCE ALLOCATION CHART - Continued

Table 2. Tools and Test Equipment Requirements for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| TOOL OR TEST EQUIPMENT REF CODE | MAINTENANCE LEVEL | NOMENCLATURE                                                              | NATIONAL STOCK NUMBER | TOOL NUMBER     |
|---------------------------------|-------------------|---------------------------------------------------------------------------|-----------------------|-----------------|
| 185                             | O                 | "TAIL ROTOR DRIVE SHAFT SUPPORT, ALIGNMENT KIT "                          | 4920-01-192-1058      | 70700-20480-041 |
| 186                             | O                 | REFRIGERANT RECOVERY AND RECYCLING STATION                                | 4330-01-411-7233      | 17500B          |
| 187                             | O                 | TOW BAR                                                                   | 1730-00-967-9556      | AA1730-1251     |
| 188                             | O                 | CHAIN ASSEMBLY                                                            | -                     | 627728          |
| 189                             | O                 | FLYAWAY EQUIPMENT KIT (WITHOUT HOVER INFRARED SUPPRESSION SYSTEM (HIRSS)) | -                     | 70700-10000-011 |
| 190                             | O                 | FLYAWAY EQUIPMENT KIT (WITH HOVER INFRARED SUPPRESSION SYSTEM (HIRSS))    | -                     | 70700-10000-014 |
| 191                             | O                 | ENGINE AIR INLET PLUG                                                     | 1560-01-124-6169      | 70700-20507-042 |
| 192                             | O                 | PYLON FOLD STRUT                                                          | -                     | 70700-20448-044 |
| 193*                            | O                 | PYLON LOCK STRUT                                                          | 1560-01-125-0782      | 70700-20385-041 |
| 194                             | O                 | JACK                                                                      | -                     | MIL-J-26016     |
| 195                             | O                 | JACK                                                                      | -                     | MIL-J-26013     |
| 196                             | O                 | TAIL ROTOR BLADE SPACERS                                                  | 1730-01-082-6504      | 70700-20453-041 |
| 197                             | O                 | LOCKRING REMOVAL TOOL                                                     | 5120-00-953-2201      | SR25R           |

## MAINTENANCE ALLOCATION CHART - Continued

Table 2. Tools and Test Equipment Requirements for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| TOOL OR TEST EQUIP-<br>MENT REF<br>CODE | MAINTENANCE<br>LEVEL | NOMENCLATURE                         | NATIONAL STOCK<br>NUMBER | TOOL NUMBER     |
|-----------------------------------------|----------------------|--------------------------------------|--------------------------|-----------------|
| 198                                     | O                    | SWAGE TOOL                           | -                        | SR25S-A         |
| 199                                     | O                    | BLADE REPAIR KIT                     | 4920-01-035-0324         | K747-401-1      |
| 200                                     | O                    | VERNIER CALIPER                      | -                        | GGG-C-111       |
| 201                                     | O                    | BUDDY START AS-<br>SEMBLY            | -                        | 0043-0034-3     |
| 202                                     | O                    | HEATER MAT<br>RESISTANCE TEST<br>BOX | -                        | TGN55-01052     |
| 203                                     | O                    | "ADAPTER, PRES-<br>SURE TEST"        | 4920-01-125-5384         | PSS59101-4-6-6  |
| 204                                     | O                    | SEAL AND SPACER<br>KIT               | -                        | SSK101          |
| 205                                     | O                    | STRAP WRENCH                         | -                        | GGG-W-651       |
| 206                                     | F                    | "TOOL KIT, SCREW<br>THREAD INSERT"   | 5180-01-329-0269         | K4-162-162L     |
| 207                                     | F                    | "TOOL KIT, SCREW<br>THREAD INSERT"   | 5180-00-177-8968         | K4-192-192L     |
| 208                                     | F                    | "TOOL KIT, SCREW<br>THREAD INSERT"   | 5180-00-178-0046         | K4-258-258L     |
| 209                                     | F                    | SPRING TESTER                        | 6635-00-490-3142         | PB4-50D         |
| 210                                     | O                    | CRADLE AS-<br>SEMBLY                 | -                        | 70700-80435-041 |
| 211                                     | O                    | STABILATOR BUSH-<br>ING KIT          | -                        | 38076-00017-042 |
| 212                                     | O                    | SHIPPING CRADLE                      | -                        | 24ATC005-501    |
| 213                                     | O                    | LOCK BOLTS                           | 1615-01-109-7189         | 70700-20463-041 |
| 214                                     | O                    | OHMMETER                             | 6625-01-125-3471         | 247000          |



## MAINTENANCE ALLOCATION CHART - Continued

Table 2. Tools and Test Equipment Requirements for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued

| TOOL OR TEST EQUIPMENT REF CODE | MAINTENANCE LEVEL | NOMENCLATURE                          | NATIONAL STOCK NUMBER | TOOL NUMBER      |
|---------------------------------|-------------------|---------------------------------------|-----------------------|------------------|
| 215                             | O                 | HIGH PRESSURE NITROGEN SERVING CART   | -                     | PD-EIG-90-2      |
| 216                             | O                 | SEALANT DISPENSER                     | 5120-01-494-7678      | UG981108-01      |
| 217                             | O                 | CRIMPING TOOL                         | -                     | 6541K67          |
| 218                             | O                 | MCU CHARGE/PURGE KIT                  | 1680-01-509-4762      | 9925939          |
| 219                             | O                 | SYRINGE                               | 6520-01-173-2081      | 194-1135         |
| 220                             | O                 | 1-LITER MIXING BOTTLE                 | -                     | 2110-0032        |
| 221                             | F                 | "TOOL, ROLLER STAKING"                | -                     | STD-1850-458-017 |
| 222                             | F                 | "TOOL, ROLLER STAKING"                | -                     | STD-1850-458-011 |
| 223                             | O                 | FUEL CELL CORROSION INSPECTION KIT    | -                     | 1011688          |
| 224                             | O                 | "WRENCH, CROWS-FOOT, 7/16, 3/8 DRIVE" | 5120-01-335-1150      | FC 014A          |
| 225                             | O                 | FLANGE PULLER                         | -                     | 1420-BH-012-01   |
| 226                             | O                 | TORQUE REACTOR                        | -                     | 410404-1         |
| 227                             | O                 | TORQUE REACTOR                        | -                     | FIG H-271        |
| 228                             | O                 | TORQUE REACTOR PLATE                  | -                     | FIG H-262        |
| 229                             | O                 | TIRE CAGE                             | 4920-01-545-0763      | SK2000TC-6       |

**MAINTENANCE ALLOCATION CHART** - Continued**Table 2. Tools and Test Equipment Requirements for EH-60A, UH-60A, UH-60L, HH-60A, and HH-60L Helicopters. - Continued**

| <b>TOOL OR<br/>TEST<br/>EQUIP-<br/>MENT REF<br/>CODE</b> | <b>MAINTENANCE<br/>LEVEL</b> | <b>NOMENCLATURE</b>                           | <b>NATIONAL STOCK<br/>NUMBER</b> | <b>TOOL NUMBER</b> |
|----------------------------------------------------------|------------------------------|-----------------------------------------------|----------------------------------|--------------------|
| 230                                                      | O                            | MAIN ROTOR<br>BLADE SOLID PIN<br>REMOVAL TOOL | -70700-25450-041                 |                    |

**Table 3. Remarks..**

| <b>REMARKS CODE</b> | <b>REMARKS</b>                                                                                                               |
|---------------------|------------------------------------------------------------------------------------------------------------------------------|
| A                   | Fault isolation.                                                                                                             |
| B                   | See appropriate TM.                                                                                                          |
| C                   | Scheduled inspections.                                                                                                       |
| D                   | "Repair by replacement of thermocouple amplifier, CCU housing, SDC mount, and thermocouple support."                         |
| E                   | "Repair connectors, pins, and wiring on aircraft cable assemblies. Replace defective pilot/copilot collective stick switch." |
| F                   | UH-60A and UH-60L peculiar item or system.                                                                                   |
| G                   | EH-60A peculiar item or system.                                                                                              |
| H                   | Post lightning inspection requirement.                                                                                       |
| I                   | 90 day corrosion inspection requirement.                                                                                     |
| J                   | Intentionally center blank.                                                                                                  |
| K                   | Transition section to tailcone section bolt torque inspection. (Every 30 Hrs.)                                               |
| L                   | MWO 50-54.                                                                                                                   |
| M                   | See chapter 9 for aircraft rigging instructions.                                                                             |
| N                   | Reference engine TM.                                                                                                         |
| O                   | Corrosion inspection requirement.                                                                                            |

## MAINTENANCE ALLOCATION CHART - Continued

Table 3. Remarks.. - Continued

| REMARKS CODE | REMARKS                                                             |
|--------------|---------------------------------------------------------------------|
| P            | Special inspection requirement. Torque stabilization 1 to 3 hours.  |
| Q            | 30 hour special inspection requirement.                             |
| R            | 120 hour inspection requirement.                                    |
| S            | MWO 50-25.                                                          |
| T            | No. 3 collective stick position sensor is UH-60L peculiar.          |
| U            | Refer to TM 55-1500-323-23.                                         |
| V            | Usable on 70700-81650-041 cart assembly.                            |
| W            | Usable on 70700-20437-041 cart assembly.                            |
| X            | Refer to TM 1-1500-204-23.                                          |
| Y            | MWO 50-22.                                                          |
| Z            | EMI protected (ECP 384).                                            |
| AA           | MWO 50-26.                                                          |
| AB           | Refer to TM 11-1520-237-23.                                         |
| AC           | Return to original equipment manufacture for repair.                |
| AD           | Critical safety item program impact.                                |
| AE           | Special inspection requirement. Torque stabilization 9 to 11 hours. |
| AF           | 250 hour inspection requirement.                                    |
| AG           | 48 month inspection requirement.                                    |
| AH           | 30 day inspection requirement.                                      |
| AI           | 120 day inspection requirement.                                     |
| AJ           | 6 month inspection requirement.                                     |
| AK           | 1 year inspection requirement.                                      |
| AL           | Daily Inspection Requirement.                                       |
| AM           | TRP To Tailcone Bolt Torque Check - Every 30 Hrs.                   |

---

**MAINTENANCE ALLOCATION CHART** - Continued**Table 3. Remarks.. - Continued**

| REMARKS CODE | REMARKS                                                             |
|--------------|---------------------------------------------------------------------|
| AN           | HH-60L Peculiar Item or System.                                     |
| AO           | AVIM and AVCRAD maintenance equipment.                              |
| AP           | Refer to TM 1-6625-724-13                                           |
| AQ           | Special inspection requirement. Torque stabilization 3 to 13 hours. |

**END OF WORK PACKAGE**

---

## UNIT LEVEL

### EXPENDABLE AND DURABLE ITEMS LIST

---

## INTRODUCTION

### Scope

This work package lists expendable and durable items that you will need to operate and maintain the UH-60A, UH-60L, EH-60A, HH-60A, and HH-60L Helicopters. These items are authorized to you by CTA 50-970, Expendable/Durable Items (Except Medical, Class V, Repair Parts, and Heraldic Items), or CTA 8-100, Army Medical Department Expendable/Durable Items.

### Explanation of Columns in the Expendable/Durable Items List

Column (1) - Item Number. This number is assigned to the entry in the list and is referenced in the narrative instructions to identify the item (e.g., "Use brake fluid (Item 5, WP 1803 00)").

Column (2) Level. This column identifies the lowest level of maintenance that requires the listed item.

Column (3) National Stock Number. This is the NSN assigned to the item which you can use to requisition it.

Column (4) Item Name, Description, Commercial and Government Entity Code (CAGES), and Part Number (P/N). This column provides the other information you need to identify the item.

Column (5) Unit of Issue (U/I). Indicates the physical measurement or count of the item as issued per the National Stock Number shown in column (3).

### Description

## WARNING

Observe all cautions and warnings on the containers when using consumable materials. When applicable, wear necessary protective gear during handling and use. If a consumable is flammable or explosive, make certain consumable and its vapors are kept away from heat, spark, and flame. Make certain helicopter is properly grounded and fire fighting equipment is readily available prior to use. For additional information on toxicity, flashpoint, and flammability of chemicals, consult the manufacturer of the consumable.

## CAUTION

Some contemporary products contain ingredients that may damage sealants, bushings, and protective coatings. To avoid this hazard it is recommended that only those consumable materials indicated in WP 1803 00 be used on the helicopter.

This appendix is a complete list of consumable materials required for maintenance of the helicopter. Many of these materials are listed by their appropriate United States military or federal specifications. These specifications are generally known throughout the world and products meeting their requirements are usually readily available. In most cases, the specifications listed are identified by only the basic number without reference to any revision letter. Unless otherwise stated, only the latest revision applies, and it is the operator's responsibility to obtain and use only materials meeting the latest revision of each specification. When a specific revision letter is listed for a specification, it is because materials conforming to that particular revision best meet the requirements for the specified use of the consumable; a later or future revision may not meet the needed properties as well, and should not be used until qualified by Sikorsky Aircraft.

In many cases, products by other manufacturers are available and have the properties required by the specification. The commercial products listed for each specification are those that were used by Sikorsky Aircraft in the production of the helicopter at the time the list was prepared. Unless otherwise stated, use of these commercial products is discretionary.

**INTRODUCTION** - Continued

with the operator, but any other product that is chosen must be qualified to the specification that is listed. The operator may also find that some consumable materials in this list conform to military specifications, but that these military specifications are not called out for them. In such cases it may be assumed that only the products specified in the maintenance instructions are approved and recommended by Sikorsky Aircraft as having the necessary properties and performance. The consumable materials in this list may also be purchased from Sikorsky Aircraft.

**EXPENDABLE AND DURABLE ITEM LIST****Table 1. Expendable and Durable Items List.**

| (1)<br>ITEM<br>NUMBER | (2)<br>LEVEL | (3)<br>NATIONAL STOCK<br>NUMBER | (4)<br>ITEM NAME, DESCRIPTION,<br>CAGEC, AND PART NUMBER | (5)<br>U/I |
|-----------------------|--------------|---------------------------------|----------------------------------------------------------|------------|
| 1                     | c            | 5350-00-271-5950                | Abrasive Cloth Assortment (80204) ANSI B74.18            | sh         |
| 2                     | c            | 5350-00-967-5089                | Abrasive Mat (83421) 5350-00-967-5089                    | sh         |
| 3                     | c            | 8040-01-181-2355                | Accelerator Adhesive Curing (30676) Accelerator 4        | 8 oz       |
| 4                     | c            | 6810-00-275-1215                | Acetic Acid (58536) A-A-55829                            | bx         |
| 5                     | c            | 6810-00-184-4796                | Acetone Technical (81346) ASTM D329                      | 5<br>gals  |
| 6                     | c            | 8040-01-203-1443                | Adhesive (58536) A-A-3097                                | oz         |
| 7                     | c            | 8040-00-266-7429                | Adhesive (58536) A-A-863                                 | pt         |
| 8                     | c            | 8040-01-076-6183                | Adhesive (71984) A-4000                                  | 0.5<br>pt  |
| 9                     | c            | 8040-01-168-0077                | Adhesive (81343) AMS3374                                 | ca         |
| 10                    | c            | 8040-01-419-8062                | Adhesive (58093) Dapcotac3300                            | kt         |
| 11                    | c            | 8040-01-163-3481                | Adhesive (33564) EA9309.3NA, Class II B                  | kt         |
| 12                    | c            | 8040-00-016-8662                | Adhesive (33564) EA934NA                                 | kt         |
| 13                    | c            | 8040-00-463-7042                | Adhesive (33564) EA956                                   | qt         |
| 14                    | c            | 8040-00-165-8614                | Adhesive (1A9T3) EC1357                                  | qt         |
|                       | c            | 8040-00-273-8717                | Adhesive (1A9T3) EC1357                                  | pt         |

## EXPENDABLE AND DURABLE ITEM LIST - Continued

Table 1. Expendable and Durable Items List. - Continued

| (1)<br>ITEM<br>NUMBER | (2)<br>LEVEL | (3)<br>NATIONAL STOCK<br>NUMBER | (4)<br>ITEM NAME, DESCRIPTION,<br>CAGEC, AND PART NUMBER | (5)<br>U/I |
|-----------------------|--------------|---------------------------------|----------------------------------------------------------|------------|
| 15                    | c            | 8040-00-181-7548                | Adhesive (1A9T3) EC1751 B/A                              | 2 oz       |
|                       | c            | 8040-00-123-6954                | Adhesive (1A9T3) EC1751 B/A                              | pt         |
|                       | c            | 8040-00-959-1854                | Adhesive (1A9T3) EC1751 B/A                              | qt         |
| 16                    | c            | 8040-00-180-6361                | Adhesive (1A9T3) EC2214                                  | 5<br>gals  |
| 17                    | c            | 8040-00-145-0432                | Adhesive (0KHE3) EC2216 B/A                              | kt         |
| 18                    | c            | 8040-00-148-9849                | Adhesive (99384) Epocast 50A                             | kt         |
| 19                    | c            | 8040-00-843-7873                | Adhesive (86961) Epon 815C                               | gal        |
| 20                    | c            | 8040-00-849-5196                | Adhesive (81349) MIL-A-81236                             | qt         |
| 21                    | c            | 8040-00-714-8223                | Adhesive (81348) MMM-A-121                               | tu         |
| 22                    | c            | 8040-00-152-0063                | Adhesive (81348) MMM-A-1617                              | 2 oz       |
| 23                    | c            | 8040-01-355-6366                | Adhesive Primer (33564) EA 9203                          | gal        |
| 24                    | c            | 8030-00-575-5985                | Adhesive (83574) PR421, KIT 14                           | pt         |
| 25                    | c            | 8040-00-526-1910                | Adhesive (95696) PS18                                    | kt         |
| 26                    | c            | 8040-00-225-4548                | Adhesive (01139) RTV102                                  | ca         |
| 27                    | c            | 8040-00-902-3871                | Adhesive (01139) RTV106                                  | kt         |
| 28                    | c            | 8040-00-522-3429                | Adhesive (01139) RTV118                                  | oz         |
| 29                    | c            | 8040-00-118-2695                | Adhesive (72799) RTV162                                  | kt         |
| 30                    | c            | 8040-01-146-2656                | Adhesive (15674) SL-5                                    | 200<br>yd  |
| 31                    | c            | 8040-01-203-8976                | Adhesive (83014) V-45D                                   | qt         |
| 32                    | c            | 8040-01-160-9551                | Adhesive (30676) Versilok 204/Accelerator<br>4           | 3 oz       |
| 33                    | c            | 8040-01-170-3599                | Adhesive (30676) Versilok 506/Accelerator<br>4           | 3 oz       |

## EXPENDABLE AND DURABLE ITEM LIST - Continued

Table 1. Expendable and Durable Items List. - Continued

| (1)<br>ITEM<br>NUMBER | (2)<br>LEVEL | (3)<br>NATIONAL STOCK<br>NUMBER | (4)<br>ITEM NAME, DESCRIPTION,<br>CAGEC, AND PART NUMBER | (5)<br>U/I |
|-----------------------|--------------|---------------------------------|----------------------------------------------------------|------------|
| 34                    | c            | 8040-00-061-8303                | Adhesive (0B5C1) 05200120                                | kt         |
| 35                    | c            | 8040-01-046-2944                | Adhesive (99384) 1210 A/B                                | kt         |
| 36                    | c            | 8040-00-530-4820                | Adhesive (19207) 12277743                                | pt         |
| 37                    | c            | 8040-01-168-0077                | Adhesive (81413) 230493-004                              | ca         |
| 38                    | c            | 8040-01-250-3969                | Adhesive (05972) 242                                     | bt         |
| 39                    | c            | 8040-00-152-0017                | Adhesive (92108) 25009-1                                 | 2.5<br>oz  |
|                       | c            | 8040-00-152-0028                | Adhesive (92108) 25009-2                                 | 6 oz       |
|                       | c            | 8040-00-152-0023                | Adhesive (92108) 25009-3                                 | 8 oz       |
| 40                    | c            | 8040-00-144-9774                | Adhesive (71984) 3145 RTV (Gray)                         | 10.3<br>oz |
|                       | c            | 8040-00-145-0020                | Adhesive (71984) 3145 RTV (Gray)                         | 3 oz       |
| 41                    | c            | 8040-01-284-3984                | Adhesive (05972) 380                                     | oz         |
| 42                    | c            | 8040-01-180-4988                | Adhesive (05972) 416                                     | bt         |
| 43                    | c            | 8040-00-079-7158                | Adhesive (1A9T3) 4693                                    | bt         |
| 44                    | c            | 8040-00-822-6430                | Adhesive (79500) 53841AF                                 | qt         |
| 45                    | c            | 8040-00-515-2250                | Adhesive (19203) 8169S9                                  | qt         |
| 46                    | c            | 8040-01-129-2559                | Adhesive (4A766) 82C18                                   | pt         |
| 47                    | c            | 8040-00-390-7959                | Adhesive (1A9T3) 847                                     | qt         |
| 48                    | c            | 6810-00-577-4889                | Alcohol Denatured (0MUS3) 27 CFR<br>21.35                | bt         |
| 49                    | c            | 8030-00-597-5367                | Antiseize Compound (81349) MIL-A-907                     | 2.5<br>lbs |
| 50                    | c            | 8030-01-044-5034                | Antiseize Compound (6X798) MIL-T-5544                    | lb         |
| 51                    | c            | 8030-00-087-8630                | Antiseize Compound (81349) MIL-T-83483                   | lb         |



## EXPENDABLE AND DURABLE ITEM LIST - Continued

Table 1. Expendable and Durable Items List. - Continued

| (1)<br>ITEM<br>NUMBER | (2)<br>LEVEL | (3)<br>NATIONAL STOCK<br>NUMBER | (4)<br>ITEM NAME, DESCRIPTION,<br>CAGEC, AND PART NUMBER            | (5)<br>U/I       |
|-----------------------|--------------|---------------------------------|---------------------------------------------------------------------|------------------|
| 52                    | c            | 8030-00-889-5285                | Antiseize Compound (78976) 8001                                     | 0.5<br>oz        |
| 53                    | c            | 6515-00-303-8250                | Applicator Disposable (02773) 30-011                                | pg               |
| 54                    | c            | 9150-00-159-5012                | Assembly Fluid (56385) No. 1                                        | 4 oz             |
| 55                    | c            | 8135-00-282-0565                | Barrier Material Water Vaporproofed<br>(19203) 801560               | rl               |
| 56                    | c            | 8315-01-244-7225                | Braid Textile (59364) S8999-7                                       | ea               |
| 57                    | c            | 7920-00-514-2417                | Brush Acid Swabbing (80244)                                         | ea               |
| 58                    | c            | 8020-00-224-8022                | Brush Artist's (80244) 8020-00-224-8010                             | ea               |
| 59                    | c            | 7920-00-205-2401                | Brush Cleaning (80244)                                              | ea               |
| 60                    | c            | 5977-01-101-9857                | Brush Electrical Contact (99932) 301835                             | ea               |
| 61                    | c            | 8020-00-263-3866                | Brush Paint (80244) PD 8020-00-245-4517                             | 6 ea             |
| 62                    | c            | 6850-00-306-9596                | Brush Plating Solution, Cadmium (11924)<br>SPS 5070                 | 4.0<br>cn        |
| 63                    | c            | 6810-01-505-7179                | Calcium Hypochlorite (60928) 21, 138-9                              | 5<br>gram<br>btl |
| 64                    | c            | 6830-01-011-7848                | Carbon Dioxide (81348) BB-C-104                                     | 10 lb            |
| 65                    | c            | 6810-00-264-6517                | Chromium Trioxide (58536) A-A-55827                                 | 5 lb<br>cn       |
| 66                    | c            | 6850-01-239-0571                | Cleaning Compound Aircraft Surface<br>(81349) MIL-PRF-85570 Type II | 1 gal<br>cn      |
|                       | c            | 6850-01-235-0872                | Cleaning Compound Aircraft Surface<br>(81349) MIL-PRF-85570 Type II | 5 gal<br>cn      |
|                       | c            | 6850-01-248-9828                | Cleaning Compound Aircraft Surface<br>(81349) MIL-PRF-85570 Type II | 15<br>gal<br>cn  |

## EXPENDABLE AND DURABLE ITEM LIST - Continued

Table 1. Expendable and Durable Items List. - Continued

| (1)<br>ITEM<br>NUMBER | (2)<br>LEVEL | (3)<br>NATIONAL STOCK<br>NUMBER | (4)<br>ITEM NAME, DESCRIPTION,<br>CAGEC, AND PART NUMBER         | (5)<br>U/I        |
|-----------------------|--------------|---------------------------------|------------------------------------------------------------------|-------------------|
| 67                    | c            | 6850-01-236-0128                | Cleaning Compound Aircraft Surface (81349) MIL-PRF-85570 Type II | 55<br>gal<br>Drum |
|                       | c            | 6850-01-429-2368                | Cleaning Compound Aircraft Surface (81349) MIL-PRF-87937 Type IV | 1 gal<br>cn       |
|                       | c            | 6850-01-433-0873                | Cleaning Compound Aircraft Surface (81349) MIL-PRF-87937 Type IV | 5 gal<br>cn       |
| 68                    | c            | 6850-01-429-2371                | Cleaning Compound Aircraft Surface (81349) MIL-PRF-87937 Type IV | 55gal<br>drum     |
|                       | c            | 6850-00-527-2426                | Cleaning Compound Aluminum (81349) MIL-C-38334                   | gal               |
|                       | c            | 6850-00-224-6663                | Cleaning Compound Rifle Bore (81349) MIL-PRF-372                 | cn                |
| 69                    | c            | 6850-00-181-7280                | Cleaning Compound Solvent (72008) Actusol T776                   | 55<br>gals        |
| 70                    | c            | 6850-01-472-2319                | Type II Cleaning Compound Solvent (81349) MIL-PRF-680            | 1 gal             |
| 71                    | c            | 6850-01-472-2317                | Type II Cleaning Compound Solvent (81349) MIL-PRF-680            | 5 gal             |
|                       | c            | 6850-01-472-2316                | Type II Cleaning Compound Solvent (81349) MIL-PRF-680            | 55<br>gal         |
|                       | c            | 6850-01-215-4776                | Cleaning Compound Solvent (65290) Spray Clean                    | gal               |
| 72                    | c            | 6850-01-375-5554                | Cleaning Compound Solvent (OWU71) 0296-01                        | gal               |
| 73                    | c            | 6850-01-375-5553                | Cleaning Compound Solvent (OWU71) 0296-06                        | 6<br>gals         |
|                       | c            | 6850-01-375-5555                | Cleaning Compound Solvent (OWU71) 0296-55                        | 55<br>gals        |
|                       | c            | 6850-01-411-8815                | Cleaning Compound Solvent (OWU71) 060-1 Gal                      | gal               |

## EXPENDABLE AND DURABLE ITEM LIST - Continued

Table 1. Expendable and Durable Items List. - Continued

| (1)<br>ITEM<br>NUMBER | (2)<br>LEVEL | (3)<br>NATIONAL STOCK<br>NUMBER | (4)<br>ITEM NAME, DESCRIPTION,<br>CAGEC, AND PART NUMBER       | (5)<br>U/I |
|-----------------------|--------------|---------------------------------|----------------------------------------------------------------|------------|
|                       | c            | 6850-01-412-0028                | Cleaning Compound Solvent (0WU71)<br>060-55 Gal                | 55<br>gals |
|                       | c            | 6850-01-412-0026                | Cleaning Compound Solvent (0WU71)<br>060-6 Gal                 | 6<br>gals  |
| 75                    | c            | 5350-00-192-9316                | Cloth Abrasive (58536) A-A-1048, 220-<br>Grit                  | sh         |
| 76                    | c            | 5350-00-192-5047                | Cloth Abrasive (80204) ANSI B74.18,<br>Class 1, 80-Grit        | sh         |
| 77                    | c            | 5350-00-584-4653                | Cloth Abrasive (80204) ANSI B74.18, No.<br>180                 | sh         |
| 78                    | c            | 5350-00-246-0331                | Cloth Abrasive (80204) ANSI B74.18, No.<br>40                  | sh         |
| 79                    | c            | 5350-00-584-4660                | Cloth Abrasive (80204) ANSI B74.18, No.<br>80                  | sh         |
| 80                    | c            | 5350-00-192-5050                | Cloth Abrasive (80204) ANSI B74.18, 150-<br>Grit               | sh         |
| 81                    | c            | 5350-00-229-3081                | Cloth Abrasive (80204) ANSI B74.18, 280-<br>Grit               | sh         |
| 82                    | c            | 5350-00-246-0330                | Cloth Abrasive (80204) ANSI B74.18, 320-<br>Grit               | sh         |
| 83                    | c            | 5350-00-161-9715                | Cloth Abrasive THREE-M-TIE, ELEK-<br>TRO CUT, (28124) 240-Grit | sh         |
| 84                    | c            | 5350-00-161-9066                | Cloth Abrasive (76381) 05144-02459, 100-<br>Grit               | sh         |
| 85                    | c            | 8305-00-267-3015                | Cloth Cheesecloth (81348) CCC-C-440                            | in         |
| 86                    | c            | 7920-00-044-9281                | Cloth Cleaning (51200) MIRACLE WIPE<br>L001                    | bx         |
| 87                    | c            | 8305-00-641-5603                | Cloth Coated (81349) MIL-C-8068                                | yd         |
| 88                    | c            | 8305-00-641-5606                | Cloth Flannel (81348) CCC-C-458                                | yd         |

## EXPENDABLE AND DURABLE ITEM LIST - Continued

Table 1. Expendable and Durable Items List. - Continued

| (1)<br>ITEM<br>NUMBER | (2)<br>LEVEL | (3)<br>NATIONAL STOCK<br>NUMBER | (4)<br>ITEM NAME, DESCRIPTION,<br>CAGEC, AND PART NUMBER                               | (5)<br>U/I    |
|-----------------------|--------------|---------------------------------|----------------------------------------------------------------------------------------|---------------|
| 89                    | c            | 8305-01-102-7912                | Cloth Nylon (81349) MIL-C-20696, Type 1, Class 3                                       | yd            |
| 90                    | c            | -                               | Cloth Satin (81349) MIL-C-9084                                                         | yd            |
| 91                    | c            | 6850-00-141-2946                | Coating Compound Black Oxide (81349) MIL-C-46110                                       | 50<br>lbs     |
| 92                    | c            | 8030-00-082-2425                | Coating Compound Metal (1BGY0) E90G16                                                  | 4<br>gals     |
| 93                    | c            | 8030-00-641-0427                | Coating Compound Nonslip (81349) MIL-W-5044                                            | gal           |
| 94                    | c            | 8010-01-054-7229                | Coating Kit Rain Erosion (30676) M331/M201                                             | kt            |
| 95                    | c            | 4020-00-240-2142                | Cord Fibrous (58536) A-A-55622                                                         | 1200<br>ft rl |
| 96                    | c            | 8030-01-512-2416                | Corrosion Preventive Compound (81343) AMS-M-3171, Type 6                               | kt            |
| 97                    | c            | 8030-01-381-7311                | Corrosion Preventive Compound Fluid Film AR (0RA06)                                    | 4<br>gals     |
| 98                    | c            | 8030-01-386-3877                | Corrosion Preventive Compound Fluid Film Liquid A (4E827)                              | 4<br>gals     |
| 99                    | c            | 8030-01-381-6357                | Corrosion Preventive Compound Fluid Film NAS, Non-Aerosol (0RA06) MIL-C-17173, Grade 4 | gal           |
| 100                   | c            | 8030-00-285-1570                | Corrosion Preventive Compound (81349) MIL-C-11796, Class 3                             | 35<br>lbs     |
| 101                   | c            | 8030-00-244-1296                | Corrosion Preventive Compound (80244) MIL-C-16173, Class 1, Grade 3                    | gal           |
| 102                   | c            | 8030-00-837-6557                | Corrosion Preventive Compound (81349) MIL-C-16173, Class 1, Grade 3                    | qt            |
| 103                   | c            | 8030-00-062-5866                | Corrosion Preventive Compound (81349) MIL-C-16173, Class 1, Grade 4                    | gal           |

## EXPENDABLE AND DURABLE ITEM LIST - Continued

Table 1. Expendable and Durable Items List. - Continued

| (1)<br>ITEM<br>NUMBER | (2)<br>LEVEL | (3)<br>NATIONAL STOCK<br>NUMBER | (4)<br>ITEM NAME, DESCRIPTION,<br>CAGEC, AND PART NUMBER                               | (5)<br>U/I |
|-----------------------|--------------|---------------------------------|----------------------------------------------------------------------------------------|------------|
| 104                   | c            | 8030-00-526-1605                | Corrosion Preventive Compound (81349)<br>MIL-C-16173, Class 1, Grade 4                 | 5<br>gals  |
|                       | c            | 8030-00-062-6950                | Corrosion Preventive Compound (81349)<br>MIL-C-16173, Grade 1                          | qt         |
|                       | c            | 8030-00-231-2345                | Corrosion Preventive Compound (81349)<br>MIL-C-16173, Grade 1                          | gal        |
| 105                   | c            | 8030-00-244-1299                | Corrosion Preventive Compound (81349)<br>MIL-C-16173, Grade 1                          | 5<br>gals  |
|                       | c            | 8030-00-938-1947                | Corrosion Preventive Compound MIL-PRF-<br>81309, Type 2, Class 2, CO2 Grade<br>(81349) | 16 oz      |
|                       | c            | 8030-01-347-0979                | Corrosion Preventive Compound (81349)<br>MIL-DTL-85054, Type 1, Class 134A             | pt         |
| 107                   | c            | 8030-00-546-8637                | Corrosion Preventive Compound (81349)<br>M81309B2, Type 3, Class 2                     | 16 oz      |
| 108                   | c            | 6850-00-656-1291                | Corrosion Removing Compound (81349)<br>MIL-C-10578                                     | 5<br>gals  |
| 109                   | c            | 6850-00-270-5551                | Corrosion Removing Compound (81349)<br>MIL-C-10578                                     | 5<br>gals  |
|                       | c            | 6850-00-550-5565                | Corrosion Removing Compound (81349)<br>MIL-C-14460                                     | drum       |
|                       | c            | 8030-00-779-4699                | Corrosion Resistant Coating (84063) Alod-<br>ine 120 Kit                               | kt         |
| 111                   | c            | 8030-00-065-0957                | Corrosion Resistant Coating (81349) MIL-<br>C-81706                                    | qt         |
|                       | c            | 8030-00-142-9272                | Corrosion Resistant Coating (81349) MIL-<br>C-81706                                    | pt         |
|                       | c            | 8030-00-811-3723                | Corrosion Resistant Coating (81349) MIL-<br>C-81706                                    | pk         |
|                       | c            | 8030-00-823-8039                | Corrosion Resistant Coating (81349) MIL-<br>C-81706                                    | gal        |

## EXPENDABLE AND DURABLE ITEM LIST - Continued

Table 1. Expendable and Durable Items List. - Continued

| (1)<br>ITEM<br>NUMBER | (2)<br>LEVEL | (3)<br>NATIONAL STOCK<br>NUMBER | (4)<br>ITEM NAME, DESCRIPTION,<br>CAGEC, AND PART NUMBER | (5)<br>U/I |
|-----------------------|--------------|---------------------------------|----------------------------------------------------------|------------|
|                       | c            | 8030-01-018-2838                | Corrosion Resistant Coating (81349) MIL-C-81706          | lb         |
| 112                   | c            | 8030-00-057-2354                | Corrosion Resistant Coating (19203) 873354               | 4 oz       |
| 113                   | c            | 9150-00-269-8246                | Damping Fluid (71984) DC200-100CST                       | lb         |
| 114                   | c            | 9150-00-269-8246                | Damping Fluid (81348) VV-D-1078                          | lb         |
| 115                   | c            | 7930-00-282-9699                | Detergent, General Purpose (81349) MIL-D-16791, Type 1   | bt         |
| 116                   | c            | 6810-00-995-4804                | Diethylenetriamine Technical (81348) O-D-1271            | pt         |
| 117                   | c            | 6810-00-682-6867                | Distilled Water Reagent (81346) ASTM D 1193              | gal        |
| 118                   | c            | 8010-01-419-1143                | Epoxy Coating Kit (81349) MIL-PRF-22750                  | kt         |
| 119                   | c            | 8010-00-264-8866                | Epoxy Primer Coating Kit (81349) MIL-P-52192             | kt         |
| 120                   | c            | 8010-00-082-2450                | Epoxy Primer Coating Kit (79500) 32240DS                 | kt         |
| 121                   | c            | 6850-00-431-8662                | Etching Solution Tetra-Etch (17217)                      | cn         |
| 122                   | c            | 6810-00-264-5906                | Ethyl Alcohol Absolute, ACS (69267) 014                  | bt         |
| 123                   | c            | 6810-00-006-4205                | Ethylene Glycol Technical (81346) ASTM-E-1119            | gal        |
| 124                   | c            | 8315-00-006-9835                | Fastener Tape Hook (58536) A-A-55126                     | yd         |
| 125                   | c            | 8315-00-006-9836                | Fastener Tape Pile (58536) A-A-55126                     | yd         |
|                       | c            | 8315-00-935-0505                | Fastener Tape Pile (58536) A-A-55126                     | yd         |
| 126                   | c            | 8030-00-195-4831                | Filler Dent, Metal Surface (10054) WHITELIGHTNIN         | cn         |
| 127                   | c            | 4210-01-139-4972                | Foam Liquid Fire Extinguishing (28112) FC-203CF          | 5<br>gals  |

## EXPENDABLE AND DURABLE ITEM LIST - Continued

Table 1. Expendable and Durable Items List. - Continued

| (1)<br>ITEM<br>NUMBER | (2)<br>LEVEL | (3)<br>NATIONAL STOCK<br>NUMBER | (4)<br>ITEM NAME, DESCRIPTION,<br>CAGEC, AND PART NUMBER         | (5)<br>U/I    |
|-----------------------|--------------|---------------------------------|------------------------------------------------------------------|---------------|
| 128                   | c            | 8415-00-266-8677                | Gloves Rubber Industrial (81349) MIL-DTL-32066                   | pair          |
| 129                   | c            | 9150-00-616-9020                | Grease Aircraft (81349) MIL-G-25537                              | 1.75<br>lbs   |
| 130                   | c            | 9150-01-018-8960                | Grease Aircraft (81349) MIL-G-4343                               | ca            |
| 131                   | c            | 9150-00-944-8953                | Grease Aircraft (81349) MIL-G-81322                              | 1.75<br>lb cn |
|                       | c            | 9150-00-145-0268                | Grease Aircraft (81349) MIL-G-81322                              | 6.5<br>lb cn  |
| 132                   | c            | 9150-00-408-9635                | Grease Aircraft (81349) MIL-G-81827                              | 1.75<br>lb cn |
| 133                   | c            | 9150-00-584-4299                | Grease Aircraft And Instrument (81349) MIL-G-46886               | oz            |
| 134                   | c            | 9150-00-141-6770                | Grease Ball And Roller Bearing (81349) MIL-G-25013               | cn            |
| 135                   | c            | 9150-01-040-1423                | Grease Ball And Roller Bearing (71984) MOLYKOTE FS-3451 2 Grease | oz            |
| 136                   | c            | 9150-00-663-1770                | Grease General Purpose (73219) 630AA                             | 6 lbs         |
| 137                   | c            | 9150-00-985-7246                | Grease Instrument (81349) MIL-PRF-23827, TYPE 1                  | 1.75<br>lbs   |
|                       | c            | 9150-00-985-7247                | Grease Instrument (81349) MIL-PRF-23827, TYPE 1                  | 6.5<br>lbs    |
|                       | c            | 9150-00-985-7248                | Grease Instrument (81349) MIL-PRF-23827, TYPE 1                  | 35<br>lbs     |
| 138                   | c            | 9150-00-754-2595                | Grease Molybdenum Disulfide (07950) ROYCO 64                     | 1.75<br>lbs   |
| 139                   | c            | 5325-00-074-3301                | Grommet Nonmetallic (0DTG5) 2-241A-0021                          | rl            |
| 140                   | c            | 8520-00-527-9942                | Hand Cleaner (80244) 8520-00-527-9942                            | pt            |
| 141                   | c            | 8030-00-839-1442                | Hardener Adhesive (96717) DEH 52                                 | cn            |

## EXPENDABLE AND DURABLE ITEM LIST - Continued

Table 1. Expendable and Durable Items List. - Continued

| (1)<br>ITEM<br>NUMBER | (2)<br>LEVEL | (3)<br>NATIONAL STOCK<br>NUMBER | (4)<br>ITEM NAME, DESCRIPTION,<br>CAGEC, AND PART NUMBER     | (5)<br>U/I |
|-----------------------|--------------|---------------------------------|--------------------------------------------------------------|------------|
| 142                   | c            | 8040-00-084-4338                | Hardener Adhesive (99384) Epocast 9615A                      | 6 qts      |
| 143                   | c            | 9150-00-698-2382                | Hydraulic Fluid Automatic Transmission<br>(24617) Dexron 111 | qt         |
| 144                   | c            | 9150-00-149-7432                | Hydraulic Fluid Fire Resistant (81349)<br>MIL-PRF-83282      | gal        |
| 145                   | c            | 9150-00-252-6383                | Hydraulic Fluid Petroleum Base (81349)<br>MIL-H-5606         | qt         |
|                       | c            | 9150-00-223-4134                | Hydraulic Fluid Petroleum Base (81349)<br>MIL-H-5606         | gal        |
| 146                   | c            | 9150-01-290-2943                | Hydraulic Fluid Petroleum Base (81349)<br>MIL-H-6083         | pt         |
| 147                   | c            | 6685-01-177-2764                | Indicator Temp, Card (29907) 4B-225                          | in         |
| 148                   | c            | 5970-01-100-4464                | Insulating Compound (08800) RTV-102<br>WHITE                 | 2.8<br>oz  |
| 149                   | c            | 5970-01-363-8394                | Insulating Compound (71984) RTV 3140                         | tu         |
| 150                   | c            | 5970-01-029-7961                | Insulating Compound (99109) 1B31                             | cn         |
| 151                   | c            | 5970-00-226-9577                | Insulating Compound (99384) 4HI/946                          | kt         |
| 152                   | c            | 5970-00-900-9372                | Insulating Varnish Electrical (18876)<br>10188268            | cn         |
| 153                   | c            | 5970-00-729-2966                | Insulation Sleeving, Electrical (81349)<br>MIL-I-631         | yd         |
| 154                   | c            | 5970-01-028-6789                | Insulation Sleeving Electrical (96906)<br>MS3109-11AC        | ft         |
| 155                   | c            | 5970-01-072-0014                | Insulation Sleeving Electrical (96906)<br>MS3117-11AC        | ea         |
| 156                   | c            | 5970-00-899-6660                | Insulation Sleeving Electrical (81349)<br>M22129-20-N        | ft         |
| 157                   | c            | 5957-01-088-0413                | Insulation Sleeving Electrical (81349)<br>M23053/1           | ft         |



## EXPENDABLE AND DURABLE ITEM LIST - Continued

Table 1. Expendable and Durable Items List. - Continued

| (1)<br>ITEM<br>NUMBER | (2)<br>LEVEL | (3)<br>NATIONAL STOCK<br>NUMBER | (4)<br>ITEM NAME, DESCRIPTION,<br>CAGEC, AND PART NUMBER        | (5)<br>U/I |
|-----------------------|--------------|---------------------------------|-----------------------------------------------------------------|------------|
| 158                   | c            | 5970-01-318-9962                | Insulation Sleeving Electrical (81349)<br>M23053/14-008-C       | ft         |
| 159                   | c            | 5970-00-812-2974                | Insulation Sleeving Electrical (81349)<br>M23053/5-0103-0       | ft         |
| 160                   | c            | 5970-00-781-6832                | Insulation Sleeving Electrical (81349)<br>M23053/5-114-0        | ft         |
| 161                   | c            | 5970-01-087-0376                | Insulation Sleeving Electrical (81349)<br>M23053/5-115-0        | ft         |
| 162                   | c            | 5970-00-812-2967                | Insulation Sleeving Electrical (03890)<br>P0135, 1/2 in. Black  | ft         |
| 163                   | c            | 5970-00-812-2969                | Insulation Sleeving Electrical (03890)<br>P0135, 1/8 in. Black  | ft         |
| 164                   | c            | 5970-00-787-2310                | Insulation Sleeving Electrical (03890)<br>P0135, 3/64 in. Black | ft         |
| 165                   | c            | 5970-00-740-2971                | Insulation Sleeving Electrical (03890)<br>P0135, 3/8 in. White  | ft         |
| 166                   | c            | 5970-00-146-1122                | Insulation Sleeving Electrical (18876)<br>10218661-2            | ft         |
| 167                   | c            | 5970-00-899-6651                | Insulation Sleeving Electrical (3B150) 267-<br>1030P2           | ft         |
| 168                   | c            | 5970-00-284-8468                | Insulation Sleeving Electrical (18876)<br>8034658-13            | ft         |
| 169                   | c            | 5970-00-223-8318                | Insulation Sleeving (06090) RW-175-3/4 X<br>4FT                 | rl         |
| 170                   | c            | 6810-00-983-8551                | Isopropyl Alcohol Technical (81348) TT-I-<br>735                | qt         |
|                       | c            | 6810-00-286-5435                | Isopropyl Alcohol Technical (81348) TT-I-<br>735                | gal        |
| 171                   | c            | 8010-00-082-2479                | Lacquer (81349) MIL-L-19538                                     | qt         |
| 172                   | c            | 8010-00-083-6588                | Lacquer (81349) MIL-L-46159                                     | 5<br>gals  |

## EXPENDABLE AND DURABLE ITEM LIST - Continued

Table 1. Expendable and Durable Items List. - Continued

| (1)<br>ITEM<br>NUMBER | (2)<br>LEVEL | (3)<br>NATIONAL STOCK<br>NUMBER | (4)<br>ITEM NAME, DESCRIPTION,<br>CAGEC, AND PART NUMBER       | (5)<br>U/I |
|-----------------------|--------------|---------------------------------|----------------------------------------------------------------|------------|
|                       | c            | 8010-01-042-4196                | Lacquer (81349) MIL-L-46159                                    | cn         |
| 173                   | c            | 8010-00-066-9430                | Lacquer (81349) M81352-1-001G-35044                            | gal        |
| 174                   | c            | 8010-00-958-8147                | Lacquer (58825) 202-13                                         | pt         |
| 175                   | c            | 6850-00-935-4068                | Leak Detection Fluid (24855) HECK/<br>CHECK, TYPE III          | 4 oz       |
| 176                   | c            | 6640-00-290-0146                | Litmus Paper ACS (96906) MS36253-2,<br>Type Blue, Red in Acid  | vial       |
| 177                   | c            | 6640-00-290-0147                | Litmus Paper (96906) MS36253-1, Type<br>Red, Blue in Base      | vial       |
| 178                   | c            | 8030-00-981-7005                | Loctite (05972) AA15-1                                         | bt         |
| 179                   | c            | 2640-00-476-3144                | Lubricant Inner Tube (09786) POS037                            | 1 lb<br>cn |
| 180                   | c            | 9150-01-260-2534                | Lubricant Solid Film (81349) MIL-L-23398                       | 16 oz      |
| 181                   | c            | 9150-00-753-4937                | Lubricating Oil Aircraft Piston (81343)<br>SAE J1899           | 55<br>gals |
| 182                   | c            | 9150-00-985-7099                | Lubricating Oil Aircraft Turbine (81349)<br>MIL-PRF-23699      | qt         |
| 183                   | c            | 9150-00-273-2388                | Lubricating Oil Aircraft Turbine (81349)<br>MIL-PRF-6081       | qt         |
| 184                   | c            | 9150-00-782-2627                | Lubricating Oil Aircraft Turbine (81349)<br>MIL-PRF-7808       | qt         |
| 185                   | c            | 9150-00-231-6689                | Lubricating Oil General Purpose (81349)<br>MIL-PRF-32033       | qt         |
| 186                   | c            | 9150-00-263-3490                | Lubricating Oil General Purpose (81349)<br>MIL-PRF-7870        | cn         |
| 187                   | c            | 9150-01-209-2684                | Lubricating Oil Helicopter Transmission<br>(81349) DOD-L-85734 | qt         |
| 188                   | c            | 9150-01-311-5640                | Lubricating Oil Instrument (81349) MIL-<br>PRF-6085            | gal        |

## EXPENDABLE AND DURABLE ITEM LIST - Continued

Table 1. Expendable and Durable Items List. - Continued

| (1)<br>ITEM<br>NUMBER | (2)<br>LEVEL | (3)<br>NATIONAL STOCK<br>NUMBER | (4)<br>ITEM NAME, DESCRIPTION,<br>CAGEC, AND PART NUMBER | (5)<br>U/I          |
|-----------------------|--------------|---------------------------------|----------------------------------------------------------|---------------------|
| 189                   | c            | 9150-00-543-7220                | Lubricating Oil Molybdenum Disulfide (81349) DOD-L-25681 | lb                  |
| 190                   | c            | 9150-00-664-4449                | Lubricating Oil Refrigerent (64959) ED45263-106          | gal                 |
| 191                   | c            | 9150-01-443-9390                | Lubricating Oil Refrigerent (2R128) ICE-MATIC SW46C      | gal                 |
| 192                   | c            | 9150-00-292-9687                | Lubricating Oil Weapons (81349) MIL-PRF-14107            | 5<br>gals           |
| 193                   | c            | 1560-00-450-3622                | Maintenance Kit (32834) NC-78-1                          | kt                  |
| 194                   | c            | 7690-01-368-2663                | Marker Identification (94858) HM200-300                  | ea                  |
| 195                   | c            | 7690-01-368-2663                | Marker Identification (82682) TLL6B175                   | bx                  |
| 196                   | c            | 9340-01-177-8572                | Mat Reinforcing, Fibrous Glass (6H391) 1659              | 50 yd<br>rl         |
| 197                   | c            | 6810-00-264-6715                | Molybdenum Disulfide (83323) 55-1043-1                   | 1 lb                |
| 198                   | c            | 6810-00-222-9655                | Nitric Acid, 42°Be (58536) A-A-59105                     | bt                  |
|                       | c            | 6810-00-237-2918                | Nitric Acid (58536) A-A-59105                            | 80 oz               |
| 199                   | c            | 6830-00-782-2641                | Nitrogen (58536) A-A-59503-1-1-B-187                     | 187<br>cu ft<br>cyl |
|                       | c            | 6830-01-028-9402                | Nitrogen (58536) A-A-59503-1-1-B-187                     | 226<br>cu ft<br>cyl |
| 200                   | c            | -                               | Packing Material (1NPE1) HT3000-H60                      | kt                  |
| 201                   | c            | 5330-01-514-8772                | Packing Material (1NPE1) HT3000-100, 1.0 X 12            | ro                  |
| 202                   | c            | 5330-01-513-0861                | Packing Material (1NPE1) HT3000-150, 1.5 X 12            | ro                  |
| 203                   | c            | 5330-01-513-0876                | Packing Material (1NPE1) HT3000-200, 2.0 X 12            | ro                  |

## EXPENDABLE AND DURABLE ITEM LIST - Continued

Table 1. Expendable and Durable Items List. - Continued

| (1)<br>ITEM<br>NUMBER | (2)<br>LEVEL | (3)<br>NATIONAL STOCK<br>NUMBER | (4)<br>ITEM NAME, DESCRIPTION,<br>CAGEC, AND PART NUMBER | (5)<br>U/I  |
|-----------------------|--------------|---------------------------------|----------------------------------------------------------|-------------|
| 204                   | c            | 5330-01-130-0887                | Packing Material (1NPE1) HT3000-250,<br>2.5 X 12         | ro          |
| 205                   | c            | 7920-00-934-3469                | Pad Scouring (81348) LP50                                | ea          |
| 206                   | c            | 8010-01-357-4155                | Paint Heat Resisting (58913) GES-69AR                    | kt          |
| 207                   | c            | 8010-00-664-7468                | Paint Heat Resisting (81348) TT-P-28                     | kt          |
| 208                   | c            | 5350-00-221-0882                | Paper Abrasive (0W360) ANSI B74.18,<br>120-Grit          | sh          |
| 209                   | c            | 5350-00-721-8116                | Paper Abrasive (80204) ANSI B74.18, 150-<br>Grit         | sh          |
| 210                   | c            | 5350-00-186-8819                | Paper Abrasive (0W360) ANSI B74.18,<br>220-Grit          | sh          |
| 211                   | c            | 5350-00-224-7202                | Paper Abrasive (80204) ANSI B74.18, 360-<br>Grit         | sh          |
| 212                   | c            | 3680-00-237-3457                | Parting Compound Foundry Mold (22401)<br>225             | cn          |
| 213                   | c            | 1560-01-305-7910                | Parts Kit Fuel Tank (59297) 052M002-501                  | kt          |
| 214                   | c            | 1560-01-305-7912                | Parts Kit Fuel Tank (59297) 052M004-501                  | kt          |
| 215                   | c            | 1560-00-856-9222                | Parts Kit Repair Fiberglass (78286) S1607-<br>7021       | kt          |
| 216                   | c            | 9150-00-250-0926                | Petrolatum (81348) VV-P-236                              | 1.75<br>lbs |
| 217                   | c            | 9339-01-358-7526                | Plastic Sheet (58536) A-A-2848                           | sh          |
| 218                   | c            | 9330-01-182-2750                | Plastic Sheet (12626) CADCO 0731                         | rl          |
| 219                   | c            | 9330-01-341-7812                | Plastic Sheet (7Z980) KGOC20543S                         | rl          |
| 220                   | c            | 9330-00-982-5707                | Plastic Sheet (81349) MIL-P-78                           | sh          |
| 221                   | c            | 9330-00-260-3800                | Plastic Sheet (81349) M24768/16-S-14                     | sh          |

## EXPENDABLE AND DURABLE ITEM LIST - Continued

Table 1. Expendable and Durable Items List. - Continued

| (1)<br>ITEM<br>NUMBER | (2)<br>LEVEL | (3)<br>NATIONAL STOCK<br>NUMBER | (4)<br>ITEM NAME, DESCRIPTION,<br>CAGEC, AND PART NUMBER  | (5)<br>U/I |
|-----------------------|--------------|---------------------------------|-----------------------------------------------------------|------------|
| 222                   | c            | 9330-01-326-1821                | Plastic Sheet Pressure Sensitive (52152) 8663 MB-SS, 8X36 | rl         |
| 223                   | c            | 9330-01-202-8903                | Plastic Strip Adhesive Coated (52152) 8580                | ft         |
| 224                   | c            | 9330-01-208-1025                | Plastic Strip (96013) ARTUS-.015, Pink-5X20               | sh         |
| 225                   | c            | 9330-00-169-6407                | Plastic Strip Pressure Sensitive (52152) 8561             | rl         |
| 226                   | c            | 8010-01-144-9873                | Polyurethane Coating (81349) MIL-DTL-64159                | kt         |
| 227                   | c            | 8010-01-131-6255                | Polyurethane Coating (81349) MIL-DTL-64159                | kt         |
| 228                   | c            | 8010-01-131-6255                | Polyurethane Coating (81349) MIL-DTL-64159                | gal        |
| 229                   | c            | 8010-01-144-9874                | Polyurethane Coating (81349) MIL-DTL-64159                | kt         |
| 230                   | c            | 8010-01-055-2319                | Polyurethane Coating (81349) MIL-DTL-64159                | kt         |
| 231                   | c            | 8010-01-146-2649                | Polyurethane Coating (81349) MIL-DTL-64159                | kt         |
| 232                   | c            | 8010-01-131-6254                | Polyurethane Coating (81349) MIL-DTL-64159                | kt         |
| 233                   | c            | 8010-01-146-2646                | Polyurethane Coating (81349) MIL-DTL-64159                | kt         |
| 234                   | c            | 8010-01-316-2220                | Polyurethane Coating (81349) MIL-DTL-64159                | kt         |
| 235                   | c            | 8010-01-042-1004                | Polyurethane Coating (81349) M83286 -1-4-Clear            | kt         |
| 236                   | c            | 8010-00-181-8281                | Polyurethane Coating (81349) M83286-1-4-17925             | ro         |
| 237                   | c            | 8040-01-151-4258                | Primer Adhesive (30676) Chemlok 7701                      | gal        |

## EXPENDABLE AND DURABLE ITEM LIST - Continued

Table 1. Expendable and Durable Items List. - Continued

| (1)<br>ITEM<br>NUMBER | (2)<br>LEVEL | (3)<br>NATIONAL STOCK<br>NUMBER | (4)<br>ITEM NAME, DESCRIPTION,<br>CAGEC, AND PART NUMBER | (5)<br>U/I |
|-----------------------|--------------|---------------------------------|----------------------------------------------------------|------------|
| 238                   | c            | 8040-00-065-6578                | Primer Adhesive (1A9T3) EC-1945 B/A                      | qt         |
| 239                   | c            | 8040-01-192-2491                | Primer Adhesive (0KHE3) EC-3917                          | qt         |
| 240                   | c            | 8010-01-040-0947                | Primer Adhesive (6X798) GROWCO Tape<br>Primer            | 15 oz      |
| 241                   | c            | 8040-01-205-6819                | Primer Adhesive (04622) METLBOND<br>6726                 | gal        |
| 242                   | c            | 8010-01-371-1952                | Primer Coating (30676) Aeroglaze 9924                    | 3 oz       |
| 243                   | c            | 8010-00-582-5318                | Primer Coating (81348) TT-P-1757                         | gal        |
| 244                   | c            | 6850-01-326-1607                | Primer Pressure Sensitive Tape (52152) 86                | cn         |
| 245                   | c            | 8030-00-900-2373                | Primer Sealing Compound (05972) Locquic<br>Primer N      | bt         |
| 246                   | c            | 8030-01-388-5606                | Primer Sealing Compound (81439) MIL-S-<br>22473          | 1.75<br>oz |
| 247                   | c            | 8030-00-082-2508                | Primer Sealing Compound (05972) 74755                    | 4 oz       |
| 248                   | c            | 8030-00-181-8372                | Primer Sealing Compound (05972) 74756                    | 6 oz<br>cn |
| 249                   | c            | 6810-01-181-7121                | Propylene Glycol (81348) MIL-P-83800A                    | gal        |
| 250                   | c            | 8010-00-142-9273                | Remover Paint (81349) MIL-R-81294                        | pt         |
|                       | c            | 8010-00-926-1488                | Remover Paint (81349) MIL-R-81294                        | 5<br>gals  |
|                       | c            | 8010-00-926-1489                | Remover Paint (81349) MIL-R-81294                        | 55<br>gals |
| 251                   | c            | 8010-00-815-2970                | Remover Paint (86460) PENNWALT 19B-1                     | 1 gal      |
| 252                   | c            | 8010-00-515-2258                | Remover Paint (81348) TT-R-248                           | gal        |
| 253                   | c            | 1615-01-126-9445                | Repair Kit Rotary B (78286) 70072-15001-<br>011          | ea         |
| 254                   | c            | -                               | Retaining Compound (81349)                               |            |

## EXPENDABLE AND DURABLE ITEM LIST - Continued

Table 1. Expendable and Durable Items List. - Continued

| (1)<br>ITEM<br>NUMBER | (2)<br>LEVEL | (3)<br>NATIONAL STOCK<br>NUMBER | (4)<br>ITEM NAME, DESCRIPTION,<br>CAGEC, AND PART NUMBER | (5)<br>U/I |
|-----------------------|--------------|---------------------------------|----------------------------------------------------------|------------|
| 255                   | c            | 9320-01-154-2225                | Rubber Sheet Cellular (81349) MIL-C-3133                 | sq ft      |
|                       | c            | 9320-00-580-6756                | Rubber Sheet Cellular (81349) MIL-C-3133                 | sh         |
| 256                   | c            | 9320-01-157-9070                | Rubber Sheet Solid (81349) MIL-R-6855                    | sh         |
| 257                   | c            | 8030-01-290-5138                | Sealing Compound (83574) PR-1826, CLB-2                  | kt         |
| 258                   | c            | 8030-01-450-0381                | Sealing Compound (83574) CA 1000                         | 6 oz       |
| 259                   | c            | 8030-01-495-1842                | Sealing Compound (1NPE1) EN11058901                      | ro         |
| 260                   | c            | 8030-00-180-5931                | Sealing Compound (99384) Epocast 169/946                 | kt         |
| 261                   | c            | 8030-00-408-1137                | Sealing Compound (01195) F900, Torque Seal Green         | tu         |
| 262                   | c            | 8030-00-152-0021                | Sealing Compound (52265) MC215 B-1/2                     | tu         |
| 263                   | c            | 8030-00-433-4145                | Sealing Compound (81349) MIL-S-11030                     | ro         |
| 264                   | c            | 8030-01-025-1692                | Sealing Compound (81349) MIL-S-46163                     | tu         |
| 265                   | c            | 8030-01-184-0329                | Sealing Compound (81349) MIL-S-81733, B1/2               | pt         |
| 266                   | c            | 8030-00-009-5023                | Sealing Compound (80244) MIL-S-81733 TY2-2               | kt         |
| 267                   | c            | 8030-00-008-7204                | Sealing Compound (81349) MIL-S-81733                     | kt         |
| 268                   | c            | 8030-00-174-2597                | Sealing Compound (81349) MIL-S-8516                      | kt         |
| 269                   | c            | 8030-00-664-4019                | Sealing Compound (83574) PR-1005-L                       | pt         |
| 270                   | c            | 8030-01-234-2186                | Sealing Compound (83574) PR1436GB-2                      | pt         |
| 271                   | c            | 8030-01-370-2161                | Sealing Compound (81343) AMS 3265 B 1/2                  | 6 oz       |

## EXPENDABLE AND DURABLE ITEM LIST - Continued

Table 1. Expendable and Durable Items List. - Continued

| (1)<br>ITEM<br>NUMBER | (2)<br>LEVEL | (3)<br>NATIONAL STOCK<br>NUMBER | (4)<br>ITEM NAME, DESCRIPTION,<br>CAGEC, AND PART NUMBER | (5)<br>U/I |
|-----------------------|--------------|---------------------------------|----------------------------------------------------------|------------|
|                       | c            | 8030-01-370-2160                | Sealing Compound (81343) AMS 3265 B<br>1/2               | 2.5<br>oz  |
| 272                   | c            | 8030-01-290-5137                | Sealing Compound (81343) PR-1826, Type<br>1, Class B     | kt         |
| 273                   | c            | 8030-01-387-1017                | Sealing Compound (81349) MIL-PFR-<br>81733               | 6 oz.      |
|                       | c            | 8030-01-387-0244                | Sealing Compound (81349) MIL-PFR-<br>81733               | 6 oz.      |
|                       | c            | 8030-00-008-7196                | Sealing Compound (81349) MIL-PRF-<br>81733               | qt         |
| 274                   | c            | 8030-01-192-2807                | Sealing Compound (83574) P/S 870 C-48                    | kt         |
| 275                   | c            | 8030-00-148-9833                | Sealing Compound (0ZD54) RITE-LOK-<br>TL71-10            | bt         |
| 276                   | c            | 8040-00-145-0019                | Sealing Compound (94960) Scotch-Weld,<br>2216 B/A        | kt         |
| 277                   | c            | 8030-01-504-8136                | Sealing Compound (1NPE1) TG2010-50                       | kt         |
| 278                   | c            | 8030-00-180-6150                | Sealing Compound Type 1, (81349) MIL-<br>R-46082         | cn         |
| 279                   | c            | 8030-01-044-5527                | Sealing Compound (05972) 07331                           | bt         |
| 280                   | c            | 8030-00-081-2326                | Sealing Compound (05972) 07821                           | bt         |
| 281                   | c            | 8030-00-964-7537                | Sealing Compound (05972) 08441                           | 250<br>cc  |
| 282                   | c            | 8030-00-081-2335                | Sealing Compound (05972) 08521                           | bt         |
| 283                   | c            | 8030-00-081-2336                | Sealing Compound (05972) 08731                           | bt         |
| 284                   | c            | 8030-00-081-2339                | Sealing Compound (05972) 08821                           | bt         |
| 285                   | c            | 8030-00-111-2762                | Sealing Compound (05972) 29031                           | bt         |
| 286                   | c            | 8030-00-599-7753                | Sealing Compound (05972) 30558                           | tu         |



## EXPENDABLE AND DURABLE ITEM LIST - Continued

Table 1. Expendable and Durable Items List. - Continued

| (1)<br>ITEM<br>NUMBER | (2)<br>LEVEL | (3)<br>NATIONAL STOCK<br>NUMBER | (4)<br>ITEM NAME, DESCRIPTION,<br>CAGEC, AND PART NUMBER | (5)<br>U/I |
|-----------------------|--------------|---------------------------------|----------------------------------------------------------|------------|
| 287                   | c            | 8030-01-156-7567                | Sealing Compound (18565) 52-03-4914-0000                 | gal        |
| 288                   | c            | 8030-00-403-4681                | Sealing Compound (05972) 55441                           | bt         |
| 289                   | c            | 8030-00-339-0310                | Sealing Compound (05972) 56931                           | bt         |
| 290                   | c            | 8030-00-714-3013                | Sealing Compound (77464) 590                             | gal        |
|                       | c            | 8030-00-433-4145                | Sealing Compound (77464) 590                             | rl         |
| 291                   | c            | 8030-00-081-2329                | Sealing Compound (0B6S1) 605960                          | bt         |
| 292                   | c            | 8030-00-891-8358                | Sealing Compound (05972) 60941                           | 8 oz       |
| 293                   | c            | 8030-00-181-7529                | Sealing Compound (05972) 64041                           | bt         |
| 294                   | c            | 8030-01-387-2007                | Sealing Compound (05972) 68060                           | bt         |
| 295                   | c            | 8030-00-201-0996                | Sealing Compound (79500) 888738-81                       | pt         |
| 296                   | c            | 6850-00-177-5094                | Silicone Compound (71984) DC4 -20Z                       | 2 oz       |
| 297                   | c            | 2925-00-497-4957                | Sleeve Neoprene (0PYA5) 10-30233                         | ft         |
| 298                   | c            | 6810-00-141-6078                | Sodium Phosphate Tribasic (81348) O-S-642                | 1 lb       |
| 299                   | c            | 3439-00-269-9610                | Solder Tin Alloy (81346) Sn60WRAP3                       | sp         |
| 300                   | c            | 7340-00-753-5565                | Stirring Stick Beverage (80244) 7340-00-753-5565         | bx         |
| 301                   | c            | 5975-00-984-6582                | Strap Tiedown, Electrical (96906) MS3367-1-0             | 100<br>pkg |
| 302                   | c            | 5975-00-074-2072                | Strap Tiedown, Electrical (96906) MS3367-1-9             | 100<br>pkg |
| 303                   | c            | 5975-00-899-4606                | Strap Tiedown, Electrical (96906) MS3367-2-0             | 100<br>pkg |
| 304                   | c            | 5975-00-156-3253                | Strap Tiedown, Electrical (96906) MS3367-2-9             | 100<br>pkg |

## EXPENDABLE AND DURABLE ITEM LIST - Continued

Table 1. Expendable and Durable Items List. - Continued

| (1)<br>ITEM<br>NUMBER | (2)<br>LEVEL | (3)<br>NATIONAL STOCK<br>NUMBER | (4)<br>ITEM NAME, DESCRIPTION,<br>CAGEC, AND PART NUMBER | (5)<br>U/I |
|-----------------------|--------------|---------------------------------|----------------------------------------------------------|------------|
| 305                   | c            | 5975-00-985-6630                | Strap Tiedown, Electrical (96906) MS3367-3-0             | 100<br>pkg |
| 306                   | c            | 5975-00-451-5001                | Strap Tiedown, Electrical (96906) MS3367-3-9             | 100<br>pkg |
| 307                   | c            | 5975-00-903-2284                | Strap Tiedown, Electrical (96906) MS3367-4-0             | 100<br>pkg |
| 308                   | c            | 5975-00-727-5153                | Strap Tiedown, Electrical (96906) MS3367-4-9             | 100<br>pkg |
| 309                   | c            | 5975-00-111-3208                | Strap Tiedown, Electrical (96906) MS3367-5-9             | 100<br>pkg |
| 310                   | c            | 5975-01-048-2922                | Strap Tiedown, Electrical (96906) MS3367-6-0             | 100<br>pkg |
| 311                   | c            | 5975-00-133-8696                | Strap Tiedown, Electrical (96906) MS3367-6-9             | 100<br>pkg |
| 312                   | c            | 5975-00-570-9598                | Strap Tiedown, Electrical (96906) MS3367-7-9             | 100<br>pkg |
| 313                   | c            | 8320-01-362-5829                | Swab Pack Cotton (17794) 6003-0019                       | pk         |
| 314                   | c            | 9320-01-247-7735                | Tape Adhesive, Rubber (52152) 8671                       | rl         |
| 315                   | c            | 9330-00-095-4072                | Tape Insulation (81346) ASTM D3308                       | lb         |
| 316                   | c            | 5970-00-832-4298                | Tape Insulation, Electrical (35351) SM1575-02-56         | ro         |
| 317                   | c            | 5970-00-883-1161                | Tape Insulation, Electrical (3B150) 253MR1P4             | ro         |
| 318                   | c            | 5970-00-881-3657                | Tape Insulation, Electrical (75037) 5 - 3 in.            | ro         |
| 319                   | c            | 5970-00-723-5413                | Tape Insulation, Electrical (59688) 6445-02              | ro         |
| 320                   | c            | 5970-00-186-6627                | Tape Insulation, Electrical (75037) 69, 1/2-in.          | ro         |
| 321                   | c            | 4020-00-900-0986                | Tape Lacing and Tying (82110) 20H                        | spl        |

## EXPENDABLE AND DURABLE ITEM LIST - Continued

Table 1. Expendable and Durable Items List. - Continued

| (1)<br>ITEM<br>NUMBER | (2)<br>LEVEL | (3)<br>NATIONAL STOCK<br>NUMBER | (4)<br>ITEM NAME, DESCRIPTION,<br>CAGEC, AND PART NUMBER   | (5)<br>U/I |
|-----------------------|--------------|---------------------------------|------------------------------------------------------------|------------|
| 322                   | c            | 7510-00-663-0195                | Tape Pressure Sensitive, Adhesive (58536) A-A-884          | yd         |
| 323                   | c            | 7510-01-158-6603                | Tape Pressure Sensitive, Adhesive (52170) 218, 2 in.       | ro         |
| 324                   | c            | 7510-00-266-6709                | Tape Pressure Sensitive, Adhesive (52170) 232, 1 1/2- in.  | yd         |
| 325                   | c            | 7510-00-266-6710                | Tape Pressure Sensitive, Adhesive (52170) 232, 2 in.       | yd         |
| 326                   | c            | 7510-00-266-6707                | Tape Pressure Sensitive, Adhesive (52170) 232, 3 in.       | yd         |
| 327                   | c            | 7510-00-290-2026                | Tape Pressure Sensitive, Adhesive (52170) 250, 2 in.       | ro         |
| 328                   | c            | 7510-01-032-4082                | Tape Pressure Sensitive, Adhesive (52152) 4508, 1 in.      | rl         |
| 329                   | c            | 7510-00-079-7604                | Tape Pressure Sensitive, Adhesive (52152) 4516, 5/8-in.    | rl         |
| 330                   | c            | 7510-01-248-7514                | Tape Pressure Sensitive, Adhesive (52152) 5423             | in         |
| 331                   | c            | 7510-00-551-9826                | Tape Pressure Sensitive, Adhesive (52170) 600, 1 1/2-in.   | rl         |
| 332                   | c            | 7510-01-326-1567                | Tape Pressure Sensitive, Adhesive (52152) 8663 MB-SS, 2X36 | rl         |
| 333                   | c            | 7510-01-326-1568                | Tape Pressure Sensitive, Adhesive (52152) 8663 MB-SS, 4X36 | rl         |
| 334                   | c            | 7510-00-266-6712                | Tape Pressure Sensitive, Adhesive (19203) 8783476          | yd         |
| 335                   | c            | 7510-00-139-3834                | Tape, Pressure Sensitive (81349) MIL-T-23397               | rl         |
| 336                   | c            | 9390-01-334-4357                | Tape Reflective (68352) 7610                               | rl         |
| 337                   | c            | 6515-01-504-9326                | Tape Teflon, 520 in. x 0.5 in. (5X927)                     | rl         |

## EXPENDABLE AND DURABLE ITEM LIST - Continued

Table 1. Expendable and Durable Items List. - Continued

| (1)<br>ITEM<br>NUMBER | (2)<br>LEVEL | (3)<br>NATIONAL STOCK<br>NUMBER | (4)<br>ITEM NAME, DESCRIPTION,<br>CAGEC, AND PART NUMBER | (5)<br>U/I  |
|-----------------------|--------------|---------------------------------|----------------------------------------------------------|-------------|
| 338                   | c            | 6830-01-370-8756                | Tetrafluoroethane Technical (2S827) HFC-134A             | gal         |
| 339                   | c            | 8010-00-558-7026                | Thinner Paint Products (58536) A-A-2904                  | 5<br>gals   |
| 340                   | c            | 8310-00-530-1182                | Thread (58536) A-A-52094                                 | yd          |
| 341                   | c            | 8310-00-988-1300                | Thread MIL-DTL-32072 (81349)                             | rl          |
| 342                   | c            | 8310-01-341-2715                | Thread (81349) MIL-T-43624                               | rl          |
| 343                   | c            | 8310-00-204-3749                | Thread (81348) V-T-295, Type 1, Class A                  | tube        |
| 344                   | c            | 7920-00-260-1279                | Towel Machinery Wiping (83421) 7920-00-260-1279          | 50 ea<br>bx |
| 345                   | c            | 4720-01-145-6685                | Tubing Nonmetallic Tygothane (34384) 0.375 ID X 0.500 OD | ft          |
| 346                   | c            | 9330-00-753-5372                | Tubing Plastic Spiral Wrap (50599) R23100-1              | ft          |
| 347                   | c            | 9330-00-688-7856                | Tubing Plastic Spiral Wrap (50599) R23100-3              | ft          |
| 348                   | c            | 5970-01-327-5141                | Urethane Coating (97424) A50WB006B                       | kt          |
| 349                   | c            | 7930-00-267-5588                | Wax Aircraft (81349) MIL-W-18723                         | gal         |
| 350                   | c            | 5345-01-193-6709                | Wheel Abrasive (08659) ST-90-ALO-382                     | ea          |
| 351                   | c            | 9525-01-047-6455                | Wire Nonelectrical (80205) MS20995CY20                   | 1 lb<br>sp  |
| 352                   | c            | 9525-00-221-2650                | Wire Nonelectrical (80205) MS20995C20                    | 1 lb<br>sp  |
| 353                   | c            | 9505-00-293-4208                | Wire Nonelectrical (80205) MS20995C32                    | 1 lb<br>sp  |
| 354                   | c            | 9525-00-618-0257                | Wire Nonelectrical (80205) MS20995NC20                   | 1 lb<br>sp  |
| 355                   | c            | 9525-00-990-7799                | Wire Nonelectrical (80205) MS20995NC40                   | 1 lb<br>sp  |

## EXPENDABLE AND DURABLE ITEM LIST - Continued

Table 1. Expendable and Durable Items List. - Continued

| (1)<br>ITEM<br>NUMBER | (2)<br>LEVEL | (3)<br>NATIONAL STOCK<br>NUMBER | (4)<br>ITEM NAME, DESCRIPTION,<br>CAGEC, AND PART NUMBER | (5)<br>U/I  |
|-----------------------|--------------|---------------------------------|----------------------------------------------------------|-------------|
| 356                   | c            | 9525-00-409-1866                | Wire Nonelectrical (80205) MS20995NC47                   | 1 lb<br>sp  |
| 357                   | c            | 9525-00-803-3044                | Wire Nonelectrical (81348) QQ-N-281                      | 5 lb<br>sp  |
| 358                   | c            | 7930-01-435-8938                | Cleaner Non Etching, ACFT (94853)<br>AHCO 187B           |             |
| 359                   | c            | 8040-01-097-7841                | Primer Adhesive (07542) BR1009-49                        | gl          |
| 360                   | c            | -                               | Stripper Enthine (02258) S-18                            |             |
| 361                   | c            | 6810-00-227-1845                | Sulfuric Acid Technical, 66°Be (81348)<br>O-S-809        | bt          |
| 362                   | c            | 7510-01-467-2842                | Tape Pressure Sensitive Adhesive (99681)<br>FM-1000-191  |             |
| 363                   | c            | -                               | Non-Chlorinated Cleaner () P-005M                        |             |
| 364                   | c            | 7920-00-721-8884                | Towel, Paper (81348) UU-T-595                            | bx          |
| 365                   | c            | -                               | Hydrofluoric Acid, 70% () O-H-759                        |             |
| 366                   | c            | -                               | Wetting Agent, Acid (77902) Triton X-102                 |             |
| 367                   | c            | 8030-01-364-7363                | Sealing Compound (81343) AMS 3265<br>CLB-1/2             | kt          |
| 368                   | c            | 7930-01-367-0994                | Cleaning Solvent, GE (81755) DS-108                      | bx          |
|                       | c            | 7930-01-367-0995                | Cleaning Solvent, GE (81755) DS-108                      | bx          |
|                       | c            | 7930-01-367-0996                | Cleaning Solvent, GE (81755) DS-108                      | 5 gal       |
|                       | c            | 7930-01-367-0997                | Cleaning Solvent, GE (81755) DS-108                      | 55<br>gal   |
| 369                   | c            | 8030-01-494-9650                | Sealing Compound (1NPE1) HT3326-5-50                     | 50cc<br>kt  |
|                       | c            | 8030-01-521-9865                | Sealing Compound (1NPE1) HT3326-5-200                    | 200cc<br>kt |

## EXPENDABLE AND DURABLE ITEM LIST - Continued

Table 1. Expendable and Durable Items List. - Continued

| (1)<br>ITEM<br>NUMBER | (2)<br>LEVEL | (3)<br>NATIONAL STOCK<br>NUMBER | (4)<br>ITEM NAME, DESCRIPTION,<br>CAGEC, AND PART NUMBER                  | (5)<br>U/I |
|-----------------------|--------------|---------------------------------|---------------------------------------------------------------------------|------------|
| 370                   | c            | 8030-01-502-2917                | Repair Kit, Adhesive (1NPE1) AD28500/<br>18-18-8                          | kt         |
|                       | c            | 8030-01-501-8538                | Repair Kit, Adhesive (1NPE1) AD28500/<br>24-24-8                          | kt         |
|                       | c            | 8030-01-501-5351                | Repair Kit, Adhesive (1NPE1) AD28500/<br>36-36-8                          | kt         |
| 371                   | c            | 8010-01-472-4489                | Epoxy Primer (81349) MIL-P-85582                                          | kt         |
| 372                   | c            | 8010-01-057-3599                | Polyurethane Coating, Teflon (OKXA5)<br>23-T3-103                         | kt         |
| 373                   | c            | 8080-00-174-2599                | Sealing Compound (81349) AMS-S-8802,<br>Type II, Class B 1/2              | qt         |
|                       | c            | 8080-00-753-5006                | Sealing Compound (81349) AMS-S-8802,<br>Type II, Class B 1/2              | qt         |
| 374                   | c            | 6850-01-326-1607                | Primer, Pressure (26066) 70-0701-8275-6                                   | pt         |
| 375                   | c            | 8030-01-396-5731                | Corrosion Preventive Compound (80244)<br>MIL-PRF-16173, Class II, Grade 1 |            |
| 376                   | c            | 6515-01-521-2756                | Syringe, Hypodermic W/O Needle, 35 ml<br>(0ZSM5) TRM30965106              | pkg        |
| 377                   | c            | 8040-01-202-7201                | Adhesive Package (64201) WSAPS-X-32-<br>192330                            | ea         |
| 378                   | c            | 8040-00-145-0530                | Adhesive (04963) EC2216 B/A                                               | kt         |
| 379                   | c            | 9320-01-247-7100                | Tape, Adhesive (78286) SS9538-001                                         | ro         |
| 380                   | c            | 8040-01-016-9963                | Adhesive Primer (04347) EA9203                                            | qt         |
| 381                   | c            | 7510-01-026-4661                | Tape, Pressure Sensitive (04347) EA9203                                   | qt         |
| 382                   | c            | 5970-00-717-1474                | Insulation Sleeving, Electrical (59288-11)<br>MIL-I-23053/5, Class 2      | ft         |
| 383                   | c            | 5120-01-529-8403                | Epoxy Adhesive Nozzle (1A9T3) 62-9142-<br>9930-0                          | ea         |

**EXPENDABLE AND DURABLE ITEM LIST - Continued****Table 1. Expendable and Durable Items List. - Continued**

| (1)<br>ITEM<br>NUMBER | (2)<br>LEVEL | (3)<br>NATIONAL STOCK<br>NUMBER | (4)<br>ITEM NAME, DESCRIPTION,<br>CAGEC, AND PART NUMBER   | (5)<br>U/I |
|-----------------------|--------------|---------------------------------|------------------------------------------------------------|------------|
| 384                   | c            | 8040-01-163-3481                | Epoxy Adhesive Cartridges (04347)<br>EA9309.3NA            | kt         |
| 385                   | c            | 5120-01-534-5769                | Epoxy Adeshive Manual Applicator<br>(1A9T3) 62-9136-9930-2 | ea         |
| 386                   | c            | 8515-01-211-7178                | Gloves, Cotton (12141) 312X                                | 144<br>pkg |
| 387                   | c            | 8040-01-450-9187                | Adhesive Primer (52152) 86A                                | pt         |
| 388                   | c            | 9390-01-516-5250                | Tape, Pressure Sensitive, Adhesive (52152)<br>8663MB-4.5   | rl         |
| 389                   | c            | 6840-01-546-5323                | Biocide, Water Additive (0F1S3) 00245                      | ea         |

**END OF WORK PACKAGE**





---

**UNIT LEVEL**  
**AIRCRAFT GENERAL**  
**CRITICAL SAFETY ITEM (CSI) PROGRAM**

---

A CSI part or a CSI aircraft part is defined as a part, assembly or installation procedure with one or more critical characteristics that, if not conforming to the design data or quality requirements, could result in the serious injury or death of crew members and/or serious damage to the helicopter. It should be noted that references to the FSCAP or CSI are interchangeable. The FSCAP program is the predecessor of the CSI program.

A critical characteristic is any dimension, tolerance, finish, material manufacturing, assembly or inspection process, or other feature which, if nonconforming or missing, could cause failure or malfunction of the CSI.

Critical characteristics produced during the manufacturing process are termed manufacturing critical characteristics. Critical characteristics not introduced during manufacturing but critical in terms of assembly/installation (e.g. proper torque) are termed installation critical characteristics.

Table 1 identifies parts, assemblies, or installations under the CSI program requiring special handling during maintenance. Throughout the maintenance procedures warnings appear emphasizing critical instructions to be followed. These warnings are identified as "CSI" warnings and are inserted whenever and wherever necessary.

Torque stripes are used to identify all fasteners with critical characteristic torque or installation procedures. Torque stripes are a painted on stripe that is applied to either end of a fastener. Torque stripes are similar to slippage marks, however, they are not used to show relative motion of fasteners. Refer to WP 0381 00 for the correct application of torque stripes.

**Table 1. Critical Safety Items (CSI).**

| <b>PART NUMBER/CAGE</b> | <b>NOMENCLATURE</b>               | <b>CRITICAL CHARACTERISTICS</b>                                                       |
|-------------------------|-----------------------------------|---------------------------------------------------------------------------------------|
| 38023-10371-101         | Main Rotor Spindle                | Verification of torque of MS17826 nut and MS21244 nut and cotter pinning per MS33540. |
| 38023-10374-041, -042   | Main Rotor Spindle and Liner Assy |                                                                                       |
| 70000-07050-011         | Horizontal Stabilator Instl       |                                                                                       |

Table 1. Critical Safety Items (CSI). - Continued

| PART NUMBER/CAGE                                          | NOMENCLATURE                  | CRITICAL CHARACTERISTICS                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|-----------------------------------------------------------|-------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 70000-08000-016, -017, -018                               | Rotor Head/Transmission Instl | After stabilization of bolt torque per note 31, verification of 1843 in-lbs of torque. Expandable pin and bolts torque (note 32). Exposed surfaces of main rotor shaft. Lower control rod attachment torque (note 32). Verification of indicated torque during initial assembly or installation and subsequent stabilization retorques. Verification of indicated torque range required. Presence and proper installation of bolt, washers, nut and cotter pin. Verification of proper installation and torque of bolt and presence and proper installation of lock ring during initial assembly or installation and at subsequent stabilization retorques (note 33). |
| 70000-08000 -042, -043, -044                              | Rotor Head/Transmission Assy  |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| 70000-10100-011, -012, -013, -014, -017, -018, -021, -022 | Engine Instl                  | Determine that torque stabilization per note 13 & 22 has been completed and final stabilization torque. Verification of the vibration level per note 14.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| 70000-10101-011, -012, -013, -014, -015, -016             | Engine Instl                  | After stabilization of torque per note 19 and 23. Verification of vibration level per note 14. Verification of the indicated torque during initial assembly or installation and at subsequent stabilization retorques note 25.                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| 70000-11100-011, -012, -013, -014, -015                   | Tail Rotor Instl              | Presence and proper installation of bolts, and washers, nut, cotter pin and bonding jumper. Proper installation of control link attachment hardware. Verification of indicated torque.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| 70070-10030-041, -042, -043, -044, -045, -046, -047       | Main Rotor Spindle Assy       | Assembly contains CSI. Verification of the indicated torque during initial assembly or installation and at subsequent stabilization retorques.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |

Table 1. Critical Safety Items (CSI). - Continued

| PART NUMBER/CAGE                                                            | NOMENCLATURE                      | CRITICAL CHARACTERISTICS                                                                                                                                                                     |
|-----------------------------------------------------------------------------|-----------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 70070-40033-011, -041, -042, -043, -044                                     | Mixer Links, Retrofit Kit         | See drawing 70400-02300, sheet 1, note 17; Verification of correct hardware, joining of mating parts, safetying per MS33540, and torque check per note 15D.                                  |
| 70101-08202-041, -043                                                       | Rod End                           |                                                                                                                                                                                              |
| 70101-11200-042, -043, -044                                                 | Tail Rotor Blade Assy             |                                                                                                                                                                                              |
| 70101-11201-041, -042                                                       | Spar Assy, Tail Rotor Blade       |                                                                                                                                                                                              |
| 70101-31000-043                                                             | Tail Rotor Blade Assy             |                                                                                                                                                                                              |
| 70102-08012-105, -106                                                       | Main Rotor Horn                   | 100% Coverage of dry film lube and adhesion (note 33). Nicks, dents, scratches, gouges and tool or scuff marks within the CC area shall not exceed the acceptance limits of SS9208, para 3.1 |
| 70102-08101-103                                                             | Main Rotor Spindle Detail         |                                                                                                                                                                                              |
| 70102-08105-102                                                             | Main Rotor Spindle Nut            |                                                                                                                                                                                              |
| 70102-08111-043, -044, -045, -046, -047                                     | Main Rotor Horn Assy              | Nicks, dents, scratches, gouges and tool or scuff marks within the CC area shall not exceed the acceptance limits of SS9208, para 3.1.                                                       |
| 70102-08200-041, -042, -043, -044, -053, -054, -055, -056, -063, -068, -069 | Main Rotor Spindle Assy           | Verification of the indicated torque during initial assembly or installation and at subsequent stabilization retorques.                                                                      |
| 70102-08216-041, -042, -045, -046                                           | Main Rotor Spindle and Liner Assy | Assembly contains CSI. Nicks, dents, scratches, gouges and tool or scuff marks within the CC area shall not exceed the acceptance limits of SS9208, para 3.1.                                |
| 70103-08101-101, -104                                                       | Main Rotor Hub                    |                                                                                                                                                                                              |

Table 1. Critical Safety Items (CSI). - Continued

| PART NUMBER/CAGE                              | NOMENCLATURE                    | CRITICAL CHARACTERISTICS                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|-----------------------------------------------|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 70103-08107-101, -102                         | Main Rotor Blade Expandable Pin | Blade attaching pins contain critical surfaces which must not be damaged during blade removal. Use extreme caution when removing and provide protective covering, if not immediately reinstalled in spindle. Outside lug surface of blade cuffs are critical surfaces which must not be damaged during and after blade removal. Extreme caution shall be used when removing. Provide protective covering after removal. Failure to comply could result in damage to equipment. |
| 70103-08108-041                               | Main Rotor Blade Solid Pin      | Blade attaching pins contain critical surfaces which must not be damaged during blade removal. Use extreme caution when removing and provide protective covering, if not immediately reinstalled in spindle. Outside lug surface of blade cuffs are critical surfaces which must not be damaged during and after blade removal. Extreme caution shall be used when removing. Provide protective covering after removal. Failure to comply could result in damage to equipment. |
| 70103-08112-041, -042, -047, -048             | Main Rotor Hub Sub-Assy         |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| 70103-08200-041                               | Main Rotor Hub Assy             | Spindle-to-hub attachment bolt torque. Upper control rod attachment nut torque. Verification of indicated torque required, presence and proper installation of bolt, washers, nut, and cotter pin.                                                                                                                                                                                                                                                                             |
| 70104-08000-043, -044, -045, -046, -049, -050 | Swashplate Assy                 | Verification of indicated torque required. Presence and proper installation of bolt, washers, nut, and cotter pin. Verification of proper installation of duplex bearing set per note 9.                                                                                                                                                                                                                                                                                       |
| 70104-08002-102                               | Main Rotor Swashplate           |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| 70104-08011-103                               | Stationary Swashplate           |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |

Table 1. Critical Safety Items (CSI). - Continued

| PART NUMBER/CAGE                                    | NOMENCLATURE                         | CRITICAL CHARACTERISTICS                                                                                                                                                                                              |
|-----------------------------------------------------|--------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 70104-08015-102                                     | Swashplate Expandable Pin            | Verification of proper installation of lock ring and half male spacer.                                                                                                                                                |
| 70104-08020-044, -045                               | Scissors Assembly                    | Verification of indicated torque required. Presence and proper installation of bolt, washers, nut, and cotter pin.                                                                                                    |
| 70150-09100-041, -043                               | Main Rotor Blade Assy                | Verification of tip cap screw torque to the requirements specified in field drawing and note 14 during initial assembly or installation and at subsequent stabilization retorques.                                    |
| 70150-09101-041, -043                               | Main Rotor Blade Sub-Assy            | Compliance with roller burnish marked in field of drawing requires verification. Acceptance is a critical characteristic. Sheet 1, Zone 9E, roller burnish cuff holes per SS5099.                                     |
| 70150-09103-101, -103                               | Main Rotor Blade Spar                |                                                                                                                                                                                                                       |
| 70150-09107-041, -042, -046, -049, -051, -054, -055 | Tip Cap Assy, Main Rotor Blade       | Within the area denoted in field drawing on the visible metal exterior, interior and edge surfaces on both upper and lower sides; nicks, dents, and scratches shall not exceed acceptance limits of SS9208, para 3.1. |
| 70150-09107-101                                     | Tip Cap Fairing, Main Rotor Blade    |                                                                                                                                                                                                                       |
| 70150-09109-041                                     | Cuff Assy, Main Rotor Blade          |                                                                                                                                                                                                                       |
| 70150-09109-101                                     | Cuff, Main Rotor Blade               |                                                                                                                                                                                                                       |
| 70150-09122-102                                     | Spar Tube, Main Rotor Blade          |                                                                                                                                                                                                                       |
| 70200-06051-011, -012                               | Pylon/Tailcone Joining Instl         | Verification of installation of bolts, washers, barrel nuts, retainers and torque per notes 2 & 4, note 6.                                                                                                            |
| 70200-42400-015, -018, -019                         | External Stores Support System Instl | Verification of installation of hardware, per notes 3 and torque, per note 4. Verification of torque to actuate cam handle, per notes 9 & 10.                                                                         |

Table 1. Critical Safety Items (CSI). - Continued

| PART NUMBER/CAGE                                                                  | NOMENCLATURE                                  | CRITICAL CHARACTERISTICS                                                                                                                      |
|-----------------------------------------------------------------------------------|-----------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------|
| 70200-42400-051, -052                                                             | External Stores Support System Assy           | Verification of installation of hardware, per notes 3 and torque, per note 4. Verification of torque to actuate cam handle, per notes 9 & 10. |
| 70209-06052-041, -043, -044, -046                                                 | Spar Fitting Assy, TRB Stabilator Attach      | Nicks, dents, scratches, and tool or scuff marks within the CC area shall not exceed acceptance limits of SS9208, para 3.1.                   |
| 70209-06052-101, -103                                                             | Spar Fitting, TRB Stabilator Attach           | Nicks, dents, scratches, and tool or scuff marks within the CC area shall not exceed acceptance limits of SS9208, para 3.1.                   |
| 70209-06054-044                                                                   | Support Fitting Assy, TRB Stabilator Actuator |                                                                                                                                               |
| 70209-07053-043, -044                                                             | Support Fitting Assy, Stabilator Actuator     | Nicks, dents, scratches, and tool or scuff marks within the CC area shall not exceed acceptance limits of SS9208, para 3.1.                   |
| 70209-07053-103                                                                   | Support Fitting, Stabilator Actuator          | Nicks, dents, scratches, and tool or scuff marks within the CC area shall not exceed acceptance limits of SS9208, para 3.1.                   |
| 70209-07057-101                                                                   | Right Attach Bolts, Stabilator                | Nicks, dents, scratches, and tool or scuff marks within the CC area shall not exceed acceptance limits of SS9208, para 3.1.                   |
| 70209-07058-101                                                                   | Right Attach Bolts, Folding Stabilator        |                                                                                                                                               |
| 70209-22103-049, -050, -051, -052, -053, -054, -055, -056, -065, -067, -069, -071 | Servo Beam Fitting Assy                       |                                                                                                                                               |
| 70209-22103-105, -106, -107, -108                                                 | Servo Beam Fitting                            |                                                                                                                                               |
| 70209-27007-102                                                                   | Folding Stabilator Attach Bolts               | Nicks, dents, scratches, and tool or scuff marks within the CC area shall not exceed acceptance limits of SS9208, para 3.1.                   |

Table 1. Critical Safety Items (CSI). - Continued

| PART NUMBER/CAGE                                          | NOMENCLATURE                                 | CRITICAL CHARACTERISTICS                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|-----------------------------------------------------------|----------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 70219-02134-045, -046, -047, -048, -049, -050, -051, -052 | Servo Beam Fitting Assy                      | Lug width/location. Nicks, dents, scratches, and tool or scuff marks within the CC area shall not exceed acceptance limits of SS9208, para 3.1.                                                                                                                                                                                                                                                                                                             |
| 70219-05001-043, -044, -045                               | Bulkhead Fitting Assy, Tailcone Canted Hinge |                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| 70209-05001-105                                           | Bulkhead Fitting, Tailcone Canted Hinge      |                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| 70250-12062-101, -102, -104                               | Main Landing Gear Drag Beam                  |                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| 70350-03000-012, -013                                     | Shaft and Cooler Instl                       | Clamping, pre-load, verification of alignment. Verification of .12 minimum clearance between flexible hoses. Verification of minimum torque (couplings) of 328 in-lbs after torque stabilization per B/P note 11. Verification of the indicated torque during initial assembly or installation and at subsequent re-torques.                                                                                                                                |
| 70350-05000-012, -013                                     | Tail Drive Shaft Instl                       | Inspect tail drive shaft alignment in accordance with SES 701303. Verification of 328 in-lbs. minimum torque after stabilization.                                                                                                                                                                                                                                                                                                                           |
| 70350-06000-012, -014                                     | Transmission Instl, Pylon                    | Verification of 328 in-lbs. minimum coupling nut torque per B/P note 14. Verification of 385 in-lbs min torque. IGB mounting bolt torque per B/P note 13. Verification of 655 in-lbs. minimum TGB mounting bolt torque per B/P note 15. Verification of the indicated torque during initial assembly or installation and at subsequent re-torques per B/P note 19. Verification of tail drive shaft alignment in accordance with SES 701303 per B/P note 3. |
| 70351-08001-043, -045, -046, -047, -049                   | Input Module, Main Gear Box                  | Verification of 646 in-lbs minimum nut torque in accordance with SS5086 08 per B/P note 11.                                                                                                                                                                                                                                                                                                                                                                 |

Table 1. Critical Safety Items (CSI). - Continued

| PART NUMBER/CAGE                                                                                   | NOMENCLATURE                    | CRITICAL CHARACTERISTICS                                                                                                                                                                          |
|----------------------------------------------------------------------------------------------------|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 70351-08100-053, -054, -055, -056, 057, -058, -059, -060, -061, -069, -070, -071, -072, -073, -074 | Main Module Assy, Main Gear Box |                                                                                                                                                                                                   |
| 70351-08110-044, -045                                                                              | MGB Housing Assy, Matched Set   | Verification of the housing to be free from nicks, dents, scratches, tool marks and surface defects.                                                                                              |
| 70351-08111-103                                                                                    | MGB Main Housing                |                                                                                                                                                                                                   |
| 70351-08131-044, -045, -046, -047, -048, -102, -103, -107, -108                                    | Main Rotor Shaft                | All surfaces of the shaft to be free of nicks, scratches, tool marks & other surface defects which exceed the acceptance limits of SS9208, para. 3.1.                                             |
| 70351-08186-043, 044                                                                               | Shaft Extension Assy            | Nicks, scratches, tool marks & other surface defects shall not exceed the acceptance limits of SS9208, para. 3.1. No mismatch allowed between the 3.000R and 2.000R radii and the 8.750 diameter. |
| 70351-08186-103                                                                                    | Shaft Extension                 | Nicks, scratches, tool marks & other surface defects shall not exceed the acceptance limits of SS9208, para. 3.1. No mismatch allowed between the 3.000R and 2.000R radii and the 8.750 diameter. |
| 70351-08206-041                                                                                    | Input Flange Assy               |                                                                                                                                                                                                   |
| 70351-08206-101, -102                                                                              | Input Flange                    | Shot peen coverage.                                                                                                                                                                               |
| 70351-08228-101                                                                                    | Swashplate Guide                | Minimum outside diameter 0.6253.                                                                                                                                                                  |
| 70351-08404-101                                                                                    | Main Gear Box Dowel Pin         | Minimum outside diameter 0.6253.                                                                                                                                                                  |
| 70351-08404-102, -103                                                                              | Main Gear Box Dowel Pin         | Minimum outside diameter 0.7503.                                                                                                                                                                  |
| 70351-08404-104                                                                                    | Main Gear Box Dowel Pin         | Minimum outside diameter 0.7503. Nicks, scratches, tool marks & other surface defects shall not exceed the acceptance limits of SS9208, para. 3.1.                                                |



Table 1. Critical Safety Items (CSI). - Continued

| PART NUMBER/CAGE                   | NOMENCLATURE                           | CRITICAL CHARACTERISTICS                                                                                                                                                     |
|------------------------------------|----------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 70351-28404-101                    | Dowel Pin, MGB                         |                                                                                                                                                                              |
| 70351-38110-043, -044, -045        | MGB Housing Assy, Matched Set          |                                                                                                                                                                              |
| 70351-38131-042                    | Main Rotor Shaft Assy                  | Nicks, scratches, tool marks & other surface defects shall not exceed the acceptance limits of SS9208, para. 3.1.                                                            |
| 70351-38131-102                    | Main Rotor Shaft                       | Nicks, dents scratches and tool or scuff marks shall not exceed acceptance limits of SS9208, para 3.1.                                                                       |
| 70351-38404-101                    | Dowel Pin, MGB                         |                                                                                                                                                                              |
| 70351-48100-041                    | Main Module Assy                       | Lower mast nut torque.                                                                                                                                                       |
| 70358-06603-041, -042, -043, -045  | Output Assy, Tail Gear Box             | Determination that torque stabilization per note 2 has been completed including final stabilization torque.                                                                  |
| 70358-06612-102                    | Inboard Retention Plate, Tail Gear Box |                                                                                                                                                                              |
| 70358-06620-101, -102              | Output Gear, Tail Gear Box             | Nicks, scratches, tool marks & other surface defects shall not exceed the acceptance limits of SS9208, para. 3.1.                                                            |
| 70358-06800-041, -042, -043, -047  | Tail Rotor Gear Box and Servo Assy     | Determination that torque stabilization per note 2 has been completed including final stabilization torque. Torque stripping per SS9300 is not required for these fasteners. |
| 70361-03001-044                    | Tail Drive Section I Shaft Assy        | Verification of the indicated torque is a CC during initial assembly or installation and at subsequent stabilization re-torques.                                             |
| 70361-03005 -104, -105, -106, -107 | Axial Fan, Main Gear Box               |                                                                                                                                                                              |
| 70361-05001-049, -052              | Tail Drive Section II Shaft Assy       | Verification of the indicated torque during initial assembly or installation and at subsequent stabilization re-torques (drawing note 12).                                   |

Table 1. Critical Safety Items (CSI). - Continued

| PART NUMBER/CAGE                  | NOMENCLATURE                      | CRITICAL CHARACTERISTICS                                                                                                                                                                                                 |
|-----------------------------------|-----------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 70361-05002-044                   | Tail Drive Section III Shaft Assy | Verification of the indicated torque is a CC during initial assembly or installation and at subsequent stabilization re-torques.                                                                                         |
| 70361-06002-044, 048              | Tail Drive Section III Shaft Assy | Verification of the indicated torque is a CC during initial assembly or installation and at subsequent stabilization re-torques.                                                                                         |
| 70361-08004-043                   | Engine Drive Shaft Assy           |                                                                                                                                                                                                                          |
| 70400-00510-011, -013             | Directional Cable Instl           | Verification of correct hardware, joining of mating parts, safetying per MS33540 and torque check per note 11D. Verification of proper cable routing over quadrants and pulleys and under cable retainers (per note 16). |
| 70400-01100-011                   | Cockpit Controls Instl            | Verification of correct hardware, joining of mating parts, safetying and torque check per note 3D.                                                                                                                       |
| 70400-01200-012                   | Cockpit Cyclic Instl              | Verification of correct hardware, joining of mating parts, safetying and torque check per note 4D.                                                                                                                       |
| 70400-01250-052, -053, -054       | Cockpit Pushrod Assy              |                                                                                                                                                                                                                          |
| 70400-01255-103, -104             | Cockpit Pushrod Assy              | Visual inspection after proof load.                                                                                                                                                                                      |
| 70400-01400-012                   | Collective Control Instl, Cockpit | Verification of correct hardware, joining of mating parts, safetying and torque check per note 11D.                                                                                                                      |
| 70400-01600-012, -013             | Directional Instl, Cockpit        | Verification of correct hardware, joining of mating parts, safetying and torque check per note 1D.                                                                                                                       |
| 70400-01601-042, -043, -044, -046 | Pedal Pivot Assy                  | Verification of correct hardware, joining of mating parts, safetying and torque check per MS33540 note 1D.                                                                                                               |
| 70400-01613-049, -050             | Pedal Adjustor Assy               | Verification of correct hardware, joining of mating parts, safetying and torque check per MS33540 note 5D.                                                                                                               |

Table 1. Critical Safety Items (CSI). - Continued

| PART NUMBER/CAGE                                                      | NOMENCLATURE                   | CRITICAL CHARACTERISTICS                                                                                                                                                                                                                                                                     |
|-----------------------------------------------------------------------|--------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 70400-02000-012                                                       | Controls Instl, Center Section | Verification of correct hardware, joining of mating parts, safetying and torque check per MS33540 note 1D.                                                                                                                                                                                   |
| 70400-02108-011, -013                                                 | Torque Shaft Instl             | Verification of correct hardware, joining of mating parts, safetying and torque check per MS33540 note 2D.                                                                                                                                                                                   |
| 70400-02108-012                                                       | Pushrod Instl                  |                                                                                                                                                                                                                                                                                              |
| 70400-02252-120, -123, -124, -128, -129, -130, -131, -132, -133, -134 | Pushrod Assy                   | Visual inspection after proof load.                                                                                                                                                                                                                                                          |
| 70400-02258-048                                                       | Pushrod Assy                   | Visual inspection after proof load.                                                                                                                                                                                                                                                          |
| 70400-02264-051, -060                                                 | Pushrod Assy                   | Visual inspection after proof load.                                                                                                                                                                                                                                                          |
| 70400-02265-102, -103, -104, -105, -106, -112, -114, -115, -116, -117 | Pushrod Tube                   |                                                                                                                                                                                                                                                                                              |
| 70400-02300-041, -043, -044, -045, -046, -048, -050                   | Mixer Assy                     | Verification of correct hardware, joining of mating parts, safetying and torque check per note 15D. Verification of correct hardware, joining of mating parts, safetying and torque check per MS33540 or per AS4536 (note 20). Verification of torqueing and safetying of NAS 1304-17A bolt. |
| 70400-02500-012                                                       | Controls Instl, Lower Cabin    | Verification of correct hardware, joining of mating parts, safetying and torque check per MS33540 note 1D.                                                                                                                                                                                   |
| 70400-02500-041, -042                                                 | Control Assy, Lower Cabin      | Verification of correct hardware, joining of mating parts, safetying and torque check per MS33540 note 1D.                                                                                                                                                                                   |
| 70400-02625-011                                                       | Directional Lever Instl        | Torquing and safetying of AN4H4A bolts. Verification of installation of 70400-02605-102 plate in the slot of 70400-02604-102 pin. Verification of torque and safetying of AN310C6 nut.                                                                                                       |

Table 1. Critical Safety Items (CSI). - Continued

| PART NUMBER/CAGE                        | NOMENCLATURE                         | CRITICAL CHARACTERISTICS                                                                                                                                                                                                                                                                                                                                                                         |
|-----------------------------------------|--------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 70400-02700-011, -012, -013             | Controls Instl, Upper Deck           | Verification of installation of 70400-02605-102 plate in the slot of 70400-02604-102 pin. Verification of torque and safetying of AN310C6 nut. Verification of correct hardware, joining of mating parts, safetying and torque check per MS33540 note 2D. Verification of minimum torque per AS4536 (note 15). Verification of minimum torque and safetying per MS33540 or per AS4536 (note 13). |
| 70400-06100-011                         | Tail Rotor Servo/Quadrant Instl      | Verification of cable installation and setting of locking devices. Verification of correct hardware, joining of mating parts, safetying and torque check per MS33540 note13 and 7D. Verification of installation of 70400-06699-101 nut and safetying with AN174 or NAS6704 bolt and lock wire.                                                                                                  |
| 70400-06100-041, -042                   | Tail Rotor Servo Coupling Assy       | Verification of cable installation and setting of locking devices. Verification of correct hardware, joining of mating parts, safetying and torque check per MS33540 note13 and 7D.                                                                                                                                                                                                              |
| 70400-06636-012, -013, -014             | Horizontal Stabilator Actuator Instl | Verification of correct hardware, joining of mating parts, safetying and torque check per MS33540 note 2D.                                                                                                                                                                                                                                                                                       |
| 70400-06637-045, -047, -049, -051, -052 | Actuator Assy, Horizontal Stabilator | Verification of minimum torque and safetying per MS33540 or per AS4536.                                                                                                                                                                                                                                                                                                                          |
| 70400-06700-101, -102, -103, -106       | Pushrod Tube                         | Visual inspection after proof load.                                                                                                                                                                                                                                                                                                                                                              |
| 70400-06701-042                         | Link Assy, Tail Rotor Servo          | Nicks, dents, scratches, and tool marks within the CC's area shall not exceed the acceptance limits of SS9208, para. 3.1.                                                                                                                                                                                                                                                                        |
| 70400-06701-102                         | Link, Tail Rotor Servo               |                                                                                                                                                                                                                                                                                                                                                                                                  |

Table 1. Critical Safety Items (CSI). - Continued

| PART NUMBER/CAGE                  | NOMENCLATURE                               | CRITICAL CHARACTERISTICS                                                                                                                                                                                  |
|-----------------------------------|--------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 70400-06712-011                   | Stabilator Position Sensor Instl           | Verification of correct hardware, joining of mating parts, safetying and torque check per MS33540 note 5D.                                                                                                |
| 70400-06802-101                   | Bolt, Horizontal Stabilizer Actuator       | Nicks, dents, scratches , and tool marks within the CC's area shall not exceed the acceptance limits of SS9208, para. 3.1.                                                                                |
| 70400-08101-044, -046, -047       | Bellcrank Assy, Forward Longitudinal       | Nicks, dents, scratches, and tool marks within the CC's area shall not exceed the acceptance limits of SS9208, para. 3.1.                                                                                 |
| 70400-08101-104                   | Bellcrank, Forward Longitudinal            | Nicks, dents, scratches, and tool marks within the CC's area shall not exceed the acceptance limits of SS9208, para. 3.1.                                                                                 |
| 70400-08102-045                   | Bellcrank Assy, Aft Longitudinal           | Cracks are not repairable, the part shall be scrapped for any crack, no limits. Nicks, dents, scratches, and tool marks within the CC's area shall not exceed the acceptance limits of SS9208, para. 3.1. |
| 70400-08104-046, -047, -048, -049 | Walking Beam Assy, Aft Longitudinal        | Nicks, dents, scratches, and tool marks within the CC's area shall not exceed the acceptance limits of SS9208, para. 3.1.                                                                                 |
| 70400-08104-106, -107             | Walking Beam, Aft Longitudinal             | Nicks, dents, scratches, and tool marks within the CC's area shall not exceed the acceptance limits of SS9208, para. 3.1.                                                                                 |
| 70400-08110-047, -053, -060       | Swashplate Link Assy, Forward Longitudinal | Nicks, dents, scratches, and tool marks within the CC's area shall not exceed the acceptance limits of SS9208, para. 3.1.                                                                                 |
| 70400-08110-048, -054, -061       | Swashplate Link Assy, Aft Longitudinal     | Nicks, dents, scratches, and tool marks within the CC's area shall not exceed the acceptance limits of SS9208, para. 3.1.                                                                                 |

Table 1. Critical Safety Items (CSI). - Continued

| PART NUMBER/CAGE                  | NOMENCLATURE                                   | CRITICAL CHARACTERISTICS                                                                                                                                   |
|-----------------------------------|------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 70400-08110-108                   | Forward Longitudinal Swashplate Link           | Nicks, dents, scratches, and tool marks within the CC's area shall not exceed the acceptance limits of SS9208, para. 3.1.                                  |
| 70400-08110-109                   | Swashplate Link, Aft Longitudinal              | Nicks, dents, scratches, and tool marks within the CC's area shall not exceed the acceptance limits of SS9208, para. 3.1.                                  |
| 70400-08111-042, -043, -044       | Tie Rod Assy, Aft Longitudinal                 | Nicks, dents, scratches, and tool marks within the CC's area shall not exceed the acceptance limits of SS9208, para. 3.1.                                  |
| 70400-08111-101, -103             | Tie Rod, Aft Longitudinal                      | Nicks, dents, scratches, and tool marks within the CC's area shall not exceed the acceptance limits of SS9208, para. 3.1.                                  |
| 70400-08112-045, -046, -047       | Support Fitting Assy, Aft Longitudinal Tie Rod | Nicks, dents, scratches, and tool marks within the CC's area shall not exceed the acceptance limits of SS9208, para. 3.1.                                  |
| 70400-08112-107, -109             | Support Fitting, Aft Longitudinal Tie Rod      | Nicks, dents, scratches, and tool marks within the CC's area shall not exceed the acceptance limits of SS9208, para. 3.1.                                  |
| 70400-08114-049, -050, -051, -052 | Right Tie Rod Assy                             | Nicks, dents, scratches, and tool marks within the CC's area shall not exceed the acceptance limits of SS9208, para. 3.1.                                  |
| 70400-08115-045, -046             | Left Tie Rod Assy                              | Nicks, dents, scratches, and tool marks within the CC's area shall not exceed the acceptance limits of SS9208, para. 3.1. Minimum lug hole depth is 0.430. |
| 70400-08115-103                   | Left Tie Rod                                   | Nicks, dents, scratches, and tool marks within the CC's area shall not exceed the acceptance limits of SS9208, para. 3.1. Minimum lug hole depth is 0.430. |
| 70400-08116-045, -046, -047, -048 | Support Assy, Forward Swashplate Bellcrank     | Nicks, dents, scratches, and tool marks within the CC's area shall not exceed the acceptance limits of SS9208, para. 3.1.                                  |

Table 1. Critical Safety Items (CSI). - Continued

| PART NUMBER/CAGE                              | NOMENCLATURE                              | CRITICAL CHARACTERISTICS                                                                                                                                  |
|-----------------------------------------------|-------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------|
| 70400-08116-115                               | Support, Forward Swashplate Bellcrank     | Nicks, dents, scratches, and tool marks within the CC's area shall not exceed the acceptance limits of SS9208, para. 3.1.                                 |
| 70400-08117-046, -047, -048, -049, -050, -051 | Support Assy, Aft Bellcrank               | Nicks, dents, scratches, and tool marks within the CC's area shall not exceed the acceptance limits of SS9208, para. 3.1.                                 |
| 70400-08117-103, -113                         | Support, Aft Bellcrank                    | Nicks, dents, scratches, and tool marks within the CC's area shall not exceed the acceptance limits of SS9208, para. 3.1.                                 |
| 70400-08150-045, -046                         | Lateral Bellcrank Assy                    | Nicks, dents, scratches, and tool marks within the CC's area shall not exceed the acceptance limits of SS9208, para. 3.1.                                 |
| 70400-08150-103                               | Lateral Bellcrank                         | Nicks, dents, scratches, and tool marks within the CC's area shall not exceed the acceptance limits of SS9208, para. 3.1.                                 |
| 70400-08151-046, -047, -048, -050, -060, -061 | Link Assy, Lateral Swashplate             | Nicks, dents, scratches, and tool marks within the CC's area shall not exceed the acceptance limits of SS9208, para. 3.1. Minimum lug thickness is 0.220. |
| 70400-08151-106                               | Link, Lateral Swashplate                  | Nicks, dents, scratches, and tool marks within the CC's area shall not exceed the acceptance limits of SS9208, para. 3.1.                                 |
| 70400-08155-053                               | Rod Assy, Forward Main Rotor Servo Output | Nicks, dents, scratches, and tool marks within the CC's area shall not exceed the acceptance limits of SS9208, para. 3.1. Straightness.                   |
| 70400-08155-054                               | Push Rod Assy, Aft Longitudinal           | Nicks, dents, scratches, and tool marks within the CC's area shall not exceed the acceptance limits of SS9208, para. 3.1. Straightness.                   |
| 70400-08155-055                               | Rod Assy, Aft Main Rotor Servo Output     | Nicks, dents, scratches, and tool marks within the CC's area shall not exceed the acceptance limits of SS9208, para. 3.1. Straightness.                   |

Table 1. Critical Safety Items (CSI). - Continued

| PART NUMBER/CAGE                                          | NOMENCLATURE                               | CRITICAL CHARACTERISTICS                                                                                                                                  |
|-----------------------------------------------------------|--------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------|
| 70400-08155-056                                           | Rod Assy, Lateral Main Rotor Servo Output  | Nicks, dents, scratches, and tool marks within the CC's area shall not exceed the acceptance limits of SS9208, para. 3.1.                                 |
| 70400-08155-109                                           | Rod, Forward Main Rotor Servo Output       | Nicks, dents, scratches, and tool marks within the CC's area shall not exceed the acceptance limits of SS9208, para. 3.1. Straightness.                   |
| 70400-08155-110                                           | Push Rod, Aft Longitudinal                 | Nicks, dents, scratches, and tool marks within the CC's area shall not exceed the acceptance limits of SS9208, para. 3.1. Straightness and concentricity. |
| 70400-08155-111                                           | Rod, Aft Main Rotor Servo Output           | Nicks, dents, scratches, and tool marks within the CC's area shall not exceed the acceptance limits of SS9208, para. 3.1. Straightness.                   |
| 70400-08155-112                                           | Rod, Lateral Main Rotor Servo Output       | Nicks, dents, scratches, and tool marks within the CC's area shall not exceed the acceptance limits of SS9208, para. 3.1. Straightness.                   |
| 70400-08158-101, -102                                     | Support, Aft Longitudinal                  |                                                                                                                                                           |
| 70400-08159-101, -102, -103, -104, -105, -106, -107, -108 | Bolt, Special, Self-Retaining              | Nicks, dents, scratches, and tool marks within the CC's area shall not exceed the acceptance limits of SS9208, para. 3.1.                                 |
| 70400-08162-041, -042                                     | Support Assy, Forward Swashplate Bellcrank |                                                                                                                                                           |
| 70400-08162-101                                           | Support, Forward Swashplate Bellcrank      |                                                                                                                                                           |
| 70400-08163-043, -044                                     | Support Assy, Aft Longitudinal Bellcrank   |                                                                                                                                                           |
| 70400-08163-102                                           | Support, Aft Bellcrank                     |                                                                                                                                                           |
| 70400-08165-042, -043                                     | Right Tie Rod Assy                         | Nicks, dents, scratches, and tool marks within the CC's area shall not exceed the acceptance limits of SS9208, para. 3.1.                                 |



Table 1. Critical Safety Items (CSI). - Continued

| PART NUMBER/CAGE       | NOMENCLATURE               | CRITICAL CHARACTERISTICS                                                                                                                                                                                                                                                                         |
|------------------------|----------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 70400-08165-101        | Right Tie Rod              | Nicks, dents, scratches, and tool marks within the CC's area shall not exceed the acceptance limits of SS9208, para. 3.1.                                                                                                                                                                        |
| 70400-08166-041, -042  | Lateral Bellcrank Assy     | Nicks, dents, scratches, and tool marks within the CC's area shall not exceed the acceptance limits of SS9208, para. 3.1.                                                                                                                                                                        |
| 70400-08166-101        | Lateral Bellcrank          | Nicks, dents, scratches, and tool marks within the CC's area shall not exceed the acceptance limits of SS9208, para. 3.1.                                                                                                                                                                        |
| 70400-08200-011        | Controls Instl, Swashplate | Presence of dowel pin retention clips. Proper shim installation. Verification of correct hardware, joining of mating parts, safetying and torque check per note 16F. Verification of minimum torque and safetying per MS33540 (note 25 & 27).                                                    |
| 70400-08200- 012, -013 | Controls Instl, Swashplate | Presence of dowel pin retention clips. Proper shim installation. Verification of correct hardware, joining of mating parts, safetying and torque check per note 16F. Verification of minimum torque and safetying per MS33540 (note 20). Presence of "capped" bushing. Proper shim installation. |
| 70400-08200-041, -042  | Controls Instl, Swashplate | Presence of dowel pin retention clips. Proper shim installation. Verification of correct hardware, joining of mating parts, safetying and torque check per note 16F. Verification of minimum torque and safetying per MS33540 (note 25 & 27).                                                    |
| 70400-08200-043, -044  | Controls Instl, Swashplate | Presence of dowel pin retention clips. Proper shim installation. Verification of correct hardware, joining of mating parts, safetying and torque check per note 16F. Verification of minimum torque and safetying per MS33540 (note 20). Presence of "capped" bushing. Proper shim installation. |

Table 1. Critical Safety Items (CSI). - Continued

| PART NUMBER/CAGE                                          | NOMENCLATURE                   | CRITICAL CHARACTERISTICS                                                                                                                                                                                                                                                                                                   |
|-----------------------------------------------------------|--------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 70400-21613-041, -042                                     | Pedal Adjustor Assy            | Verification of correct hardware, joining of mating parts, safetying and torque check per note 1D.                                                                                                                                                                                                                         |
| 70400-22258-043, -044                                     | Pushrod Assy                   | Visual inspection after proof load.                                                                                                                                                                                                                                                                                        |
| 70410-02450-048, -049                                     | Actuator Assy, Roll SAS        | Proper installation of the SS27576-4-9, SS27576-4-11, SS27576-4-17 and SS27576-4-24 bolts. Free end play and torque prior to and after safetying of the SS27576-4-9, SS27576-4-11, SS27576-4-17 and SS27576-4-24 bolts. Verification of correct hardware, joining of mating parts, safetying and torque check per note 9D. |
| 70410-02561-105                                           | Actuator, Pitch Trim           | Assembly contains CSI. See 70410-02561-105 for CC. Verification of correct hardware, joining of mating parts, safetying and torque check per MS33540 note 9D.                                                                                                                                                              |
| 70410-02561-112                                           | Actuator Assy, Pitch Trim      |                                                                                                                                                                                                                                                                                                                            |
| 70410-02760-046                                           | Servo Assy, Pitch Trim         |                                                                                                                                                                                                                                                                                                                            |
| 70410-02760-047                                           | Servo Assy, Pitch Trim         | Assembly contains CSI. See 70410-02561-112 for CC. Verification of correct hardware, joining of mating parts, safetying and torque check per MS33540 note 9D.                                                                                                                                                              |
| 70410-02800-105, -106, -107, -111, -112, -113, -114, -116 | Primary Servo, Main Rotor      | Acceptance of swaging of NAS1436, NAS1446, NAS1448 or 20297 lockbolt and NAS1080 collar using NAS1563 inspection gauges. Installation, safetying, torque before and after safetying of SS5081-12 nut and 274076-1 locknut. Verification of installation of spacer in linkage assembly.                                     |
| 70410-02820-044, -045, -046, -050, -051, -052, -053, -054 | Primary Servo Assy, Main Rotor | Assembly contains CSI. See PN 70410-02800-105 thru -107, and PN 70410-2800-111 thru -116 (Main Rotor Primary Servo) for CC.                                                                                                                                                                                                |

Table 1. Critical Safety Items (CSI). - Continued

| PART NUMBER/CAGE                        | NOMENCLATURE                    | CRITICAL CHARACTERISTICS                                                                                                                                                                                                                                                                     |
|-----------------------------------------|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 70410-02900-126                         | Servo, Yaw Boost                | Verification of proper assembly, torquing, and safetying of 274647 rod end (360 in-lbs max) and 274646 rod end (270 in-lbs max. on NAS6509 nut to 274645 piston per Berteau boost actuator assembly drawing 274640 (ref: Sheet 4, note 9 and Sheet 2 F/D.)                                   |
| 70410-02910-047, -051, -053, -059, -060 | Servo Assy, Yaw Boost           | Verification of correct hardware, joining of mating parts, safetying and torquing per MS33540 note 19D & 22D.                                                                                                                                                                                |
| 70410-02910-065                         | Servo Assy, Yaw Boost           | Verification of compliance with the critical characteristic requirements of boost servo 70410-02900-126.                                                                                                                                                                                     |
| 70410-02910-067                         | Servo Assy, Yaw Boost           | Verification of correct hardware, joining of mating parts, safetying and torquing per MS33540 note 19D & 22D.                                                                                                                                                                                |
| 70410-06500-105, -107, -108, -110       | Servo, Tail Rotor               | Installation of NAS627 & NAS625 bolts to Power & Piston , and torque prior to safetying. Verification of correct hardware, joining of mating parts, safetying and torquing per MS33540 note 13D. Verification that Input Ball Shaft to Main Control Valve is not bent during servo assembly. |
| 70410-06520-043, -044, -045, -046       | Servo Assy, Tail Rotor          | Verification of compliance with CC requirements of 70410-06500 Servo Assembly.                                                                                                                                                                                                               |
| 70952-08557-043                         | Bearing Assy, Main Rotor Shaft  | Presence of lubricant.                                                                                                                                                                                                                                                                       |
| SB1138-101, -102                        | Bearing, Tail Rotor Drive Shaft |                                                                                                                                                                                                                                                                                              |
| SB1162-102                              | Bearing                         |                                                                                                                                                                                                                                                                                              |
| SB5201-1                                | Bearing                         |                                                                                                                                                                                                                                                                                              |

END OF WORK PACKAGE



---

**UNIT LEVEL**  
**ILLUSTRATED FIELD MANUFACTURE ITEMS LIST**

---

**INTRODUCTION**

This appendix includes complete instructions for making items authorized to be manufactured or fabricated at aviation unit maintenance (AVUM) or aviation intermediate maintenance (AVIM). Individual illustrations for these items include simplified line drawings and supporting text containing all instructional data needed to make the item. Bulk material used in the fabrication of these items are listed by part number, material classification and National Stock Number (NSN). Each illustration includes the part number of the item to be fabricated

**PART NUMBER INDEX**

The part number index lists all items in alphanumeric order with a cross-reference to the figure in which the item appears.

**Table 1. Part Number Index.**

| <b>PART NUMBER</b> | <b>FIGURE NO.</b> |
|--------------------|-------------------|
| A24-2              | 279               |
| A27A28-SHIM        | 278               |
| A3012557           | 167               |
| A3012558           | 179               |
| BH 102-9311434     | 214               |
| DP3-PAH            | 281               |
| DP3-PAL            | 282               |
| LSF01756-003       | 275               |
| LSF01931-003       | 275               |
| LSF01738-002       | 275               |
| LSF01756-001       | 275               |
| LSF01756-002       | 275               |
| MS20001PH4-0250    | 1                 |
| MS20001PH4-1200    | 1                 |
| MS20001PY4-0450    | 1                 |
| MS20001PY5-1950    | 1                 |

**PART NUMBER INDEX** - Continued**Table 1. Part Number Index. - Continued**

| <b>PART NUMBER</b> | <b>FIGURE NO.</b> |
|--------------------|-------------------|
| MS20001PX4-0450    | 1                 |
| MS20001PX5-1950    | 1                 |
| MS20001PY4-1984    | 1                 |
| MS20001P4-0375     | 1                 |
| MS20001P4-600      | 1                 |
| MS20001P4-1012     | 1                 |
| MS20001P5-600      | 1                 |
| MS20001P5-1000     | 1                 |
| MS20001P6-1950     | 1                 |
| MS20253P2-250      | 2                 |
| MS20253P2-475      | 2                 |
| MS20253P2-500      | 2                 |
| MS20253P2-538      | 2                 |
| MS20253P2-1200     | 2                 |
| MS20253P2-1225     | 2                 |
| MS20253P2-1984     | 2                 |
| MS20253P2-1988     | 2                 |
| MS20253P2-2050     | 2                 |
| MS20257P1-0550     | 3                 |
| MS20257HP2-400     | 3                 |
| MS20257P2-0350     | 3                 |
| MS20257P2-0400     | 3                 |
| MS20257P2-7200     | 3                 |
| MS20257P3-250      | 3                 |

**PART NUMBER INDEX** - Continued**Table 1. Part Number Index. - Continued**

| <b>PART NUMBER</b> | <b>FIGURE NO.</b> |
|--------------------|-------------------|
| MS20257P3-900      | 3                 |
| MS20257P3-1200     | 3                 |
| MS20257P3-1462     | 3                 |
| MS20257P3-1500     | 3                 |
| MS20257P4-600      | 3                 |
| MS20257XP4-2050    | 3                 |
| MS20257XP5-2050    | 3                 |
| MS20257YP4-2050    | 3                 |
| MS20257YP5-2050    | 3                 |
| MS21266-1N         | 4                 |
| MS35822-11A        | 6                 |
| M22759/13-20-9     | 5                 |
| PM21700            | 7                 |
| PM21703            | 7                 |
| RA&ND-160704       | 270               |
| SK0287             | 259               |
| SS2940-1           | 88                |
| SS2940-2           | 88                |
| SS2942-2           | 8                 |
| SS2942-3           | 8                 |
| SS2942-15          | 8                 |
| SS2942-35          | 8                 |
| SS2942-38          | 8                 |
| SS2942-4.75        | 8                 |

**PART NUMBER INDEX** - Continued**Table 1. Part Number Index. - Continued**

| <b>PART NUMBER</b> | <b>FIGURE NO.</b> |
|--------------------|-------------------|
| SS6124-09-100      | 9                 |
| SS7001-7A          | 10                |
| SS7001-15B         | 10                |
| SS7001-21B         | 10                |
| SS7001-24B         | 10                |
| SS7001-61C         | 10                |
| SS7072A0187ZXXX    | 11                |
| SS7072A0250Z180    | 11                |
| SS7072A0250Z250    | 11                |
| SS7072A0375ZXXX    | 11                |
| SS7072A0375Z050    | 11                |
| SS7072A0500Z010    | 11                |
| SS7072A0500Z150    | 11                |
| SS7072A0500Z350    | 11                |
| SS7072A0750ZXXX    | 11                |
| SS7072A0750Z014    | 11                |
| SS7072A0750Z021    | 11                |
| SS7072A0750Z022    | 11                |
| SS7072A0750Z028    | 11                |
| SS7072A0750Z029    | 11                |
| SS7072A0750Z030    | 11                |
| SS7072A0750Z045    | 11                |
| SS7072A0750Z053    | 11                |
| SS7072A0750Z055    | 11                |



**PART NUMBER INDEX** - Continued**Table 1. Part Number Index. - Continued**

| <b>PART NUMBER</b> | <b>FIGURE NO.</b> |
|--------------------|-------------------|
| SS7072A0750Z063    | 11                |
| SS7072A0750Z073    | 11                |
| SS7072A0750Z098    | 11                |
| SS7072A0750Z860    | 11                |
| SS7072A1000Z012    | 11                |
| SS7072A1000Z023    | 11                |
| SS7072B0125S015    | 11                |
| SS7072B0187S015    | 11                |
| SS7072B0250S015    | 11                |
| SS7072E0250Z720    | 11                |
| SS7072E0375Z600    | 11                |
| SS7072E0375Z720    | 11                |
| SS7072E0500T600    | 11                |
| SS7072E0500Z008    | 11                |
| SS7072E0500Z480    | 11                |
| SS7072E0625ZXXX    | 11                |
| SS7072E0625Z260    | 11                |
| SS7072E0625Z300    | 11                |
| SS7072E0625Z360    | 11                |
| SS7072E0750Z720    | 11                |
| SS7072E1000T500    | 11                |
| SS7072E1000T570    | 11                |
| SS7072E1000ZXXX    | 11                |
| SS7072G02500020    | 11                |

**PART NUMBER INDEX** - Continued**Table 1. Part Number Index. - Continued**

| <b>PART NUMBER</b> | <b>FIGURE NO.</b> |
|--------------------|-------------------|
| SS7072L0125Z015    | 11                |
| SS7114E005-0250    | 11                |
| SS7114E005-0300    | 11                |
| SS7114ETA-0720     | 11                |
| SS7114ETB-0600     | 11                |
| SS7114ETC-0480     | 12                |
| SS7114ETC-0840     | 12                |
| SS7114ETD-0565     | 12                |
| SS7114ETG-0840     | 12                |
| SS7114ET05-0840    | 12                |
| SS7114ET08-1610    | 12                |
| SS7311-16-9        | 13                |
| SS7311-22-9        | 13                |
| SS7313-20A1        | 126               |
| SS9096A06GG0095    | 174               |
| S6120-61188-016    | 14                |
| S6122-82279-001    | 30                |
| S8935F0S60         | 17                |
| S8935F0S200        | 17                |
| S9352-8-9-100      | 18                |
| S9352-10-9-600     | 18                |
| S9352-10-9-2000    | 18                |
| T9341101           | 242               |
| V300-1(65)-50      | 32                |

**PART NUMBER INDEX** - Continued**Table 1. Part Number Index. - Continued**

| <b>PART NUMBER</b> | <b>FIGURE NO.</b> |
|--------------------|-------------------|
| V300-1(65)-63      | 32                |
| V300-1(65)-75      | 32                |
| V300-1(65)-100     | 32                |
| V300-1(65)-150     | 32                |
| V300-1-75          | 32                |
| V300-1(80)-200     | 32                |
| V300-2-63          | 32                |
| V300-2-75          | 32                |
| V300-2-150         | 32                |
| V300-1(65)-50-0140 | 32                |
| V300-2-50-0140     | 32                |
| V300-2-100-0140    | 32                |
| V300-1(80)-75-0145 | 32                |
| V300-2-75-0145     | 32                |
| V330-1(65)-100     | 32                |
| V330-1(80)-50      | 32                |
| V330-1(80)-100     | 32                |
| V330-2-50          | 32                |
| V330-2-63          | 32                |
| V330-2-75          | 32                |
| V330-2-200         | 32                |
| 0341-0001-3        | 183               |
| 0341-0002-3        | 183               |
| 0341-0003-3        | 183               |

**PART NUMBER INDEX** - Continued**Table 1. Part Number Index. - Continued**

| <b>PART NUMBER</b> | <b>FIGURE NO.</b> |
|--------------------|-------------------|
| 0341-0004-3        | 183               |
| 10-615393          | 59                |
| 10-90604-201       | 64                |
| 13545-24C507325P01 | 277               |
| 1420-BH-001        | 43                |
| 1420-BH-002        | 44                |
| 1420-BH-007        | 45                |
| 1420-BH-008        | 46                |
| 1420-BH-010-01     | 48                |
| 1420-BH-010-02     | 48                |
| 1420-BH-010-03     | 48                |
| 1420-BH-011-02     | 49                |
| 1420-BH-011-03     | 49                |
| 1420-BH-011-04     | 49                |
| 1420-BH-012-01     | 50                |
| 1420-BH-013        | 135               |
| 1427-566558        | 135               |
| 1520-BH5E001       | 168               |
| 1560-EG-159        | 221               |
| 1730-BH-001-01     | 52                |
| 1730BH025-1        | 187               |
| 1730BH025-2        | 188               |
| 1730BH025-3        | 189               |
| 1730BH025-4        | 190               |

**PART NUMBER INDEX** - Continued**Table 1. Part Number Index. - Continued**

| <b>PART NUMBER</b> | <b>FIGURE NO.</b> |
|--------------------|-------------------|
| 1730BH025-5        | 191               |
| 1730BH025-6        | 192               |
| 1730-B4-002-01     | 53                |
| 2652559-1          | 133               |
| 2763-1             | 213               |
| 2763-2             | 213               |
| 2763-3             | 213               |
| 2763-4             | 213               |
| 2763-5             | 213               |
| 2763-6             | 213               |
| 2763-7             | 213               |
| 2803-1             | 213               |
| 2803-2             | 213               |
| 410404-1           | 181               |
| 4920BHS3E004       | 169               |
| 70000-00550-101    | 123               |
| 70000-00550-102    | 123               |
| 70000-00550-103    | 123               |
| 70000-00550-104    | 123               |
| 70070-20013-106    | 127               |
| 70070-20013-107    | 32                |
| 70070-20013-108    | 32                |
| 70070-20013-109    | 32                |
| 70070-20013-110    | 32                |

**PART NUMBER INDEX** - Continued**Table 1. Part Number Index. - Continued**

| <b>PART NUMBER</b> | <b>FIGURE NO.</b> |
|--------------------|-------------------|
| 70070-20013-111    | 32                |
| 70070-20013-112    | 32                |
| 70070-20013-113    | 32                |
| 70070-20013-114    | 32                |
| 70070-20013-115    | 32                |
| 70070-20013-116    | 32                |
| 70070-20013-117    | 32                |
| 70070-20013-118    | 32                |
| 70070-20013-119    | 32                |
| 70070-20013-120    | 32                |
| 70070-20013-121    | 32                |
| 70070-20013-122    | 32                |
| 70070-20013-123    | 32                |
| 70070-20013-124    | 32                |
| 70070-20013-125    | 32                |
| 70070-20013-126    | 32                |
| 70070-20013-133    | 32                |
| 70070-20013-134    | 32                |
| 70070-20013-137    | 32                |
| 70070-20013-138    | 32                |
| 70070-20013-139    | 32                |
| 70070-20013-140    | 32                |
| 70070-20013-141    | 32                |
| 70070-20013-150    | 32                |

**PART NUMBER INDEX** - Continued**Table 1. Part Number Index. - Continued**

| <b>PART NUMBER</b> | <b>FIGURE NO.</b> |
|--------------------|-------------------|
| 70070-20013-151    | 32                |
| 70070-20013-153    | 32                |
| 70070-20013-154    | 32                |
| 70070-20013-155    | 32                |
| 70070-20013-156    | 32                |
| 70070-20013-158    | 32                |
| 70070-20013-160    | 32                |
| 70070-20013-161    | 32                |
| 70070-20013-162    | 32                |
| 70070-20013-163    | 32                |
| 70070-20013-164    | 32                |
| 70070-20014-102    | 32                |
| 70070-20014-105    | 32                |
| 70070-20014-108    | 32                |
| 70070-20014-110    | 125               |
| 70070-30112-164    | 72                |
| 70070-50005-108    | 54                |
| 70070-50005-109    | 54                |
| 70070-50005-111    | 54                |
| 70070-50005-112    | 54                |
| 70070-50005-113    | 54                |
| 70070-50005-119    | 54                |
| 70070-50006-107    | 56                |
| 70070-50006-108    | 56                |

**PART NUMBER INDEX** - Continued**Table 1. Part Number Index. - Continued**

| <b>PART NUMBER</b>     | <b>FIGURE NO.</b> |
|------------------------|-------------------|
| 70102-08100-041T046.06 | 198               |
| 70102-08100-041T098.02 | 198               |
| 70102-11109-101        | 112               |
| 70102-11109-102        | 112               |
| 70104-08015-102        | 219               |
| 70150-09100-101        | 280               |
| 70205-06052-111        | 55                |
| 70205-06052-112        | 55                |
| 70205-06052-113        | 55                |
| 70205-06052- 115       | 144               |
| 70205-06052- 120       | 144               |
| 70205-06053-105        | 3                 |
| 70205-06053-106        | 3                 |
| 70207-02727-120        | 141               |
| 70207-02727-125        | 141               |
| 70209-02532-102        | 25                |
| 70209-02532-103        | 25                |
| 70209-02532-104        | 25                |
| 70209-02532-105        | 91                |
| 70209-02532-106        | 91                |
| 70209-02532-107        | 91                |
| 70209-02532-110        | 91                |
| 70209-02532-111        | 91                |
| 70209-02532-112        | 91                |



**PART NUMBER INDEX** - Continued**Table 1. Part Number Index. - Continued**

| <b>PART NUMBER</b> | <b>FIGURE NO.</b> |
|--------------------|-------------------|
| 70209-02532-113    | 91                |
| 70209-03018-110    | 25                |
| 70209-03018-111    | 25                |
| 70209-03018-121    | 25                |
| 70209-03018-122    | 25                |
| 70211-02104-138    | 146               |
| 70211-02104-139    | 146               |
| 70212-02137-145    | 27                |
| 70212-02139-106    | 132               |
| 70212-02139-108    | 26                |
| 70212-05004-118    | 1                 |
| 70213-03008-042    | 1                 |
| 70214-02556-110    | 60                |
| 70214-02556-111    | 25                |
| 70214-02556-112    | 25                |
| 70214-02556-113    | 60                |
| 70214-02556-116    | 25                |
| 70215-02312-102    | 95                |
| 70215-02312-104    | 32                |
| 70215-02312-105    | 32                |
| 70215-02312-106    | 70                |
| 70215-02312-119    | 100               |
| 70215-02531-102    | 101               |
| 70215-02531-105    | 101               |

**PART NUMBER INDEX** - Continued**Table 1. Part Number Index. - Continued**

| <b>PART NUMBER</b> | <b>FIGURE NO.</b> |
|--------------------|-------------------|
| 70215-02531-106    | 101               |
| 70215-05002-117    | 1                 |
| 70215-05002-118    | 1                 |
| 70215-05002-119    | 1                 |
| 70215-05002-120    | 1                 |
| 70215-05002-128    | 2                 |
| 70215-05002-129    | 2                 |
| 70215-05002-131    | 141               |
| 70215-42409-114    | 1                 |
| 70215-42409-115    | 1                 |
| 70216-01000-107    | 170               |
| 70216-01007-117    | 94                |
| 70216-01007-118    | 94                |
| 70216-01007-158    | 94                |
| 70216-01007-174    | 94                |
| 70216-02401-104    | 30                |
| 70216-02401-107    | 8                 |
| 70216-02401-126    | 32                |
| 70216-02402-110    | 30                |
| 70216-02402-122    | 35                |
| 70216-02402-124    | 8                 |
| 70216-02402-129    | 32                |
| 70216-02402-139    | 34                |
| 70216-02402-150    | 35                |

**PART NUMBER INDEX** - Continued**Table 1. Part Number Index. - Continued**

| <b>PART NUMBER</b> | <b>FIGURE NO.</b> |
|--------------------|-------------------|
| 70216-02402-158    | 35                |
| 70216-02402-159    | 35                |
| 70216-02402-160    | 35                |
| 70216-02402-163    | 35                |
| 70216-02402-164    | 35                |
| 70216-02402-166    | 35                |
| 70216-02402-167    | 35                |
| 70216-02407-123    | 257               |
| 70217-01000-114    | 111               |
| 70217-01003-151    | 86                |
| 70217-01003-158    | 32                |
| 70217-01003-159    | 32                |
| 70217-01003-160    | 32                |
| 70217-01003-161    | 32                |
| 70217-01003-177    | 63                |
| 70217-01003-178    | 63                |
| 70217-01003-194    | 40                |
| 70217-01010-101    | 62                |
| 70217-01010-108    | 62                |
| 70217-01010-110    | 98                |
| 70217-01010-111    | 97                |
| 70217-01010-113    | 62                |
| 70217-02701-101    | 30                |
| 70217-02701-107    | 30                |

**PART NUMBER INDEX** - Continued**Table 1. Part Number Index. - Continued**

| <b>PART NUMBER</b> | <b>FIGURE NO.</b> |
|--------------------|-------------------|
| 70217-02701-113    | 85                |
| 70217-02705-107    | 32                |
| 70217-02705-108    | 96                |
| 70217-02705-112    | 96                |
| 70217-02705-115    | 96                |
| 70217-02708-051    | 140               |
| 70217-02721-109    | 76                |
| 70217-02721-110    | 76                |
| 70217-02721-111    | 76                |
| 70217-02721-116    | 76                |
| 70217-02721-117    | 76                |
| 70217-02721-123    | 76                |
| 70217-02721-132    | 76                |
| 70217-02721-133    | 76                |
| 70217-02721-140    | 76                |
| 70217-02721-141    | 76                |
| 70217-02721-143    | 76                |
| 70217-02721-147    | 76                |
| 70217-02721-148    | 76                |
| 70217-02721-151    | 76                |
| 70217-02721-154    | 76                |
| 70217-03001-108    | 76                |
| 70217-03001-109    | 1                 |
| 70217-03002-111    | 1                 |

**PART NUMBER INDEX** - Continued**Table 1. Part Number Index. - Continued**

| <b>PART NUMBER</b> | <b>FIGURE NO.</b> |
|--------------------|-------------------|
| 70217-03002-112    | 1                 |
| 70217-03006-113    | 1                 |
| 70217-03006-114    | 1                 |
| 70219-02114-109    | 103               |
| 70219-02114-110    | 103               |
| 70219-02315-105    | 6                 |
| 70219-02315-106    | 6                 |
| 70219-03002-113    | 21                |
| 70219-03002-116    | 21                |
| 70219-03002-117    | 21                |
| 70219-03002-118    | 21                |
| 70219-03002-132    | 21                |
| 70219-03002-135    | 21                |
| 70219-03002-138    | 21                |
| 70219-03002-139    | 21                |
| 70219-04200-135    | 30                |
| 70219-04500-102    | 28                |
| 70219-04500-103    | 28                |
| 70219-04500-104    | 28                |
| 70219-04704-105    | 57                |
| 70219-04704-106    | 28                |
| 70219-04704-107    | 28                |
| 70219-04704-108    | 28                |
| 70219-04704-111    | 28                |

**PART NUMBER INDEX** - Continued**Table 1. Part Number Index. - Continued**

| <b>PART NUMBER</b> | <b>FIGURE NO.</b> |
|--------------------|-------------------|
| 70219-04802-117    | 3                 |
| 70219-06000-101    | 200               |
| 70219-06000-102    | 200               |
| 70219-06000-103    | 199               |
| 70219-06000-104    | 199               |
| 70219-06000-105    | 199               |
| 70219-06000-106    | 199               |
| 70219-06000-107    | 199               |
| 70219-06000-108    | 199               |
| 70219-06000-109    | 200               |
| 70219-06000-110    | 199               |
| 70219-06000-111    | 199               |
| 70219-06000-112    | 199               |
| 70250-13004-101    | 176               |
| 70302-02142-104    | 8                 |
| 70302-02142-108    | 8                 |
| 70302-02142-110    | 107               |
| 70302-10013-108    | 65                |
| 70302-10013-109    | 65                |
| 70302-10013-110    | 65                |
| 70302-10013-111    | 65                |
| 70302-10013-118    | 65                |
| 70302-10013-133    | 65                |
| 70302-10013-134    | 65                |

**PART NUMBER INDEX** - Continued**Table 1. Part Number Index. - Continued**

| <b>PART NUMBER</b> | <b>FIGURE NO.</b> |
|--------------------|-------------------|
| 70302-10013-135    | 65                |
| 70302-10013-136    | 65                |
| 70302-10013-137    | 65                |
| 70302-10019-101    | 105               |
| 70302-10019-102    | 105               |
| 70302-10019-103    | 105               |
| 70302-10019-104    | 105               |
| 70302-10019-105    | 105               |
| 70303-03023-105    | 22                |
| 70303-03023-106    | 22                |
| 70303-03023-109    | 22                |
| 70303-03023-113    | 22                |
| 70303-03201-106    | 180               |
| 70308-03010-105    | 115               |
| 70308-03502-041    | 3                 |
| 70308-03504-111    | 1                 |
| 70308-03504-112    | 1                 |
| 70308-03602-109    | 91                |
| 70400-00510-101    | 23                |
| 70400-00510-102    | 23                |
| 70400-06661-104    | 196               |
| 70500-01053-113    | 101               |
| 70500-02053-116    | 118               |
| 70500-02053-117    | 114               |

**PART NUMBER INDEX** - Continued**Table 1. Part Number Index. - Continued**

| <b>PART NUMBER</b> | <b>FIGURE NO.</b> |
|--------------------|-------------------|
| 70500-02053-118    | 114               |
| 70500-02053-119    | 32                |
| 70500-02053-120    | 32                |
| 70500-02053-121    | 32                |
| 70500-02053-122    | 32                |
| 70500-02053-123    | 32                |
| 70500-02054-104    | 73                |
| 70500-02057-102    | 31                |
| 70500-02057-159    | 36                |
| 70500-02057-160    | 36                |
| 70500-02058-123    | 37                |
| 70500-02058-150    | 42                |
| 70500-02058-151    | 42                |
| 70500-02058-161    | 42                |
| 70500-02058-167    | 119               |
| 70500-02059-155    | 116               |
| 70500-02059-160    | 116               |
| 70500-02060-120    | 19                |
| 70500-02060-121    | 19                |
| 70500-02060-124    | 58                |
| 70500-02060-130    | 118               |
| 70500-02060-143    | 122               |
| 70500-02060-145    | 122               |
| 70500-02060-192    | 122               |



**PART NUMBER INDEX** - Continued**Table 1. Part Number Index. - Continued**

| <b>PART NUMBER</b> | <b>FIGURE NO.</b> |
|--------------------|-------------------|
| 70500-02060-193    | 122               |
| 70500-02060-202    | 68                |
| 70500-02060-205    | 68                |
| 70500-02060-206    | 68                |
| 70500-02060-207    | 122               |
| 70500-02060-208    | 122               |
| 70500-02060-222    | 68                |
| 70500-02060-223    | 68                |
| 70500-02061-121    | 16                |
| 70500-02061-122    | 16                |
| 70500-02061-123    | 16                |
| 70500-02061-124    | 16                |
| 70500-02061-125    | 32                |
| 70500-02061-126    | 32                |
| 70500-02061-127    | 32                |
| 70500-02061-128    | 32                |
| 70500-02061-129    | 32                |
| 70500-02062-107    | 19                |
| 70500-02062-124    | 16                |
| 70500-02062-125    | 32                |
| 70500-02062-126    | 32                |
| 70500-02062-136    | 69                |
| 70500-02062-137    | 19                |
| 70500-02062-146    | 19                |

**PART NUMBER INDEX** - Continued**Table 1. Part Number Index. - Continued**

| <b>PART NUMBER</b> | <b>FIGURE NO.</b> |
|--------------------|-------------------|
| 70500-02062-150    | 69                |
| 70500-02063-123    | 61                |
| 70500-02063-124    | 32                |
| 70500-02063-125    | 32                |
| 70500-02063-126    | 32                |
| 70500-02063-149    | 19                |
| 70500-02063-151    | 99                |
| 70500-02063-152    | 32                |
| 70500-02063-153    | 32                |
| 70500-02063-179    | 19                |
| 70500-02063-184    | 19                |
| 70500-02063-211    | 32                |
| 70500-02063-212    | 32                |
| 70500-02063-213    | 32                |
| 70500-02063-214    | 32                |
| 70500-02063-215    | 32                |
| 70500-02063-216    | 32                |
| 70500-02063-217    | 32                |
| 70500-02063-218    | 32                |
| 70500-02063-219    | 32                |
| 70500-02063-220    | 32                |
| 70500-02063-221    | 32                |
| 70500-02063-222    | 32                |
| 70500-02064-135    | 32                |

**PART NUMBER INDEX** - Continued**Table 1. Part Number Index. - Continued**

| <b>PART NUMBER</b> | <b>FIGURE NO.</b> |
|--------------------|-------------------|
| 70500-02064-136    | 19                |
| 70500-02064-142    | 32                |
| 70500-02064-143    | 32                |
| 70500-02064-210    | 32                |
| 70500-02064-211    | 32                |
| 70500-02064-212    | 32                |
| 70500-02064-213    | 32                |
| 70500-02064-214    | 32                |
| 70500-02064-215    | 32                |
| 70500-02064-216    | 32                |
| 70500-02064-217    | 32                |
| 70500-02064-221    | 32                |
| 70500-02065-103    | 82                |
| 70500-02066-124    | 130               |
| 70500-02066-131    | 132               |
| 70500-02066-132    | 132               |
| 70500-02066-133    | 132               |
| 70500-02066-134    | 132               |
| 70500-02066-135    | 132               |
| 70500-02066-136    | 132               |
| 70500-02066-137    | 130               |
| 70500-02066-138    | 130               |
| 70500-02066-139    | 132               |
| 70500-02066-140    | 132               |

**PART NUMBER INDEX** - Continued**Table 1. Part Number Index. - Continued**

| <b>PART NUMBER</b> | <b>FIGURE NO.</b> |
|--------------------|-------------------|
| 70500-02066-141    | 130               |
| 70500-02066-142    | 132               |
| 70500-02066-143    | 130               |
| 70500-02066-144    | 132               |
| 70500-02066-145    | 130               |
| 70500-02066-146    | 132               |
| 70500-02066-147    | 130               |
| 70500-02066-148    | 130               |
| 70500-02066-149    | 130               |
| 70500-02066-150    | 132               |
| 70500-02066-151    | 131               |
| 70500-02066-152    | 132               |
| 70500-02066-153    | 132               |
| 70500-02066-154    | 132               |
| 70500-02066-155    | 130               |
| 70500-02066-156    | 130               |
| 70500-02066-157    | 132               |
| 70500-02066-158    | 132               |
| 70500-02066-159    | 132               |
| 70500-02066-160    | 132               |
| 70500-02066-161    | 132               |
| 70500-02066-162    | 132               |
| 70500-02066-163    | 132               |
| 70500-02066-164    | 132               |

**PART NUMBER INDEX** - Continued**Table 1. Part Number Index. - Continued**

| <b>PART NUMBER</b> | <b>FIGURE NO.</b> |
|--------------------|-------------------|
| 70500-02066-165    | 130               |
| 70500-02066-166    | 130               |
| 70500-02066-167    | 130               |
| 70500-02066-168    | 130               |
| 70500-02066-169    | 130               |
| 70500-02066-170    | 130               |
| 70500-02066-171    | 132               |
| 70500-02066-172    | 132               |
| 70500-02066-173    | 132               |
| 70500-02066-174    | 132               |
| 70500-02066-175    | 132               |
| 70500-02066-176    | 132               |
| 70500-02066-177    | 130               |
| 70500-02066-178    | 130               |
| 70500-02066-179    | 130               |
| 70500-02066-180    | 130               |
| 70500-02066-181    | 130               |
| 70500-02066-182    | 130               |
| 70500-02066-201    | 132               |
| 70500-02066-202    | 132               |
| 70500-02066-203    | 132               |
| 70500-02066-204    | 132               |
| 70500-02066-205    | 132               |
| 70500-02066-206    | 132               |

**PART NUMBER INDEX** - Continued**Table 1. Part Number Index. - Continued**

| <b>PART NUMBER</b> | <b>FIGURE NO.</b> |
|--------------------|-------------------|
| 70500-02066-207    | 132               |
| 70500-02066-208    | 132               |
| 70500-02066-209    | 132               |
| 70500-02066-210    | 132               |
| 70500-02066-211    | 132               |
| 70500-02066-212    | 132               |
| 70500-02066-213    | 132               |
| 70500-02066-214    | 130               |
| 70500-02066-215    | 132               |
| 70500-02066-216    | 132               |
| 70500-02066-217    | 132               |
| 70500-02066-218    | 130               |
| 70500-02066-219    | 130               |
| 70500-02066-220    | 130               |
| 70500-02066-221    | 130               |
| 70500-02066-222    | 132               |
| 70500-02066-223    | 130               |
| 70500-02066-224    | 132               |
| 70500-02066-225    | 130               |
| 70500-02066-226    | 130               |
| 70500-02066-227    | 130               |
| 70500-02066-228    | 130               |
| 70500-02066-229    | 129               |
| 70500-02066-230    | 130               |

**PART NUMBER INDEX** - Continued**Table 1. Part Number Index. - Continued**

| <b>PART NUMBER</b> | <b>FIGURE NO.</b> |
|--------------------|-------------------|
| 70500-02066-231    | 132               |
| 70500-02066-232    | 132               |
| 70500-02066-233    | 130               |
| 70500-02066-234    | 130               |
| 70500-02066-235    | 130               |
| 70500-02066-236    | 132               |
| 70500-02066-237    | 132               |
| 70500-02066-238    | 130               |
| 70500-02066-239    | 130               |
| 70500-02066-240    | 132               |
| 70500-02066-242    | 132               |
| 70500-02066-243    | 130               |
| 70500-02066-244    | 130               |
| 70500-02066-245    | 130               |
| 70500-02066-248    | 130               |
| 70500-02066-249    | 132               |
| 70500-02066-250    | 132               |
| 70500-02066-251    | 132               |
| 70500-02066-252    | 132               |
| 70500-02066-253    | 132               |
| 70500-02066-254    | 131               |
| 70500-02066-255    | 132               |
| 70500-02066-256    | 132               |
| 70500-02066-257    | 132               |

**PART NUMBER INDEX** - Continued**Table 1. Part Number Index. - Continued**

| <b>PART NUMBER</b> | <b>FIGURE NO.</b> |
|--------------------|-------------------|
| 70500-02066-258    | 130               |
| 70500-02066-259    | 132               |
| 70500-02066-260    | 132               |
| 70500-02066-261    | 132               |
| 70500-02066-262    | 132               |
| 70500-02066-263    | 130               |
| 70500-02066-264    | 132               |
| 70500-02066-265    | 130               |
| 70500-02066-266    | 130               |
| 70500-02066-267    | 130               |
| 70500-02066-268    | 132               |
| 70500-02066-269    | 132               |
| 70500-02066-270    | 132               |
| 70500-02066-271    | 132               |
| 70500-02066-272    | 130               |
| 70500-02066-273    | 132               |
| 70500-02066-274    | 130               |
| 70500-02066-275    | 130               |
| 70500-02066-276    | 130               |
| 70500-02066-277    | 130               |
| 70500-02066-278    | 132               |
| 70500-02066-279    | 132               |
| 70500-02066-280    | 132               |
| 70500-02066-281    | 132               |



**PART NUMBER INDEX** - Continued**Table 1. Part Number Index. - Continued**

| <b>PART NUMBER</b> | <b>FIGURE NO.</b> |
|--------------------|-------------------|
| 70500-02066-282    | 132               |
| 70500-02066-283    | 131               |
| 70500-02066-284    | 132               |
| 70500-02066-285    | 132               |
| 70500-02066-286    | 132               |
| 70500-02066-287    | 132               |
| 70500-02066-288    | 132               |
| 70500-02066-289    | 132               |
| 70500-02066-290    | 131               |
| 70500-02066-291    | 132               |
| 70500-02066-292    | 132               |
| 70500-02066-293    | 132               |
| 70500-02066-294    | 132               |
| 70500-02066-295    | 132               |
| 70500-02066-296    | 130               |
| 70500-02066-297    | 130               |
| 70500-02066-298    | 130               |
| 70500-02066-300    | 132               |
| 70500-02066-301    | 132               |
| 70500-02066-302    | 132               |
| 70500-02068-109    | 104               |
| 70500-02068-118    | 71                |
| 70500-02068-121    | 104               |
| 70500-02068-123    | 83                |

**PART NUMBER INDEX** - Continued**Table 1. Part Number Index. - Continued**

| <b>PART NUMBER</b> | <b>FIGURE NO.</b> |
|--------------------|-------------------|
| 70500-02068-124    | 104               |
| 70500-02070-109    | 74                |
| 70500-02070-111    | 74                |
| 70500-02070-149    | 108               |
| 70500-02071-109    | 95                |
| 70500-02071-110    | 95                |
| 70500-02071-111    | 75                |
| 70500-02072-107    | 77                |
| 70500-02072-108    | 77                |
| 70500-02073-101    | 89                |
| 70500-02073-106    | 106               |
| 70500-02073-107    | 106               |
| 70500-02073-108    | 106               |
| 70500-02076-101    | 109               |
| 70500-03050-108    | 67                |
| 70500-03050-113    | 66                |
| 70500-03050-114    | 66                |
| 70500-03050-115    | 66                |
| 70500-03050-130    | 121               |
| 70500-03050-151    | 121               |
| 70500-03050-153    | 67                |
| 70500-03050-154    | 66                |
| 70500-03050-165    | 15                |
| 70550-01125-108    | 1                 |

**PART NUMBER INDEX** - Continued**Table 1. Part Number Index. - Continued**

| <b>PART NUMBER</b> | <b>FIGURE NO.</b> |
|--------------------|-------------------|
| 70550-01126-106    | 3                 |
| 70550-01126-107    | 3                 |
| 70550-02151-101    | 78                |
| 70550-02151-102    | 78                |
| 70551-07000-103    | 84                |
| 70651-03102-180    | 38                |
| 70651-03102-181    | 38                |
| 70651-03102-182    | 38                |
| 70652-02251-170    | 38                |
| 70652-02251-171    | 38                |
| 70652-02251-172    | 38                |
| 70652-02251-174    | 38                |
| 70652-02251-175    | 38                |
| 70652-02251-177    | 38                |
| 70652-02251-178    | 38                |
| 70652-02251-179    | 38                |
| 70652-02251-180    | 38                |
| 70652-03250-011    | 41                |
| 70652-03250-012    | 41                |
| 70652-03250-013    | 41                |
| 70652-03250-014    | 41                |
| 70652-03250-015    | 41                |
| 70652-03252-143    | 41                |
| 70652-03252-146    | 41                |

**PART NUMBER INDEX** - Continued**Table 1. Part Number Index. - Continued**

| <b>PART NUMBER</b> | <b>FIGURE NO.</b> |
|--------------------|-------------------|
| 70652-03252-149    | 41                |
| 70652-03252-153    | 41                |
| 70652-03252-158    | 41                |
| 70652-03252-159    | 41                |
| 70700-03252-160    | 41                |
| 70700-03252-161    | 41                |
| 70652-05251-143    | 41                |
| 70652-05251-149    | 41                |
| 70700-20014-110    | 125               |
| 70700-20313-104    | 110               |
| 70700-20313-105    | 110               |
| 70700-20313-106    | 81                |
| 70700-20313-107    | 81                |
| 70700-20313-108    | 81                |
| 70700-20313-118    | 124               |
| 70700-20313-119    | 124               |
| 70700-20324-105    | 90                |
| 70700-20325-101    | 120               |
| 70700-20325-102    | 120               |
| 70700-20325-103    | 120               |
| 70700-20325-104    | 120               |
| 70700-20325-105    | 120               |
| 70700-20325-106    | 120               |
| 70700-20325-107    | 120               |

**PART NUMBER INDEX** - Continued**Table 1. Part Number Index. - Continued**

| <b>PART NUMBER</b> | <b>FIGURE NO.</b> |
|--------------------|-------------------|
| 70700-20325-108    | 120               |
| 70700-20369-102    | 29                |
| 70700-20395-041    | 194               |
| 70700-20395-107    | 79                |
| 70700-20395-108    | 79                |
| 70700-20403-041    | 260               |
| 70700-20420-116    | 80                |
| 70700-20426-118    | 117               |
| 70700-20460-103    | 29                |
| 70700-20507-104    | 29                |
| 70700-20507-105    | 87                |
| 70700-20508-102    | 29                |
| 70700-20509-103    | 29                |
| 70700-20509-104    | 24                |
| 70700-20511-106    | 33                |
| 70700-20511-107    | 33                |
| 70700-20511-108    | 33                |
| 70700-20511-109    | 33                |
| 70700-20511-110    | 33                |
| 70700-20511-111    | 33                |
| 70700-20511-112    | 33                |
| 70700-20511-113    | 33                |
| 70700-20511-114    | 33                |
| 70700-20511-115    | 33                |

**PART NUMBER INDEX** - Continued**Table 1. Part Number Index. - Continued**

| <b>PART NUMBER</b> | <b>FIGURE NO.</b> |
|--------------------|-------------------|
| 70700-20511-116    | 33                |
| 70700-20511-117    | 33                |
| 70700-20511-118    | 33                |
| 70700-20511-119    | 38                |
| 70700-20511-121    | 38                |
| 70700-20512-103    | 29                |
| 70700-20512-106    | 29                |
| 70700-20514-103    | 29                |
| 70700-20515-102    | 29                |
| 70700-20515-104    | 29                |
| 70700-20677-102    | 113               |
| 70700-20677-103    | 113               |
| 70700-20680-108    | 20                |
| 70700-25450-041    | 274               |
| 70700-50005-108    | 53                |
| 70700-50005-111    | 53                |
| 70700-50005-112    | 54                |
| 70700-50005-113    | 54                |
| 70700-50005-119    | 54                |
| 76122-82279-003    | 30                |

**ALPHABETICAL INDEX**

The alphabetical index lists all items in alphabetical order with a cross-reference to the figure in which the item appears.

**ALPHABETICAL INDEX** - Continued**Table 2. Alphabetical Index.**

| <b>NOMENCLATURE</b>                                   | <b>FIGURE NO.</b> | <b>WORK PACKAGE REFERENCE</b> |
|-------------------------------------------------------|-------------------|-------------------------------|
| ACCELEROMETER<br>MOUNT PLATE                          | 250               |                               |
| A.F.C.S SCREEN<br>COVER                               | 218               | WP 1743 00                    |
| AFT BULKHEAD SEAL                                     | 15                |                               |
| ALIGNMENT BAR<br>AND BRACKET                          | 267               | WP 0690 00                    |
| AUXILIARY CABIN<br>HEATER JUMPER<br>PLUG              | 158               | WP 0168 00                    |
| AUXILIARY POWER<br>UNIT FIREWALL SEAL                 | 22                |                               |
| BACKING STRIP                                         | 130               | WP 0521 00                    |
| BATTERY BOX COVER<br>SEALS                            | 92                |                               |
| BATTERY SENSOR<br>RELAY TESTER                        | 258               |                               |
| BATTERY TEST CELL                                     | 238               |                               |
| BATTERY TEST VENT<br>CAP AND TEE                      | 239               |                               |
| BEADED TUBE                                           | 93                |                               |
| BIFILAR BUSHINGS<br>REPLACEMENT<br>TOOLS              | 213               | WP 0602 00 and WP 0603 00     |
| BLACKOUT CURTAIN<br>COVER                             | 128               |                               |
| BLADE/SPINDLE CUFF<br>BUSHING INSTALLA-<br>TION TOOLS | 161               | WP 0595 00 and WP 0605 00     |
| BLADE DEICE TEST<br>BLOCK                             | 148               | WP 0146 00                    |
| BLADE DEICE TEST<br>HARNESS                           | 147               |                               |

## ALPHABETICAL INDEX - Continued

Table 2. Alphabetical Index. - Continued

| NOMENCLATURE                                                 | FIGURE NO. | WORK PACKAGE REFERENCE |
|--------------------------------------------------------------|------------|------------------------|
| BLADE DEICE TEST SET                                         | 155        | WP 0149 00             |
| BLANKET ASSEMBLY TAB                                         | 121        |                        |
| BOOST PUMP CONTROL PANEL, TEST HARNESS                       | 153        |                        |
| BOOT SUPPORT LOCATOR                                         | 256        | WP 0612 00             |
| BREECH CAP PLUG ASSEMBLY WRENCH AND GO-NO-GO BREECH CAP GAGE | 135        | WP 1645 00             |
| BRACKET ANGLE                                                | 233        |                        |
| CARGO DOOR JET-TISON WINDOW SEALS                            | 96         |                        |
| CABIN DUCT SEAL                                              | 31         |                        |
| CARGO DOOR SEAL                                              | 76         | WP 0248 00             |
| CARGO HOOK ACCESS SEAL                                       | 60         | WP 0264 00             |
| CARGO HOOK BUSHING INSTALLATION BLOCK                        | 194        | WP 1805 00             |
| CAUTION ADVISORY TEST ADAPTER                                | 53         | WP 0098 00             |
| CELL PULLER                                                  | 47         |                        |
| CEILING CENTER PANEL FLAP                                    | 16         |                        |
| CEILING DRIP PAN SEAL                                        | 68         |                        |
| CEILING PANEL GASKET                                         | 69         |                        |
| CEILING PANEL SEAL                                           | 77         |                        |



**ALPHABETICAL INDEX** - Continued**Table 2. Alphabetical Index. - Continued**

| <b>NOMENCLATURE</b>                       | <b>FIGURE NO.</b> | <b>WORK PACKAGE REFERENCE</b> |
|-------------------------------------------|-------------------|-------------------------------|
| CEILING PANEL STRAP                       | 99                |                               |
| CEILING PANEL TUBE                        | 61                |                               |
| CHAFF/FLARE DISPENSER COVER               | 214               |                               |
| CHAFING STRIP                             | 57                | WP 0305 00                    |
| CHAIN ASSEMBLY TUBING                     | 133               |                               |
| CHECKING SHIM                             | 112               | WP 0586 00                    |
| CLIP                                      | 63                |                               |
| CLIP                                      | 184               |                               |
| COCKPIT DOOR JAMB SEALS                   | 123               |                               |
| COLLECTIVE BOOST ACTUATOR "F" RIGGING PIN | 276               | WP 1034 00                    |
| CONTROLS ENCLOSURE FLAP                   | 114               |                               |
| CONTROLS ENCLOSURE SUPPORT                | 118               |                               |
| CORD ASSEMBLY                             | 9                 |                               |
| COVER SEAL                                | 73                |                               |
| CREW CHIEF'S WINDOW BRUSH SEAL            | 240               |                               |
| CREW CHIEF'S WINDOW SEAL                  | 241               |                               |
| CREW CHIEF'S WINDOW SEAL                  | 242               |                               |
| CREW CHIEF'S WINDOW LATCH SEAL            | 243               |                               |

## ALPHABETICAL INDEX - Continued

Table 2. Alphabetical Index. - Continued

| NOMENCLATURE                                     | FIGURE NO. | WORK PACKAGE REFERENCE                 |
|--------------------------------------------------|------------|----------------------------------------|
| CREW DOOR DOUBLER                                | 86         |                                        |
| CURTAIN TAB                                      | 125        |                                        |
| CURTAIN TAB                                      | 127        |                                        |
| CUSHION                                          | 90         |                                        |
| DAMPER BLEED UNIT                                | 174        |                                        |
| DAMPER INDICATOR CRADLE                          | 164        |                                        |
| DAMPER INDICATOR HANDLE RETAINER                 | 215        | WP 1610 00                             |
| DAMPER INDICATOR DISASSEMBLY TOOL                | 237        |                                        |
| DAMPER INDICATOR INSERTION TOOL                  | 165        |                                        |
| DAMPER INDICATOR INSTALLATION TOOL               | 166        |                                        |
| DEFUEL ADAPTER                                   | 163        | WP 1620 00                             |
| DISPENSER TEST CABLE                             | 175        | WP 0165 00                             |
| DOUBLER                                          | 111        |                                        |
| DRAG BEAM FUSELAGE SUPPORT FITTING BEARING DRIFT | 178        | WP 0442 00                             |
| DRAG BEAM WEDGE                                  | 167        | WP 0162 00, WP 0164 00, and WP 0165 00 |
| DRAG LINK ADJUSTING TOOL                         | 162        | WP 0233 00                             |
| DRAIN PAN SEAL                                   | 108        |                                        |
| DRAIN TUBE                                       | 106        |                                        |
| DRAIN TUBE                                       | 109        |                                        |

**ALPHABETICAL INDEX** - Continued**Table 2. Alphabetical Index. - Continued**

| <b>NOMENCLATURE</b>                                      | <b>FIGURE NO.</b> | <b>WORK PACKAGE REFERENCE</b> |
|----------------------------------------------------------|-------------------|-------------------------------|
| DRIP PAN CABLE ASSEMBLY                                  | 173               |                               |
| DRIP PAN SEAL                                            | 74                |                               |
| DRIP PAN SEAL                                            | 75                |                               |
| DRIP PAN SEAL                                            | 122               |                               |
| DRIP PAN SEAL                                            | 236               |                               |
| DRIP PAN TUBE                                            | 89                |                               |
| DROOP STOP NUT<br>WRENCH                                 | 168               | WP 0555 00                    |
| DUCT INSTALLATION<br>GASKET                              | 36                |                               |
| DUCT INSTALLATION<br>SEAL                                | 37                |                               |
| DUCT INSTALLATION<br>SEAL                                | 42                |                               |
| DUCT INSTALLATION<br>SEAL                                | 102               |                               |
| EDGING                                                   | 4                 |                               |
| EDGING SEAL                                              | 101               |                               |
| ELASTIC CORD                                             | 39                |                               |
| ELASTOMERIC ROD<br>END BEARING<br>PLASTIC FEELER<br>GAGE | 232               | WP 0539 00 and WP 0546 00     |
| ELECTRICAL WIRE                                          | 59                |                               |
| ELECTRICAL WIRE                                          | 5                 |                               |
| ELECTRICAL WIRE                                          | 78                |                               |
| ELECTROLYTE LEVEL<br>CHECKER                             | 245               |                               |

## ALPHABETICAL INDEX - Continued

Table 2. Alphabetical Index. - Continued

| NOMENCLATURE                                         | FIGURE NO. | WORK PACKAGE REFERENCE |
|------------------------------------------------------|------------|------------------------|
| ELECTROLYTE<br>REMOVAL TOOL                          | 244        |                        |
| ENGINE AIR INLET<br>SEAL                             | 105        |                        |
| ESSS GATE VALVE<br>TEST HARNESS                      | 156        | WP 0160 00             |
| ESSS WRENCH                                          | 138        |                        |
| ENGINE FAIRING<br>SEAL                               | 107        |                        |
| ENGINE INLET FIRE-<br>WALL SEAL                      | 65         | WP 0521 00             |
| EXHAUST FAIRING<br>BULKHEAD SEAL                     | 115        | WP 0523 00             |
| FEELER GAGE                                          | 235        |                        |
| FLANGE PULLER                                        | 50         | WP 0655 00             |
| FLIGHT CONTROL<br>QUICK DISCONNECT<br>WRENCH         | 48         | WP 1681 00             |
| FOIL PANEL SQUARE<br>OR RECTANGULAR<br>CONFIGURATION | 129        |                        |
| FOIL PANEL UNUSUAL<br>CONFIGURATION                  | 131        |                        |
| FOIL TAPE                                            | 170        | WP 0226 00             |
| FORMER INSTALLA-<br>TION GASKET                      | 26         |                        |
| FRAME SHIM                                           | 146        | WP 1100 00             |
| FUEL CELL CAP PRES-<br>SURE TEST ADAPTER             | 212        | WP 0961 00             |
| FUEL CELL PRESSURE<br>TEST PLATE                     | 206        | WP 0960 00             |

**ALPHABETICAL INDEX** - Continued**Table 2. Alphabetical Index. - Continued**

| <b>NOMENCLATURE</b>                                | <b>FIGURE NO.</b> | <b>WORK PACKAGE REFERENCE</b> |
|----------------------------------------------------|-------------------|-------------------------------|
| FUEL FEED SYSTEM<br>TEST HOSE AS-<br>SEMBLY        | 229               | WP 1001 00                    |
| FUEL LINES AND<br>PUMP ENCLOSURE<br>SEAL           | 21                |                               |
| FUEL QUANTITY<br>SIMULATOR, TEST<br>SET            | 152               | WP 0160 00 and WP 0161 00     |
| GASKET                                             | 66                |                               |
| GASKET                                             | 277               |                               |
| GASKET TOP                                         | 116               |                               |
| GEAR BOX SHIM                                      | 199               |                               |
| GEAR BOX SPACER                                    | 200               | WP 0660 00 and WP 0682 00     |
| GRIP                                               | 79                |                               |
| GUNNER'S WINDOW<br>BRUSH SEAL                      | 183               | WP 0241 00, and WP 0242 00    |
| GUNNER'S WINDOW<br>CLEAR PLASTIC<br>SCREEN         | 231               |                               |
| GUNNER'S WINDOW<br>LATCH SEAL                      | 35                |                               |
| GUNNER'S WINDOW<br>SEAL                            | 34                |                               |
| GUNNER'S WINDOW<br>UPPER CHANNEL<br>INSERT/SUPPORT | 230               |                               |
| HAND HOLD FLAP<br>AND STRAP                        | 144               |                               |
| HEATER MAT RESIS-<br>TANCE TEST SET                | 261               |                               |
| HIGH-LOW GAGE                                      | 139               |                               |

## ALPHABETICAL INDEX - Continued

Table 2. Alphabetical Index. - Continued

| NOMENCLATURE                        | FIGURE NO. | WORK PACKAGE REFERENCE |
|-------------------------------------|------------|------------------------|
| HIGH-TEMPERATURE<br>ELECTRICAL WIRE | 13         |                        |
| HIGH-TEMPERATURE<br>ELECTRICAL WIRE | 17         |                        |
| HIGH-TEMPERATURE<br>ELECTRICAL WIRE | 126        |                        |
| HINGE                               | 1          |                        |
| HINGE                               | 3          |                        |
| HINGE HALF                          | 6          |                        |
| HINGE PIN                           | 2          |                        |
| HIRSS INLET DOOR<br>SEAL            | 91         |                        |
| HYDRAULIC DRAIN<br>TUBING           | 38         |                        |
| HYDRAULIC TUBING                    | 41         |                        |
| HYPODERMIC<br>SYRINGE               | 197        | WP 0380 00             |
| INFRARED LIGHT,<br>TEST SET         | 149        | WP 0112 00             |
| INSULATION                          | 18         |                        |
| INSULATION SLEEVE                   | 11         |                        |
| INSULATION SLEEVE                   | 64         |                        |
| INSULATION TUBING                   | 12         |                        |
| JETTISON HANDLE<br>GUARD            | 140        |                        |
| LANYARD                             | 279        |                        |
| LANYARD                             | 282        |                        |
| LOCATING TOOL                       | 43         | WP 0554 00             |

**ALPHABETICAL INDEX** - Continued**Table 2. Alphabetical Index. - Continued**

| <b>NOMENCLATURE</b>                                                     | <b>FIGURE NO.</b> | <b>WORK PACKAGE REFERENCE</b> |
|-------------------------------------------------------------------------|-------------------|-------------------------------|
| MAIN GEAR STRUT<br>WELL SEAL                                            | 95                |                               |
| MAIN LANDING GEAR<br>FAIRING BUMPER                                     | 100               |                               |
| MAIN LANDING GEAR<br>FAIRING SEAL                                       | 70                |                               |
| MAIN ROTOR BLADE<br>COVER                                               | 187               | WP 1677 00                    |
| MAIN ROTOR BLADE<br>HOLDER                                              | 193               | WP 1679 00                    |
| MAIN ROTOR BLADE<br>PATCH                                               | 280               |                               |
| MAIN ROTOR BLADE<br>SOLID PIN REMOVAL<br>TOOL                           | 274               | WP 0576 00                    |
| MAIN ROTOR BLADE<br>TIP TARGETS                                         | 251               |                               |
| MAIN ROTOR<br>DAMPER HOLDING<br>FIXTURE                                 | 223               |                               |
| MAIN ROTOR<br>DAMPER PISTON ROD<br>INSERTION TOOL                       | 225               |                               |
| MAIN ROTOR<br>DAMPER PISTON ROD<br>WRENCH                               | 226               |                               |
| MAIN ROTOR<br>DAMPER SEAL<br>EXPANSION TOOL                             | 224               |                               |
| MAIN ROTOR<br>DAMPER SLEEVE<br>BEARING<br>INSTALLATION/<br>REMOVAL TOOL | 222               |                               |
| MAIN ROTOR HEAD<br>COVER                                                | 189               | WP 1677 00                    |

## ALPHABETICAL INDEX - Continued

Table 2. Alphabetical Index. - Continued

| NOMENCLATURE                                             | FIGURE NO. | WORK PACKAGE REFERENCE                                |
|----------------------------------------------------------|------------|-------------------------------------------------------|
| MAIN ROTOR HUB<br>FLAT PLATE TOOL                        | 272        | WP 0548 00                                            |
| MAIN ROTOR SHAFT<br>IMPACT TOOL                          | 255        | WP 0548 00                                            |
| MAIN TRANSMISSION<br>OIL FILTER FLOW<br>VALVE POSITIONER | 264        | WP 0648 00                                            |
| MASTER BRAKE<br>CYLINDER TEST<br>STAND                   | 227        |                                                       |
| MAST COVER                                               | 192        | WP 1677 00                                            |
| MOUNTING BOLT<br>ADAPTER                                 | 46         | WP 0613 00 and WP 0631 00                             |
| M4 MOUNT CEILING<br>PANEL                                | 275        |                                                       |
| NOSE DOOR DRAIN<br>TUBE                                  | 62         |                                                       |
| NYLON WEBBING<br>STRAP                                   | 80         |                                                       |
| NYLON WEDGE                                              | 268        | WP 0651 00                                            |
| OIL COOLER COVER<br>ASSEMBLY                             | 33         |                                                       |
| OIL PUMP INSTALLA-<br>TION TOOL                          | 45         | WP 0649 00, WP 1185 00,<br>WP 1186 00, and WP 1187 00 |
| OUTPUT DRIVE<br>SHAFT PULLER (A)                         | 216        | WP 0483 00 and WP 0487 00                             |
| OUTPUT DRIVE<br>SHAFT PULLER (B)                         | 265        | WP 0487 00                                            |
| PAD                                                      | 81         |                                                       |
| PANEL FASTENER<br>STRIP                                  | 10         |                                                       |
| PATCH ASSEMBLY                                           | 191        |                                                       |



**ALPHABETICAL INDEX** - Continued**Table 2. Alphabetical Index. - Continued**

| <b>NOMENCLATURE</b>                        | <b>FIGURE NO.</b> | <b>WORK PACKAGE REFERENCE</b> |
|--------------------------------------------|-------------------|-------------------------------|
| PISTON GUIDE<br>REMOVAL TOOL               | 136               | WP 1460 00                    |
| PISTON PLUG<br>REMOVAL TOOL                | 137               | WP 1460 00                    |
| PITCH BEAM/HORN<br>BUSHING SIZING<br>BLOCK | 228               | WP 0606 00                    |
| PITCH CONTROL LINK<br>TOOL                 | 259               | WP 0564 00                    |
| PITOT-STATIC TEST<br>SET                   | 49                | WP 0088 00                    |
| PIVOT BEARING<br>REPLACEMENT<br>WRENCH     | 51                | WP 0609 00 and WP 0611 00     |
| PLATE                                      | 24                |                               |
| PLUMB BOB ALIGN-<br>MENT TOOL              | 270               | WP 1686 00                    |
| PLYWOOD FRAME                              | 110               |                               |
| PNEUMATIC ADAPTER<br>(ESSS)                | 151               |                               |
| POLYHINGE                                  | 19                |                               |
| POSITIONER TOOL                            | 260               | WP 0648 00                    |
| PULL HANDLE                                | 281               |                               |
| PUSHER TUBE                                | 172               | WP 0710 00                    |
| PYLON DOOR CHAF-<br>ING STRIP              | 28                | WP 0305 00                    |
| RECOVERY KIT<br>SPREADER BAR               | 177               |                               |
| ROPE, PLUG HANDLE                          | 29                |                               |
| ROTARY INPUT BEAR-<br>ING REMOVAL TUBE     | 211               | WP 0525 00                    |

## ALPHABETICAL INDEX - Continued

Table 2. Alphabetical Index. - Continued

| NOMENCLATURE                                                    | FIGURE NO. | WORK PACKAGE REFERENCE                                         |
|-----------------------------------------------------------------|------------|----------------------------------------------------------------|
| RUBBER EDGING                                                   | 88         |                                                                |
| SEARCHLIGHT TEST STAND                                          | 252        | WP 0960 00                                                     |
| SEARCHLIGHT SPANNER WRENCH                                      | 253        |                                                                |
| SAFETY CHAIN                                                    | 134        |                                                                |
| SEAL                                                            | 8          |                                                                |
| SEAL                                                            | 55         |                                                                |
| SEAL                                                            | 67         |                                                                |
| SEAL                                                            | 85         |                                                                |
| SEAL, FIREWALL                                                  | 180        |                                                                |
| SEAL INSTALLATION TOOL                                          | 157        | WP 0633 00, WP 0655 00, WP 0661 00, WP 0662 00, and WP 0683 00 |
| SEAL PULLER                                                     | 160        | WP 0633 00, WP 0661 00, WP 0662 00, WP 0683 00, and WP 0684 00 |
| SEAL RETAINER STRIP                                             | 14         |                                                                |
| SEAL SPLICE                                                     | 98         |                                                                |
| SEALS - BATTERY, CARGO HOOK, ACCUMULATOR BRACKET                | 25         |                                                                |
| SEALS - CREW DOOR, GUNNER'S WINDOW, CARGO DOOR, AND ROTOR PYLON | 30         |                                                                |
| SHIM                                                            | 97         |                                                                |
| SHIM                                                            | 278        |                                                                |
| SHORTING JUMPERS                                                | 249        |                                                                |

**ALPHABETICAL INDEX** - Continued**Table 2. Alphabetical Index. - Continued**

| <b>NOMENCLATURE</b>                                | <b>FIGURE NO.</b> | <b>WORK PACKAGE REFERENCE</b>                      |
|----------------------------------------------------|-------------------|----------------------------------------------------|
| SIDEWALL DUCT SEAL                                 | 119               |                                                    |
| SIDEWALL PANEL HINGE                               | 71                |                                                    |
| SIZING BLOCK                                       | 44                | WP 0554 00                                         |
| SLEEVE BEARING REMOVAL/INSTALLATION TOOLS          | 198               | WP 0596 00                                         |
| SPACER REMOVAL TOOL                                | 219               | WP 1134 00, WP 1135 00, WP 1136 00, and WP 1137 00 |
| SOFT LIGHTING MASTER WARNING PANEL                 | 246               |                                                    |
| SPHERICAL BEARING REMOVER/INSTALLER                | 195               | WP 0569 00                                         |
| SPINDLE ADAPTER REMOVAL TOOL                       | 266               | WP 0658 00                                         |
| SPINDLE HORN NUT TORQUE ADAPTER                    | 205               | WP 1691 00 and WP 0553 00                          |
| STABILATOR BOLT REMOVAL TOOL                       | 169               | WP 0340 00, WP 0087 00, and WP 0091 00             |
| STABILATOR DRIFT PIN                               | 254               |                                                    |
| STABILATOR FITTING SUPPORT                         | 171               | WP 0371 00                                         |
| STABILATOR POSITION SENSOR BRACKET LOCATING TOOL   | 263               | WP 0377 00                                         |
| STABILATOR POSITION SENSOR/LIMIT SWITCH LOCKPIN    | 179               | WP 0070 00                                         |
| STABILATOR POSITION SENSOR/LIMIT SWITCH, TEST UNIT | 154               | WP 0070 00                                         |

## ALPHABETICAL INDEX - Continued

Table 2. Alphabetical Index. - Continued

| NOMENCLATURE                                                        | FIGURE NO. | WORK PACKAGE REFERENCE    |
|---------------------------------------------------------------------|------------|---------------------------|
| STABILIZER STRUT                                                    | 182        | WP 0232 00                |
| STIFFENER                                                           | 83         |                           |
| STORAGE BAG                                                         | 120        |                           |
| STORAGE FRAME<br>STRAP                                              | 124        |                           |
| STORES JETTISON<br>SYSTEM TEST<br>ADAPTER                           | 150        | WP 0088 00 and WP 0162 00 |
| STRAP                                                               | 40         |                           |
| STRAP                                                               | 58         |                           |
| STRAP                                                               | 104        |                           |
| STRIP, TAIL ROTOR<br>DRIVE SHAFT COVER                              | 145        |                           |
| SUPPORT INSTALLA-<br>TION SEAL                                      | 27         |                           |
| SWITCH ADJUSTMENT<br>TOOL                                           | 217        | WP 0761 00                |
| SWITCH PANEL TEST<br>HARNESS                                        | 52         | WP 0100 00                |
| TAIL LANDING GEAR<br>LOCK MECHANISM<br>BELLCRANK BUSH-<br>ING DRIFT | 204        | WP 0464 00                |
| TAIL LANDING GEAR<br>LOCKPIN BUSHING<br>DRIFT                       | 203        | WP 0465 00                |
| TAIL LANDING GEAR<br>LOCKPIN OVERSIZE<br>BUSHING                    | 221        | WP 0475 00                |
| TAIL LANDING GEAR<br>OVERSIZED AXLE<br>BUSHING                      | 210        | WP 0464 00                |
| TAIL ROTOR<br>ADAPTER PAD                                           | 117        |                           |

**ALPHABETICAL INDEX** - Continued**Table 2. Alphabetical Index. - Continued**

| <b>NOMENCLATURE</b>                                         | <b>FIGURE NO.</b> | <b>WORK PACKAGE REFERENCE</b>                         |
|-------------------------------------------------------------|-------------------|-------------------------------------------------------|
| TAIL LANDING GEAR<br>STRUT LIMITER                          | 176               | WP 0460 00                                            |
| TAIL ROTOR BLADE<br>BOOT INSTALLATION<br>TOOL               | 207               | WP 0319 00 and WP 0589 00                             |
| TAIL ROTOR BLADE<br>COVER                                   | 188               | WP 1677 00                                            |
| TAIL ROTOR CABLE<br>CONDUIT                                 | 23                |                                                       |
| TAIL ROTOR GEAR<br>BOX COVER                                | 190               | WP 1677 00                                            |
| TAIL ROTOR INSTAL-<br>LATION CHECKING<br>SHIM               | 208               | WP 0586 00                                            |
| TAIL ROTOR PYLON<br>CONDUIT                                 | 84                |                                                       |
| TEFLON LINED<br>SPHERICAL BEARING<br>PLASTIC FEELER<br>GAGE | 209               | WP 1696 00, WP 0538 00,<br>WP 0539 00, and WP 0546 00 |
| TERMINAL BOARD<br>COVER                                     | 234               |                                                       |
| TEST BOX ASSEMBLY<br>HINGE                                  | 20                |                                                       |
| TORQUE REACTOR<br>PLATE                                     | 181               | WP 0655 00 and WP 0656 00                             |
| TORQUE REACTOR<br>PLATE                                     | 262               |                                                       |
| TORQUE REACTOR<br>PLATE                                     | 271               |                                                       |
| TORQUELESS GRIP<br>INSTALLATION PLATE                       | 248               |                                                       |
| TORQUELESS GRIP<br>INSTALLATION TOOL                        | 247               |                                                       |

## ALPHABETICAL INDEX - Continued

Table 2. Alphabetical Index. - Continued

| NOMENCLATURE                              | FIGURE NO. | WORK PACKAGE REFERENCE    |
|-------------------------------------------|------------|---------------------------|
| TRACK REPAIR<br>ANGLE                     | 186        | WP 0404 00                |
| TRACK REPAIR PLATE                        | 185        | WP 0404 00                |
| TRANSMISSION<br>DRAIN TUBING              | 56         |                           |
| TRANSMISSION DRIP<br>PAN SEAL             | 54         |                           |
| TUBE                                      | 72         |                           |
| TUBE                                      | 82         |                           |
| TUBING                                    | 7          |                           |
| UPPER FUSELAGE<br>GASKET                  | 132        |                           |
| VALVE TEST FIXTURE                        | 202        | WP 0472 00                |
| VELCRO TAPE                               | 32         |                           |
| VENT WINDOW SEALS                         | 94         |                           |
| VIBRATION<br>ABSORBER LINERS              | 103        |                           |
| VIBRATION<br>ABSORBER SUPPORT<br>ASSEMBLY | 220        | WP 0223 00                |
| WASHER                                    | 87         |                           |
| WASHER, SPRING<br>CYLINDER                | 196        |                           |
| WEAR STRAP                                | 113        |                           |
| WEAR STRIP                                | 141        | WP 0398 00                |
| WEAR STRIP                                | 201        |                           |
| WEAR STRIP                                | 257        |                           |
| WEAR STRIP, CARGO<br>DOOR LOWER TRACK     | 143        | WP 0392 00 and WP 0394 00 |

---


**ALPHABETICAL INDEX** - Continued**Table 2. Alphabetical Index. - Continued**

| <b>NOMENCLATURE</b>                           | <b>FIGURE NO.</b> | <b>WORK PACKAGE REFERENCE</b> |
|-----------------------------------------------|-------------------|-------------------------------|
| WEAR STRIP, CARGO<br>DOOR UPPER TRACK         | 142               |                               |
| WEAR STRIP, UPPER<br>GUNNER'S WINDOW<br>TRACK | 269               |                               |
| WOODEN TUNING<br>WEDGE                        | 159               | WP 0191 00 and WP 0102 00     |


**FIELD MANUFACTURE ITEMS**

The following figures are locally manufactured items.

FIELD MANUFACTURE ITEMS - Continued

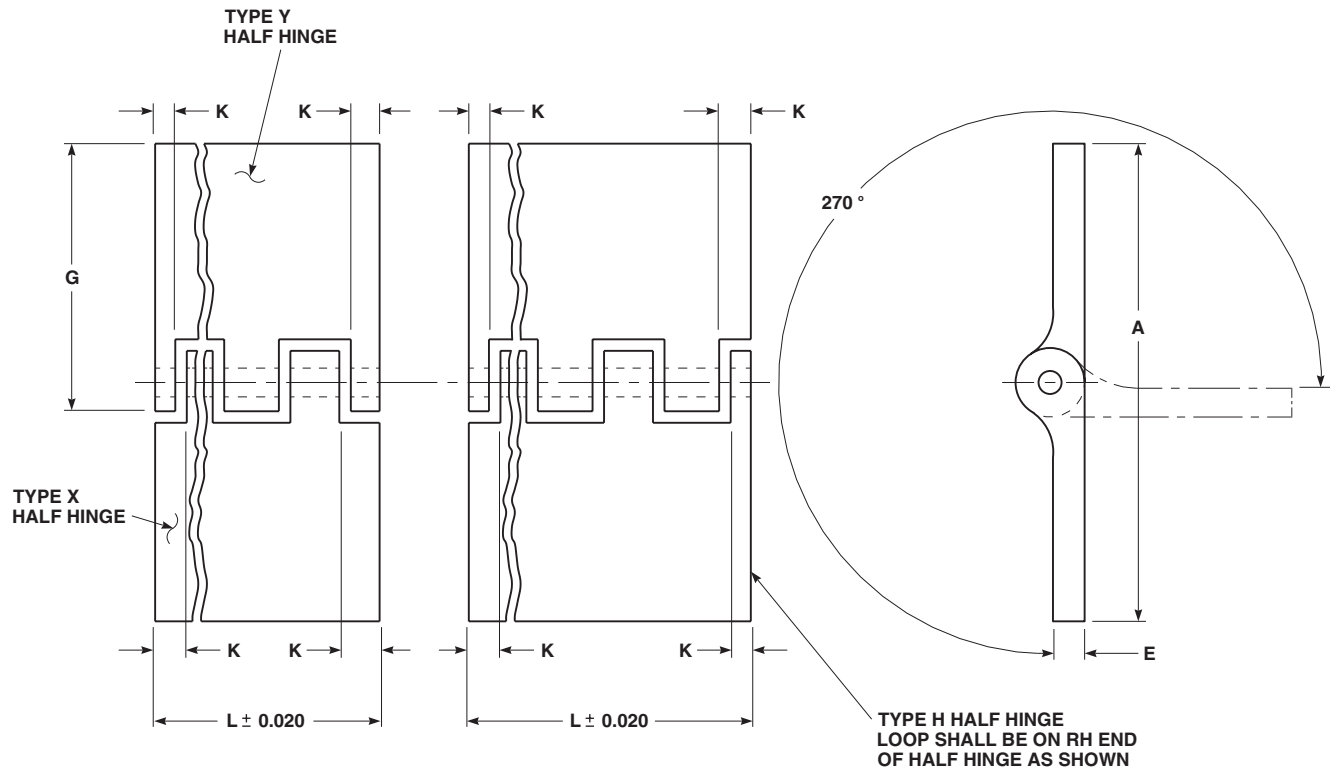

EXAMPLE

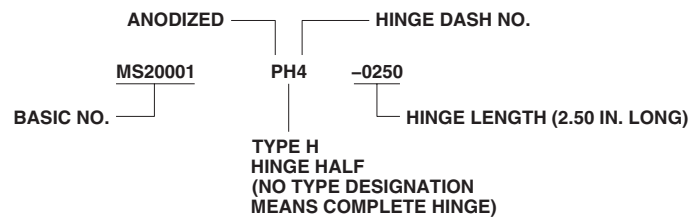

|          | A             | E     | G     | G<br>HALF HINGE<br>SIZE | K     |         |
|----------|---------------|-------|-------|-------------------------|-------|---------|
| DASH NO. | WIDTH<br>OPEN |       | MAX   | MIN                     | MIN   | PIN DIA |
| 4        | 1.500         | 0.056 | 0.850 | 0.830                   | 0.188 | 0.090   |
| 5        | 1.750         | 0.056 | 0.975 | 0.955                   | 0.188 | 0.090   |
| 6        | 2.000         | 0.056 | 1.102 | 1.078                   | 0.188 | 0.090   |

Figure 1. Hinge. (Sheet 1 of 2)



## FIELD MANUFACTURE ITEMS - Continued

| PART NUMBER     | MAKE FROM NSN    | SIKORSKY<br>PART NUMBER |
|-----------------|------------------|-------------------------|
| MS20001PH4-1200 | 5340-00-949-8274 | 70215-05002-117         |
| MS20001PH4-1200 | 5340-00-949-8274 | 70215-05002-118         |
| MS20001PH4-1200 | 5340-00-949-8274 | 70215-05002-119         |
| MS20001PH4-0250 | 5340-00-949-8274 | 70215-05002-120         |
| MS20001PX4-0450 | 5340-00-949-8274 | 70217-03006-114         |
| MS20001PY4-0450 | 5340-00-984-5569 | 70217-03006-113         |
| MS20001PY4-0450 | 5340-00-984-5569 | 70217-03006-114         |
| MS20001PY4-1984 | 5340-00-984-5569 | -                       |
| MS20001PY5-1950 | 5340-00-984-5569 | 70213-03008-042         |
| MS20001PX4-1984 | 5340-00-949-8274 | 70550-01125-108         |
| MS20001PX5-1950 | 5340-00-949-8274 | 70213-03008-042         |
| MS20001P4-600   | 5340-00-664-8141 | 70212-05004-118         |
| MS20001P4-0375  | 5340-00-664-8141 | -                       |
| MS20001P5-600   | 5340-00-664-8141 | 70217-03002-111         |
| MS20001P4-1012  | 5340-00-664-8141 | 70217-03001-108         |
| MS20001P4-1012  | 5340-00-664-8141 | 70217-03001-109         |
| MS20001P5-600   | 5340-00-550-5036 | 70217-03002-112         |
| MS20001P5-0980  | 5340-00-550-5036 | 70308-03504-111         |
| MS20001P5-0980  | 5340-00-550-5036 | 70308-03504-112         |
| MS20001P5-1000  | 5340-00-550-5036 | -                       |
| MS20001P6-1950  | 5430-00-664-8118 | 70215-42409-114         |
| MS20001P6-1950  | 5340-00-664-8118 | 70215-42409-115         |


## NOTES

1. MAKE FROM MS20001 ALUMINUM ALLOY HINGE STOCK.
2. TYPE X HINGE HALF MATES WITH TYPE Y HINGE HALF. TYPE H IS INTERCHANGEABLE WITH BOTH TYPES OF HINGE HALVES.
3. HINGE PINS ARE PER MS20253. USE CADMIUM PLATED CORROSION RESISTANT STEEL PINS WITH ALUMINUM ALLOY HINGE.
4. REMOVE ALL BURRS AND SHARP EDGES.
5. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
6. TREAT CUT EDGES WITH CORROSION RESISTANT COMPOUND (ALODINE) MIL-C-5541, NSN 8030-00-811-3723.
7. INK STAMP "MS20001 (SIZE DASH NO.)" AT REGULAR INTERVALS ALONG LENGTH OF HINGE SO THAT ANY 3 INCH LENGTH WILL HAVE AT LEAST ONE COMPLETE IDENTIFICATION IN FIGURES NOT LESS THAN 0.060 INCH HIGH.

AK1601\_2C  
SA

Figure 1. Hinge. (Sheet 2 of 2)

## FIELD MANUFACTURE ITEMS - Continued

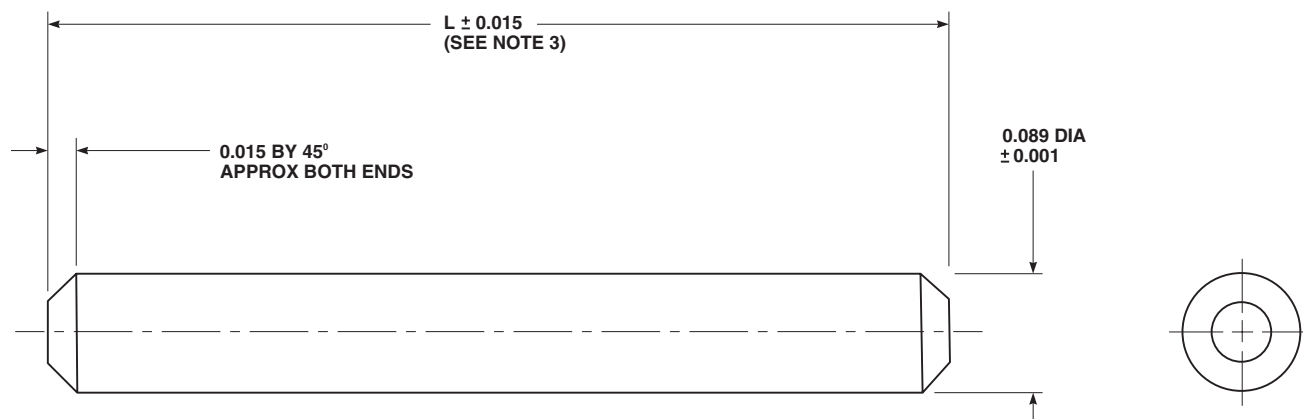

| PART NUMBER      | L LENGTH | SIKORSKY<br>PART NUMBER |
|------------------|----------|-------------------------|
| MS20253P2-250    | 2.500    | —                       |
| MS20253P2-275*   | 2.750    | 70215-05002-128         |
| MS20253P2-475    | 4.750    | —                       |
| MS20253P2-500    | 5.000    | —                       |
| MS20253P2-538    | 5.380    | —                       |
| MS20253P2-1200   | 12.000   | —                       |
| MS20253P2-1225** | 12.250   | 70215-05002-129         |
| MS20253P2-1984   | 19.840   | —                       |
| MS20253P2-1988   | 19.880   | 70213-03008-042         |
| MS20253P2-2050   | 20.500   | —                       |

\*ON INSTALLATION, STAKE FRONT END OF PIN.

\*\*ON INSTALLATION, STAKE REAR END OF PIN.


## NOTES

1. MAKE FROM MS20253P2 HINGE PIN STOCK, NSN 5340-00-043-3723.
2. LETTER P IN FIRST DASH NUMBER INDICATES CADMIUM PLATE. NUMBER 2 IN FIRST DASH NUMBER INDICATES PIN DIAMETER (0.089).
3. SECOND DASH NUMBER INDICATES LENGTH IN INCHES AND HUNDREDTHS.
4. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
5. IDENTIFY PARTS PER MIL-STD-130.
6. CUT PIN TO REQUIRED LENGTH PER CHART AND FINISH ENDS AS SHOWN.
7. REMOVE ALL BURRS AND SHARP EDGES.
8. FOR USE WITH MS20001 AND MS20257 ALUMINUM ALLOY HINGE, AS REQUIRED.
9. STAKE PINS, AS REQUIRED, PER TM 1-1500-204-23.


AK1602B  
SA

Figure 2. Hinge Pin.

## FIELD MANUFACTURE ITEMS - Continued

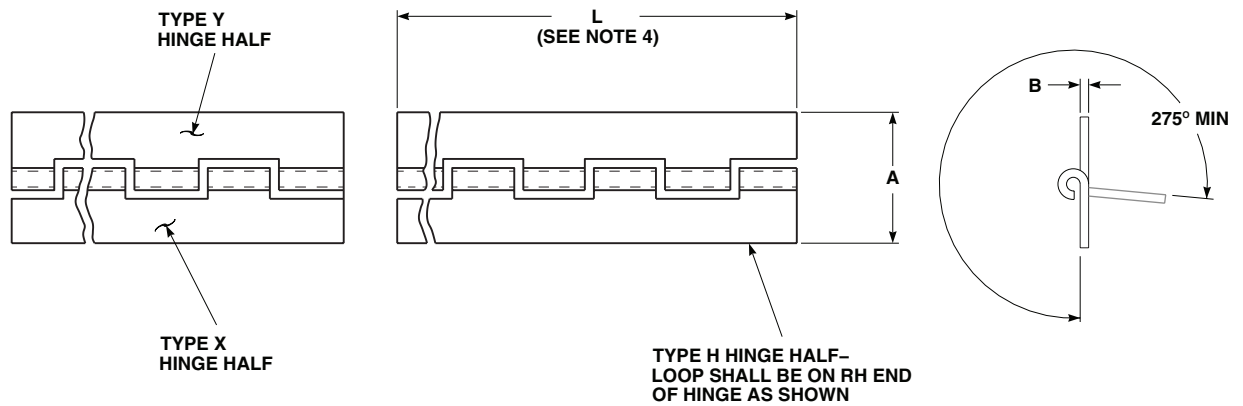

## EXAMPLE

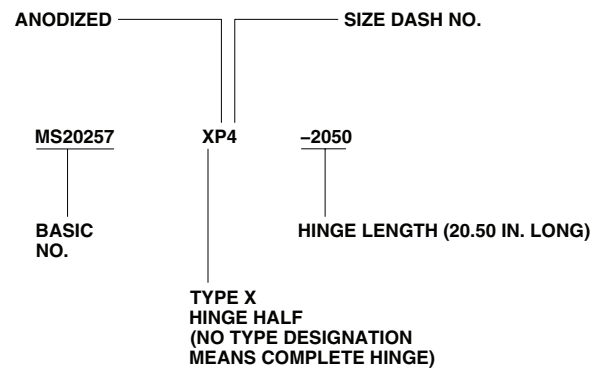

| DASH NO. | A WIDTH OPEN | B THICKNESS | PIN DIA |
|----------|--------------|-------------|---------|
| 1        | 0.750        | 0.032       | 0.063   |
| 2        | 1.062        | 0.040       | 0.090   |
| 3        | 1.250        | 0.040       | 0.090   |
| 4        | 1.500        | 0.040       | 0.090   |
| 5        | 2.000        | 0.051       | 0.090   |

## FIELD MANUFACTURE ITEMS - Continued

| PART NUMBER     | MAKE FROM NSN    | SIKORSKY<br>PART NUMBER |
|-----------------|------------------|-------------------------|
| MS20257HP3-0500 | 5340-00-051-9132 | 70205-06053-105         |
| MS20257HP3-0500 | 5340-00-051-9132 | 70205-06053-106         |
| MS20257XP4-2050 | 5340-00-051-9133 | -                       |
| MS20257YP4-2050 | 5340-00-051-9133 | -                       |
| MS20257XP5-2050 | 5340-00-069-5124 | 70550-01126-24          |
| MS20257XP5-2050 | 5340-00-069-5124 | 70550-01126-106         |
| MS20257YP5-2050 | 5340-00-069-5124 | 70550-01126-107         |
| MS20257-1-0550  | 5340-00-057-2625 | -                       |
| MS20257P2-0350  | 5340-00-250-4970 | -                       |
| MS20257P2-0400  | 5340-00-250-4970 | SEE NOTE 8              |
| MS20257P2-7200  | 5340-00-250-4970 | 70308-03502-041         |
| MS20257P3-250   | 5340-00-051-9132 | -                       |
| MS20257P3-0300  | 5340-00-051-9132 | 70219-04802-117         |
| MS20257P3-900   | 5340-00-051-9132 | -                       |
| MS20257P3-1200  | 5340-00-051-9132 | -                       |
| MS20257P3-1462  | 5340-00-051-9132 | -                       |
| MS20257P3-1500  | 5340-00-051-9132 | -                       |
| MS20257P4-600   | 5340-00-051-9133 | -                       |


## NOTES

1. MAKE FROM MS20257 ALUMINUM ALLOY HINGE STOCK.
2. TYPE X HINGE HALF MATES WITH TYPE Y HINGE HALF. TYPE H IS INTERCHANGEABLE WITH BOTH TYPES (X AND Y) HINGE HALVES.
3. HINGE PINS ARE PER MS20253. USE CADMIUM PLATED CORROSION RESISTANT STEEL PINS WITH ALUMINUM ALLOY HINGE.
4. REMOVE ALL BURRS AND SHARP EDGES.
5. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
6. TREAT CUT EDGES WITH CORROSION RESISTANT COMPOUND (ALODINE) MIL-C-5541, NSN 8030-00-811-3723.
7. INK STAMP "MS20257 (SIZE DASH NO.)" AT REGULAR INTERVALS ALONG LENGTH OF HINGE SO THAT ANY 3 INCH LENGTH WILL HAVE AT LEAST ONE COMPLETE IDENTIFICATION IN FIGURES NOT LESS THAN 0.060 INCH HIGH.
8. WHEN CUTTING HINGE, CUT HINGE PIN 1/2 INCH LONGER THEN HINGE AND PEEN BOTH ENDS OF HINGE PIN.

AK1603\_2D  
SA

Figure 3. Hinge. (Sheet 2 of 2)

## FIELD MANUFACTURE ITEMS - Continued

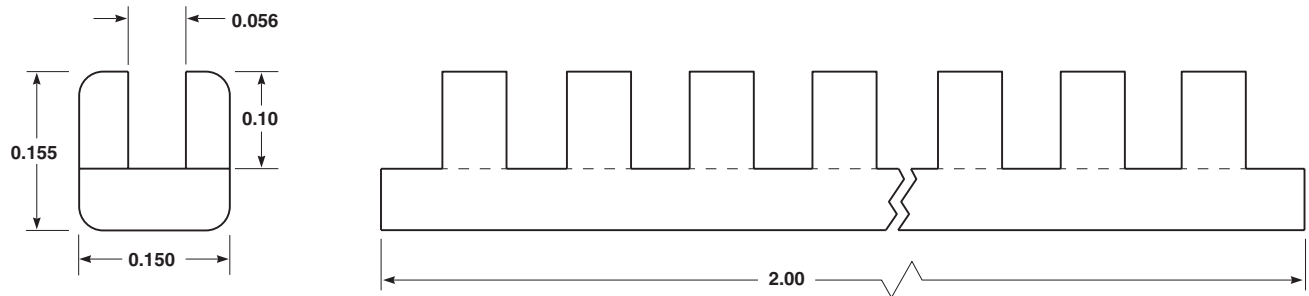

## NOTES


1. MAKE FROM MS21266-1N NYLON PLASTIC GROMMET STOCK, NSN 5325-00-960-2410.
2. ALL DIMENSIONS ARE IN INCHES.
3. IDENTIFY PARTS PER MIL-STD-130.
4. TRIM PART TO SIZE ON INSTALLATION.

PART NUMBER: MS21266-1N

AK1604  
SA

Figure 4. Edging.

## FIELD MANUFACTURE ITEMS - Continued

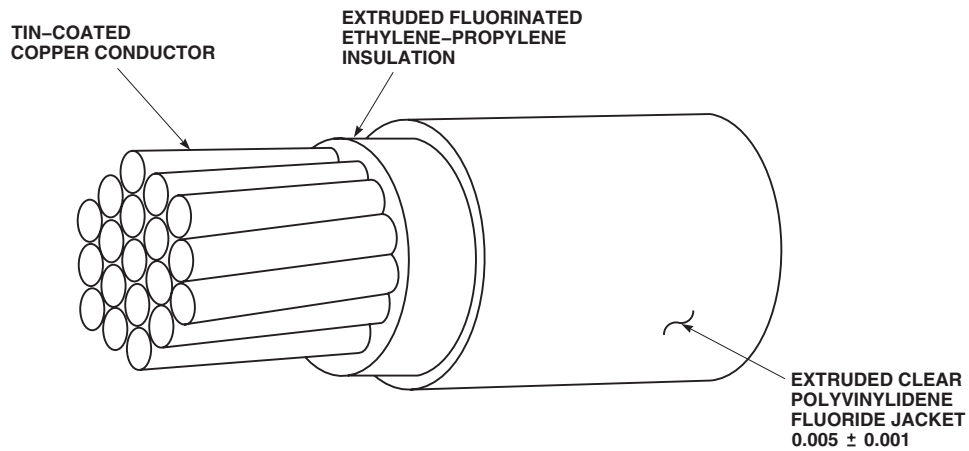

## NOTES


1. MAKE FROM NSN 6145-00-926-1211, WHITE WITHOUT STRIPES OR BANDS.
2. CUT WIRE TO REQUIRED LENGTH.
3. IDENTIFY PARTS PER MIL-STD-130.

PART NUMBER: M22759 / 13-20-9

AK1605  
SA

Figure 5. Electrical Wire.

## FIELD MANUFACTURE ITEMS - Continued

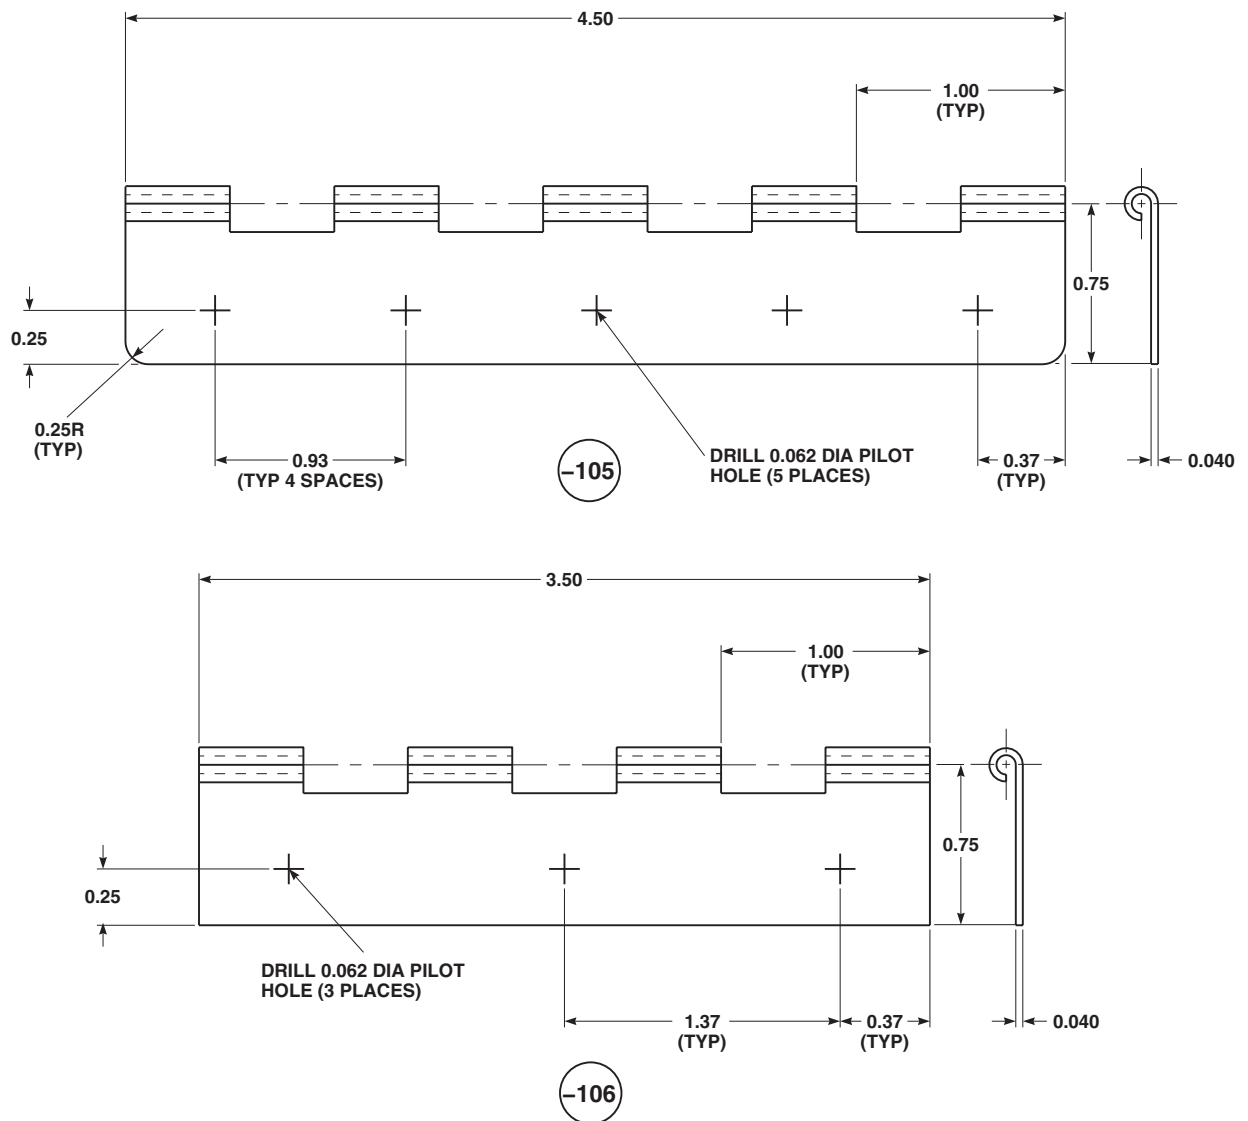

## NOTES


1. MAKE FROM MS35822-11A HINGE STOCK, NSN 5340-01-054-4936.
2. CUT HINGE TO SIZE AND FINISH ENDS AS SHOWN IN FIGURE.
3. DRILL PILOT HOLES, AS INDICATED, PER TM 1-1500-204-23.
4. IDENTIFY PARTS PER MIL-STD-130.
5. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.

PART NUMBER: 70219-02315-105, -106

AK1606A  
SA

Figure 6. Hinge Half.

## FIELD MANUFACTURE ITEMS - Continued

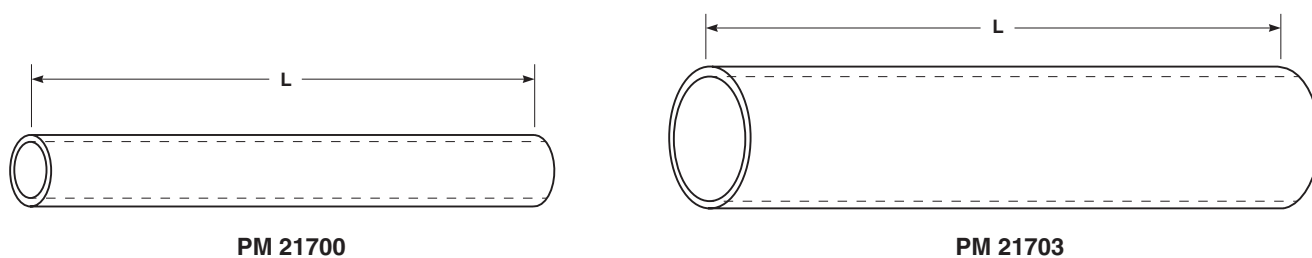

| PART NUMBER<br>AND DESCRIPTION                                    | L LENGTH   | MAKE FROM      | NSN              |
|-------------------------------------------------------------------|------------|----------------|------------------|
| PM21700 - CLEAR<br>TUBING, 3/8 ID<br>MIL-I-7444, TY 1, CL 1       | 8.0        | M23053/1-207-0 | 5970-01-085-2844 |
| PM27103 - CLEAR<br>TUBING, 3/4 ID<br>3002 TRANSFLEX,<br>MIL-I-631 | 40.5 ± 0.5 | M23053/8-011-C | 5970-01-079-1999 |

## NOTES

1. MAKE TUBING PER CHART.
2. IDENTIFY PARTS PER MIL-STD-130.
3. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.

PART NUMBER: PM21700, PM21703


AK1607A  
SA

Figure 7. Tubing.





## FIELD MANUFACTURE ITEMS - Continued

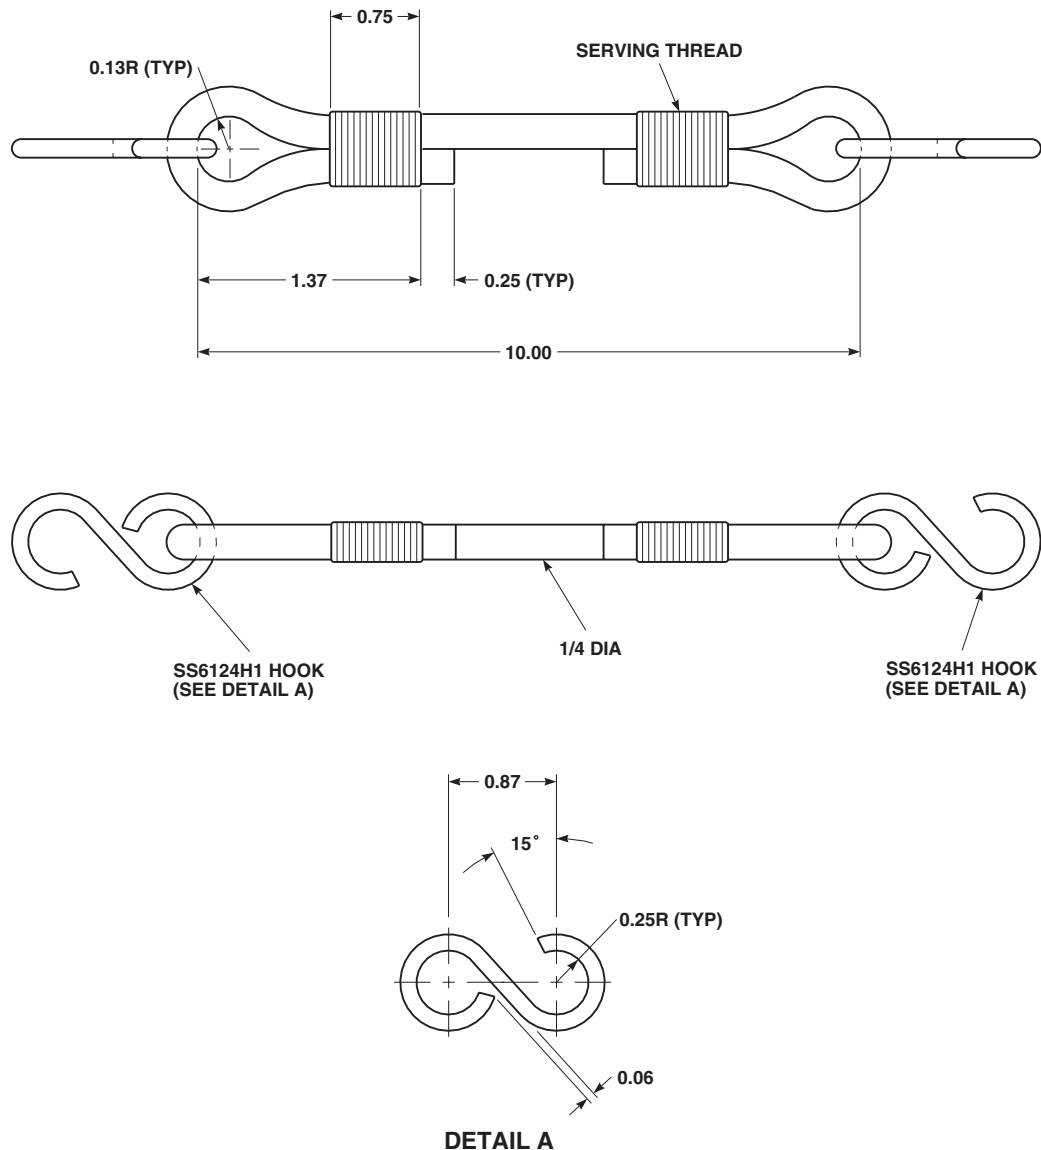

## NOTES


1. MAKE FROM:
  - A. CORD - 1/4 INCH-DIAMETER SHOCK ABSORBING, MIL-C-5651, NSN 8305-00-276-7575.
  - B. HOOK - 0.125 INCH-DIAMETER PASSIVATED CRES STEEL ROD, 302 COND. B, QQ-W-423, NSN 9505-00-684-0972.
  - C. THREAD - STYLE A, TYPE II, MIL-T-5660, NSN 8310-00-194-4065.
2. FABRICATE HOOKS AS SHOWN IN DETAIL A OF FIGURE.
3. CUT CORD TO REQUIRED LENGTH AND ASSEMBLE HOOKS. WRAP SERVING THREAD AS SHOWN, AND PER INSTRUCTIONS IN TM 1-1500-204-23.
4. COAT FINISHED SERVING THREAD WITH CLEAR SHELLAC, A-A-8, NSN 8010-00-160-6911.
5. IDENTIFY PARTS PER MIL-STD-130.
6. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.

PART NUMBER: SS6124-09-100

AK1609A  
SA

Figure 9. Cord Assembly.

## FIELD MANUFACTURE ITEMS - Continued

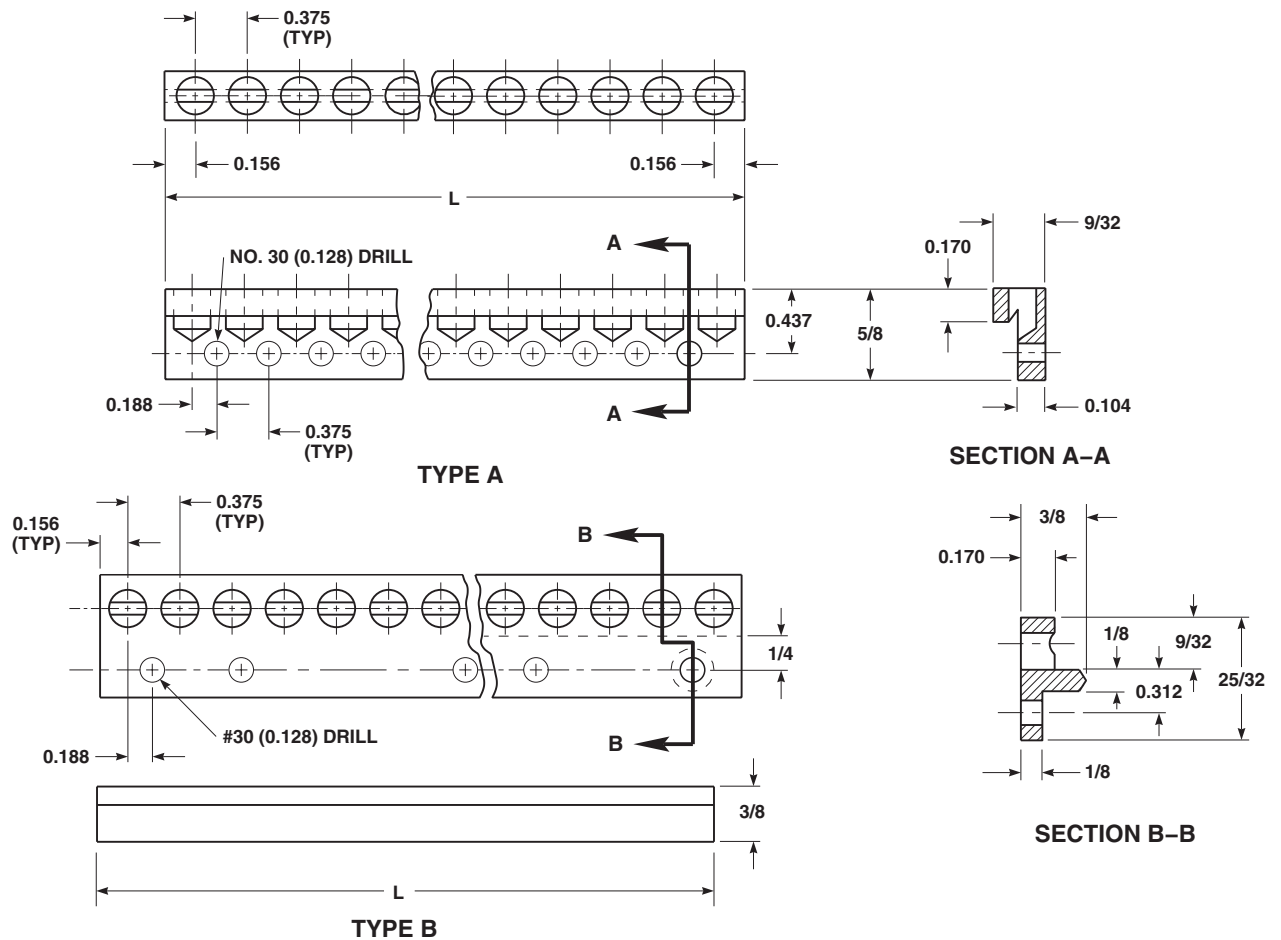

| PART NUMBER | NUMBER OF HOLES | L LENGTH | MAKE FROM NSN    |
|-------------|-----------------|----------|------------------|
| SS7001-7A   | 9               | 3.312    | 5325-00-036-9305 |
| SS7001-61C  | 63              | 23.562   | 5325-00-036-9305 |
| SS7001-15B  | 17              | 6.312    | 5325-00-036-9306 |
| SS7001-21B  | 23              | 8.562    | 5325-00-036-9306 |
| SS7001-24B  | 26              | 9.687    | 5325-00-036-9306 |

EXAMPLE: SS7001-7A - ANGLE TYPE STRIP 3.312 IN. LONG, WITH PROVISIONS FOR NINE FASTENERS.

EXAMPLE: SS7001-15B - FLAT TYPE STRIP 6.312 IN. LONG, WITH PROVISIONS FOR SEVENTEEN FASTENERS.

## NOTES



1. MAKE FROM STRIP PANEL STOCK, 6061-T6 ALUMINUM ALLOY, QQ-A-200 / 8 PER CHART.
2. DASH NUMBER DESIGNATES NUMBER OF FASTENER CONNECTION HOLES (CHART).
3. LETTER A IN DASH NUMBER DESIGNATES ANGLE TYPE STRIP. LETTER B IN DASH NUMBER DESIGNATES FLAT TYPE STRIP.
4. CUT STRIP TO REQUIRED LENGTH (CHART) AND FINISH ENDS AS SHOWN.
5. TREAT CUT EDGES AND DRILLED HOLES WITH CORROSION RESISTANT COMPOUND (ALODINE) MIL-C-5541, CLASS 3, NSN 8030-00-811-3723.
6. IDENTIFY PARTS PER MIL-STD-130.
7. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.

PART NUMBER: SS7001-7A, SS7001-61C, SS7001-15B, SS7001-21B, SS7001-24B

AK1610A  
SA

Figure 10. Panel Fastener Strip.

## FIELD MANUFACTURE ITEMS - Continued

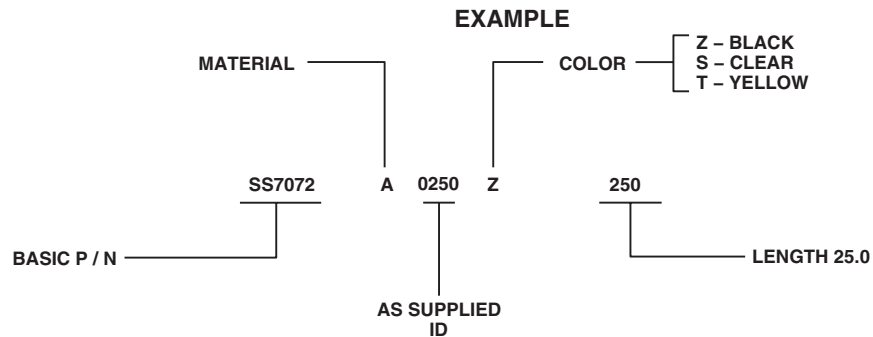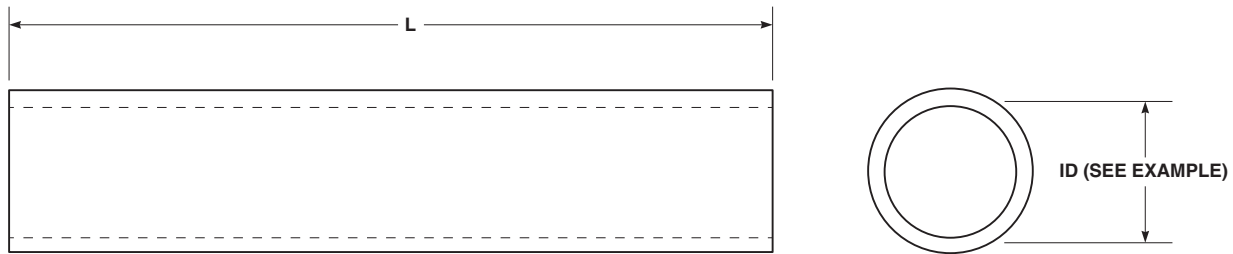

| PART NUMBER       | L LENGTH | PART NUMBER      | MAKE FROM NSN    |
|-------------------|----------|------------------|------------------|
| SS7072A0187ZXXX** |          | M23053 / 5-105-0 | 5970-00-954-1622 |
| SS7072A0250Z180   | 18.0     | M23053 / 5-106-0 | 5970-00-815-1295 |
| SS7072A0250Z250   | 25.0     | M23053 / 5-106-0 | 5970-00-815-1295 |
| SS7072A0375ZXXX** |          | M23053 / 5-107-0 | 5970-00-954-1624 |
| SS7072A0375Z050   | 5.0      | M23053 / 5-107-0 | 5970-00-954-1624 |
| SS7072A0500Z010   | 1.0      | M23053 / 5-108-0 | 5970-00-812-2967 |
| SS7072A0500Z150   | 15.0     | M23053 / 5-108-0 | 5970-00-812-2967 |
| SS7072A0500Z350   | 35.0     | M23053 / 5-108-0 | 5970-00-812-2967 |
| SS7072A0750ZXXX** |          | M23053 / 5-109-0 | 5970-00-914-3118 |
| SS7072A0750Z014   | 1.4      | M23053 / 5-109-0 | 5970-00-914-3118 |
| SS7072A0750Z021   | 2.1      | M23053 / 5-109-0 | 5970-00-914-3118 |
| SS7072A0750Z022   | 2.2      | M23053 / 5-109-0 | 5970-00-914-3118 |
| SS7072A0750Z028   | 2.8      | M23053 / 5-109-0 | 5970-00-914-3118 |
| SS7072A0750Z029   | 2.9      | M23053 / 5-109-0 | 5970-00-914-3118 |
| SS7072A0750Z030   | 3.0      | M23053 / 5-109-0 | 5970-00-914-3118 |
| SS7072A0750Z045   | 4.5      | M23053 / 5-109-0 | 5970-00-914-3118 |
| SS7072A0750Z053   | 5.3      | M23053 / 5-109-0 | 5970-00-914-3118 |
| SS7072A0750Z055   | 5.5      | M23053 / 5-109-0 | 5970-00-914-3118 |
| SS7072A0750Z063   | 6.3      | M23053 / 5-109-0 | 5970-00-914-3118 |
| SS7072A0750Z073   | 7.3      | M23053 / 5-109-0 | 5970-00-914-3118 |
| SS7072A0750Z098   | 9.8      | M23053 / 5-109-0 | 5970-00-914-3118 |
| SS7072A0750Z860   | 86.0     | M23053 / 5-109-0 | 5970-00-914-3118 |
| SS7072A1000Z012   | 1.2      | M23053 / 5-110-0 | 5970-00-815-1300 |
| SS7072A1000Z023   | 2.3      | M23053 / 5-110-0 | 5970-00-815-1300 |

## NOTES

1. MAKE SLEEVING PER CHART.
2. IDENTIFY PARTS PER MIL-STD-130.
3. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.

AK1611\_1A  
SA

Figure 11. Insulation Sleeve. (Sheet 1 of 2)

## FIELD MANUFACTURE ITEMS - Continued

| PART NUMBER       | L LENGTH | PART NUMBER       | MAKE FROM NSN    |
|-------------------|----------|-------------------|------------------|
| SS7072B0125S015   | 1.5      | M23053 / 8-004-C  | 5970-00-905-2068 |
| SS7072B0187S015   | 1.5      | +M23053 / 8-005-C | 5970-00-761-1795 |
| SS7072B0250S015   | 1.5      | M23053 / 8-006-C  | 5970-00-935-0082 |
| SS7072E0250Z720   | 72.0     | M23053 / 1-101-0  | 5970-00-063-1500 |
| SS7072E0375Z600   | 60.0     | M23053 / 1-102-0  | 5970-00-063-1499 |
| SS7072E0375Z720   | 72.0     | M23053 / 1-102-0  | 5970-00-063-1499 |
| SS7072E0500T600   | 60.0     | +M23053 / 1-103-0 | 5970-00-063-1495 |
| SS7072E0500Z008   | 0.8      | M23053 / 1-103-0  | 5970-00-063-1495 |
| SS7072E0500Z480   | 48.0     | M23053 / 1-103-0  | 5970-00-063-1495 |
| SS7072E0625ZXXX** |          | M23053 / 1-104-0  | 5970-01-044-4531 |
| SS7072E0625Z260   | 26.0     | M23053 / 1-104-0  | 5970-01-044-4531 |
| SS7072E0625Z300   | 30.0     | M23053 / 1-104-0  | 5970-01-044-4531 |
| SS7072E0625Z360   | 36.0     | M23053 / 1-104-0  | 5970-01-044-4531 |
| SS7072E0750Z720   | 72.0     | M23053 / 1-105-0  | 5970-00-063-1496 |
| SS7072E1000T500   | 50.0     | +M23053 / 1-107-0 | 5970-01-044-4532 |
| SS7072E1000T570   | 57.0     | +M23053 / 1-107-0 | 5970-01-044-4532 |
| SS7072E1000ZXXX** |          | M23053 / 1-107-0  | 5970-01-044-4532 |
| SS7072G02500020   | 2.0      | M23053 / 1-101-0  | 5970-00-063-1500 |
| SS7072L0125Z015   | 1.5      | M23053 / 4-101-0  | 5970-01-057-0992 |


\*\*LENGTH IS GREATER THAN 99.9 INCHES. DETERMINE LENGTH ON INSTALLATION.

+ ACCEPTABLE COLOR ALTERNATE.


AK1611\_2  
SA

Figure 11. Insulation Sleeve. (Sheet 2 of 2)

## FIELD MANUFACTURE ITEMS - Continued

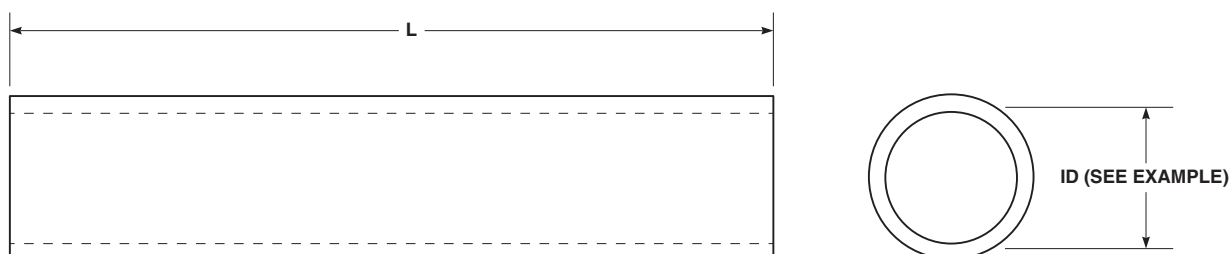

## EXAMPLE

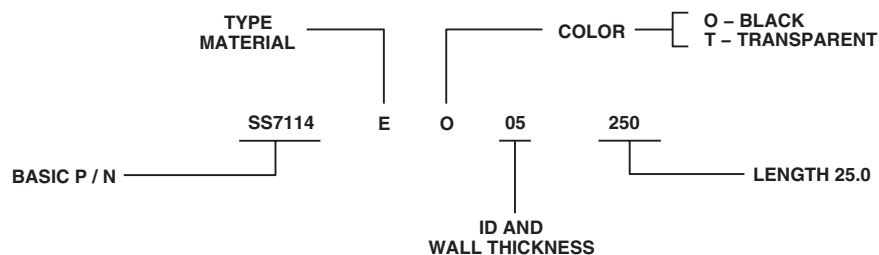

## CHART A

|      | INSIDE DIA | WALL THICK |       |       |
|------|------------|------------|-------|-------|
| CODE | MIN        | MAX        | MIN   | MAX   |
| 05   | 0.182      | 0.198      | 0.017 | 0.023 |
| 08   | 0.129      | 0.141      | 0.017 | 0.023 |
| A    | 0.313      | 0.334      | 0.022 | 0.028 |
| B    | 0.375      | 0.399      | 0.022 | 0.028 |
| C    | 0.438      | 0.462      | 0.022 | 0.028 |
| D    | 0.500      | 0.524      | 0.022 | 0.028 |
| G    | 0.875      | 0.911      | 0.030 | 0.040 |

## CHART B

| PART NUMBER     | L LENGTH | MAKE FROM                            | NSN              |
|-----------------|----------|--------------------------------------|------------------|
| SS7114E005-0250 | 25.0     | TEMFLEX 105C (75037)                 | 5970-00-845-4910 |
| SS7114E005-0300 | 30.0     | TEMFLEX 105C (75037)                 | 5970-00-845-4910 |
| SS7114ETA-0720  | 72.0     | TEMFLEX 105C 6 AW 0 CLEAR (75037)    | 5970-00-189-5850 |
| SS7114ETB-0600  | 60.0     | TEMFLEX 105C 3/8 INCH CLEAR (75037)  | 5970-00-889-3844 |
| SS7114ETC-0480  | 48.0     | TEMFLEX 105C 7/16 INCH CLEAR (75037) | 5970-00-990-9142 |
| SS7114ETC-0840  | 84.0     | TEMFLEX 105C 7/16 INCH CLEAR (75037) | 5970-00-990-9142 |
| SS7114ETD-0565  | 56.5     | TEMFLEX 105C 1/2 INCH CLEAR (75037)  | 5970-00-685-9057 |
| SS7114ETG-0840  | 84.0     | TEMFLEX 105C 7/8 INCH CLEAR (75037)  | 5970-00-958-6760 |
| SS7114ET05-0840 | 84.0     | TEMFLEX 105C AW 6 CLEAR (75037)      | 5970-00-078-5977 |
| SS7114ET08-1610 | 161.0    | 8034668-145 (18876)                  | 5970-00-553-7120 |


## NOTES

1. MAKE TUBING PER CHART B.
2. IDENTIFY PARTS PER MIL-STD-130.
3. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.

AK1612A  
SA

Figure 12. Insulation Tubing.

FIELD MANUFACTURE ITEMS - Continued

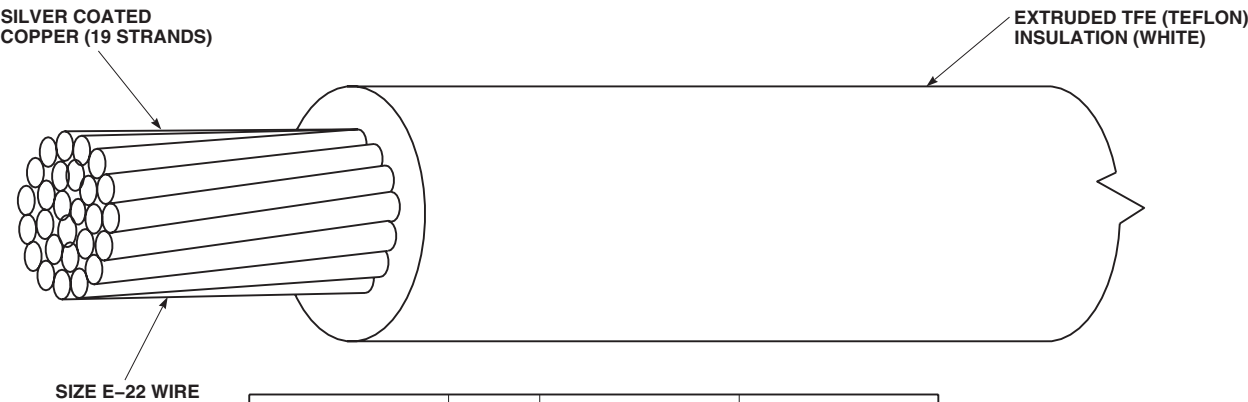

| PART NUMBER | SIZE | PART NUMBER                         | NSN              |
|-------------|------|-------------------------------------|------------------|
| SS7311-22-9 | E-22 | M22759 / 11-229<br>M22759 / 11-16-9 | 6145-01-080-8298 |
| SS7311-16-9 | E-16 | M16878 / 4 BJE9                     | 6145-01-108-6907 |

NOTES


- 1. MAKE FROM TYPE E, SIZE (SEE CHART), SILVER COATED COPPER WIRE WITH WHITE INSULATION.
- 2. CUT WIRE TO REQUIRED LENGTH.
- 3. IDENTIFY PARTS PER MIL-STD-681.

PART NUMBER: SS7311-16-9, SS7311-22-9

AK1613  
SA

Figure 13. High-Temperature Electrical Wire.

---

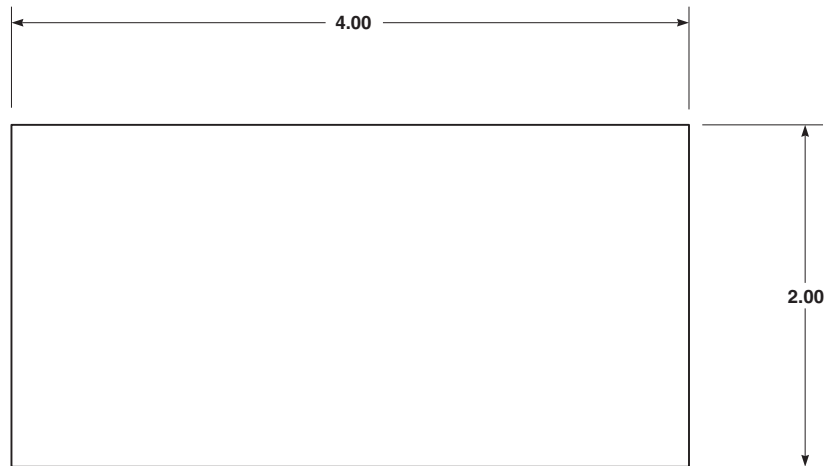**FIELD MANUFACTURE ITEMS - Continued****NOTES**


1. MAKE FROM 0.032 INCH THICK RUBBER SHEET, CLASS I, GRADE 60, MIL-R-5847, NSN 1560-01-096-5342.
  2. IDENTIFY PARTS PER MIL-STD-190.
  3. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
- PART NUMBER: S6120-61188-016

AK1614A  
SA

Figure 14. Seal Retainer Strip.



## FIELD MANUFACTURE ITEMS - Continued

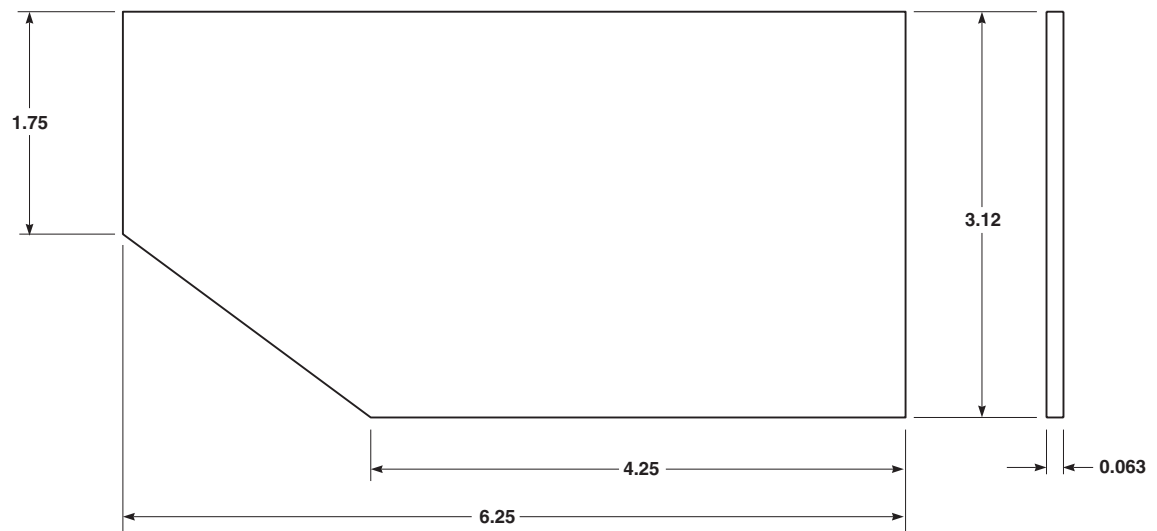

## NOTES


1. MAKE FROM MIL-C-3133, GRADE SBE 11L, 0.063 INCH THICK RUBBER SHEET, NSN 9320-00-580-6756.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. IDENTIFY PARTS PER MIL-STD-130.

PART NUMBER: 70500-03050-165

AK1615A  
SA

Figure 15. Aft Bulkhead Seal.

FIELD MANUFACTURE ITEMS - Continued

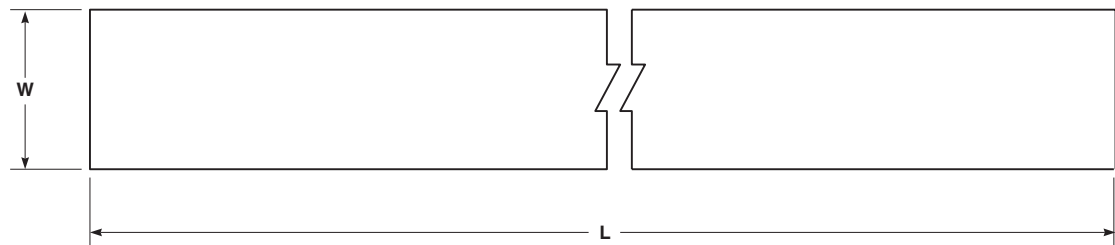

| NOMENCLATURE               | W WIDTH | L LENGTH | SIKORSKY<br>PART NUMBER |
|----------------------------|---------|----------|-------------------------|
| FLAP, CEILING CENTER PANEL | 1.19    | 3.90     | 70500-02061-121         |
|                            |         | 13.56    | 70500-02061-122         |
|                            |         | 6.36     | 70500-02061-123         |
| FLAP, CEILING CENTER PANEL | 1.50    | 15.59    | 70500-02062-124         |

NOTES


- 1. MAKE FROM VINYL COATED NYLON; COLOR, AN 620 LIGHT GULL GRAY SPECIFICATION MIL-C-20696, TYPE I, CLASS 2, NSN 8305-00-205-1163.
- 2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
- 3. IDENTIFY PARTS PER MIL-STD-130.

PART NUMBER: 70500-02061-121, -122, -123, 70500-02062-124

AK1616A  
SA

Figure 16. Ceiling Center Panel Flap.

FIELD MANUFACTURE ITEMS - Continued

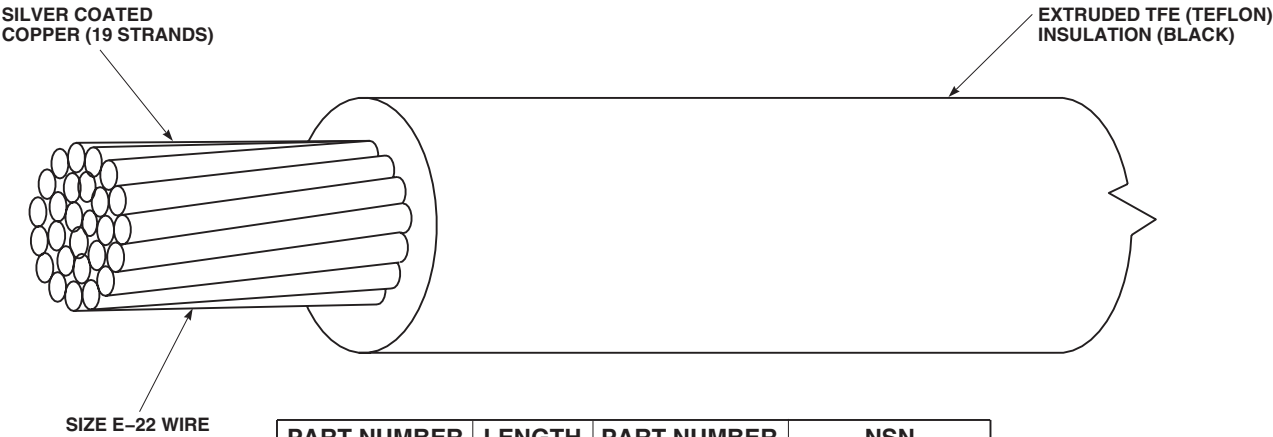

| PART NUMBER | LENGTH | PART NUMBER     | NSN              |
|-------------|--------|-----------------|------------------|
| S8935FOS200 | 20.0   | M16878 / 4 BFE0 | 6145-01-017-9693 |
| S8935FOS60  | 6.0    | M16878 / 4 BFE0 | 6145-01-017-9693 |

NOTES


1. MAKE FROM TYPE E, SIZE E-22, SILVER COATED COPPER WIRE WITH BLACK TFE INSULATION, PER TABLE.
2. IDENTIFY PARTS PER MIL-STD-130.
3. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.

PART NUMBER: S8935FOS60, S8935FOS200

AK1617A  
SA

Figure 17. High-Temperature Electrical Wire.

FIELD MANUFACTURE ITEMS - Continued

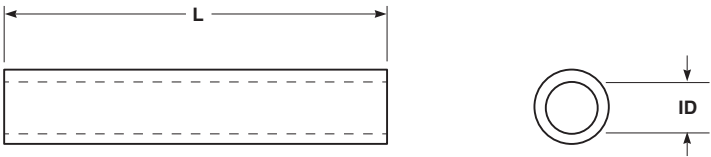

| PART NUMBER     | ID INSIDE DIAMETER | L LENGTH | PART NUMBER      | NSN              |
|-----------------|--------------------|----------|------------------|------------------|
| S9352-8-9-100   | 0.250              | 1.00     | M23053 / 6-106-9 | 5970-01-147-3596 |
| S9352-10-9-600  | 0.187              | 6.00     | M23053 / 6-105-9 | 5970-00-067-9373 |
| S9352-10-9-2000 | 0.187              | 20.00    | M23053 / 6-105-9 | 5970-00-067-9373 |

NOTES



1. MAKE SLEEVE FROM WHITE, HEAT SHRINKABLE, POLYOLEFIN TUBING PER CHART.
2. IDENTIFY PARTS PER MIL-STD-130.
3. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.

PART NUMBER: S9352-8-9-100, S9352-10-9-600, S9352-10-9-2000

AK1618A  
SA

Figure 18. Insulation.

## FIELD MANUFACTURE ITEMS - Continued

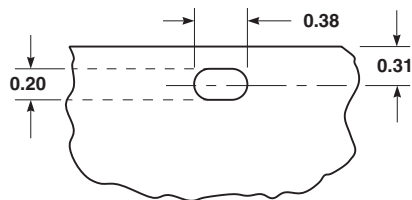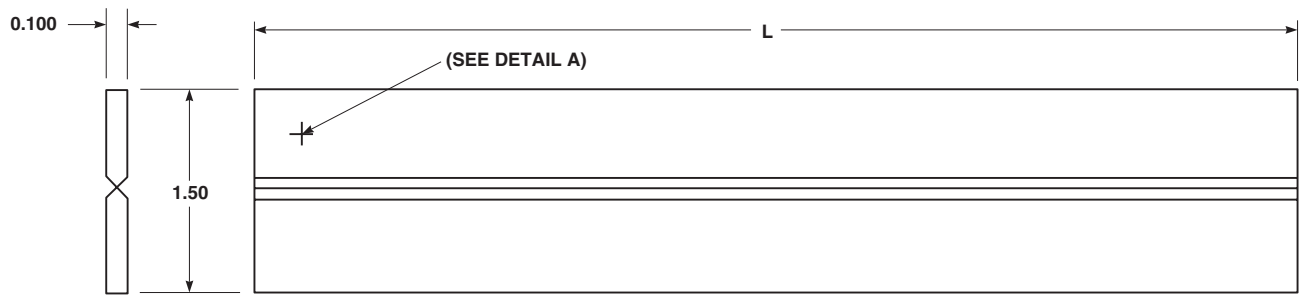

**DETAIL A**  
SLOTS (8 PLACES)  
FOR 70500-62062-107 ONLY

| PART NUMBER     | L LENGTH |
|-----------------|----------|
| 70500-02060-120 | 26.562   |
| 70500-02060-121 | 7.812    |
| 70500-02062-107 | 47.187   |
| 70500-02062-137 | 12.500   |
| 70500-02062-146 | 47.187   |
| 70500-02063-149 | 41.500   |
| 70500-02063-179 | 4.687    |
| 70500-02063-184 | 5.000    |
| 70500-02064-136 | 60.000   |

## NOTES


1. MAKE FROM GRAY THERMOPLASTIC POLYHINGE, NSN 9390-01-171-5986 PER CHART
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. IDENTIFY PARTS PER MIL-STD-130.
4. PICK UP FASTENER HOLE LOCATION ON INSTALLATION AND DRILL PER TM 1-1500-204-23.

PART NUMBER: 70500-02060-120, 70500-02060-121, 70500-02062-107, 70500-02062-137, 70500-02062-146, 70500-02063-149, 70500-02063-179, 70500-02063-184, 70500-02064-136.

AK1619A  
SA

Figure 19. Polyhinge.

## FIELD MANUFACTURE ITEMS - Continued

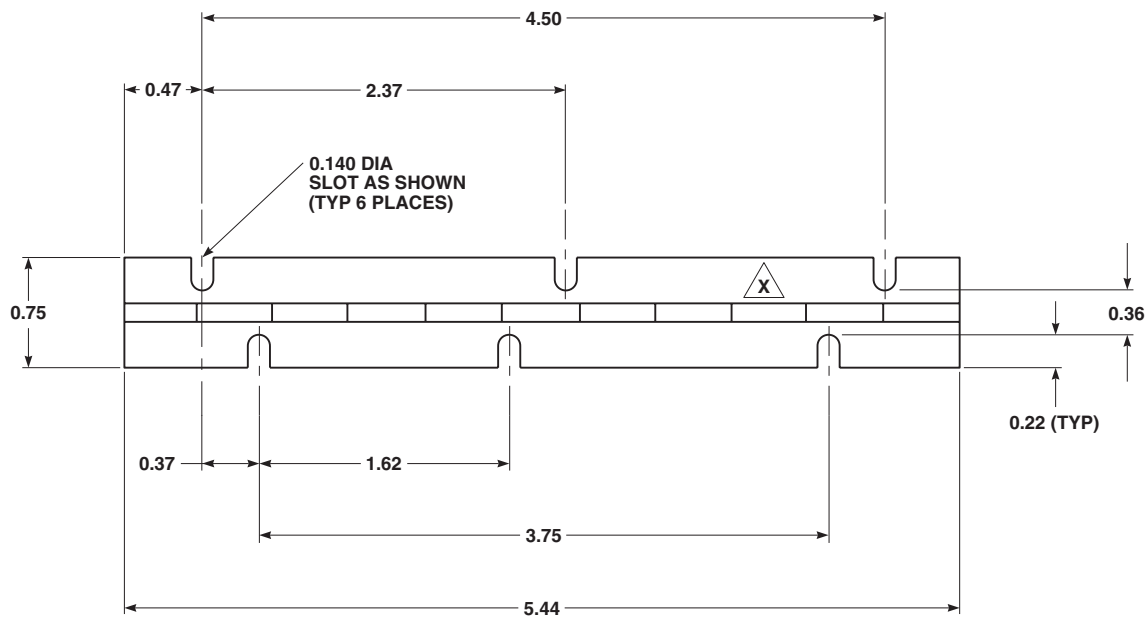

## NOTES

1. MAKE FROM MS20257-1 UNANODIZED HINGE STOCK, NSN 5340-00-057-2625.
  2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
  3. REMOVE ALL BURRS AND SHARP EDGES.
  4. TREAT CUT EDGES WITH CORROSION RESISTANT COMPOUND (ALODINE) MIL-C-5541, NSN 8030-00-811-3723.
  5. IDENTIFY PARTS PER MIL-STD-130 IN LOCATION SHOWN BY +1d BY +1d IN F / D.
- PART NUMBER: 70700-20680-108

AK1620A  
SA

Figure 20. Test Box Assembly Hinge.

FIELD MANUFACTURE ITEMS - Continued

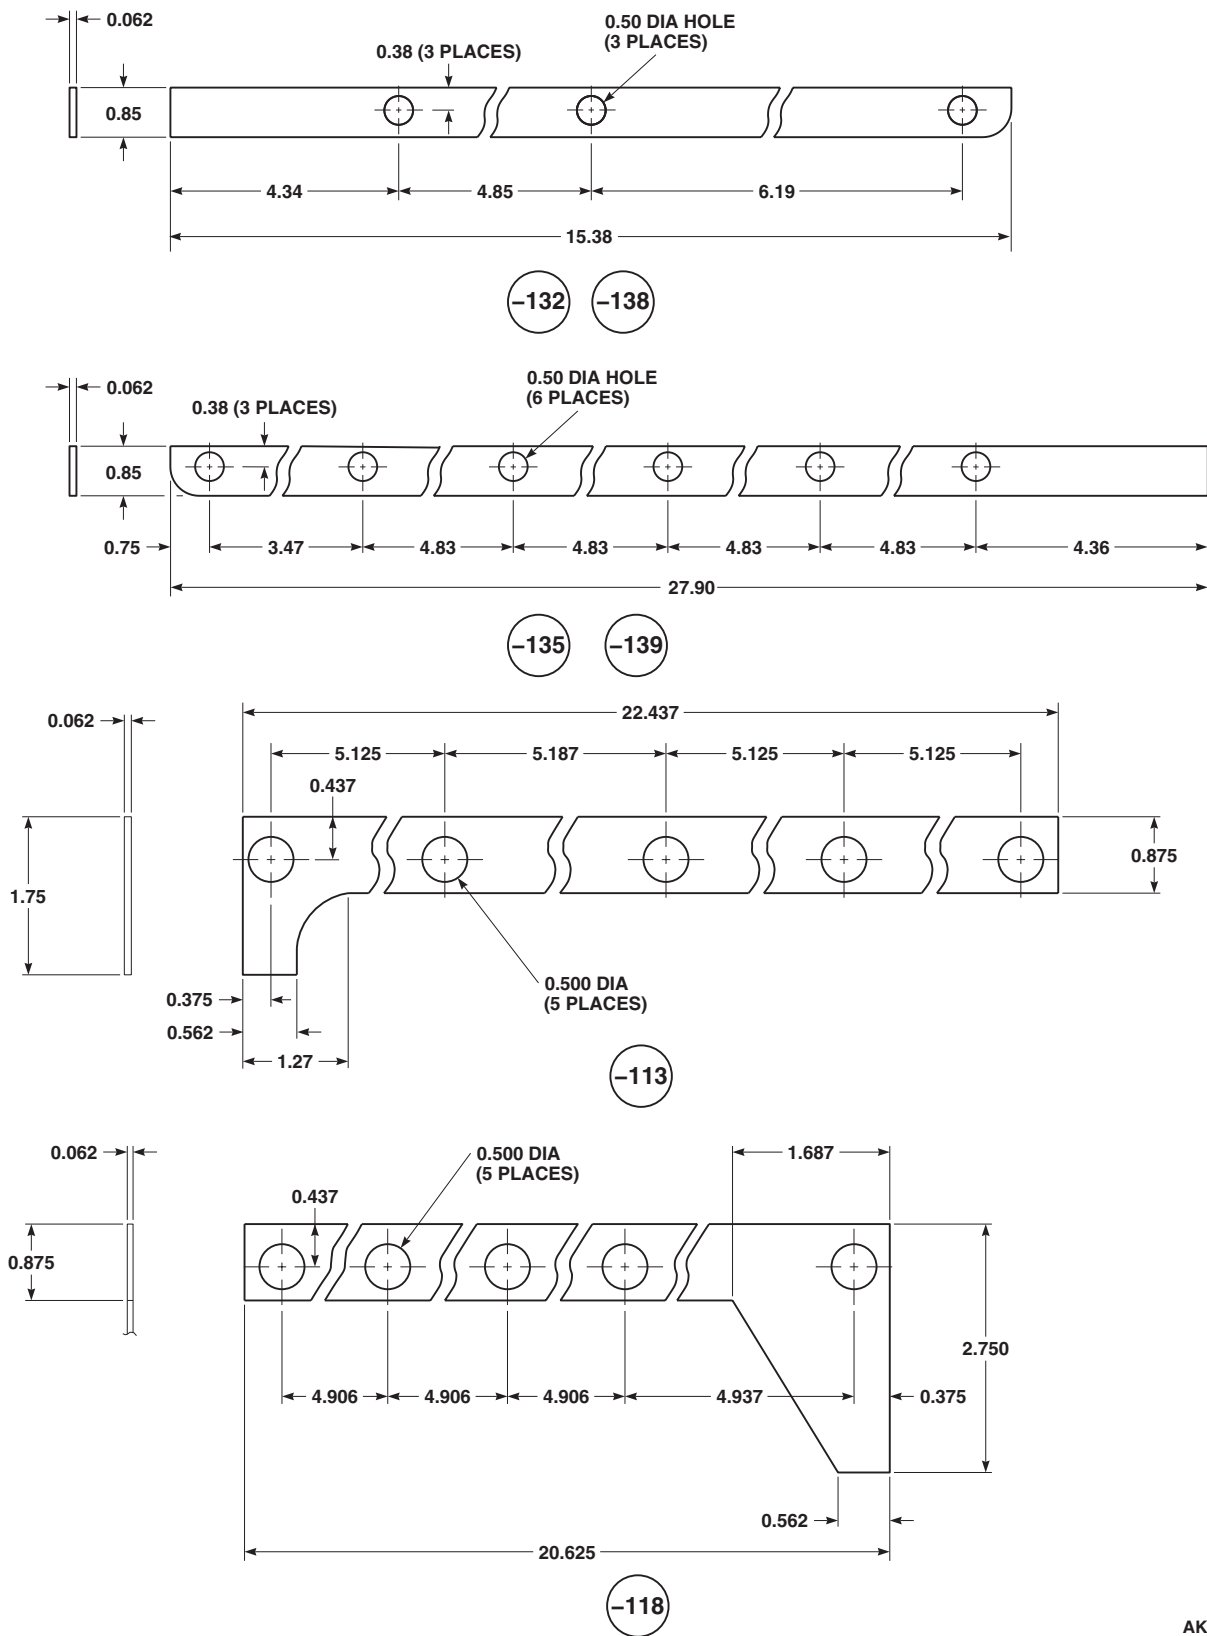


Figure 21. Fuel Lines and Pump Enclosure Seal. (Sheet 1 of 2)

0.062

0.843

0.593

39.50

1.306R (TYP)

0.489R (TYP)

0.500 DIA (8 PLACES)

0.312

2.937

4.812

4.812

4.812

4.812

4.812

4.812

4.812

4.812

2.879

(-116)

0.062

45°

0.224 DIA (4 PLACES)

1.69R

2.45 DIA

1.69R

2.03R

(-117)

| NOMENCLATURE                        | SIKORSKY<br>PART NUMBER |
|-------------------------------------|-------------------------|
| FUEL LINES AND PUMP ENCLOSURE SEALS | 70219-03002-113         |
|                                     | 70219-03002-116         |
|                                     | 70219-03002-117         |
|                                     | 70219-03002-118         |
|                                     | 70219-03002-132         |
|                                     | 70219-03002-138         |
|                                     | 70219-03002-135         |
|                                     | 70219-03002-139         |

1. MAKE FROM SHEET RUBBER, MIL-STD-670, SCE 7L, 0.062 INCH THICK, NSN 9320-00-929-5316.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. IDENTIFY PARTS PER MIL-STD-190. STAMP OR STENCIL PART NUMBER AND DATE OF MANUFACTURE ON PARTS WITH OPAQUE GREEN INK. TT-I-1795. USE 1/16 TO 1/8 INCH HIGH SANS SERIF CHARACTERS.

**EXAMPLE:**    P/N 70216-02401-107                      3Q 86  
                                 **PART NUMBER**                      **THIRD QUARTER 1986**


**PART NUMBER: 70219-03002-113, -116, -117, -118, -132, -135, -138, -139**

AK1621\_2A  
SA

Figure 21. Fuel Lines and Pump Enclosure Seal. (Sheet 2 of 2)



FIELD MANUFACTURE ITEMS - Continued

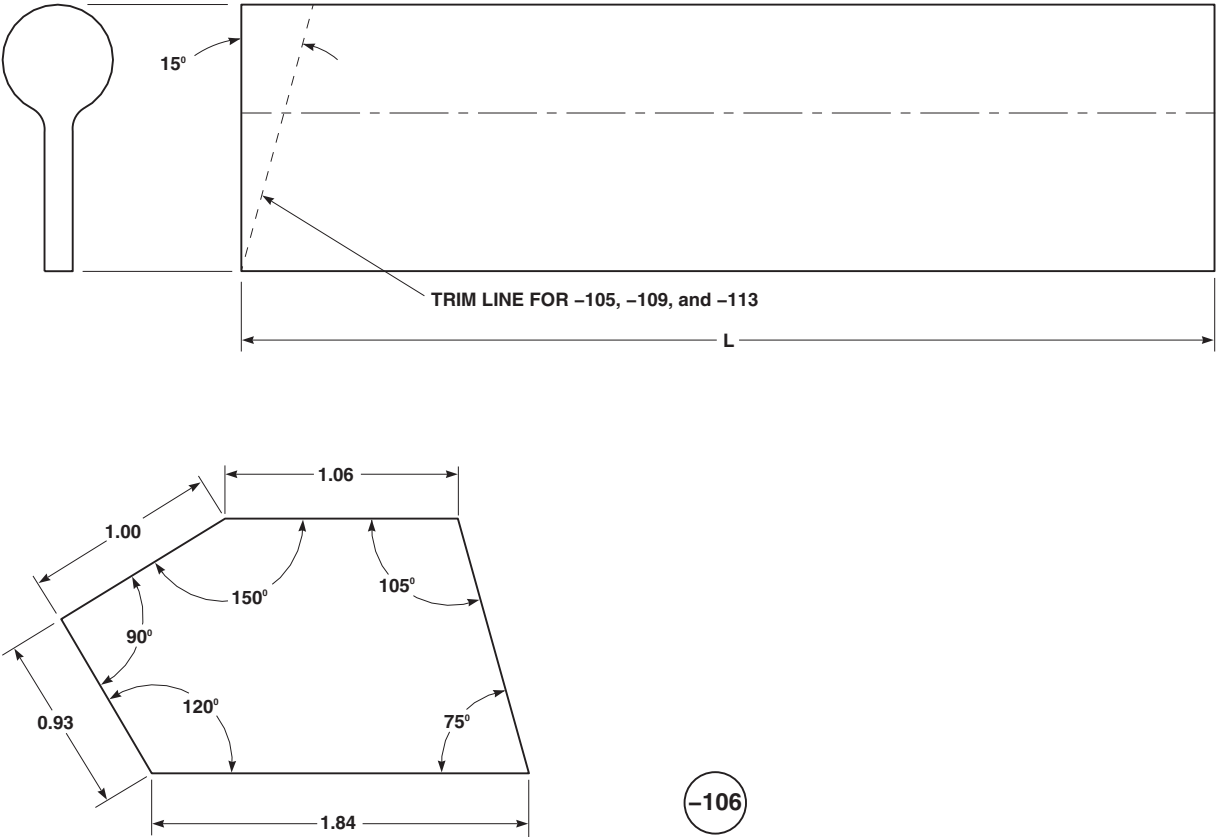

| NOMENCLATURE       | L LENGTH | SIKORSKY<br>PART NUMBER |
|--------------------|----------|-------------------------|
| SEAL, APU FIREWALL | 17.53    | 70303-03023-105         |
| SEAL, APU FIREWALL | AS SHOWN | 70303-03023-106         |
| SEAL, APU FIREWALL | 18.12    | 70303-03023-109         |
| SEAL, APU FIREWALL | 12.50    | 70303-03023-113         |

NOTES


- 1. MAKE FROM SEAL TAPE, STYLE JM150-13A, NSN 5330-00-849-7083.
- 2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
- 3. IDENTIFY PARTS PER MIL-STD-130.
- 4. TRIM SEALS AS REQUIRED TO BUTT JOIN WITH NO GAP.

PART NUMBER: 70303-03023-105, -106, -109, -113

AK1622A  
SA

Figure 22. Auxiliary Power Unit Firewall Seal.

FIELD MANUFACTURE ITEMS - Continued

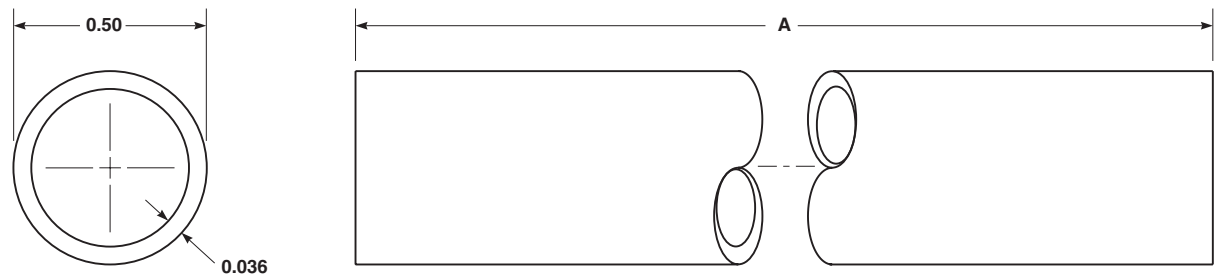

| NOMENCLATURE             | DIMENSION A | SIKORSKY<br>PART NUMBER |
|--------------------------|-------------|-------------------------|
| TAIL ROTOR CABLE CONDUIT | 95.00       | 70400-00510-101         |
|                          | 35.00       | 70400-00510-102         |

NOTES


1. MAKE FROM NYLON TUBING, L-P-410A TYPE LF, NSN 4720-01-008-9453.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. IDENTIFY PARTS PER MIL-STD-130.

PART NUMBER: 70400-00510-101, -102

AK1623A  
SA

Figure 23. Tail Rotor Cable Conduit.

## FIELD MANUFACTURE ITEMS - Continued

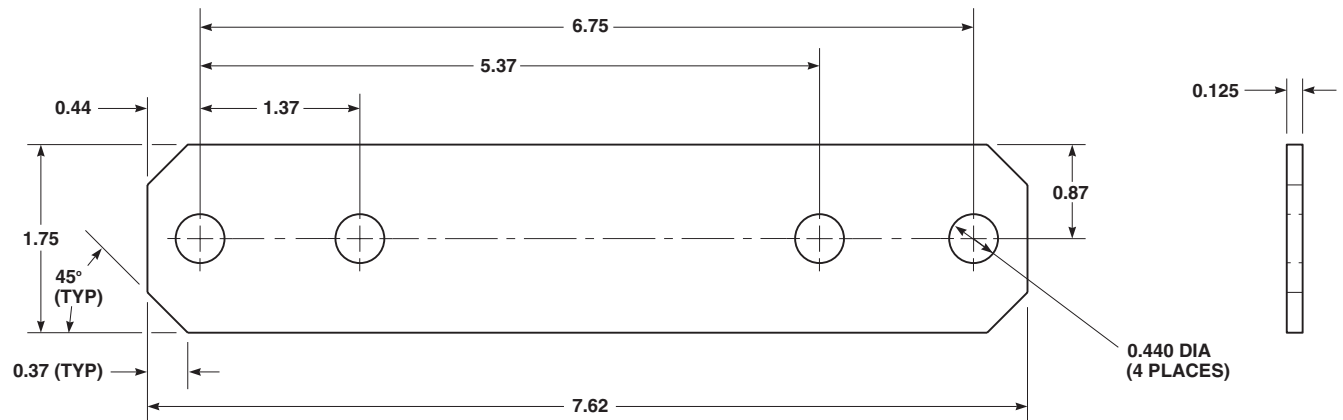

## NOTES

1. MAKE FROM NYLON 6 / 6 L-P-410, NSN 9330-01-028-9334.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. PICK UP HOLES ON INSTALLATION.
4. IDENTIFY PARTS PER MIL-STD-130.

PART NUMBER: 70700-20509-104

AK1624A  
SA

Figure 24. Plate.

Diagram of a rectangular plate with width  $W$  and length  $L$ . A force  $T$  is applied to the left edge, and a reaction force is applied to the right edge.

| NOMENCLATURE            | T THICKNESS | W WIDTH      | L LENGTH      | SIKORSKY<br>PART NUMBER                                                  |
|-------------------------|-------------|--------------|---------------|--------------------------------------------------------------------------|
| BATTERY BOX SEALS       | 0.062       | 0.32         | 21.50<br>8.67 | 70209-02532-102<br>70209-02532-103<br>70209-02532-104                    |
| ACCUMULATOR BRACKET     | 0.062       | 0.75         | 8.50          | 70209-03018-110<br>70209-03018-111<br>70209-03018-121<br>70209-03018-122 |
| CARGO HOOK ACCESS SEALS | 0.062       | 0.67<br>0.41 | 62.0<br>19.20 | 70214-02556-111<br>70214-02556-112<br>70214-02556-116                    |


1. MAKE FROM MIL-R-6855, CLASS II, TYPE B, GRADE 60 RUBBER 0.062 INCH THICK, NSN 9320-01-157-9070.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. IDENTIFY PARTS PER MIL-STD-190. STAMP OR STENCIL PART NUMBER AND DATE OF MANUFACTURE ON PARTS WITH OPAQUE GREEN INK, TT-I-1795. USE 1/16 TO 1/8 INCH HIGH SANS SERIF CHARACTERS.

**PART NUMBER: 70209-02532-102, -103, -104, 70209-03018-110, -111, -121, -122, 70214-02556-111, -112, -116**

AK1625A  
SA

Figure 25. Seals - Battery, Cargo Hook, Accumulator Bracket.

FIELD MANUFACTURE ITEMS - Continued

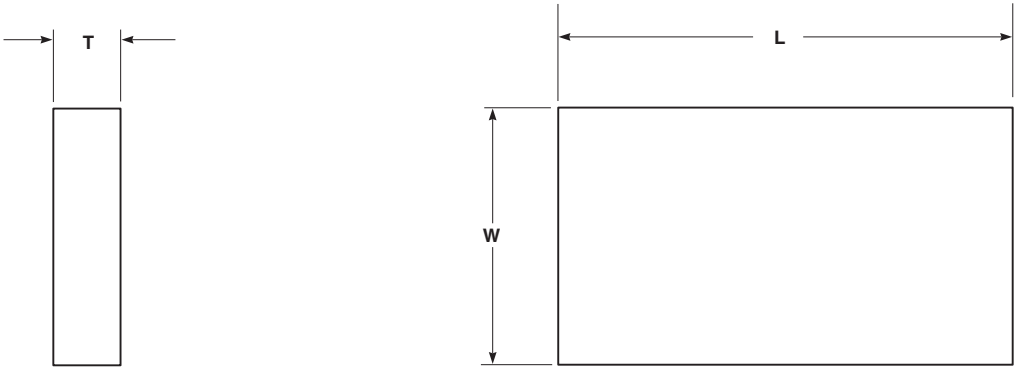

| NOMENCLATURE               | T THICKNESS | W WIDTH | L LENGTH | SIKORSKY<br>PART NUMBER |
|----------------------------|-------------|---------|----------|-------------------------|
| FORMER INSTALLATION GASKET | 0.25        | 0.77    | 1.54     | 70212-02139-108         |

NOTES

1. MAKE FROM RUBBER, MIL-R-6855, CLASS II, GRADE 60, NSN NSN 9320-00-108-6500.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. IDENTIFY PARTS PER MIL-STD-190. STAMP OR STENCIL PART NUMBER AND DATE OF MANUFACTURE ON PARTS WITH OPAQUE GREEN INK, TT-I-1795. USE 1/16 TO 1/8 INCH HIGH SANS SERIF CHARACTERS.


EXAMPLE: P/N 70216-02401-107                      3Q 86  
                     PART NUMBER                      THIRD QUARTER 1986

PART NUMBER: 70212-02139-108

AK1626A  
SA

Figure 26. Former Installation Gasket.

## FIELD MANUFACTURE ITEMS - Continued

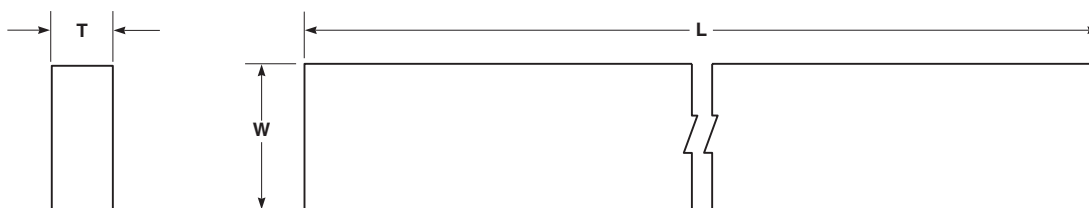

| NOMENCLATURE              | T THICKNESS | W WIDTH | L LENGTH | SIKORSKY<br>PART NUMBER |
|---------------------------|-------------|---------|----------|-------------------------|
| SUPPORT INSTALLATION SEAL | 0.375       | 0.75    | 6.86     | 70212-02137-145         |

## NOTES

1. MAKE FROM RUBBER, MIL-R-6130, TYPE 2, GRADE A, NSN 9320-00-108-6500.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. IDENTIFY PARTS PER MIL-STD-190. STAMP OR STENCIL PART NUMBER AND DATE OF MANUFACTURE ON PARTS WITH OPAQUE GREEN INK, TT-I-1795. USE 1/16 TO 1/8 INCH HIGH SANS SERIF CHARACTERS.


EXAMPLE: P/N 70216-02401-107      3Q 86  
                    PART NUMBER      THIRD QUARTER 1986

PART NUMBER: 70212-02137-145

AK1627A  
SA

Figure 27. Support Installation Seal.

FIELD MANUFACTURE ITEMS - Continued

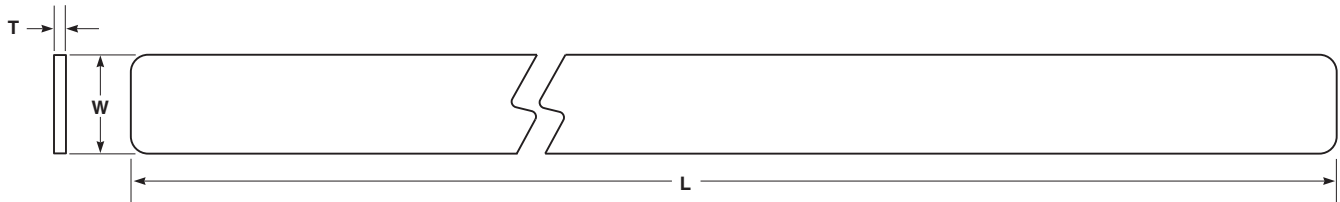

| NOMENCLATURE             | T THICKNESS | W WIDTH | L LENGTH | SIKORSKY<br>PART NUMBER |
|--------------------------|-------------|---------|----------|-------------------------|
| PYLON DOOR CHAFING STRIP | 0.062       | 0.84    | 14.53    | 70219-04500-102         |
|                          |             | 0.50    | 13.69    | 70219-04500-103         |
|                          |             | 0.75    | 22.50    | 70219-04500-104         |
|                          |             | 0.50    | 21.00    | 70219-04704-106         |
|                          |             | 0.71    | 37.00    | 70219-04704-107         |
|                          |             | 0.50    | 18.75    | 70219-04704-108         |
|                          |             | 0.50    | 16.87    | 70219-04704-111         |

NOTES

- 1. MAKE FROM RUBBER, MIL-C-3133, MIL-STD-670, GRADE SCE 11L, 0.062 INCH THICK, NSN 9320-01-269-2863. ALTERNATE, RUBBER, MIL-C-3133, MIL-STD-670, GRADE SBE 11L 0.062 INCH THICK, NSN 9320-00-580-6756.
- 2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
- 3. IDENTIFY PARTS PER MIL-STD-190. STAMP OR STENCIL PART NUMBER AND DATE OF MANUFACTURE ON PARTS WITH OPAQUE GREEN INK, TT-I-1795. USE 1/16 TO 1/8 INCH HIGH SANS SERIF CHARACTERS.
- 4. TRIM TO FIT AS REQUIRED.


EXAMPLE: P/N 70216-02401-107 3Q 86  
PART NUMBER THIRD QUARTER 1986

PART NUMBER: 70219-04500-102, -103, -104, 70219-04704-106, -107, -108, -111

AK1628A  
SA

Figure 28. Pylon Door Chafing Strip.

## FIELD MANUFACTURE ITEMS - Continued

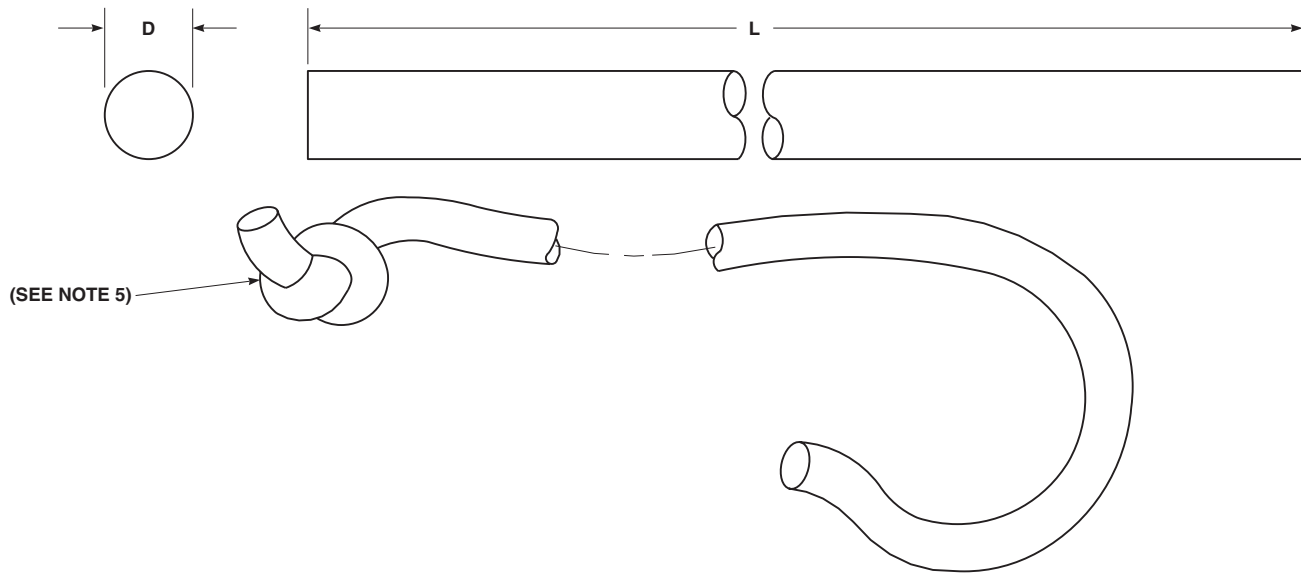

| NOMENCLATURE     | L LENGTH | D DIAMETER | SIKORSKY<br>PART NUMBER |
|------------------|----------|------------|-------------------------|
| ROPE PLUG HANDLE | 264.0    | 0.375      | 70700-20369-102         |
|                  | 108.0    |            | 70700-20507-104         |
|                  | 46.0     |            | 70700-20508-102         |
|                  | 31.0     |            | 70700-20509-103         |
|                  | 48.0     |            | 70700-20512-103         |
|                  | 36.0     |            | 70700-20512-106         |
|                  | 24.0     |            | 70700-20514-103         |
|                  | 48.0     |            | 70700-20515-102         |
|                  | 53.0     |            | 70700-20515-104         |

## NOTES

1. MAKE FROM NYLON ROPE, MIL-R-17343, NSN 4020-00-641-8899.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. SINGE ENDS TO PREVENT UNRAVELING.
4. IDENTIFY PARTS PER MIL-STD-130.
5. INSTALL ROPE THROUGH 70700-20507-105 WASHER AND INLET PLUG. TIE AND HEAT-SEAL KNOT.


PART NUMBER: 70700-20369-102, 70700-20507-104, 70700-20508-102, 70700-20509-103, 70700-20512-103, 70700-20512-106, 70700-20514-103, 70700-20515-104

AK1629A  
SA

Figure 29. Rope, Plug Handle.



FIELD MANUFACTURE ITEMS - Continued

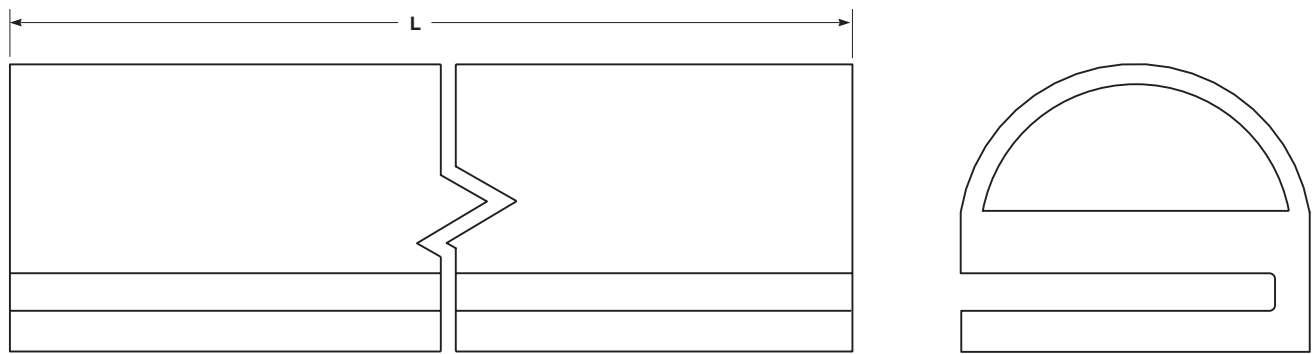

| NOMENCLATURE                | L LENGTH | SIKORSKY<br>PART NUMBER |
|-----------------------------|----------|-------------------------|
| CREW DOOR SEALS             | 189.00   | 76122-82279-003         |
| GUNNER'S WINDOW<br>SEALS    | 36.75    | 70216-02401-104         |
|                             | 36.75    | 70216-02402-110         |
|                             | 38.34    | 70216-02402-124         |
| CARGO DOOR,<br>WINDOW SEALS | 106.00   | 70217-02701-101         |
|                             | 106.00   | 70217-02701-107         |
| MAIN ROTOR PYLON SEALS      | 36.00    | 70219-04200-135         |

NOTES

- 1. MAKE FROM AMS 3240 RUBBER EXTRUSION, PART NUMBER S6122-82279-001, NSN 5330-01-345-8543.
- 2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
- 3. IDENTIFY PARTS PER MIL-STD-190. STAMP OR STENCIL PART NUMBER AND DATE OF MANUFACTURE ON PARTS WITH OPAQUE GREEN INK, TT-I-1795. USE 1/16 TO 1/8 INCH HIGH SANS SERIF CHARACTERS.

EXAMPLE: 

P/N 70216-02401-107

PART NUMBER

3Q 86


THIRD QUARTER 1986

PART NUMBER: 76122-82279-003, 70216-02401-104, 70216-02402-110, 70216-02402-124, 70217-02701-101, 70217-02701-107, 70219-04200-135

AK1630B  
SA

Figure 30. Seals - Crew Door, Gunner’s Window, Cargo Door, and Rotor Pylon.

## FIELD MANUFACTURE ITEMS - Continued

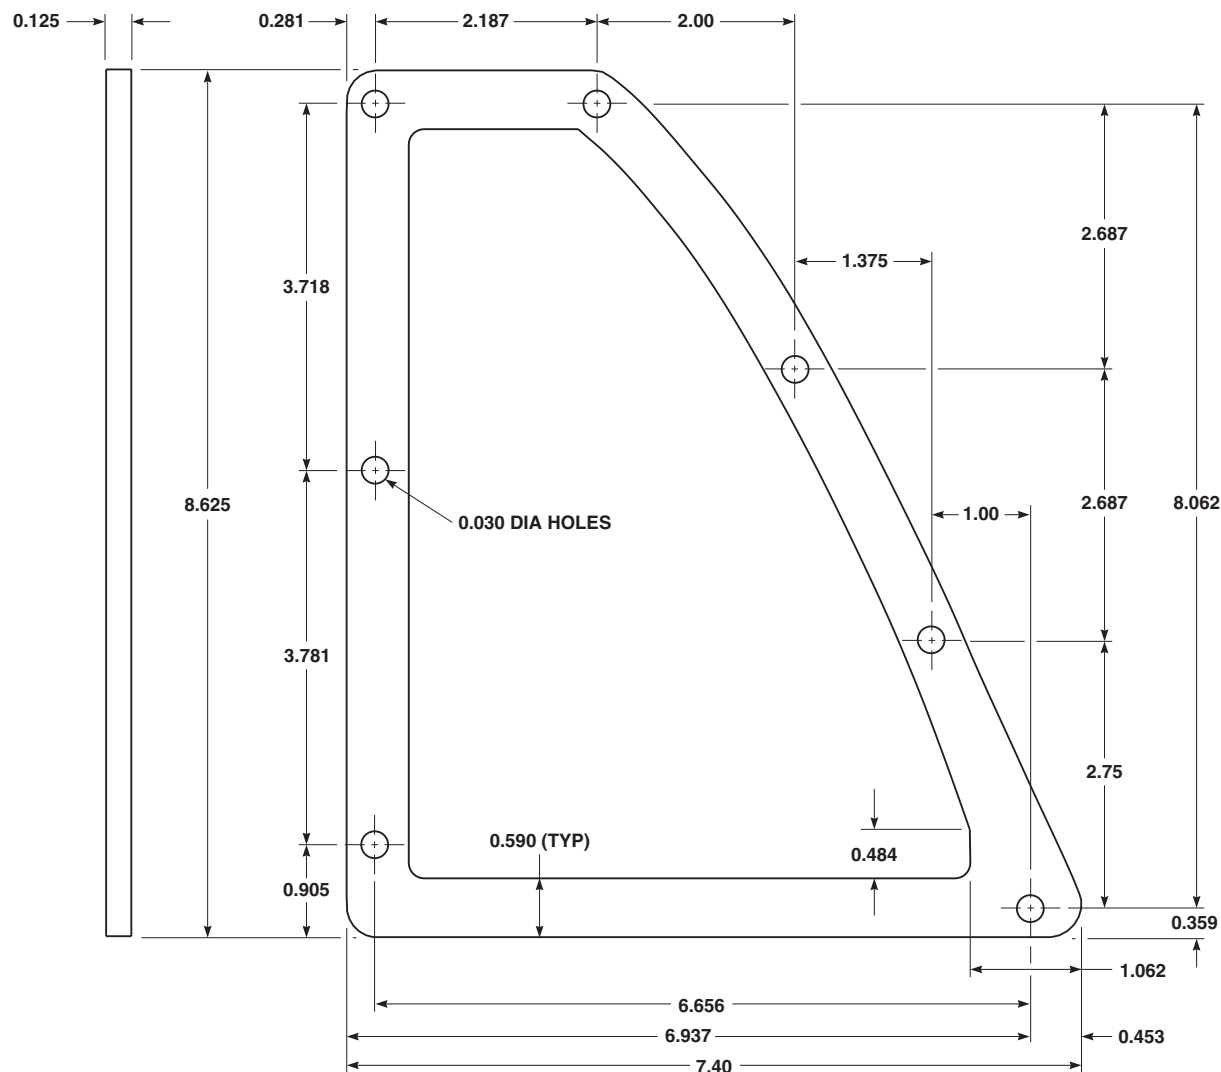

| NOMENCLATURE    | SIKORSKY<br>PART NUMBER |
|-----------------|-------------------------|
| CABIN DUCT SEAL | 70500-02057-102         |

## NOTES

1. MAKE FROM RUBBER, MIL-R-6855, TYPE A, CLASS 2, GRADE 40, 0.125 INCH THICK, NSN 9320-00-241-9759.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. IDENTIFY PARTS PER MIL-STD-190. STAMP OR STENCIL PART NUMBER AND DATE OF MANUFACTURE ON PARTS WITH OPAQUE GRAY INK, TT-I-1795. USE 1/16 TO 1/8 INCH HIGH SANS SERIF CHARACTERS.


EXAMPLE: P/N 70216-02401-107 3Q 86  
 PART NUMBER THIRD QUARTER 1986

PART NUMBER: 70500-02057-102

AK1631A  
SA

Figure 31. Cabin Duct Seal.

## FIELD MANUFACTURE ITEMS - Continued

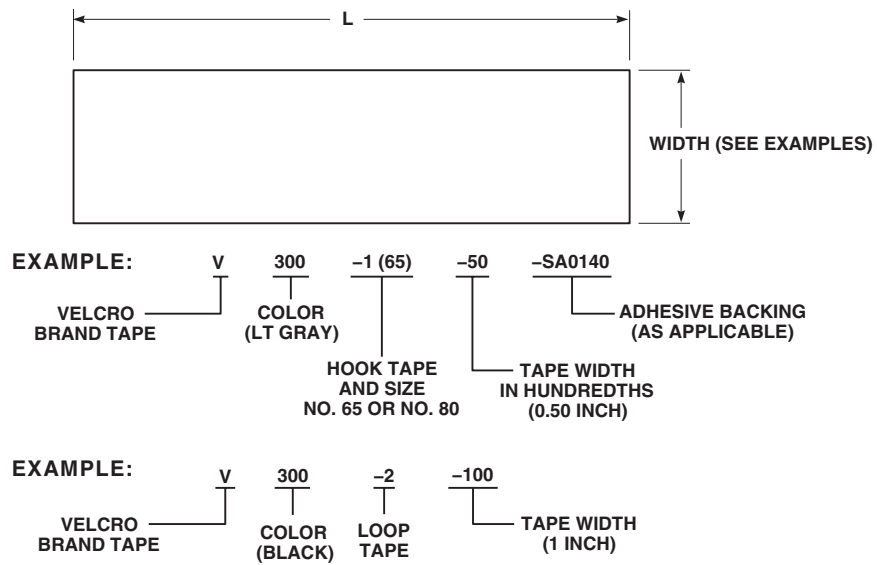

| PART NUMBER                 | L LENGTH | SIKORSKY PART NUMBER | NSN              |
|-----------------------------|----------|----------------------|------------------|
| V300-1(65)-50 (SEE NOTE 3)  | —        | —                    | 8315-00-168-3280 |
| V300-1(65)-63               | 43.68    | 70500-02053-119      | 8315-00-935-6762 |
|                             | 34.50    | 70500-02053-120      |                  |
|                             | 12.75    | 70500-02053-121      |                  |
|                             | 3.12     | 70500-02061-127      |                  |
|                             | 10.87    | 70500-02061-128      |                  |
|                             | 6.37     | 70500-02061-129      |                  |
|                             | 16.00    | 70500-02062-125      |                  |
| V300-1(65)-75               | —        | —                    | 8315-00-901-9717 |
| V300-1(65)-100              | —        | —                    | 8315-00-168-3280 |
| V300-1(65)-150 (SEE NOTE 4) | 0.81     | 70500-02063-124      | 8315-00-901-9717 |
|                             | 1.75     | 70500-02063-126      |                  |
|                             | 0.75     | 70500-02063-152      |                  |
|                             | 3.50     | 70500-02063-212      |                  |
|                             | 4.00     | 70500-02063-214      |                  |
|                             | 4.12     | 70500-02063-216      |                  |
|                             | 2.25     | 70500-02063-218      |                  |
|                             | 5.00     | 70500-02063-220      |                  |
|                             | 2.00     | 70500-02063-222      |                  |
|                             | 2.00     | 70500-02064-135      |                  |
|                             | 0.75     | 70500-02064-143      |                  |
|                             | 5.00     | 70500-02064-212      |                  |
|                             | 5.00     | 70500-02064-214      |                  |
|                             | 5.50     | 70500-02064-216      |                  |
|                             | 9.62     | 70500-02064-221      |                  |
| V300-2-63                   | 57.31    | 70500-02053-122      | 8315-00-935-6723 |
|                             | 48.12    | 70500-02053-123      |                  |
|                             | 10.87    | 70500-02061-125      |                  |
|                             | 6.37     | 70500-02061-126      |                  |
|                             | 16.00    | 70500-02062-126      |                  |
| V300-2-75                   | —        | —                    | 8315-01-133-9781 |
| V300-2-150 (SEE NOTE 5)     | 0.81     | 70500-02063-125      | 8315-01-133-9781 |
|                             | 3.50     | 70500-02063-211      |                  |
|                             | 4.00     | 70500-02063-213      |                  |
|                             | 4.12     | 70500-02063-215      |                  |
|                             | 2.25     | 70500-02063-217      |                  |
|                             | 5.00     | 70500-02063-219      |                  |
|                             | 2.00     | 70500-02063-221      |                  |
|                             | 0.75     | 70500-02064-142      |                  |
|                             | 4.00     | 70500-02064-210      |                  |
|                             | 2.50     | 70500-02064-211      |                  |
|                             | 5.00     | 70500-02064-213      |                  |
|                             | 5.00     | 70500-02064-215      |                  |
|                             | 5.50     | 70500-02064-217      |                  |
|                             | 5.50     | 70500-02064-217      |                  |

AK1632\_1  
SA

Figure 32. Velcro Tape. (Sheet 1 of 3)

## FIELD MANUFACTURE ITEMS - Continued

| PART NUMBER                          | L LENGTH | SIKORSKY<br>PART NUMBER | NSN              |
|--------------------------------------|----------|-------------------------|------------------|
| V300-1(65)-50-SA0140 (SEE NOTE 7)    | 95.00    | 70070-20014-102         | (SEE NOTE 6)     |
|                                      | 70.00    | 70070-20014-105         |                  |
|                                      | 70.00    | 70070-20014-108         |                  |
| V300-2-50-SA0140 (SEE NOTES 7 AND 9) | 72.00    | 70216-02401-126         | (SEE NOTE 6)     |
|                                      | 72.00    | 70216-02402-129         |                  |
|                                      | 98.00    | 70217-02705-107         |                  |
| V300-2-100-SA0140 (SEE NOTE 7)       | 0.75     | 70500-02063-153         | (SEE NOTE 6)     |
| V300-1(80)-75-SA0145 (SEE NOTE 8)    | 3.81     | 70217-01003-159         | (SEE NOTE 6)     |
|                                      | 14.28    | 70217-01003-161         |                  |
| V300-2-75-SA0145 (SEE NOTE 8)        | 3.81     | 70217-01003-158         | (SEE NOTE 6)     |
|                                      | 14.28    | 70217-01003-160         |                  |
| V300-1(65)-50 (SEE NOTE 10)          | 13.0     | 70070-20013-108         | (SEE NOTE 6)     |
|                                      | 23.0     |                         |                  |
|                                      | 19.0     | 70070-20013-112         |                  |
|                                      | 19.0     | 70070-20013-114         |                  |
|                                      | 6.5      | 70070-20013-116         |                  |
|                                      | 3.0      | 70070-20013-118         |                  |
|                                      | 9.5      | 70070-20013-120         |                  |
|                                      | 6.0      | 70070-20013-122         |                  |
|                                      | 8.0      | 70070-20013-124         |                  |
|                                      | 35.0     | 70070-20013-126         |                  |
|                                      | 1.75     | 70070-20013-134         |                  |
|                                      | 3.0      | 70070-20013-151         |                  |
| V330-1(65)-100                       | 4.0      | 70215-02312-105         | (SEE NOTE 6)     |
| V330-1(80)-50 (SEE NOTE 11)          | -        | -                       | 8315-00-935-6761 |
| V330-1(80)-100                       | -        | -                       | 8315-00-935-6761 |
| V330-1(80)-200                       | -        | -                       | 8315-00-926-4931 |
| V330-2-50 (SEE NOTE 12)              | 13.0     | 70070-20013-107         | 8315-00-978-0113 |
|                                      | 23.0     | 70070-20013-109         |                  |
|                                      | 19.0     | 70070-20013-111         |                  |
|                                      | 19.0     | 70070-20013-113         |                  |
|                                      | 6.5      | 70070-20013-115         |                  |
|                                      | 3.0      | 70070-20013-117         |                  |
|                                      | 9.5      | 70070-20013-119         |                  |
|                                      | 6.0      | 70070-20013-121         |                  |
|                                      | 8.0      | 70070-20013-123         |                  |
|                                      | 35.0     | 70070-20013-125         |                  |
|                                      | 1.75     | 70070-20013-133         |                  |
|                                      | 44.0     | 70070-20013-137         |                  |
|                                      | 36.0     | 70070-20013-138         |                  |
|                                      | 5.0      | 70070-20013-139         |                  |
|                                      | 3.5      | 70070-20013-140         |                  |
|                                      | 21.0     | 70070-20013-141         |                  |
|                                      | 3.0      | 70070-20013-150         |                  |
|                                      |          | 70070-20013-160         |                  |
|                                      |          | 70070-20013-161         |                  |
|                                      |          | 70070-20013-162         |                  |
|                                      |          | 70070-20013-163         |                  |
|                                      |          | 70070-20013-164         |                  |
| V330-2-63                            | -        | -                       | 8315-00-935-6763 |
| V330-2-75                            | -        | -                       | 8315-00-066-5054 |
| V330-2-200 (SEE NOTE 13)             | 4.0      | 70215-02312-104         | 8315-00-978-0113 |

Figure 32. Velcro Tape. (Sheet 2 of 3)

---

FIELD MANUFACTURE ITEMS - Continued

## NOTES

1. MAKE VELCRO TAPE STRIPS, AS REQUIRED, USING MATERIAL AND DIMENSIONS LISTED IN CHART.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. MAKE FROM V300-1(65)-100.
4. MAKE FROM TWO STRIPS OF V300-1(65)-75.
5. MAKE FROM TWO STRIPS OF V300-2-75.
6. MADE BY HARTWELL CO., FSCM 83014.
7. SOLVENT-ACTIVATED ADHESIVE- BACKED TAPE FOR BONDING TO POROUS SURFACES.
8. SOLVENT-ACTIVATED ADHESIVE-BACKED TAPE FOR BONDING TO METAL SURFACES.
9. MAKE FROM V300-2-100-SA0140.
10. MAKE FROM V330-1(65)-100.
11. MAKE FROM V330-1(80)-100.
12. MAKE FROM V330-2-100.
13. MAKE FROM TWO STRIPS OF V330-2-100.
14. ATTACH VELCRO STRIPS, AS SPECIFIED, BOND OR SEW TAPE IN PLACE PER TM 1-1500-204-23 AND FED-STD-751.
15. IDENTIFY PARTS PER MIL-STD-130.

AK1632\_3A  
SA

Figure 32. Velcro Tape. (Sheet 3 of 3)

FIELD MANUFACTURE ITEMS - Continued



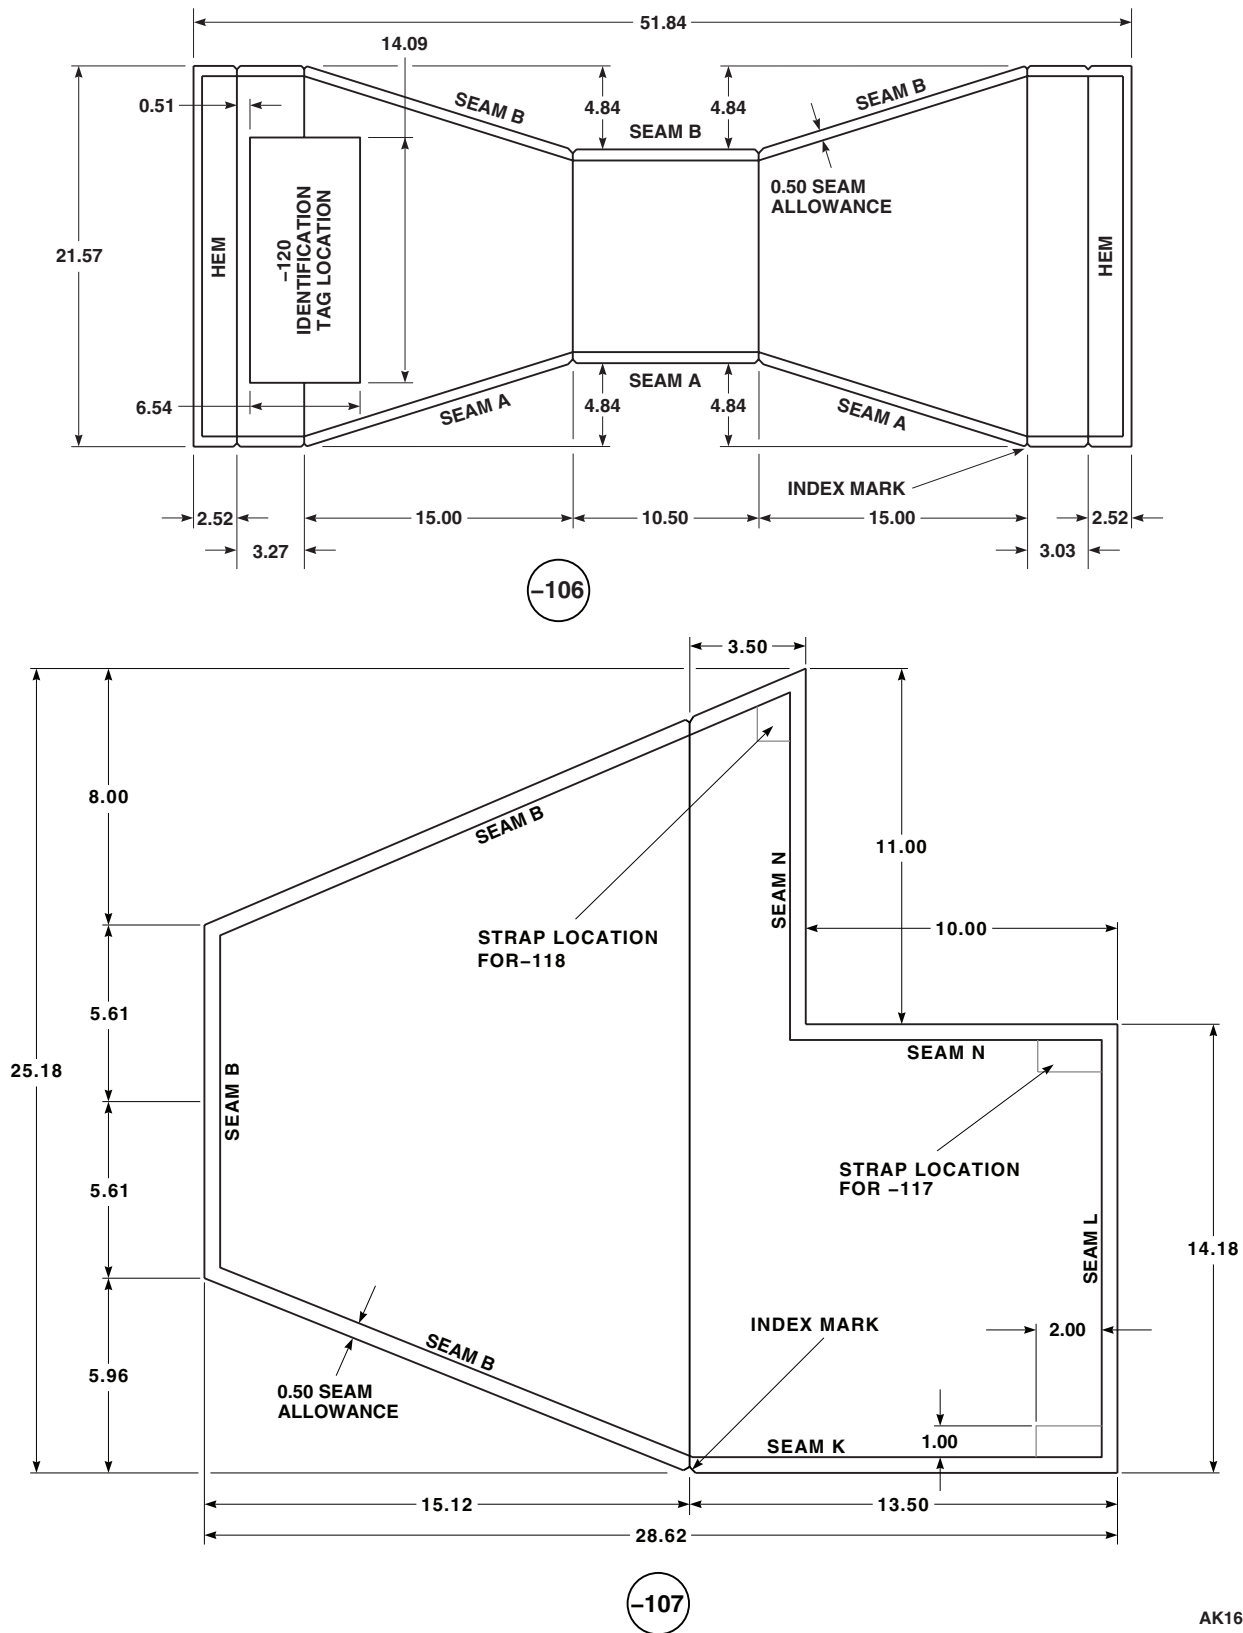


Figure 33. Oil Cooler Cover Assembly. (Sheet 1 of 7)

FIELD MANUFACTURE ITEMS - Continued

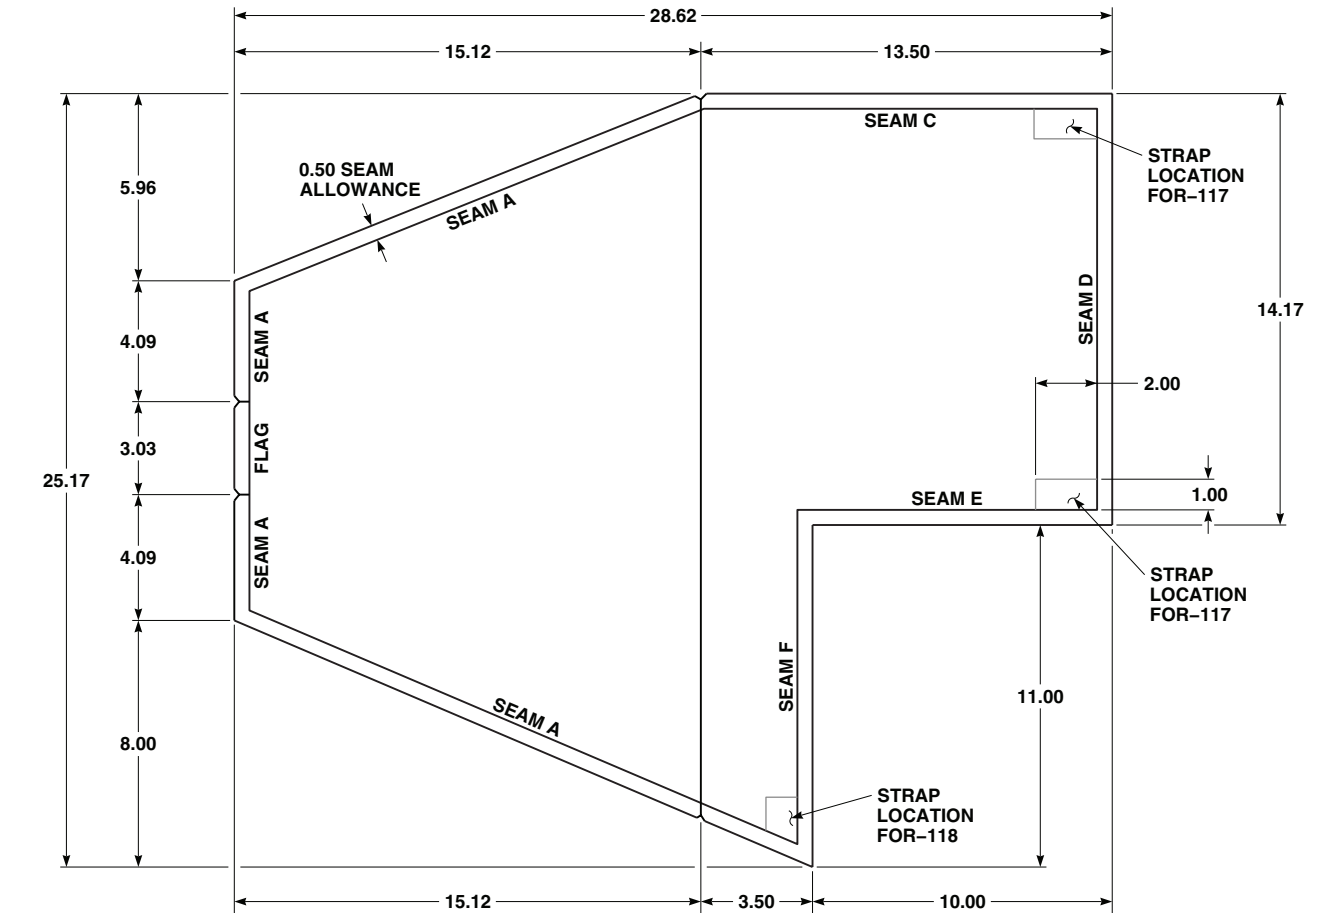

-108

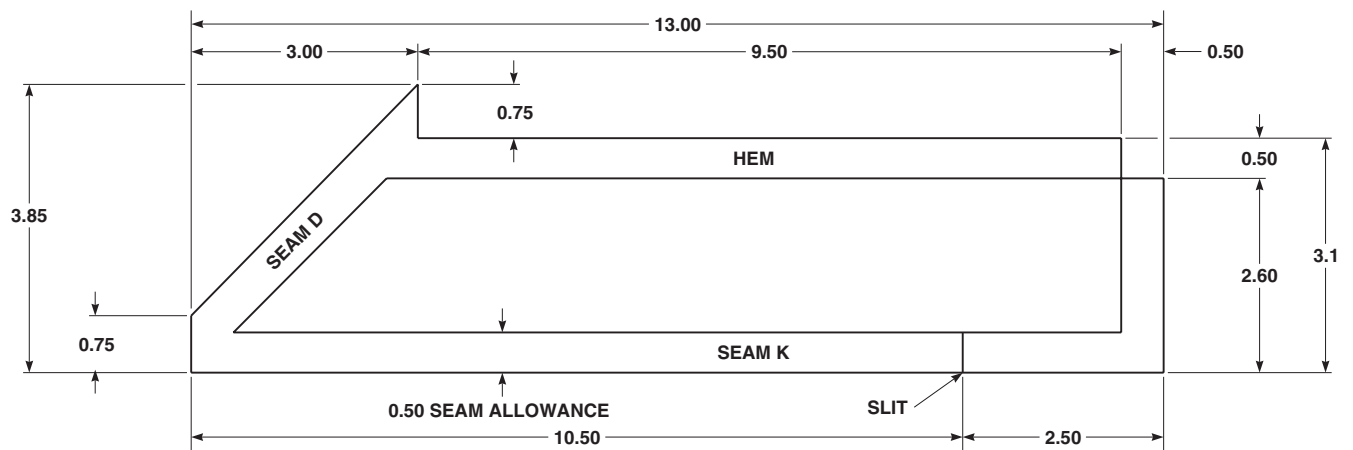


-109


AK1633\_2A  
SA

Figure 33. Oil Cooler Cover Assembly. (Sheet 2 of 7)

FIELD MANUFACTURE ITEMS - Continued

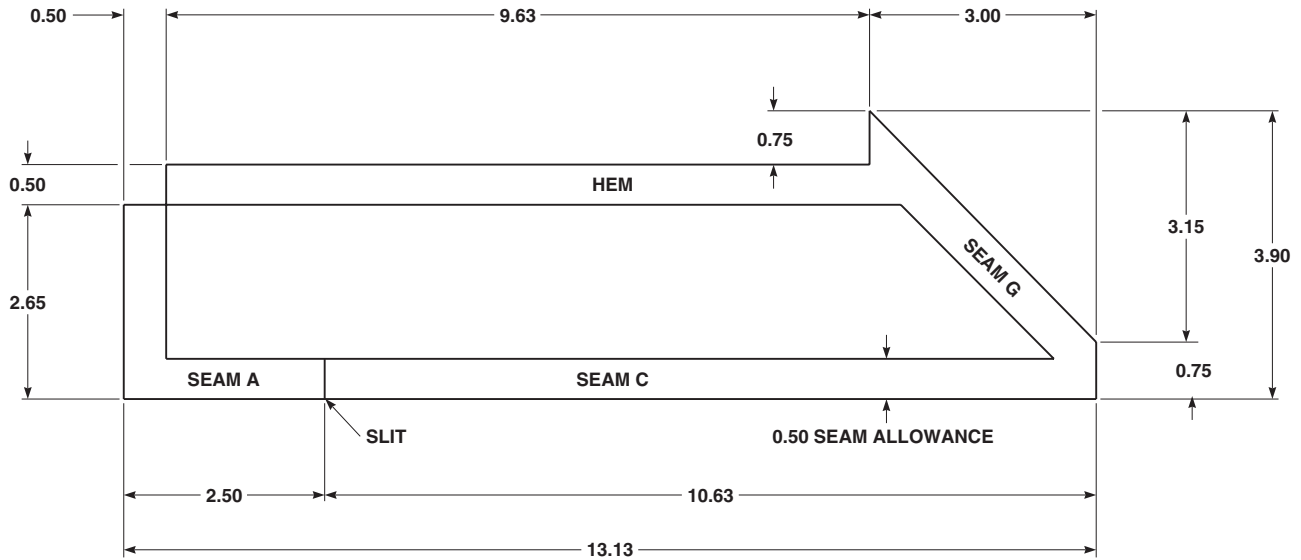

-110

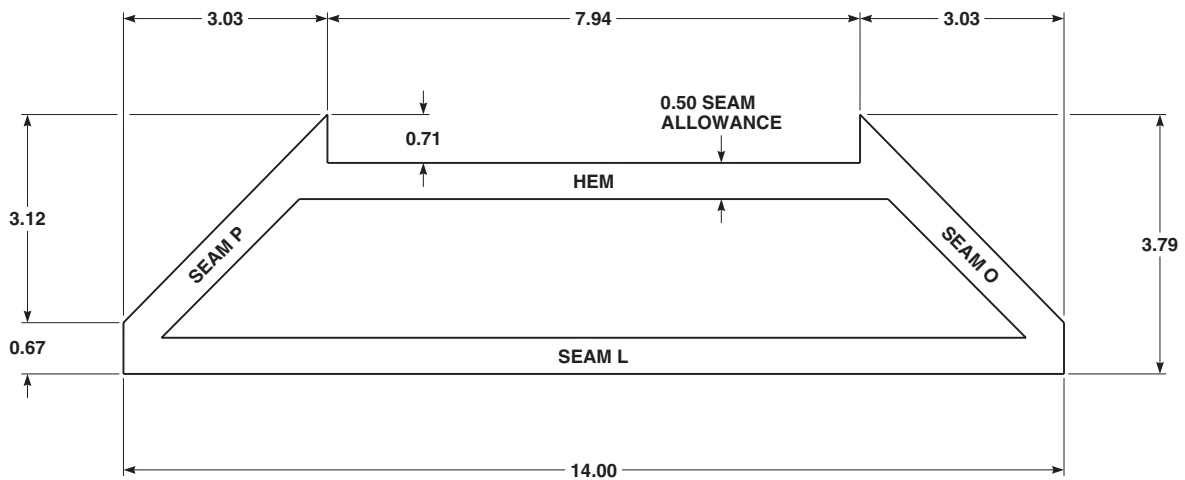


-111

AK1633\_3A  
SA


Figure 33. Oil Cooler Cover Assembly. (Sheet 3 of 7)



FIELD MANUFACTURE ITEMS - Continued

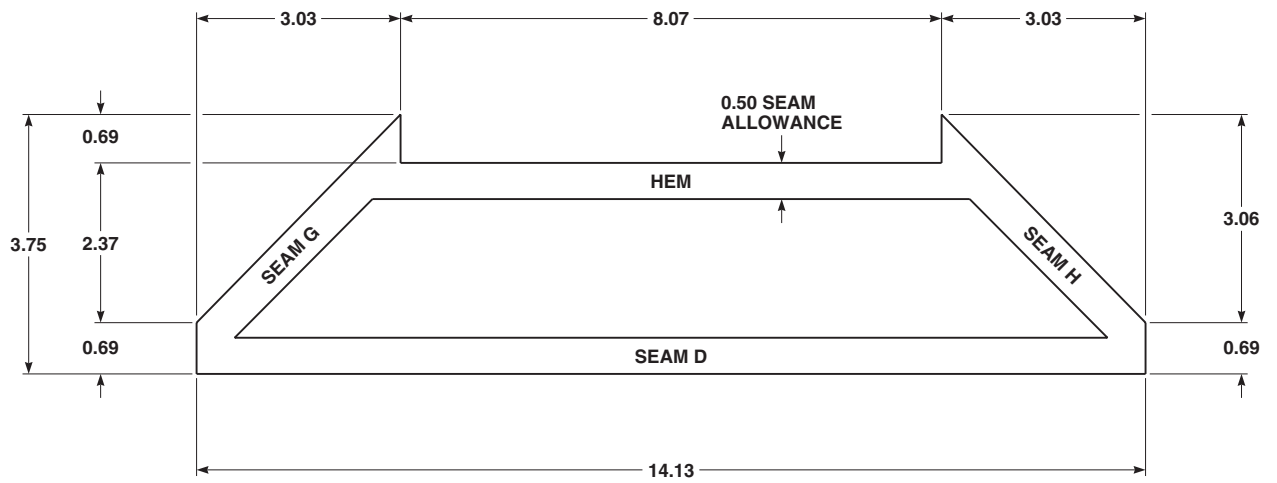

-112

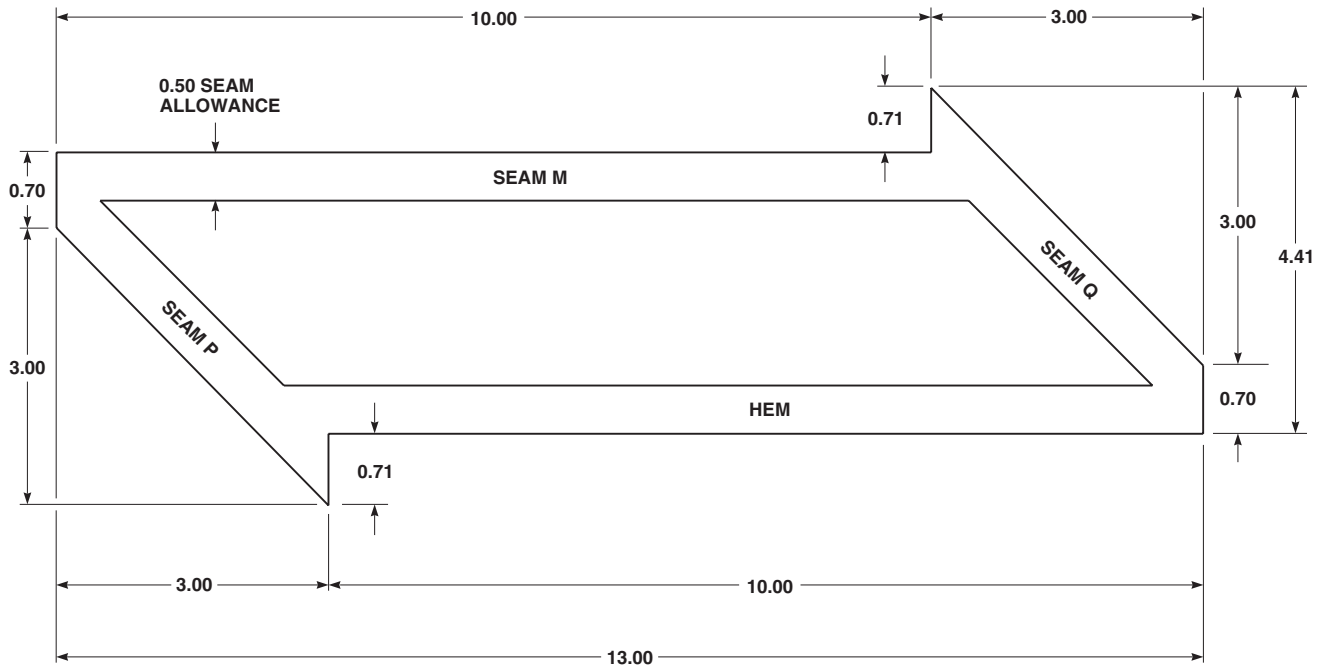


-113


AK1633\_4A  
SA

Figure 33. Oil Cooler Cover Assembly. (Sheet 4 of 7)

FIELD MANUFACTURE ITEMS - Continued

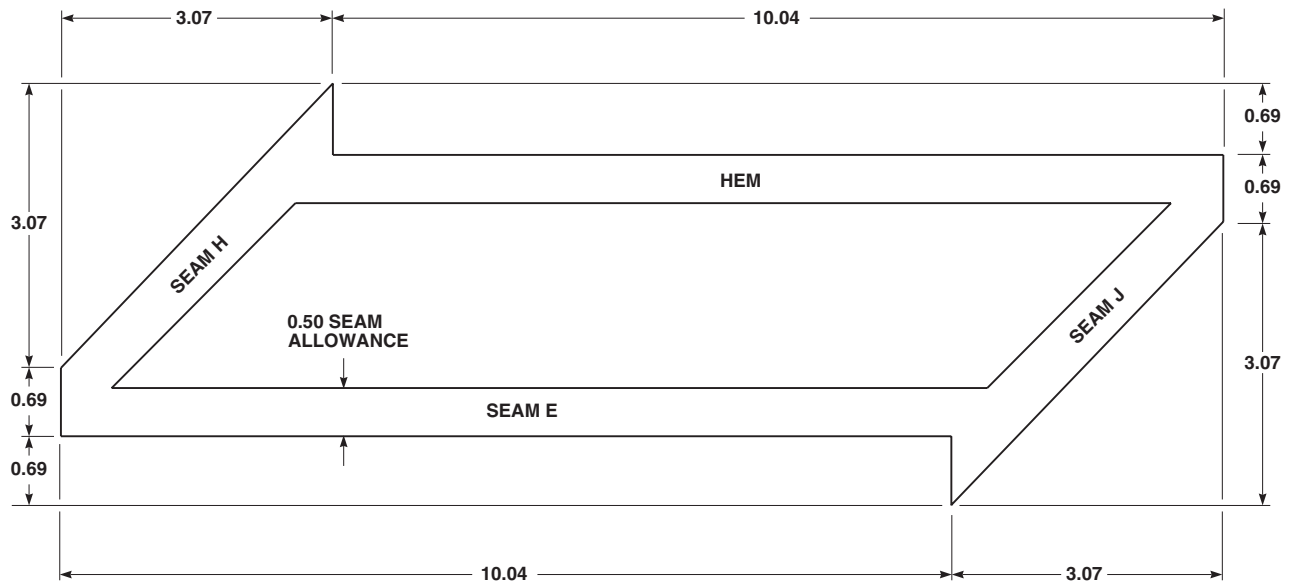

-114

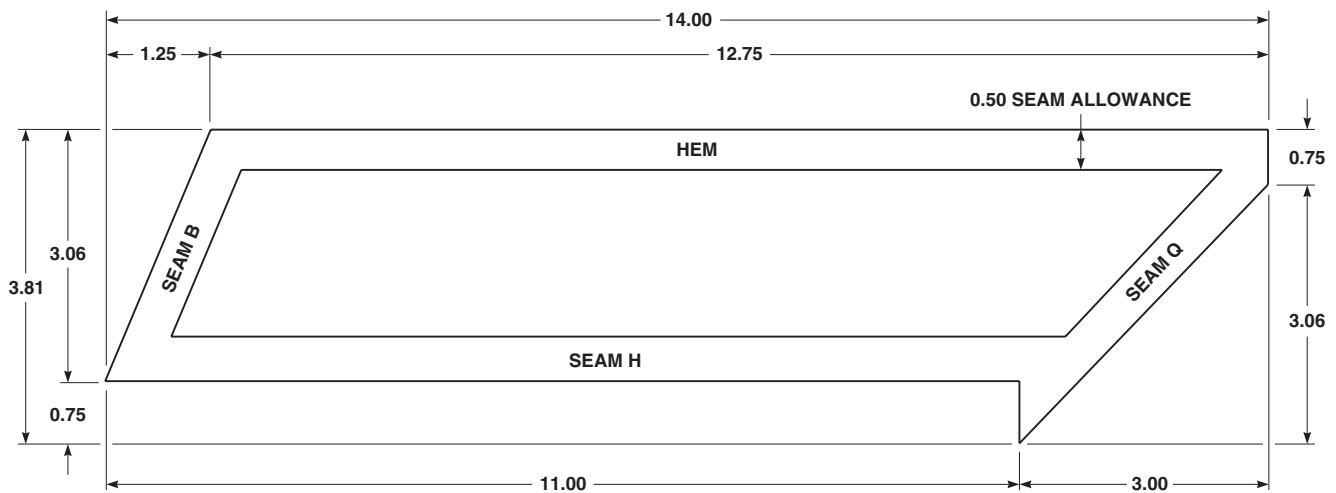


-115


AK1633\_5A  
SA

Figure 33. Oil Cooler Cover Assembly. (Sheet 5 of 7)

FIELD MANUFACTURE ITEMS - Continued

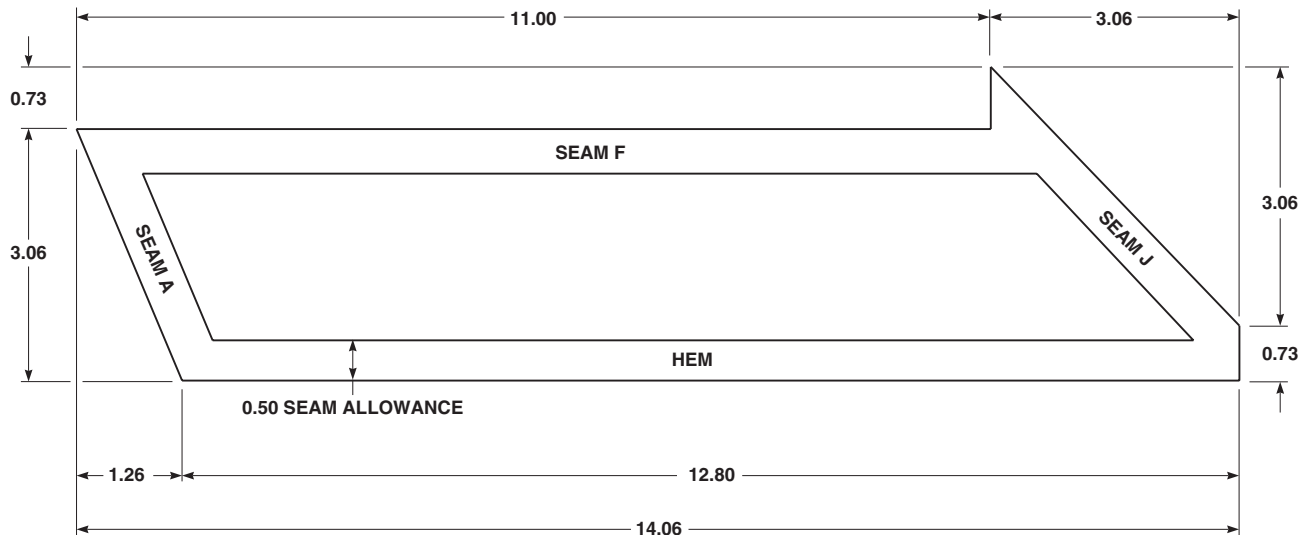

-116

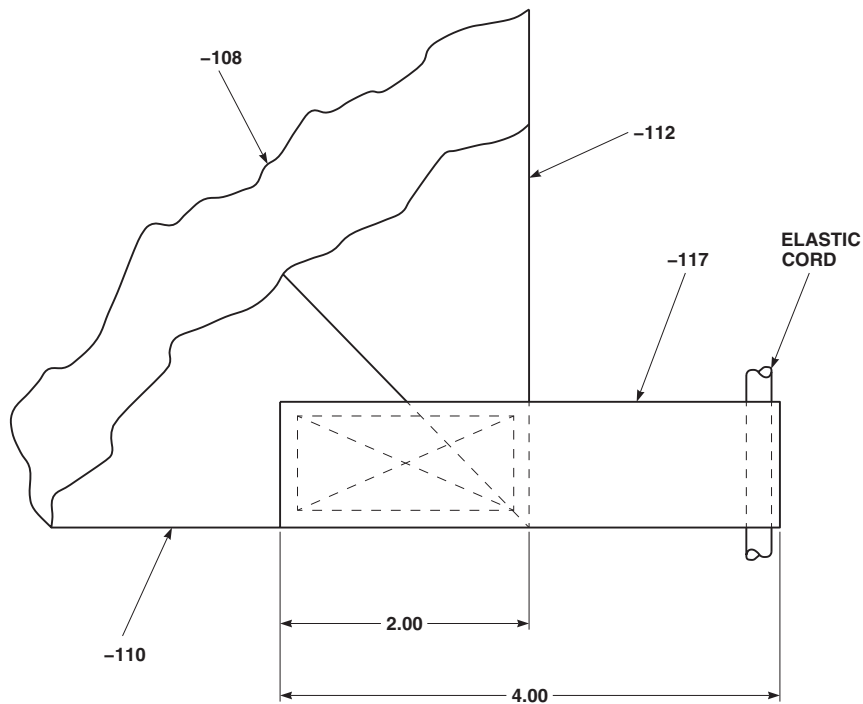


-117

AK1633\_6A  
SA

Figure 33. Oil Cooler Cover Assembly. (Sheet 6 of 7)

## FIELD MANUFACTURE ITEMS - Continued

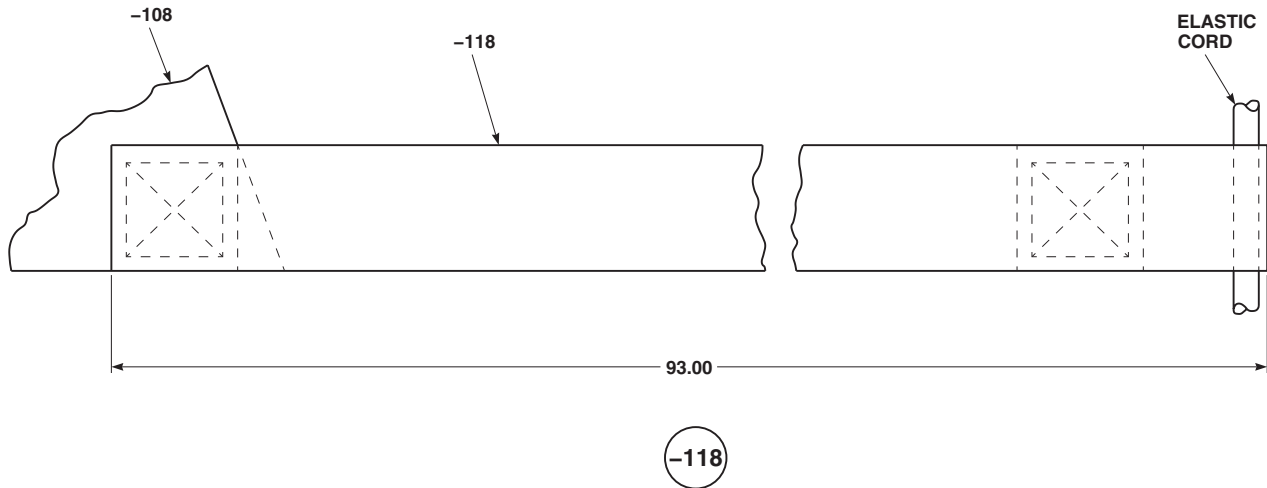

| NOMENCLATURE              | SIKORSKY<br>PART NUMBER |
|---------------------------|-------------------------|
| OIL COOLER COVER ASSEMBLY | 70700-20511-106         |
|                           | 70700-20511-107         |
|                           | 70700-20511-108         |
|                           | 70700-20511-109         |
|                           | 70700-20511-110         |
|                           | 70700-20511-111         |
|                           | 70700-20511-112         |
|                           | 70700-20511-113         |
|                           | 70700-20511-114         |
|                           | 70700-20511-115         |
|                           | 70700-20511-116         |
|                           | 70700-20511-117         |
|                           | 70700-20511-118         |

## NOTES

1. MAKE FROM OLIVE DRAB VINYL COATED NYLON CLOTH, MIL-C-20696, TYPE 1, CLASS 2, NSN 8305-00-286-7034.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED,  $\pm 0.010$  INCH.
3. IDENTIFY PARTS PER MIL-STD-130.
4. ALL SEAMS AND STITCHING TO BE IN ACCORDANCE WITH FED-STD-751 AND TM 1-1500-204-23.


PART NUMBER: 70700-20511-106, THOUGH -118

AK1633\_7A  
SA

Figure 33. Oil Cooler Cover Assembly. (Sheet 7 of 7)



## FIELD MANUFACTURE ITEMS - Continued

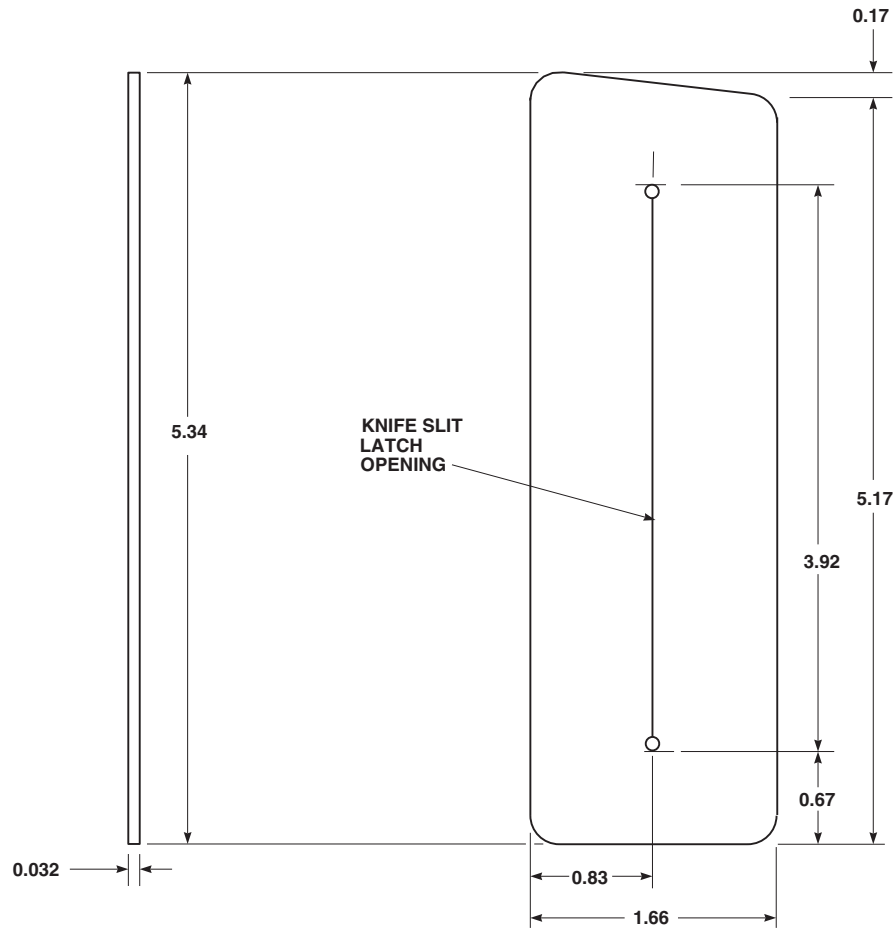

| NOMENCLATURE               | SIKORSKY<br>PART NUMBER |
|----------------------------|-------------------------|
| GUNNER'S WINDOW LATCH SEAL | 70216-02402-122         |
|                            | 70216-02402-150         |
|                            | 70216-02402-158         |
|                            | 70216-02402-159         |
|                            | 70216-02402-160         |
|                            | 70216-02402-163         |
|                            | 70216-02402-164         |
|                            | 70216-02402-166         |
|                            | 70216-02402-167         |

## NOTES

1. MAKE FROM NEOPRENE, MIL-R-6855, CLASS 2, GRADE 60, 0.032 INCH THICK, NSN 9320-01-157-9069.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. IDENTIFY PARTS PER MIL-STD-190. STAMP OR STENCIL PART NUMBER AND DATE OF MANUFACTURE ON PARTS WITH OPAQUE GREEN INK, TT-I-1795. USE 1/16 TO 1/8 INCH HIGH SANS SERIF CHARACTERS.


EXAMPLE: P/N 70216-02401-107      3Q 86  
                     PART NUMBER      THIRD QUARTER 1986

PART NUMBER: 70219-02402-122, -150, -158, -159, -160, -163, -164, -166, -167

AK1638B  
SA

Figure 35. Gunner's Window Latch Seal.

FIELD MANUFACTURE ITEMS - Continued

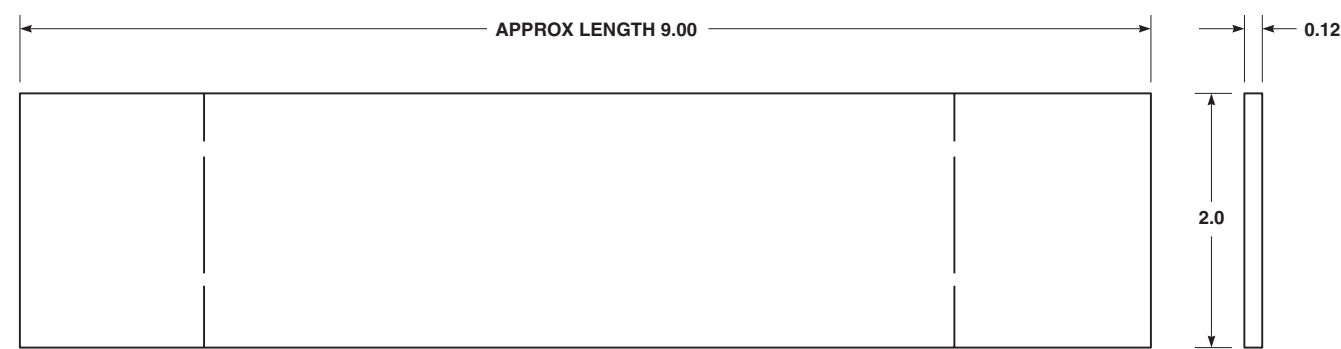

| NOMENCLATURE              | SIKORSKY<br>PART NUMBER            |
|---------------------------|------------------------------------|
| DUCT INSTALLATION GASKETS | 70500-02057-159<br>70500-02057-160 |

NOTES

- 1. MAKE FROM SHEET RUBBER, MIL-R-6130, GRADE A, TYPE 2, SOFT, NSN 9320-00-814-4583.
- 2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
- 3. IDENTIFY PARTS PER MIL-STD-190. STAMP OR STENCIL PART NUMBER AND DATE OF MANUFACTURE ON PARTS WITH OPAQUE GRAY INK, TT-I-1795. USE 1/16 TO 1/8 INCH HIGH SANS SERIF CHARACTERS.
- 4. TRIM SEAL ON INSTALLATION.


EXAMPLE: P/N 70216-02401-107      3Q 86  
PART NUMBER      THIRD QUARTER 1986

PART NUMBER: 70500-02057-159, -160

AK1639B  
SA

Figure 36. Duct Installation Gasket.

## FIELD MANUFACTURE ITEMS - Continued

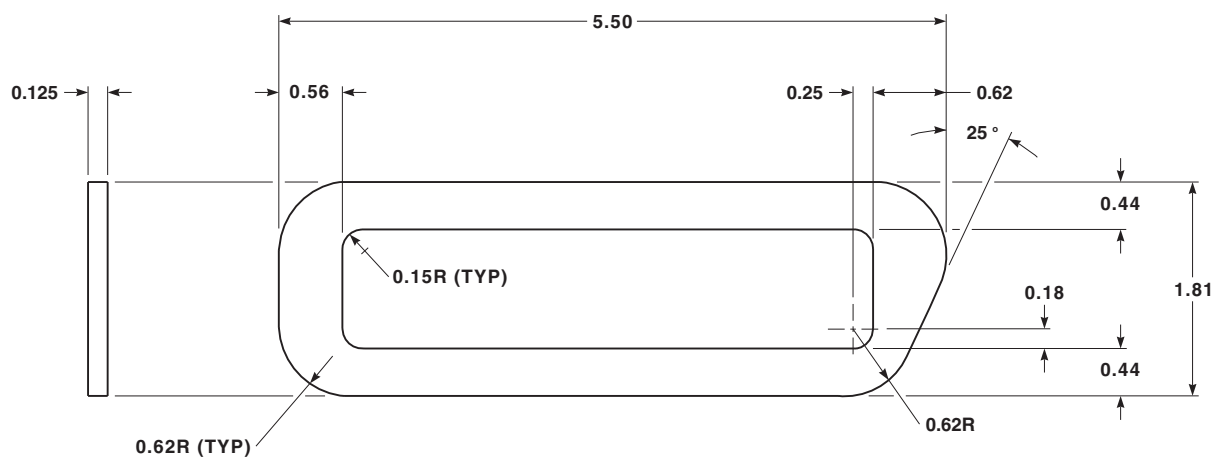

| NOMENCLATURE           | SIKORSKY<br>PART NUMBER |
|------------------------|-------------------------|
| DUCT INSTALLATION SEAL | 70500-02058-123         |

## NOTES

1. MAKE FROM RUBBER SHEET, MIL-R-6855, CLASS 1, GRADE 40, NSN 9320-00-059-6504.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. IDENTIFY PARTS PER MIL-STD-190. STAMP OR STENCIL PART NUMBER AND DATE OF MANUFACTURE ON PARTS WITH OPAQUE GRAY INK, TT-I-1795. USE 1/16 TO 1/8 INCH HIGH SANS SERIF CHARACTERS.

EXAMPLE: P/N 70216-02401-107  
PART NUMBER

3Q 86  
THIRD QUARTER 1986


PART NUMBER: 70500-02058-123

AK1640A  
SA


Figure 37. Duct Installation Seal.



## FIELD MANUFACTURE ITEMS - Continued

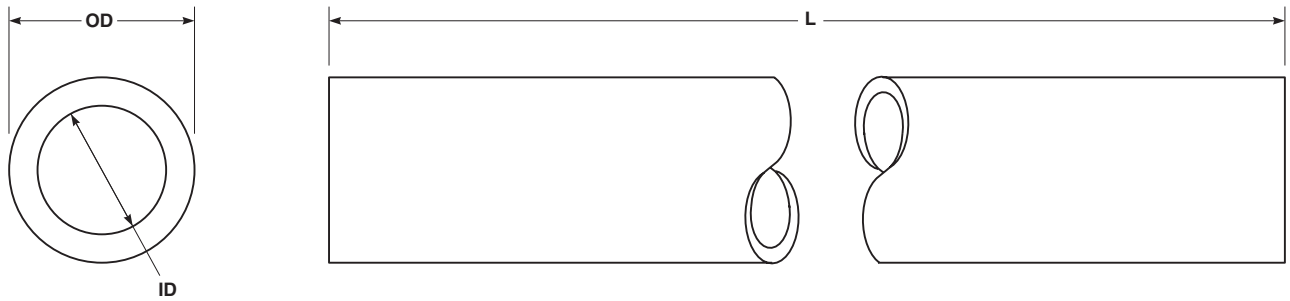

| NOMENCLATURE           | L LENGTH | OD OUTSIDE DIAMETER | ID INSIDE DIAMETER | SIKORSKY PART NUMBER |
|------------------------|----------|---------------------|--------------------|----------------------|
| HYDRAULIC DRAIN TUBING | 28.00    | 0.375               | 0.250              | 70651-03102-180      |
|                        | 34.00    |                     |                    | 70651-03102-181      |
|                        | 72.00    |                     |                    | 70651-03102-182      |
|                        | 66.00    |                     |                    | 70652-02251-174      |
|                        | 20.00    |                     |                    | 70652-02251-175      |

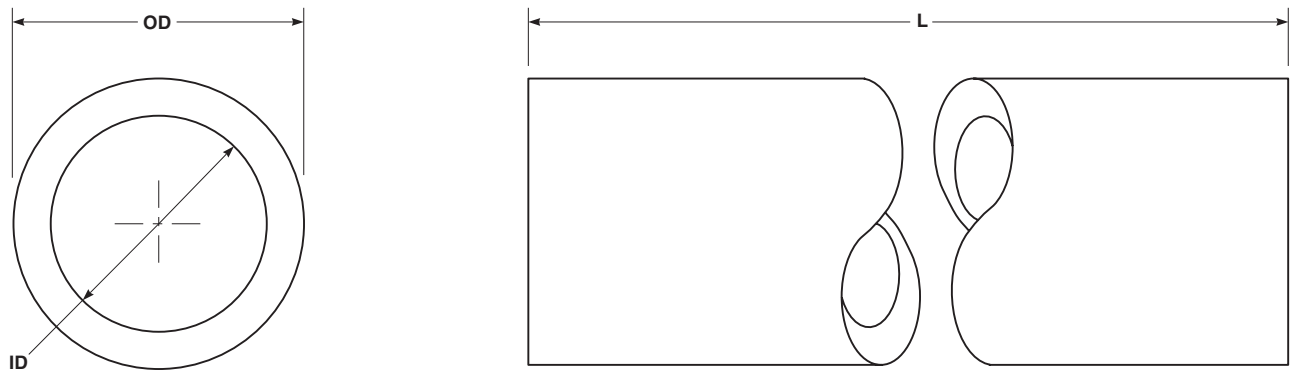

| NOMENCLATURE           | L LENGTH | OD OUTSIDE DIAMETER | ID INSIDE DIAMETER | SIKORSKY PART NUMBER |
|------------------------|----------|---------------------|--------------------|----------------------|
| HYDRAULIC DRAIN TUBING | 40.00    | 0.50                | 0.375              | 70652-02251-170      |
|                        | 72.00    |                     |                    | 70652-02251-171      |
|                        | 24.00    |                     |                    | 70652-02251-172      |
|                        | 2.50     |                     |                    | 70652-02251-177      |
|                        | 14.00    |                     |                    | 70652-02251-179      |
|                        | 76.00    |                     |                    | 70652-02251-180      |


## NOTES

1. MAKE FROM URETHANE TUBING, NSN 4720-01-004-8081.
2. MAKE FROM URETHANE TUBING, NSN 4720-01-145-6685.
3. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
4. CUT ENDS STRAIGHT.
5. DO NOT PAINT.
6. IDENTIFY PARTS PER MIL-STD-130.

AA8912B  
SA

Figure 38. Hydraulic Drain Tubing.

FIELD MANUFACTURE ITEMS - Continued



| NOMENCLATURE | D DIAMETER | L LENGTH | SIKORSKY<br>PART NUMBER |
|--------------|------------|----------|-------------------------|
| ELASTIC CORD | 0.187      | 8.00     | 70700-20460-103         |
|              |            | 25.32    | 70700-20511-119         |
|              |            | 37.29    | 70700-20511-121         |


NOTES

- 1. MAKE FROM ELASTIC CORD, MIL-C-5651, TYPE 3, NSN 8305-00-267-3116.
  - 2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
- PART NUMBER: 70700-20460-103, 70700-20511-119, -121

AK1642A  
SA

Figure 39. Elastic Cord.

## FIELD MANUFACTURE ITEMS - Continued

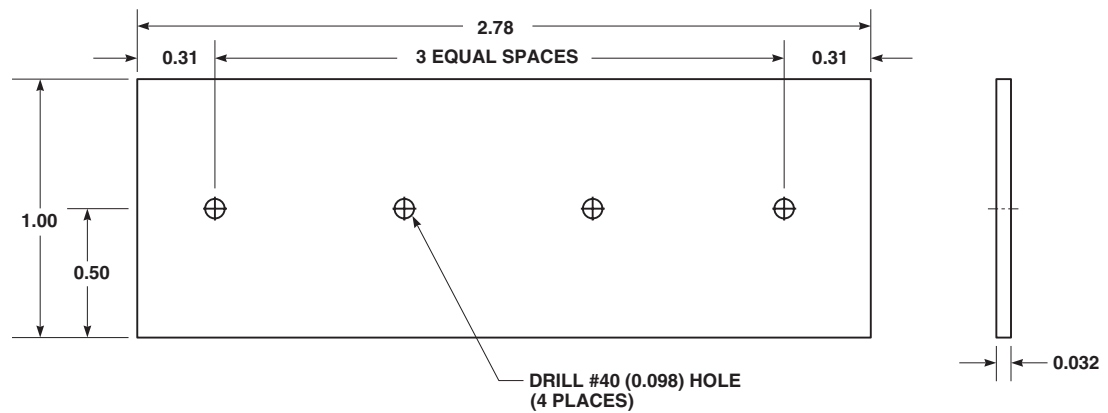

## NOTES


1. MAKE FROM 0.032 THICK 7075-T6 ALCLAD SHEET, QQ-A-250 / 13, NSN 9535-00-232-7535.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. DRILL HOLES, AS SHOWN IN FIGURE, PER TM 1-1500-204-23.
4. BREAK SHARP EDGES AND DEBURR HOLES.
5. CHEMICAL SURFACE TREAT DRILLED HOLES AND CUT EDGES WITH CORROSION RESISTANT COMPOUND (ALODINE) MIL-C-5541, NSN 8030-00-811-3723.
6. IDENTIFY PARTS PER MIL-STD-130.

PART NUMBER: 70217-01003-194

AK1643A  
SA

Figure 40. Strap.

FIELD MANUFACTURE ITEMS - Continued

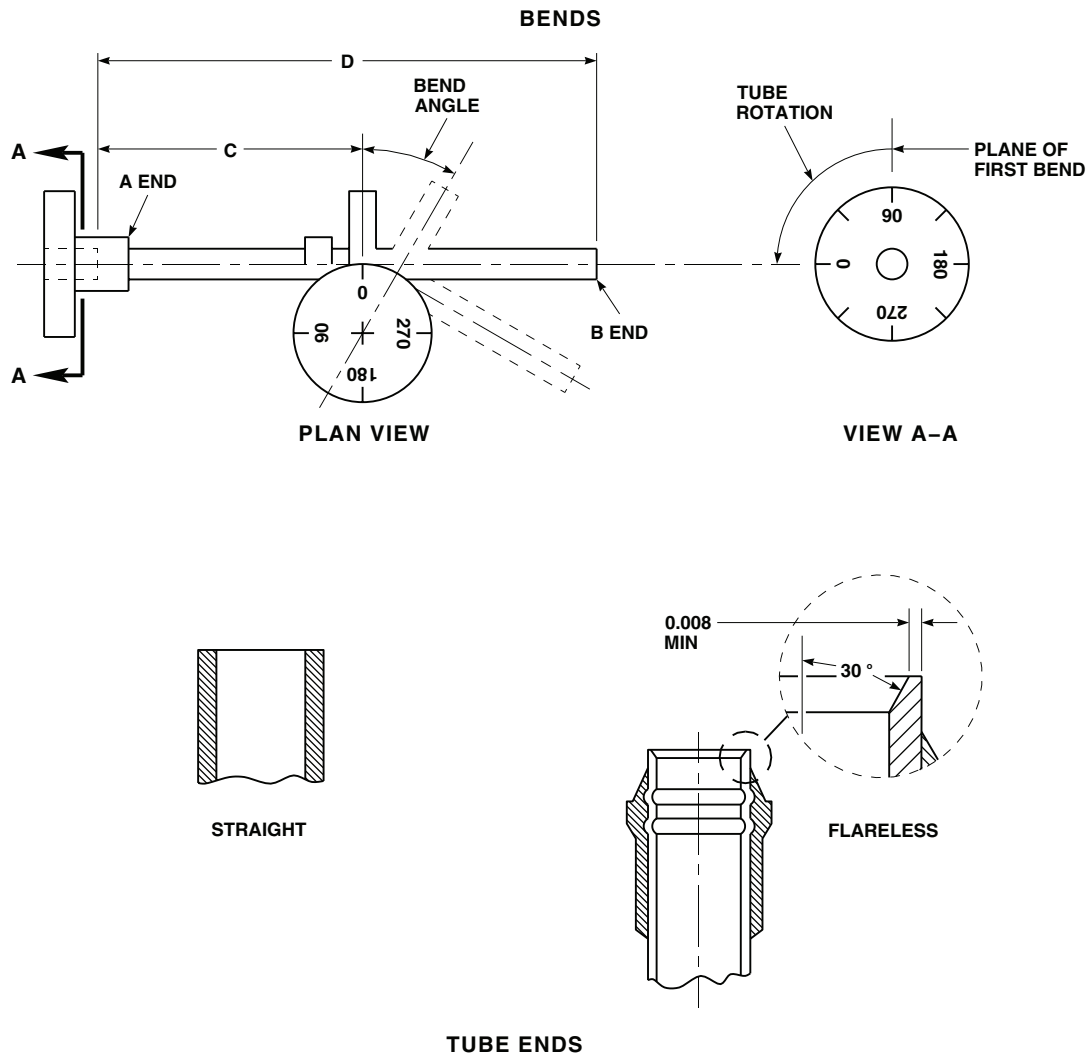

AK1543\_1  
SA

Figure 41. Hydraulic Tubing. (Sheet 1 of 13)

## FIELD MANUFACTURE ITEMS - Continued

## TUBE BEND DATA

| SPECIFICATION<br>AMS 5561                               |             | MATERIAL<br>21-6-9 ST STL |                       | OD<br>0.250             | GAGE<br>0.016 | STRAIGHT LENGTH<br>54.316                                                                                                                                                                            | FINISH SPEC<br>PASSIVATE (NOTE 3) |  |  |
|---------------------------------------------------------|-------------|---------------------------|-----------------------|-------------------------|---------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------|--|--|
| ENDS                                                    |             |                           |                       |                         | TYPE          | COLOR CODE                                                                                                                                                                                           | CONNECTING POINTS                 |  |  |
| A                                                       | (NOTE 4)    | D10036-4                  |                       | PERMA-SWAGE             | MIL-STD-1247  | FROM - UTILITY MODULE<br>90° PERMA-SWAGE ELBOW<br><br>TO - PERMASWAGE UNION                                                                                                                          |                                   |  |  |
| B                                                       | (NOTE 4)    | D10021A-4                 |                       | PERMA-SWAGE             |               |                                                                                                                                                                                                      |                                   |  |  |
| BEND NO.                                                | INCHES<br>C | TUBE ROTATION<br>(NOTE 1) | BEND ANGLE<br>DEGREES | BEND RADIUS<br>(NOTE 2) | MFR NOTES     | FUNCTION                                                                                                                                                                                             |                                   |  |  |
|                                                         |             |                           |                       |                         |               | APU RETURN                                                                                                                                                                                           |                                   |  |  |
| 1                                                       | 35.956      | 0                         | 21                    | 0.750                   |               | <b>NOTES</b><br><br>1. TUBE ROTATION, FROM PLANE OF FIRST BEND CCW VIEWED FROM B END, DEGREES.<br>2. MINIMUM BEND RADII PER MS33611.<br>3. FLUSH PER TM 1-1500-204-23.<br>4. SQUARE CUT AND CHAMFER. |                                   |  |  |
| 2                                                       | 32.139      | 176                       | 26                    | 0.750                   |               |                                                                                                                                                                                                      |                                   |  |  |
| 3                                                       | 9.264       | 185                       | 13                    | 0.750                   |               |                                                                                                                                                                                                      |                                   |  |  |
| 4                                                       | 3.143       | 96                        | 84                    | 0.750                   |               |                                                                                                                                                                                                      |                                   |  |  |
| 5                                                       |             |                           |                       |                         |               |                                                                                                                                                                                                      |                                   |  |  |
| 6                                                       |             |                           |                       |                         |               |                                                                                                                                                                                                      |                                   |  |  |
| 7                                                       |             |                           |                       |                         |               |                                                                                                                                                                                                      |                                   |  |  |
| 8                                                       |             |                           |                       |                         |               |                                                                                                                                                                                                      |                                   |  |  |
| 9                                                       |             |                           |                       |                         |               |                                                                                                                                                                                                      |                                   |  |  |
| 10                                                      |             |                           |                       |                         |               |                                                                                                                                                                                                      |                                   |  |  |
| 11                                                      |             |                           |                       |                         |               |                                                                                                                                                                                                      |                                   |  |  |
| 12                                                      |             |                           |                       |                         |               |                                                                                                                                                                                                      |                                   |  |  |
|                                                         |             |                           |                       |                         |               |                                                                                                                                                                                                      |                                   |  |  |
| HELICOPTER SERIAL NOS <b>UH-60A 77-22714 - 82-23747</b> |             |                           |                       |                         |               | MFR CODE 78286                                                                                                                                                                                       |                                   |  |  |
| NEXT ASSY 70652-02250-012                               |             |                           |                       |                         |               | TUBE PART NO. 70652-02252-149                                                                                                                                                                        |                                   |  |  |

Figure 41. Hydraulic Tubing. (Sheet 2 of 13)

## FIELD MANUFACTURE ITEMS - Continued

## TUBE BEND DATA

| SPECIFICATION<br>AMS 5561                           |          | MATERIAL<br>21-6-9 ST STL |                    | OD<br>0.250          | GAGE<br>0.016                 | STRAIGHT LENGTH<br>49.771                                                                                                                                                                        | FINISH SPEC<br>PASSIVATE (NOTE 3) |  |  |
|-----------------------------------------------------|----------|---------------------------|--------------------|----------------------|-------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------|--|--|
| ENDS                                                |          |                           |                    |                      | TYPE                          | COLOR CODE                                                                                                                                                                                       | CONNECTING POINTS                 |  |  |
| A                                                   | (NOTE 4) | D10036-4                  |                    | PERMA-SWAGE          | MIL-STD-1247                  | FROM - PERMASWAGE UNION                                                                                                                                                                          |                                   |  |  |
| B                                                   | (NOTE 4) | D10036-4                  |                    | PERMA-SWAGE          |                               | TO - PERMASWAGE UNION                                                                                                                                                                            |                                   |  |  |
| BEND NO.                                            | INCHES C | TUBE ROTATION (NOTE 1)    | BEND ANGLE DEGREES | BEND RADIUS (NOTE 2) | MFR NOTES                     | FUNCTION                                                                                                                                                                                         |                                   |  |  |
|                                                     |          |                           |                    |                      |                               | FIRST STAGE TAIL ROTOR SERVO, PRESSURE                                                                                                                                                           |                                   |  |  |
| 1                                                   | 32.001   | 0                         | 44                 | 0.750                |                               | <b>NOTES</b><br>1. TUBE ROTATION, FROM PLANE OF FIRST BEND CCW VIEWED FROM B END, DEGREES.<br>2. MINIMUM BEND RADII PER MS33611.<br>3. FLUSH PER TM 1-1500-204-23.<br>4. SQUARE CUT AND CHAMFER. |                                   |  |  |
| 2                                                   | 20.397   | 179                       | 35                 | 0.750                |                               |                                                                                                                                                                                                  |                                   |  |  |
| 3                                                   |          |                           |                    |                      |                               |                                                                                                                                                                                                  |                                   |  |  |
| 4                                                   |          |                           |                    |                      |                               |                                                                                                                                                                                                  |                                   |  |  |
| 5                                                   |          |                           |                    |                      |                               |                                                                                                                                                                                                  |                                   |  |  |
| 6                                                   |          |                           |                    |                      |                               |                                                                                                                                                                                                  |                                   |  |  |
| 7                                                   |          |                           |                    |                      |                               |                                                                                                                                                                                                  |                                   |  |  |
| 8                                                   |          |                           |                    |                      |                               |                                                                                                                                                                                                  |                                   |  |  |
| 9                                                   |          |                           |                    |                      |                               |                                                                                                                                                                                                  |                                   |  |  |
| 10                                                  |          |                           |                    |                      |                               |                                                                                                                                                                                                  |                                   |  |  |
| 11                                                  |          |                           |                    |                      |                               |                                                                                                                                                                                                  |                                   |  |  |
| 12                                                  |          |                           |                    |                      |                               |                                                                                                                                                                                                  |                                   |  |  |
|                                                     |          |                           |                    |                      |                               |                                                                                                                                                                                                  |                                   |  |  |
| HELICOPTER SERIAL NOS <b>UH-60A 77-22714 - SUBQ</b> |          |                           |                    |                      | MFR CODE 78286                |                                                                                                                                                                                                  |                                   |  |  |
| NEXT ASSY 70652-03250-013, -015                     |          |                           |                    |                      | TUBE PART NO. 70652-03252-143 |                                                                                                                                                                                                  |                                   |  |  |

Figure 41. Hydraulic Tubing. (Sheet 3 of 13)

## FIELD MANUFACTURE ITEMS - Continued

## TUBE BEND DATA

| SPECIFICATION<br>AMS 5561                           |             | MATERIAL<br>21-6-9 ST STL |                       | OD<br>0.250             | GAGE<br>0.016 | STRAIGHT LENGTH<br>49.517                                                                                                                                                                        | FINISH SPEC<br>PASSIVATE (NOTE 3) |  |  |
|-----------------------------------------------------|-------------|---------------------------|-----------------------|-------------------------|---------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------|--|--|
| ENDS                                                |             |                           |                       |                         | TYPE          | COLOR CODE                                                                                                                                                                                       | CONNECTING POINTS                 |  |  |
| A                                                   | (NOTE 4)    | D10036-4                  |                       | PERMA-SWAGE             | MIL-STD-1247  | FROM - PERMASWAGE UNION                                                                                                                                                                          |                                   |  |  |
| B                                                   | (NOTE 4)    | D10036-4                  |                       | PERMA-SWAGE             |               | TO - PERMASWAGE UNION                                                                                                                                                                            |                                   |  |  |
| BEND NO.                                            | INCHES<br>C | TUBE ROTATION<br>(NOTE 1) | BEND ANGLE<br>DEGREES | BEND RADIUS<br>(NOTE 2) | MFR NOTES     | FUNCTION                                                                                                                                                                                         |                                   |  |  |
|                                                     |             |                           |                       |                         |               | FIRST STAGE TAIL<br>ROTOR SERVO, RETURN                                                                                                                                                          |                                   |  |  |
| 1                                                   | 27.887      | 0                         | 42                    | 0.750                   |               | <b>NOTES</b><br>1. TUBE ROTATION, FROM PLANE OF FIRST BEND CCW VIEWED FROM B END, DEGREES.<br>2. MINIMUM BEND RADII PER MS33611.<br>3. FLUSH PER TM 1-1500-204-23.<br>4. SQUARE CUT AND CHAMFER. |                                   |  |  |
| 2                                                   | 16.251      | 180                       | 34                    | 0.750                   |               |                                                                                                                                                                                                  |                                   |  |  |
| 3                                                   |             |                           |                       |                         |               |                                                                                                                                                                                                  |                                   |  |  |
| 4                                                   |             |                           |                       |                         |               |                                                                                                                                                                                                  |                                   |  |  |
| 5                                                   |             |                           |                       |                         |               |                                                                                                                                                                                                  |                                   |  |  |
| 6                                                   |             |                           |                       |                         |               |                                                                                                                                                                                                  |                                   |  |  |
| 7                                                   |             |                           |                       |                         |               |                                                                                                                                                                                                  |                                   |  |  |
| 8                                                   |             |                           |                       |                         |               |                                                                                                                                                                                                  |                                   |  |  |
| 9                                                   |             |                           |                       |                         |               |                                                                                                                                                                                                  |                                   |  |  |
| 10                                                  |             |                           |                       |                         |               |                                                                                                                                                                                                  |                                   |  |  |
| 11                                                  |             |                           |                       |                         |               |                                                                                                                                                                                                  |                                   |  |  |
| 12                                                  |             |                           |                       |                         |               |                                                                                                                                                                                                  |                                   |  |  |
|                                                     |             |                           |                       |                         |               |                                                                                                                                                                                                  |                                   |  |  |
| HELICOPTER SERIAL NOS <b>UH-60A 77-22714 - SUBQ</b> |             |                           |                       |                         |               | MFR CODE 78286                                                                                                                                                                                   |                                   |  |  |
| NEXT ASSY 70652-03250-013, -015                     |             |                           |                       |                         |               | TUBE PART NO. 70652-03252-146                                                                                                                                                                    |                                   |  |  |

Figure 41. Hydraulic Tubing. (Sheet 4 of 13)

## FIELD MANUFACTURE ITEMS - Continued

## TUBE BEND DATA

| SPECIFICATION<br>AMS 5561                           |             | MATERIAL<br>21-6-9 ST STL |                       | OD<br>0.250             | GAGE<br>0.016                 | STRAIGHT LENGTH<br>89.481                                                                                                                                                                        | FINISH SPEC<br>PASSIVATE (NOTE 3) |  |  |
|-----------------------------------------------------|-------------|---------------------------|-----------------------|-------------------------|-------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------|--|--|
| ENDS                                                |             |                           |                       |                         | TYPE                          | COLOR CODE                                                                                                                                                                                       | CONNECTING POINTS                 |  |  |
| A                                                   | (NOTE 4)    | D10036-4                  |                       | PERMA-SWAGE             | MIL-STD-1247                  | FROM - 90° PERMA-SWAGE ELBOW<br><br>TO - PERMASWAGE UNION                                                                                                                                        |                                   |  |  |
| B                                                   | (NOTE 4)    | D9856-4                   |                       | PERMA-SWAGE             |                               |                                                                                                                                                                                                  |                                   |  |  |
| BEND NO.                                            | INCHES<br>C | TUBE ROTATION<br>(NOTE 1) | BEND ANGLE<br>DEGREES | BEND RADIUS<br>(NOTE 2) | MFR NOTES                     | FUNCTION                                                                                                                                                                                         |                                   |  |  |
|                                                     |             |                           |                       |                         |                               | SECOND STAGE TAIL<br>ROTOR SERVO, PRESSURE                                                                                                                                                       |                                   |  |  |
| 1                                                   | 75.911      | 0                         | 24                    | 0.750                   |                               | <b>NOTES</b><br>1. TUBE ROTATION, FROM PLANE OF FIRST BEND CCW VIEWED FROM B END, DEGREES.<br>2. MINIMUM BEND RADII PER MS33611.<br>3. FLUSH PER TM 1-1500-204-23.<br>4. SQUARE CUT AND CHAMFER. |                                   |  |  |
| 2                                                   | 58.528      | 359                       | 14                    | 0.750                   |                               |                                                                                                                                                                                                  |                                   |  |  |
| 3                                                   | 46.971      | 335                       | 15                    | 0.750                   |                               |                                                                                                                                                                                                  |                                   |  |  |
| 4                                                   | 42.759      | 237                       | 84                    | 0.750                   |                               |                                                                                                                                                                                                  |                                   |  |  |
| 5                                                   | 35.789      | 309                       | 15                    | 0.750                   |                               |                                                                                                                                                                                                  |                                   |  |  |
| 6                                                   | 18.902      | 119                       | 32                    | 0.750                   |                               |                                                                                                                                                                                                  |                                   |  |  |
| 7                                                   | 9.732       | 256                       | 18                    | 0.750                   |                               |                                                                                                                                                                                                  |                                   |  |  |
| 8                                                   |             |                           |                       |                         |                               |                                                                                                                                                                                                  |                                   |  |  |
| 9                                                   |             |                           |                       |                         |                               |                                                                                                                                                                                                  |                                   |  |  |
| 10                                                  |             |                           |                       |                         |                               |                                                                                                                                                                                                  |                                   |  |  |
| 11                                                  |             |                           |                       |                         |                               |                                                                                                                                                                                                  |                                   |  |  |
| 12                                                  |             |                           |                       |                         |                               |                                                                                                                                                                                                  |                                   |  |  |
|                                                     |             |                           |                       |                         |                               |                                                                                                                                                                                                  |                                   |  |  |
| HELICOPTER SERIAL NOS <b>UH-60A 77-22714 - SUBQ</b> |             |                           |                       |                         | MFR CODE 78286                |                                                                                                                                                                                                  |                                   |  |  |
| NEXT ASSY 70652-03250-013                           |             |                           |                       |                         | TUBE PART NO. 70652-03252-149 |                                                                                                                                                                                                  |                                   |  |  |

Figure 41. Hydraulic Tubing. (Sheet 5 of 13)



## FIELD MANUFACTURE ITEMS - Continued

## TUBE BEND DATA

| SPECIFICATION<br>AMS 5561                           |          | MATERIAL<br>21-6-9 ST STL |                    | OD<br>0.250          | GAGE<br>0.016 | STRAIGHT LENGTH<br>86.152     | FINISH SPEC<br>PASSIVATE (NOTE 3)                                                                                                                                                                |  |  |  |
|-----------------------------------------------------|----------|---------------------------|--------------------|----------------------|---------------|-------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--|--|--|
| ENDS                                                |          |                           |                    | TYPE                 |               | COLOR CODE                    | CONNECTING POINTS                                                                                                                                                                                |  |  |  |
| A                                                   | (NOTE 4) | D9856-4                   |                    | PERMA-SWAGE          |               | MIL-STD-1247                  | FROM - 90° PERMA-SWAGE ELBOW                                                                                                                                                                     |  |  |  |
| B                                                   | (NOTE 4) | D10036-4                  |                    | PERMA-SWAGE          |               |                               | TO - PERMASWAGE UNION                                                                                                                                                                            |  |  |  |
| BEND NO.                                            | INCHES C | TUBE ROTATION (NOTE 1)    | BEND ANGLE DEGREES | BEND RADIUS (NOTE 2) | MFR NOTES     |                               | FUNCTION                                                                                                                                                                                         |  |  |  |
|                                                     |          |                           |                    |                      |               |                               | SECOND STAGE TAIL ROTOR SERVO, RETURN                                                                                                                                                            |  |  |  |
| 1                                                   | 73.902   | 0                         | 37                 | 0.750                |               |                               | <b>NOTES</b><br>1. TUBE ROTATION, FROM PLANE OF FIRST BEND CCW VIEWED FROM B END, DEGREES.<br>2. MINIMUM BEND RADII PER MS33611.<br>3. FLUSH PER TM 1-1500-204-23.<br>4. SQUARE CUT AND CHAMFER. |  |  |  |
| 2                                                   | 59.035   | 356                       | 7                  | 0.750                |               |                               |                                                                                                                                                                                                  |  |  |  |
| 3                                                   | 45.221   | 354                       | 14                 | 0.750                |               |                               |                                                                                                                                                                                                  |  |  |  |
| 4                                                   | 41.839   | 274                       | 88                 | 0.750                |               |                               |                                                                                                                                                                                                  |  |  |  |
| 5                                                   | 20.660   | 174                       | 25                 | 0.750                |               |                               |                                                                                                                                                                                                  |  |  |  |
| 6                                                   |          |                           |                    |                      |               |                               |                                                                                                                                                                                                  |  |  |  |
| 7                                                   |          |                           |                    |                      |               |                               |                                                                                                                                                                                                  |  |  |  |
| 8                                                   |          |                           |                    |                      |               |                               |                                                                                                                                                                                                  |  |  |  |
| 9                                                   |          |                           |                    |                      |               |                               |                                                                                                                                                                                                  |  |  |  |
| 10                                                  |          |                           |                    |                      |               |                               |                                                                                                                                                                                                  |  |  |  |
| 11                                                  |          |                           |                    |                      |               |                               |                                                                                                                                                                                                  |  |  |  |
| 12                                                  |          |                           |                    |                      |               |                               |                                                                                                                                                                                                  |  |  |  |
|                                                     |          |                           |                    |                      |               |                               |                                                                                                                                                                                                  |  |  |  |
| HELICOPTER SERIAL NOS <b>UH-60A 77-22714 - SUBQ</b> |          |                           |                    |                      |               | MFR CODE 78286                |                                                                                                                                                                                                  |  |  |  |
| NEXT ASSY 70652-03250-013                           |          |                           |                    |                      |               | TUBE PART NO. 70652-03252-153 |                                                                                                                                                                                                  |  |  |  |

Figure 41. Hydraulic Tubing. (Sheet 6 of 13)

## FIELD MANUFACTURE ITEMS - Continued

## TUBE BEND DATA

| SPECIFICATION<br>AMS 5561                           |          | MATERIAL<br>21-6-9 ST STL |                    | OD<br>0.250          | GAGE<br>0.016 | STRAIGHT LENGTH<br>49.083                                                                                                                                                                        | FINISH SPEC<br>PASSIVATE (NOTE 3) |  |
|-----------------------------------------------------|----------|---------------------------|--------------------|----------------------|---------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------|--|
| ENDS                                                |          |                           |                    |                      | TYPE          | COLOR CODE                                                                                                                                                                                       | CONNECTING POINTS                 |  |
| A                                                   | (NOTE 4) | D9856-6                   |                    | PERMA-SWAGE          | MIL-STD-1247  | FROM - PERMASWAGE UNION                                                                                                                                                                          |                                   |  |
| B                                                   | (NOTE 4) | D10036-4                  |                    | PERMA-SWAGE          |               | TO - PERMASWAGE ELBOW                                                                                                                                                                            |                                   |  |
| BEND NO.                                            | INCHES C | TUBE ROTATION (NOTE 1)    | BEND ANGLE DEGREES | BEND RADIUS (NOTE 2) | MFR NOTES     | FUNCTION                                                                                                                                                                                         |                                   |  |
|                                                     |          |                           |                    |                      |               | SECOND STAGE TAIL ROTOR SERVO, RETURN                                                                                                                                                            |                                   |  |
| 1                                                   | 28.043   | 0                         | 11                 | 0.750                |               | <b>NOTES</b><br>1. TUBE ROTATION, FROM PLANE OF FIRST BEND CCW VIEWED FROM B END, DEGREES.<br>2. MINIMUM BEND RADII PER MS33611.<br>3. FLUSH PER TM 1-1500-204-23.<br>4. SQUARE CUT AND CHAMFER. |                                   |  |
| 2                                                   | 20.313   | 157                       | 7                  | 0.750                |               |                                                                                                                                                                                                  |                                   |  |
| 3                                                   | 10.438   | 150                       | 14                 | 0.750                |               |                                                                                                                                                                                                  |                                   |  |
| 4                                                   |          |                           |                    |                      |               |                                                                                                                                                                                                  |                                   |  |
| 5                                                   |          |                           |                    |                      |               |                                                                                                                                                                                                  |                                   |  |
| 6                                                   |          |                           |                    |                      |               |                                                                                                                                                                                                  |                                   |  |
| 7                                                   |          |                           |                    |                      |               |                                                                                                                                                                                                  |                                   |  |
| 8                                                   |          |                           |                    |                      |               |                                                                                                                                                                                                  |                                   |  |
| 9                                                   |          |                           |                    |                      |               |                                                                                                                                                                                                  |                                   |  |
| 10                                                  |          |                           |                    |                      |               |                                                                                                                                                                                                  |                                   |  |
| 11                                                  |          |                           |                    |                      |               |                                                                                                                                                                                                  |                                   |  |
| 12                                                  |          |                           |                    |                      |               |                                                                                                                                                                                                  |                                   |  |
|                                                     |          |                           |                    |                      |               |                                                                                                                                                                                                  |                                   |  |
| HELICOPTER SERIAL NOS <b>UH-60A 77-22714 - SUBQ</b> |          |                           |                    |                      |               | MFR CODE 78286                                                                                                                                                                                   |                                   |  |
| NEXT ASSY 70652-03250-012                           |          |                           |                    |                      |               | TUBE PART NO. 70652-03252-158                                                                                                                                                                    |                                   |  |

Figure 41. Hydraulic Tubing. (Sheet 7 of 13)

## FIELD MANUFACTURE ITEMS - Continued

## TUBE BEND DATA

| SPECIFICATION<br>AMS 5561                           |          | MATERIAL<br>21-6-9 ST STL |                    | OD<br>0.250          | GAGE<br>0.016                 | STRAIGHT LENGTH<br>46.778 | FINISH SPEC<br>PASSIVATE (NOTE 3)                                                                                                                                                                |  |  |  |
|-----------------------------------------------------|----------|---------------------------|--------------------|----------------------|-------------------------------|---------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--|--|--|
| ENDS                                                |          |                           |                    | TYPE                 |                               | COLOR CODE                | CONNECTING POINTS                                                                                                                                                                                |  |  |  |
| A                                                   | (NOTE 4) | D9856-4                   |                    | PERMA-SWAGE          |                               | MIL-STD-1247              | FROM - PERMASWAGE UNION                                                                                                                                                                          |  |  |  |
| B                                                   | (NOTE 4) | D10036-4                  |                    | PERMA-SWAGE          |                               |                           | TO - 90° PERMA-SWAGE ELBOW                                                                                                                                                                       |  |  |  |
| BEND NO.                                            | INCHES C | TUBE ROTATION (NOTE 1)    | BEND ANGLE DEGREES | BEND RADIUS (NOTE 2) | MFR NOTES                     |                           | FUNCTION                                                                                                                                                                                         |  |  |  |
|                                                     |          |                           |                    |                      |                               |                           | SECOND STAGE TAIL ROTOR SERVO, PRESSURE                                                                                                                                                          |  |  |  |
| 1                                                   | 36.958   | 0                         | 9                  | 0.750                |                               |                           | <b>NOTES</b><br>1. TUBE ROTATION, FROM PLANE OF FIRST BEND CCW VIEWED FROM B END, DEGREES.<br>2. MINIMUM BEND RADII PER MS33611.<br>3. FLUSH PER TM 1-1500-204-23.<br>4. SQUARE CUT AND CHAMFER. |  |  |  |
| 2                                                   | 27.913   | 328                       | 13                 | 0.750                |                               |                           |                                                                                                                                                                                                  |  |  |  |
| 3                                                   | 19.623   | 145                       | 19                 | 0.750                |                               |                           |                                                                                                                                                                                                  |  |  |  |
| 4                                                   |          |                           |                    |                      |                               |                           |                                                                                                                                                                                                  |  |  |  |
| 5                                                   |          |                           |                    |                      |                               |                           |                                                                                                                                                                                                  |  |  |  |
| 6                                                   |          |                           |                    |                      |                               |                           |                                                                                                                                                                                                  |  |  |  |
| 7                                                   |          |                           |                    |                      |                               |                           |                                                                                                                                                                                                  |  |  |  |
| 8                                                   |          |                           |                    |                      |                               |                           |                                                                                                                                                                                                  |  |  |  |
| 9                                                   |          |                           |                    |                      |                               |                           |                                                                                                                                                                                                  |  |  |  |
| 10                                                  |          |                           |                    |                      |                               |                           |                                                                                                                                                                                                  |  |  |  |
| 11                                                  |          |                           |                    |                      |                               |                           |                                                                                                                                                                                                  |  |  |  |
| 12                                                  |          |                           |                    |                      |                               |                           |                                                                                                                                                                                                  |  |  |  |
|                                                     |          |                           |                    |                      |                               |                           |                                                                                                                                                                                                  |  |  |  |
| HELICOPTER SERIAL NOS <b>UH-60A 77-22714 - SUBQ</b> |          |                           |                    |                      | MFR CODE 78286                |                           |                                                                                                                                                                                                  |  |  |  |
| NEXT ASSY 70652-03250-012                           |          |                           |                    |                      | TUBE PART NO. 70652-03252-159 |                           |                                                                                                                                                                                                  |  |  |  |

## FIELD MANUFACTURE ITEMS - Continued

## TUBE BEND DATA

| SPECIFICATION<br>AMS 5561                           |          | MATERIAL<br>21-6-9 ST STL |                    | OD<br>0.250          | GAGE<br>0.016                 | STRAIGHT LENGTH<br>40.307                                                                                                                                                                        | FINISH SPEC<br>PASSIVATE (NOTE 3) |  |
|-----------------------------------------------------|----------|---------------------------|--------------------|----------------------|-------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------|--|
| ENDS                                                |          |                           |                    | TYPE                 |                               | COLOR CODE                                                                                                                                                                                       | CONNECTING POINTS                 |  |
| A                                                   | (NOTE 4) | D10036-4                  |                    | PERMA-SWAGE          |                               | MIL-STD-1247                                                                                                                                                                                     | FROM - PERMASWAGE UNION           |  |
| B                                                   | (NOTE 4) | D10036-4                  |                    | PERMA-SWAGE          |                               |                                                                                                                                                                                                  | TO - PERMASWAGE UNION             |  |
| BEND NO.                                            | INCHES C | TUBE ROTATION (NOTE 1)    | BEND ANGLE DEGREES | BEND RADIUS (NOTE 2) | MFR NOTES                     | FUNCTION                                                                                                                                                                                         |                                   |  |
|                                                     |          |                           |                    |                      |                               | FIRST STAGE TAIL ROTOR SERVO, RETURN                                                                                                                                                             |                                   |  |
| 1                                                   | 25.890   | 0                         | 11                 | 0.750                |                               | <b>NOTES</b><br>1. TUBE ROTATION, FROM PLANE OF FIRST BEND CCW VIEWED FROM B END, DEGREES.<br>2. MINIMUM BEND RADII PER MS33611.<br>3. FLUSH PER TM 1-1500-204-23.<br>4. SQUARE CUT AND CHAMFER. |                                   |  |
| 2                                                   |          |                           |                    |                      |                               |                                                                                                                                                                                                  |                                   |  |
| 3                                                   |          |                           |                    |                      |                               |                                                                                                                                                                                                  |                                   |  |
| 4                                                   |          |                           |                    |                      |                               |                                                                                                                                                                                                  |                                   |  |
| 5                                                   |          |                           |                    |                      |                               |                                                                                                                                                                                                  |                                   |  |
| 6                                                   |          |                           |                    |                      |                               |                                                                                                                                                                                                  |                                   |  |
| 7                                                   |          |                           |                    |                      |                               |                                                                                                                                                                                                  |                                   |  |
| 8                                                   |          |                           |                    |                      |                               |                                                                                                                                                                                                  |                                   |  |
| 9                                                   |          |                           |                    |                      |                               |                                                                                                                                                                                                  |                                   |  |
| 10                                                  |          |                           |                    |                      |                               |                                                                                                                                                                                                  |                                   |  |
| 11                                                  |          |                           |                    |                      |                               |                                                                                                                                                                                                  |                                   |  |
| 12                                                  |          |                           |                    |                      |                               |                                                                                                                                                                                                  |                                   |  |
|                                                     |          |                           |                    |                      |                               |                                                                                                                                                                                                  |                                   |  |
| HELICOPTER SERIAL NOS <b>UH-60A 77-22714 - SUBQ</b> |          |                           |                    |                      |                               | MFR CODE 78286                                                                                                                                                                                   |                                   |  |
| NEXT ASSY 70652-03250-012, -014                     |          |                           |                    |                      | TUBE PART NO. 70652-03252-160 |                                                                                                                                                                                                  |                                   |  |

Figure 41. Hydraulic Tubing. (Sheet 9 of 13)

## FIELD MANUFACTURE ITEMS - Continued

## TUBE BEND DATA

| SPECIFICATION<br>AMS 5561                           |          | MATERIAL<br>21-6-9 ST STL |                    | OD<br>0.250          | GAGE<br>0.016                 | STRAIGHT LENGTH<br>39.012                                                                                                                                                                        | FINISH SPEC<br>PASSIVATE (NOTE 3) |
|-----------------------------------------------------|----------|---------------------------|--------------------|----------------------|-------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------|
| ENDS                                                |          |                           |                    | TYPE                 | COLOR CODE                    | CONNECTING POINTS                                                                                                                                                                                |                                   |
| A                                                   | (NOTE 4) | D10036-4                  |                    | PERMA-SWAGE          | MIL-STD-1247                  | FROM - PERMASWAGE UNION                                                                                                                                                                          |                                   |
| B                                                   | (NOTE 4) | D10036-4                  |                    | PERMA-SWAGE          |                               | TO - PERMASWAGE UNION                                                                                                                                                                            |                                   |
| BEND NO.                                            | INCHES C | TUBE ROTATION (NOTE 1)    | BEND ANGLE DEGREES | BEND RADIUS (NOTE 2) | MFR NOTES                     | FUNCTION                                                                                                                                                                                         |                                   |
|                                                     |          |                           |                    |                      |                               | FIRST STAGE TAIL ROTOR SERVO, PRESSURE                                                                                                                                                           |                                   |
| 1                                                   | 11.070   | 0                         | 14                 | 0.750                |                               | <b>NOTES</b><br>1. TUBE ROTATION, FROM PLANE OF FIRST BEND CCW VIEWED FROM B END, DEGREES.<br>2. MINIMUM BEND RADII PER MS33611.<br>3. FLUSH PER TM 1-1500-204-23.<br>4. SQUARE CUT AND CHAMFER. |                                   |
| 2                                                   |          |                           |                    |                      |                               |                                                                                                                                                                                                  |                                   |
| 3                                                   |          |                           |                    |                      |                               |                                                                                                                                                                                                  |                                   |
| 4                                                   |          |                           |                    |                      |                               |                                                                                                                                                                                                  |                                   |
| 5                                                   |          |                           |                    |                      |                               |                                                                                                                                                                                                  |                                   |
| 6                                                   |          |                           |                    |                      |                               |                                                                                                                                                                                                  |                                   |
| 7                                                   |          |                           |                    |                      |                               |                                                                                                                                                                                                  |                                   |
| 8                                                   |          |                           |                    |                      |                               |                                                                                                                                                                                                  |                                   |
| 9                                                   |          |                           |                    |                      |                               |                                                                                                                                                                                                  |                                   |
| 10                                                  |          |                           |                    |                      |                               |                                                                                                                                                                                                  |                                   |
| 11                                                  |          |                           |                    |                      |                               |                                                                                                                                                                                                  |                                   |
| 12                                                  |          |                           |                    |                      |                               |                                                                                                                                                                                                  |                                   |
|                                                     |          |                           |                    |                      |                               |                                                                                                                                                                                                  |                                   |
| HELICOPTER SERIAL NOS <b>UH-60A 77-22714 - SUBQ</b> |          |                           |                    |                      | MFR CODE 78286                |                                                                                                                                                                                                  |                                   |
| NEXT ASSY 70652-03250-012, -014                     |          |                           |                    |                      | TUBE PART NO. 70652-03252-161 |                                                                                                                                                                                                  |                                   |

Figure 41. Hydraulic Tubing. (Sheet 10 of 13)

## FIELD MANUFACTURE ITEMS - Continued

## TUBE BEND DATA

| SPECIFICATION<br>AMS 5561                           |          | MATERIAL<br>21-6-9 ST STL |                    | OD<br>0.250          | GAGE<br>0.016                 | STRAIGHT LENGTH<br>83.00                                                                                                                                                                         | FINISH SPEC<br>PASSIVATE (NOTE 3) |  |
|-----------------------------------------------------|----------|---------------------------|--------------------|----------------------|-------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------|--|
| ENDS                                                |          |                           |                    | TYPE                 |                               | COLOR CODE                                                                                                                                                                                       | CONNECTING POINTS                 |  |
| A                                                   | (NOTE 4) | D10036-4                  |                    | PERMA-SWAGE          |                               | MIL-STD-1247                                                                                                                                                                                     | FROM - PERMASWAGE UNION           |  |
| B                                                   | (NOTE 4) | D10036-4                  |                    | PERMA-SWAGE          |                               |                                                                                                                                                                                                  | TO - PERMASWAGE UNION             |  |
| BEND NO.                                            | INCHES C | TUBE ROTATION (NOTE 1)    | BEND ANGLE DEGREES | BEND RADIUS (NOTE 2) | MFR NOTES                     | FUNCTION                                                                                                                                                                                         |                                   |  |
|                                                     |          |                           |                    |                      |                               | FIRST STAGE AND SECOND STAGE TAIL ROTOR SERVO, RETURN                                                                                                                                            |                                   |  |
| 1                                                   | STRAIGHT | TUBE                      |                    |                      |                               | <b>NOTES</b><br>1. TUBE ROTATION, FROM PLANE OF FIRST BEND CCW VIEWED FROM B END, DEGREES.<br>2. MINIMUM BEND RADII PER MS33611.<br>3. FLUSH PER TM 1-1500-204-23.<br>4. SQUARE CUT AND CHAMFER. |                                   |  |
| 2                                                   |          |                           |                    |                      |                               |                                                                                                                                                                                                  |                                   |  |
| 3                                                   |          |                           |                    |                      |                               |                                                                                                                                                                                                  |                                   |  |
| 4                                                   |          |                           |                    |                      |                               |                                                                                                                                                                                                  |                                   |  |
| 5                                                   |          |                           |                    |                      |                               |                                                                                                                                                                                                  |                                   |  |
| 6                                                   |          |                           |                    |                      |                               |                                                                                                                                                                                                  |                                   |  |
| 7                                                   |          |                           |                    |                      |                               |                                                                                                                                                                                                  |                                   |  |
| 8                                                   |          |                           |                    |                      |                               |                                                                                                                                                                                                  |                                   |  |
| 9                                                   |          |                           |                    |                      |                               |                                                                                                                                                                                                  |                                   |  |
| 10                                                  |          |                           |                    |                      |                               |                                                                                                                                                                                                  |                                   |  |
| 11                                                  |          |                           |                    |                      |                               |                                                                                                                                                                                                  |                                   |  |
| 12                                                  |          |                           |                    |                      |                               |                                                                                                                                                                                                  |                                   |  |
|                                                     |          |                           |                    |                      |                               |                                                                                                                                                                                                  |                                   |  |
| HELICOPTER SERIAL NOS <b>UH-60A 77-22714 - SUBQ</b> |          |                           |                    |                      |                               | MFR CODE 78286                                                                                                                                                                                   |                                   |  |
| NEXT ASSY 70652-05250-011, -012                     |          |                           |                    |                      | TUBE PART NO. 70652-05251-149 |                                                                                                                                                                                                  |                                   |  |

Figure 41. Hydraulic Tubing. (Sheet 11 of 13)

## FIELD MANUFACTURE ITEMS - Continued

## TUBE BEND DATA

| SPECIFICATION<br>AMS 5561                           |             | MATERIAL<br>21-6-9 ST STL |                       | OD<br>0.250             | GAGE<br>0.016 | STRAIGHT LENGTH<br>49.771                                                                                                                                                                        | FINISH SPEC<br>PASSIVATE (NOTE 3) |  |
|-----------------------------------------------------|-------------|---------------------------|-----------------------|-------------------------|---------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------|--|
| ENDS                                                |             |                           |                       |                         | TYPE          | COLOR CODE                                                                                                                                                                                       | CONNECTING POINTS                 |  |
| A                                                   | (NOTE 4)    | D10036-4                  |                       | PERMA-SWAGE             | MIL-STD-1247  |                                                                                                                                                                                                  | FROM - PERMASWAGE UNION           |  |
| B                                                   | (NOTE 4)    | D10036-4                  |                       | PERMA-SWAGE             |               |                                                                                                                                                                                                  | TO - PERMASWAGE UNION             |  |
| BEND NO.                                            | INCHES<br>C | TUBE ROTATION<br>(NOTE 1) | BEND ANGLE<br>DEGREES | BEND RADIUS<br>(NOTE 2) | MFR NOTES     | FUNCTION                                                                                                                                                                                         |                                   |  |
|                                                     |             |                           |                       |                         |               | FIRST STAGE TAIL<br>ROTOR SERVO, PRESSURE                                                                                                                                                        |                                   |  |
| 1                                                   | 1.77        | 0                         | 32.6                  | 0.750                   |               | <b>NOTES</b><br>1. TUBE ROTATION, FROM PLANE OF FIRST BEND CCW VIEWED FROM B END, DEGREES.<br>2. MINIMUM BEND RADII PER MS33611.<br>3. FLUSH PER TM 1-1500-204-23.<br>4. SQUARE CUT AND CHAMFER. |                                   |  |
| 2                                                   | 1.87        | 110.3                     | 22.0                  | 0.750                   |               |                                                                                                                                                                                                  |                                   |  |
| 3                                                   |             |                           |                       |                         |               |                                                                                                                                                                                                  |                                   |  |
| 4                                                   |             |                           |                       |                         |               |                                                                                                                                                                                                  |                                   |  |
| 5                                                   |             |                           |                       |                         |               |                                                                                                                                                                                                  |                                   |  |
| 6                                                   |             |                           |                       |                         |               |                                                                                                                                                                                                  |                                   |  |
| 7                                                   |             |                           |                       |                         |               |                                                                                                                                                                                                  |                                   |  |
| 8                                                   |             |                           |                       |                         |               |                                                                                                                                                                                                  |                                   |  |
| 9                                                   |             |                           |                       |                         |               |                                                                                                                                                                                                  |                                   |  |
| 10                                                  |             |                           |                       |                         |               |                                                                                                                                                                                                  |                                   |  |
| 11                                                  |             |                           |                       |                         |               |                                                                                                                                                                                                  |                                   |  |
| 12                                                  |             |                           |                       |                         |               |                                                                                                                                                                                                  |                                   |  |
|                                                     |             |                           |                       |                         |               |                                                                                                                                                                                                  |                                   |  |
| HELICOPTER SERIAL NOS <b>UH-60A 77-22714 - SUBQ</b> |             |                           |                       |                         |               | MFR CODE 78286                                                                                                                                                                                   |                                   |  |
| NEXT ASSY 70652-03250-013, -015                     |             |                           |                       |                         |               | TUBE PART NO. 70652-03252-143                                                                                                                                                                    |                                   |  |

Figure 41. Hydraulic Tubing. (Sheet 12 of 13)




## FIELD MANUFACTURE ITEMS - Continued

| SPECIFICATION<br>AMS 5561                           |          | MATERIAL<br>21-6-9 ST STL |                       | OD<br>0.250             | GAGE<br>0.016                 | STRAIGHT LENGTH<br>71.865                                                                                                                                                                        | FINISH SPEC<br>PASSIVATE<br>(NOTE 3) |         |
|-----------------------------------------------------|----------|---------------------------|-----------------------|-------------------------|-------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------|---------|
| ENDS                                                |          |                           |                       |                         | TYPE                          | COLOR CODE                                                                                                                                                                                       | CONNECTING POINTS                    |         |
| A                                                   | (NOTE 4) | D10036-4                  |                       | PERMASWAGE              | MIL-STD-1247                  | FROM - PERMASWAGE UNION                                                                                                                                                                          |                                      |         |
| B                                                   | (NOTE 4) | D10021A-4                 |                       | PERMASWAGE              |                               | TO - PERMASWAGE ELBOW                                                                                                                                                                            |                                      |         |
| BEND NO.                                            | INCHES C | TUBE ROTATION<br>(NOTE 1) | BEND ANGLE<br>DEGREES | BEND RADIUS<br>(NOTE 2) | MFR NOTES                     | FUNCTION                                                                                                                                                                                         |                                      |         |
|                                                     |          |                           |                       |                         |                               | FIRST STAGE TAIL ROTOR SERVO, PRESSURE                                                                                                                                                           |                                      |         |
| 1                                                   | 70.105   | 0                         | 37                    | 0.750                   |                               | <b>NOTES</b><br>1. TUBE ROTATION, FROM PLANE OF FIRST BEND CCW VIEWED FROM B END, DEGREES.<br>2. MINIMUM BEND RADII PER MS33611.<br>3. FLUSH PER TM 1-1500-204-23.<br>4. SQUARE CUT AND CHAMFER. |                                      |         |
| 2                                                   | 48.994   | 178                       | 38                    | 0.750                   |                               |                                                                                                                                                                                                  |                                      |         |
| 3                                                   | 44.932   | 239                       | 47                    | 0.750                   |                               |                                                                                                                                                                                                  |                                      |         |
| 4                                                   | 34.282   | 56                        | 50                    | 0.750                   |                               |                                                                                                                                                                                                  |                                      |         |
| 5                                                   | 9.166    | 37                        | 64                    | 0.750                   |                               |                                                                                                                                                                                                  |                                      |         |
| 6                                                   | 5.106    | 226                       | 150                   | 0.750                   |                               |                                                                                                                                                                                                  |                                      |         |
| 7                                                   |          |                           |                       |                         |                               |                                                                                                                                                                                                  |                                      |         |
| 8                                                   |          |                           |                       |                         |                               |                                                                                                                                                                                                  |                                      |         |
| 9                                                   |          |                           |                       |                         |                               |                                                                                                                                                                                                  |                                      |         |
| 10                                                  |          |                           |                       |                         |                               |                                                                                                                                                                                                  |                                      |         |
| 11                                                  |          |                           |                       |                         |                               |                                                                                                                                                                                                  |                                      |         |
| 12                                                  |          |                           |                       |                         |                               |                                                                                                                                                                                                  |                                      |         |
| HELICOPTER SERIAL NOS <b>UH-60A 77-22714 - SUBQ</b> |          |                           |                       |                         |                               | SHEET 58                                                                                                                                                                                         |                                      | ITEM 44 |
|                                                     |          |                           |                       |                         | MFR CODE 78286                |                                                                                                                                                                                                  |                                      |         |
| NEXT ASSY 70652-05250-011, -012                     |          |                           |                       |                         | TUBE PART NO. 70652-05251-143 |                                                                                                                                                                                                  |                                      |         |

Figure 41. Hydraulic Tubing. (Sheet 13 of 13)



FIELD MANUFACTURE ITEMS - Continued

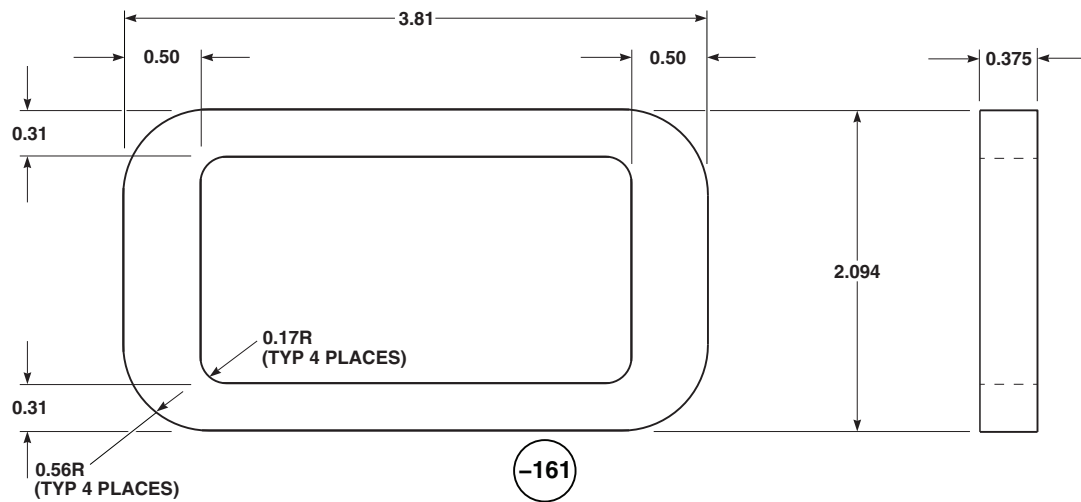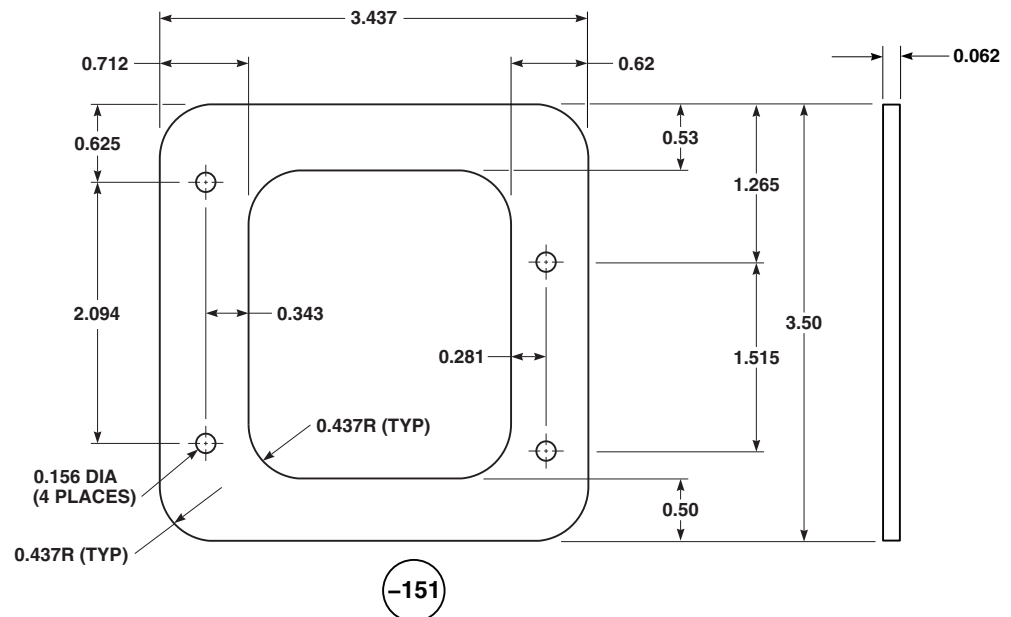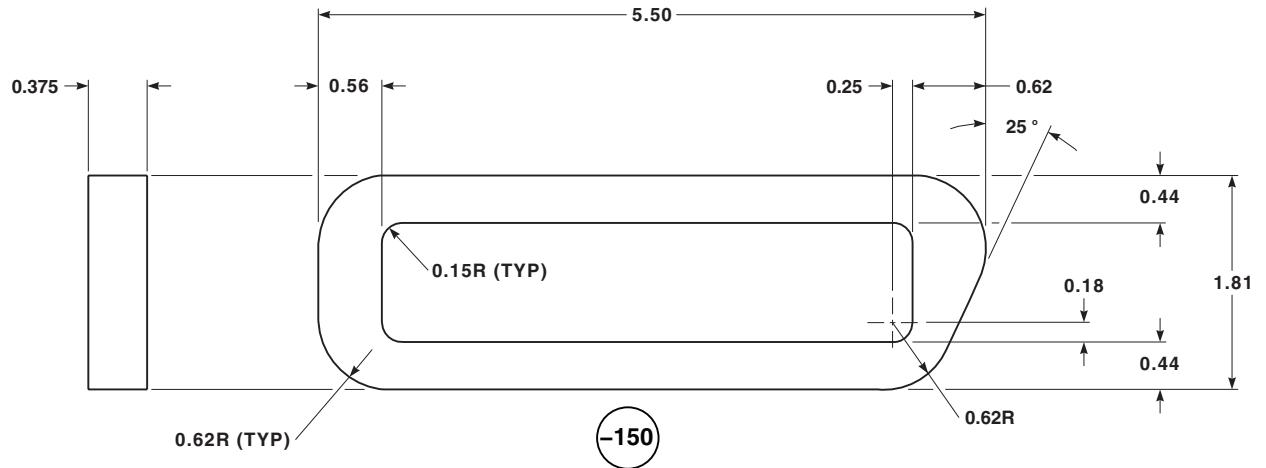

AK1645\_1A  
SA

Figure 42. Duct Installation Seal. (Sheet 1 of 2)

## FIELD MANUFACTURE ITEMS - Continued

| NOMENCLATURE | SIKORSKY PART NUMBER |
|--------------|----------------------|
| SEAL         | 70500-02058-150      |
|              | 70500-02058-151      |
|              | 70500-02058-161      |

## NOTES

1. MAKE -150, -161 FROM SHEET RUBBER, MIL-R-6130, TYPE 2, GRADE A, SOFT, 0.375 INCH THICK, NSN 5330-00-232-2420.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. MAKE -151 FROM SHEET RUBBER, MIL-R-6855, CLASS 2, TYPE A, GRADE 40, 0.062 INCH THICK, NSN 9320-00-057-9820.
4. IDENTIFY PARTS PER MIL-STD-190. STAMP OR STENCIL PART NUMBER AND DATE OF MANUFACTURE ON PARTS WITH OPAQUE GRAY INK, TT-I-1795. USE 1/16 TO 1/8 INCH HIGH SANS SERIF CHARACTERS.


EXAMPLE: P/N 70216-02401-107 3Q 86  
PART NUMBER THIRD QUARTER 1986

PART NUMBER: 70500-02058-150, -151, -161

AK1645\_2A  
SA

Figure 42. Duct Installation Seal. (Sheet 2 of 2)

## FIELD MANUFACTURE ITEMS - Continued

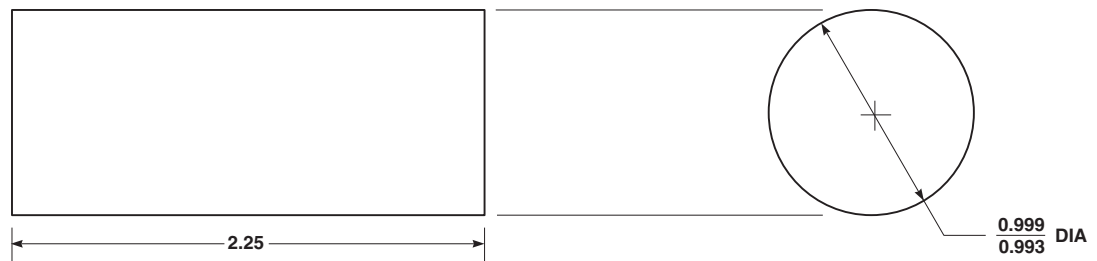

## NOTES


1. MAKE FROM AN16-33 BOLT, NSN 5306-00-145-6790.
2. CUT THREADED PORTION AND HEAD FROM BOLT TO REQUIRED SIZE, AS SHOWN.
3. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
4. BREAK ALL SHARP EDGES TO 0.005 TO 0.015 RADIUS.
5. CADMIUM-PLATE ENDS, AS REQUIRED, PER QQ-P-416, TYPE II, CLASS 3.
6. IDENTIFY PARTS PER MIL-STD-130.
7. FOR ALTERNATE MATERIAL, USE NONCORROSION RESISTANT STEEL ROD, 1 INCH DIAMETER, MIL-S-5626, NSN 9510-00-596-3933.

PART NUMBER: 1420-BH-001

AK1648A  
SA

Figure 43. Locating Tool.

---

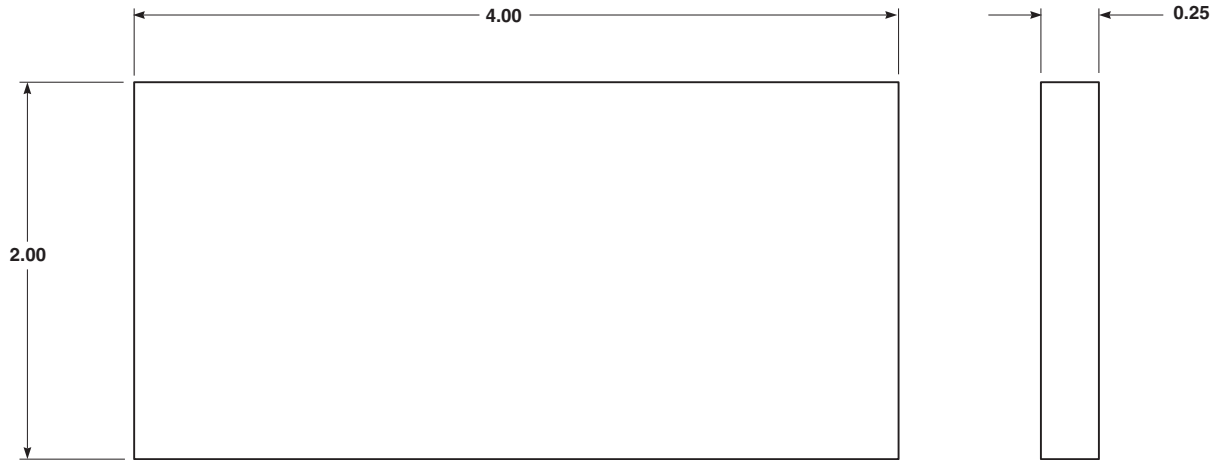**FIELD MANUFACTURE ITEMS - Continued****NOTES**


1. MAKE FROM 0.25 THICK STEEL STOCK, MIL-S-5626, NSN 9510-00-596-2176.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. BREAK ALL SHARP EDGES TO 0.005 TO 0.015 RADIUS.
4. IDENTIFY PARTS PER MIL-STD-130.

PART NUMBER: 1420-BH-002

AK1649A  
SA

Figure 44. Sizing Block.

## FIELD MANUFACTURE ITEMS - Continued

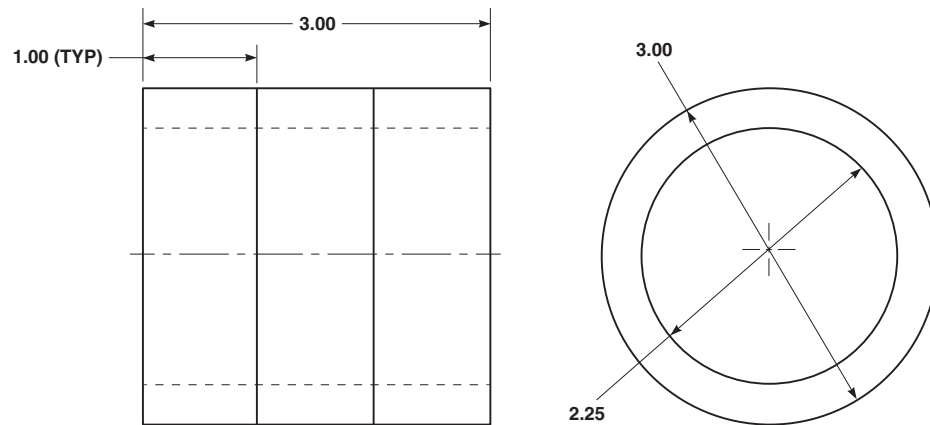

## NOTES


1. MAKE FROM 1 INCH THICK PHENOLIC SHEET, MIL-P-15035, NSN 9330-00-585-8678.
2. CUT THREE RINGS FROM PHENOLIC SHEET AS SHOWN IN FIGURE.
3. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
4. SURFACE FINISH 125 ALL MATCHED SURFACES.
5. BREAK ALL SHARP EDGES TO 0.005 TO 0.015 RADIUS.
6. ASSEMBLE AND BOND RINGS, AS SHOWN, USING GENERAL PURPOSE CEMENT EC847, NSN 8040-00-262-9011.
7. IDENTIFY PARTS PER MIL-STD-130.

PART NUMBER: 1420-BH-007

AK1650A  
SA

Figure 45. Oil Pump Installation Tool.

## FIELD MANUFACTURE ITEMS - Continued

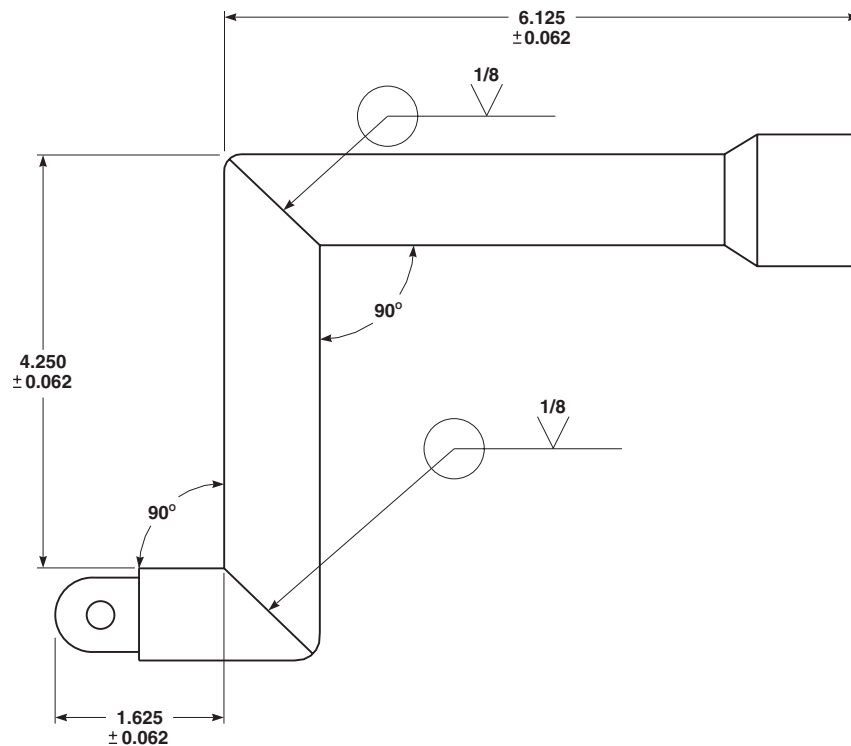

## NOTES


1. MAKE FROM 16 INCH LONG, 3/4 INCH DRIVE EXTENSION, GGG-W-641, TYPE IV, CLASS 4, STYLE A, NSN 5120-00-227-8079.
2. CUT DRIVE EXTENSION AND WELD AS SHOWN, PER INSTRUCTIONS IN TM 1-1500-204-23.
3. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
4. GRIND WELDS TO A SMOOTH CONTOUR.
5. IDENTIFY PARTS PER MIL-STD-130.

PART NUMBER: 1420-BH-008

AK1651A  
SA

Figure 46. Mounting Bolt Adapter.

## FIELD MANUFACTURE ITEMS - Continued

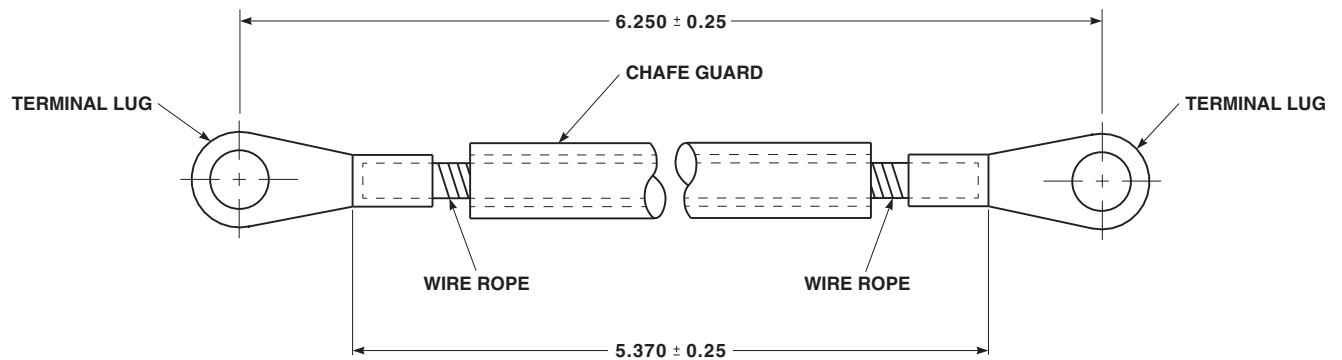

## NOTES

## 1. MAKE FROM:

- A. WIRE ROPE, FLEXIBLE, MIL-W-83420, TYPE I, COMPOSITION A OR B, NSN 4010-01-005-4775.
- B. TERMINAL LUG, MS25036-113, NSN 5940-00-113-8183.
- C. CHAFE GUARD (INSULATION SLEEVE) MIL-I-7444, TYPE I, NSN 5970-00-846-3165.

## 2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.

## 3. CUT WIRE ROPE AND CHAFE GUARD TO REQUIRED LENGTH, AS SHOWN. SLIDE CHAFE GUARD OVER WIRE ROPE AND ASSEMBLE TERMINAL LUGS TO EACH END. CRIMP LUGS TO WIRE ROPE PER MS3316.


## 4. IDENTIFY PARTS PER MIL-STD-130.

PART NUMBER: 1420-BH-009

AK1652A  
SA

Figure 47. Cell Puller.

FIELD MANUFACTURE ITEMS - Continued

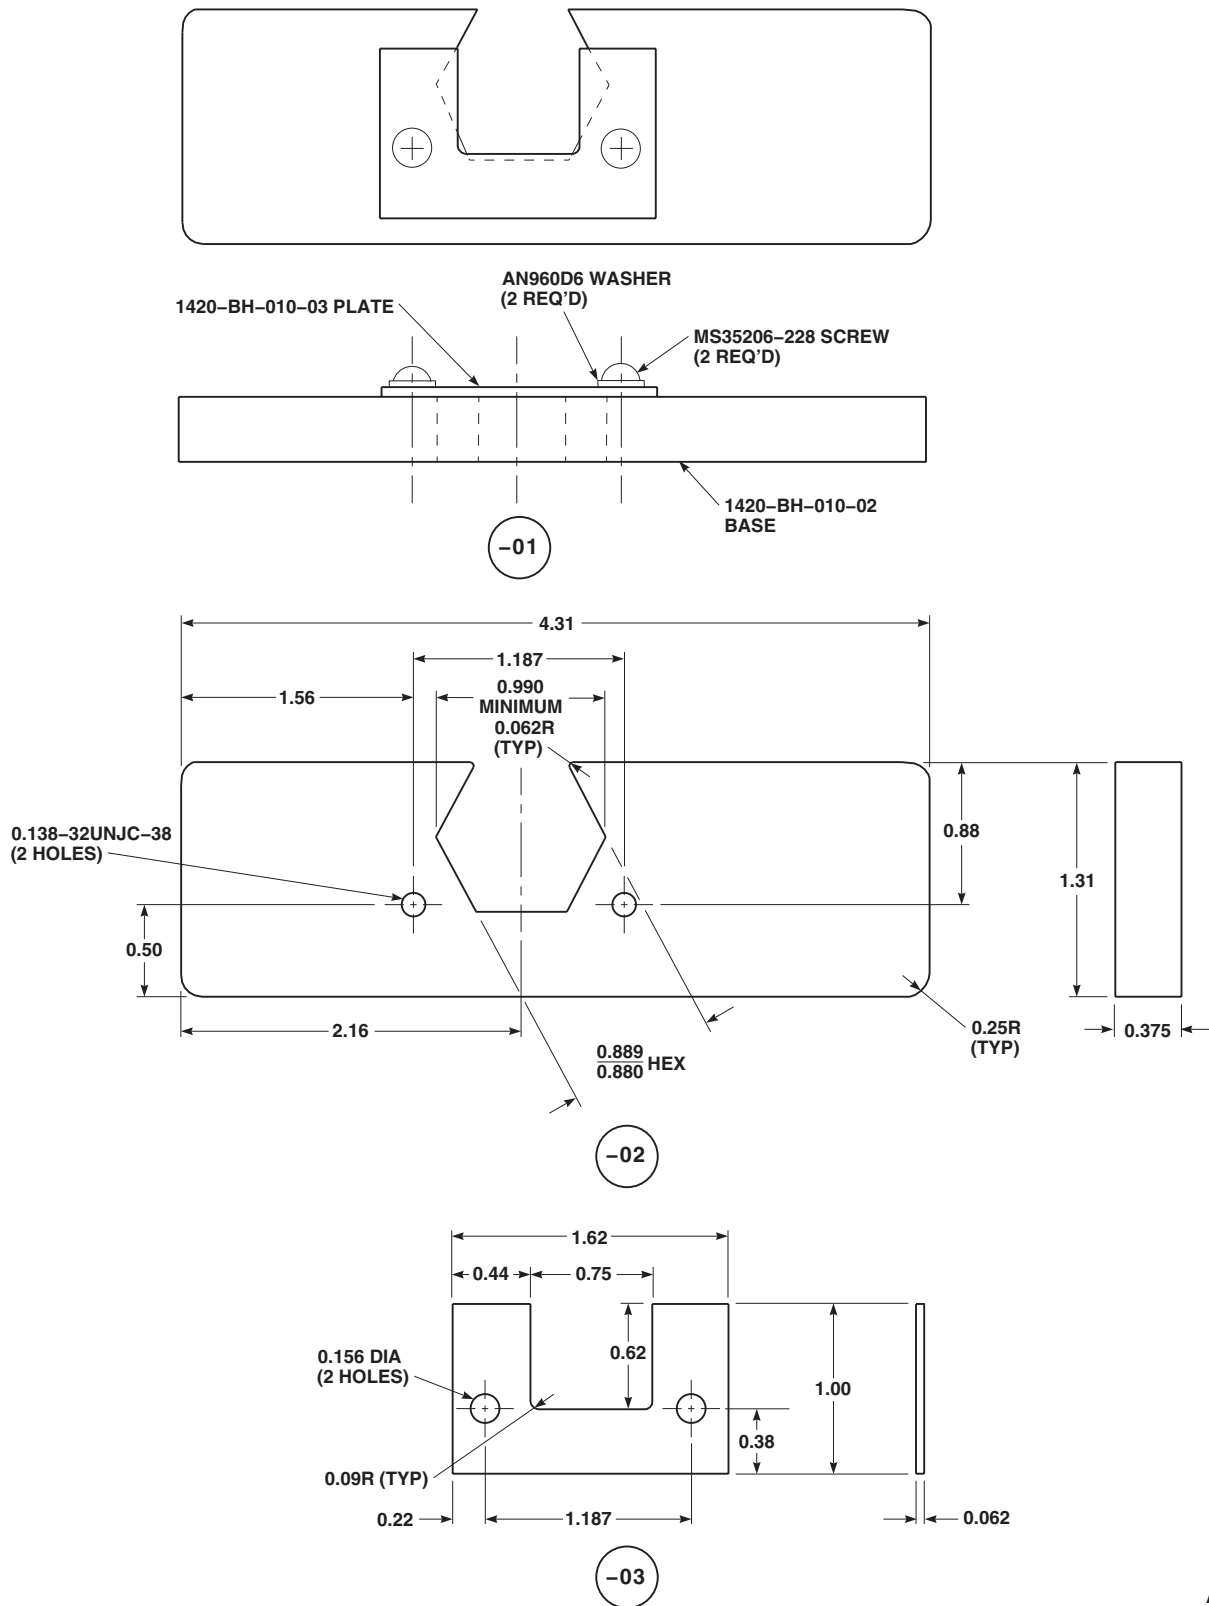

AK1653\_1A  
SA

Figure 48. Flight Control Quick Disconnect Wrench. (Sheet 1 of 2)



## FIELD MANUFACTURE ITEMS - Continued

| PART NUMBER    | DESCRIPTION | MATERIAL                               | QUANTITY | NSN              |
|----------------|-------------|----------------------------------------|----------|------------------|
| 1420-BH-010-02 | BASE        | 0.375 6061-T6 AL. ALLOY, QQ-A-250 / 11 | 1        | 9535-01-029-8266 |
| 1420-BH-010-03 | PLATE       | 0.062 6061-T6 AL. ALLOY, QQ-A-250 / 11 | 1        | 9535-01-084-4448 |
| AN960D6        | WASHER      | —                                      | 2        | 5310-00-167-0738 |
| MS35206-228    | SCREW       | —                                      | 2        | 5305-00-984-4988 |

## NOTES


1. MAKE 1420-BH-010-02 BASE AS SHOWN IN FIGURE. DRILL TWO HOLES, AS SHOWN. USE MATERIAL LISTED IN CHART.
2. MAKE 1420-BH-010-03 PLATE AS SHOWN IN FIGURE. DRILL TWO HOLES AS SHOWN. USE MATERIAL LISTED IN CHART.
3. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
4. TOLERANCE: ANGULAR,  $\pm 0^\circ \text{DG } 30'$ .  
LINEAR (EXCEPT HOLES),  $.XX = \pm 0.03$ ,  $.XXX = \pm 0.010$ .
5. SURFACE FINISH 125 ALL MACHINED SURFACES.
6. BREAK SHARP EDGES TO 0.005 TO 0.015 RADIUS
7. ATTACH PLATE TO BASE USING AN960D6 WASHER (2) AND MS35206-228 SCREW (2) TO MAKE 1420-BH-010-01 WRENCH.
8. IDENTIFY PARTS PER MIL-STD-130.

PART NUMBER: 1420-BH-010-01

AK1653\_2A  
SA

Figure 48. Flight Control Quick Disconnect Wrench. (Sheet 2 of 2)

## FIELD MANUFACTURE ITEMS - Continued

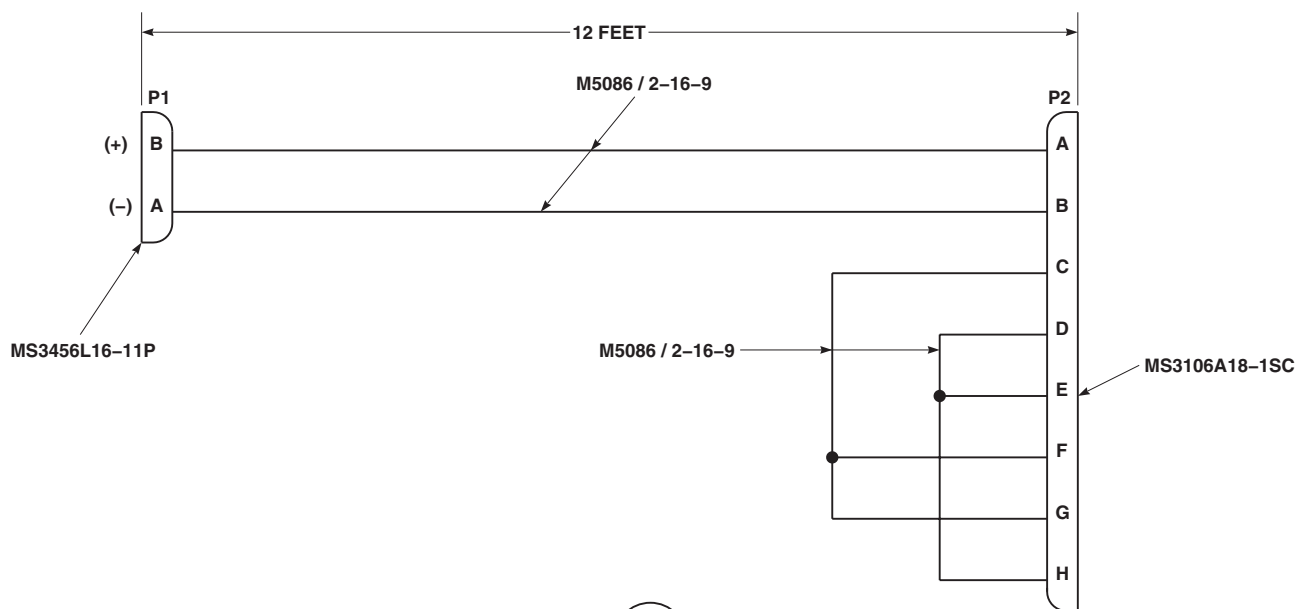

02

## POWER CABLE ASSEMBLY

## CHART A

| PART NUMBER    | DESCRIPTION               | QUANTITY | NSN              |
|----------------|---------------------------|----------|------------------|
| MS3456L16-11P  | CONNECTOR, P1             | 1        | 5935-01-PAC-6669 |
| MS3106A18-1SC  | CONNECTOR, P2             | 1        | 5935-01-284-3967 |
| M5086 / 2-16-9 | WIRE, ELECTRICAL, 16 GAGE | 16 FEET  | 6145-00-578-6605 |

## NOTES

1. MAKE 1420-BH-011-02 POWER CABLE ASSEMBLY PER FIGURE, USING MATERIALS LISTED IN CHART A, OR APPROVED EQUIVALENT.
2. IDENTIFY P1 AND P2 CONNECTORS PER FIGURE AND MIL-STD-130.

PART NUMBER: 1420-BH-011-02

AK1654\_1  
SA

Figure 49. Pitot-Static Test Set. (Sheet 1 of 3)

FIELD MANUFACTURE ITEMS - Continued

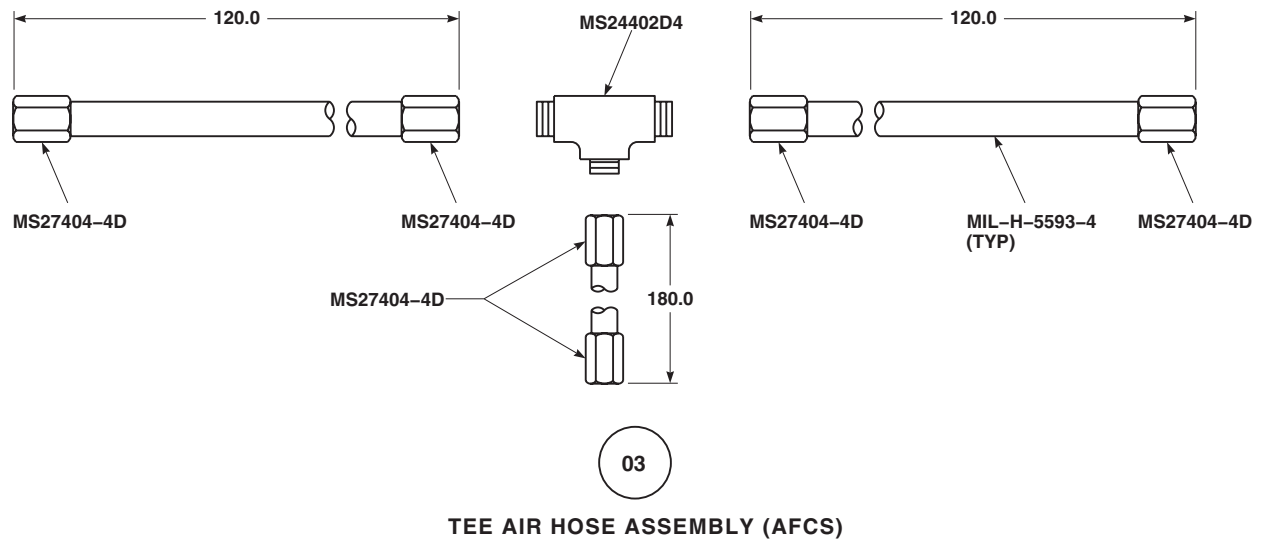


CHART B

| PART NUMBER  | DESCRIPTION                 | QUANTITY   | NSN              |
|--------------|-----------------------------|------------|------------------|
| MS24402D4    | TEE, TUBE, 1/4 INCH TUBE OD | 1          | 4730-00-722-1207 |
| MS27404-4D   | ADAPTER, 1/4 INCH TUBE OD   | 6          | 4730-00-497-4281 |
| MIL-H-5593-4 | HOSE, FLEXIBLE, 1/4 INCH ID | 300.0 INCH | 4720-00-540-1962 |

NOTES


1. MAKE 1420-BH-011-03 TEE AIR HOSE ASSEMBLY (AFCS) PER FIGURE, USING MATERIALS LISTED IN CHART B, OR APPROVED EQUIVALENT.
2. IDENTIFY ASSEMBLY WITH PART NUMBER AND NOMENCLATURE, 1420-BH-011-03, TEE AIR HOSE ASSEMBLY (AFCS), PER MIL-STD-130.
3. CAP ENDS OF HOSE WHEN NOT IN USE.
4. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.

PART NUMBER: 1420-BH-011-03

AK1654\_2A  
SA

Figure 49. Pitot-Static Test Set. (Sheet 2 of 3)

## FIELD MANUFACTURE ITEMS - Continued

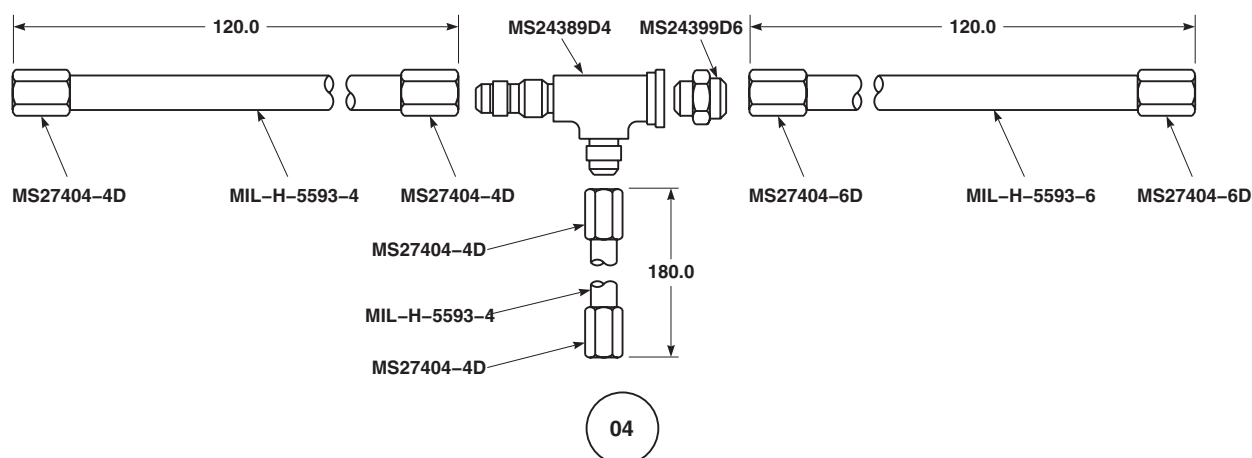

TEE AIR HOSE ASSEMBLY (PITOT STATIC/IFF)

CHART C

| PART NUMBER  | DESCRIPTION                 | QUANTITY   | NSN              |
|--------------|-----------------------------|------------|------------------|
| MS24389D4    | TEE, TUBE, 1/4 INCH TUBE OD | 1          | 4730-00-804-8683 |
| MS24399D6    | REDUCER, 3/8 INCH TUBE OD   | 1          | 4730-00-752-9336 |
| MS27404-4D   | ADAPTER, 1/4 INCH TUBE OD   | 4          | 4730-00-497-4281 |
| MS27404-6D   | ADAPTER, 3/8 INCH TUBE OD   | 2          | 4730-00-278-5686 |
| MIL-H-5593-4 | HOSE, FLEXIBLE, 1/4 INCH ID | 300.0 INCH | 4720-00-540-1962 |
| MIL-H-5593-6 | HOSE, FLEXIBLE, 3/8 INCH ID | 120.0 INCH | 4720-00-720-1096 |

## NOTES


1. MAKE TEE AIR HOSE ASSEMBLY (PITOT-STATIC / IFF), 1420-BH-011-04, PER FIGURE, USING MATERIAL LISTED IN CHART C, OR APPROVED EQUIVALENT.
2. IDENTIFY ASSEMBLY WITH PART NUMBER AND NOMENCLATURE, TEE AIR HOSE ASSEMBLY (PITOT-STATIC / IFF), 1420-BH-001-04, PER MIL-STD-130.
3. ASSEMBLIES, 1420-BH-011-02, 1420-BH-011-03, AND 1420-BH-011-04, MAKE UP PITOT-STATIC TEST SET, 1420-BH-011-01.
4. CAP ENDS OF HOSE WHEN NOT IN USE.
5. ALL DIMENSIONS ARE IN INCHES UNLESS OTHERWISE NOTED.

PART NUMBER: 1420-BH-011-04

AK1654\_3A  
SA

Figure 49. Pitot-Static Test Set. (Sheet 3 of 3)

FIELD MANUFACTURE ITEMS - Continued

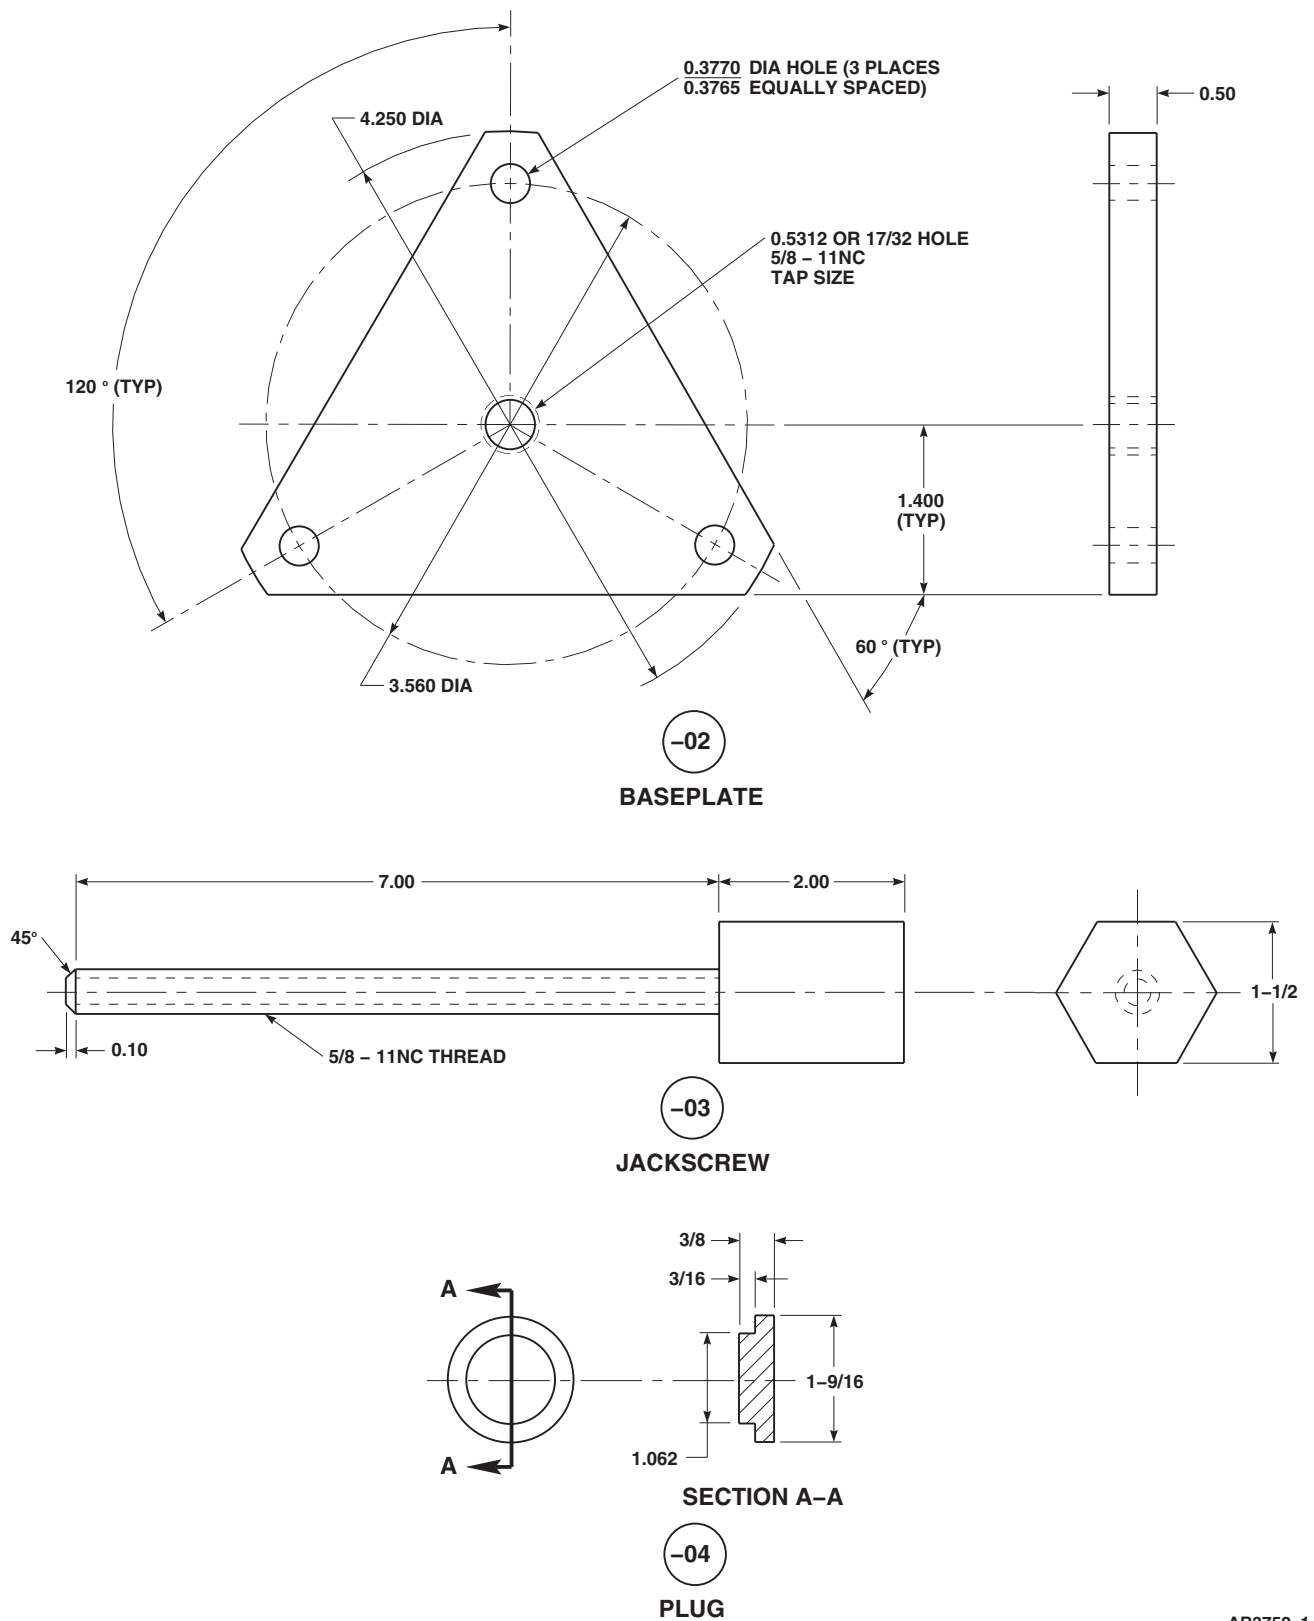

AB3752\_1  
SA

Figure 50. Flange Puller. (Sheet 1 of 2)

## FIELD MANUFACTURE ITEMS - Continued

| PART NUMBER    | DESCRIPTION | MAKE FROM MATERIAL                             | MAKE FROM NSN    |
|----------------|-------------|------------------------------------------------|------------------|
| 1420-BH-012-02 | BASE PLATE  | 0.50 4130 STEEL PLATE, MIL-S-18729             | 9515-00-294-9916 |
| 1420-BH-012-03 | JACKSCREW   | 1-1/2 INCH HEXAGON BAR, 4130 STEEL, MIL-S-6758 | 9510-00-528-5000 |
| 1420-BH-012-04 | PLUG        | 1-9/16 DIA ROD, 4130 STEEL, MIL-S-6758         | 9510-00-993-5836 |

## NOTES


1. MAKE 1420-BH-012-02 BASE PLATE, 1420-BH-012-03 JACKSCREW AND 1420-BH-012-04 PLUG PER FIGURE, USING MATERIALS LISTED IN CHART. DRILL AND TAP BASE PLATE AND THREAD JACKSCREW TO 5/8-11NC THREAD SIZE PER INSTRUCTIONS IN FIGURE.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. TOLERANCE: ANGULAR,  $\pm 0^\circ 30'$ .  
LINEAR, .XX =  $\pm 0.03$ , .XXX =  $\pm 0.010$ , X/X =  $\pm 1/32$ .
4. SURFACE FINISH 125 / ALL MACHINED SURFACES.
5. BREAK SHARP EDGES TO 0.005 TO 0.015 RADIUS.
6. ASSEMBLE 1420-BH-012-02, 1420-BH-012-03, AND 1420-BH-012-04 TO MAKE 1420-BH-012-01 FLANGE PULLER.
7. IDENTIFY PARTS PER MIL-STD-130.

PART NUMBER: 1420-BH-012-02, -03, -04

AB3752\_2  
SA

Figure 50. Flange Puller. (Sheet 2 of 2)

## FIELD MANUFACTURE ITEMS - Continued

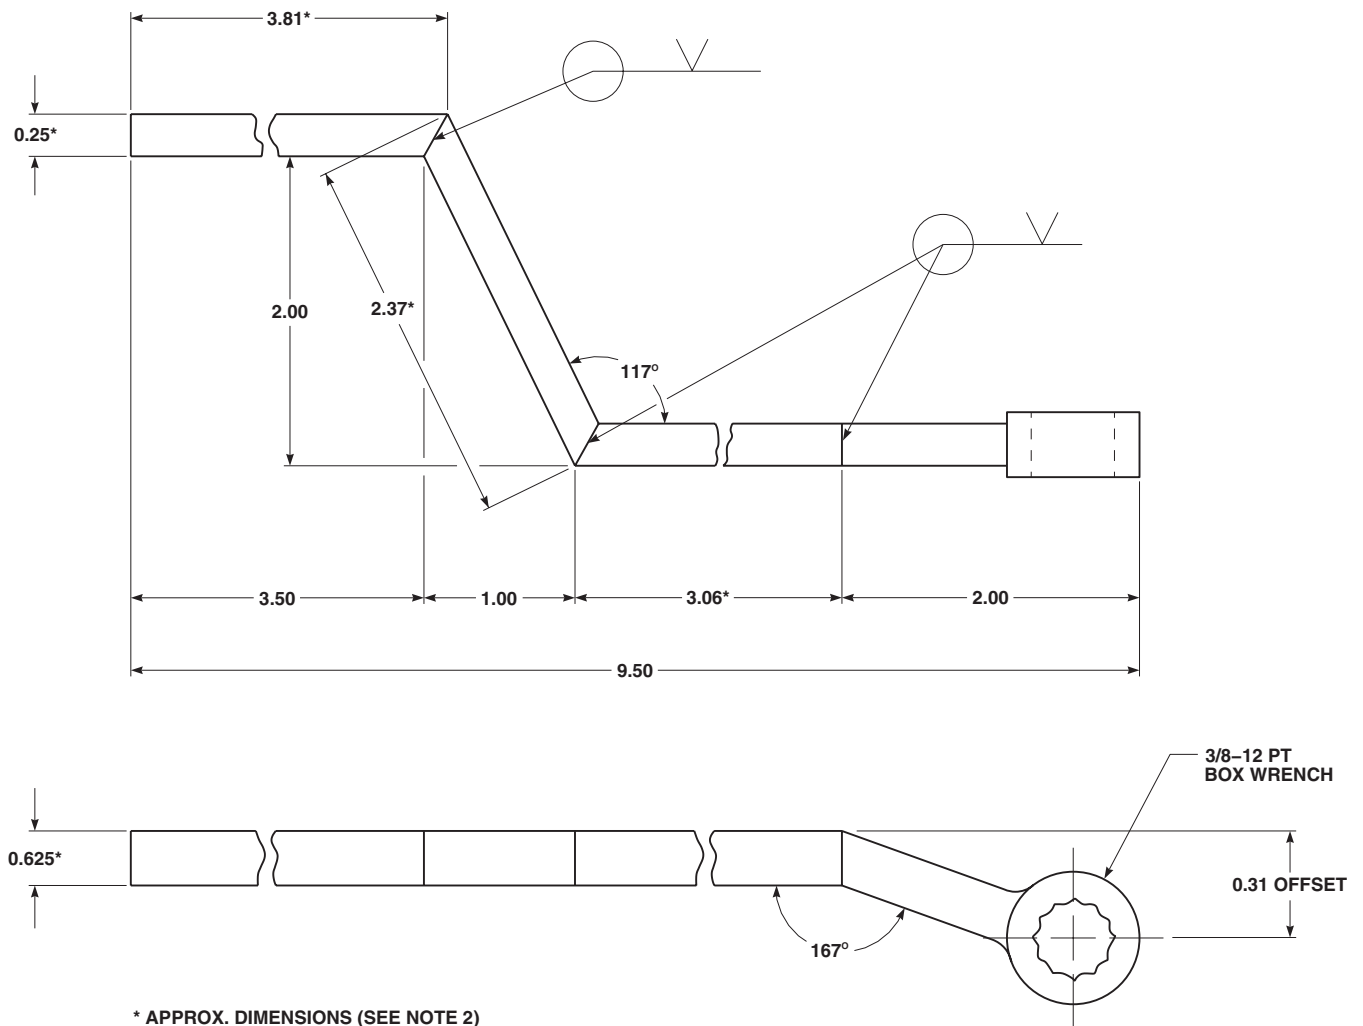

## NOTES


1. USE HEAD OF 3/8 INCH BOX WRENCH, 12-POINT, PER GGG-W-1437, TYPE III, OR EQUIVALENT, NSN 5120-00-935-7362. CUT WRENCH AS SHOWN IN FIGURE AND STRAIGHTEN ANGULAR OFFSET.
2. MAKE HANDLE FROM 4130 STEEL BAR STOCK, MIL-S-18729, NSN 9510-01-032-3708. WIDTH AND THICKNESS DIMENSIONS OF BAR STOCK, AS SHOWN IN FIGURE, ARE APPROXIMATE. EXACT DIMENSIONS WILL DEPEND UPON CROSS-SECTIONAL DIMENSIONS OF MATING PART OF BOX END WRENCH USED. MAINTAIN DIMENSIONS NOT MARKED BY ASTERISK (\*).
3. TOLERANCE:  $\pm 0.05$  FOR FABRICATED HANDLE.
4. CUT BAR STOCK TO REQUIRED SIZES AND WELD PARTS PER INFORMATION IN FIGURE.
5. GRIND WELDS TO A SMOOTH CONTOUR.
6. IDENTIFY PARTS PER MIL-STD-130.
7. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.

PART NUMBER: 1420-BH-013

AK1656A  
SA

Figure 51. Pivot Bearing Replacement Wrench.

## FIELD MANUFACTURE ITEMS - Continued

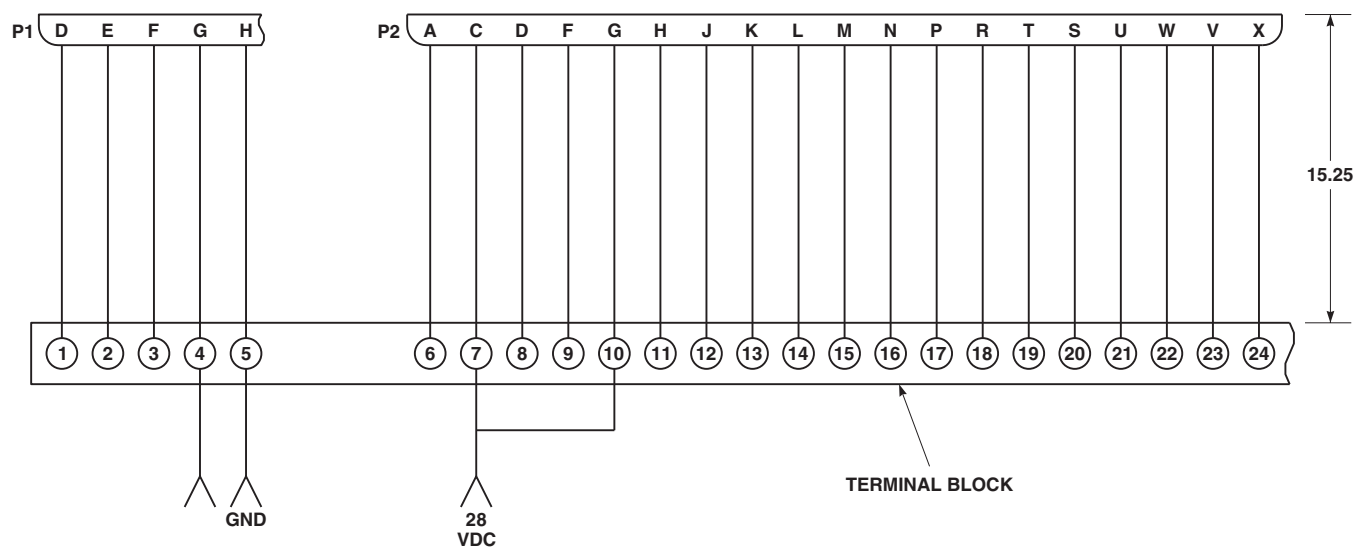

| PART NUMBER                  | DESCRIPTION                              | QUANTITY | NSN                                                  |
|------------------------------|------------------------------------------|----------|------------------------------------------------------|
| MS27212-1-28 OR EQUIVALENT   | TERMINAL BLOCK                           | 1        | 5440-00-132-2761 (10 PT)<br>5440-00-950-1610 (20 PT) |
| MS3476W12-8S                 | CONNECTOR, P1                            | 1        | 5935-01-108-8438                                     |
| MS3476W16-26S                | CONNECTOR, P2                            | 1        | 5935-01-106-3899                                     |
| M7078 / 3-20-7 OR EQUIVALENT | ELECTRICAL WIRE, 20-GAGE, MIL-C-7078 / 3 | 15 IN.   | 6145-01-293-1822                                     |

## NOTES

1. MAKE SWITCH PANEL TEST HARNESS AS SHOWN IN FIGURE, USING MATERIALS LISTED IN CHART, SELECT TERMINAL BLOCK, AS REQUIRED.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. TIE WIRES TOGETHER OR COVER WITH APPROVED INSULATION TUBING.
4. IDENTIFY TEST HARNESS AND CONNECTORS P1 AND P2 PER FIGURE AND MIL-STD-130.


PART NUMBER: 1730-BH-001-01

AK1657C  
SA

Figure 52. Switch Panel Test Harness.




FIELD MANUFACTURE ITEMS - Continued

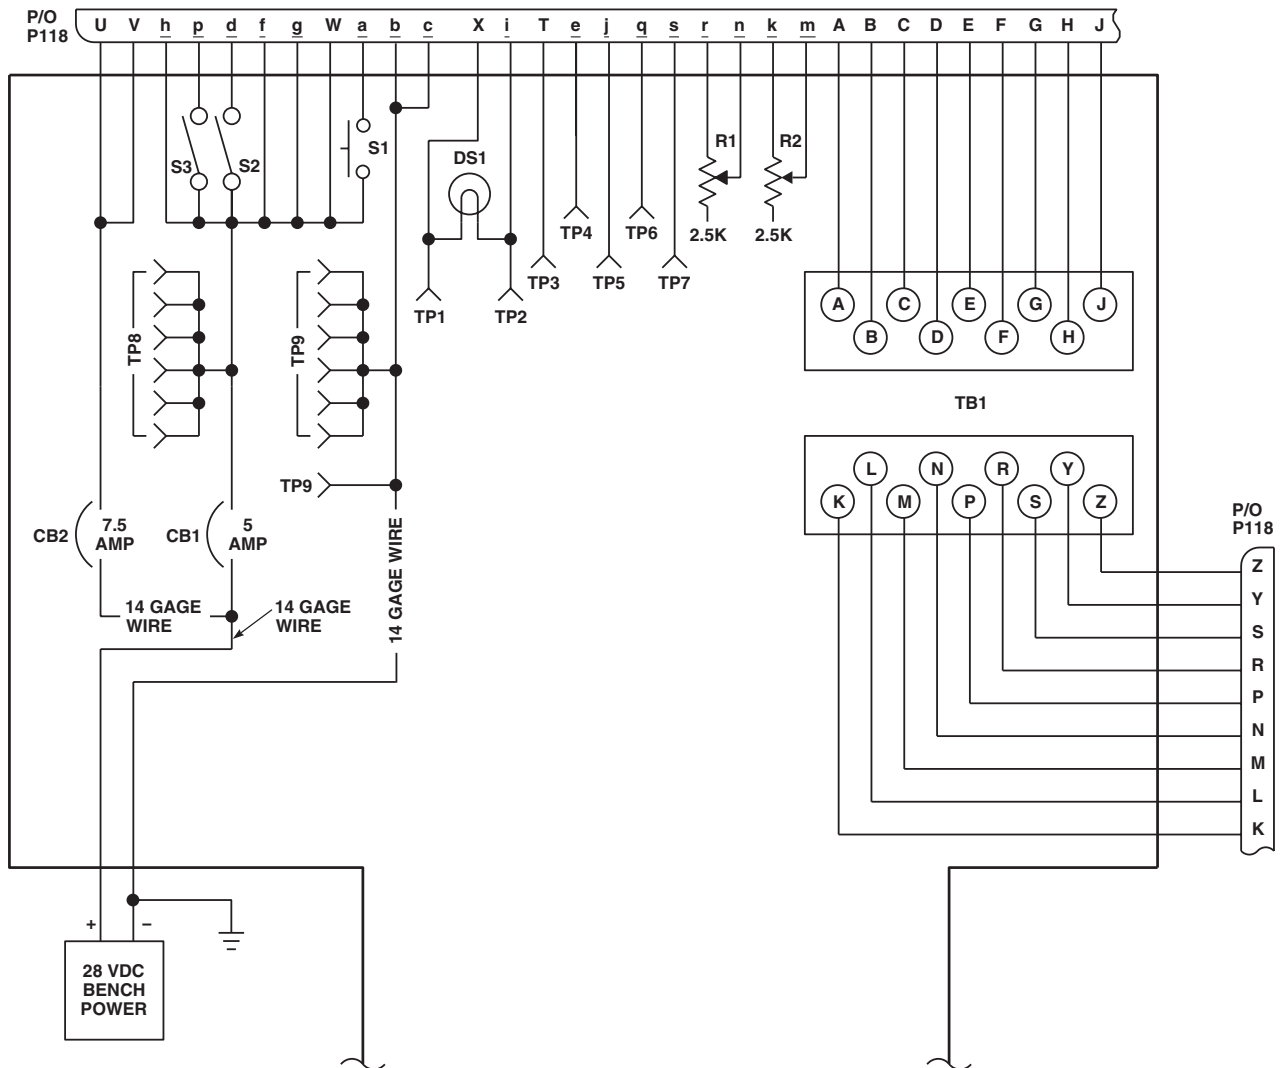

AK1658\_1  
SA

Figure 53. Caution Advisory Test Adapter. (Sheet 1 of 3)

FIELD MANUFACTURE ITEMS - Continued

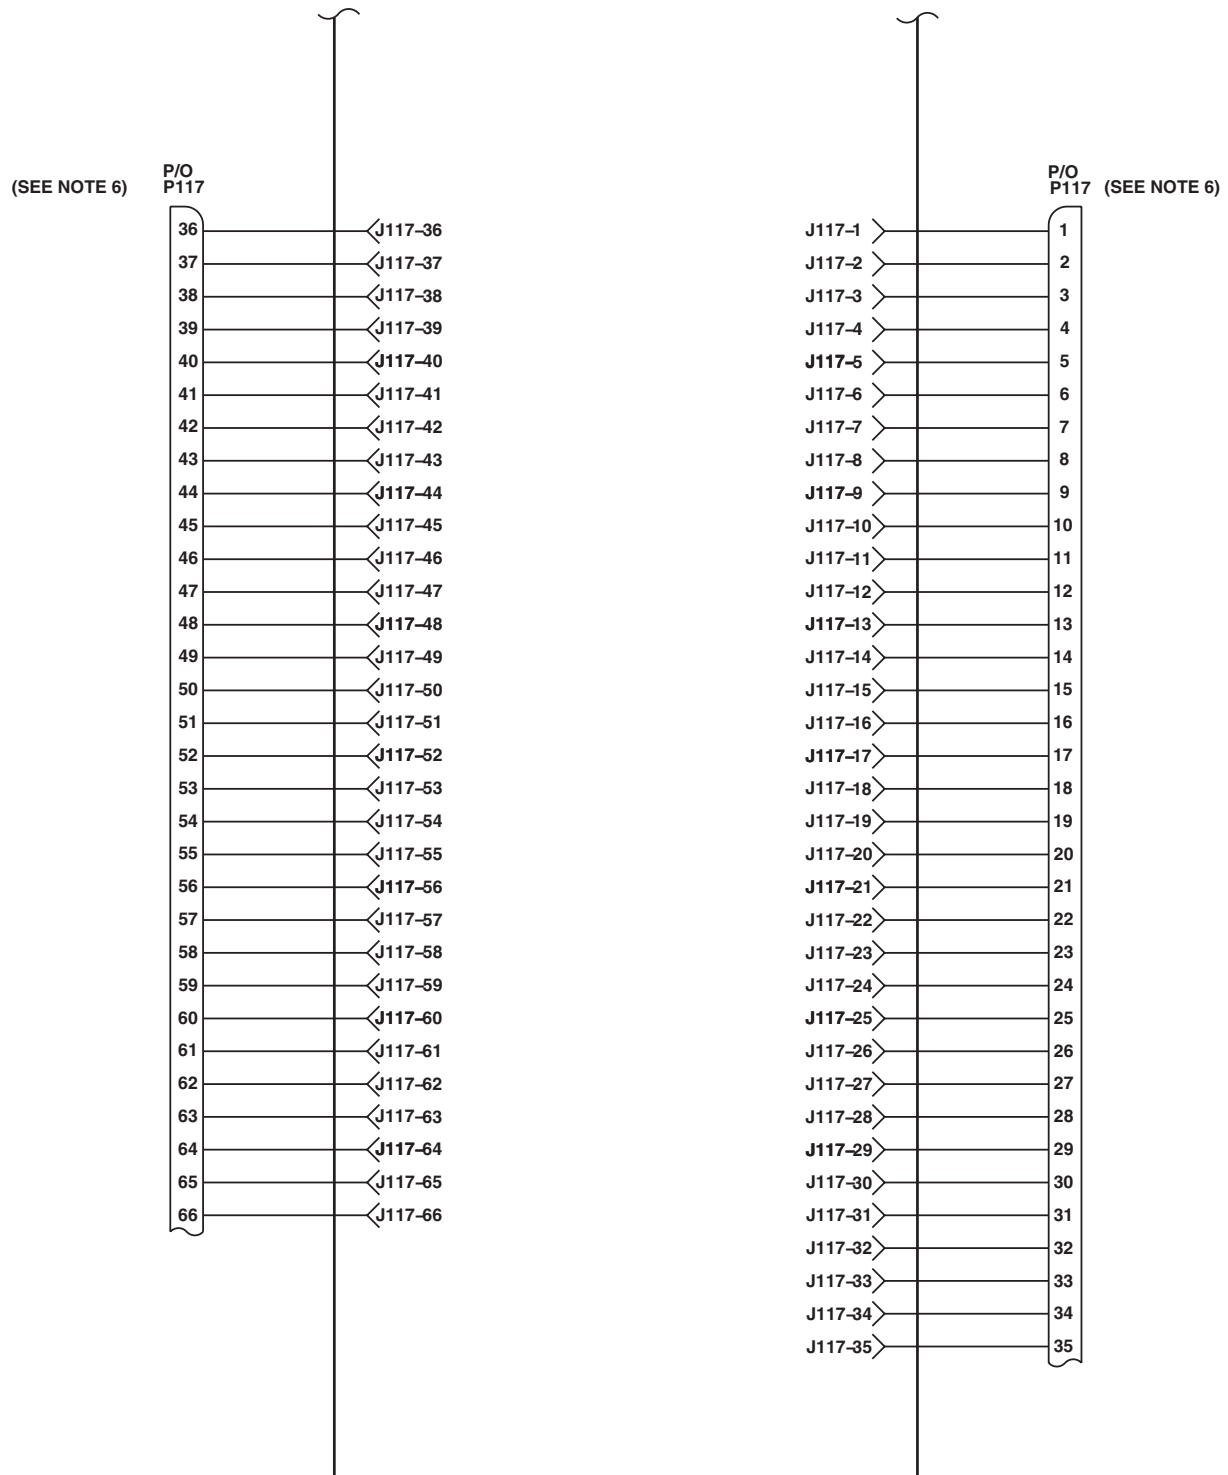

AB3753\_2  
SA

Figure 53. Caution Advisory Test Adapter. (Sheet 2 of 3)

## FIELD MANUFACTURE ITEMS - Continued

| PART NUMBER                  | DESCRIPTION                                        | QUANTITY | NSN              |
|------------------------------|----------------------------------------------------|----------|------------------|
| MS16108-8A                   | TEST POINT, TP1 THRU TP9                           | 9        | 5935-00-768-4232 |
| MS24509-5                    | CIRCUIT BREAKER, CB1                               | 1        | 5925-00-850-7244 |
| MS24509-7.5                  | CIRCUIT BREAKER, CB2                               | 1        | 5925-01-065-2956 |
| MS25089-4CR                  | SWITCH, S1                                         | 1        | 5930-00-578-2353 |
| MS25098-22                   | SWITCH, S2 AND S3                                  | 2        | 5930-00-172-2869 |
| MS27212-2-10                 | TERMINAL BLOCK, TB1                                | 2        | 5940-00-544-6306 |
| OR EQUIVALENT                | —                                                  | —        | —                |
| MS27467T9F-35S               | CONNECTOR P117                                     | 1        | 5935-00-521-2548 |
| MS3476L20-41S                | CONNECTOR P118                                     | 1        | 5935-00-009-3157 |
| M5086 / 2-14 OR EQUIVALENT   | ELECTRICAL WIRE, 14 GAGE PER MIL-W-5086 / 2        | AS REQ'D | 6145-00-578-6604 |
| M5086 / 2-20-9 OR EQUIVALENT | ELECTRICAL WIRE, 20 GAGE PER MIL-W-5068 / 2        | AS REQ'D | 6145-00-851-8505 |
| M5086 / 2-22-9               | ELECTRICAL WIRE, 22 GAGE PER MIL-W-5086 / 2        | AS REQ'D | 6145-00-578-6606 |
| RV4LAYS252A                  | RESISTORS R1 AND R2                                | 2        | 5905-00-539-2567 |
| OR EQUIVALENT                | —                                                  | —        | —                |
| MS25237-327                  | LAMP                                               | 1        | 6240-00-155-7836 |
| 1010J6-100                   | SLEEVING, TEXTILE, TUBE INSULATION 3/4 ID YELLOW   | AS REQ'D | 5970-00-687-0298 |
| —                            | ALUMINUM BOX, 12.0 x 12.0 x 12.0 INCH (SEE NOTE 3) | 1        | —                |
| M39024 / 10-02               | TEST JACKS - RED                                   | 60       | 5935-00-687-8090 |
| M39024 / 10-03               | TEST JACKS - BLACK                                 | 18       | 5935-00-169-9437 |
| —                            | —                                                  | —        | 5935-00-762-0312 |

## NOTES



1. MAKE TEST ADAPTER PER FIGURE USING MATERIALS LISTED IN CHART.
2. TEST POINTS BLACK: J117-13, J117-14, J117-18, J117-26, J117-29, J117-30, J117-34, J117-42, J117-45, J117-53, J117-61, J117-62, TP9 (6 JACKS). ALL OTHER TEST POINTS ARE RED.
3. BOX CAN BE PURCHASED FROM ZERO MFG. CO. 14501 49TH ST., NORTH CLEARWATER, FLORIDA 33520, OR LOCALLY FABRICATE USING 12 x 12 x 12, 050-2024-T3 ALCLAD, QQ-A-250 / 5, NSN 935-00-084-4450.
4. IDENTIFY PARTS PER MIL-STD-130.
5. USE 20 GAGE WIRE FOR ALL CONNECTIONS EXCEPT WHERE NOTED IN FIGURE.
6. USE 22 GAGE WIRE FOR ALL CONNECTIONS TO P117 CONNECTOR.
7. COVER WIRES WITH INSULATION TUBING.

PART NUMBER: 1730-B4-002-01

AB3754\_3A  
SA

Figure 53. Caution Advisory Test Adapter. (Sheet 3 of 3)


FIELD MANUFACTURE ITEMS - Continued

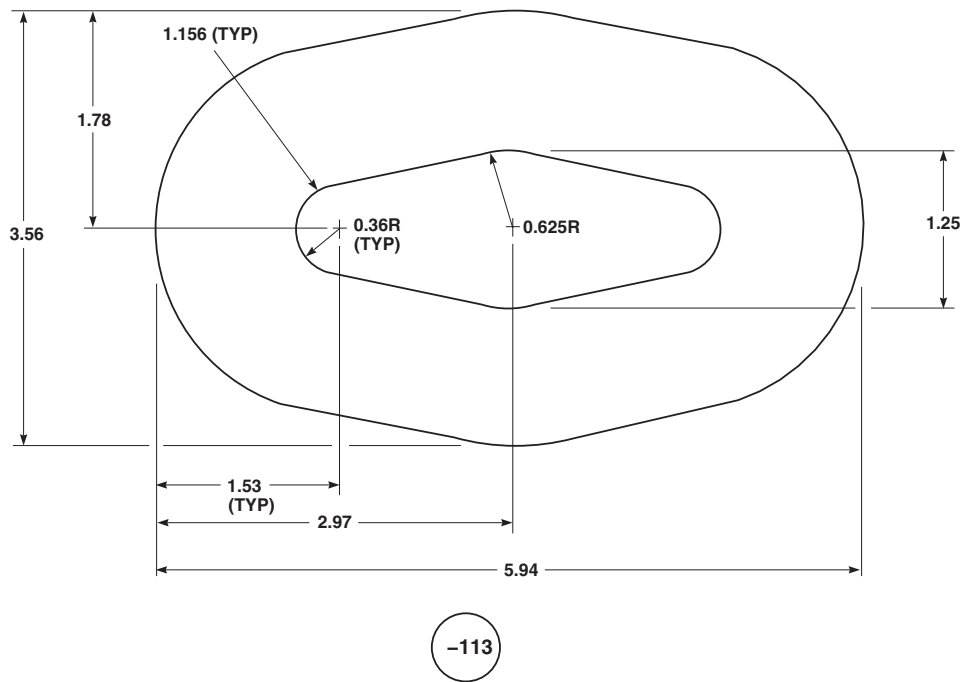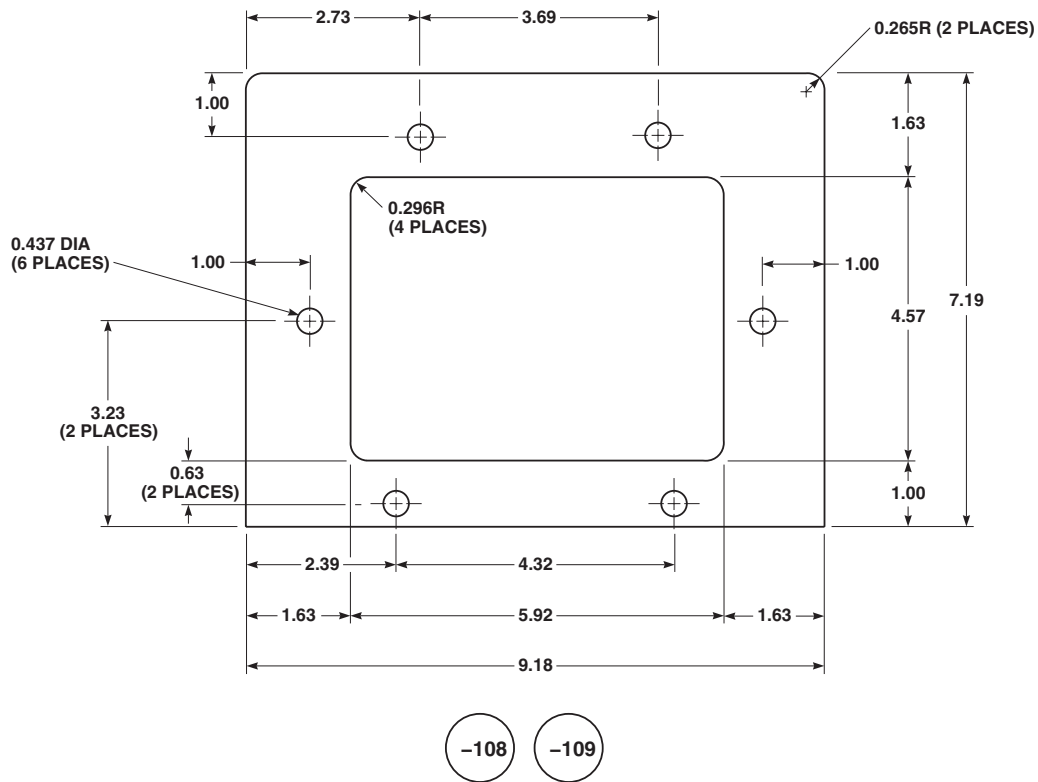

AK1659\_1A  
SA

Figure 54. Transmission Drip Pan Seal. (Sheet 1 of 2)

## FIELD MANUFACTURE ITEMS - Continued

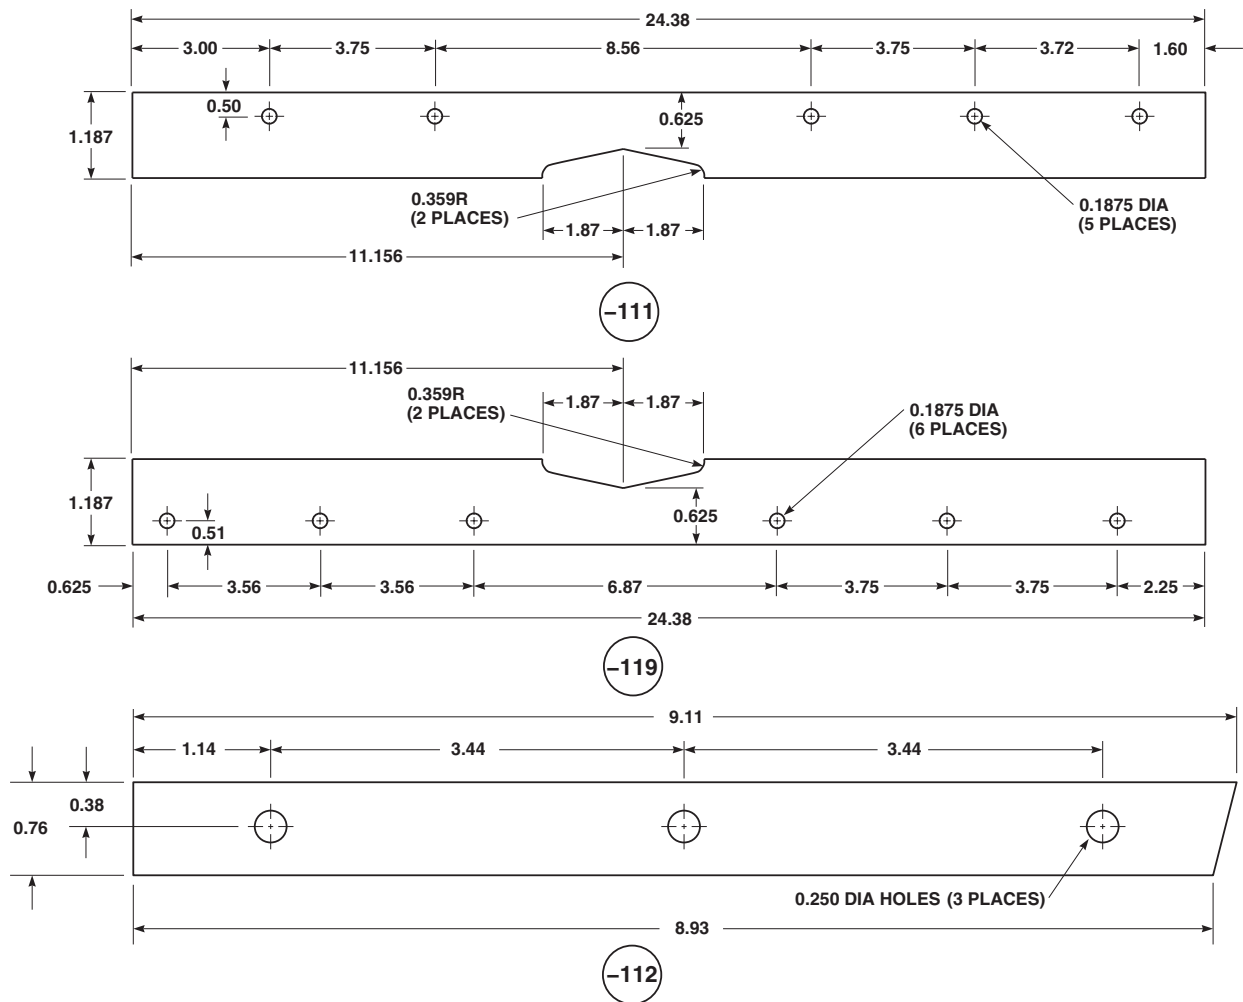

| NOMENCLATURE               | SIKORSKY<br>PART NUMBER |
|----------------------------|-------------------------|
| TRANSMISSION DRIP PAN SEAL | 70070-50005-108         |
|                            | 70070-50005-109         |
|                            | 70070-50005-111         |
|                            | 70070-50005-112         |
|                            | 70070-50005-113         |
|                            | 70070-50005-119         |

## NOTES

1. MAKE -108, -109 FROM NITRILE RUBBER MIL-R-6855, CLASS 1, GRADE 60, 0.062 INCH THICK, NSN 9320-00-241-9742.
2. MAKE -113 FROM MIL-STD-670, SCE-3L, CD1079 RUBBER, 0.125 INCH THICK, NSN 9320-01-154-2225.
3. MAKE -111, -119 FROM MIL-STD-670, SCE-3L, CD1079E RUBBER, 0.312 INCH THICK, NSN 9320-00-181-0016.
4. MAKE -112 FROM 0.187 INCH THICK SCE-3L, CD1079 RUBBER, MIL-C-3133, NSN 9320-00-815-9734.
5. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
6. IDENTIFY PARTS PER MIL-STD-190. STAMP OR STENCIL PART NUMBER AND DATE OF MANUFACTURE ON PARTS WITH OPAQUE YELLOW INK, TT-I-1795. USE 1/16 -1/8 INCH HIGH SANS SERIF CHARACTERS.

EXAMPLE: P/N 70216-02401-107

3Q 86


PART NUMBER THIRD QUARTER 1986

PART NUMBER: 70700-50005-108, -109, -111, -112, -113, -119

AK1659\_2B  
SA

Figure 54. Transmission Drip Pan Seal. (Sheet 2 of 2)

FIELD MANUFACTURE ITEMS - Continued

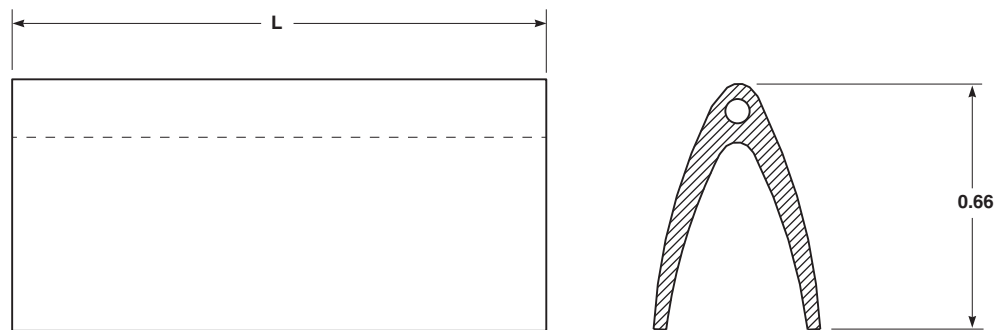

| SIKORSKY<br>PART NUMBER | L LENGTH | HEIGHT |
|-------------------------|----------|--------|
| 70205-06052-111         | 3.50     | 0.66   |
| 70205-06052-112         | 4.50     | 0.66   |
| 70205-06052-113         | 2.50     | 0.66   |

NOTES

1. MAKE FROM 0.015 THICK EXTRUDED NEOPRENE, CLASS 2, GRADE 60, MIL-R-6855, P / N 11-222106, FSCM 02921.
2. CUT SEAL TO REQUIRED LENGTH AS SHOWN IN CHART.
3. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
4. IDENTIFY PARTS PER MIL-STD-190. STAMP OR STENCIL PART NUMBER AND DATE OF MANUFACTURE ON PARTS WITH OPAQUE GREEN INK, TT-I-1795. USE 1/16 TO 1/8 INCH HIGH SANS SERIF CHARACTERS.


EXAMPLE: P/N 70216-02401-107                      3Q 86  
PART NUMBER                      THIRD QUARTER 1986

PART NUMBER: 70205-06052-111, -112, -113

AK1661A  
SA

Figure 55. Seal.

## FIELD MANUFACTURE ITEMS - Continued

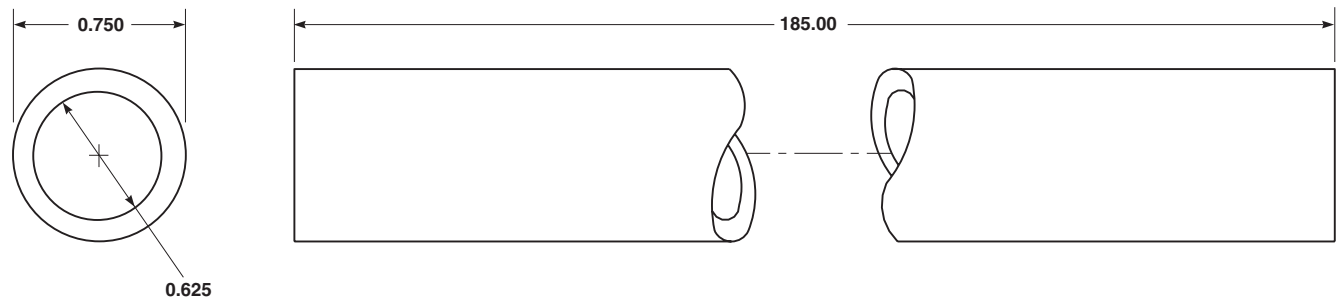

## NOTES


1. MAKE FROM URETHANE TUBING, (TYGOTHANE) FSCM 34384.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. CUT ENDS STRAIGHT.
4. DO NOT PAINT.
5. IDENTIFY PARTS PER MIL-STD-130.

PART NUMBER: 70070-50006-107, -108

AK1662A  
SA

Figure 56. Transmission Drain Tubing.

## FIELD MANUFACTURE ITEMS - Continued

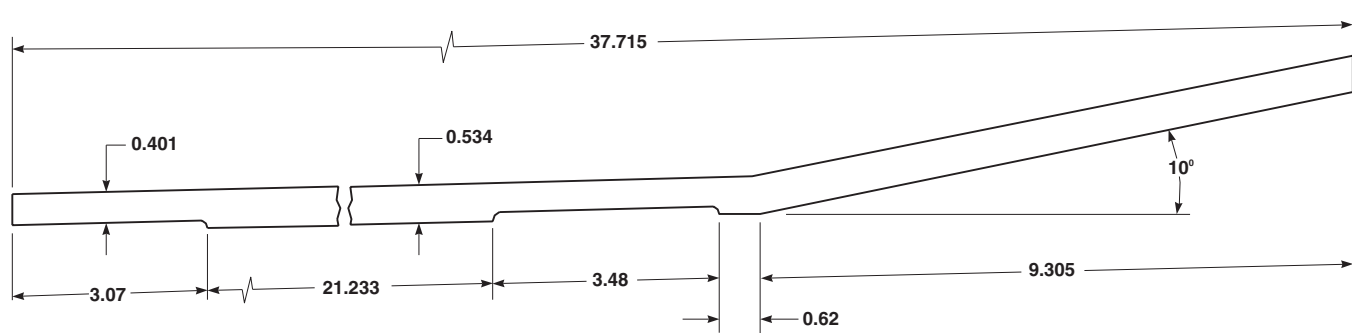

## NOTES

1. MAKE FROM 0.062 INCH THICK RUBBER SHEET, MIL-C-3133, GRADE SCE-11L, MIL-STD-670, NSN 9320-00-269-2863, OR GRADE SBE 11L, NSN 9320-01-580-6756.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. IDENTIFY PARTS PER MIL-STD-190. STAMP OR STENCIL PART NUMBER AND DATE OF MANUFACTURE ON PARTS WITH OPAQUE GREEN INK, TT-I-1795. USE 1/16 TO 1/8 INCH HIGH SANS SERIF CHARACTERS.

EXAMPLE: P/N 70216-02401-107      3Q 86  
                     PART NUMBER      THIRD QUARTER 1986


PART NUMBER: 70219-04704-105

AK1663A  
SA

Figure 57. Chafing Strip.



## FIELD MANUFACTURE ITEMS - Continued

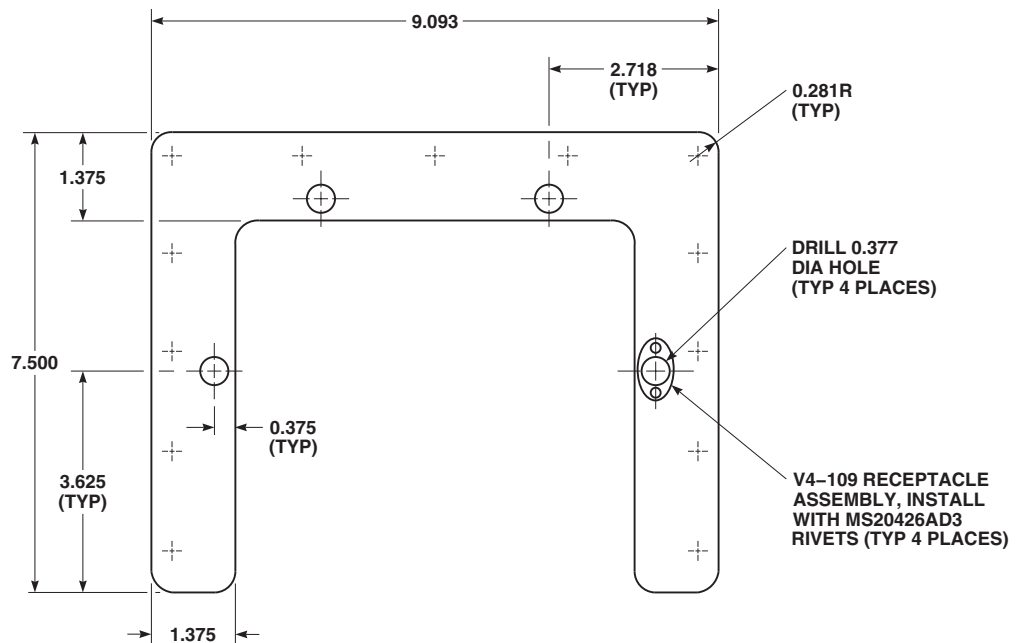

| PART NUMBER | DESCRIPTION                               | QUANTITY    | NSN              |
|-------------|-------------------------------------------|-------------|------------------|
| -           | 0.050 7075-T6 ALCLAD SHEET, QQ-A-250 / 13 | AS REQUIRED | 9535-00-086-9465 |
| V4-109      | RECEPTACLE ASSEMBLY                       | 4           | 5350-00-947-0160 |
| MS20426AD3  | RIVET                                     | 8           | -                |

## NOTES

1. MAKE STRAP AS SHOWN IN FIGURE, USING MATERIALS LISTED IN CHART.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. DRILL HOLES (4 PLACES) USING LETTER V DRILL.
4. BREAK SHARP EDGES AND DEBURR ALL HOLES.
5. INSTALL RECEPTACLE ASSEMBLIES PER INSTRUCTIONS IN TM 1-1500-204-23.
6. IDENTIFY PARTS PER MIL-STD-130.


PART NUMBER: 70500-02060-124

AK1664A  
SA

Figure 58. Strap.

**FIELD MANUFACTURE ITEMS - Continued**

#20 GAGE, 19 X 32 STRAND  
SILVER COATED COPPER

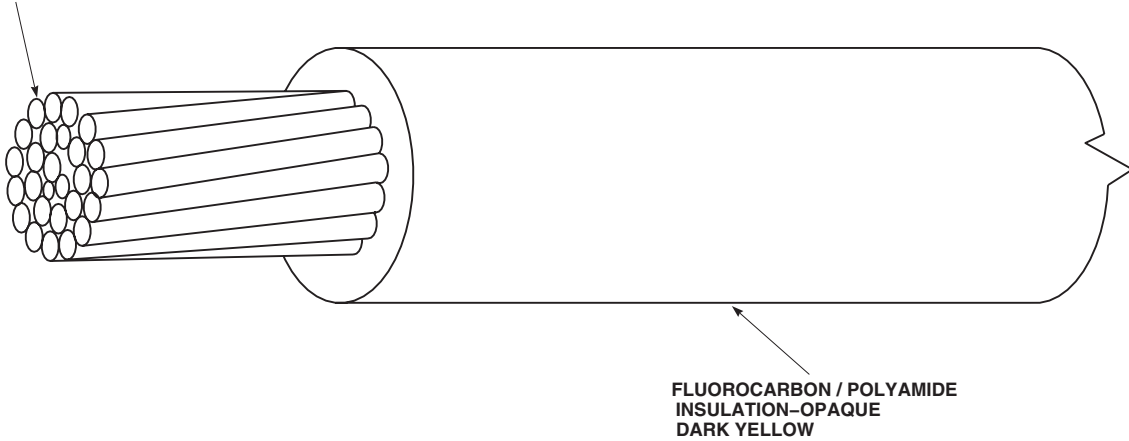**NOTES**


1. MAKE FROM M81381 / 11-20N, NSN 6145-01-133-2326.
2. CUT WIRE TO REQUIRED SIZE.
3. IDENTIFY PARTS PER MIL-W-5088.

PART NUMBER: 10-615393


AK1665  
SA

Figure 59. Electrical Wire.

## FIELD MANUFACTURE ITEMS - Continued

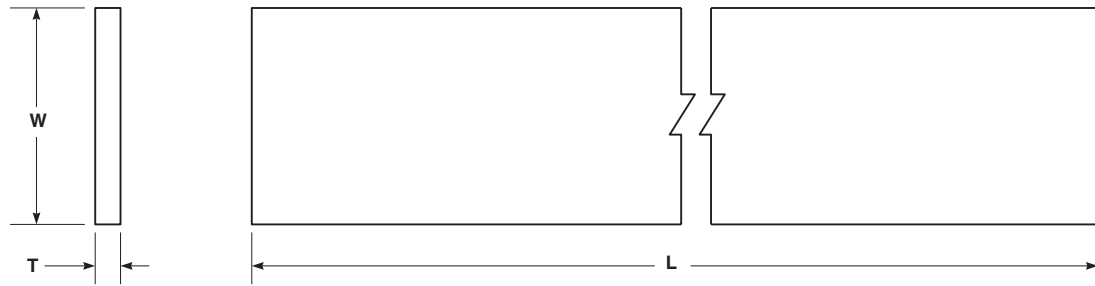

-110

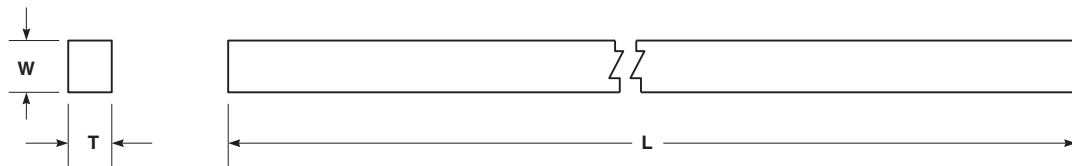

-113

| NOMENCLATURE           | T THICKNESS | W WIDTH | L LENGTH | SIKORSKY<br>PART NUMBER |
|------------------------|-------------|---------|----------|-------------------------|
| CARGO HOOK ACCESS SEAL | 0.093       | 0.84    | 19.20    | 70214-02556-110         |
|                        | 0.188       | 0.20    | 19.20    | 70214-02556-113         |

## NOTES

1. MAKE -110 FROM MIL-STD-670, SCE 7L RUBBER, 0.093 INCH THICK, NSN 9320-01-154-2224.
2. MAKE -113 FROM MIL-C-3133, SCE 11L RUBBER, 0.188 INCH THICK, NSN 9320-00-282-8284.  
ALTERNATE, MIL-C-3133, SCE 7L RUBBER, 0.188 INCH THICK, NSN 9320-00-815-9734.
3. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
4. IDENTIFY PARTS PER MIL-STD-190. STAMP OR STENCIL PART NUMBER AND DATE OF MANUFACTURE ON PARTS WITH OPAQUE GREEN INK, TT-I-1795. USE 1/16 TO 1/8 INCH HIGH SANS SERIF CHARACTERS.

EXAMPLE: P/N 70216-02401-107

3Q 86

PART NUMBER


THIRD QUARTER 1986

PART NUMBER: 70214-02556-110, -113

AK1666A  
SA

Figure 60. Cargo Hook Access Seal.

FIELD MANUFACTURE ITEMS - Continued

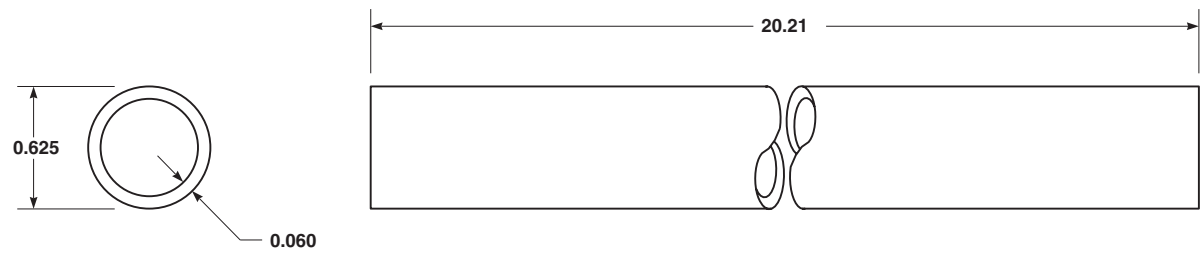

| NOMENCLATURE       | SIKORSKY PART NUMBER |
|--------------------|----------------------|
| CEILING PANEL TUBE | 70500-02063-123      |

NOTES


- 1. MAKE FROM LP-390 TYPE 3 POLYETHYLENE TUBING, 0.625 INCH OD, 0.060 INCH WALL, NSN 4710-00-889-4534.
- 2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
- 3. IDENTIFY PARTS PER MIL-STD-130.
- 4. CUT ENDS STRAIGHT.

PART NUMBER: 70500-02063-123

AK1669A  
SA

Figure 61. Ceiling Panel Tube.

## FIELD MANUFACTURE ITEMS - Continued

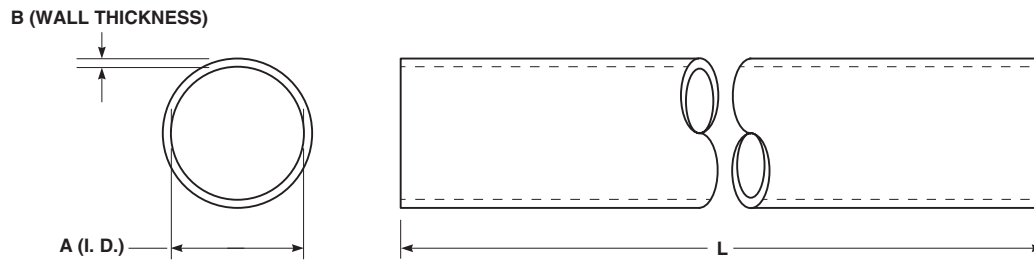

| SIKORSKY<br>PART NUMBER | A     | B     | L     | MAKE FROM MATERIAL         | MAKE FROM NSN    |
|-------------------------|-------|-------|-------|----------------------------|------------------|
| 70217-01010-101         | 0.500 | 0.032 | 24.00 | TEMFLEX 105C 1/2 IN. CLEAR | FSCM 75037       |
| 70217-01010-108         | 0.500 | 0.020 | 24.00 | KYNAR CONVOLEX TUBING      | 9330-01-089-0116 |
| 70217-01010-113         | 0.750 | 0.020 | 24.00 | KYNAR CONVOLEX TUBING      | 9330-01-089-0118 |

## NOTES


1. MAKE TUBE PER MATERIAL AND DIMENSIONS LISTED IN CHART.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. IDENTIFY PARTS PER MIL-STD-130.

PART NUMBER: 70217-01010-101, -108, -113

AK1670A  
SA

Figure 62. Nose Door Drain Tube.

## FIELD MANUFACTURE ITEMS - Continued

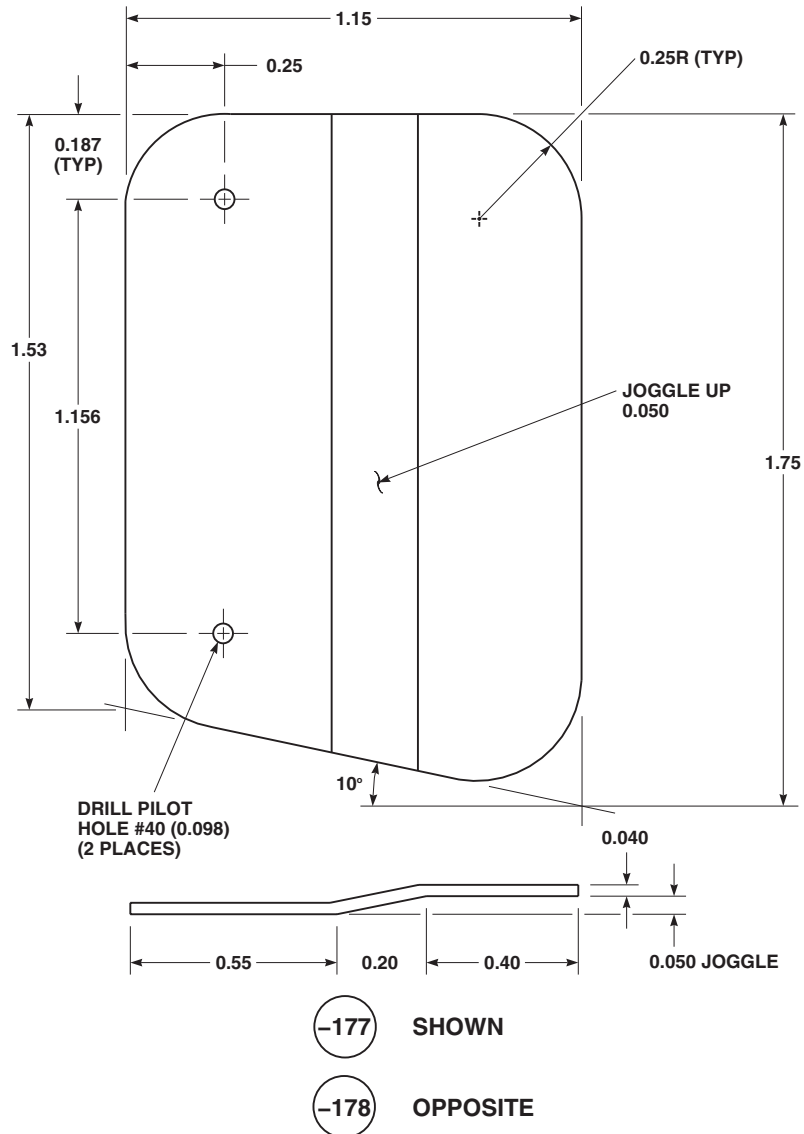


## NOTES

1. MAKE FROM 0.040 INCH THICK 7075-T6 ALCLAD SHEET, QQ-A-250 / 13, NSN 9535-00-084-4581.
  2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
  3. FORM JOGGLE, USING 3/16-INCH RADIUS, PER TM 1-1500-204-23.
  4. DRILL PILOT HOLES, AS INDICATED, PER TM 1-1500-204-23.
  5. IDENTIFY PARTS PER MIL-STD-130.
- PART NUMBER: 70217-01003-177, -178

AK1671A  
SA

Figure 63. Clip.

FIELD MANUFACTURE ITEMS - Continued

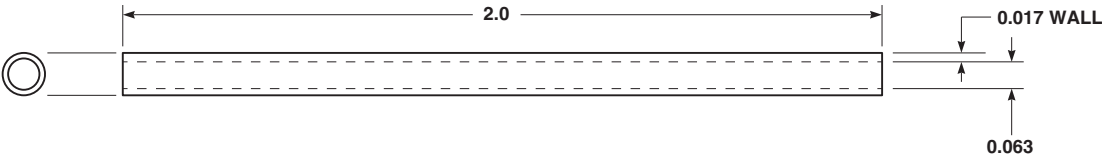

| PART NUMBER  | MAKE FROM MATERIAL | MAKE FROM NSN    |
|--------------|--------------------|------------------|
| 10-90604-201 | M23053 / 5-102-0   | 5970-00-812-2968 |

NOTES


- 1. MAKE SLEEVE PER FIGURE, USING MATERIAL LISTED IN CHART.
- 2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
- 3. IDENTIFY PARTS PER MIL-STD-130.

PART NUMBER: 10-90604-201

AK1672A  
SA

Figure 64. Insulation Sleeve.

FIELD MANUFACTURE ITEMS - Continued

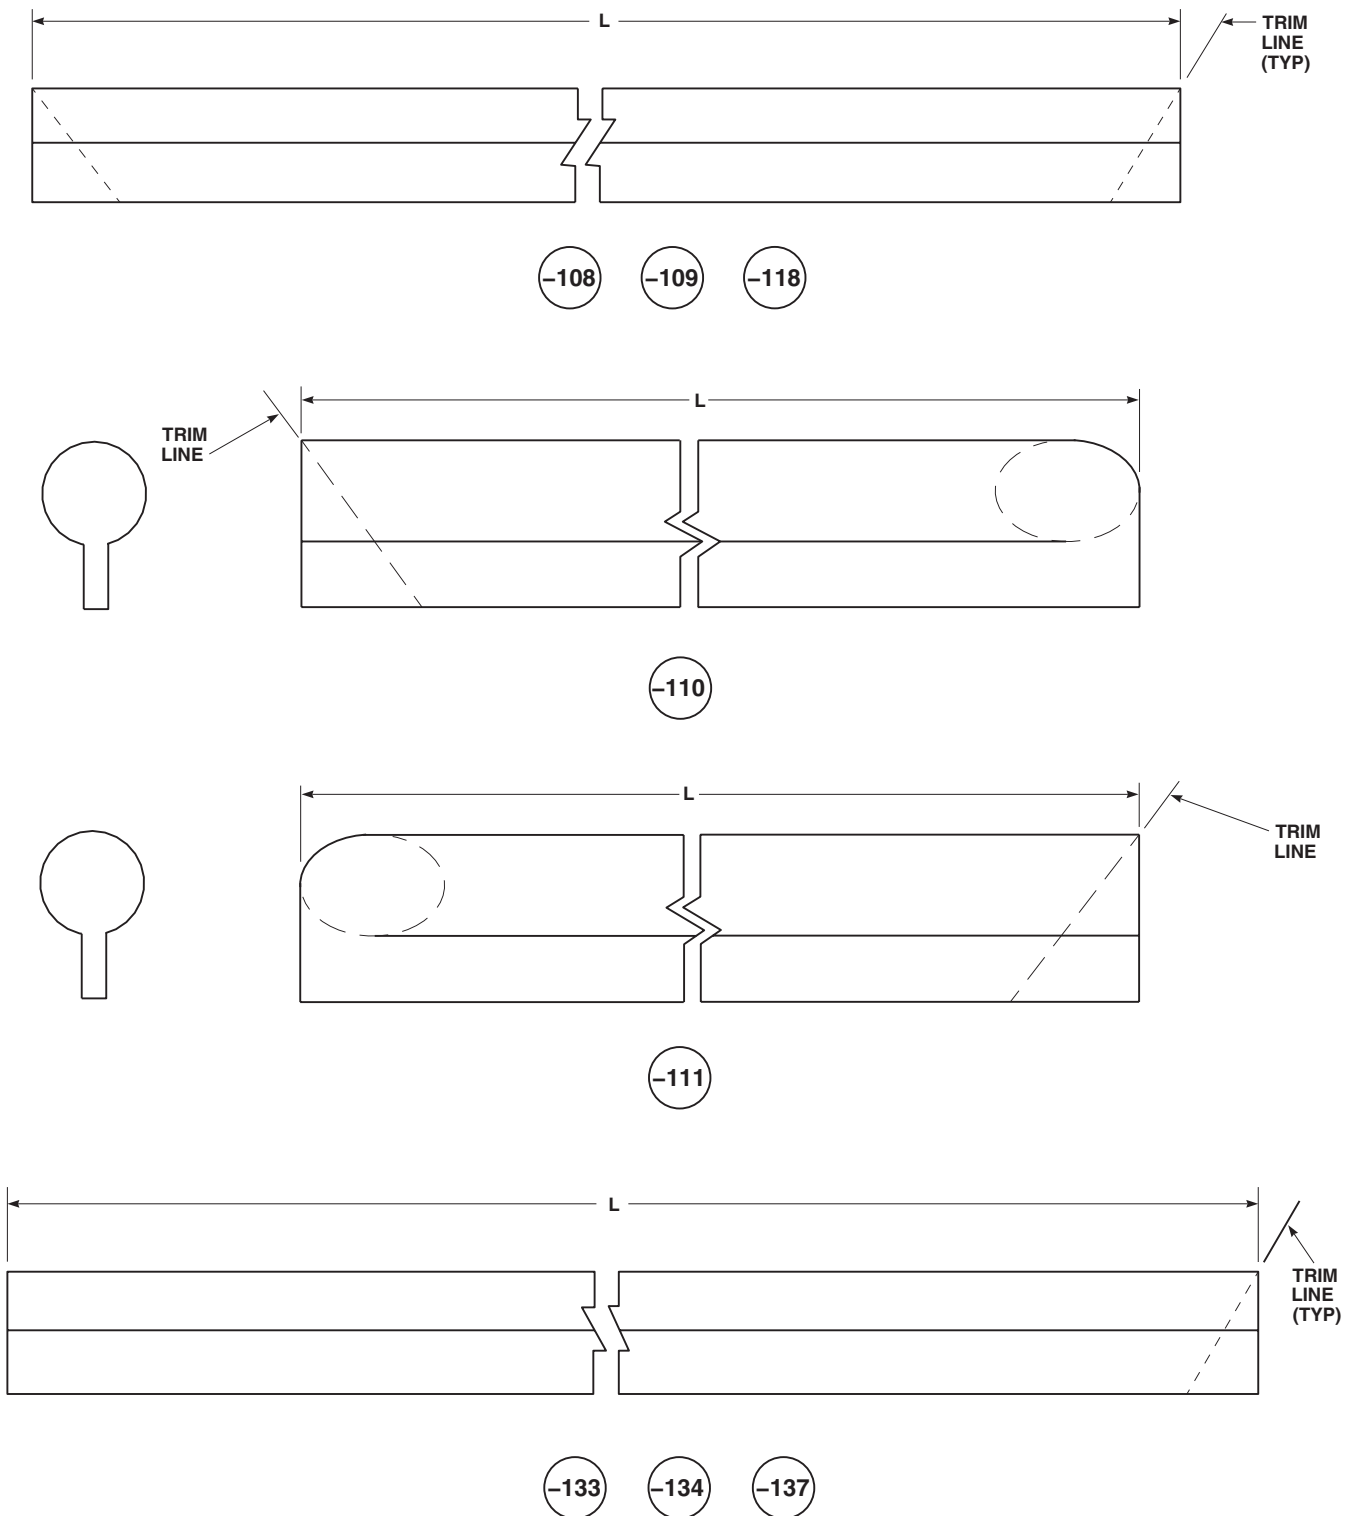


AK1673\_1A  
SA


Figure 65. Engine Inlet Firewall Seal. (Sheet 1 of 2)



## FIELD MANUFACTURE ITEMS - Continued

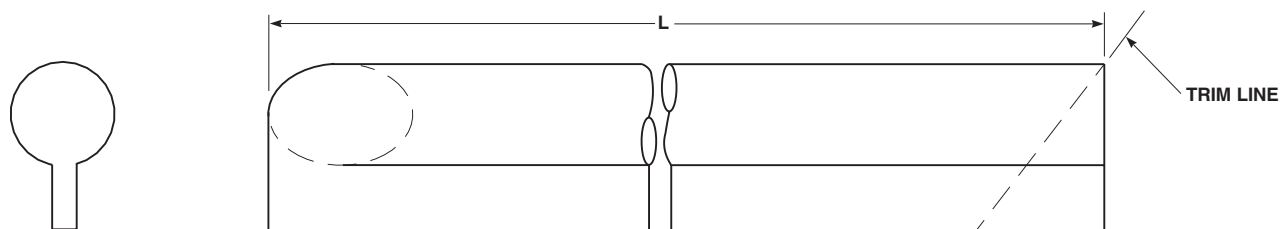

-135

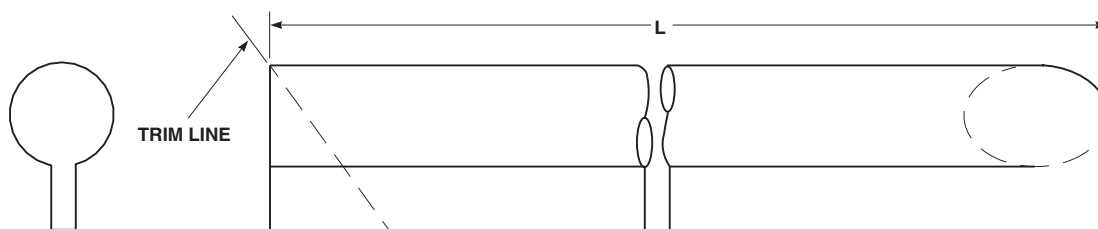

-136

| NOMENCLATURE | L LENGTH | SIKORSKY<br>PART NUMBER |
|--------------|----------|-------------------------|
| SEAL         | 11.250   | 70302-10013-108         |
|              | 11.250   | 70302-10013-109         |
|              | 8.250    | 70302-10013-110         |
|              | 6.03     | 70302-10013-111         |
|              | 6.03     | 70302-10013-118         |
|              | 11.250   | 70302-10013-133         |
|              | 11.250   | 70302-10013-134         |
|              | 8.250    | 70302-10013-137         |
|              | 6.03     | 70302-10013-135         |
|              | 6.03     | 70302-10013-136         |

## NOTES


1. MAKE -108, -109, -110, -111, -118 FROM SEAL TAPE, STYLE JM150-13A, NSN 5330-00-849-7083.
2. TRIM SEAL SECTIONS AS REQUIRED TO BUTT JOIN WITH NO GAP.
3. MAKE -133, -134, -135, -136, -137 FROM SEAL TAPE, HASKON 8338-3, NSN 5330-01-174-2936.
4. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
5. IDENTIFY PARTS PER MIL-STD-130.

PART NUMBER: 70302-10013-108, -109, -110, -111, -118, -133, -134, -137, -135, -136

AK1673\_2A  
SA


Figure 65. Engine Inlet Firewall Seal. (Sheet 2 of 2)

## FIELD MANUFACTURE ITEMS - Continued

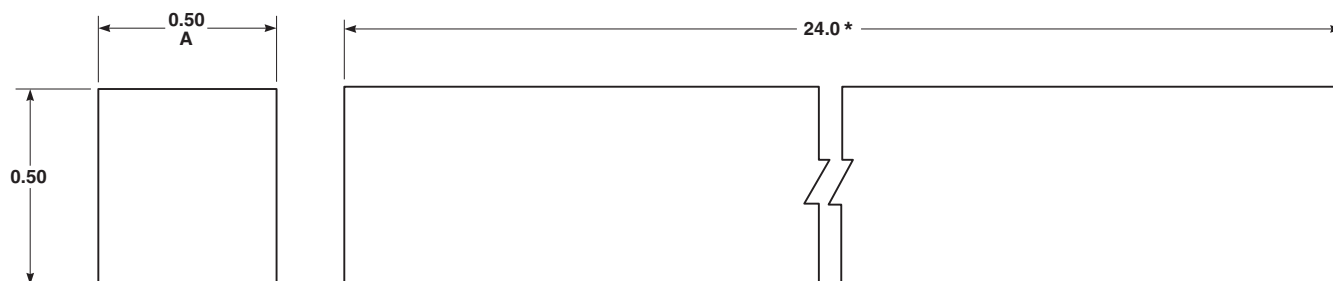

\* OVERSIZE-TRIM TO FIT UPON INSTALLATION

(-114) (-154)

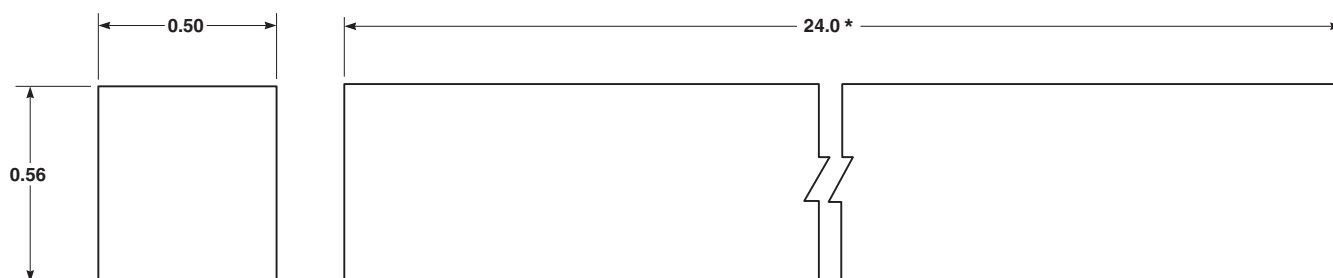

\* OVERSIZE-TRIM TO FIT UPON INSTALLATION

(-113) (-151)



\* OVERSIZE-TRIM TO FIT UPON INSTALLATION

(-115)

## NOTES

1. MAKE -114, -154 FROM 0.50 INCH THICK RUBBER, CLASS 1, GRADE 40, MIL-R-6855, NSN 9320-00-848-7302.
2. MAKE -113, -151 FROM SCE-3LCD RUBBER, MIL-STD-670, NSN 5330-01-100-1889.
3. MAKE -115 FROM SCE-3LCD RUBBER, MIL-STD-670, NSN 5330-01-100-1888.
4. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
5. IDENTIFY PARTS PER MIL-STD-190. STAMP OR STENCIL PART NUMBER AND DATE OF MANUFACTURE ON PARTS WITH OPAQUE GREEN INK, TT-I-1795. USE 1/16 TO 1/8 INCH HIGH SANS SERIF CHARACTERS.


EXAMPLE: P/N 70216-02401-107 3Q 86  
PART NUMBER THIRD QUARTER 1986

PART NUMBER: 70500-03050-113, -114, -115, -151, -154

AK1677A  
SA

Figure 66. Gasket.

## FIELD MANUFACTURE ITEMS - Continued

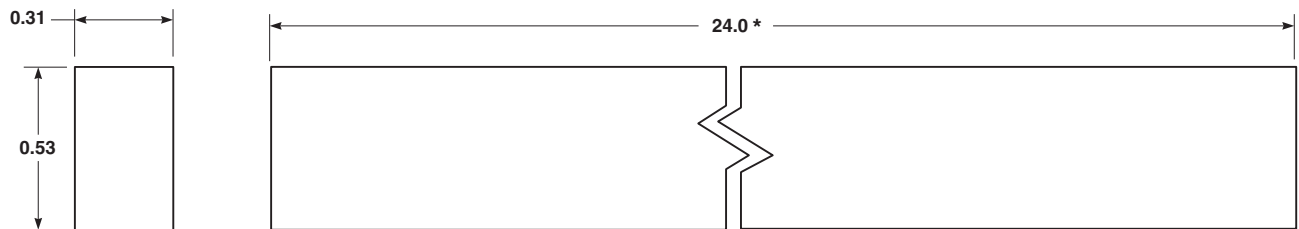

\* OVERSIZE-TRIM TO FIT UPON INSTALLATION

## NOTES

1. MAKE FROM GRADE M RUBBER, MIL-R-46089, NSN 5330-01-100-1708.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. IDENTIFY PARTS PER MIL-STD-190. STAMP OR STENCIL PART NUMBER AND DATE OF MANUFACTURE ON PARTS WITH OPAQUE GREEN INK, TT-I-1795. USE 1/16 TO 1/8 INCH HIGH SANS SERIF CHARACTERS.


EXAMPLE: P/N 70216-02401-107 3Q 86  
 PART NUMBER THIRD QUARTER 1986

PART NUMBER: 70500-03050-108, -153


AK1680A  
SA

Figure 67. Seal.


FIELD MANUFACTURE ITEMS - Continued

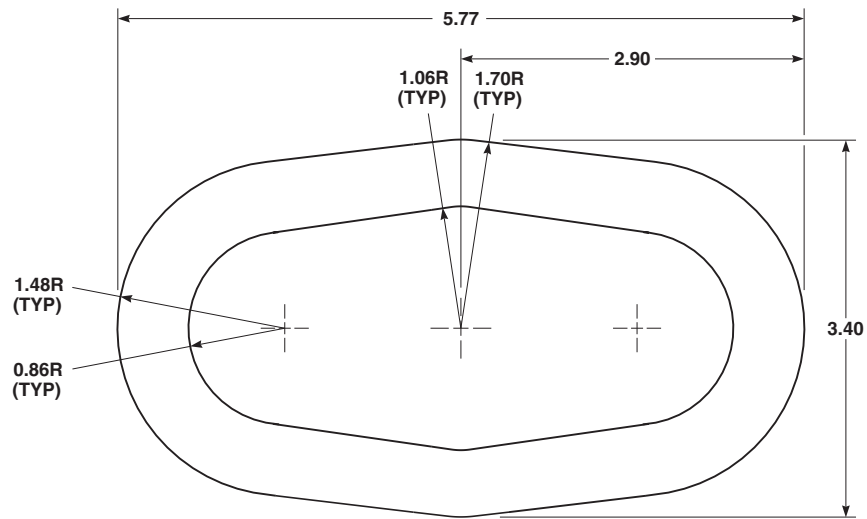

-202

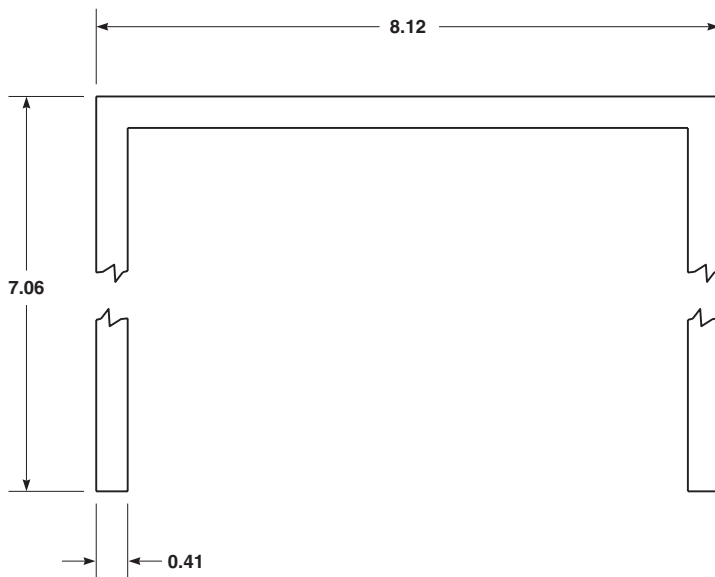


-205

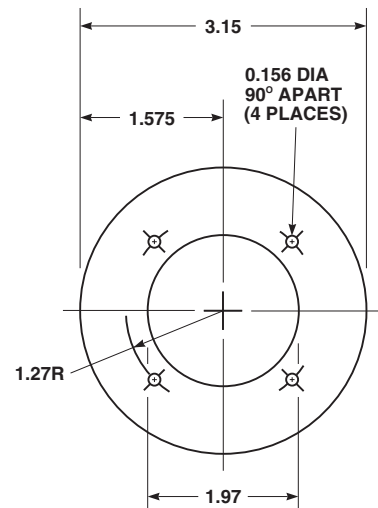

-206

Figure 68. Ceiling Drip Pan Seal. (Sheet 1 of 2)

## FIELD MANUFACTURE ITEMS - Continued

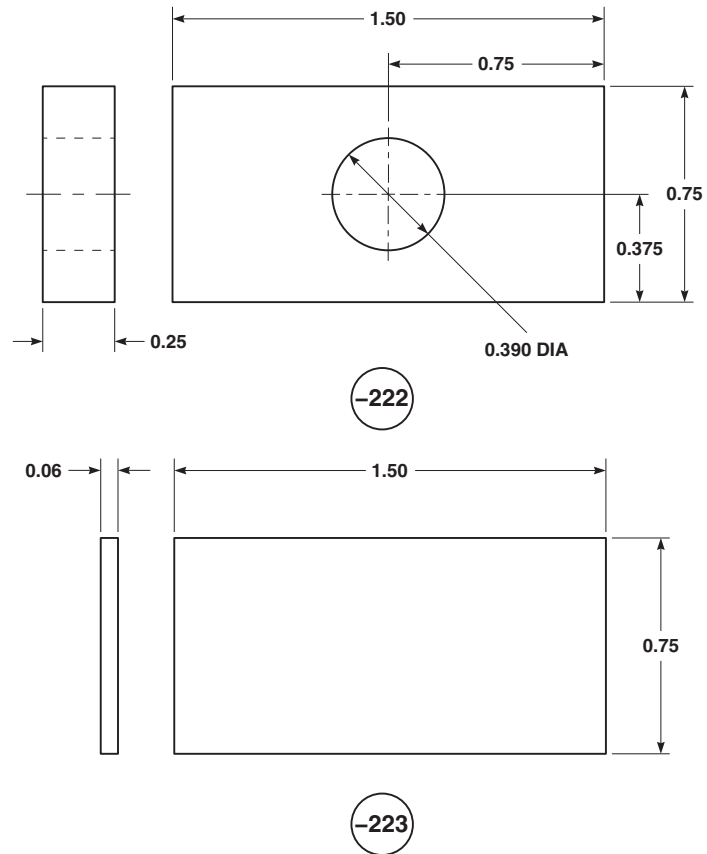

| NOMENCLATURE          | T THICKNESS | DIMENSIONS | SIKORSKY PART NUMBER |
|-----------------------|-------------|------------|----------------------|
| CEILING DRIP PAN SEAL | 0.250       | AS SHOWN   | 70500-02060-202      |
|                       | 0.125       | AS SHOWN   | 70500-02060-205      |
|                       | 0.125       | AS SHOWN   | 70500-02060-206      |
|                       | 0.250       | AS SHOWN   | 70500-02060-222      |
|                       | 0.060       | AS SHOWN   | 70500-02060-223      |

## NOTES

1. MAKE -202 FROM MIL-STD-670 SCE 3L CD1079E, 0.25 INCH THICK, NSN 9320-00-234-4073.
2. MAKE -205, -206 FROM MIL-STD-670, SCE 3L CD1079, 0.125 INCH THICK, NSN 9320-01-154-2225.
3. MAKE -222 FROM NITRILE RUBBER, MIL-R-6855, CLASS1, GRADE 40, 0.25 INCH THICK, NSN 9320-01-157-9071.
4. MAKE -223 FROM NITRILE RUBBER, MIL-R-6855, CLASS 1, GRADE 40, 0.06 INCH THICK, NSN 9320-00-241-9741.
5. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
6. IDENTIFY PARTS PER MIL-STD-190. STAMP OR STENCIL PART NUMBER AND DATE OF MANUFACTURE ON PARTS WITH OPAQUE YELLOW INK, TT-I-1795. USE 1/16 TO 1/8 INCH HIGH SANS SERIF CHARACTERS.



EXAMPLE: P/N 70216-02401-107 3Q 86  
 PART NUMBER THIRD QUARTER 1986

PART NUMBER: 70500-02060-202, -205, -206, -222, -223

AK1681\_2A  
SA

Figure 68. Ceiling Drip Pan Seal. (Sheet 2 of 2)

## FIELD MANUFACTURE ITEMS - Continued

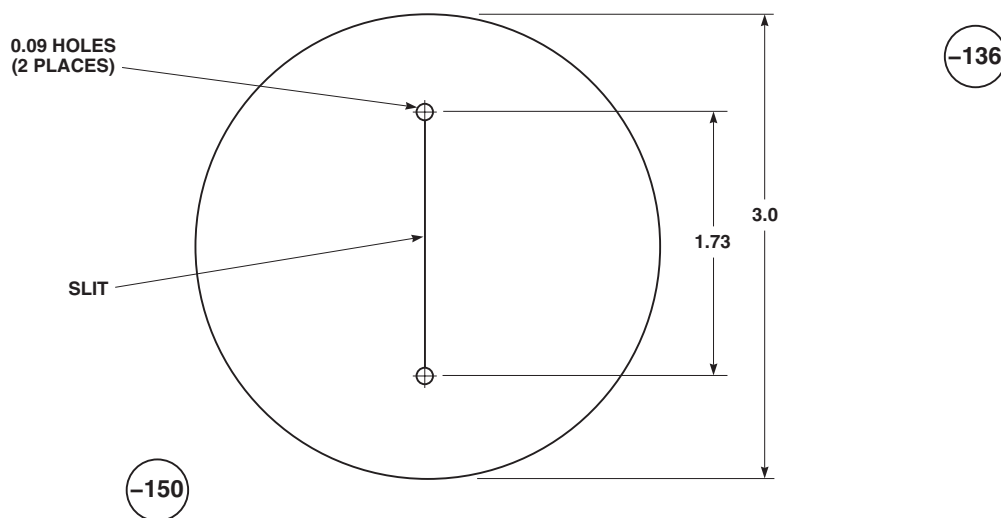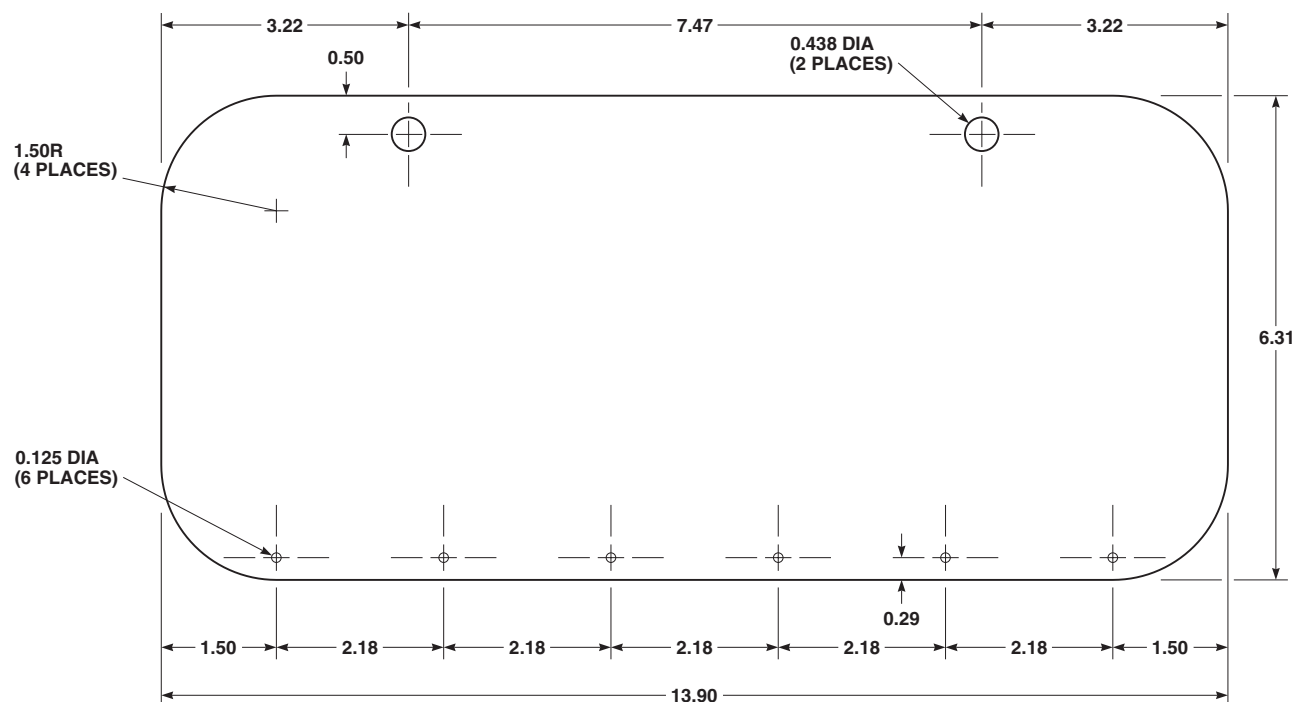

| NOMENCLATURE         | SIKORSKY<br>PART NUMBER |
|----------------------|-------------------------|
| CEILING PANEL GASKET | 70500-02062-136         |
|                      | 70500-02062-150         |

## NOTES


1. MAKE -136 FROM CEL ACETATE BUTERATE, 0.125 INCH THICK, NSN 9320-01-024-1549.
2. MAKE -150 FROM RUBBER, MIL-R-6855, CLASS 1, GRADE 60, 0.062 INCH THICK, NSN 9320-00-241-9742, ALTERNATE RUBBER, MIL-R-6855 CLASS 2, GRADE 60, 0.062 INCH THICK, NSN 9320-01-157-9070.
3. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
4. IDENTIFY PARTS PER MIL-STD-130.

PART NUMBER: 70500-02062-136, -150

AK1685A  
SA

Figure 69. Ceiling Panel Gasket.

## FIELD MANUFACTURE ITEMS - Continued

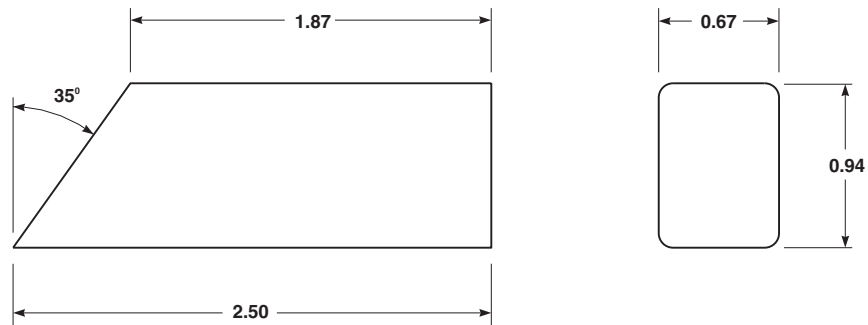

## NOTES

1. MAKE SEAL PER FIGURE FROM S1509-20016-1 EXTRUDED SILICONE SPONGE RUBBER, AMS3195, NSN 5330-01-162-2778.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. IDENTIFY PARTS PER MIL-STD-190. STAMP OR STENCIL PART NUMBER AND DATE OF MANUFACTURE ON PARTS WITH OPAQUE GREEN INK, TT-I-1795. USE 1/16 TO 1/8 INCH HIGH SANS SERIF CHARACTERS.


EXAMPLE: P/N 70216-02401-107      3Q 86  
                     PART NUMBER      THIRD QUARTER 1986

PART NUMBER: 70215-02312-106

AK1687A  
 SA

Figure 70. Main Landing Gear Fairing Seal.

## FIELD MANUFACTURE ITEMS - Continued

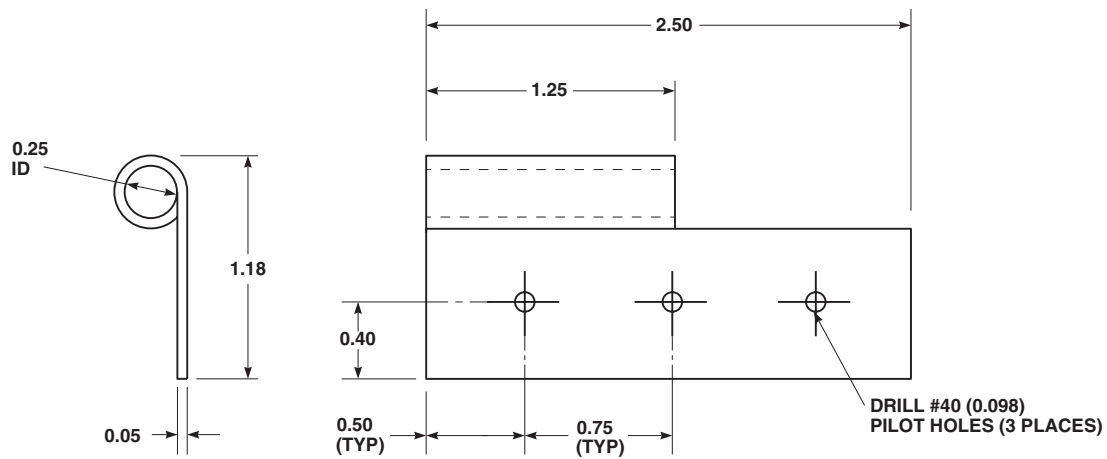

## NOTES

1. MAKE FROM H1004D13NL HINGE HALF, NSN 5340-01-116-4537.
2. DRILL #40 PILOT HOLES PER FIGURE AND TM 1-1500-204-23.
3. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
4. IDENTIFY PARTS PER MIL-STD-130.


PART NUMBER: 70500-02068-118

AK1688A  
SA

Figure 71. Sidewall Panel Hinge.



---

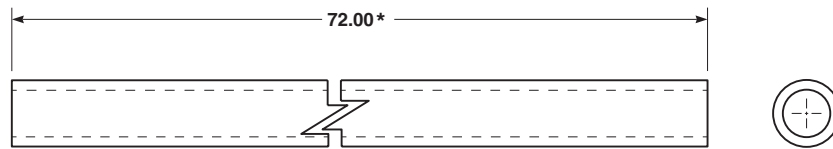FIELD MANUFACTURE ITEMS - Continued

\* OVERSIZE - TRIM UPON INSTALLATION

**NOTES**


1. MAKE FROM TYGOTHANE-1/4 INCH TUBING, 0.375 OD BY 0.250 ID PER MIL-R-83397, NSN 4720-01-004-8081.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. IDENTIFY PARTS PER MIL-STD-130.

PART NUMBER: 70070-30112-164

AK1689A  
SA

Figure 72. Tube.

## FIELD MANUFACTURE ITEMS - Continued

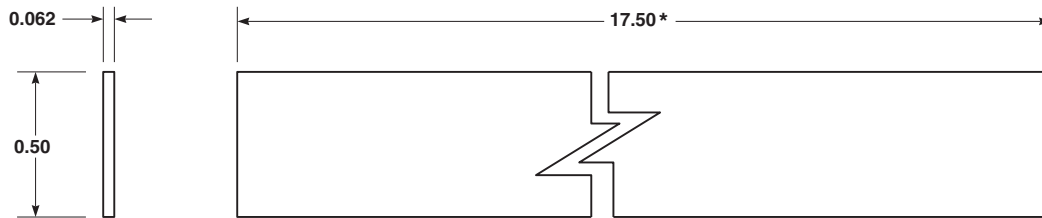

\* OVERSIZE - TRIM ON INSTALLATION

## NOTES

1. MAKE SEAL FROM 0.062 INCH THICK, SCE 7L RUBBER SHEET, PER MIL-STD-670, NSN 9320-00-012-3481.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. IDENTIFY PARTS PER MIL-STD-190. STAMP OR STENCIL PART NUMBER AND DATE OF MANUFACTURE ON PARTS WITH OPAQUE GREEN INK, TT-I-1795. USE 1/16 TO 1/8 INCH HIGH SANS SERIF CHARACTERS.


EXAMPLE: P/N 70216-02401-107      3Q 86  
                     PART NUMBER      THIRD QUARTER 1986

PART NUMBER: 70500-02054-104

AK1690A  
SA

Figure 73. Cover Seal.

FIELD MANUFACTURE ITEMS - Continued

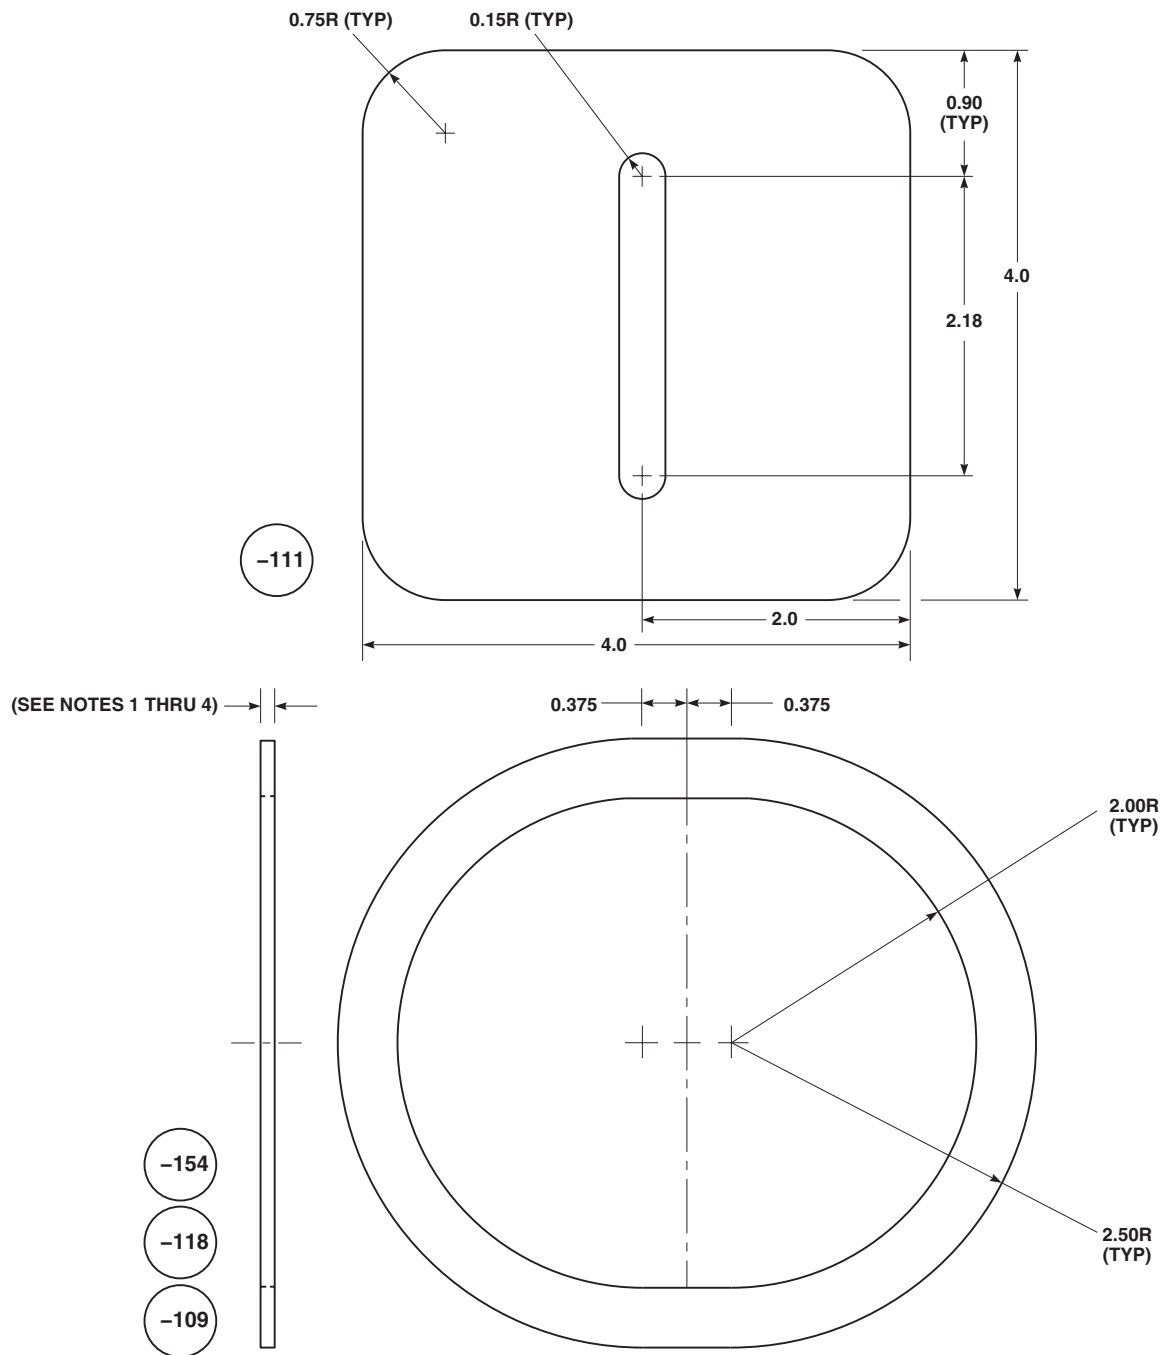

PART NUMBER 70500-02070-109, -111, -118, -154

AK1691\_1  
SA

Figure 74. Drip Pan Seal. (Sheet 1 of 2)

## FIELD MANUFACTURE ITEMS - Continued


## NOTES

1. MAKE -111 FROM 0.125 INCH THICK, CLASS 1, GRADE 40, NITRILE RUBBER SHEET, MIL-R-6855, NSN 9320-00-059-6504.
2. MAKE -109 FROM 0.125 INCH THICK, SCE-3L RUBBER SHEET, MIL-STD-670, NSN 9320-01-154-2225.
3. MAKE -118 FROM 0.062 INCH THICK, CLASS I, GRADE 4, NITRILE RUBBER SHEET, MIL-R-6855.
4. MAKE -154 FROM 0.125 INCH THICK, GRADE M, SILICONE STONE, MIL-R-46089.
5. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
6. CUT SLOT IN SEAL AS SHOWN IN FIGURE.
7. IDENTIFY PARTS PER MIL-STD-190. STAMP OR STENCIL PART NUMBER AND DATE OF MANUFACTURE ON PARTS WITH OPAQUE YELLOW INK, TT-I-1795. USE 1/16 TO 1/8 INCH HIGH SANS SERIF CHARACTERS.

EXAMPLE: P/N 70216-02401-107      3Q 86  
                     PART NUMBER      THIRD QUARTER 1986

AK1691\_2A  
SA

Figure 74. Drip Pan Seal. (Sheet 2 of 2)

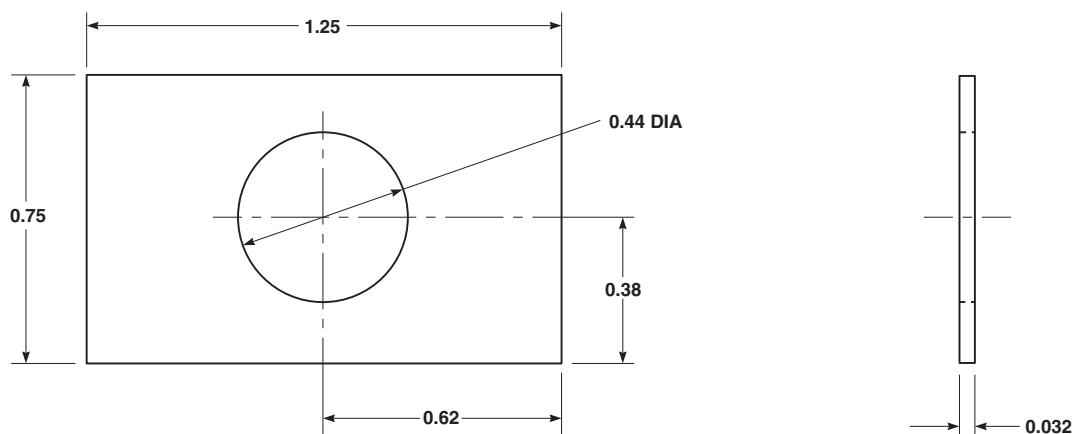

## NOTES

1. MAKE FROM NITRILE RUBBER, MIL-R-6855, CLASS 2, GRADE 60, 0.032 INCH THICK, NSN 9320-01-157-9069. ALTERNATE NITRATE RUBBER, MIL-R-6855, CLASS 1, GRADE 60, 0.032 INCH THICK, NSN 9320-01-102-3060.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. IDENTIFY PARTS PER MIL-STD-190. STAMP OR STENCIL PART NUMBER AND DATE OF MANUFACTURE ON PARTS WITH OPAQUE YELLOW INK, TT-I-1795. USE 1/16 TO 1/8 INCH HIGH SANS SERIF CHARACTERS.

EXAMPLE: P/N 70216-02401-107      3Q 86  
                     PART NUMBER      THIRD QUARTER 1986

PART NUMBER: 70500-02071-111

AK1693A  
SA

Figure 75. Drip Pan Seal.

FIELD MANUFACTURE ITEMS - Continued


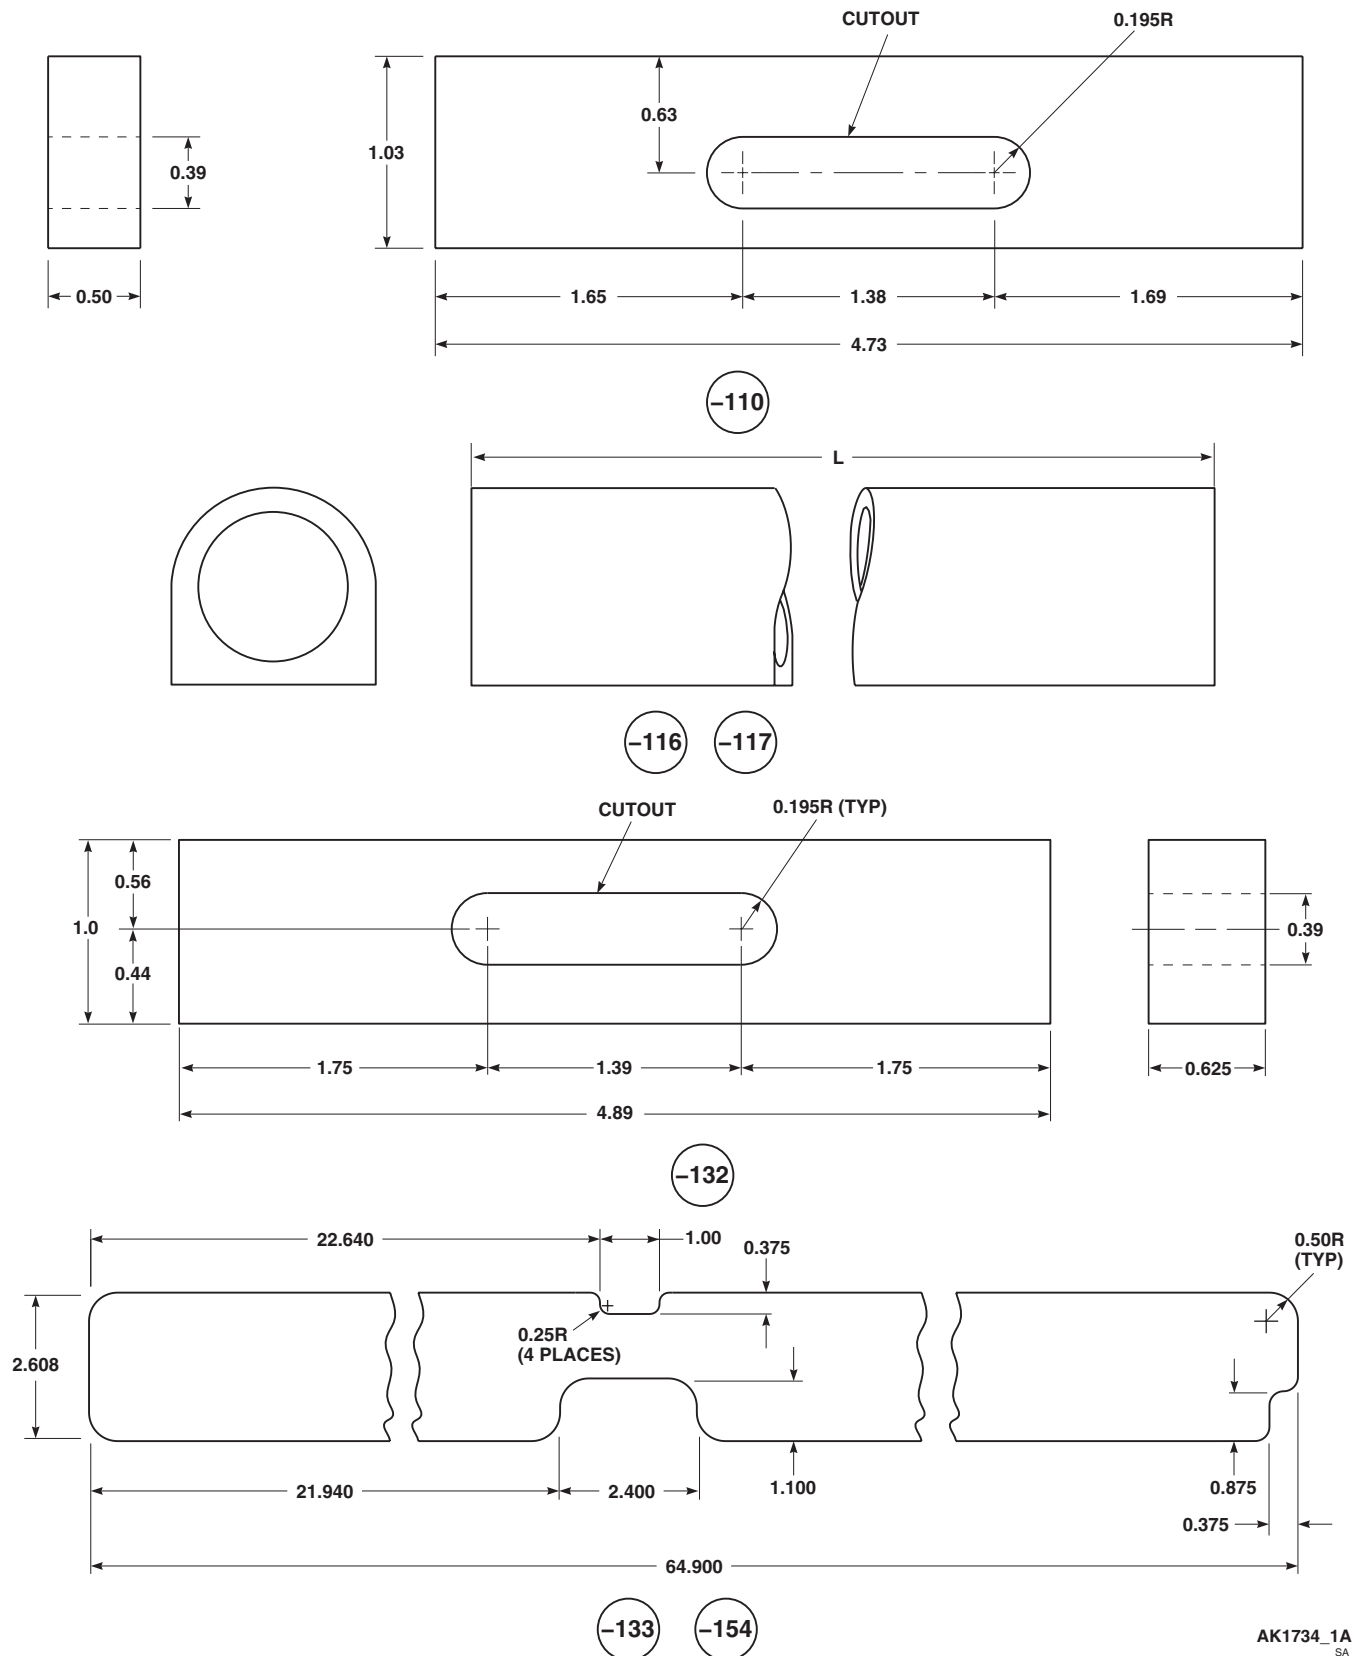


Figure 76. Cargo Door Seal. (Sheet 1 of 3)


FIELD MANUFACTURE ITEMS - Continued

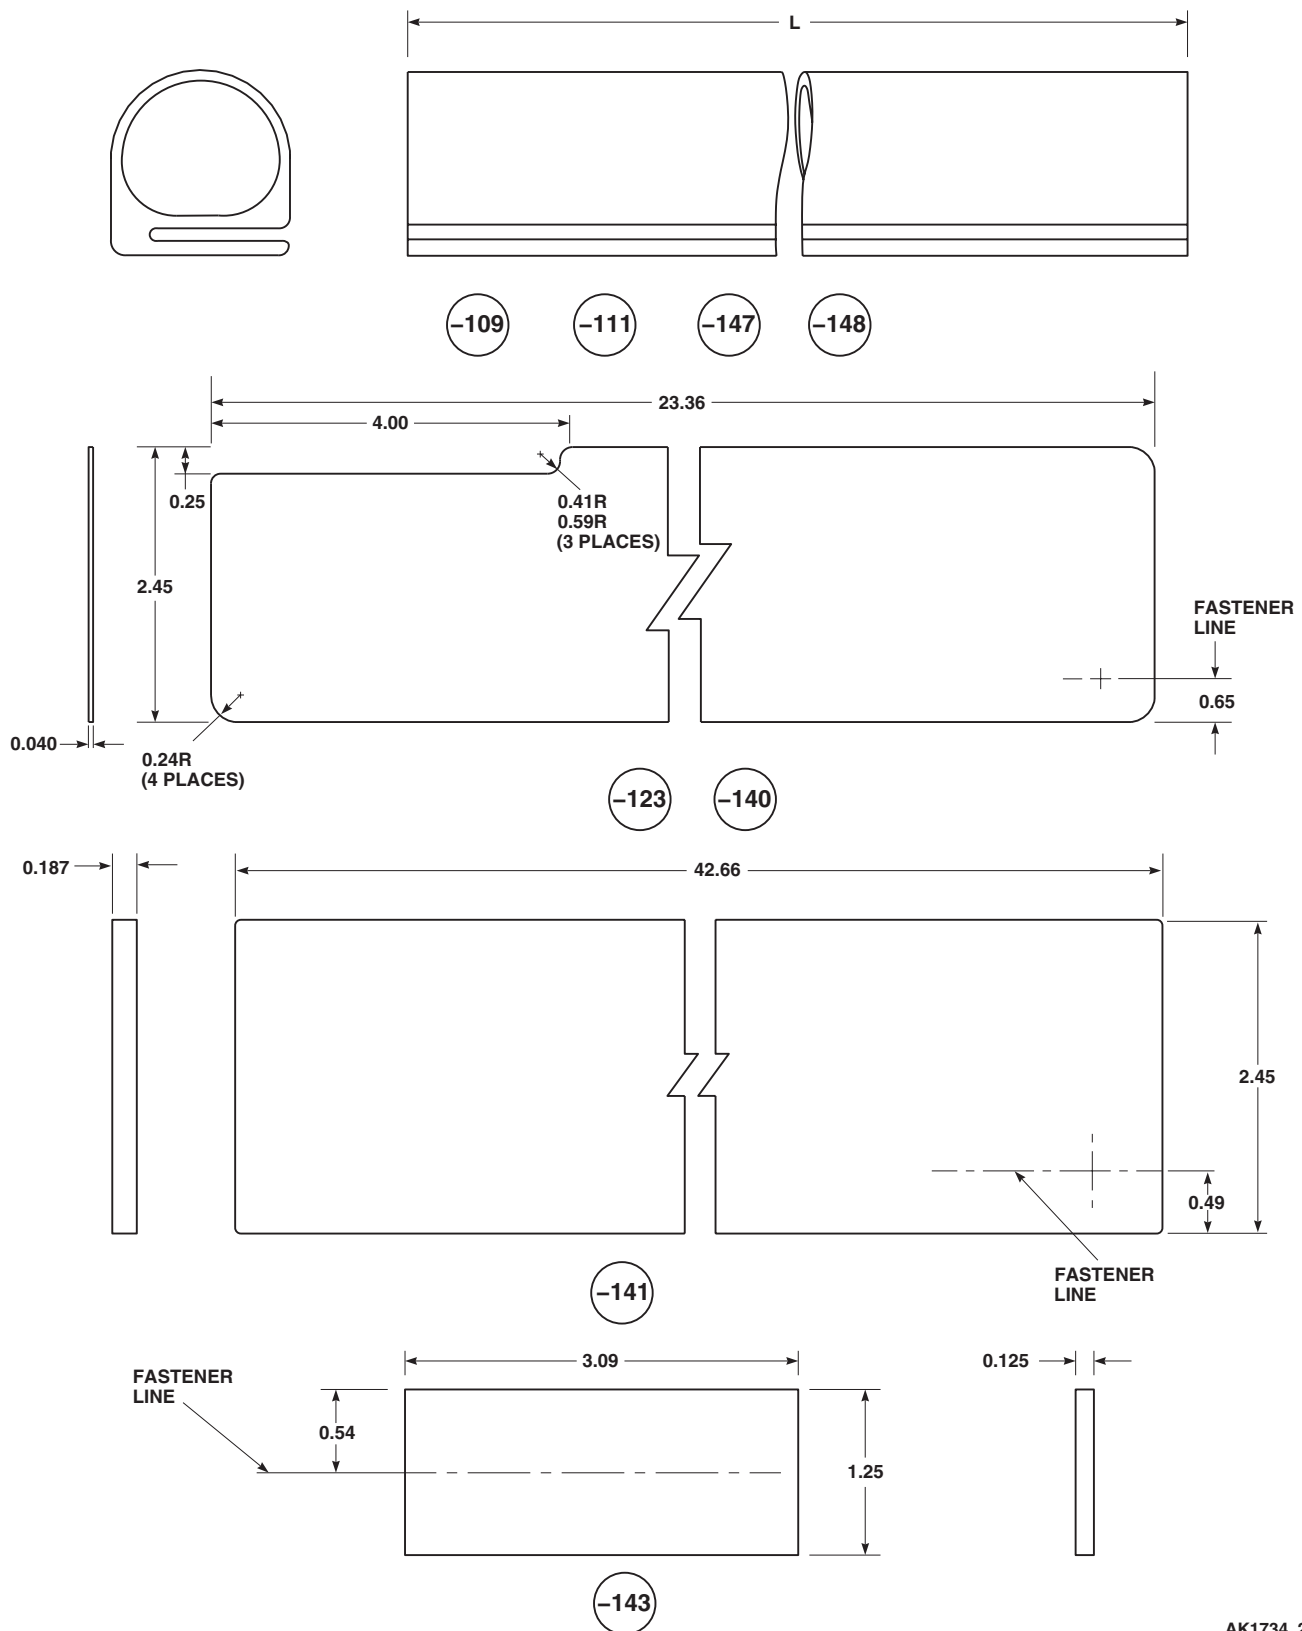

AK1734\_2A  
SA

Figure 76. Cargo Door Seal. (Sheet 2 of 3)

## FIELD MANUFACTURE ITEMS - Continued

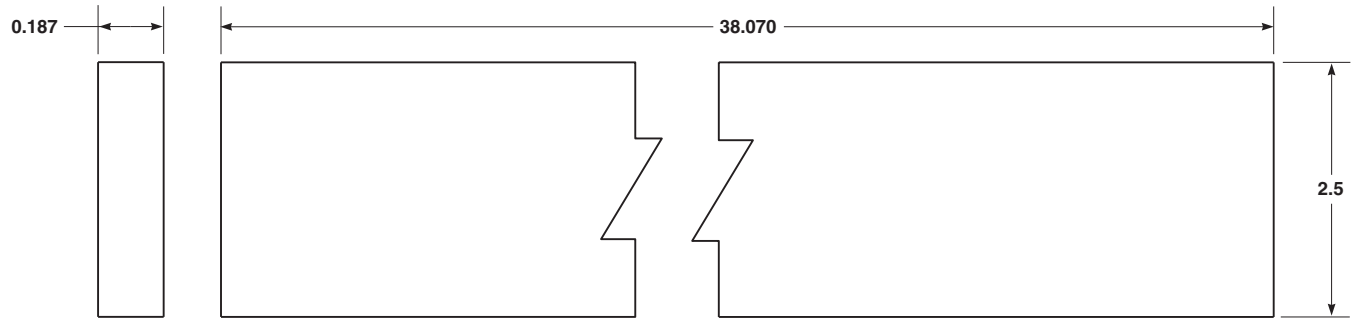

-151

| NOMENCLATURE    | L LENGTH | SIKORSKY<br>PART NUMBER |
|-----------------|----------|-------------------------|
| SEAL CARGO DOOR | 36.34    | 70217-02721-109         |
|                 | 15.20    | 70217-02721-110         |
|                 | 4.73     | 70217-02721-111         |
|                 | 37.19    | 70217-02721-116         |
|                 | 16.11    | 70217-02721-117         |
|                 | 23.36    | 70217-02721-123         |
|                 | 4.89     | 70217-02721-132         |
|                 | 64.90    | 70217-02721-133         |
|                 | 23.36    | 70217-02721-140         |
|                 | 42.66    | 70217-02721-141         |
|                 | 3.09     | 70217-02721-143         |
|                 | 36.88    | 70217-02721-147         |
|                 | 17.21    | 70217-02721-148         |
|                 | 38.070   | 70217-02721-151         |
|                 | 64.90    | 70217-02721-154         |

## NOTES

1. MAKE -110 FROM 0.50 INCH THICK, TYPE A, GRADE 40 SYNTHETIC RUBBER, MIL-R-6155, NSN 9320-00-848-7302.
2. MAKE -116, -117 FROM EXTRUDED RUBBER, MUELLER DIE NO. 5629, NSN 1560-01-177-5120.
3. MAKE -132 FROM 0.625 INCH THICK SOFT RUBBER, TYPE 1, GRADE C, MIL-R-6130, FSCM 81349.
4. MAKE -133 FROM POLYAMIDE PLASTIC, L-P-410, 0.040 INCH THICK, NSN 9330-01-195-2949.
5. MAKE -154 FROM URETHANE, BLACK, NSN 5330-01-256-6362, MIL-R-83397 TYPE 2, DUROMETER 90, 0.060 INCH THICK.
6. MAKE -123, -147, -148 FROM EXTRUDED RUBBER SEAL, DIE NO. 8487, NSN 5330-01-179-9496.
7. MAKE -140 FROM 0.040-INCH-THICK NYLATRON G.S., L-P-410A, NSN 9330-01-195-9249.
8. MAKE -141, -151, FROM CELLULAR RUBBER SHEET, NSN 9320-01-222-6555. CUT TO PROPER WIDTH, SPLICE TO ACHIEVE PROPER LENGTH BY BUTTING PIECES. THERE MUST BE NO LAPPING OF THE SEAL. BOTH ENDS MUST BE COATED WITH ADHESIVE NSN 8040-00-165-8614 OR 8040-00-237-8717. NO TENSION OR PEEL LOAD IN BUTT SPLICE IS ALLOWED.
9. PICK UP FASTENER HOLES ON INSTALLATION.
10. TRIM SEAL TO FIT, AS REQUIRED.
11. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
12. IDENTIFY PARTS PER MIL-STD-190. STAMP OR STENCIL PART NUMBER AND DATE OF MANUFACTURE ON PARTS WITH OPAQUE GREEN INK, TT-I-1795. USE 1/16 TO 1/8 INCH HIGH SANS SERIF CHARACTERS.


EXAMPLE: P/N 70216-02401-107 3Q 86  
PART NUMBER THIRD QUARTER 1986

PART NUMBER: 70217-02721-110, -116, -117, -123, -132, -133, -140, -141, -147, -148, -151, -154.

AB3755\_3  
SA

Figure 76. Cargo Door Seal. (Sheet 3 of 3)

FIELD MANUFACTURE ITEMS - Continued

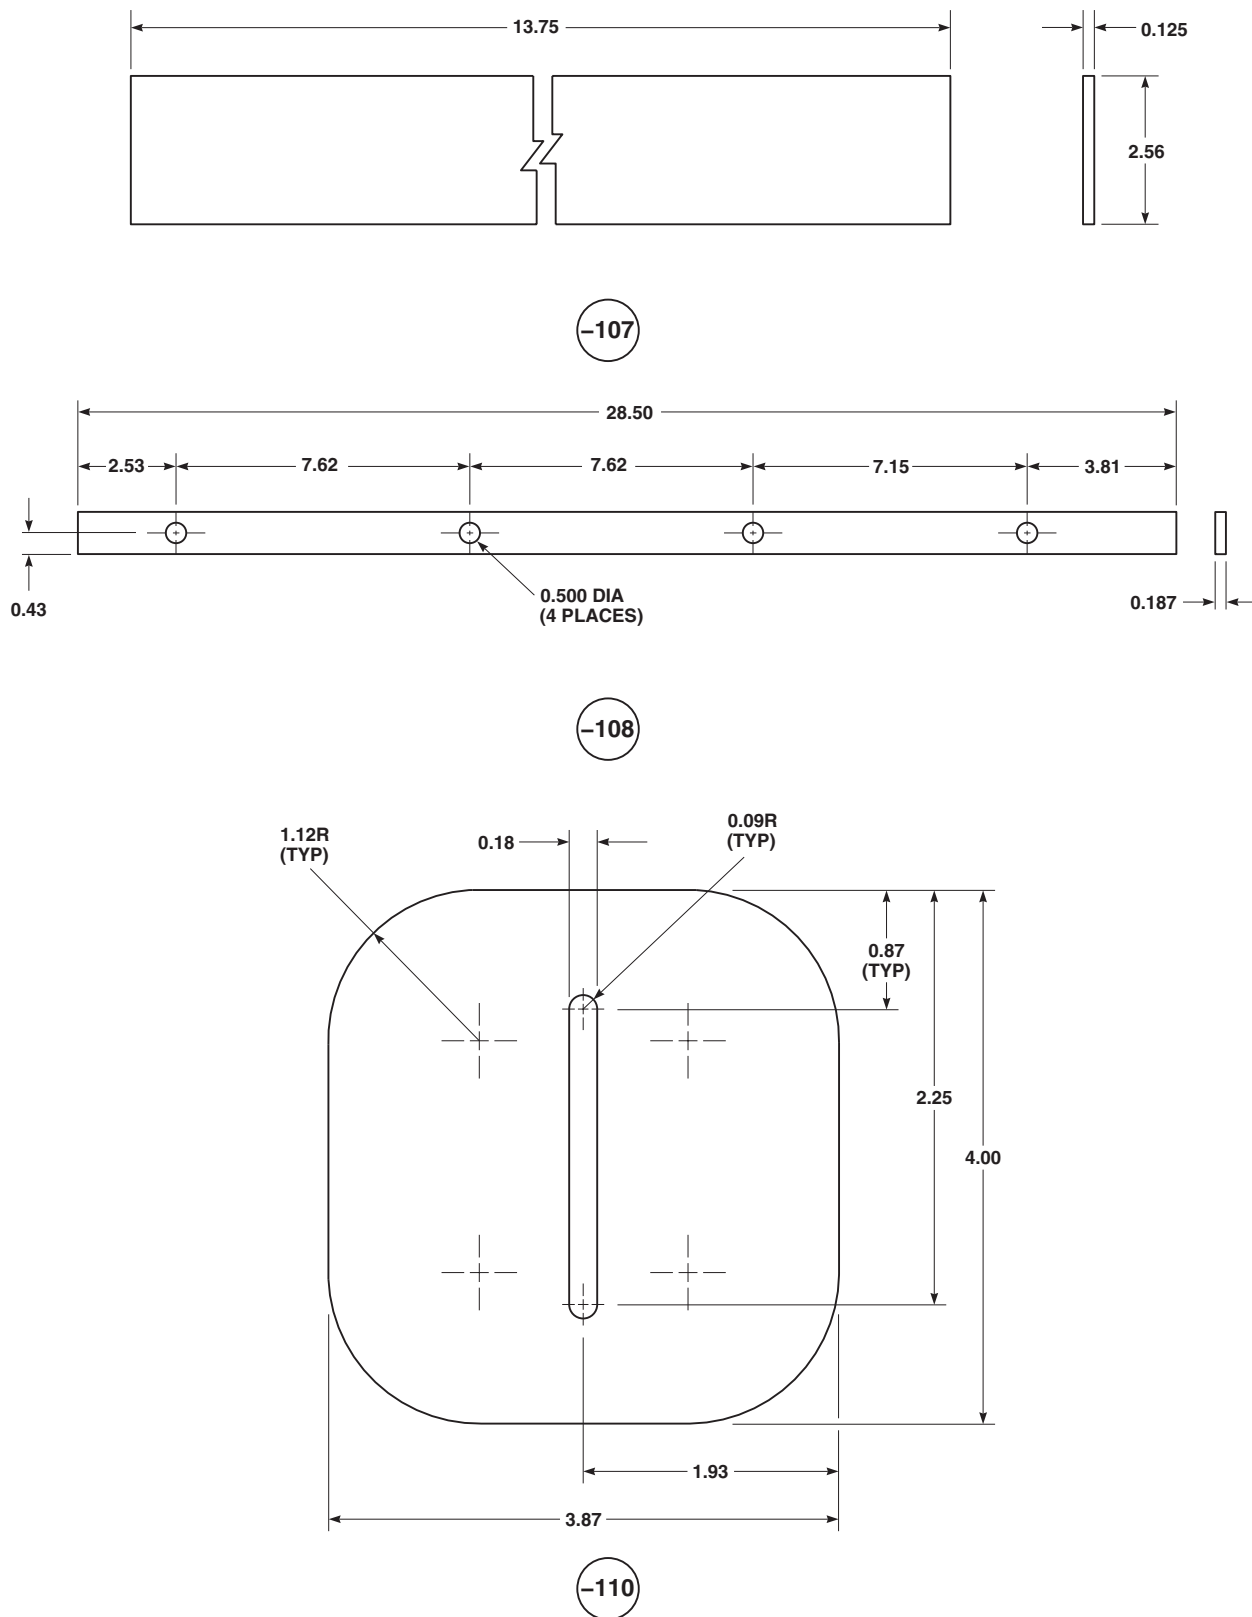


AK1695\_1A  
SA

Figure 77. Ceiling Panel Seal. (Sheet 1 of 2)





## FIELD MANUFACTURE ITEMS - Continued

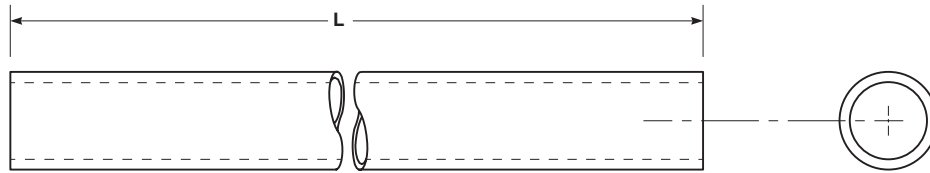

| SIKORSKY PART NUMBER               | L LENGTH     | MAKE FROM                             | NSN NUMBER       |
|------------------------------------|--------------|---------------------------------------|------------------|
| 70550-02151-101<br>70550-02151-102 | 6.50<br>8.25 | TEMFLEX 105C 1/2 IN. ID CLEAR (75037) | 5970-00-685-9057 |

## NOTES


1. MAKE FROM 0.50 ID BY 0.062 WALL THICKNESS, CLEAR TUBING, USING LENGTH AND MATERIAL LISTED IN CHART.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. DEBURR BOTH ENDS TO FORM SMOOTH ROUNDED SURFACE.
4. IDENTIFY PARTS PER MIL-STD-130.

PART NUMBER: 70550-02151-101, -102

AK1696A  
SA

Figure 78. Electrical Wire.

FIELD MANUFACTURE ITEMS - Continued

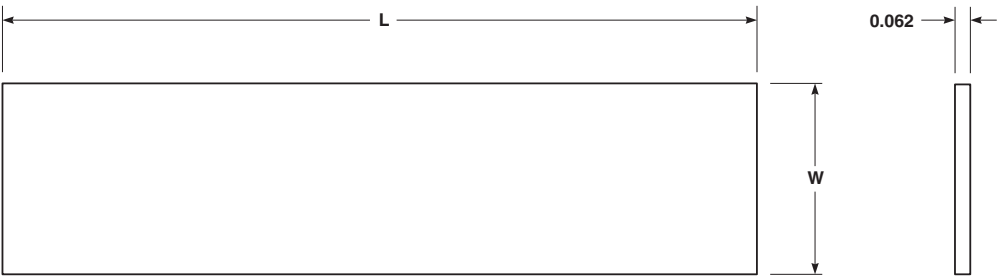

| SIKORSKY PART NUMBER | L LENGTH | W WIDTH |
|----------------------|----------|---------|
| 70700-20395-107      | 4.50     | 2.36    |
| 70700-20395-108      | 18.00    | 5.50    |

NOTES

- 1. MAKE FROM 0.062 INCH THICK, CLASS 2, GRADE 50, RUBBER MIL-R-6855, NSN 9320-00-202-1322.
- 2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
- 3. IDENTIFY PARTS PER MIL-STD-190. STAMP OR STENCIL PART NUMBER AND DATE OF MANUFACTURE ON PARTS WITH OPAQUE GREEN INK, TT-I-1795. USE 1/16 TO 1/8 INCH HIGH SANS SERIF CHARACTERS.


EXAMPLE:    P/N 70216-02401-107        3Q 86  
                    PART NUMBER            THIRD QUARTER 1986

PART NUMBER: 70700-20395-107, -108

AK1697A  
SA

Figure 79. Grip.

## FIELD MANUFACTURE ITEMS - Continued

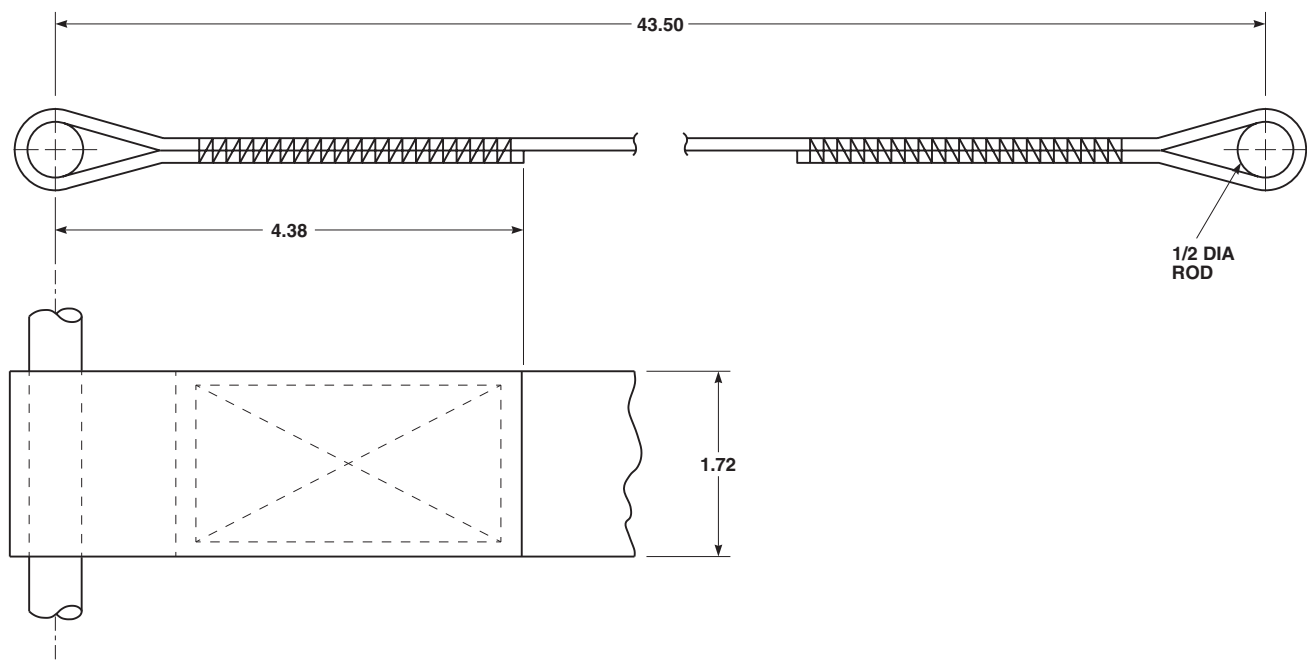

## NOTES


1. MAKE FROM 1.72 INCH WIDE NYLON WEBBING PER MIL-W-4088, TYPE XIII COLOR OLIVE DRAB, NSN 8305-00-260-4585. OVERALL LENGTH BEFORE SEWING IS 53.83 INCHES.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. STITCHING SHALL BE DONE IN ACCORDANCE WITH FED-STD-NO. 751. ALL SEWING TO BE DONE WITH STITCH 301. THERE SHALL BE NO LESS THAN 8 OR MORE THAN 10 STITCHES PER INCH. ENDS OF ALL STITCHING SHALL BE BACK STITCHED NOT LESS THAN 1/2 INCH.
4. STITCH ENDS USING FED. SPEC V-T-295 NYLON THREAD TYPE I, CLASS 2, SIZE E, NSN 8310-00-262-2772.
5. IDENTIFY PARTS PER MIL-STD-130.

PART NUMBER: 70700-20420-116

AK1698A  
SA

Figure 80. Nylon Webbing Strap.

FIELD MANUFACTURE ITEMS - Continued

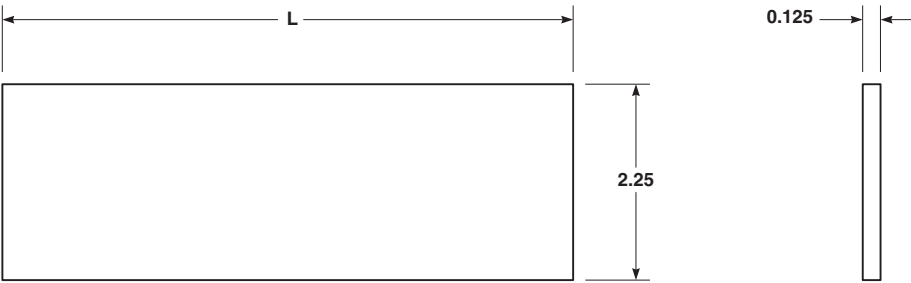

| NOMENCLATURE | SIKORSKY PART NUMBER | L LENGTH |
|--------------|----------------------|----------|
| PAD          | 70700-20313-106      | 20.50    |
|              | 70700-20313-107      | 9.50     |
|              | 70700-20313-108      | 12.312   |

NOTES

1. MAKE FROM 0.125 INCH THICK, TYPE 2, GRADE A, MEDIUM RUBBER, MIL-R-61308, NSN 9320-01-180-0251.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. IDENTIFY PARTS PER MIL-STD-190. STAMP OR STENCIL PART NUMBER AND DATE OF MANUFACTURE ON PARTS WITH OPAQUE GREEN INK, TT-I-1795. USE 1/16 TO 1/8 INCH HIGH SANS SERIF CHARACTERS.


EXAMPLE:    P/N 70216-02401-107                      3Q 86  
                                  PART NUMBER                      THIRD QUARTER 1986

PART NUMBER: 70700-20313-106, -107, -108

AK1699A  
SA

Figure 81. Pad.

---

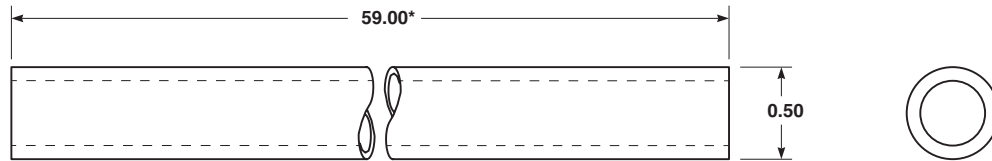FIELD MANUFACTURE ITEMS - Continued

\* TRIM ON INSTALLATION

**NOTES**


1. MAKE FROM 0.500 BY 0.020 INCH WALL CONVOLEX TUBING, NSN 9330-01-089-0116.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. IDENTIFY PARTS PER MIL-STD-130.

PART NUMBER: 70500-02065-103

AK1700A  
SA

Figure 82. Tube.

## FIELD MANUFACTURE ITEMS - Continued

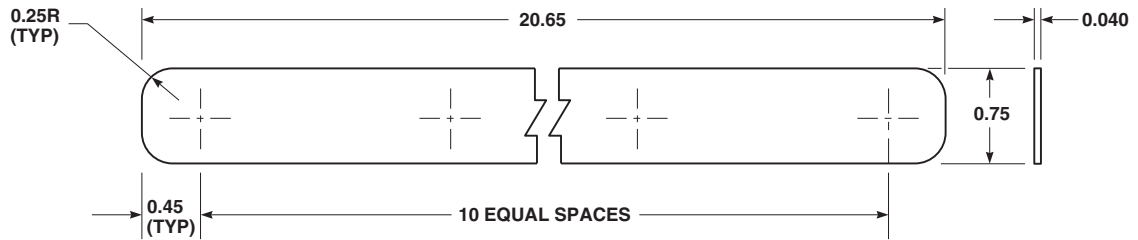

## NOTES


1. MAKE FROM 0.040 INCH THICK, 7075-T6 ALCLAD SHEET, QQ-A-250 / 13, NSN 9535-00-084-4581.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. LOCATE HOLES ON INSTALLATION.
4. TREAT CUT EDGES WITH CORROSION RESISTANT COMPOUND (ALODINE) MIL-C-5541, NSN 8030-00-811-3723.
5. FINISH PER MIL-PRF-23377 EPOXY PRIMER, NSN 8010-00-082-2477, 1 COAT, FED. SPEC TT-L-20 DULL BLACK LACQUER, NSN 8010-00-664-7651, 2 COATS.
6. IDENTIFY PARTS PER MIL-STD-130.

PART NUMBER: 70500-02068-123

AK1701B  
SA

Figure 83. Stiffener.

## FIELD MANUFACTURE ITEMS - Continued

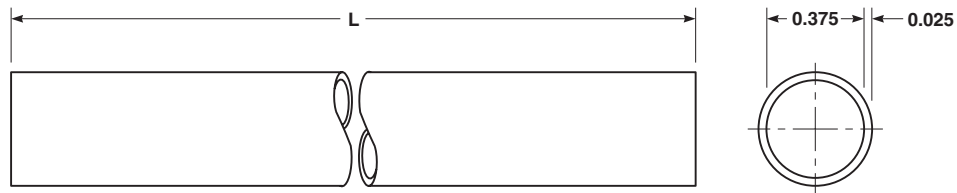

| SIKORSKY PART NUMBER | L LENGTH | MAKE FROM                                | NSN              |
|----------------------|----------|------------------------------------------|------------------|
| 70551-07000-103      | 67.25    | TEMFLEX 105C 3/8 IN. ID<br>CLEAR (75037) | 5970-00-889-3844 |

## NOTES

1. MAKE PARTS FROM 0.375 ID BY 0.025 INCH WALL THICKNESS TUBING USING MATERIAL AND LENGTH FROM CHART.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. IDENTIFY PARTS PER MIL-STD-130.

PART NUMBER: 70551-07000-103

AK1702A  
SA

Figure 84. Tail Rotor Pylon Conduit.



## FIELD MANUFACTURE ITEMS - Continued



## NOTES

1. MAKE FROM 0.125 INCH THICK SPONGE, SCE 3L, MIL-STD-670, NSN 9320-01-154-2225.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. IDENTIFY PARTS PER MIL-STD-190. STAMP OR STENCIL PART NUMBER AND DATE OF MANUFACTURE ON PARTS WITH OPAQUE GREEN INK, TT-I-1795. USE 1/16 TO 1/8 INCH HIGH SANS SERIF CHARACTERS.


EXAMPLE: P/N 70216-02401-107      3Q 86  
                     PART NUMBER      THIRD QUARTER 1986

PART NUMBER: 70217-02701-129

AK1703B  
 SA

Figure 85. Seal.

## FIELD MANUFACTURE ITEMS - Continued

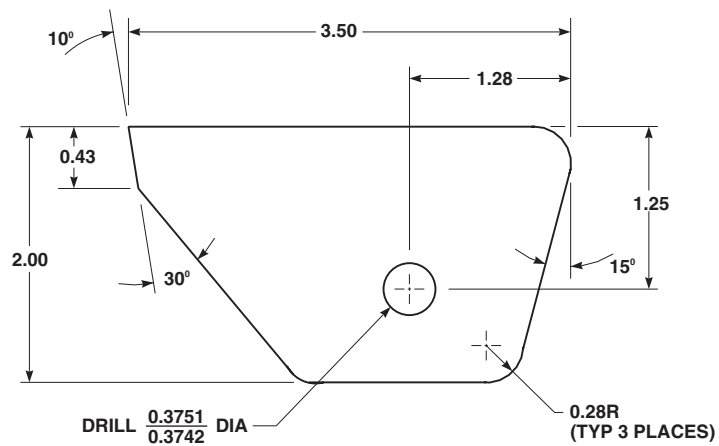

## NOTES


1. MAKE PARTS FROM 0.040 INCH THICK, 7075-T6 ALCLAD SHEET, QQ-A-250 / 13, NSN 9535-00-084-4581.
2. DRILL BUSHING HOLE TO DIMENSION SHOWN IN FIGURE.
3. CHEMICAL SURFACE TREAT CUT EDGES AND DRILLED HOLES PER MIL-C-5541.
4. IDENTIFY PARTS PER MIL-STD-130.
5. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.

PART NUMBER: 70217-01003-151

AK1705A  
SA

Figure 86. Crew Door Doubler.

## FIELD MANUFACTURE ITEMS - Continued

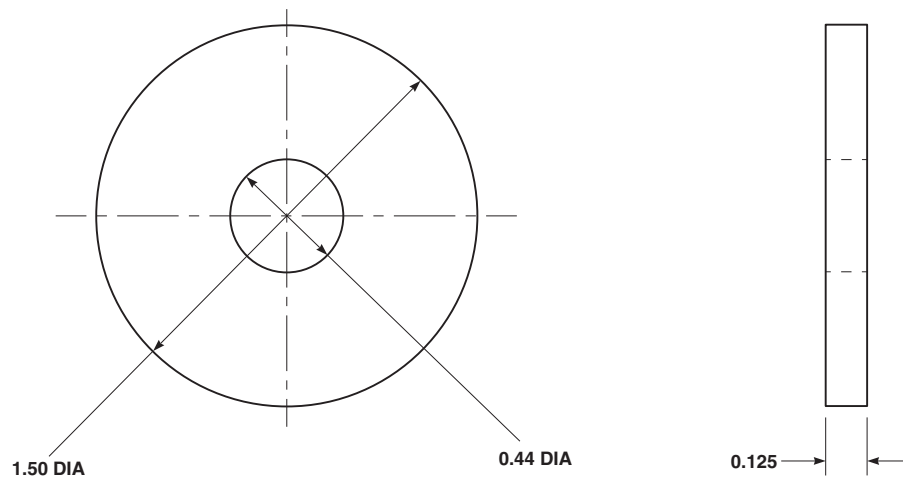

## NOTES


1. MAKE FROM 0.125 INCH THICK NYLON 6/6, L-P-410, NSN 9330-01-028-9334.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. IDENTIFY PARTS PER MIL-STD-130.

PART NUMBER: 70700-20507-105

AK1706A  
SA

Figure 87. Washer.

FIELD MANUFACTURE ITEMS - Continued

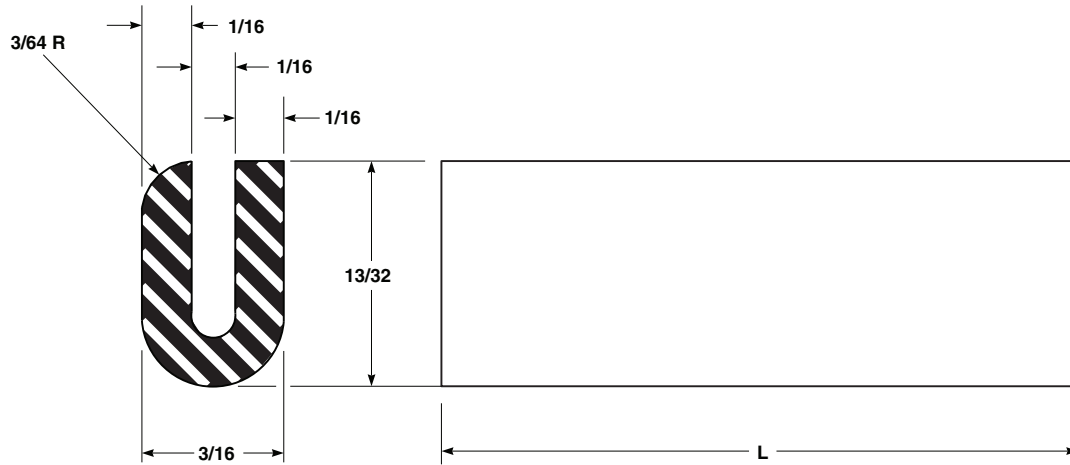

| SIKORSKY PART NUMBER | L LENGTH |
|----------------------|----------|
| SS2940-1             | 1.00     |
| SS2940-2             | 2.00     |

NOTES

1. MAKE FROM SS2940-120 SYNTHETIC RUBBER EDGING, RS709ABDFZ, MIL-R-3065, FSCM 78286.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. DASH NUMBER REPRESENTS LENGTH OF EDGING IN INCHES.
4. CUT EDGING TO REQUIRED SIZE PER CHART.
5. IDENTIFY PARTS PER MIL-STD-190. STAMP OR STENCIL PART NUMBER AND DATE OF MANUFACTURE ON PARTS WITH OPAQUE GREEN INK, TT-I-1795. USE 1/16 TO 1/8 INCH HIGH SANS SERIF CHARACTERS.


EXAMPLE: P/N 70216-02401-107 3Q 86  
 PART NUMBER THIRD QUARTER 1986

PART NUMBER: SS2940-1, SS2940-2

AK1707A  
 SA

Figure 88. Rubber Edging.

## FIELD MANUFACTURE ITEMS - Continued

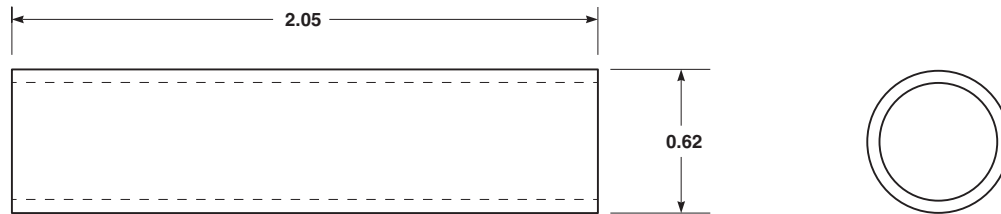

## NOTES


1. MAKE FROM 0.62 INCH DIAMETER OD BY 0.049 INCH THICK WALL, 6061-T6 ALUMI-NUM ALLOY TUBING, WW-T-700 / 6, NSN 4710-01-044-6567.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. DEBURR INSIDE AND OUTSIDE OF CUT ENDS.
4. IDENTIFY PARTS PER MIL-STD-130.

PART NUMBER: 70500-02073-101

AK1708A  
SA

Figure 89. Drip Pan Tube.

---

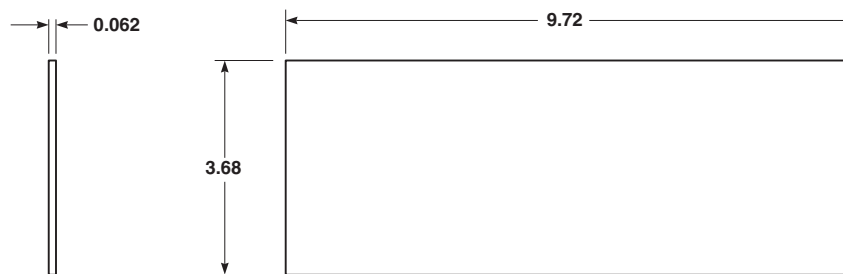FIELD MANUFACTURE ITEMS - Continued

## NOTES

1. MAKE FROM 0.062 INCH THICK, CLASS 3B, GRADE 50 RUBBER, ZZ-R-765, NSN 9320-01-032-6281.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. IDENTIFY PARTS PER MIL-STD-190. STAMP OR STENCIL PART NUMBER AND DATE OF MANUFACTURE ON PARTS WITH OPAQUE GREEN INK, TT-I-1795. USE 1/16 TO 1/8 INCH HIGH SANS SERIF CHARACTERS.


EXAMPLE: P/N 70216-02401-107 3Q 86  
PART NUMBER THIRD QUARTER 1986

PART NUMBER: 70700-20324-105

AK1709A  
SA

Figure 90. Cushion.

---

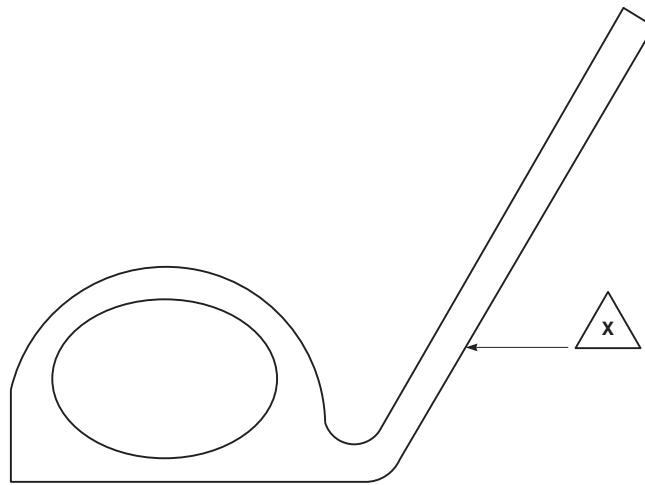FIELD MANUFACTURE ITEMS - Continued

## NOTES

1. MAKE FROM 38010-70023-101 EXTRUDED NITRILE RUBBER, CLASS 1, GRADE 40, MIL-R-6855, FSCM 78286.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. MINIMUM LENGHT 80.0 INCHES. TRIM TO FIT ON INSTALLATION.
4. IDENTIFY PARTS PER MIL-STD-190 AT LOCATION MARKED BY +1d BY +1d in F / D. STAMP OR STENCIL PART NUMBER AND DATE OF MANUFACTURE ON PARTS WITH OPAQUE GREEN INK, TT-I-1795. USE 1/16 TO 1/8 INCH HIGH SANS SERIF CHARACTERS.


EXAMPLE: P/N 70216-02401-107 3Q 86  
PART NUMBER THIRD QUARTER 1986

PART NUMBER: 70308-03602-109

AK1710A  
SA

Figure 91. HIRSS Inlet Door Seal.

## FIELD MANUFACTURE ITEMS - Continued

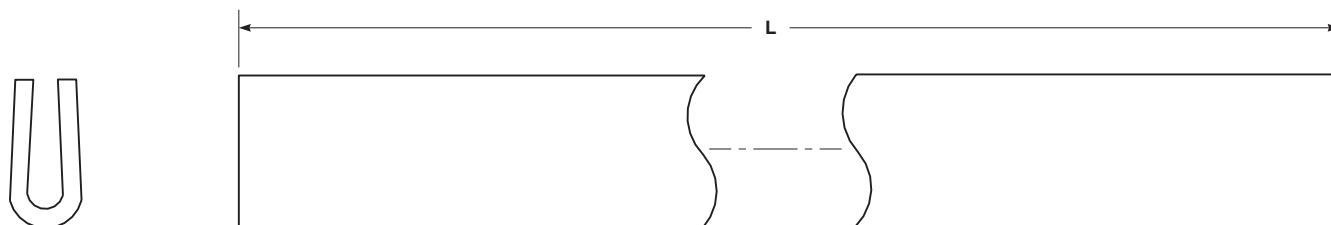

| NOMENCLATURE            | L LENGTH | SIKORSKY PART NUMBER |
|-------------------------|----------|----------------------|
| BATTERY BOX COVER SEALS | 1.87     | 70209-02532-105      |
|                         | 1.75     | 70209-02532-106      |
|                         | 4.87     | 70209-02532-107      |
|                         | 10.87    | 70209-02532-110      |
|                         | 11.75    | 70209-02532-111      |
|                         | 1.37     | 70209-02532-112      |
|                         | 2.00     | 70209-02532-113      |

## NOTES

1. MAKE FROM SYNTHETIC RUBBER EXTRUSION, DIE NO. 535, FSCM 19864. CUT TO LENGTH PER DIMENSIONS IN CHART.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. IDENTIFY PARTS PER MIL-STD-190. STAMP OR STENCIL PART NUMBER AND DATE OF MANUFACTURE ON PARTS WITH OPAQUE GREEN INK, TT-I-1795. USE 1/16 TO 1/8 INCH HIGH SANS SERIF CHARACTERS.

EXAMPLE: P/N 70216-02401-107 3Q 86  
 PART NUMBER THIRD QUARTER 1986


PART NUMBER: 70209-02532-105 THRU -107 AND -110 THRU -113

AK1711A  
SA

Figure 92. Battery Box Cover Seals.



## FIELD MANUFACTURE ITEMS - Continued

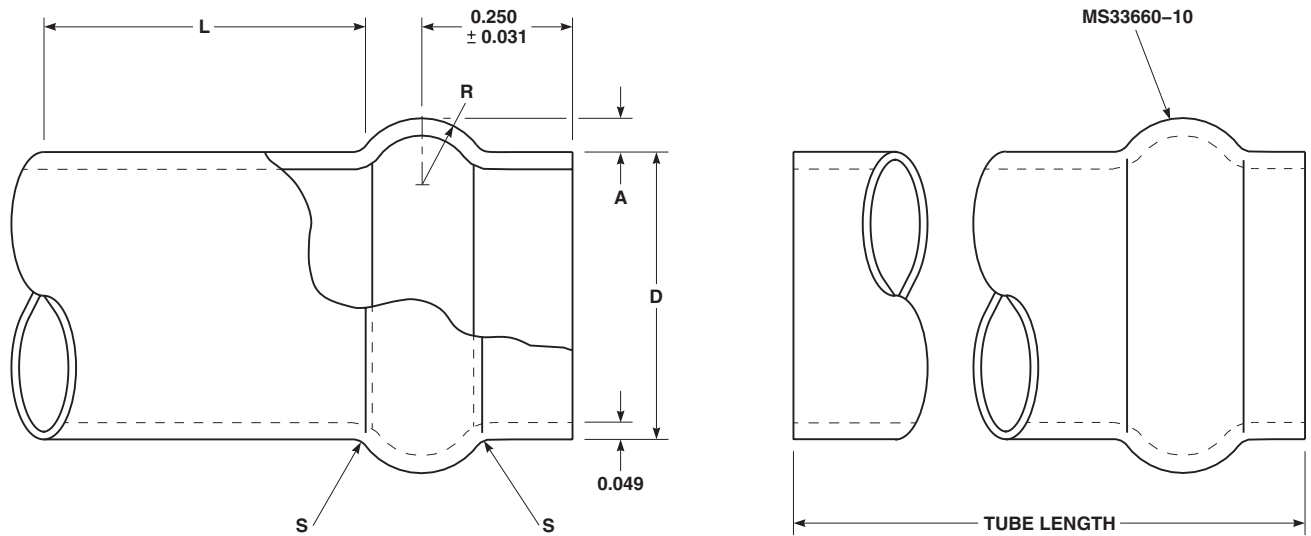

TYPE A END

CHART A

|            | D (SEE NOTE 7) | A                                 | L                   | R                           | S                   |                          |
|------------|----------------|-----------------------------------|---------------------|-----------------------------|---------------------|--------------------------|
| BEAD SIZE  | TUBE OD        | TOLERANCE FOR LENGTH L TYPE A END | BEAD HEIGHT ± 0.003 | LENGTH MINIMUM (SEE NOTE 7) | BEAD RADIUS MAXIMUM | BEAD EDGE RADIUS MAXIMUM |
| MS33660-10 | 0.625          | + 0.003<br>- 0.010                | 0.038               | 0.750                       | 0.125               | 0.062                    |

CHART B

| SIKORSKY PART NUMBER | TUBE LENGTH |
|----------------------|-------------|
| 70500-02071-109      | 7.00        |
| 70500-02071-110      | 5.25        |

## NOTES


1. MAKE FROM 0.625 OD BY 0.049 INCH WALL THICKNESS, 5052-0 ALUMINUM ALLOY TUBING WW-T-700 / 4, FSCM 81349.
2. FORM BEAD AS SHOWN, PER MS33660-10 AND CHART A.
3. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
4. CUT TUBE LENGTH PER CHART B, AND DEBURR CUT ENDS.
5. TREAT TUBE WITH CORROSION-RESISTANCE COMPOUND (ALODINE), MIL-C-81706, NSN 8030-00-811-3723.
6. IDENTIFY PARTS PER MIL-STD-130.
7. TUBE OD, AFTER BEADING, SHALL BE MAINTAINED FOR DISTANCE L.

PART NUMBER: 70500-02071-109, -110

AK1716A  
SA

Figure 93. Beaded Tube.

FIELD MANUFACTURE ITEMS - Continued

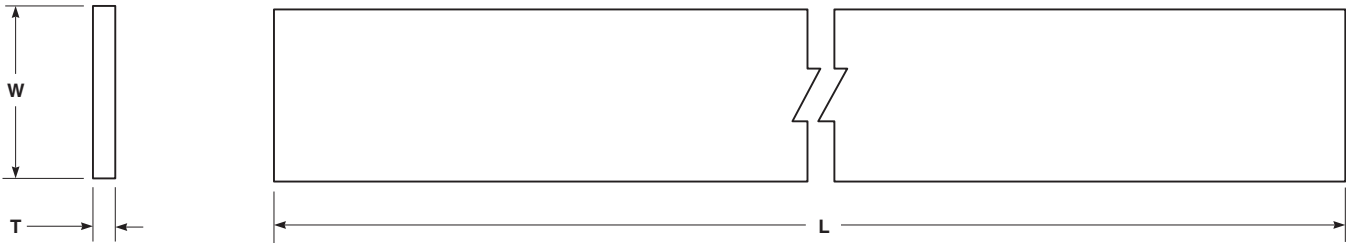

| SIKORSKY PART NUMBER | T THICKNESS | W WIDTH | L LENGTH | NSN              |
|----------------------|-------------|---------|----------|------------------|
| 70216-01007-117      | 0.25        | 0.65    | 13.19    | 5330-01-105-5866 |
| 70216-01007-118      | 0.06        | 0.32    | 13.03    | 5330-01-105-5866 |
| 70216-01007-158      | 0.12        | 0.49    | 12.78    | 9320-00-202-1935 |
| 70216-01007-174      | 0.06        | 0.49    | 4.70     | 9320-00-080-7382 |

NOTES

1. MAKE FROM SCE-7L RUBBER, MIL-STD-670, PER CHART.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. IDENTIFY PARTS PER MIL-STD-190. STAMP OR STENCIL PART NUMBER AND DATE OF MANUFACTURE ON PARTS WITH OPAQUE GREEN INK, TT-I-1795. USE 1/16 TO 1/8 INCH HIGH SANS SERIF CHARACTERS.


EXAMPLE:    P/N 70216-02401-107                      3Q 86  
                     PART NUMBER                      THIRD QUARTER 1986

PART NUMBER: 70216-01007-117, -118, -158, -174

AK1715A  
SA

Figure 94. Vent Window Seals.

FIELD MANUFACTURE ITEMS - Continued

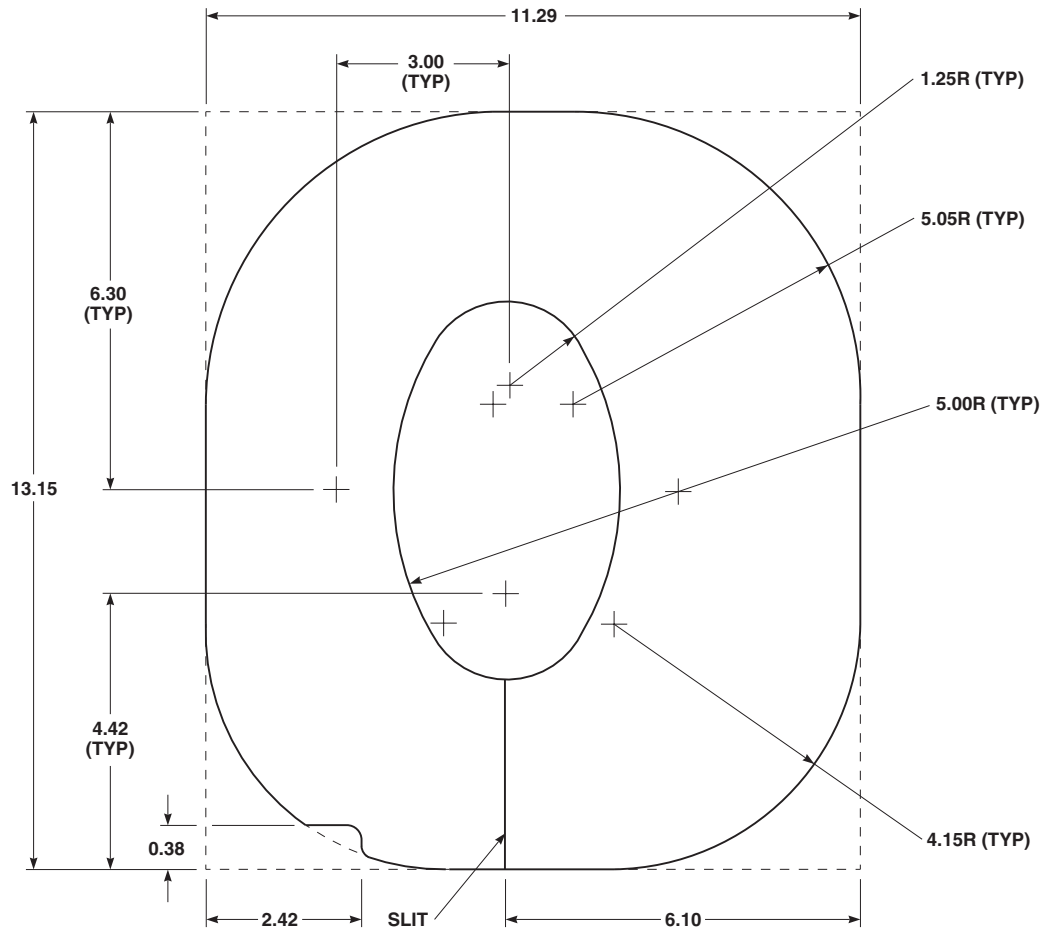

| NOMENCLATURE              | SIKORSKY PART NUMBER |
|---------------------------|----------------------|
| MAIN GEAR STRUT WELL SEAL | 70215-02312-102      |

NOTES

1. MAKE FROM 0.25 INCH THICK NON-POROUS SKINNED RUBBER, CLASS 1, GRADE 40, MIL-R-6855, NSN 9320-01-157-9071.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. IDENTIFY PARTS PER MIL-STD-190. STAMP OR STENCIL PART NUMBER AND DATE OF MANUFACTURE ON PARTS WITH OPAQUE GREEN INK, TT-I-1795. USE 1/16 TO 1/8 INCH HIGH SANS SERIF CHARACTERS.


EXAMPLE: P/N 70216-02401-107 3Q 86  
PART NUMBER THIRD QUARTER 1986

PART NUMBER: 70215-02312-102

AK1714A  
SA

Figure 95. Main Gear Strut Well Seal.

## FIELD MANUFACTURE ITEMS - Continued

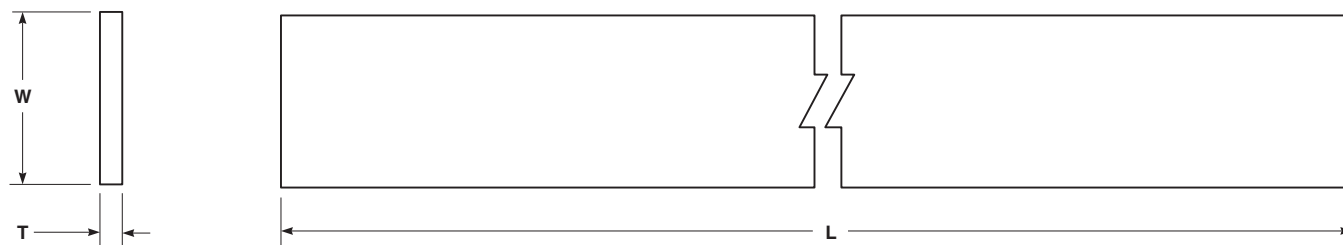

| NOMENCLATURE                     | T THICKNESS | W WIDTH | L LENGTH | SIKORSKY PART NUMBER |
|----------------------------------|-------------|---------|----------|----------------------|
| CARGO DOOR JETTISON WINDOW SEALS | 0.062       | 0.532   | 102.25   | 70217-02705-108      |
|                                  |             |         | 102.25   | 70217-02705-112      |
|                                  |             |         | 19.00    | 70217-02705-115      |

## NOTES

1. MAKE FROM 0.062 INCH THICK RUBBER, TYPE 2, GRADE A, MEDIUM, MIL-STD-670B SCE7L, NSN 9320-00-012-3481.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. CUT SEALS TO SIZE PER CHART. CUT OVERSIZE TO ALLOW FOR FINAL FIT ON INSTALLATION.
4. IDENTIFY PARTS PER MIL-STD-190. STAMP OR STENCIL PART NUMBER AND DATE OF MANUFACTURE ON PARTS WITH OPAQUE GREEN INK, TT-I-1795. USE 1/16 TO 1/8 INCH HIGH SANS SERIF CHARACTERS.


EXAMPLE: P/N 70216-02401-107      3Q 86  
                     PART NUMBER      THIRD QUARTER 1986

PART NUMBER: 70217-02705-108, -112, -115

AK1717A  
 SA

Figure 96. Cargo Door Jettison Window Seals.

## FIELD MANUFACTURE ITEMS - Continued

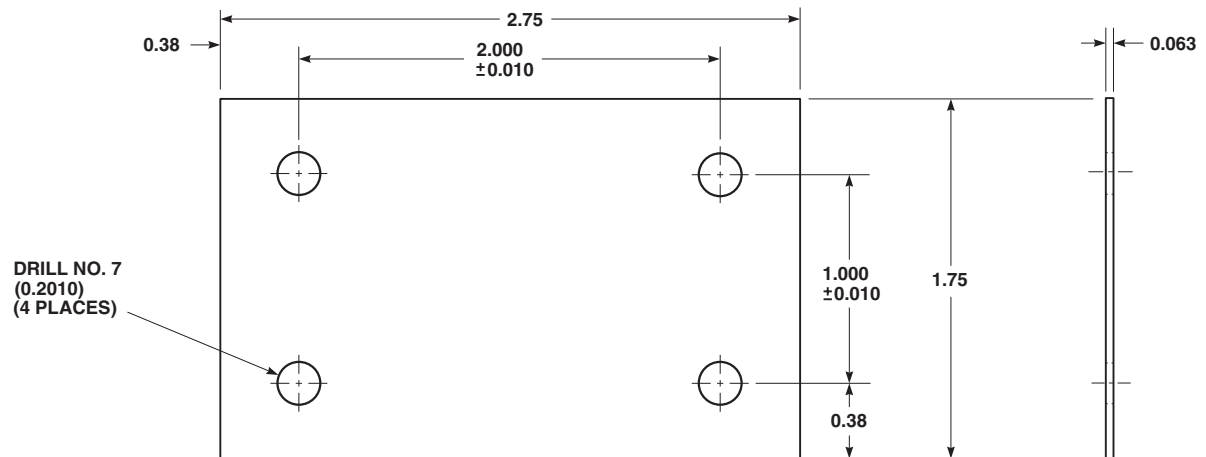


## NOTES

1. MAKE FROM 0.063 INCH THICK 7075-T6 ALCLAD SHEET, QQ-A-250 / 13, NSN 9535-00-086-9860.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. DRILL HOLES AS SHOWN PER TM 1-1500-204-23.
4. BREAK SHARP EDGES AND DEBURR ALL HOLES.
5. ANODIZE, TWO COATS, PER MIL-A-8625.
6. IDENTIFY PARTS PER MIL-STD-130.

PART NUMBER: 70217-01010-111

AK1718A  
SA

Figure 97. Shim.

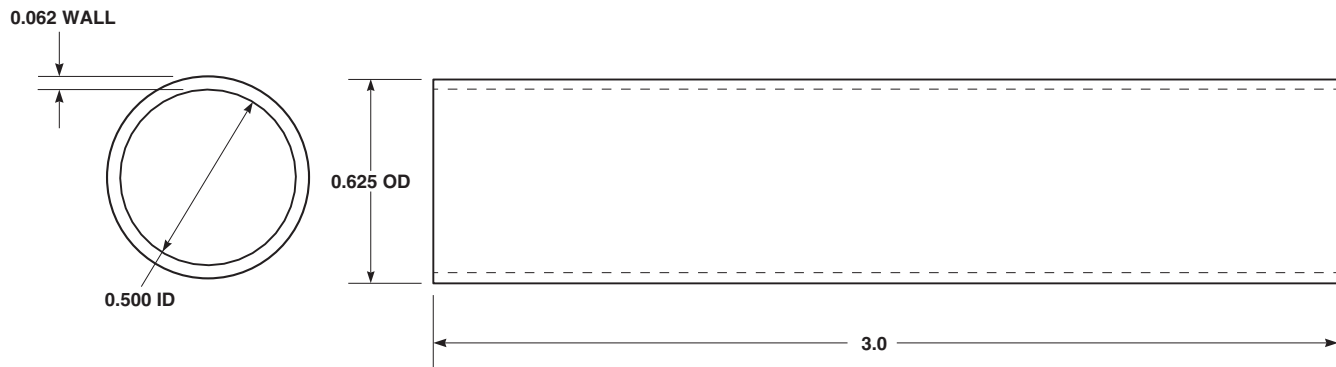**FIELD MANUFACTURE ITEMS** - Continued**NOTES**


1. MAKE FROM TYGON R-2807 PLASTIC TUBING, FSCM 34384.
2. CUT TO LENGTH, AS SHOWN UNLESS NOTED.
3. IDENTIFY PARTS PER MIL-STD-130.

PART NUMBER: 70217-01010-110

AK1719A  
SA

Figure 98. Seal Splice.

FIELD MANUFACTURE ITEMS - Continued

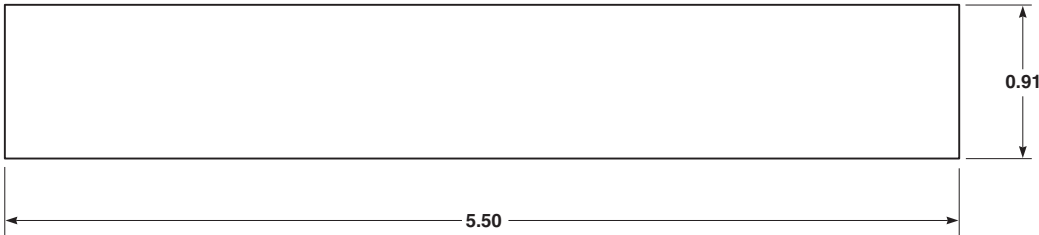

| NOMENCLATURE        | SIKORSKY PART NUMBER |
|---------------------|----------------------|
| CEILING PANEL STRAP | 70500-02063-151      |

NOTES


- 1. MAKE FROM NYLON WEBBING, CLASS 1, MIL-W-4088, COLOR GRAY, NSN 8305-01-015-5342.
- 2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
- 3. IDENTIFY PARTS PER MIL-STD-130.

PART NUMBER: 70500-02063-151

AK1720A  
SA

Figure 99.Ceiling Panel Strap.

## FIELD MANUFACTURE ITEMS - Continued

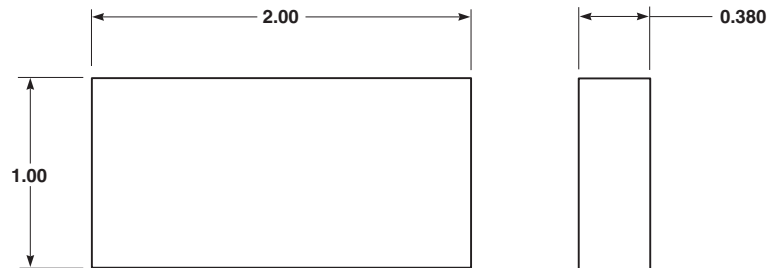

## NOTES

1. MAKE FROM NEOPRENE FOAM, SCE-3L, MIL-STD-670, NSN 9320-00-181-0016.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. IDENTIFY PARTS PER MIL-STD-190. STAMP OR STENCIL PART NUMBER AND DATE OF MANUFACTURE ON PARTS WITH OPAQUE GREEN INK, TT-I-1795. USE 1/16 TO 1/8 INCH HIGH SANS SERIF CHARACTERS.

EXAMPLE: P/N 70216-02401-107      3Q 86  
                     PART NUMBER      THIRD QUARTER 1986


PART NUMBER: 70215-02312-119

AK1721A  
SA

Figure 100. Main Landing Gear Fairing Bumper.



## FIELD MANUFACTURE ITEMS - Continued

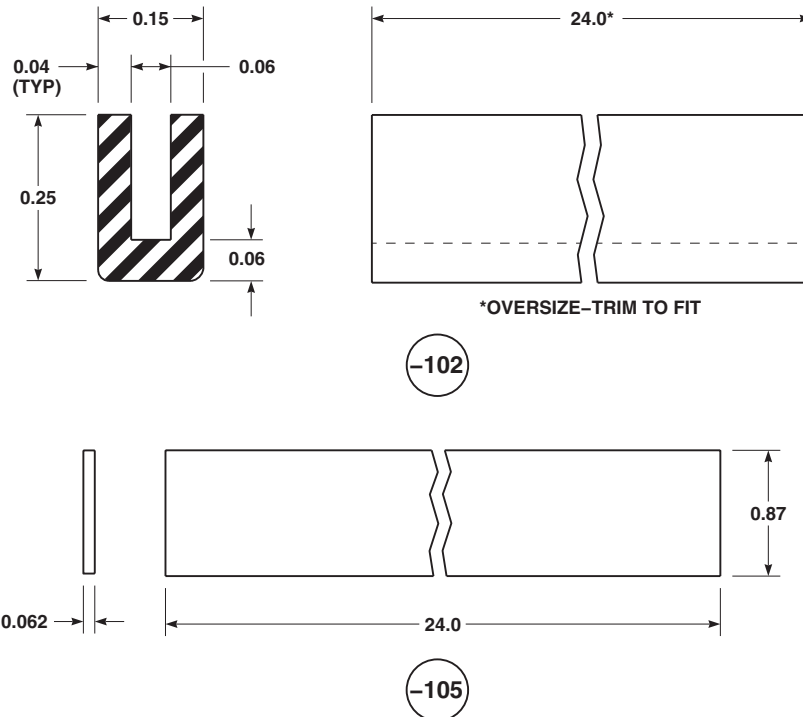

## NOTES

1. MAKE -102 SEAL FROM SS2940-120 EXTRUDED STYRENE BUTADIENE RUBBER EDGING, NSN 9390-01-251-7688, FSCM 83473.
2. MAKE -105 SEAL (ALTERNATE SEAL) FROM 0.062 INCH THICK RUBBER, CLASS 2, GRADE 60, MIL-R-6855, NSN 9320-01-157-9070.
3. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
4. ALTERNATE MATERIAL FOR -102 IS SS2940-24 SYNTHETIC RUBBER EDGING LISTED IN THIS APPENDIX. REFER TO INDEX.
5. IDENTIFY PARTS PER MIL-STD-190. STAMP OR STENCIL PART NUMBER AND DATE OF MANUFACTURE ON PARTS WITH OPAQUE GREEN INK, TT-I-1795. USE 1/16 TO 1/8 INCH HIGH SANS SERIF CHARACTERS.


EXAMPLE: P/N 70216-02401-107 3Q 86  
 PART NUMBER THIRD QUARTER 1986

PART NUMBER: 70215-02531-102, -105

AA8913B  
SA

Figure 101. Edging Seal.

FIELD MANUFACTURE ITEMS - Continued

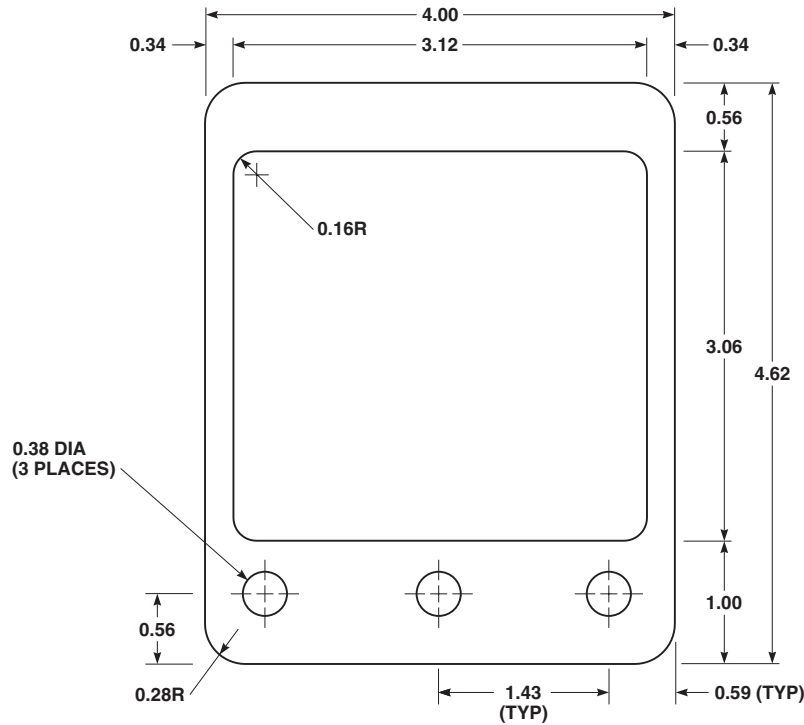

| NOMENCLATURE           | SIKORSKY PART NUMBER |
|------------------------|----------------------|
| DUCT INSTALLATION SEAL | 70500-01053-113      |

NOTES

1. MAKE FROM 0.032 INCH THICK RUBBER, CLASS 2, GRADE 60, MIL-R-6855, NSN 9320-01-157-9069.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. IDENTIFY PARTS PER MIL-STD-190. STAMP OR STENCIL PART NUMBER AND DATE OF MANUFACTURE ON PARTS WITH OPAQUE GRAY INK, TT-I-1795. USE 1/16 TO 1/8 INCH HIGH SANS SERIF CHARACTERS.


EXAMPLE: P/N 70216-02401-107 3Q 86  
PART NUMBER THIRD QUARTER 1986

PART NUMBER: 70500-01053-113


AK1723A  
SA

Figure 102. Duct Installation Seal.

## FIELD MANUFACTURE ITEMS - Continued

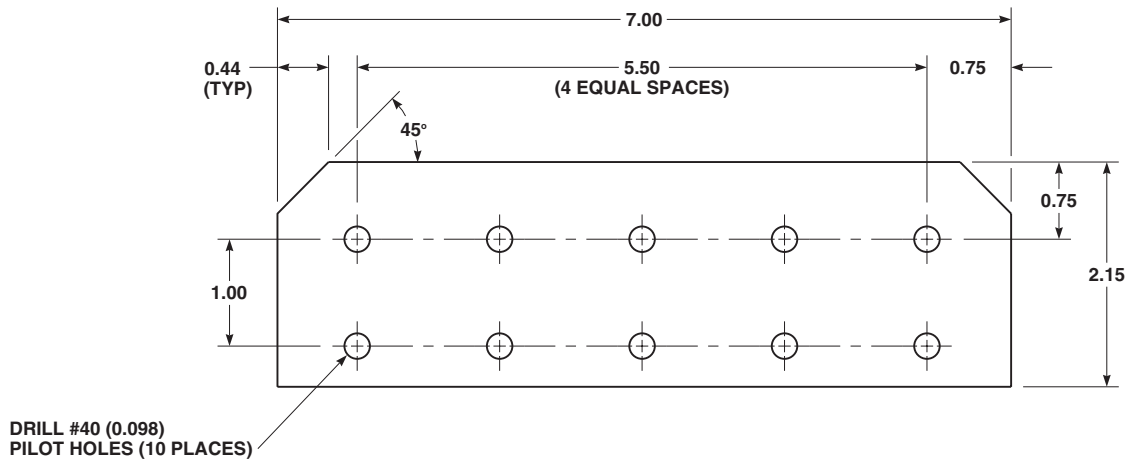

-110

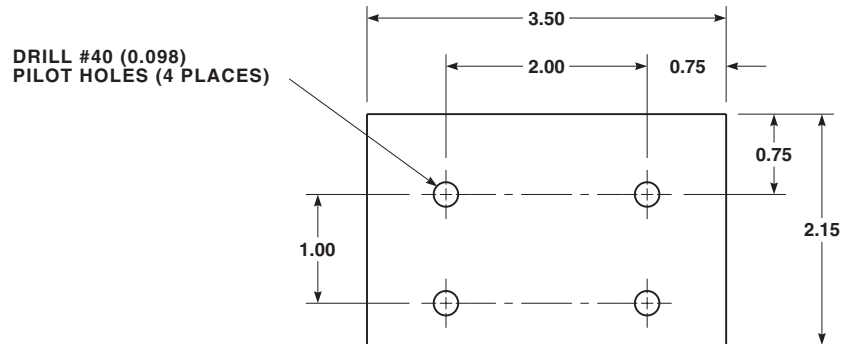

-109

## NOTES


1. MAKE -109 AND -110 LINERS FROM 0.03 INCH THICK SYNTHANE GME, MIL-P-15037, NSN 5970-00-912-1907.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. IDENTIFY PARTS PER MIL-STD-130.
4. ON INSTALLATION OPEN PILOT HOLES TO 0.406 INCH DIAMETER TO MATCH VIBRATION ABSORBER HOLES.

PART NUMBER: 70219-02114-109, -110

AK1724A  
SA

Figure 103. Vibration Absorber Liners.

## FIELD MANUFACTURE ITEMS - Continued

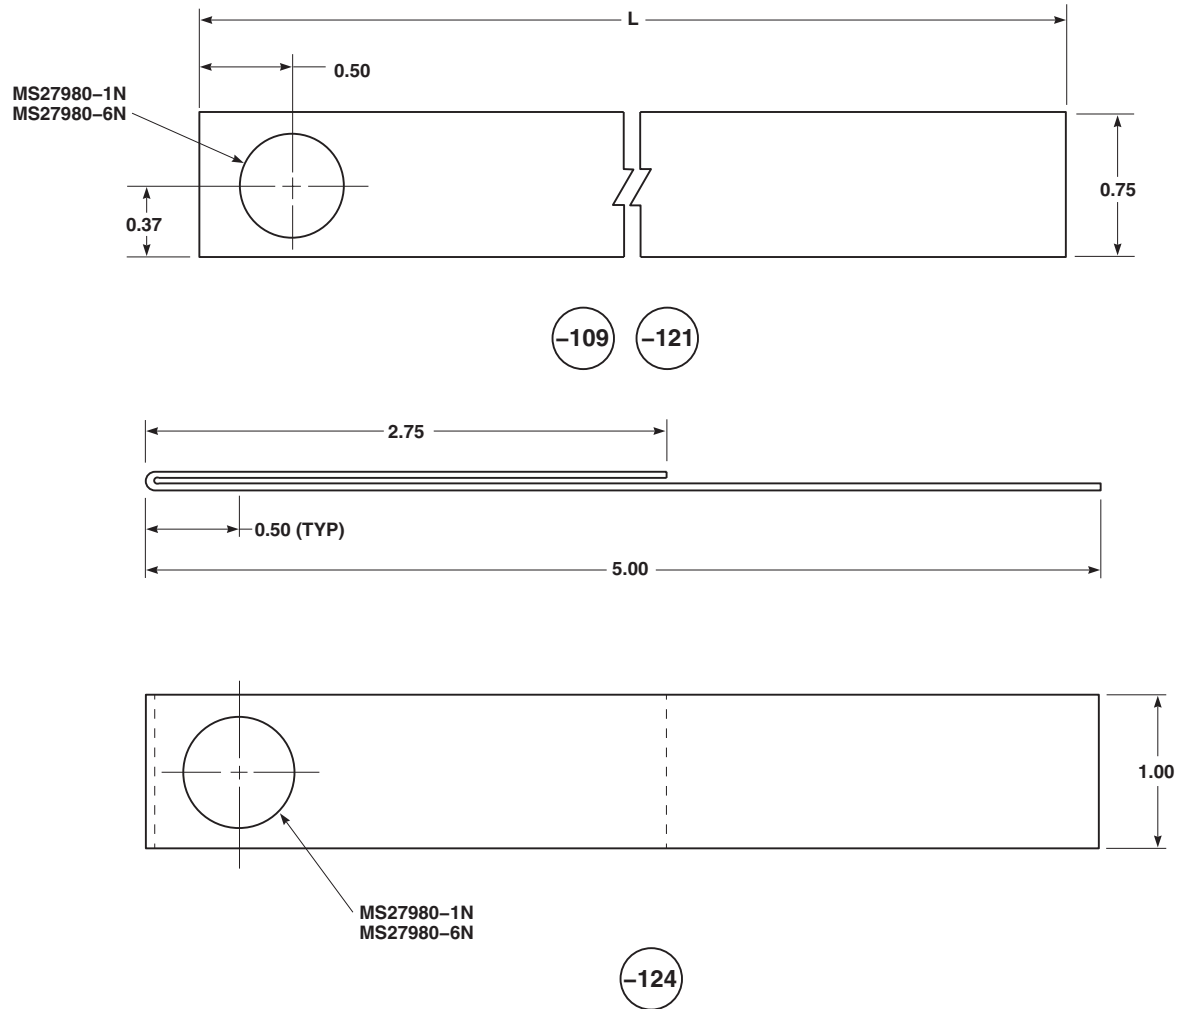

| NOMENCLATURE          | L LENGTH | SIKORSKY<br>PART NUMBER |
|-----------------------|----------|-------------------------|
| SIDE WALL PANEL STRAP | 5.06     | 70500-02068-109         |
|                       | 10.00    | 70500-02068-121         |
|                       |          | 70500-02068-124         |

## NOTES


1. MAKE -109, -121 FROM 0.750 INCH WIDE GRAY NYLON WEBBING, TYPE 1A, MIL-W-4088, NSN 5340-01-097-5199.
2. CUT WEBBING TO REQUIRED SIZE AND INSTALL MS27980-1N, NSN 5325-00-276-4953, AND MS27980-6N, NSN 5325-00-276-4946, SNAP FASTENER PER TM 1-1500-204-23.
3. MAKE -124 FROM 1.00 INCH WIDE GRAY NYLON WEBBING, TYPE 1A, MIL-W-4088, NSN 8305-01-015-5342.
4. CUT WEBBING TO 7.75 INCH LENGTH AND FOLD AS SHOWN.
5. INSTALL MS27980-1N, NSN 5325-00-276-4953, AND MS27980-6N, NSN 5325-00-276-4946, SNAP FASTENER PER TM 1-1500-204-23.
6. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
7. IDENTIFY PARTS PER MIL-STD-130.

PART NUMBER: 70500-02068-109, -121, -124

AK1725A  
SA

Figure 104. Strap.

FIELD MANUFACTURE ITEMS - Continued

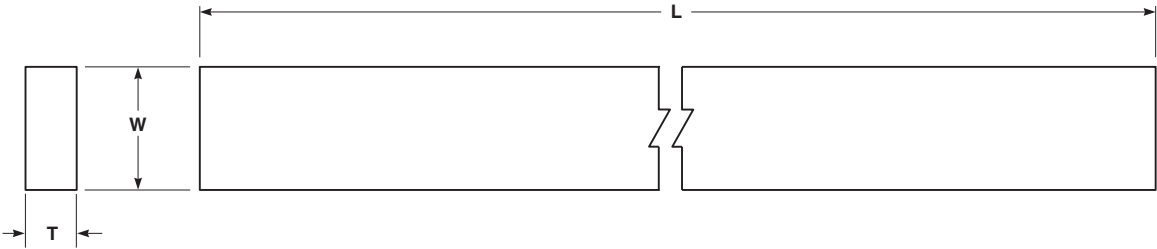

| NOMENCLATURE           | T THICKNESS | W WIDTH | L LENGTH | SIKORSKY PART NUMBER |
|------------------------|-------------|---------|----------|----------------------|
| ENGINE AIR INLET SEALS | 0.050       | 1.50    | 20.0     | 70302-10019-101      |
|                        |             |         | 15.0     | 70302-10019-102      |
|                        |             |         | 28.0     | 70302-10019-103      |
|                        |             |         | 26.0     | 70302-10019-104      |
|                        |             |         | 3.0      | 70302-10019-105      |

NOTES


- 1. MAKE FROM 0.050 INCH THICK RUBBER, TYPE 2, CLASS 1, MIL-R-83248, FSCM 81349.
- 2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
- 3. CUT SEALS TO LENGTH PER CHART.
- 4. IDENTIFY PARTS PER MIL-STD-190. STAMP OR STENCIL PART NUMBER AND DATE OF MANUFACTURE ON PARTS WITH OPAQUE GREEN INK, TT-I-1795. USE 1/16 TO 1/8 INCH HIGH SANS SERIF CHARACTERS.

EXAMPLE: P/N 70216-02401-107 3Q 86  
PART NUMBER THIRD QUARTER 1986  
PART NUMBER: 70302-10019-101, -102, -103, -104, -105

AK1727A  
28.0

Figure 105. Engine Air Inlet Seal.

## FIELD MANUFACTURE ITEMS - Continued

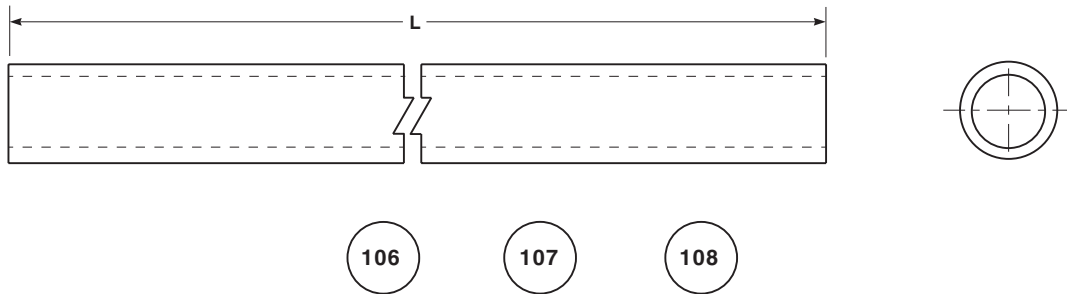

| SIKORSKY PART NUMBER | L LENGTH |
|----------------------|----------|
| 70500-02073-106      | 38.00    |
| 70500-02073-107      | 44.00    |
| 70500-02073-108      | 56.00    |

## NOTES


1. MAKE FROM 0.750 OD X 0.625 ID COMMERCIAL URETHANE TUBING (TYGOTHANE),  
NSN 4720-01-176-6328.
2. ALL DIMENSIONS ARE IN INCHES.
3. IDENTIFY PARTS PER MIL-STD-130.

PART NUMBER: 70500-02073-106, -107, -108

AK1728  
SA

Figure 106. Drain Tube.

## FIELD MANUFACTURE ITEMS - Continued

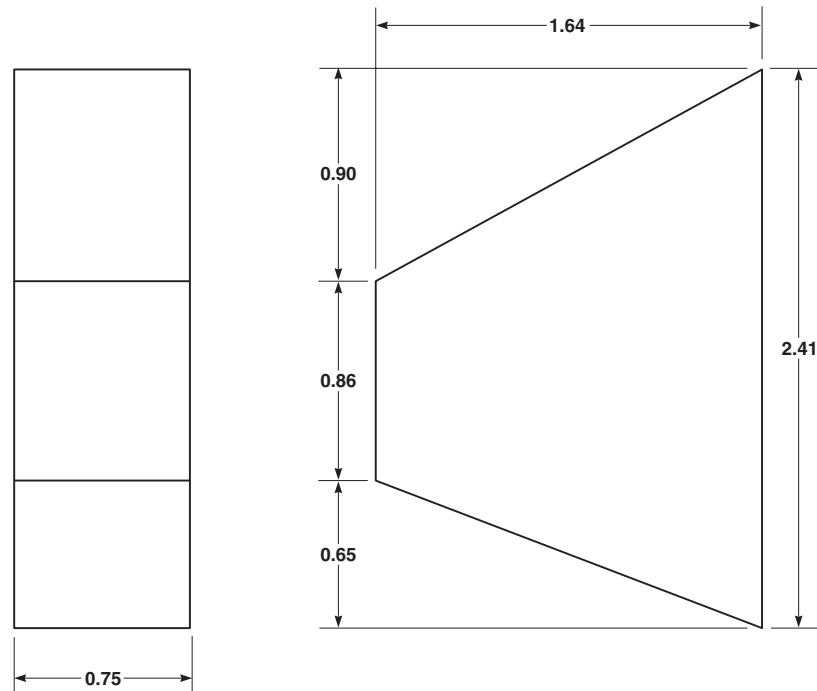

## NOTES

1. MAKE FROM 0.750 INCH THICK RUBBER, TYPE 2, GRADE A MEDIUM, MIL-R-6130, FSCM 81349.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. IDENTIFY PARTS PER MIL-STD-190. STAMP OR STENCIL PART NUMBER AND DATE OF MANUFACTURE ON PARTS WITH OPAQUE GREEN INK, TT-I-1795. USE 1/16 TO 1/8 INCH HIGH SANS SERIF CHARACTERS.

EXAMPLE: P/N 70216-02401-107      3Q 86  
                     PART NUMBER      THIRD QUARTER 1986





PART NUMBER: 70302-02142-110

AK1729A  
 SA

Figure 107. Engine Fairing Seal.

## FIELD MANUFACTURE ITEMS - Continued

DRILL NO. 40 (0.098 DIA) HOLE THROUGH  
OUTBOARD SURFACE ONLY ON BULB.  
(FOUR PLACES - APPROX. EQUALLY SPACED  
ON SEAL) TO ALLOW SEAL TO COMPRESS.

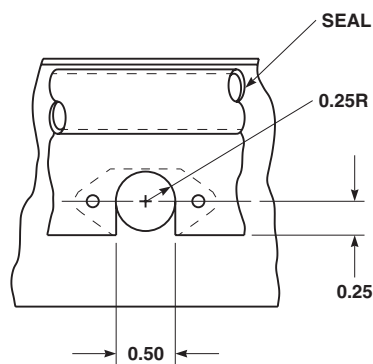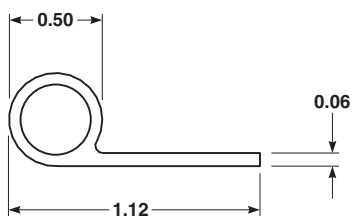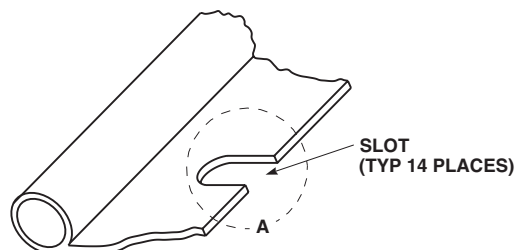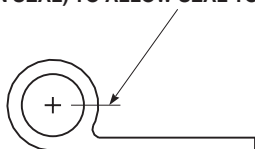

**DETAIL A**  
(TYP 14 PLACES)

## NOTES

1. MAKE SEAL FROM MBC-26038, CLASS 2, GRADE 60, CAGE 02921.  
ITEM CAN BE OBTAINED FROM: MUELLER BELTING AND SPECIALTY CO. INC.  
PO BOX 510  
SADDLEBROOK, NJ 00766-5926
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. APPROXIMATE LENGTH OF SEAL IS 120 INCHES. TRIM TO FIT ON INSTALLATION.  
FLAT PORTION OF SEAL MAY BE SLIT, AS REQUIRED, TO ALLOW EASE OF FORM-  
ING CORNER RADII.
4. PICK UP SLOT LOCATION ON INSTALLATION AND CUT SLOTS PER DETAIL A.
5. IDENTIFY PARTS PER MIL-STD-190. STAMP OR STENCIL PART NUMBER AND DATE  
OF MANUFACTURE ON PARTS WITH OPAQUE YELLOW INK, TT-I-1795. USE 1/16 TO  
1/8 INCH HIGH SANS SERIF CHARACTERS.

EXAMPLE: P/N 70216-02401-107      3Q 86  
PART NUMBER      THIRD QUARTER 1986


PART NUMBER: 70500-02070-149

AK1730C  
SA

Figure 108. Drain Pan Seal.



## FIELD MANUFACTURE ITEMS - Continued

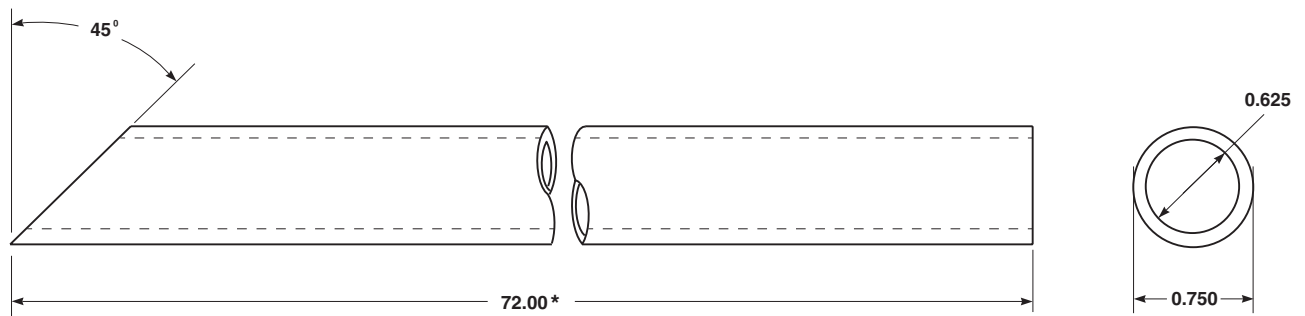

\* OVERSIZE-TRIM ON INSTALLATION

## NOTES


1. MAKE FROM 0.750 OD BY 0.625 ID URETHANE TUBING (TYGOTHANE), NSN 4720-01-176-6328.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. IDENTIFY PARTS PER MIL-STD-130.

PART NUMBER: 70500-02076-101

AK1731A  
SA

Figure 109. Drain Tube.


FIELD MANUFACTURE ITEMS - Continued

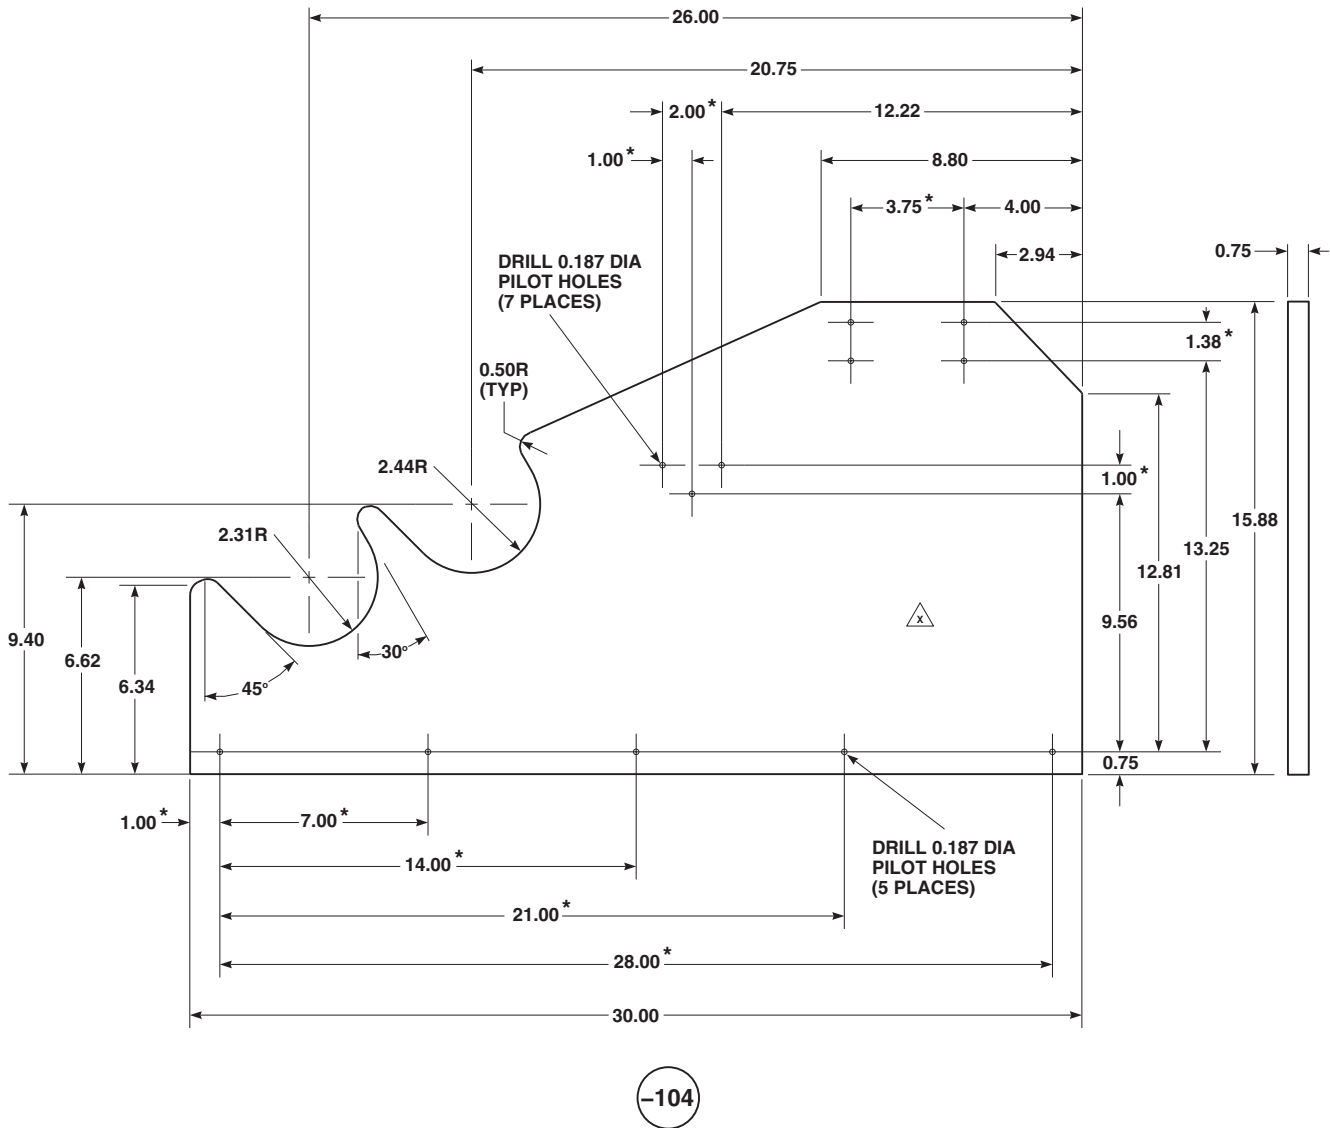

AK1737\_1A  
SA

Figure 110. Plywood Frame. (Sheet 1 of 2)

## FIELD MANUFACTURE ITEMS - Continued

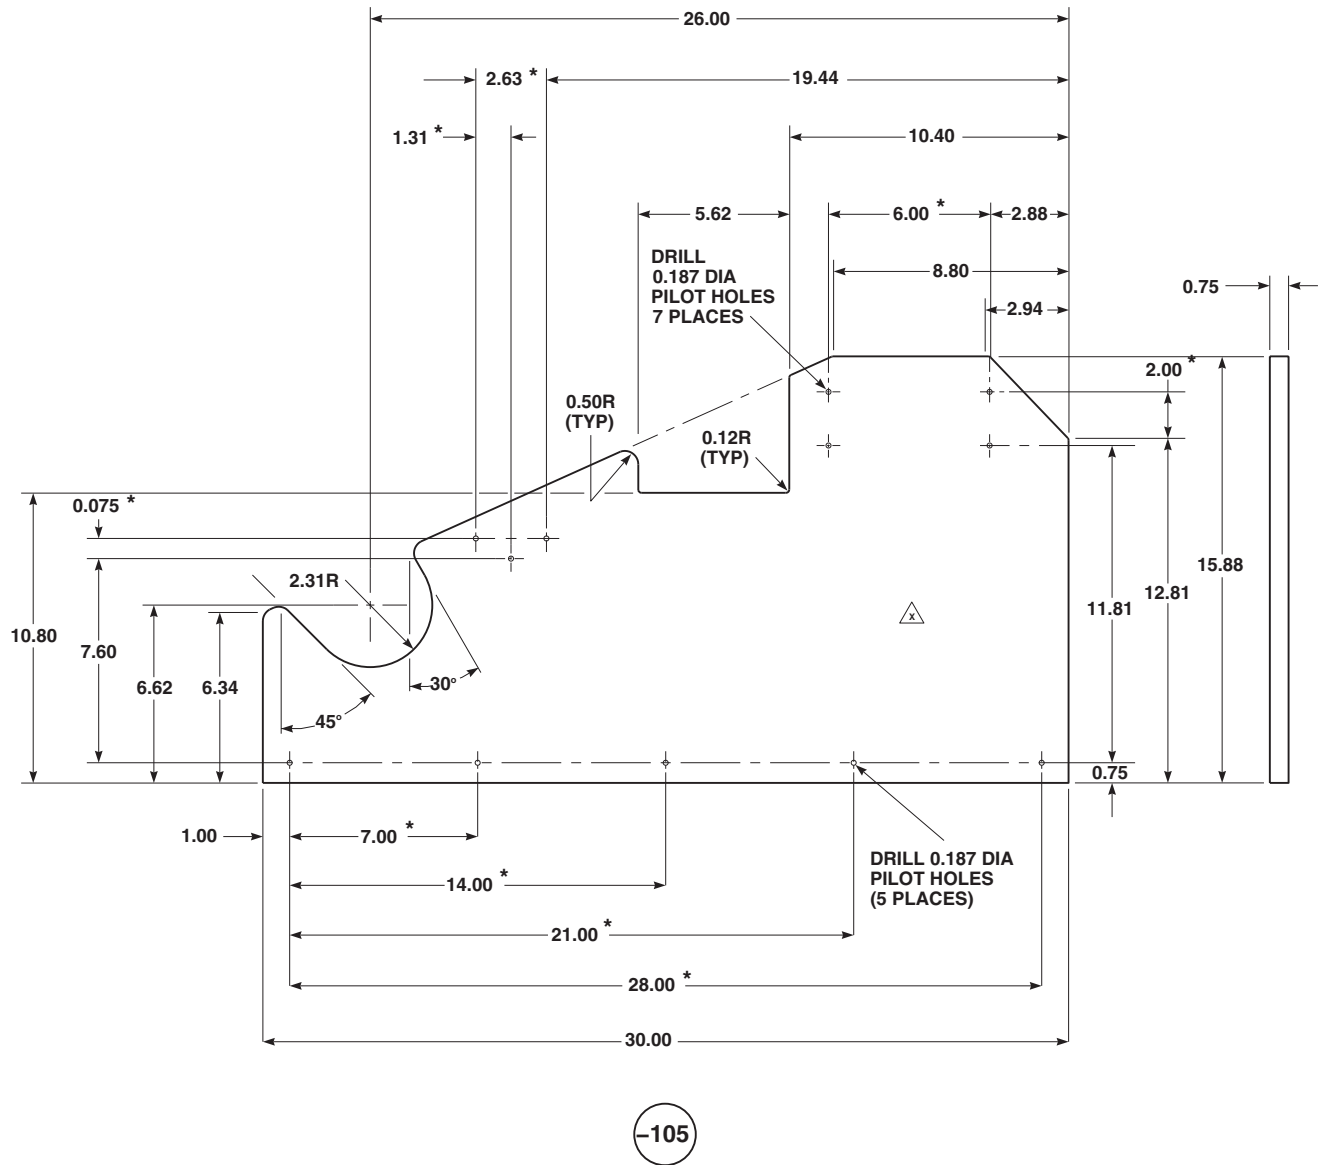

## NOTES


1. MAKE FROM 0.75 INCH THICK EXTERIOR GRADE PLYWOOD, A-A-1417, NSN 5530-00-051-0512.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. DIMENSIONS MARKED WITH ASTERISK (\*) ARE BASIC DIMENSIONS AND SHOULD BE HELD TO  $\pm 0.03$  INCH.
4. DRILL 0.187 INCH DIAMETER PILOT HOLES AS SHOWN IN FIGURE, HOLES ARE TO BE OPENED TO 0.312 INCH DIAMETER ON ASSEMBLY.
5. FINISH: 1 COAT RK147 VARNISH, FSCM 81439.  
1 COAT EPOXY PRIMER, MIL-PRF-23377, NSN 8010-00-082-2477.  
2 COATS POLYURETHANE, MIL-C-81773, YELLOW PER FED. STD 595, NSN 8010-00-181-8208.
6. IDENTIFY PARTS PER MIL-STD-130 IN LOCATION SHOWN BY +1d BY +1d IN F / D.

PART NUMBER: 70700-20313-104, -105

AK1737\_2B  
SA

Figure 110. Plywood Frame. (Sheet 2 of 2)

## FIELD MANUFACTURE ITEMS - Continued

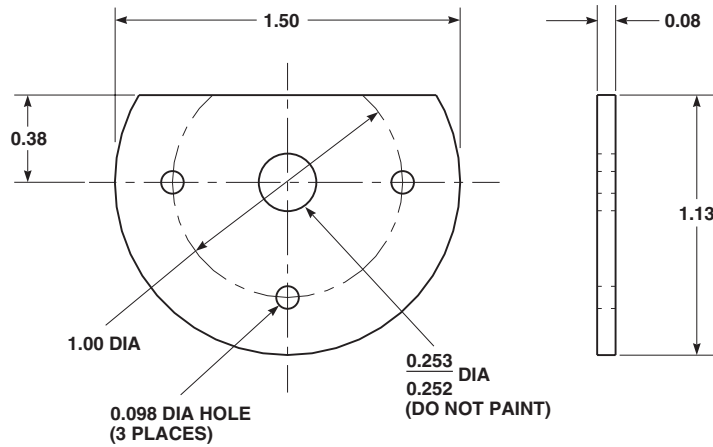

## NOTES


1. MAKE FROM 0.080 INCH THICK 7075-T6 ALCLAD ALUMINUM SHEET, QQ-A-250 / 13, NSN 9535-00-232-7542.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. IDENTIFY PARTS PER MIL-STD-130.

PART NUMBER: 70217-01000-114

AK1740A  
SA

Figure 111. Doubler.

FIELD MANUFACTURE ITEMS - Continued

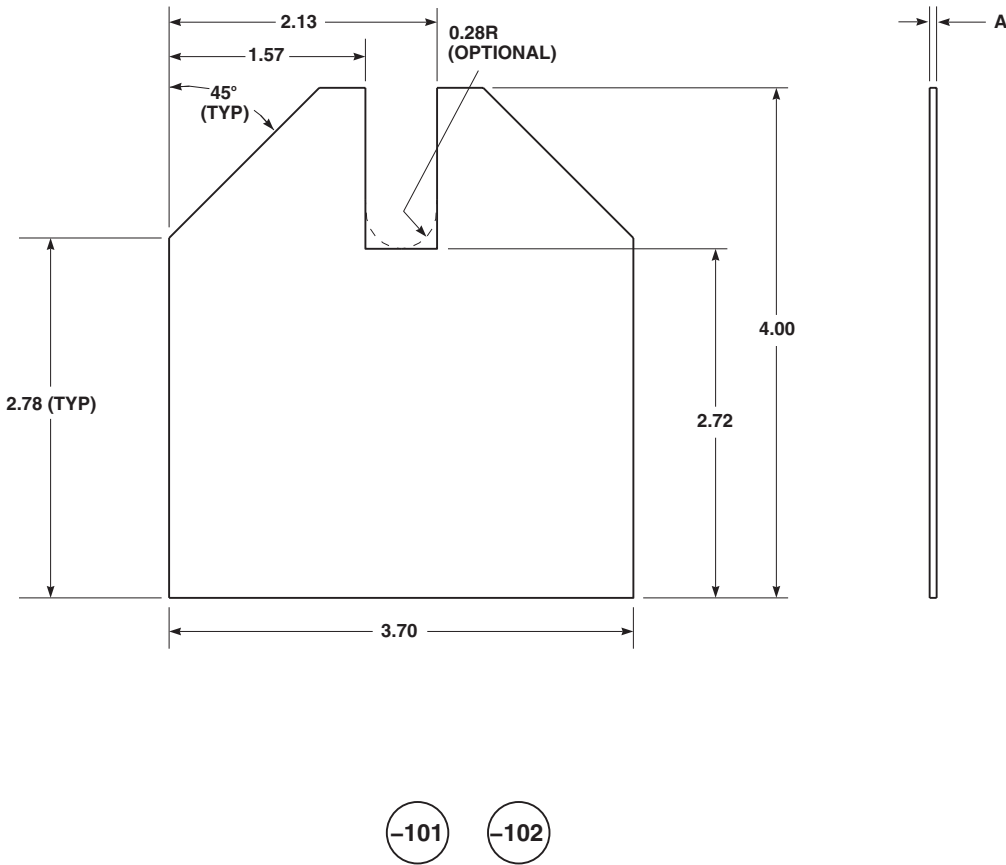

| SIKORSKY PART NUMBER | DIMENSION A |
|----------------------|-------------|
| 70102-11109-101      | 0.004       |
| 70102-11109-102      | 0.005       |


NOTES

- 1. MAKE FROM 302 STAINLESS STEEL, MIL-S-5059, FSCM 81349 OR KIT 88S, FSCM 31633, NSN: 5365-01-077-2092 USING THICKNESS LISTED IN CHART.
  - 2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
  - 3. IDENTIFY PARTS PER MIL-STD-130.
  - 4. THIS IS CHECKING SHIM ONLY AND MUST BE REMOVED FROM HELICOPTER AFTER TAIL ROTOR INSTALLATION IS COMPLETED.
- PART NUMBER: 70102-11109-101, -102

AK1741B  
SA

Figure 112. Checking Shim.

FIELD MANUFACTURE ITEMS - Continued

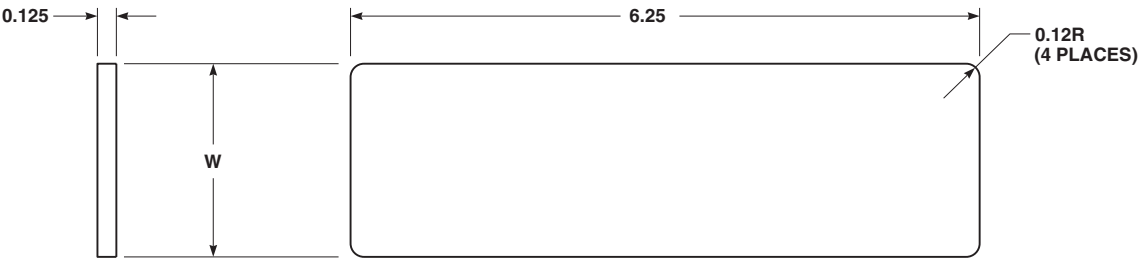

| SIKORSKY PART NUMBER | DIMENSION W |
|----------------------|-------------|
| 70700-20677-102      | 1.38        |
| 70700-20677-103      | 2.00        |


NOTES

- 1. MAKE FROM 0.125 INCH THICK 2024-T351 ALUMINUM ALLOY QQ-A-250 / 5, NSN 9535-00-232-0418.
  - 2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
  - 3. CUT WIDTH OF WEAR STRIPS PER CHART.
  - 4. IDENTIFY PARTS PER MIL-STD-130.
- PART NUMBER: 70700-20677-102, -103

AK1744A  
SA

Figure 113. Wear Strap.

FIELD MANUFACTURE ITEMS - Continued

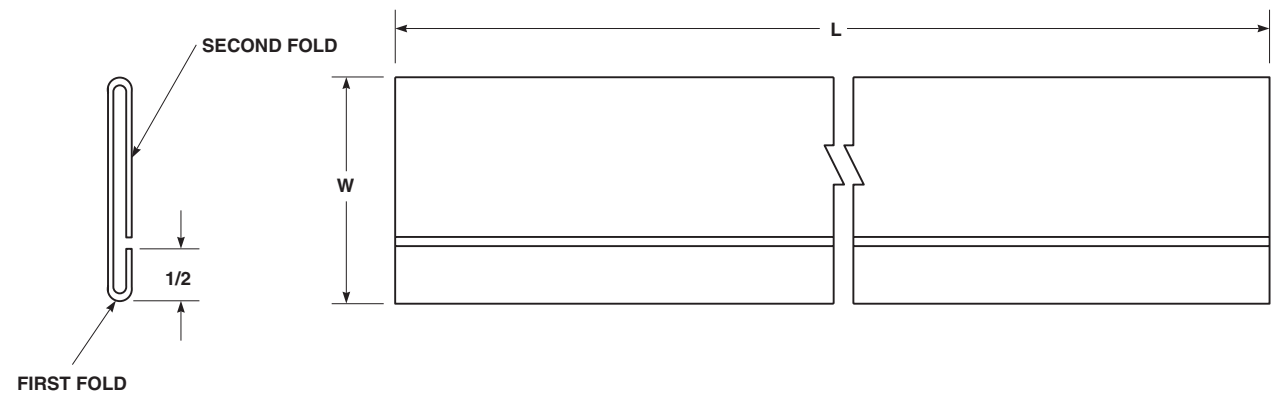

| NOMENCLATURE            | W WIDTH | L LENGTH | SIKORSKY PART NUMBER |
|-------------------------|---------|----------|----------------------|
| CONTROLS ENCLOSURE FLAP | 4.25    | 58.50    | 70500-02053-117      |
| CONTROLS ENCLOSURE FLAP | 4.25    | 50.00    | 70500-02053-118      |

NOTES


1. MAKE FROM SS9232-024 PLASTIC SHEET, NSN 9330-01-115-7085.
2. FOLD ENDS 0.50 INCH AND SEW PER FED. STD 751. USE THREAD, V-T-295, NSN 8310-00-559-5212.
3. FOLD FLAP LENGTHWISE TO 0.50 INCH AND SEW PER FED. STD 751. USE THREAD, V-T-295, NSN 8310-00-559-5212.
4. MAKE SECOND LENGTHWISE FOLD TO BUTT AGAINST FIRST FOLD AND SEW PER FED. STD 751. USE THREAD, V-T-295, NSN 8310-00-559-5212.
5. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
6. IDENTIFY PARTS PER MIL-STD-130.

PART NUMBER: 70500-02053-117, -118

AK1745A  
SA

Figure 114. Controls Enclosure Flap.

---

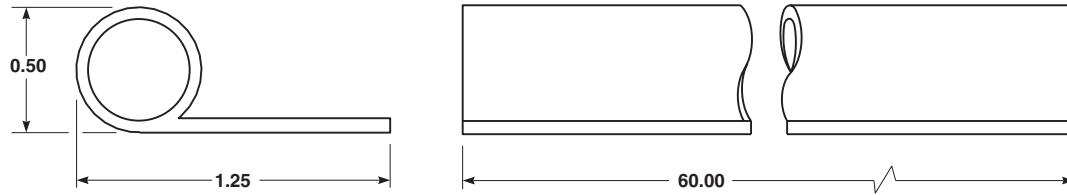**FIELD MANUFACTURE ITEMS** - Continued**NOTES**

1. MAKE FROM BULK SEAL, DIE NO. JM151-18A, FSCM 75165.
2. ALL DIMENSION ARE IN INCHES UNLESS NOTED.
3. IDENTIFY PARTS PER MIL-STD-130.


PART NUMBER: 70308-03010-105

AK1746A  
SA

Figure 115. Exhaust Fairing Bulkhead Seal.



FIELD MANUFACTURE ITEMS - Continued

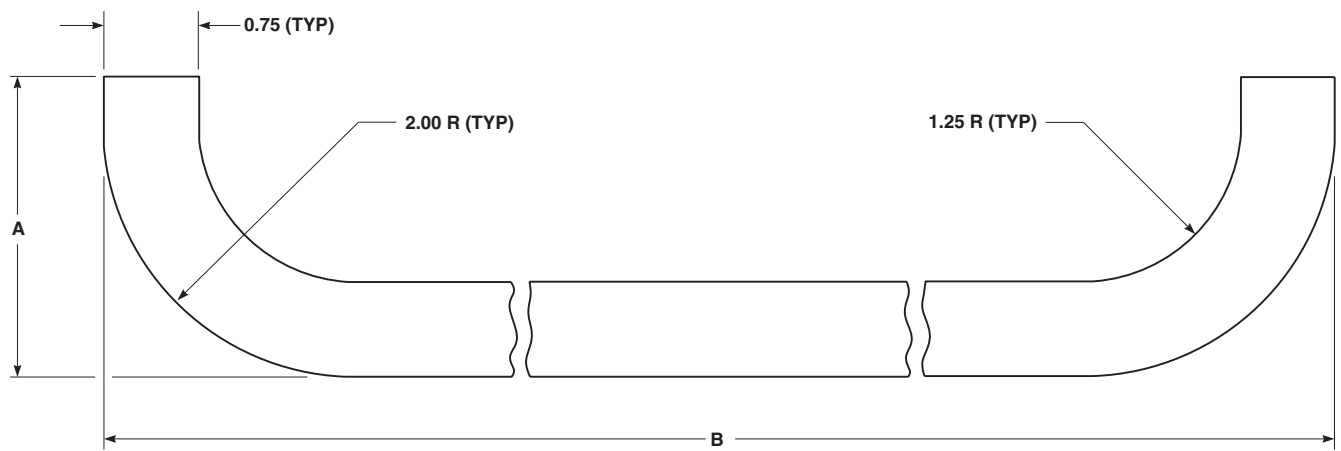

| SIKORSKY PART NUMBER | DIMENSION A | DIMENSION B |
|----------------------|-------------|-------------|
| 70500-02059-155      | 2.50        | 28.00       |
| 70500-02059-160      | 2.37        | 28.00       |

NOTES

- 1. MAKE FROM 0.125 INCH THICK FOAM RUBBER SHEET, SCE-11L, MIL-STD-670, NSN 9320-01-154-2225.
- 2. USE TWO PIECES TO MAKE 0.125.
- 3. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
- 4. CUT GASKET TOPS TO SIZE PER CHART.
- 5. IDENTIFY PARTS PER MIL-STD-190. STAMP OR STENCIL PART NUMBER AND DATE OF MANUFACTURE ON PARTS WITH OPAQUE GREEN INK, TT-I-1795. USE 1/16 TO 1/8 INCH HIGH SANS SERIF CHARACTERS.


EXAMPLE: P/N 70216-02401-107      3Q 86  
PART NUMBER      THIRD QUARTER 1986

PART NUMBER: 70500-02059-155, -160

AK1747A  
SA

Figure 116. Gasket Top.

## FIELD MANUFACTURE ITEMS - Continued

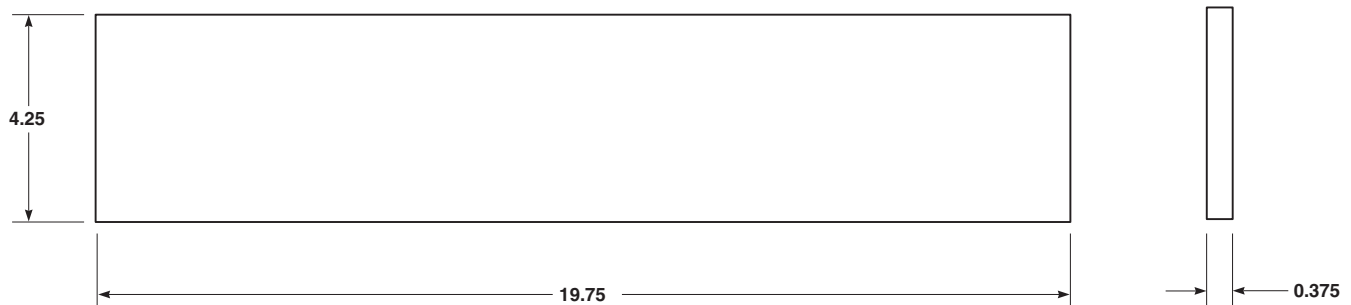

## NOTES

1. MAKE FROM 0.375 INCH THICK RUBBER, TYPE 2, GRADE A MEDIUM, MIL-R-6130, NSN 5330-00-232-2420.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. IDENTIFY PARTS PER MIL-STD-190. STAMP OR STENCIL PART NUMBER AND DATE OF MANUFACTURE ON PARTS WITH OPAQUE GREEN INK, TT-I-1795. USE 1/16 TO 1/8 INCH HIGH SANS SERIF CHARACTERS.


EXAMPLE: P/N 70216-02401-107 3Q 86  
                     PART NUMBER      THIRD QUARTER 1986

PART NUMBER: 70700-20426-118

AK1748A  
SA

Figure 117. Tail Rotor Adapter Pad.

## FIELD MANUFACTURE ITEMS - Continued

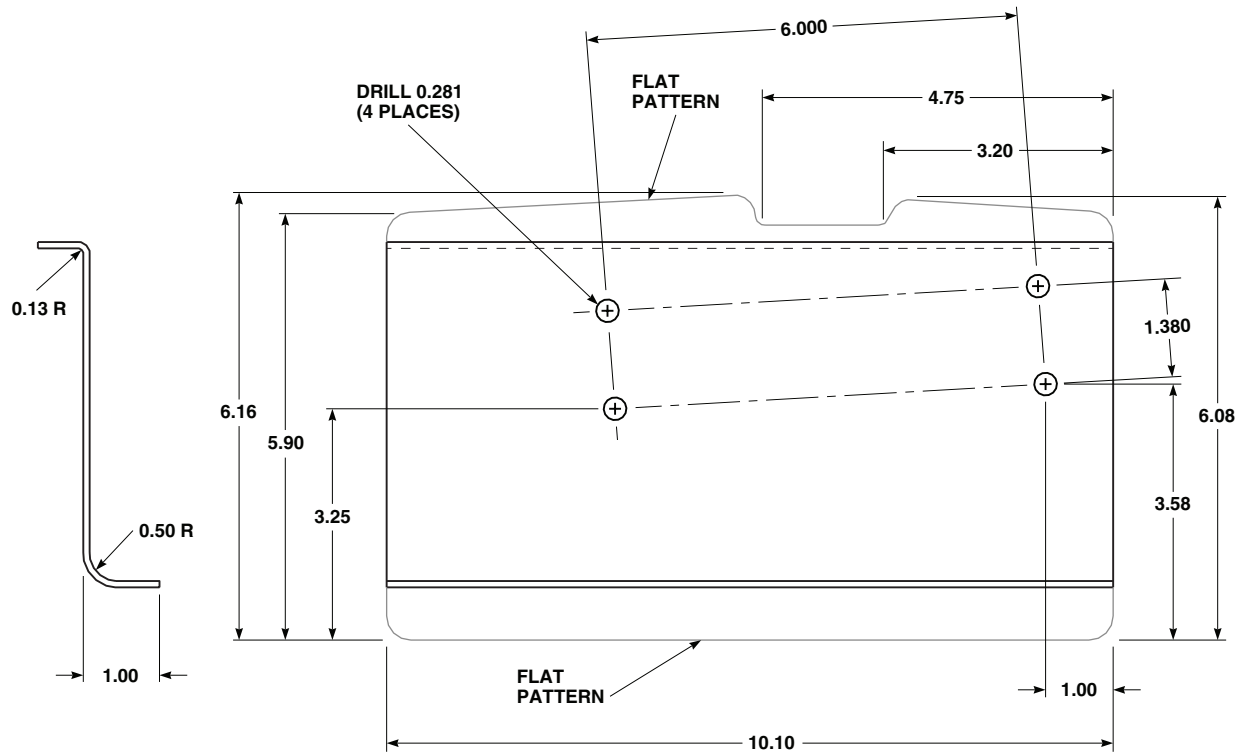

## NOTES


1. MAKE FROM 0.040 INCH THICK ALUMINUM SHEET, 7075-0, QQ-A-250 / 13, NSN 9535-00-084-4581.
2. ROUND ALL EXTERNAL CORNERS TO 0.280 INCH RADIUS, AND ALL INTERNAL CORNERS TO 0.16 INCH RADIUS.
3. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
4. IDENTIFY PARTS PER MIL-STD-130.

PART NUMBER: 70500-02053-116

AK1751A  
SA

Figure 118. Controls Enclosure Support.

## FIELD MANUFACTURE ITEMS - Continued

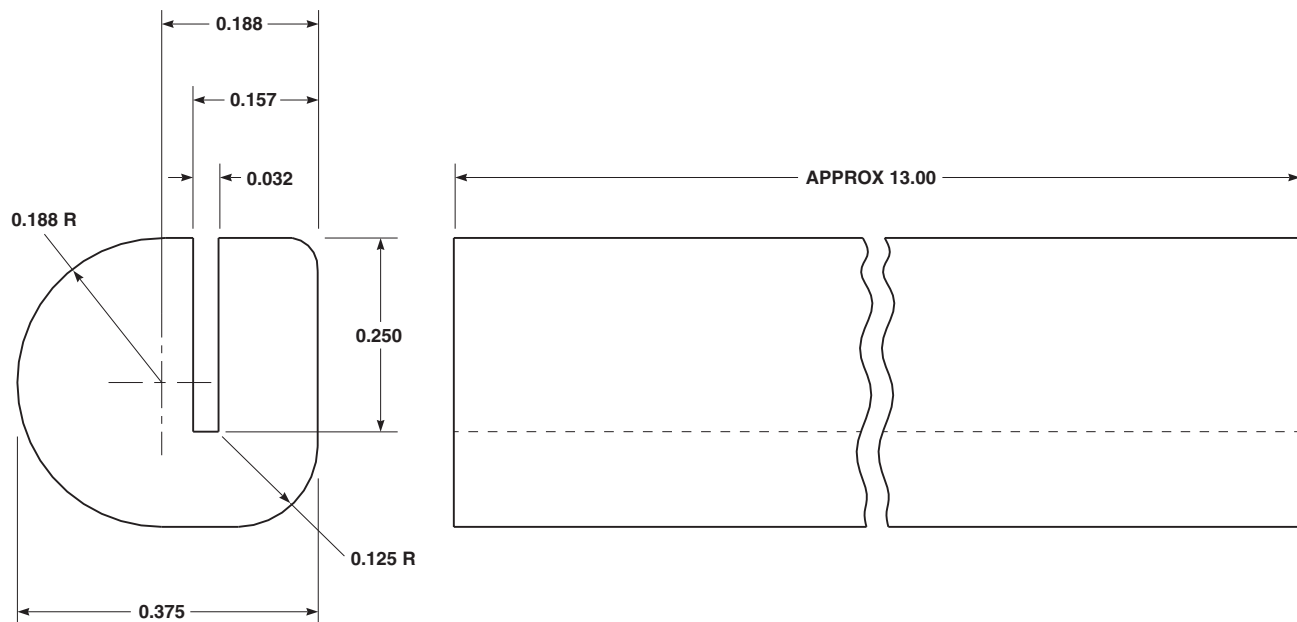

## NOTES

1. MAKE FROM SS2929-120 MOLDED SYNTHETIC CELLULAR SPONGE EDGING, MIL-R-6130, FSCM 78286.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. IDENTIFY PARTS PER MIL-STD-190. STAMP OR STENCIL PART NUMBER AND DATE OF MANUFACTURE ON PARTS WITH OPAQUE GRAY INK, TT-I-1795. USE 1/16 TO 1/8 INCH HIGH SANS SERIF CHARACTERS.
4. TRIM TO FIT ON INSTALLATION.


EXAMPLE: P/N 70216-02401-107 3Q 86  
 PART NUMBER THIRD QUARTER 1986

PART NUMBER: 70500-02058-167

AK1752A  
 SA

Figure 119. Sidewall Duct Seal.

FIELD MANUFACTURE ITEMS - Continued

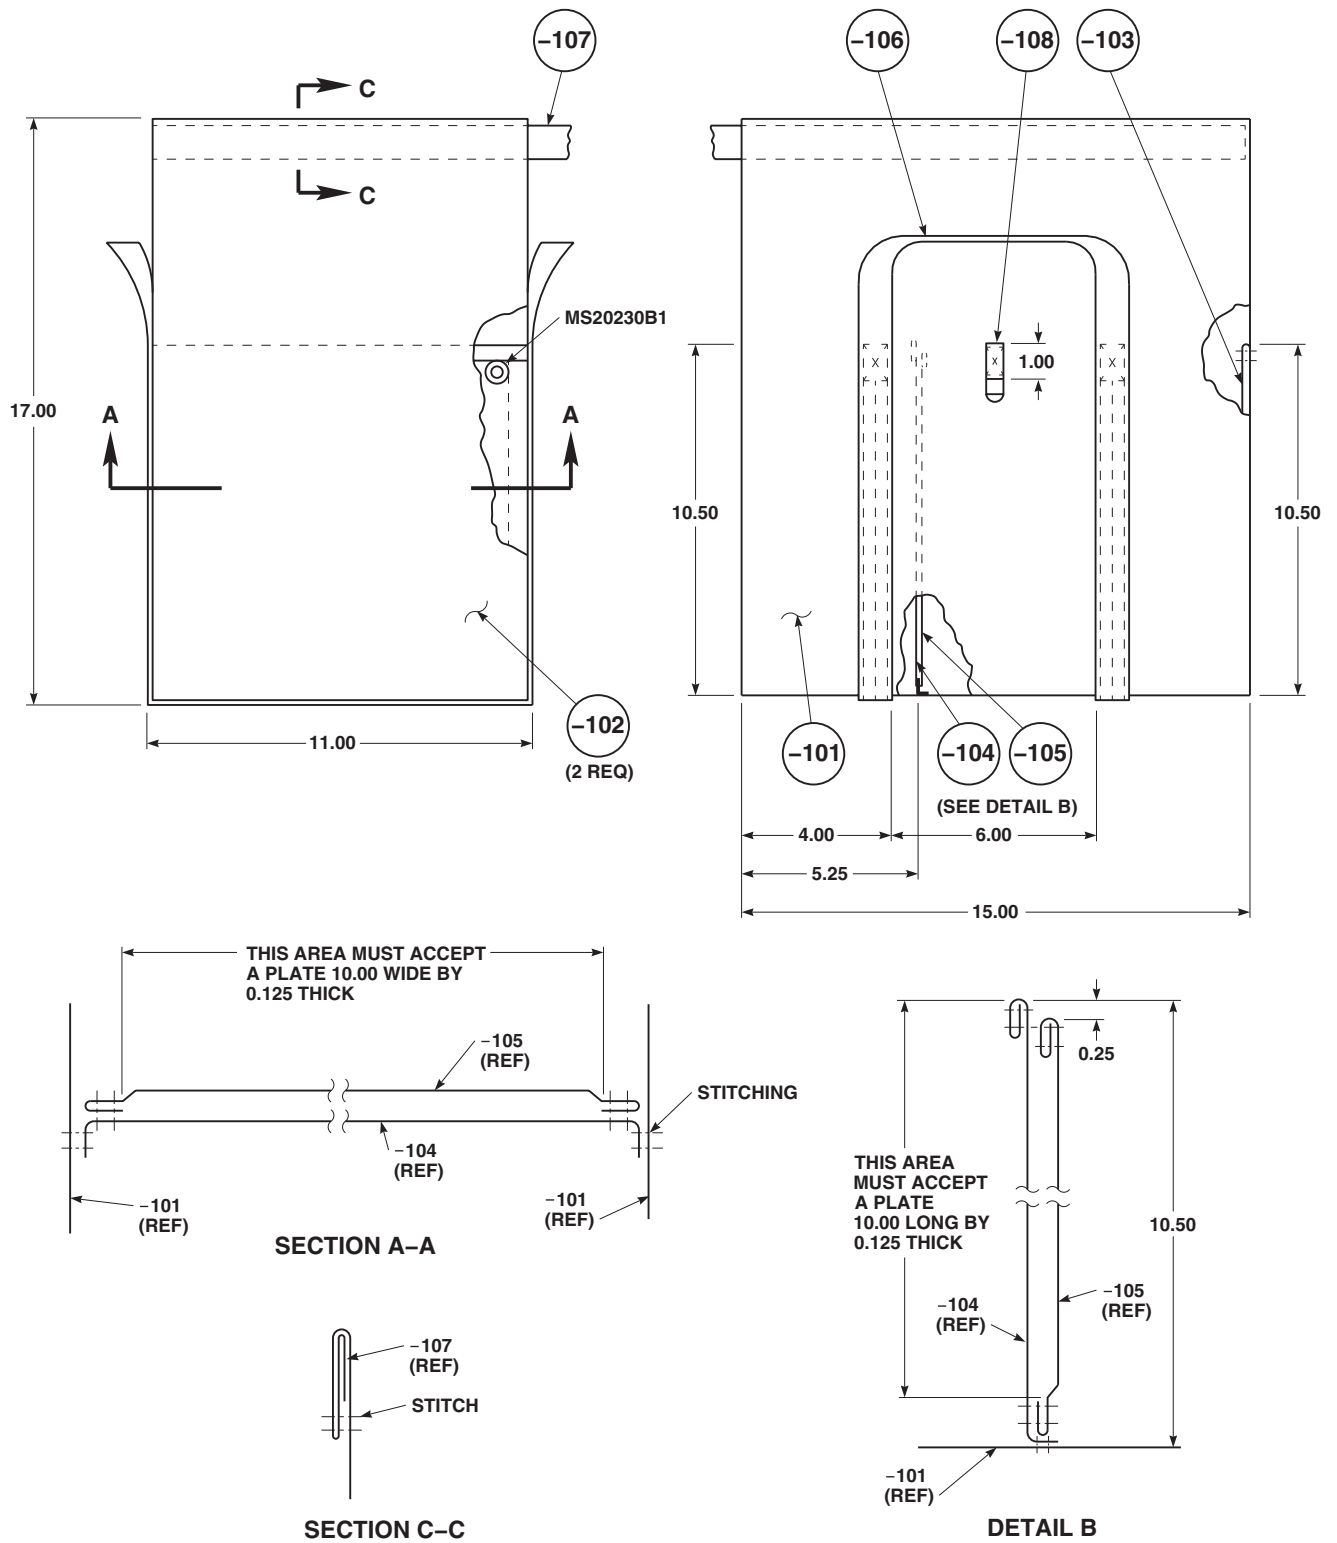

AK1753\_1A  
SA

Figure 120. Storage Bag. (Sheet 1 of 2)

## FIELD MANUFACTURE ITEMS - Continued

| NOMENCLATURE  | PART NUMBER     | QTY | MATERIAL AND SPECIFICATION |
|---------------|-----------------|-----|----------------------------|
| PANEL         | 70700-20325-101 | 1   | (SEE NOTES 1, 6, 8)        |
| END PANEL     | 70700-20325-102 | 2   | (SEE NOTES 1, 6, 8)        |
| REINFORCEMENT | 70700-20325-103 | 1   | (SEE NOTES 1, 6)           |
| PANEL         | 70700-20325-104 | 1   | (SEE NOTES 1, 6)           |
| POCKET        | 70700-20325-105 | 1   | (SEE NOTES 1, 6)           |
| STRAP         | 70700-20325-106 | 1   | (SEE NOTES 2, 6)           |
| TIE           | 70700-20325-107 | 1   | (SEE NOTES 3, 6)           |
| TAPE          | 70700-20325-108 | 1   | (SEE NOTES 4, 6)           |
| GROMMET       | MS20230B1       | 1   | (SEE NOTE 7)               |
| THREAD        | V-T-276         | FT  | (SEE NOTES 6, 8)           |


## NOTES

1. MAKE 70700-20325-101, -102, -103, -104, -105 FROM 10-OUNCE COTTON DUCK, COLOR OLIVE DRAB. NSN 8305-00-170-3449.
2. MAKE 70700-20325-106, FROM 1.00 INCH WIDE BY 94.00 INCH LONG COTTON WEBBING, TYPE I, MIL-W-5665, COLOR OLIVE DRAB. NSN 8305-00-281-3315.
3. MAKE 70700-20325-107, FROM 1.00 INCH WIDE BY 60.00 INCH LONG COTTON WEBBING, TYPE I, MIL-W-5665, COLOR OLIVE DRAB. NSN 8305-00-281-3315.
4. MAKE 70700-20325-108, FROM 0.562 INCH WIDE BY 0.04 TO 0.05 INCH THICK COTTON WEBBING, TYPE I, COLOR OLIVE DRAB. NSN 8305-00-753-6341.
5. ALL FOLDS BEFORE SEWING TO BE AT LEAST 0.50 INCH.
6. ALL SEWING TO BE PER FED. STD 751 USING THREAD, V-T-276, TICKET NO. 16, 4 PLY COTTON. COLOR, OLIVE DRAB. NSN 8310-00-262-2551.
7. INSTALL GROMMET, NSN 5325-00-291-0275, ON REINFORCEMENT AS SHOWN IN FIGURE PER MIL-S-8512.
8. SEW PANEL AND END PANELS ON WRONG SIDE AND REVERSE FOR END PRODUCT.
9. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.

AK1753\_2A  
SA

Figure 120. Storage Bag. (Sheet 2 of 2)

## FIELD MANUFACTURE ITEMS - Continued

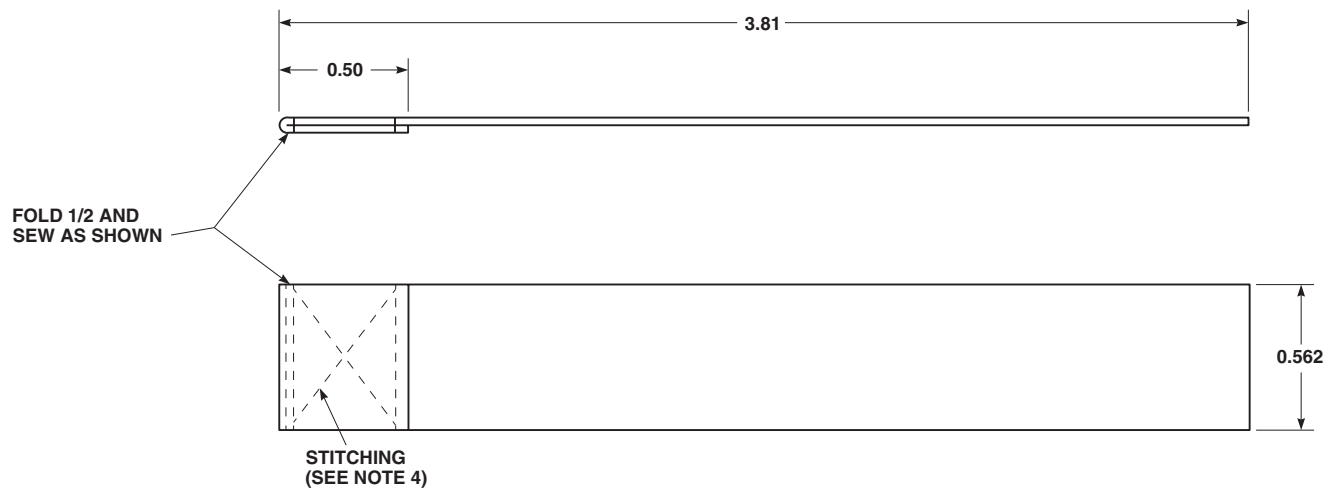

## NOTES


1. MAKE FROM 0.562 INCH WIDE NYLON WEBBING, TYPE 1A, MIL-W-4088, COLOR GRAY (FSCM 81349).
2. CUT LENGTH TO 4.312 INCHES.
3. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
4. FOLD AND SEW TAB AS SHOWN IN FIGURE. STITCHING TO BE PER FED. STD 751, USING V-T-295 NYLON THREAD, COLOR GRAY, NSN 9320-00-202-1935.
5. IDENTIFY PARTS PER MIL-STD-130.

PART NUMBER: 70500-03050-130


AK1754A  
SA

Figure 121. Blanket Assembly Tab.


FIELD MANUFACTURE ITEMS - Continued

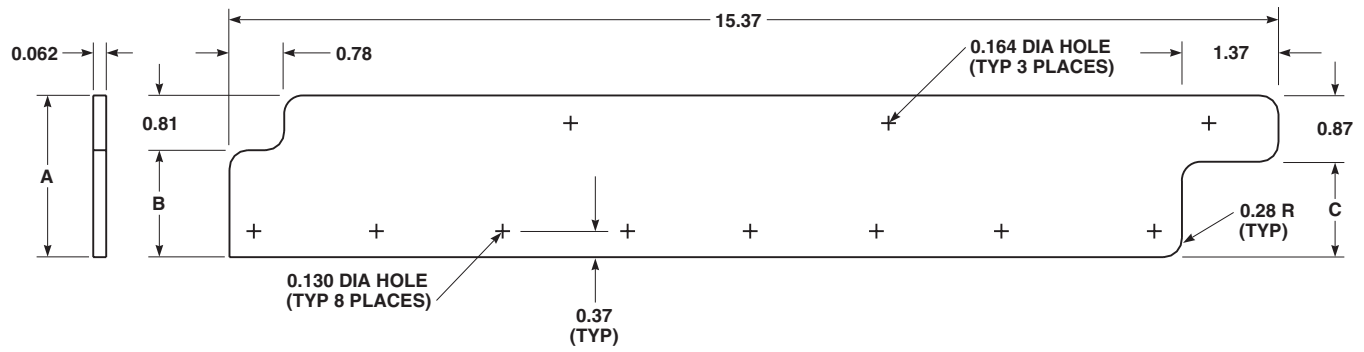


-192 -207

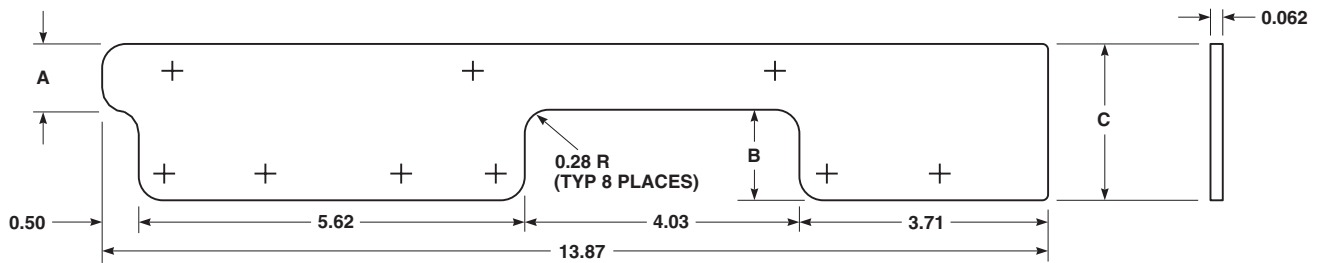

-193 -208

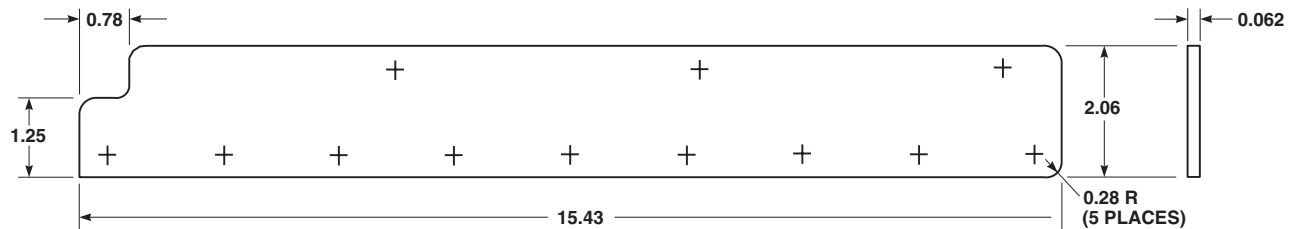

-143

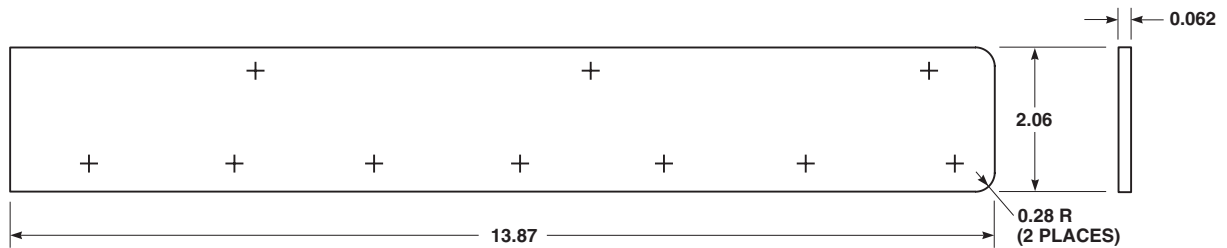

-145

AK1755\_1A  
SA

Figure 122. Drip Pan Seal. (Sheet 1 of 2)



## FIELD MANUFACTURE ITEMS - Continued

| SIKORSKY<br>PART NUMBER | DIMENSION A | DIMENSION B | DIMENSION C |
|-------------------------|-------------|-------------|-------------|
| 70500-02060-192         | 2.05        | 1.24        | 1.18        |
| 70500-02060-193         | 2.23        | 1.42        | 1.36        |
| 70500-02060-207         | 0.88        | 1.17        | 2.05        |
| 70500-02060-208         | 0.88        | 1.35        | 2.23        |

## NOTES

1. MAKE -192, -193, -207, -208, -143, -145, FROM 0.062 INCH THICK NITRILE RUBBER SHEET, CLASS 1, GRADE 60, MIL-R-6855, NSN 9320-00-241-9742.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. MAKE SEALS PER FIGURE AND DIMENSIONS IN CHART.
4. FASTENER HOLES ARE PICKED UP ON ASSEMBLY.
5. IDENTIFY PARTS PER MIL-STD-190. STAMP OR STENCIL PART NUMBER AND DATE OF MANUFACTURE ON PARTS WITH OPAQUE YELLOW INK, TT-I-1795. USE 1/16 TO 1/8 INCH HIGH SANS SERIF CHARACTERS.


EXAMPLE: P/N 70216-02401-107      3Q 86  
                     PART NUMBER      THIRD QUARTER 1986

PART NUMBER: 70500-02060-192, -193, -207, -208, -143, -145

AK1755\_2A  
SA

Figure 122. Drip Pan Seal. (Sheet 2 of 2)

## FIELD MANUFACTURE ITEMS - Continued

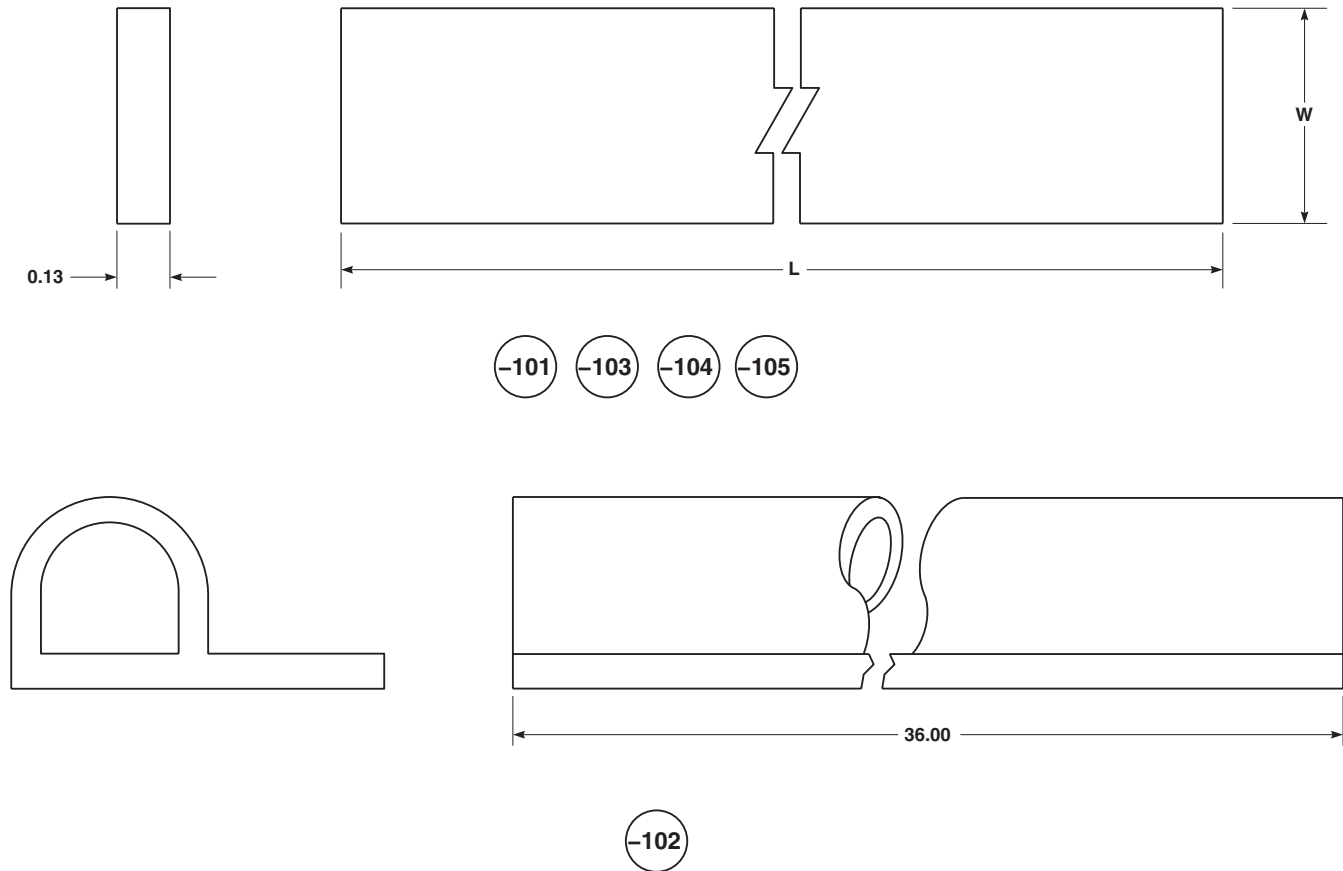

| NOMENCLATURE            | W WIDTH | L LENGTH | SIKORSKY<br>PART NUMBER |
|-------------------------|---------|----------|-------------------------|
| COCKPIT DOOR JAMB SEALS | 0.50    |          | 70000-00550-101         |
|                         | 0.062   | 36.0     | 70000-00550-102         |
|                         | 0.062   | 78.0     | 70000-00550-103         |
|                         | 0.062   | 10.0     | 70000-00550-104         |
|                         |         |          | 70000-00550-105         |

## NOTES

1. MAKE -101, -103, -104, -105 FROM 0.13 INCH THICK RUBBER, SCE-7, MIL-STD-670, 5330-01-492-3384.
2. MAKE -102 FROM NO. ZX-10047 RUBBER EXTRUSION, CAGE 76385, CUT TO LENGTH, NSN 5330-01-208-3761.
3. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
4. IDENTIFY PARTS PER MIL-STD-190. STAMP OR STENCIL PART NUMBER AND DATE OF MANUFACTURE ON PARTS WITH OPAQUE GREEN INK, TT-I-1795. USE 1/16 TO 1/8 INCH HIGH SANS SERIF CHARACTERS.


EXAMPLE: P/N 70216-02401-107      3Q 86  
                     PART NUMBER      THIRD QUARTER 1986

PART NUMBER: 70000-00550-101, THROUGH -105

AB3756  
SA

Figure 123. Cockpit Door Jamb Seals.

## FIELD MANUFACTURE ITEMS - Continued

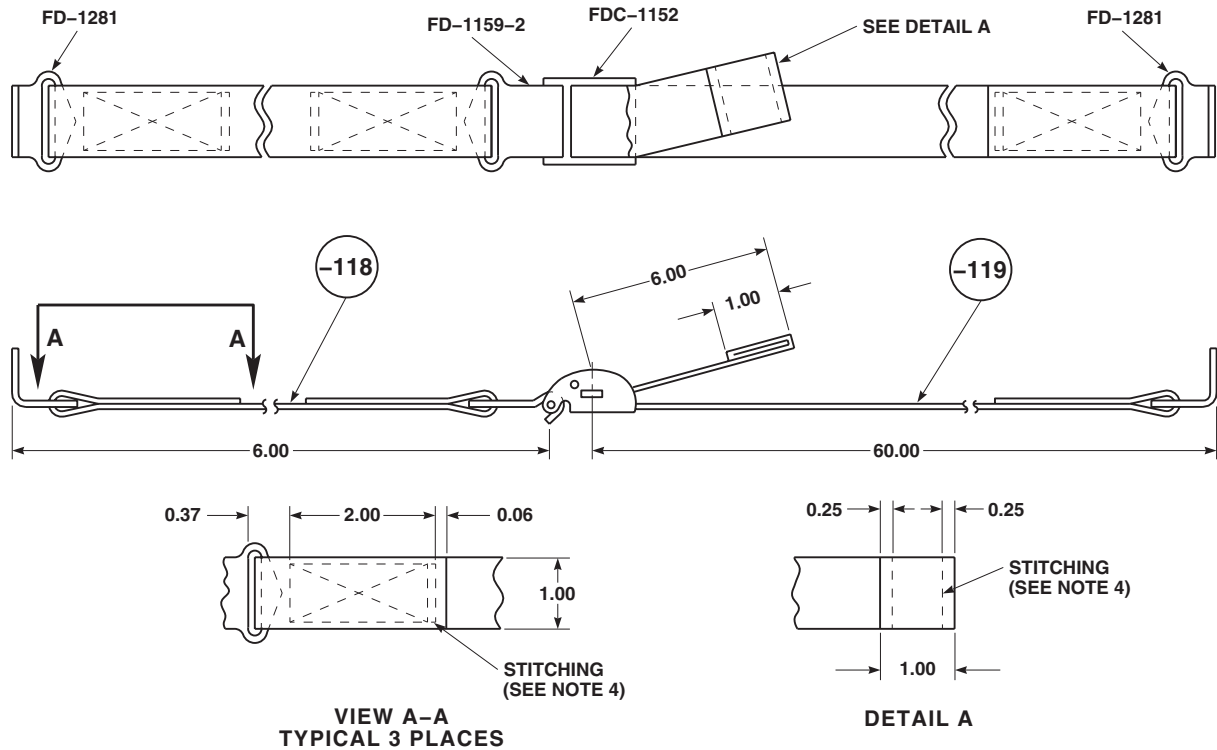

| PART NUMBER                      | DESCRIPTION          | QUANTITY | NSN              |
|----------------------------------|----------------------|----------|------------------|
| FD-1281                          | FITTING              | 2        | 6760-01-088-0003 |
| 70700-20313-118                  | STRAP                | 9.75 IN. | 8315-00-263-3604 |
| FD-1159-2                        | HOOK                 | 1        | 5340-00-802-6886 |
| FDC-1152                         | BUCKLE               | 1        | 5340-01-079-6667 |
| 70700-20313-119                  | STRAP                | 69.5 IN. | 8315-00-263-3604 |
| V-T-276, TYPE 1B3, TICKET NO. 16 | THREAD, 4-PLY COTTON | AR       | 8310-00-530-1182 |

## NOTES



1. MAKE -118 STRAP PER FIGURE AND MATERIAL LISTED IN CHART. ASSEMBLE STRAP WITH LISTED FITTING AND HOOK TO MAKE -050 STRAP ASSEMBLY.
2. MAKE -119 STRAP PER FIGURE AND MATERIAL LISTED IN CHART. ASSEMBLE STRAP WITH LISTED FITTING AND BUCKLE TO MAKE -046 BUCKLE ASSEMBLY.
3. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
4. SEW STRAPS AS SHOWN IN VIEW A-A AND DETAIL A. STITCHING TO BE PER FED. STD 751, USING V-T-276 THREAD AS LISTED IN CHART.
5. IDENTIFY PARTS PER MIL-STD-130.

PART NUMBER: 70700-20313-118, -119


AK1759A  
SA

Figure 124. Storage Frame Strap.

## FIELD MANUFACTURE ITEMS - Continued

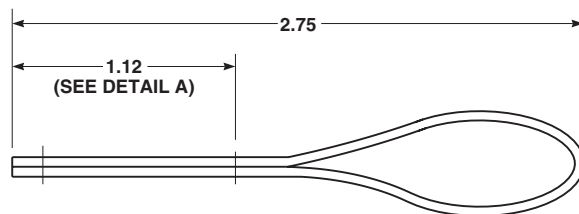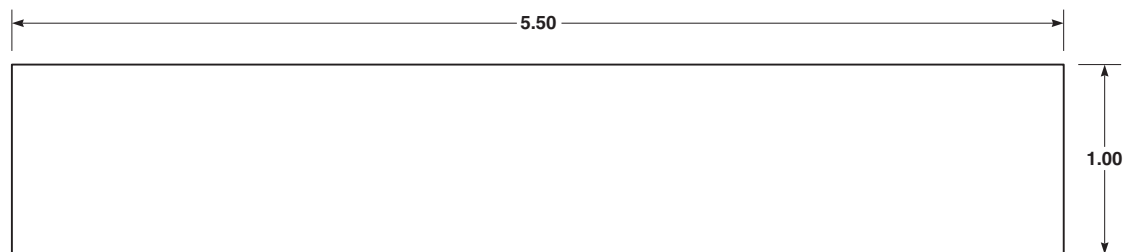

STRAP FOLDED

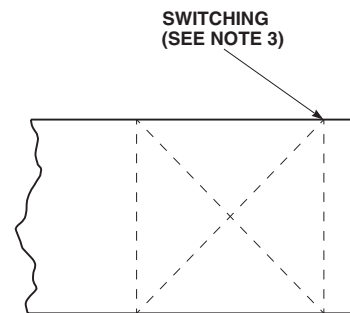

DETAIL A

## NOTES


1. MAKE FROM TYPE II, BLACK NYLON TAPE, MIL-W-4088, NSN 8305-00-811-1617.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. FOLD AND SEW TAB TO CURTAIN, AS SHOWN, STITCHING TO BE PER FED-STD-751, USING V-T-295, SIZE E, TYPE I, CLASS A, NYLON THREAD, NSN 8310-00-515-3367.
4. IDENTIFY PARTS PER MIL-STD-130.

PART NUMBER: 70700-20014-110

AK1760A  
SA

Figure 125. Curtain Tab.

FIELD MANUFACTURE ITEMS - Continued

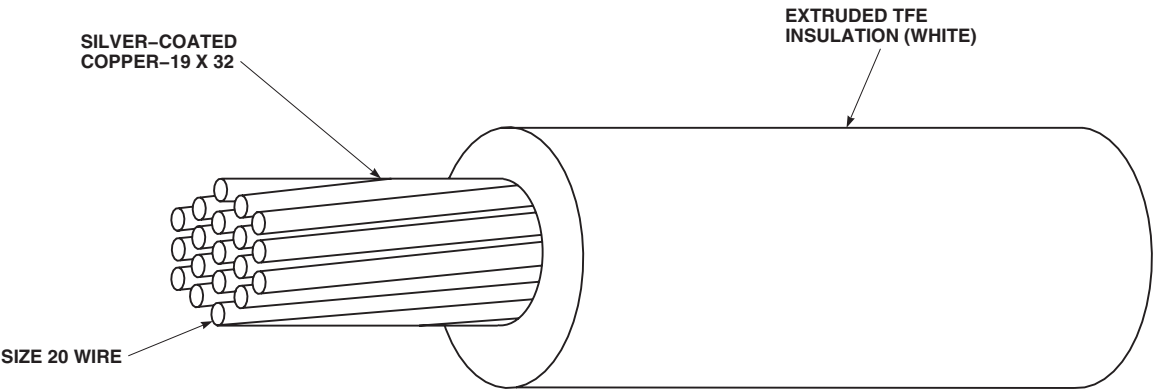

| SIKORSKY PART NUMBER | SIZE | MAKE FROM PART NUMBER | MAKE FROM NSN    |
|----------------------|------|-----------------------|------------------|
| SS7313-20A1          | 20   | M22759 / 11-20-9      | 6145-00-939-4964 |

NOTES




- 1. MAKE FROM SILVER-COATED COPPER WIRE PER CHART.
- 2. CUT WIRE TO REQUIRED LENGTH.
- 3. IDENTIFY PARTS PER MIL-STD-130.

PART NUMBER: SS7313-20A1

AK1761  
SA

Figure 126. High-Temperature Electrical Wire.

## FIELD MANUFACTURE ITEMS - Continued

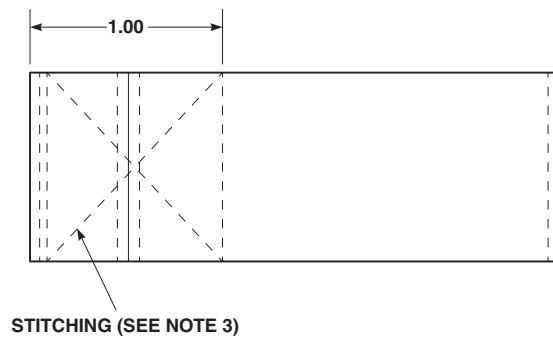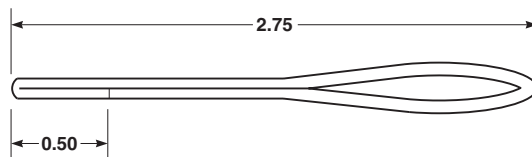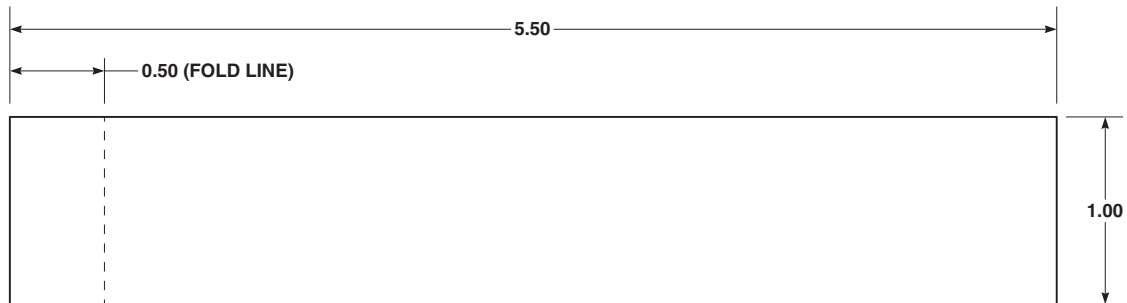

## NOTES

1. MAKE FROM 1.00 INCH WIDE BLACK NYLON TAPE, TYPE II, MIL-W-4088, NSN 8305-00-811-1617.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. FOLD AND SEW TAB AS SHOWN IN FIGURE. STITCHING TO BE PER FED. STD 751 USING V-T-295C THREAD, NSN 8310-00-515-3367.
4. IDENTIFY PARTS PER MIL-STD-130.

PART NUMBER: 70070-20013-106

AK1762A  
SA

Figure 127. Curtain Tab.

FIELD MANUFACTURE ITEMS - Continued



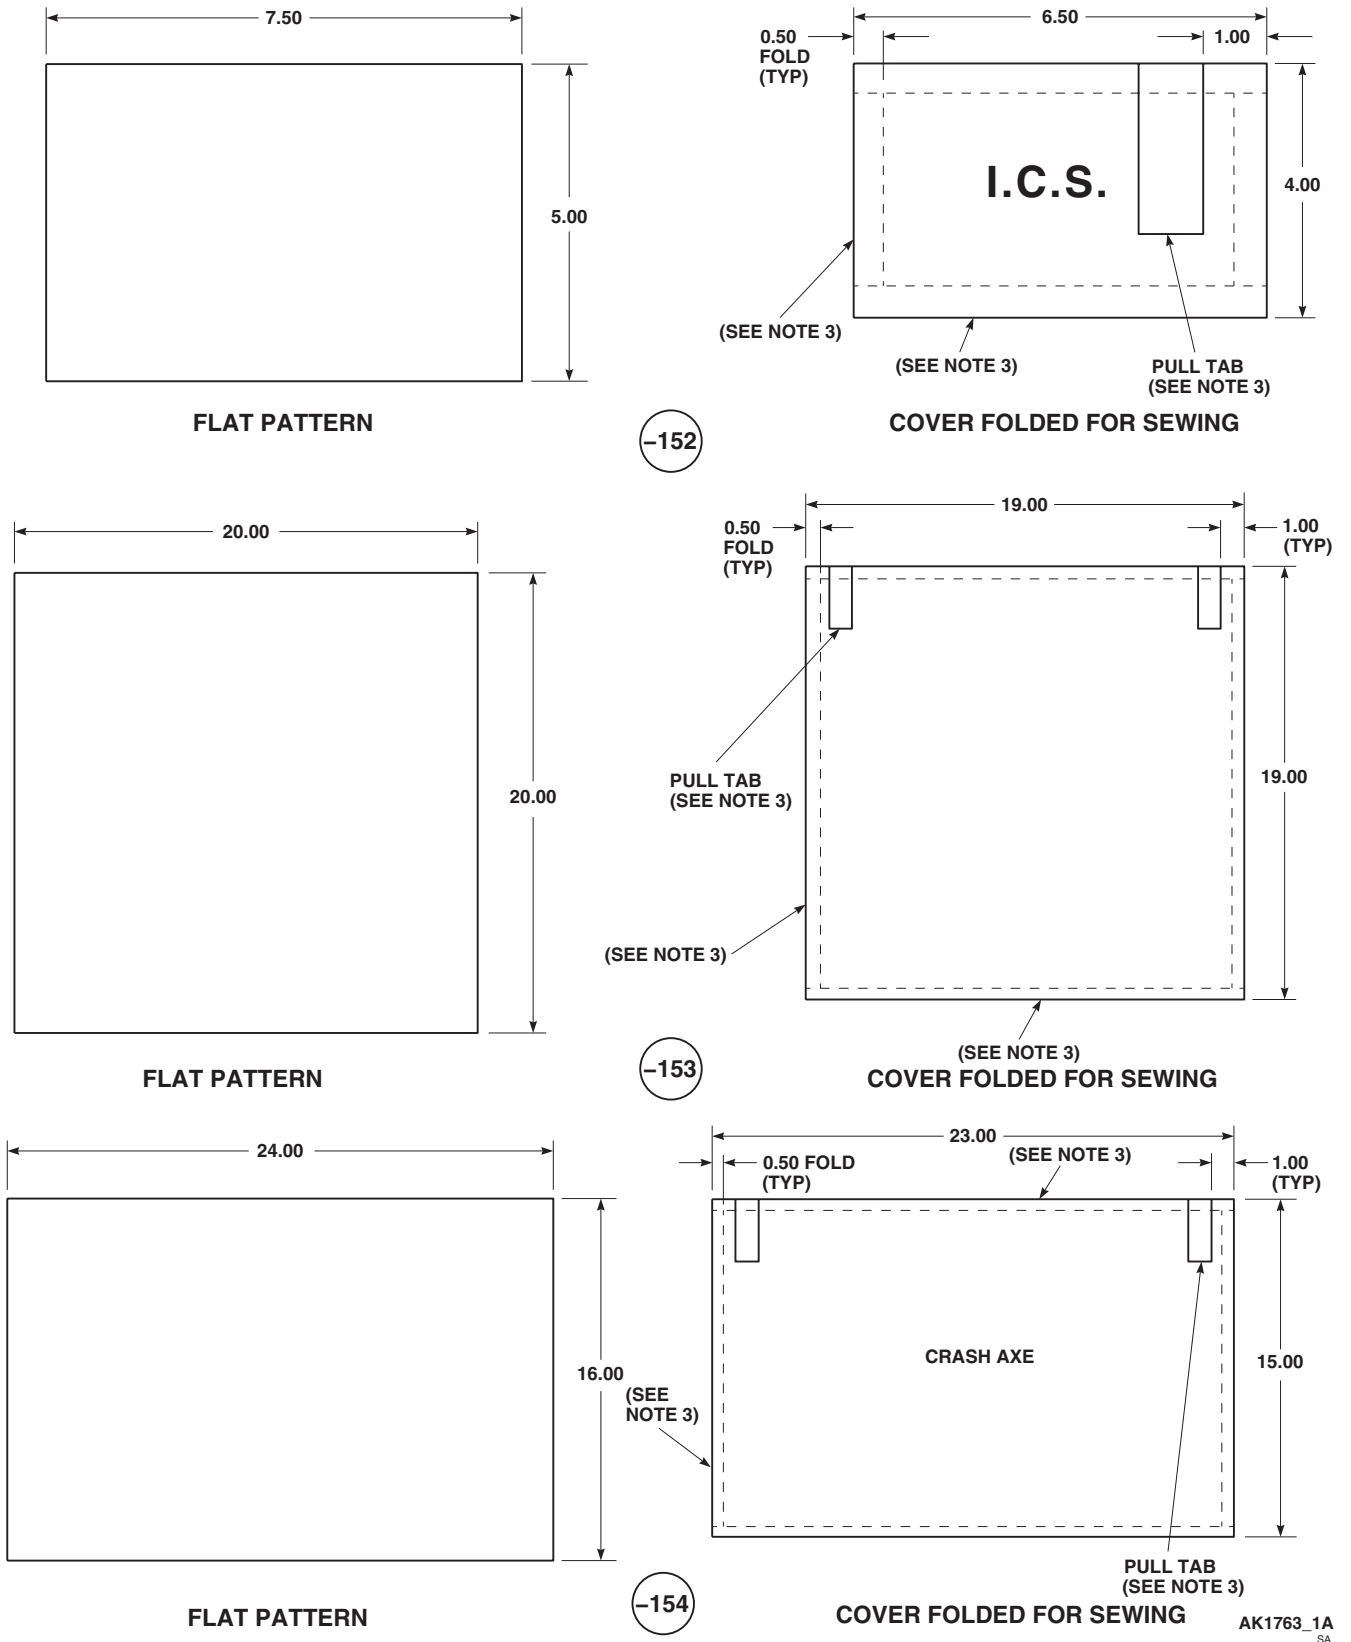


Figure 128. Blackout Curtain Cover. (Sheet 1 of 4)

FIELD MANUFACTURE ITEMS - Continued

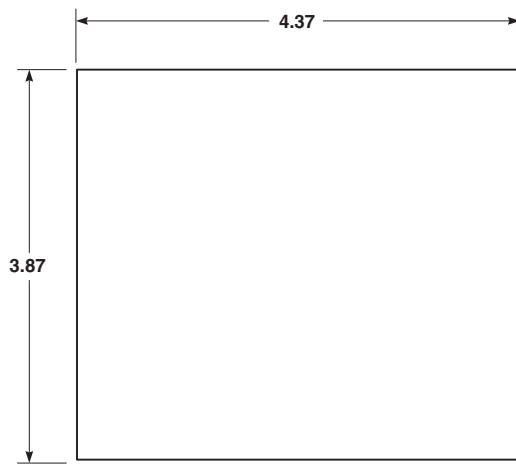


FLAT PATTERN

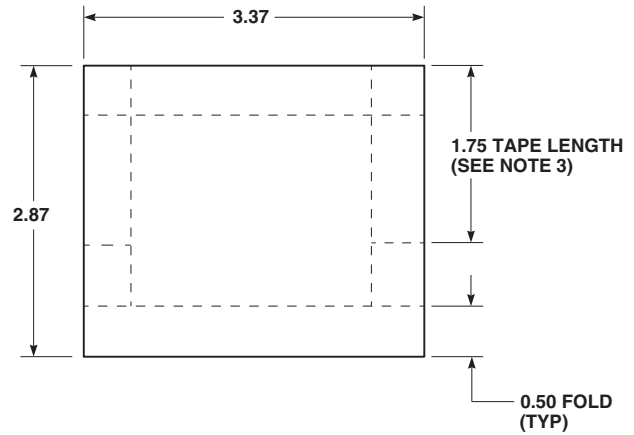


COVER FOLDED FOR SEWING

-155

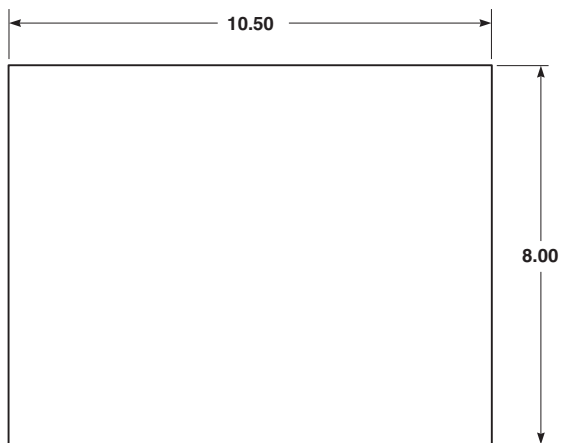

FLAT PATTERN

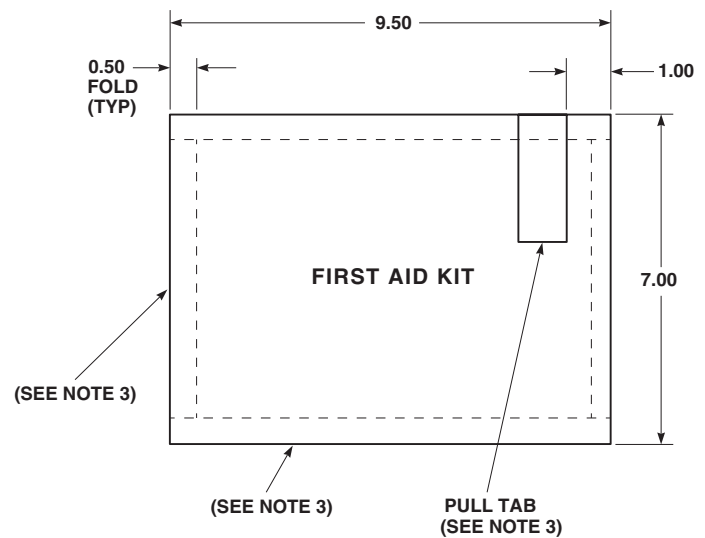



COVER FOLDED FOR SEWING

-156


Figure 128. Blackout Curtain Cover. (Sheet 2 of 4)



FIELD MANUFACTURE ITEMS - Continued

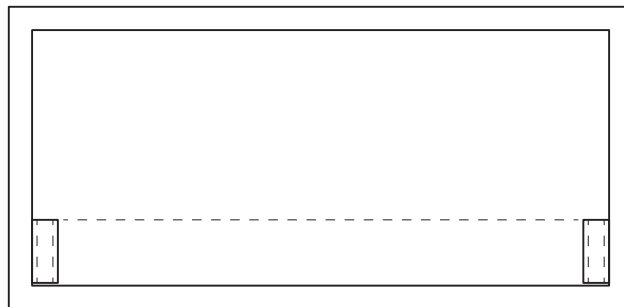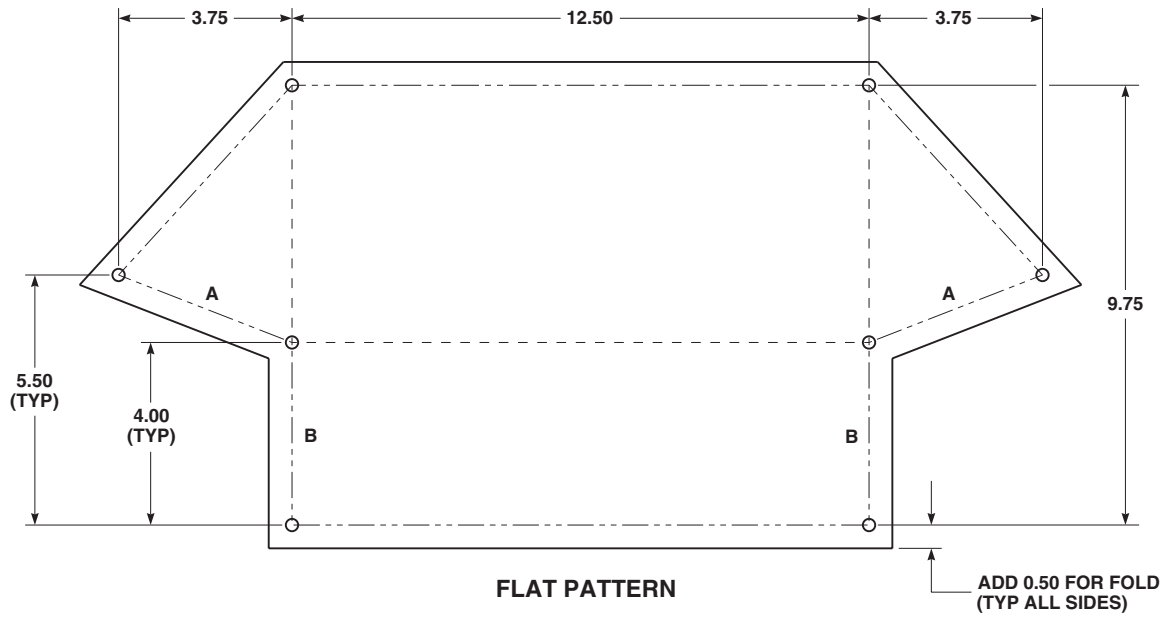

VIEW LOOKING INTO POCKET  
AFTER SEWING

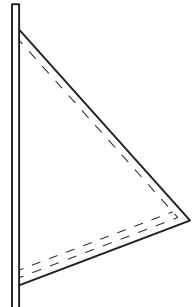

-158

AK1763\_3A  
SA

Figure 128. Blackout Curtain Cover. (Sheet 3 of 4)

1805 00-221

## FIELD MANUFACTURE ITEMS - Continued

| SIKORSKY<br>PART NUMBER        | DESCRIPTION | QUANTITY | MAKE FROM            |
|--------------------------------|-------------|----------|----------------------|
| 70070-20013-152                | COVER       | 1        | NOTE 1               |
| 70070-20013-106                | PULL TAB    | 1        | FIGURE H-127         |
| 70070-20013-116                | TAPE HOOK   | 2        | FIGURE H-133         |
| 70070-20013-118                | TAPE HOOK   | 2        | FIGURE H-133         |
| V-T-295, SIZE E, TYPE I, BLACK | THREAD      | AR       | NSN 8310-00-515-3367 |
| 70070-20013-153                | COVER       | 1        | NOTE 1               |
| 70070-20013-106                | PULL TAB    | 1        | FIGURE H-127         |
| 70070-20013-112                | TAPE HOOK   | 2        | FIGURE H-133         |
| 70070-20013-114                | TAPE HOOK   | 2        | FIGURE H-133         |
| V-T-295, SIZE E, TYPE I, BLACK | THREAD      | AR       | NSN 8310-00-515-3367 |
| 70070-20013-154                | COVER       | 1        | NOTE 1               |
| 70070-20013-106                | PULL TAB    | 2        | FIGURE H-127         |
| 70070-20013-108                | TAPE HOOK   | 2        | FIGURE H-133         |
| 70070-20013-110                | TAPE HOOK   | 1        | FIGURE H-133         |
| V-T-295, SIZE E, TYPE 1, BLACK | THREAD      | AR       | NSN 8310-00-515-3367 |
| 70070-20013-155                | COVER       | 1        | NOTE 1               |
| 70070-20013-134                | TAPE HOOK   | 2        | FIGURE H-133         |
| V-T-295, SIZE E, TYPE 1, BLACK | THREAD      | AR       | NSN 8310-00-515-3367 |
| 70070-20013-156                | COVER       | 1        | NOTE 1               |
| 70070-20013-106                | PULL TAB    | 1        | FIGURE H-127         |
| 70070-20013-120                | TAPE HOOK   | 2        | FIGURE H-133         |
| 70070-20013-122                | TAPE HOOK   | 2        | FIGURE H-133         |
| V-T-295, SIZE E, TYPE 1, BLACK | THREAD      | AR       | NSN 8310-00-515-3367 |

## NOTES


1. MAKE FROM DARK GREEN NYLON CLOTH, TYPE I, CLASS III, MIL-C-20696, NSN 8305-00-965-1654, AND ATTACHING PARTS LISTED IN CHART.
2. CUT CLOTH TO FLAT PATTERN DIMENSIONS.
3. FOLD CLOTH 1/2 INCH UNDER ON ALL SIDES. POSITION 70070-20013-116, 70070-20013-118 TAPE HOOKS, 70070-20013-106 PULL TAB ON FOLDED COVER AND SEW WITH DOUBLE ROW STITCH.
4. STITCHING TO BE PER FED. STD 751, USING V-T-295 BLACK NYLON THREAD.
5. ON AFT SIDE OF PART, BLACK INK STENCIL IN 1/2 INCH LETTERS - I.C.S.
6. IDENTIFY PARTS PER MIL-STD-130. APPLY IDENTIFICATION ON FORWARD SIDE.
7. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.

PART NUMBER: 70070-20013-152, -153, -154, -155, -156, -158

AK1763\_4A  
SA

Figure 128. Blackout Curtain Cover. (Sheet 4 of 4)

## FIELD MANUFACTURE ITEMS - Continued

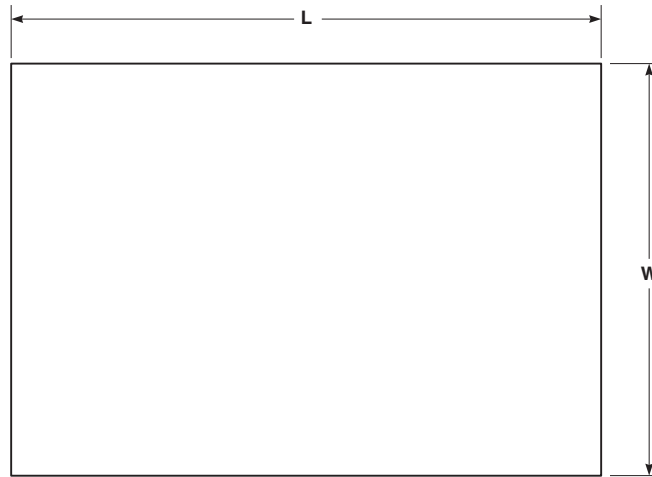

| SIKORSKY PART NUMBER | L LENGTH | W WIDTH |
|----------------------|----------|---------|
| 70500-02066-124      | 5.30     | 2.00    |
| 70500-02066-137      | 37.20    | 9.80    |
| 70500-02066-138      | 37.20    | 9.80    |
| 70500-02066-141      | 5.40     | 4.00    |
| 70500-02066-143      | 5.20     | 1.92    |
| 70500-02066-145      | 5.20     | 3.00    |
| 70500-02066-147      | 5.52     | 4.72    |
| 70500-02066-148      | 4.72     | 3.92    |
| 70500-02066-149      | 4.72     | 1.28    |
| 70500-02066-155      | 3.80     | 3.36    |
| 70500-02066-156      | 10.72    | 3.36    |
| 70500-02066-165      | 5.00     | 2.48    |
| 70500-02066-166      | 5.00     | 2.88    |
| 70500-02066-167      | 6.00     | 4.20    |
| 70500-02066-168      | 5.28     | 4.20    |
| 70500-02066-169      | 5.28     | 5.04    |
| 70500-02066-170      | 5.28     | 2.96    |
| 70500-02066-177      | 16.20    | 3.20    |
| 70500-02066-178      | 16.20    | 3.76    |
| 70500-02066-179      | 16.20    | 3.12    |
| 70500-02066-180      | 16.20    | 3.92    |
| 70500-02066-181      | 12.60    | 4.00    |
| 70500-02066-182      | 7.40     | 1.92    |
| 70500-02066-214      | 6.75     | 6.30    |
| 70500-02066-218      | 15.52    | 2.82    |
| 70500-02066-219      | 15.52    | 2.82    |
| 70500-02066-220      | 7.40     | 2.82    |
| 70500-02066-221      | 7.40     | 2.82    |
| 70500-02066-223      | 6.00     | 2.84    |

AK1769\_1  
SA

Figure 129. Foil Panel Square or Rectangular Configuration. (Sheet 1 of 2)

## FIELD MANUFACTURE ITEMS - Continued

| SIKORSKY PART NUMBER | L LENGTH | W WIDTH |
|----------------------|----------|---------|
| 70500-02066-225      | 6.00     | 2.84    |
| 70500-02066-226      | 9.95     | 2.84    |
| 70500-02066-227      | 5.94     | 2.84    |
| 70500-02066-228      | 15.14    | 5.94    |
| 70500-02066-229      | 15.14    | 5.99    |
| 70500-02066-230      | 13.80    | 5.18    |
| 70500-02066-233      | 14.42    | 5.09    |
| 70500-02066-234      | 13.85    | 5.15    |
| 70500-02066-235      | 14.77    | 5.00    |
| 70500-02066-238      | 6.72     | 5.12    |
| 70500-02066-239      | 6.72     | 4.20    |
| 70500-02066-243      | 4.28     | 4.20    |
| 70500-02066-244      | 16.12    | 5.12    |
| 70500-02066-245      | 16.12    | 3.52    |
| 70500-02066-248      | 6.35     | 1.08    |
| 70500-02066-258      | 6.30     | 2.48    |
| 70500-02066-263      | 6.34     | 6.30    |
| 70500-02066-265      | 8.50     | 6.65    |
| 70500-02066-266      | 5.15     | 1.72    |
| 70500-02066-267      | 3.14     | 2.38    |
| 70500-02066-272      | 8.32     | 5.12    |
| 70500-02066-274      | 5.60     | 4.16    |
| 70500-02066-275      | 4.16     | 1.12    |
| 70500-02066-276      | 4.80     | 3.68    |
| 70500-02066-277      | 3.68     | 3.52    |
| 70500-02066-296      | 3.52     | 3.20    |
| 70500-02066-297      | 4.80     | 4.32    |
| 70500-02066-298      | 4.32     | 2.80    |


## NOTES

1. MAKE FROM DAMPING FOIL, SJ2017X, FSCM 76381, NSN 1560-01-184-1735.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. CUT DAMPING FOIL TO RECTANGULAR DIMENSIONS.
4. MEASURE AND MARK FINAL DIMENSIONS ON FOIL.
5. TRIM TO REQUIRED SIZE. ROUND OFF CORNERS TO PREVENT DELAMINATION.  
MINIMUM RADIUS IS 0.28 INCH.
6. IDENTIFY PARTS PER MIL-STD-130.

AK1769\_2A  
SA

Figure 129. Foil Panel Square or Rectangular Configuration. (Sheet 2 of 2)

---



**FIELD MANUFACTURE ITEMS** - Continued**NOTES**

1. MAKE FROM 0.0250 1 INCH 0.301 STAINLESS STEEL.  
MIL-S-5059, USING BACKING STRIP AS TEMPLATE.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. DRILL PILOT HOLES, AS INDICATED, PER TM 1-1500-204-23.
4. IDENTIFY PARTS PER MIL-STD-130.

AA8431A  
SA

Figure 130. Backing Strip.


FIELD MANUFACTURE ITEMS - Continued

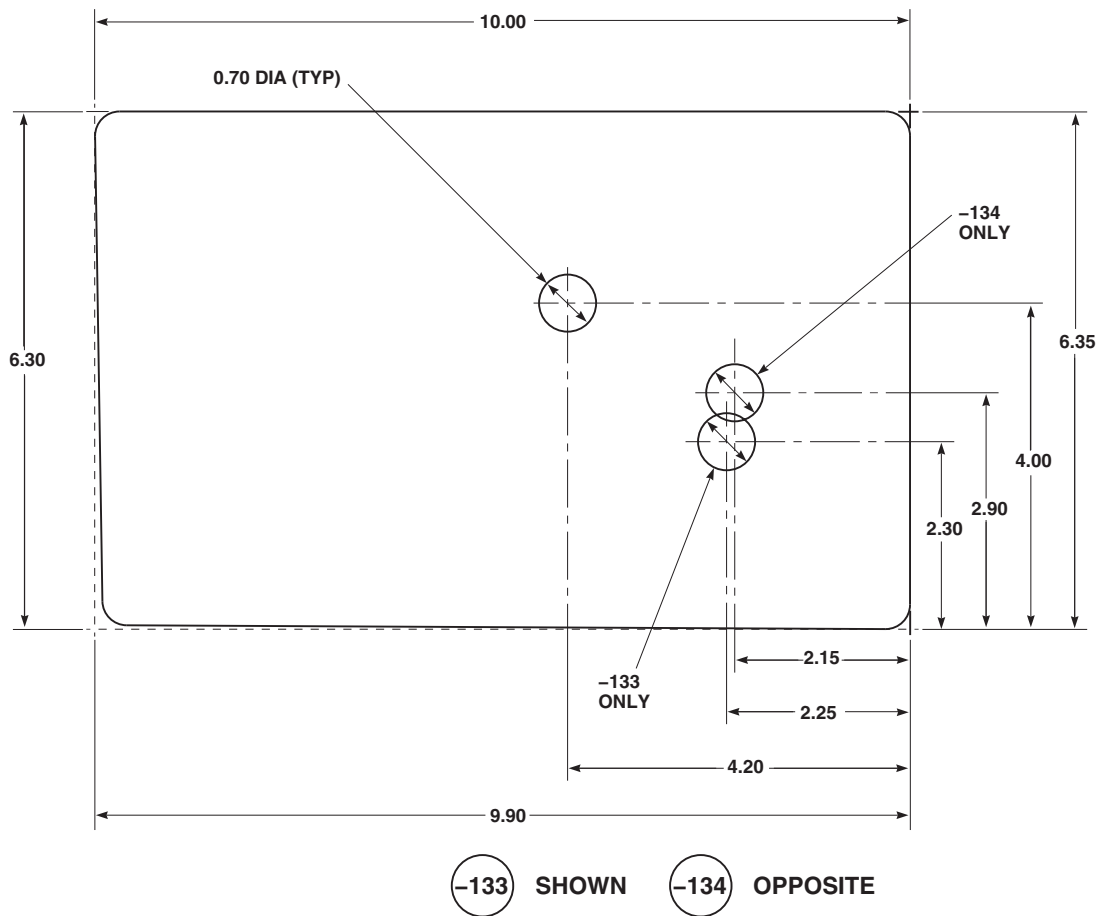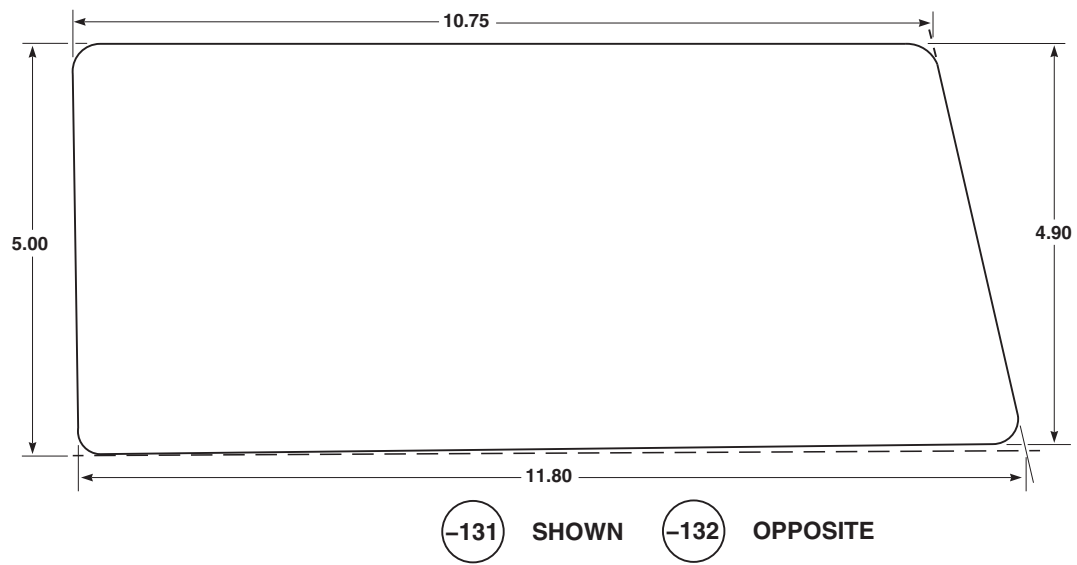


AK1770\_1A  
SA

Figure 131. Foil Panel Unusual Configuration. (Sheet 1 of 37)

FIELD MANUFACTURE ITEMS - Continued

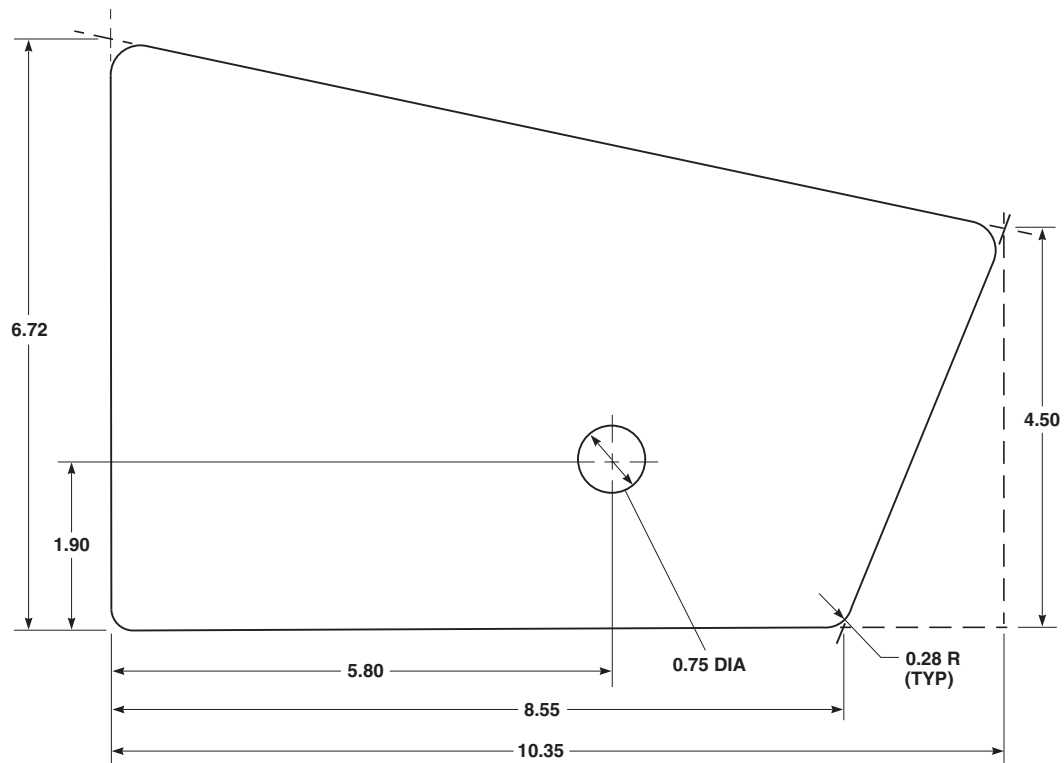

(-135) SHOWN (-136) OPPOSITE

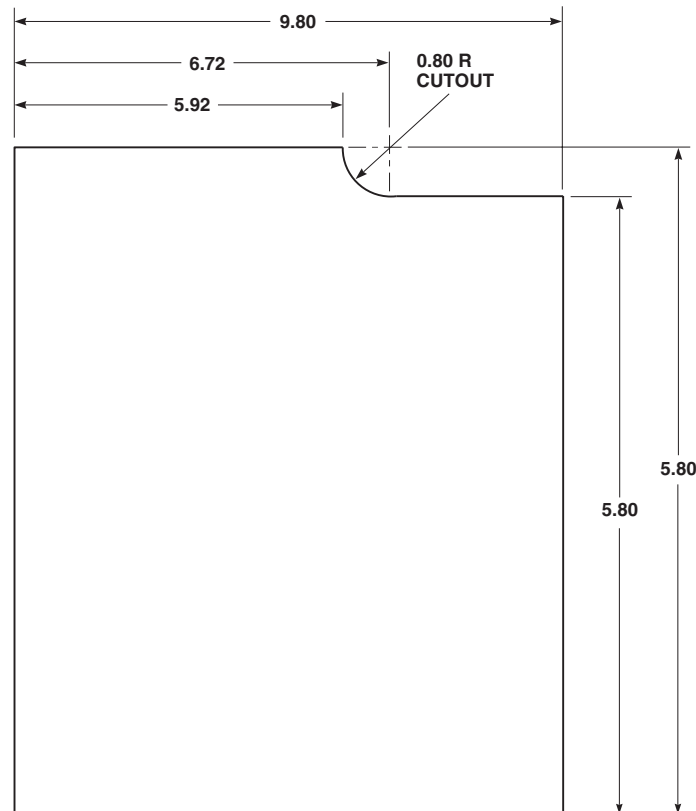


(-139) SHOWN  
(-140) OPPOSITE


AK1770\_2A  
SA

Figure 131. Foil Panel Unusual Configuration. (Sheet 2 of 37)

FIELD MANUFACTURE ITEMS - Continued

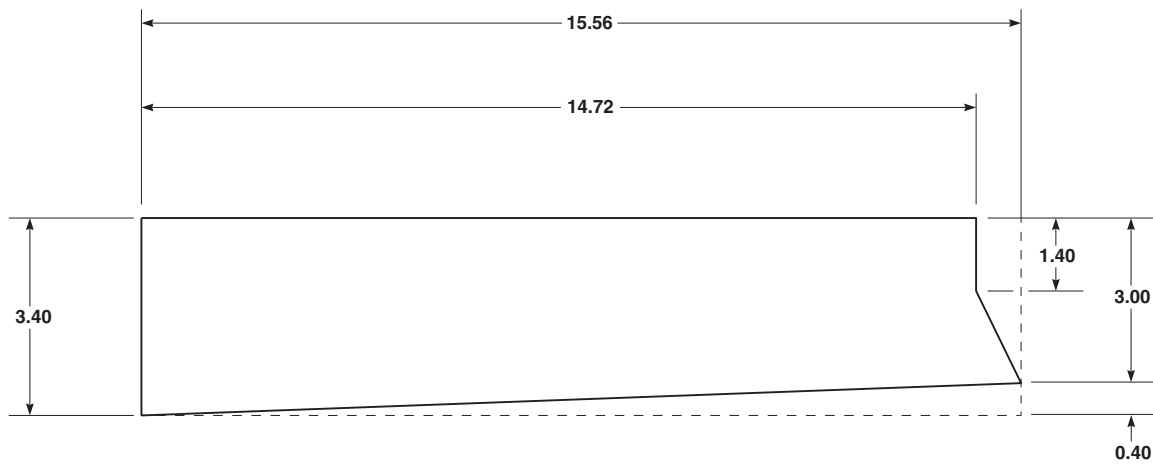

-142

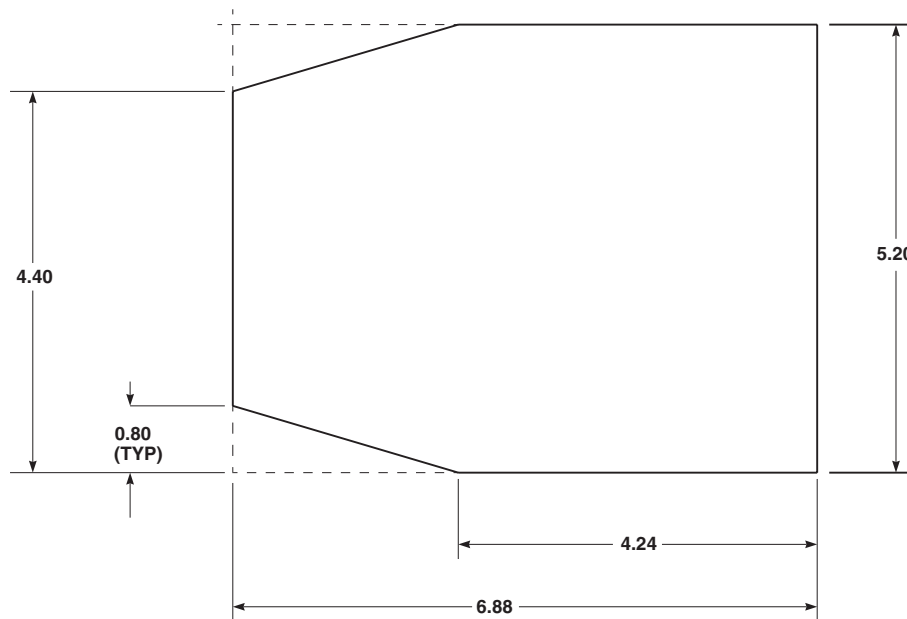


-144

AK1770\_3A  
SA

Figure 131. Foil Panel Unusual Configuration. (Sheet 3 of 37)




FIELD MANUFACTURE ITEMS - Continued

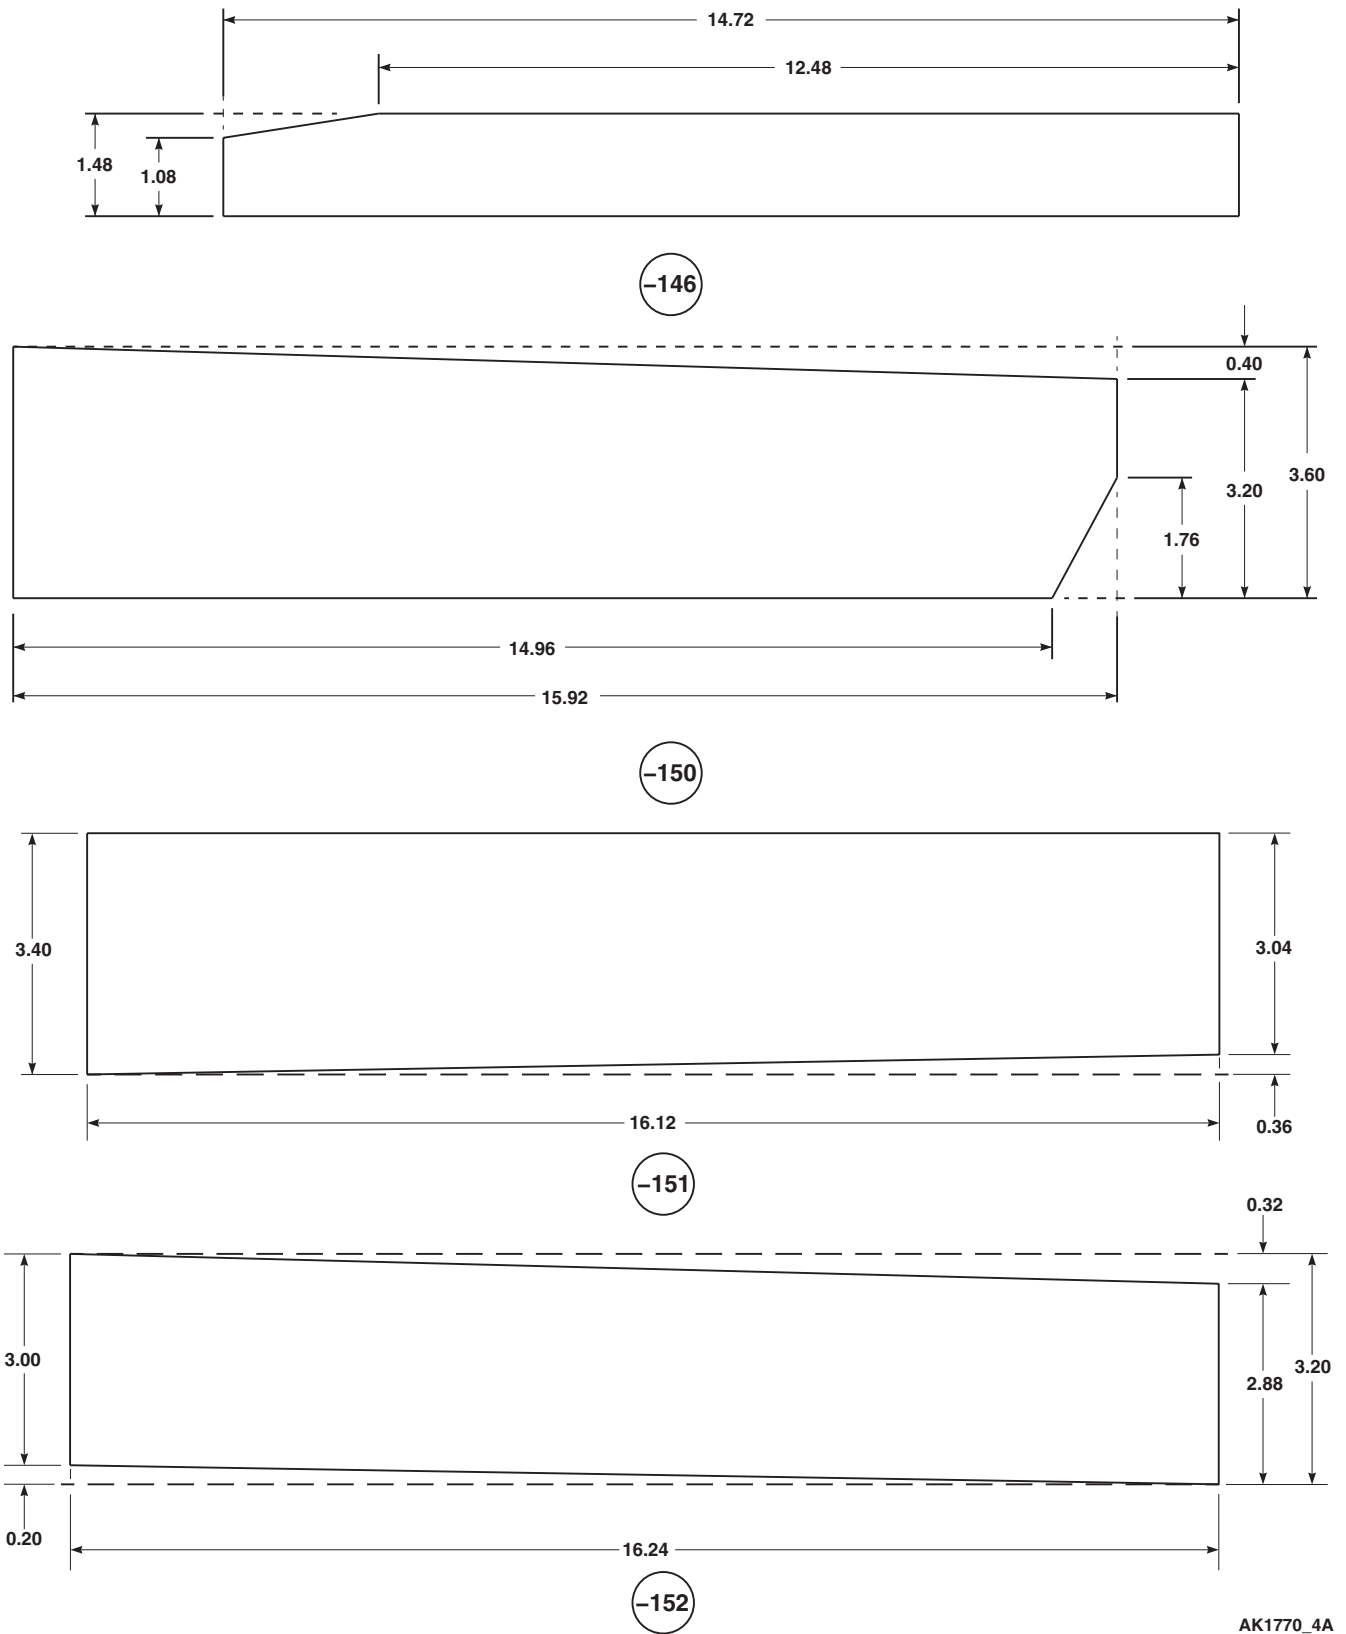


AK1770\_4A  
SA

Figure 131. Foil Panel Unusual Configuration. (Sheet 4 of 37)

FIELD MANUFACTURE ITEMS - Continued

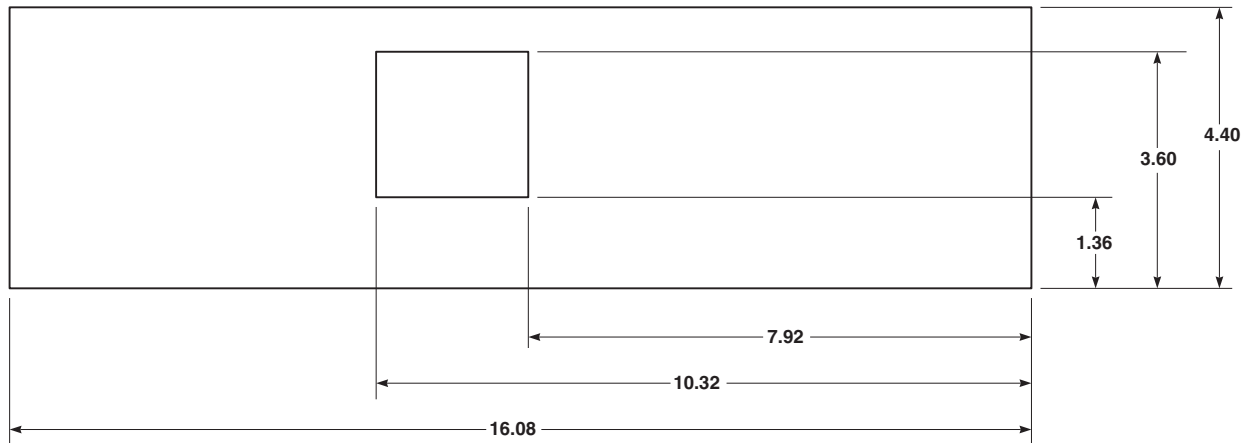


-153

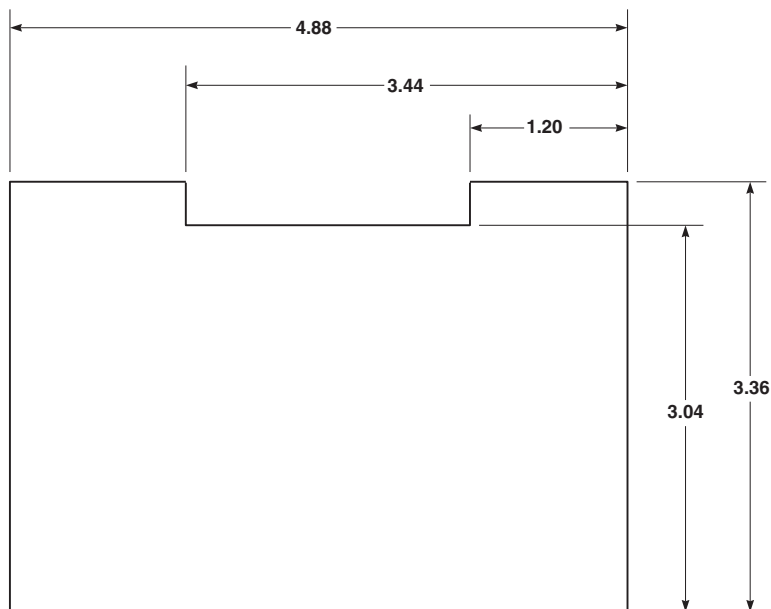


-154

FIELD MANUFACTURE ITEMS - Continued

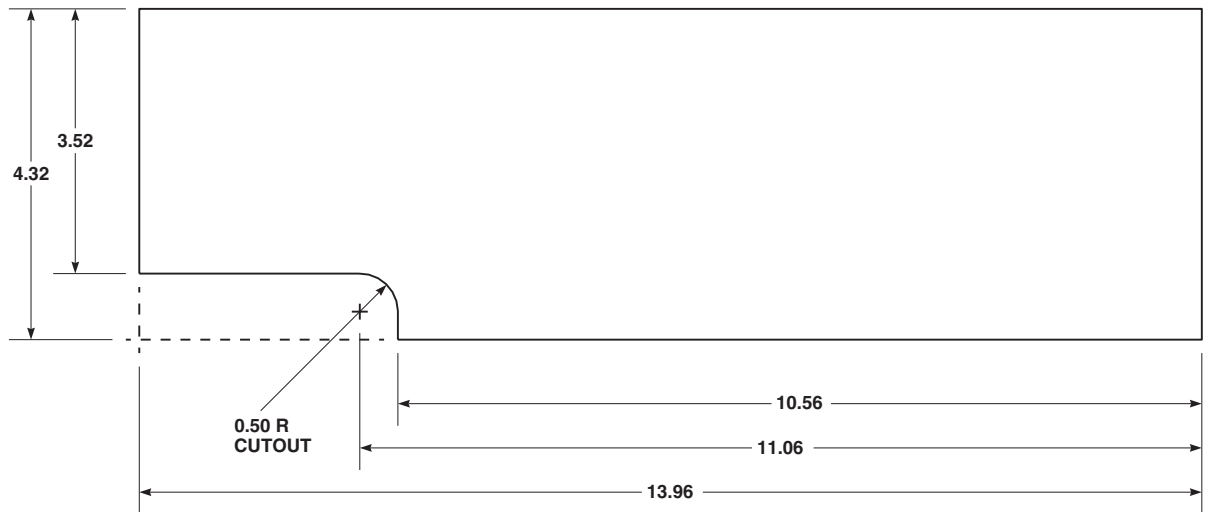

(-157) SHOWN

(-158) OPPOSITE

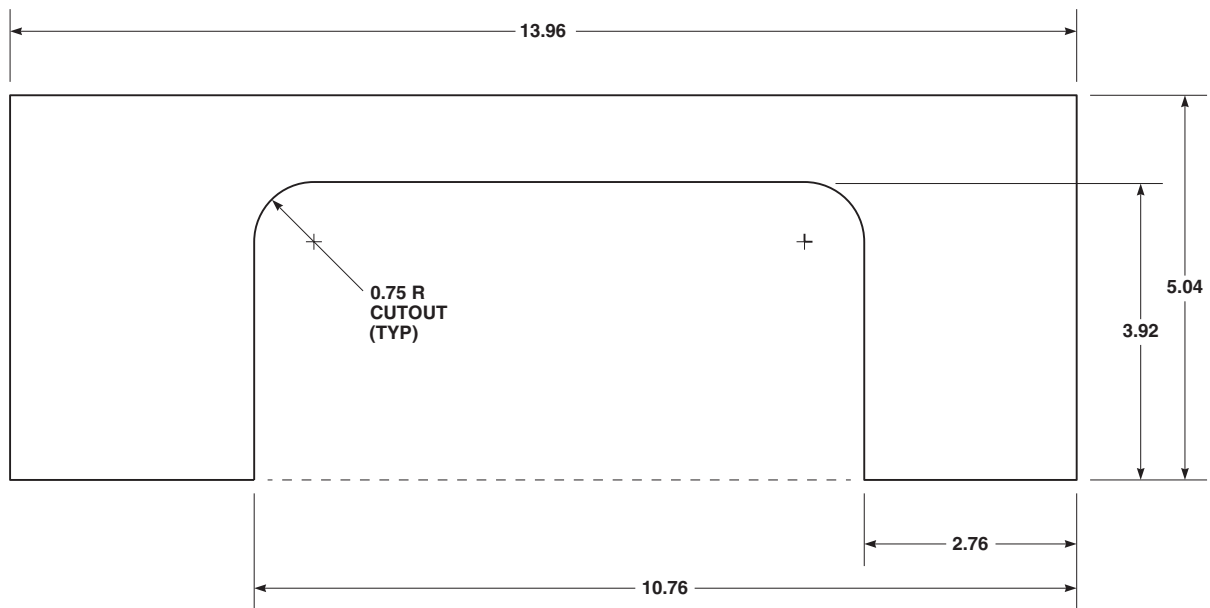


(-159)


AK1770\_6A  
SA

Figure 131. Foil Panel Unusual Configuration. (Sheet 6 of 37)

FIELD MANUFACTURE ITEMS - Continued

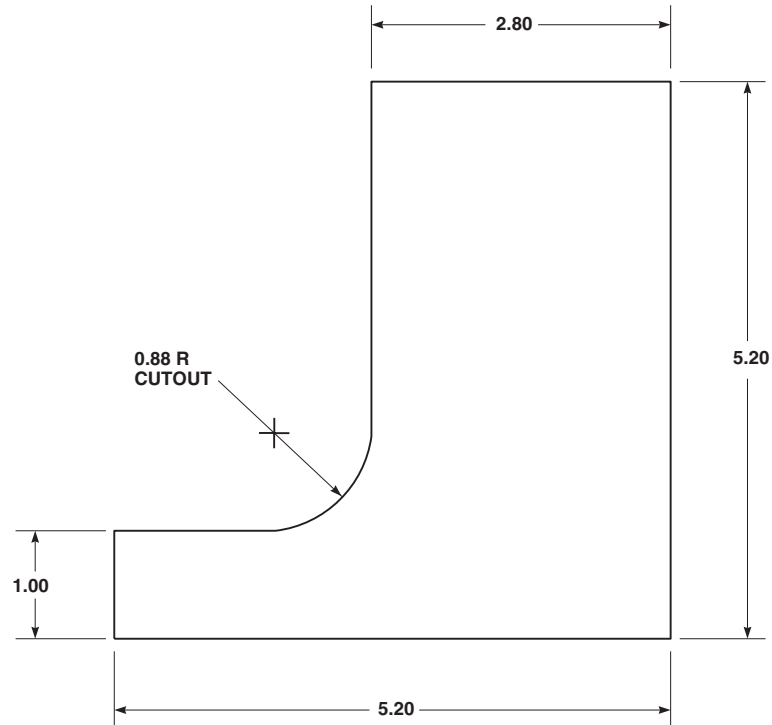

-160

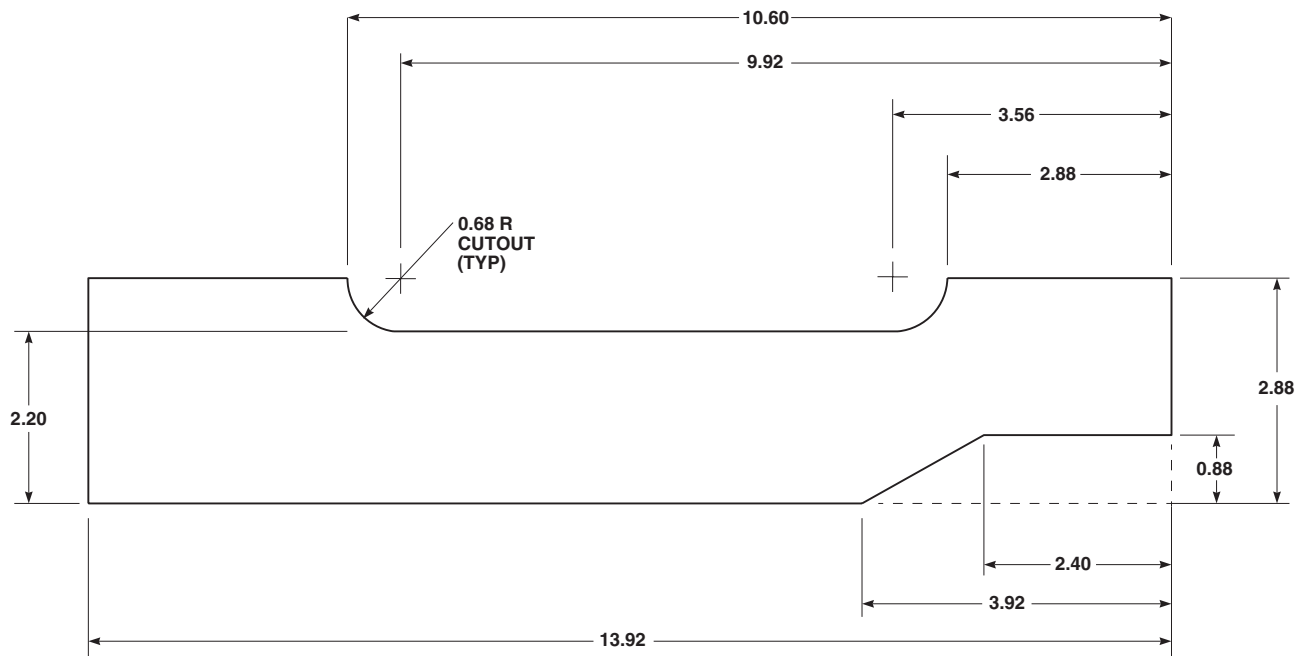


-161


AK1770\_7A  
SA

Figure 131. Foil Panel Unusual Configuration. (Sheet 7 of 37)

FIELD MANUFACTURE ITEMS - Continued

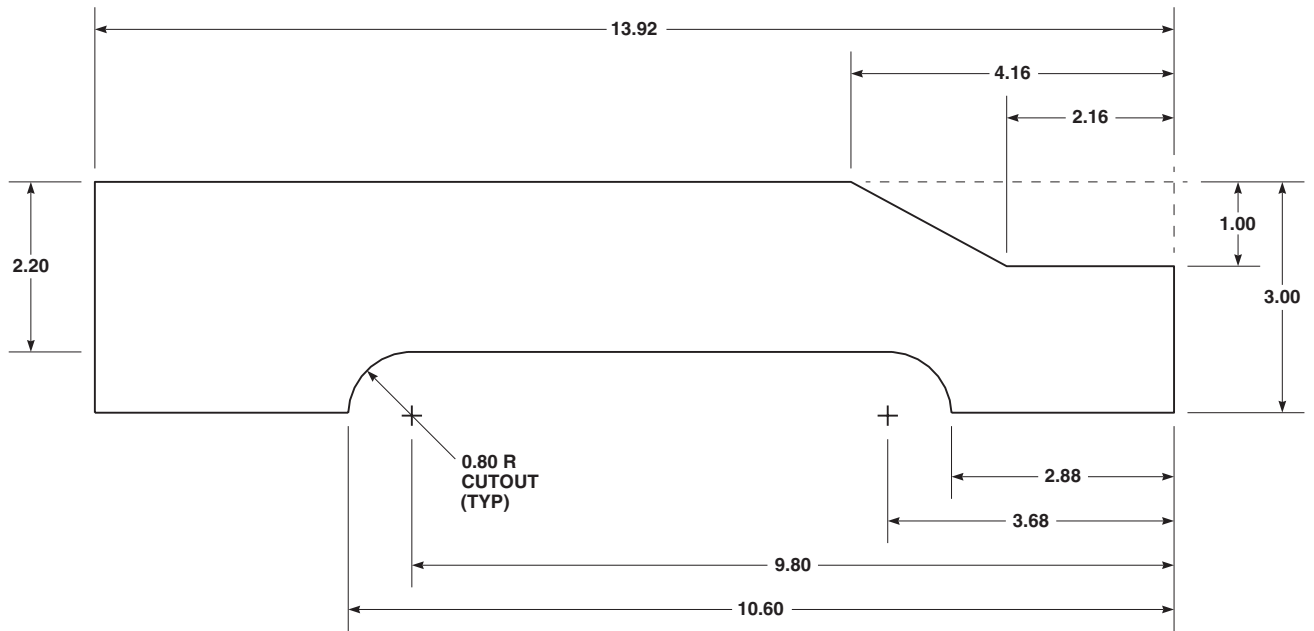

-162

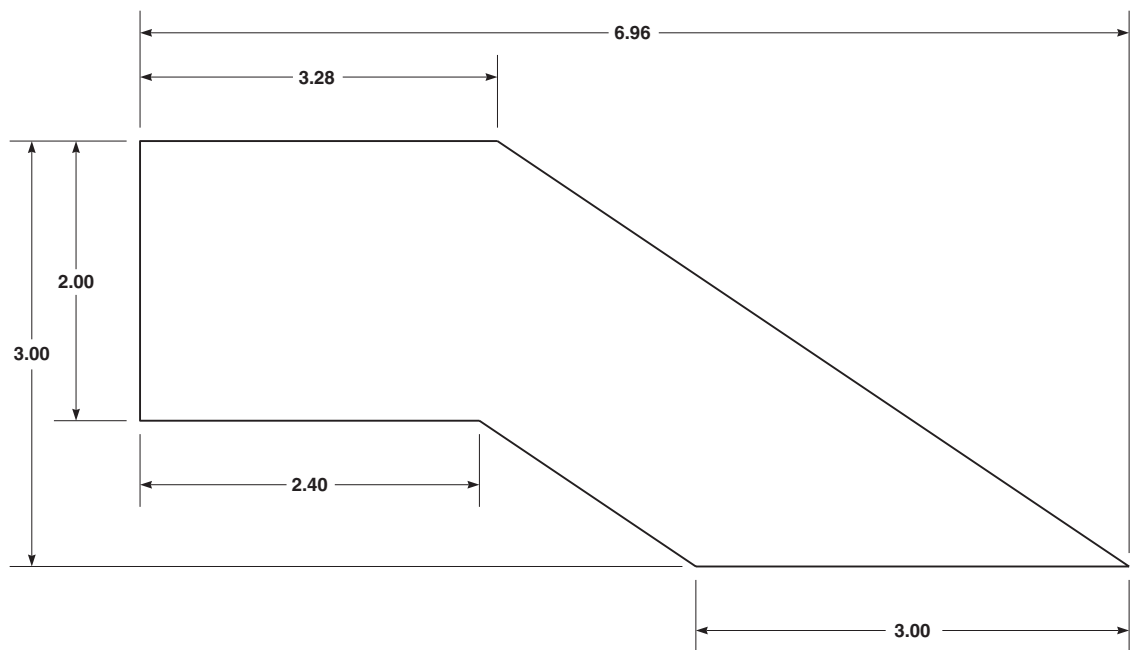


-163 SHOWN

-164 OPPOSITE


AK1770\_8A  
SA

Figure 131. Foil Panel Unusual Configuration. (Sheet 8 of 37)


FIELD MANUFACTURE ITEMS - Continued

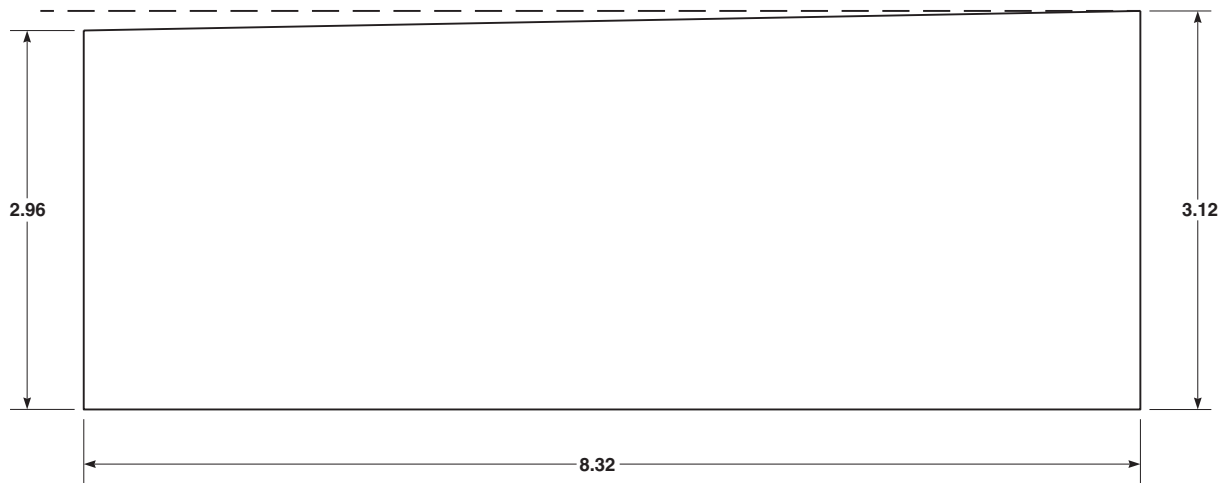

-171

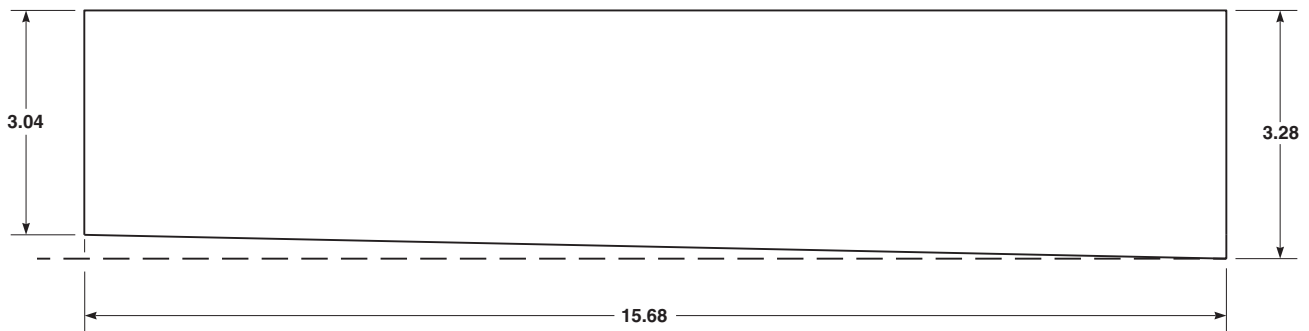

-172

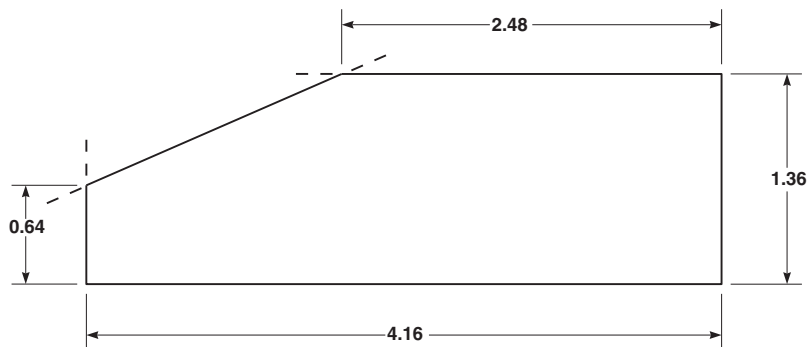


-173


AK1770\_9A  
SA

Figure 131. Foil Panel Unusual Configuration. (Sheet 9 of 37)

FIELD MANUFACTURE ITEMS - Continued

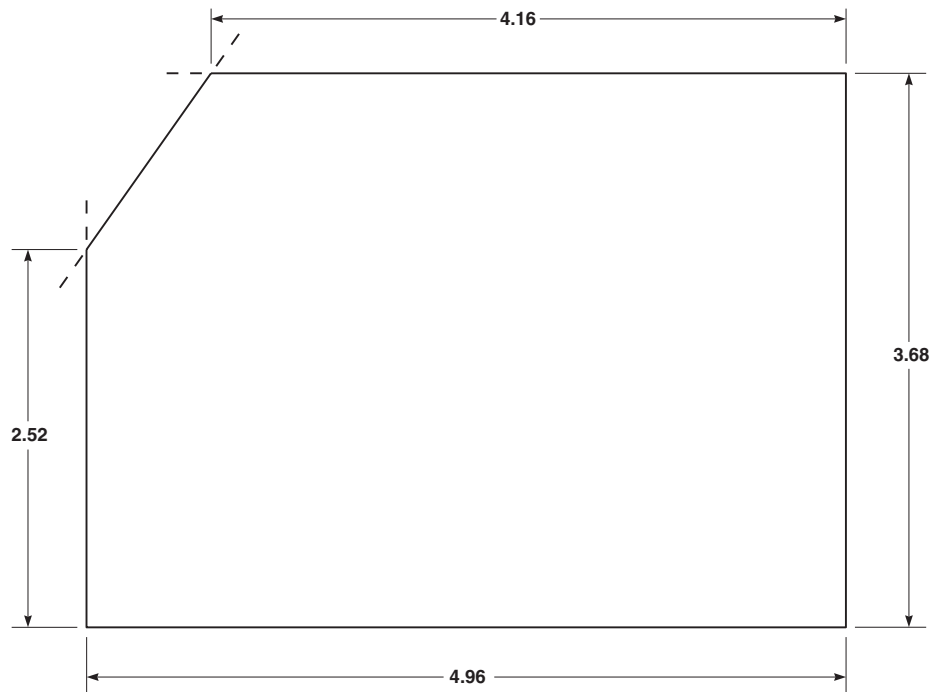

(-174)

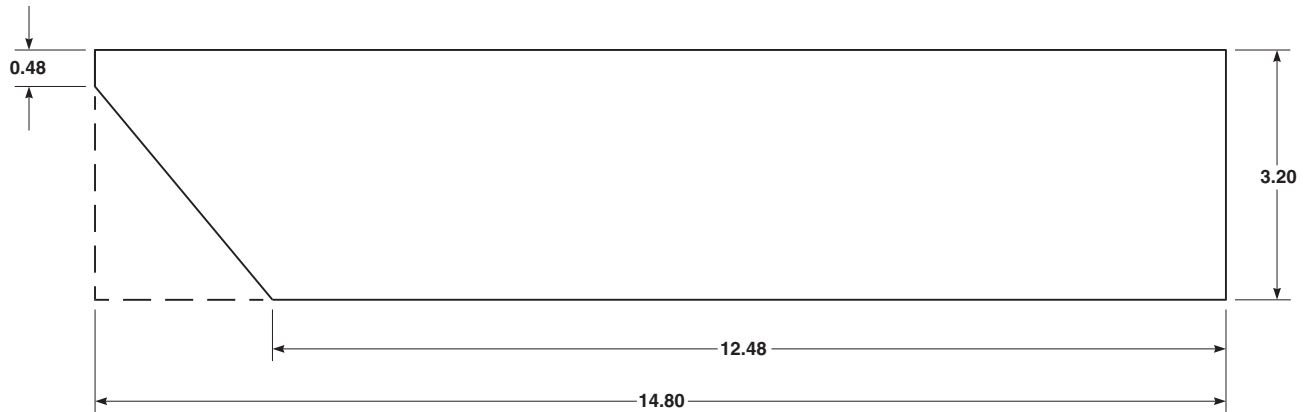


(-175) SHOWN

(-176) OPPOSITE

AK1770\_10A  
SA


Figure 131. Foil Panel Unusual Configuration. (Sheet 10 of 37)

FIELD MANUFACTURE ITEMS - Continued

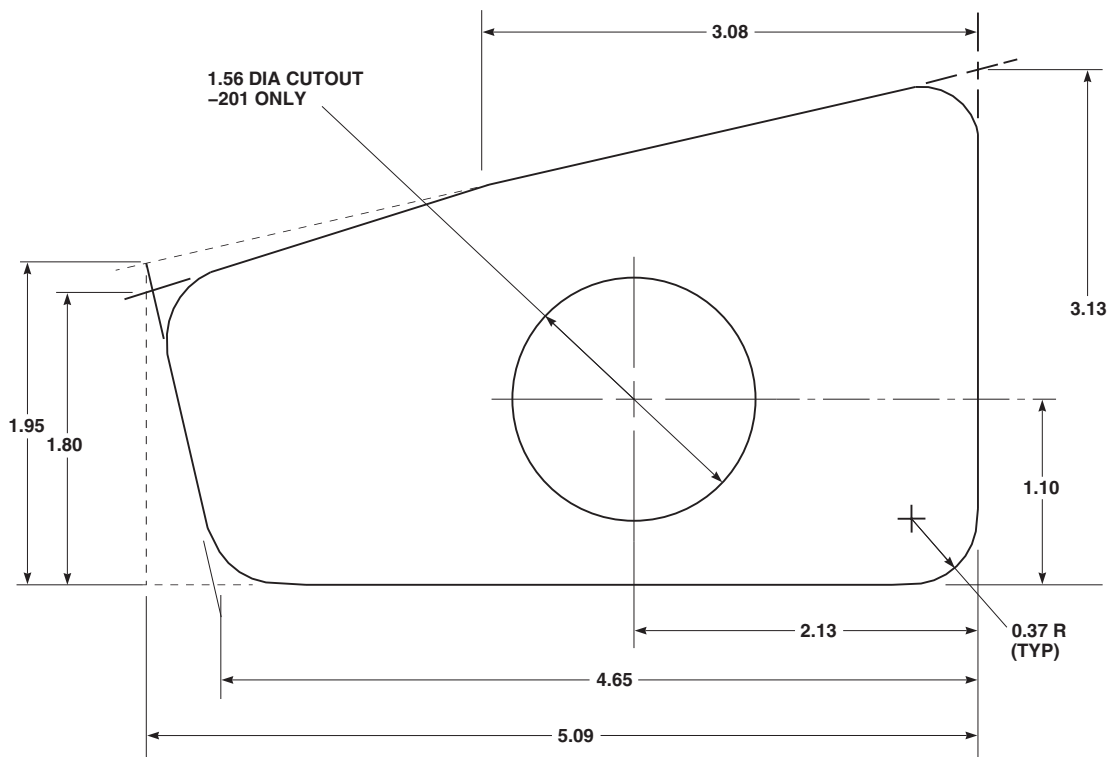

(-201) SHOWN

(-203) OPPOSITE

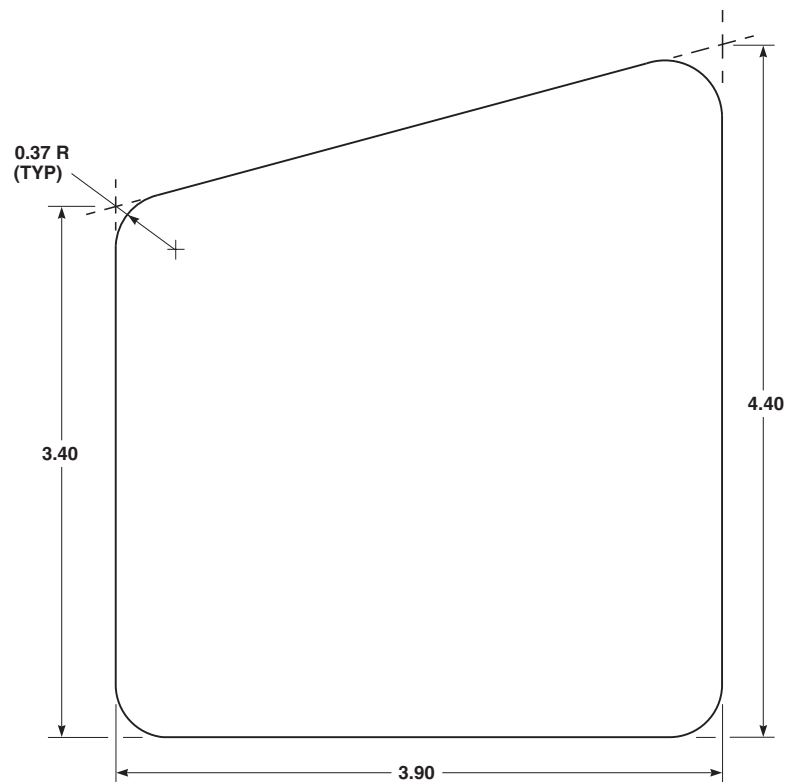

(-202)

AK1770\_11A  
SA

Figure 131. Foil Panel Unusual Configuration. (Sheet 11 of 37)



FIELD MANUFACTURE ITEMS - Continued


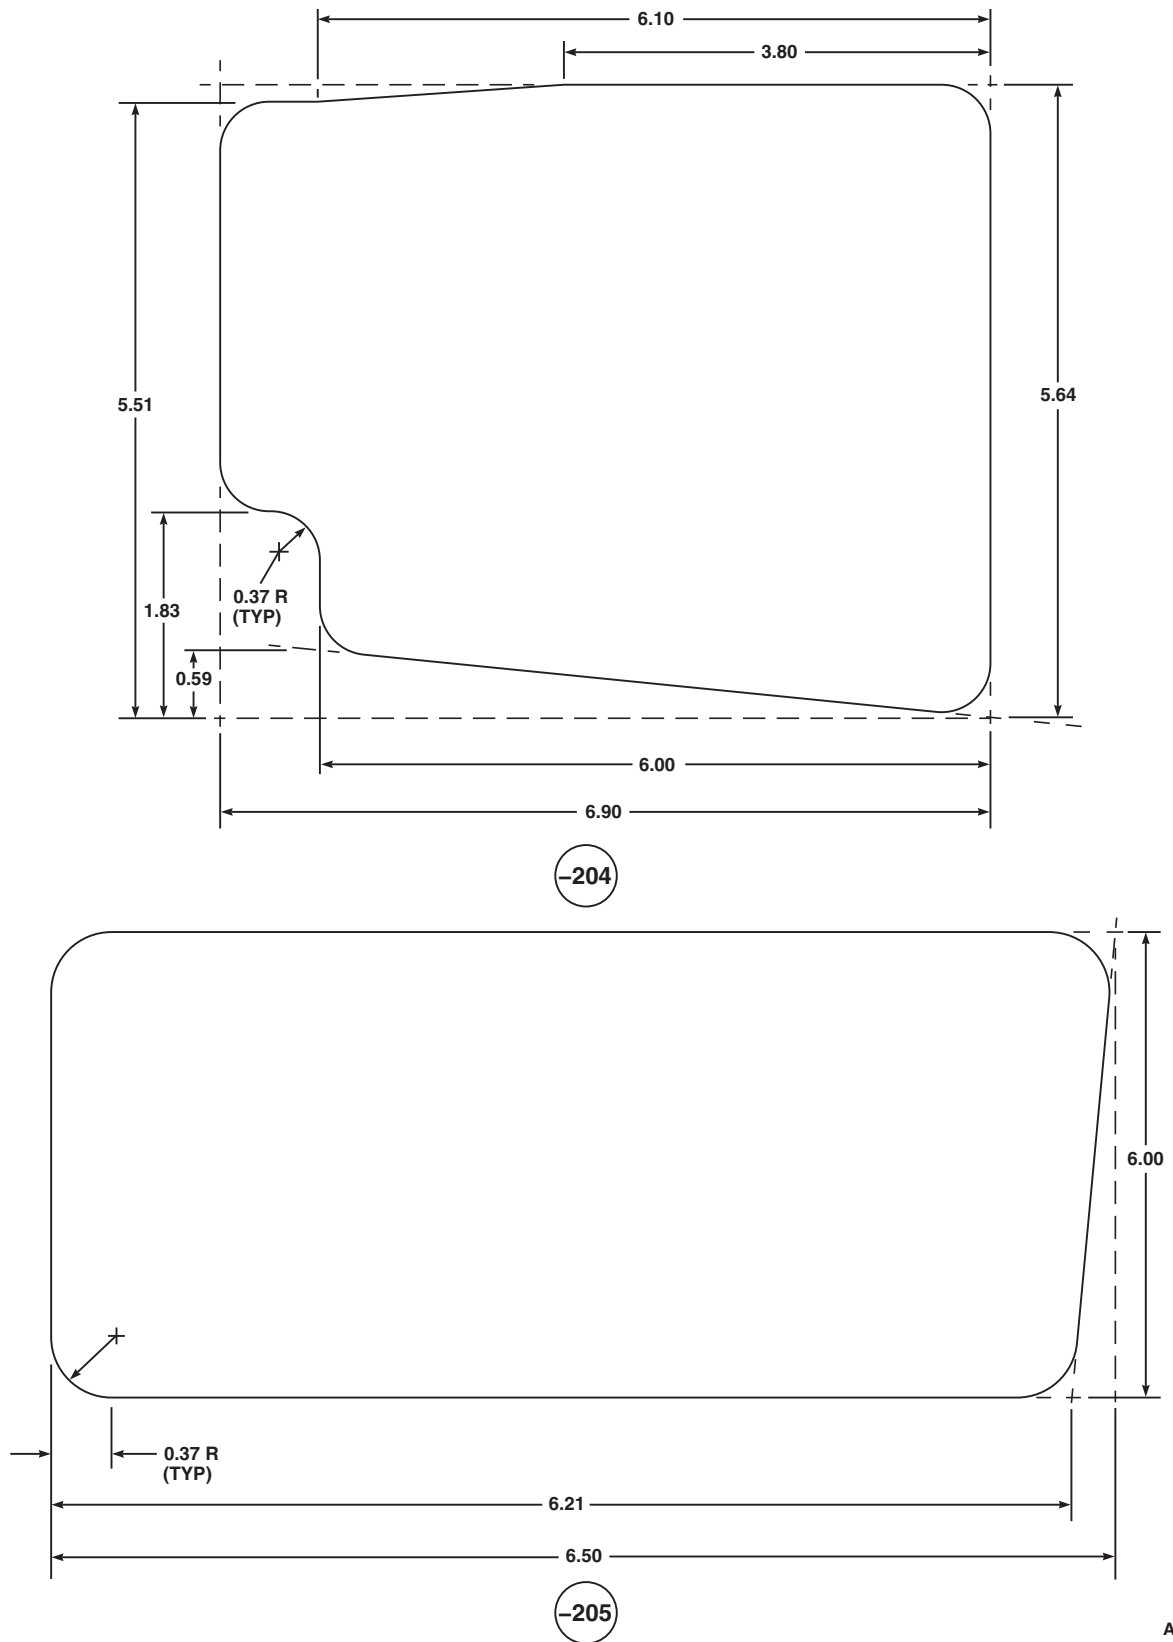



Figure 131. Foil Panel Unusual Configuration. (Sheet 12 of 37)

FIELD MANUFACTURE ITEMS - Continued

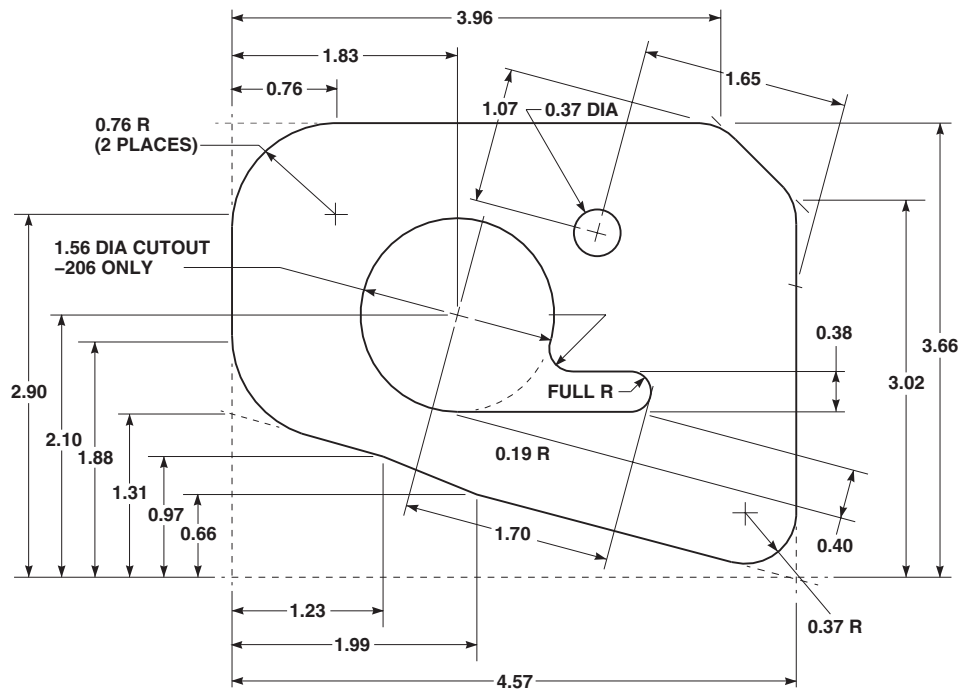

(-206) SHOWN


(-208) OPPOSITE

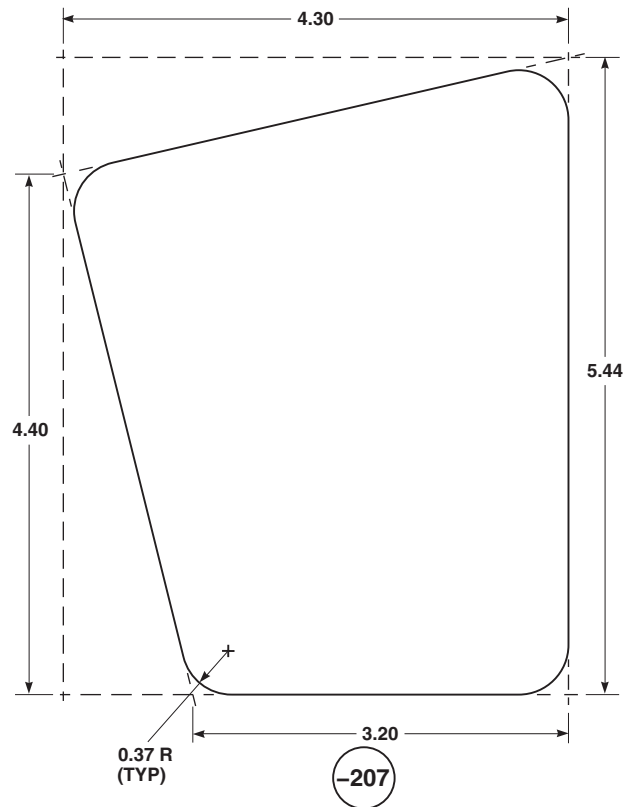


AK1770\_13A  
SA

Figure 131. Foil Panel Unusual Configuration. (Sheet 13 of 37)

FIELD MANUFACTURE ITEMS - Continued

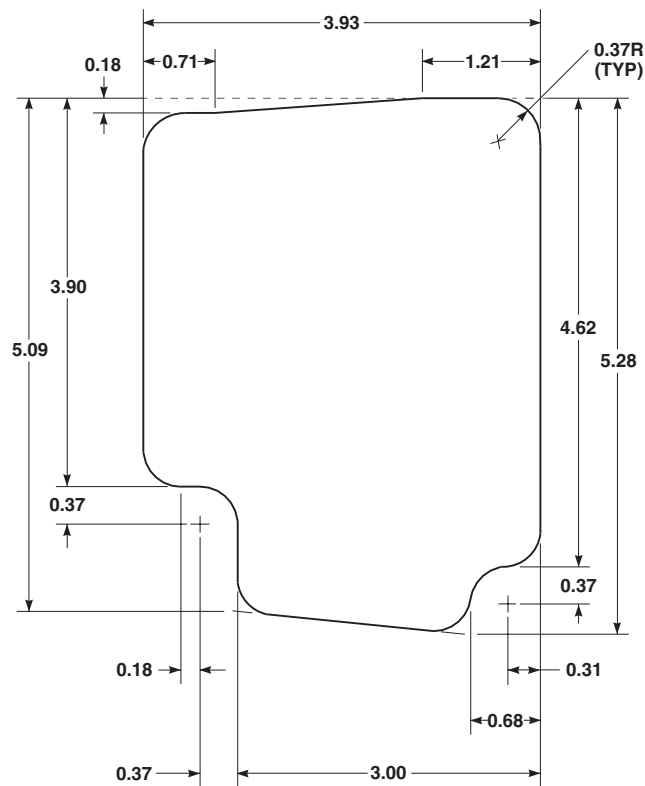


209

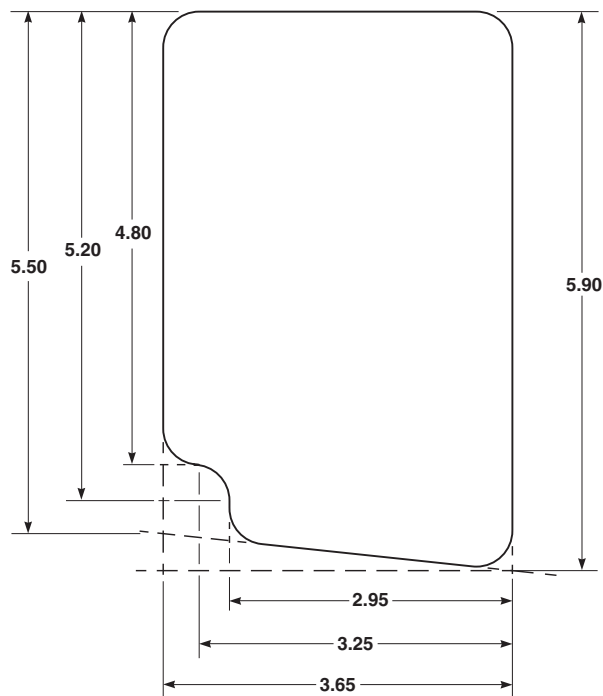

210

Figure 131. Foil Panel Unusual Configuration. (Sheet 14 of 37)

FIELD MANUFACTURE ITEMS - Continued

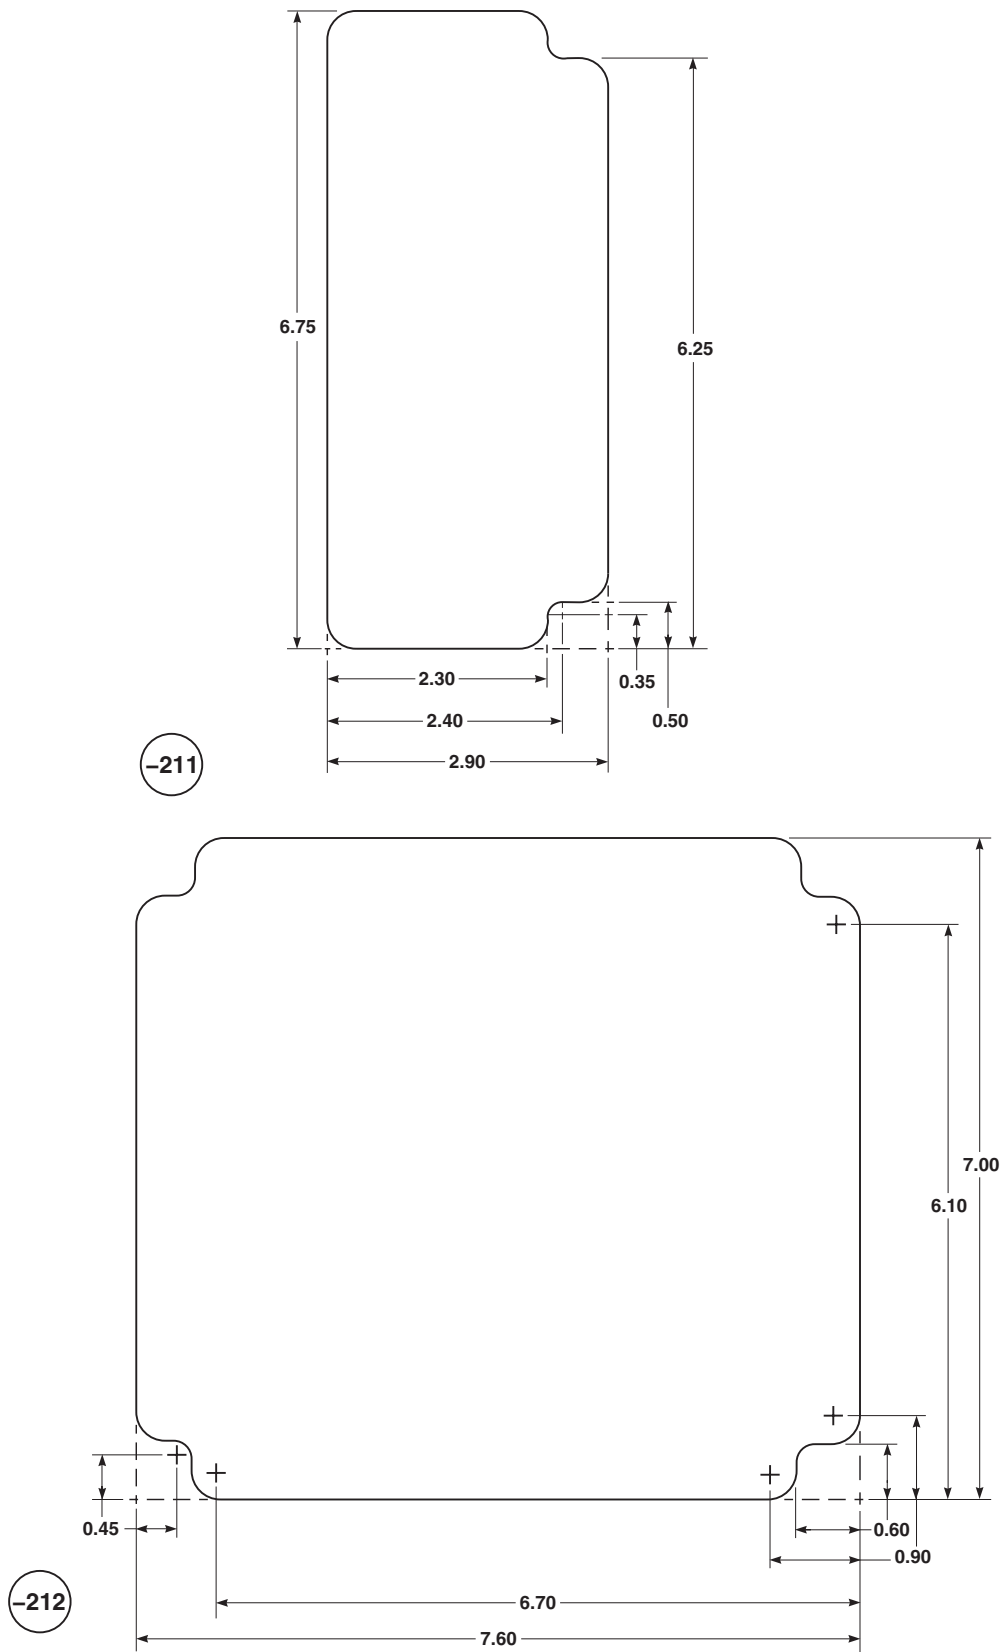

AK1770\_15A  
SA

Figure 131. Foil Panel Unusual Configuration. (Sheet 15 of 37)

## FIELD MANUFACTURE ITEMS - Continued



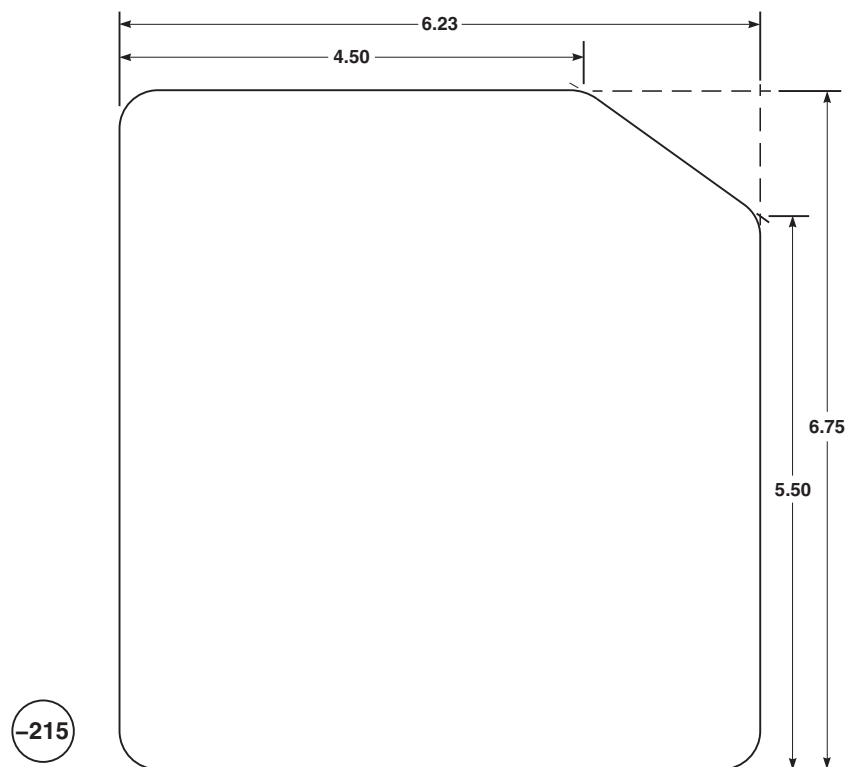
AK1770\_16A  
SA


Figure 131. Foil Panel Unusual Configuration. (Sheet 16 of 37)

FIELD MANUFACTURE ITEMS - Continued

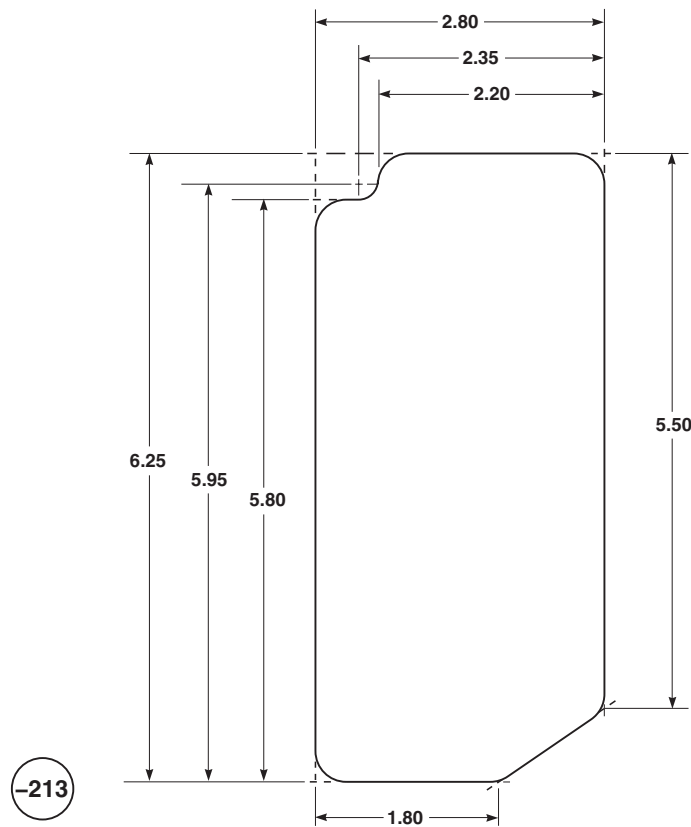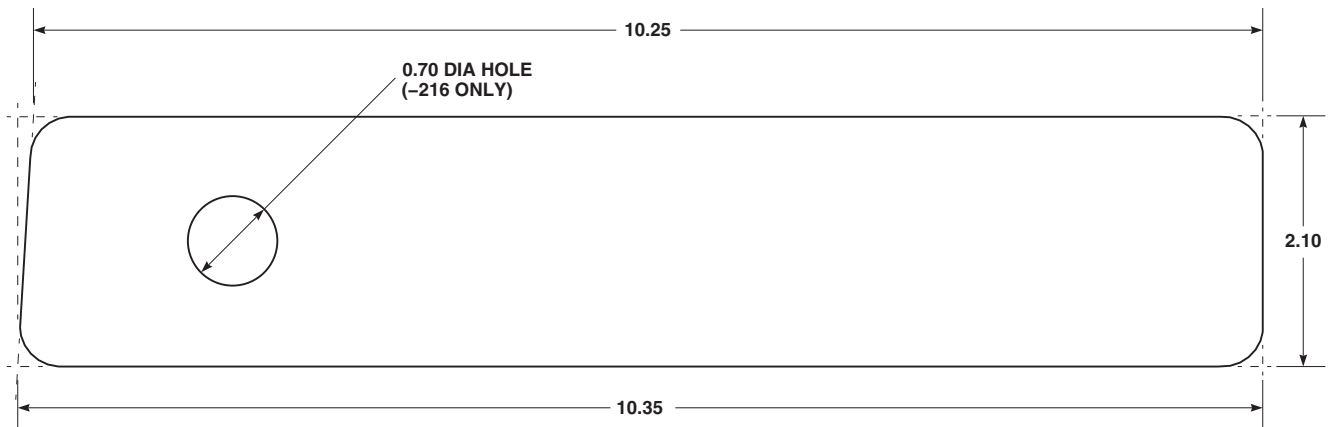

(-216) SHOWN

(-217) OPPOSITE

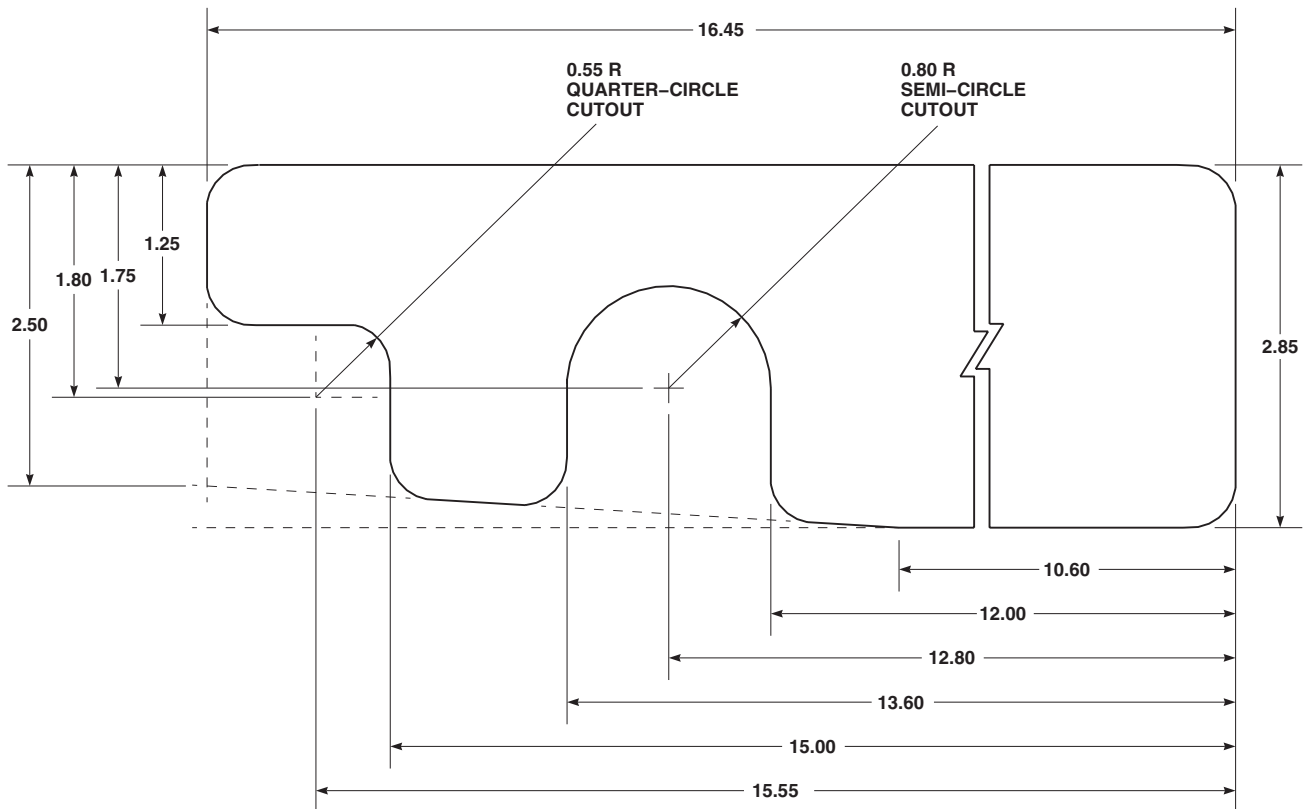


(-222) SHOWN

(-268) OPPOSITE


AK1770\_17A  
SA

Figure 131. Foil Panel Unusual Configuration. (Sheet 17 of 37)

FIELD MANUFACTURE ITEMS - Continued

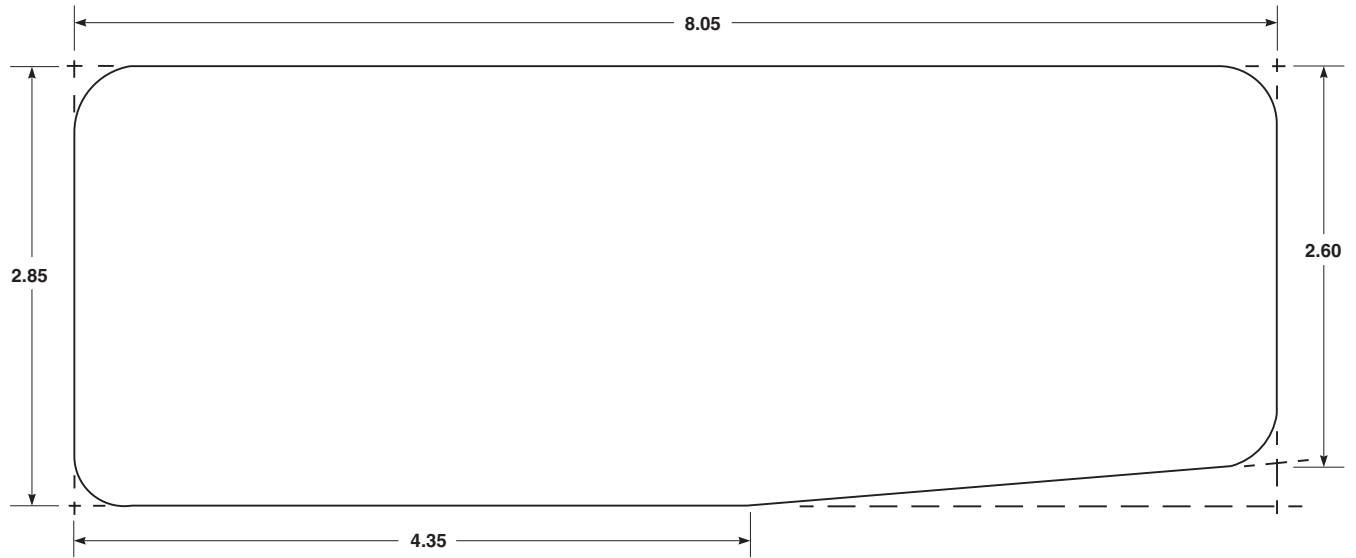

(-224)

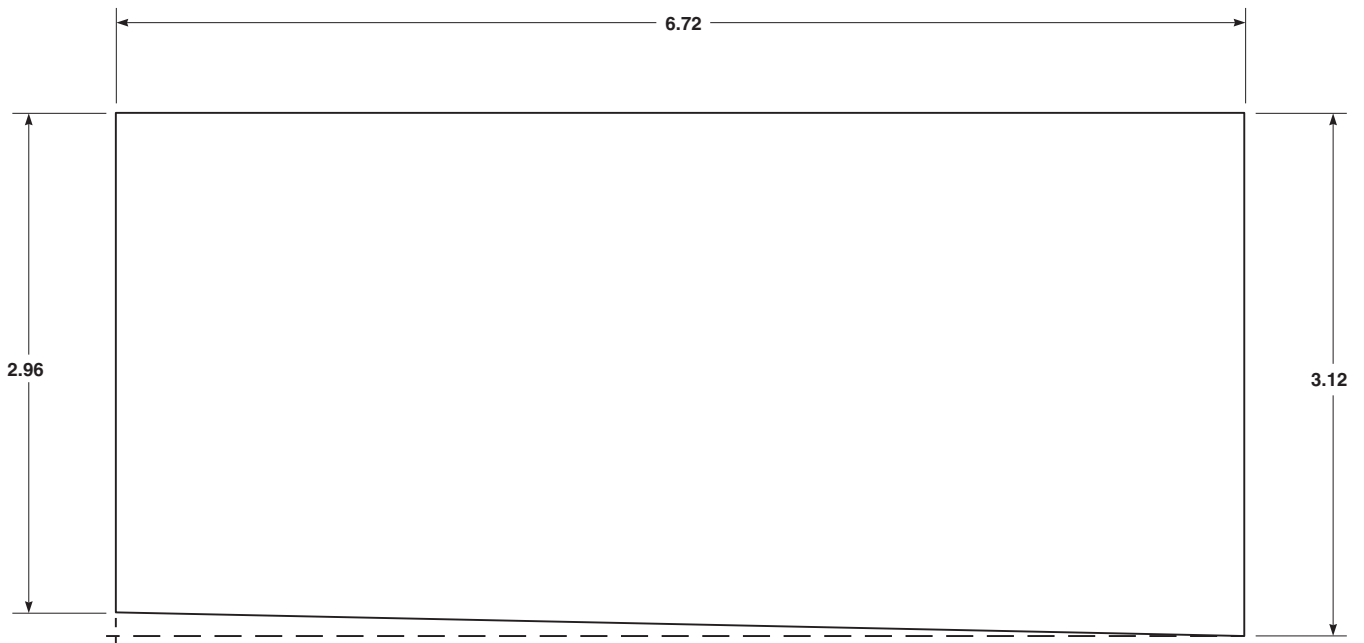

(-231)

SHOWN


(-232)

OPPOSITE

AK1770\_18A  
SA


Figure 131. Foil Panel Unusual Configuration. (Sheet 18 of 37)

FIELD MANUFACTURE ITEMS - Continued

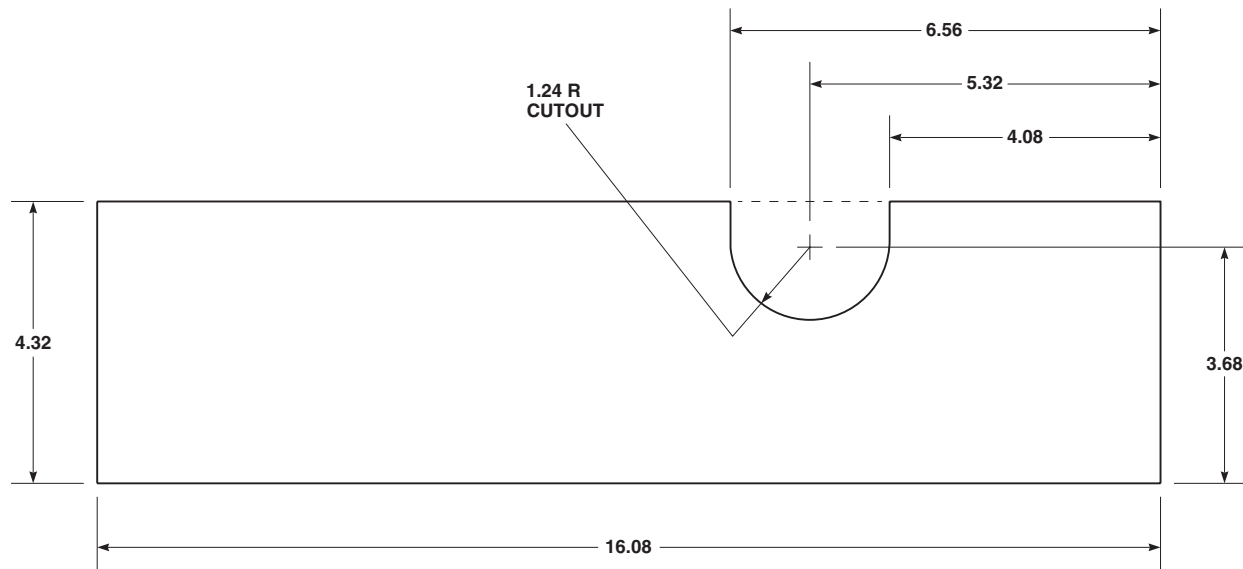

(-236) SHOWN

(-237) OPPOSITE

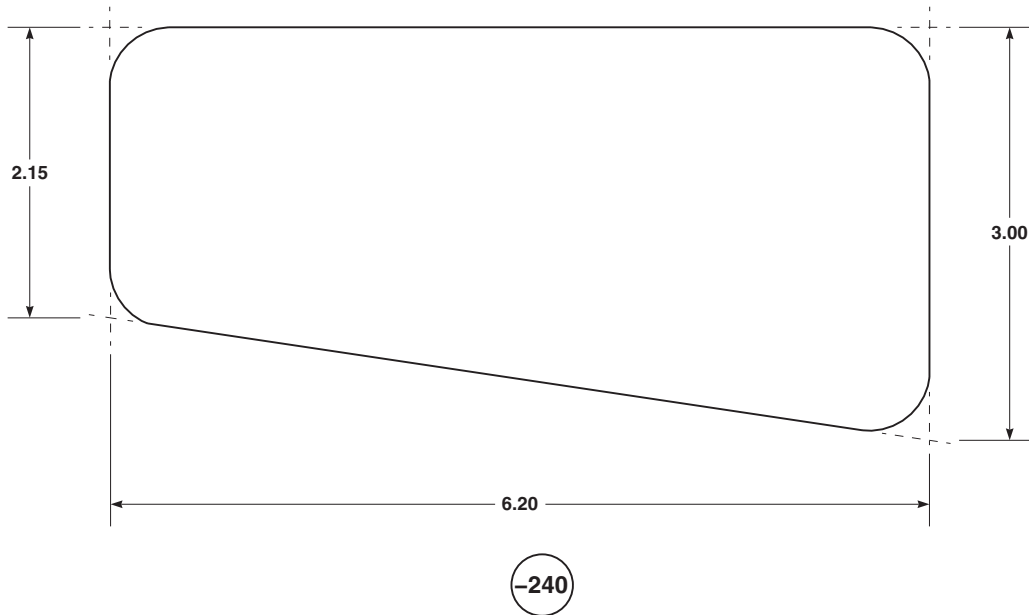


AK1770\_19A  
SA


Figure 131. Foil Panel Unusual Configuration. (Sheet 19 of 37)



FIELD MANUFACTURE ITEMS - Continued

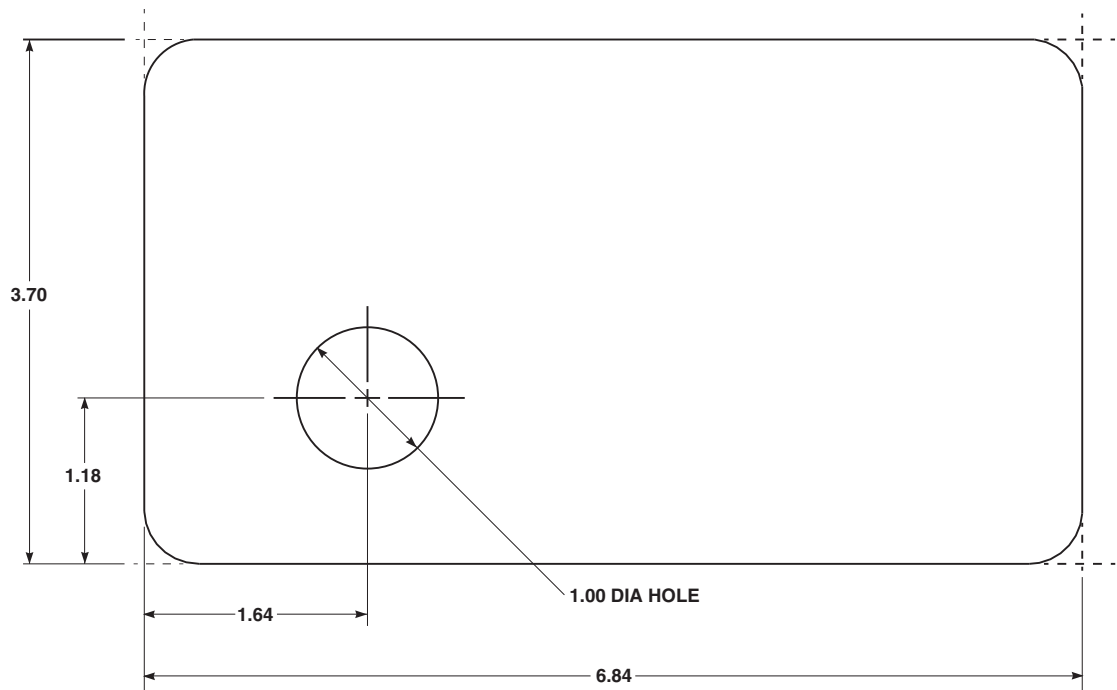

-242

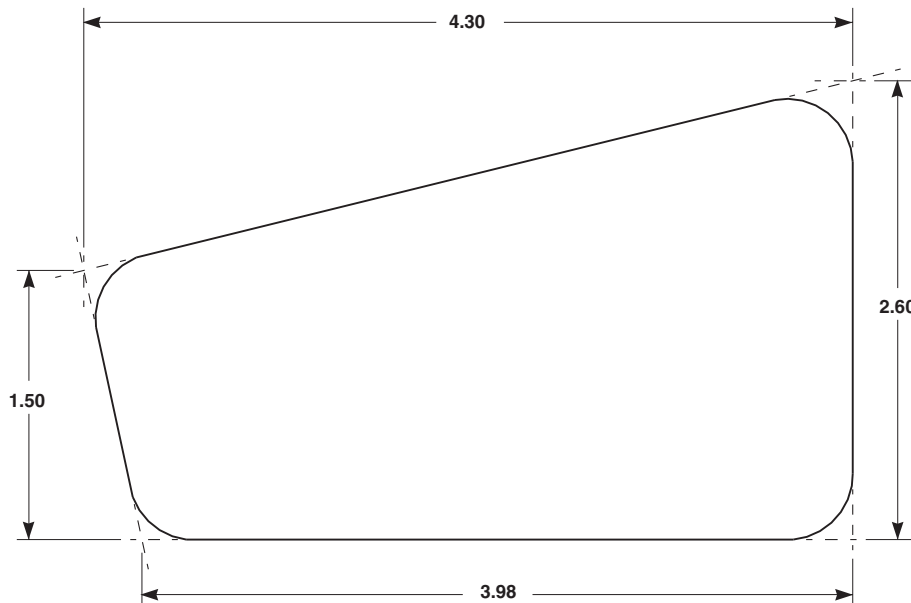


-249

AK1770\_20A  
SA

Figure 131. Foil Panel Unusual Configuration. (Sheet 20 of 37)

FIELD MANUFACTURE ITEMS - Continued

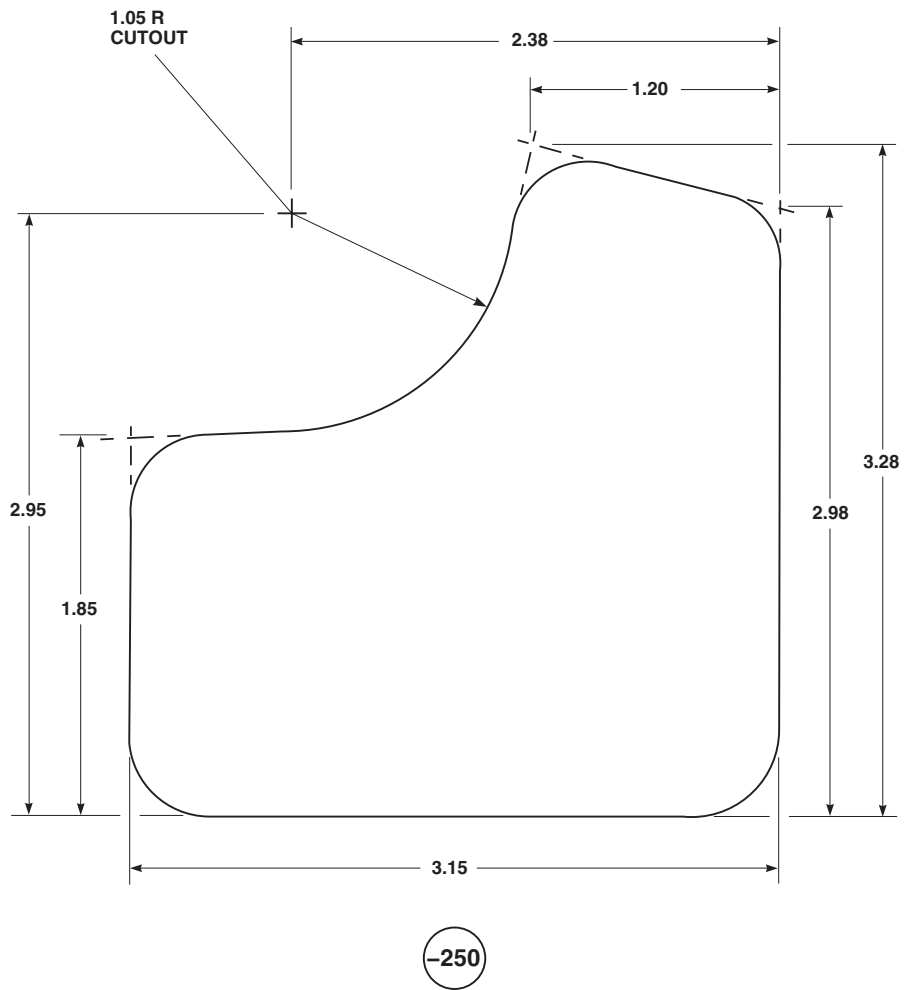

AK1770\_21A  
SA

Figure 131. Foil Panel Unusual Configuration. (Sheet 21 of 37)

## FIELD MANUFACTURE ITEMS - Continued


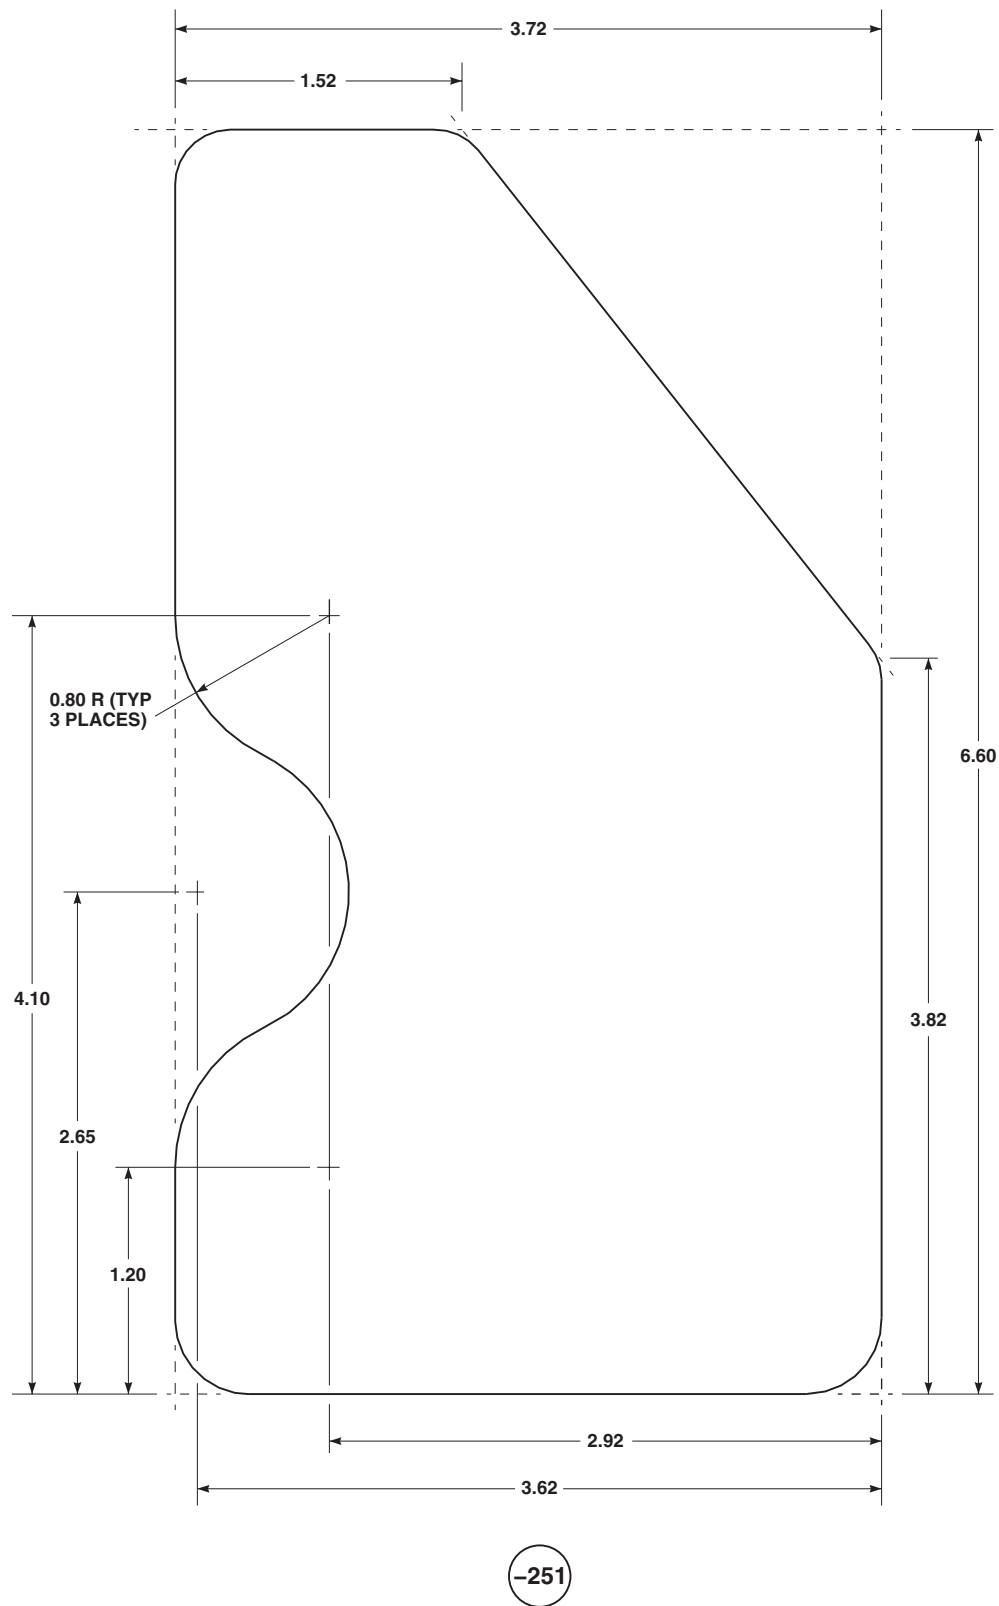
AK1770\_22A  
SA

Figure 131. Foil Panel Unusual Configuration. (Sheet 22 of 37)

FIELD MANUFACTURE ITEMS - Continued

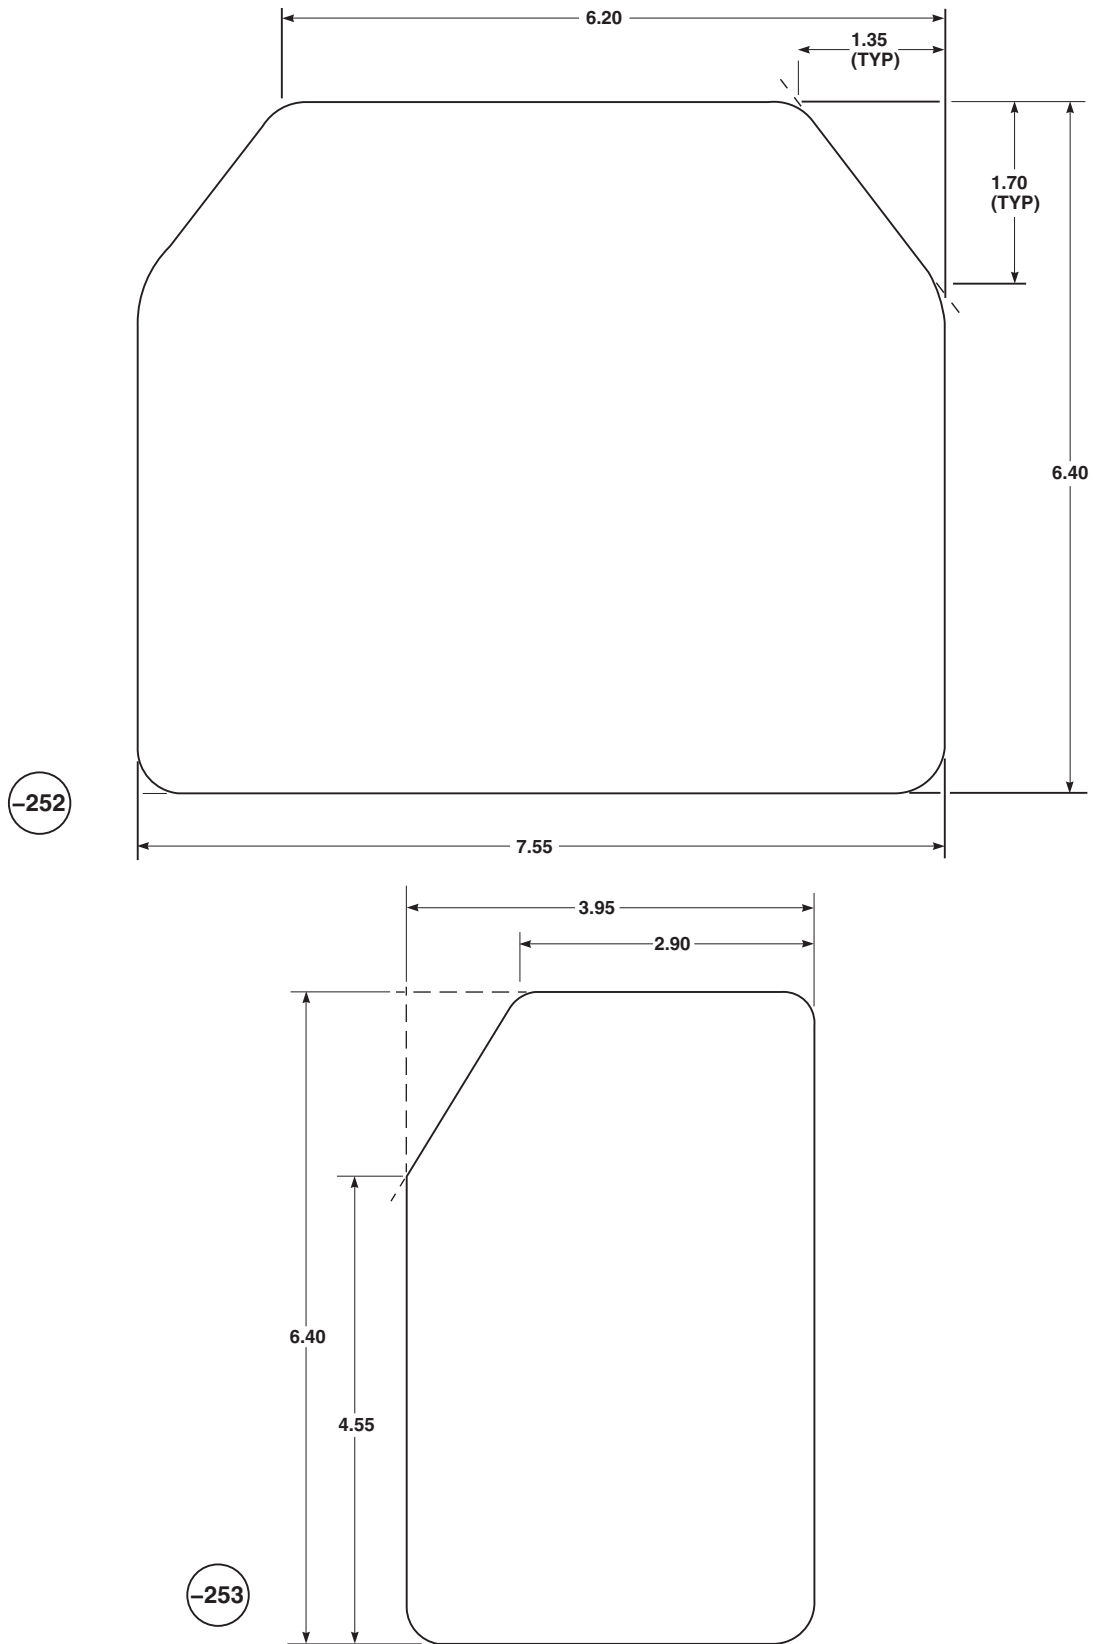

AK1770\_23A  
SA

Figure 131. Foil Panel Unusual Configuration. (Sheet 23 of 37)

## FIELD MANUFACTURE ITEMS - Continued



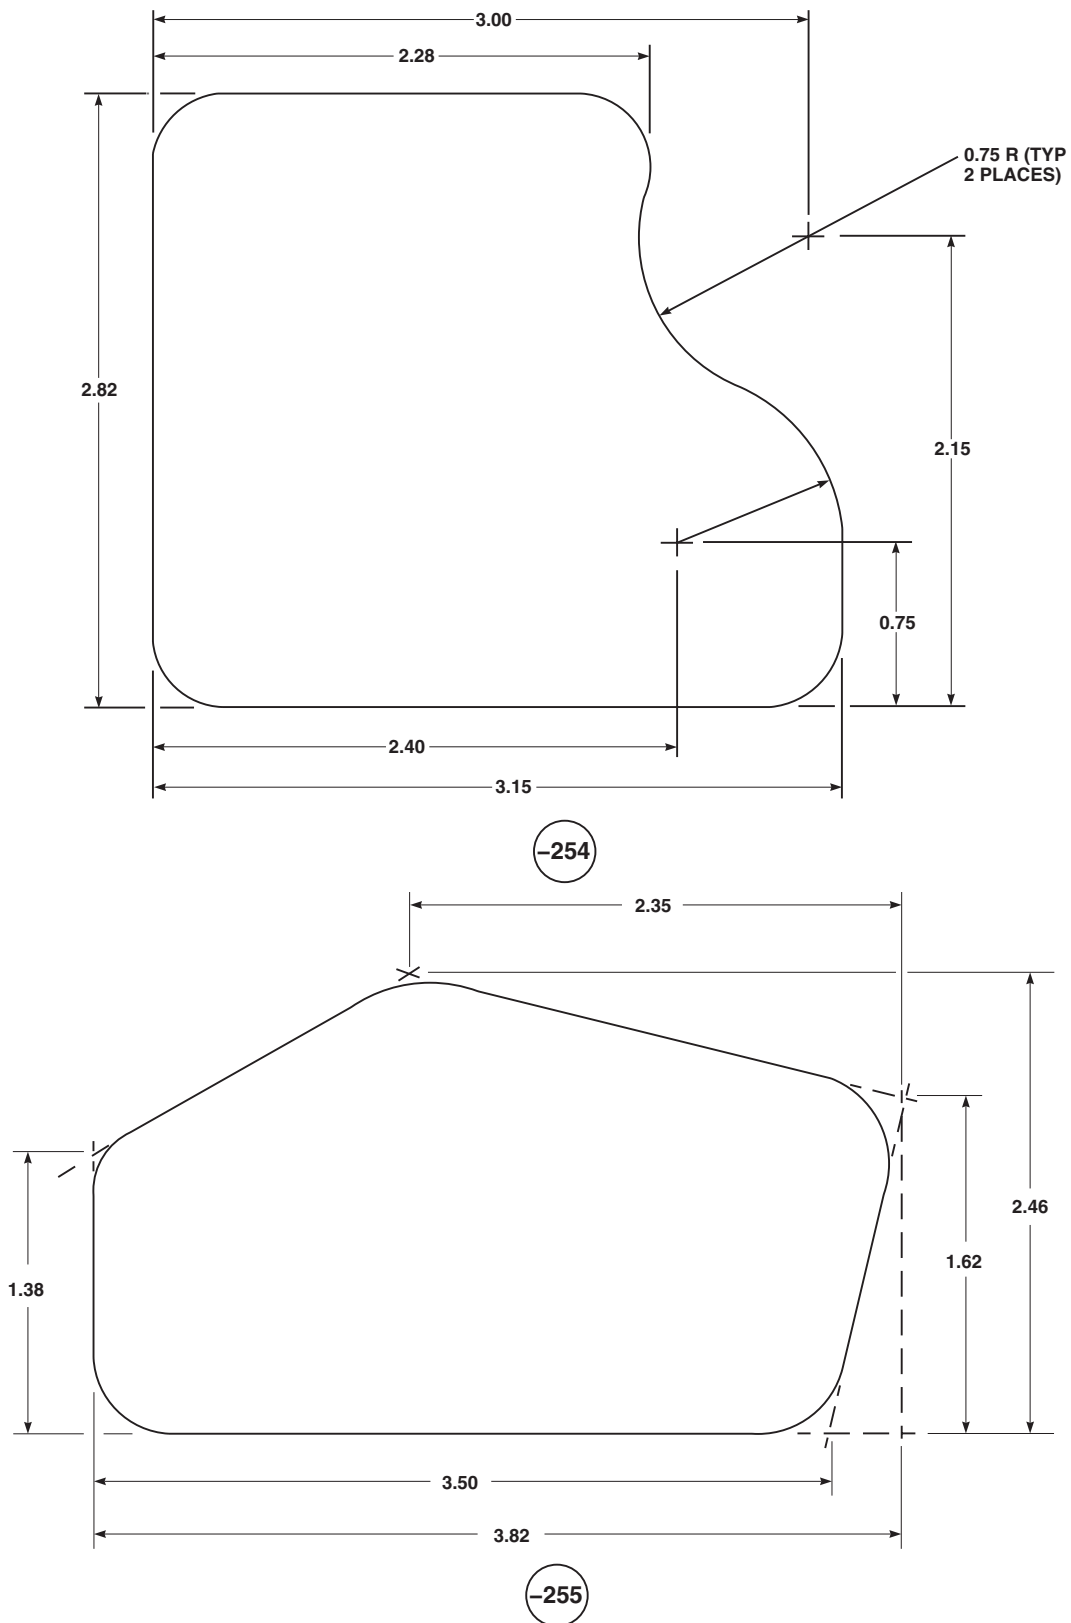


Figure 131. Foil Panel Unusual Configuration. (Sheet 24 of 37)

FIELD MANUFACTURE ITEMS - Continued

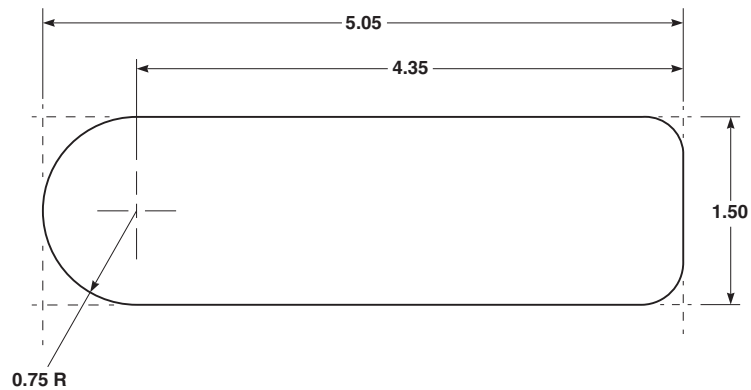

-256

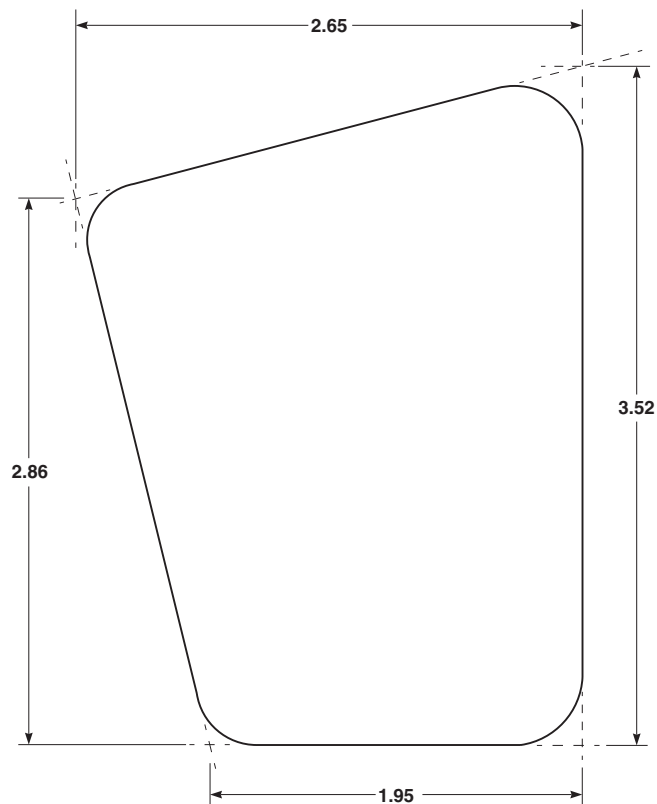


-257 SHOWN

-264 OPPOSITE

AK1770\_25A  
SA

Figure 131. Foil Panel Unusual Configuration. (Sheet 25 of 37)


FIELD MANUFACTURE ITEMS - Continued

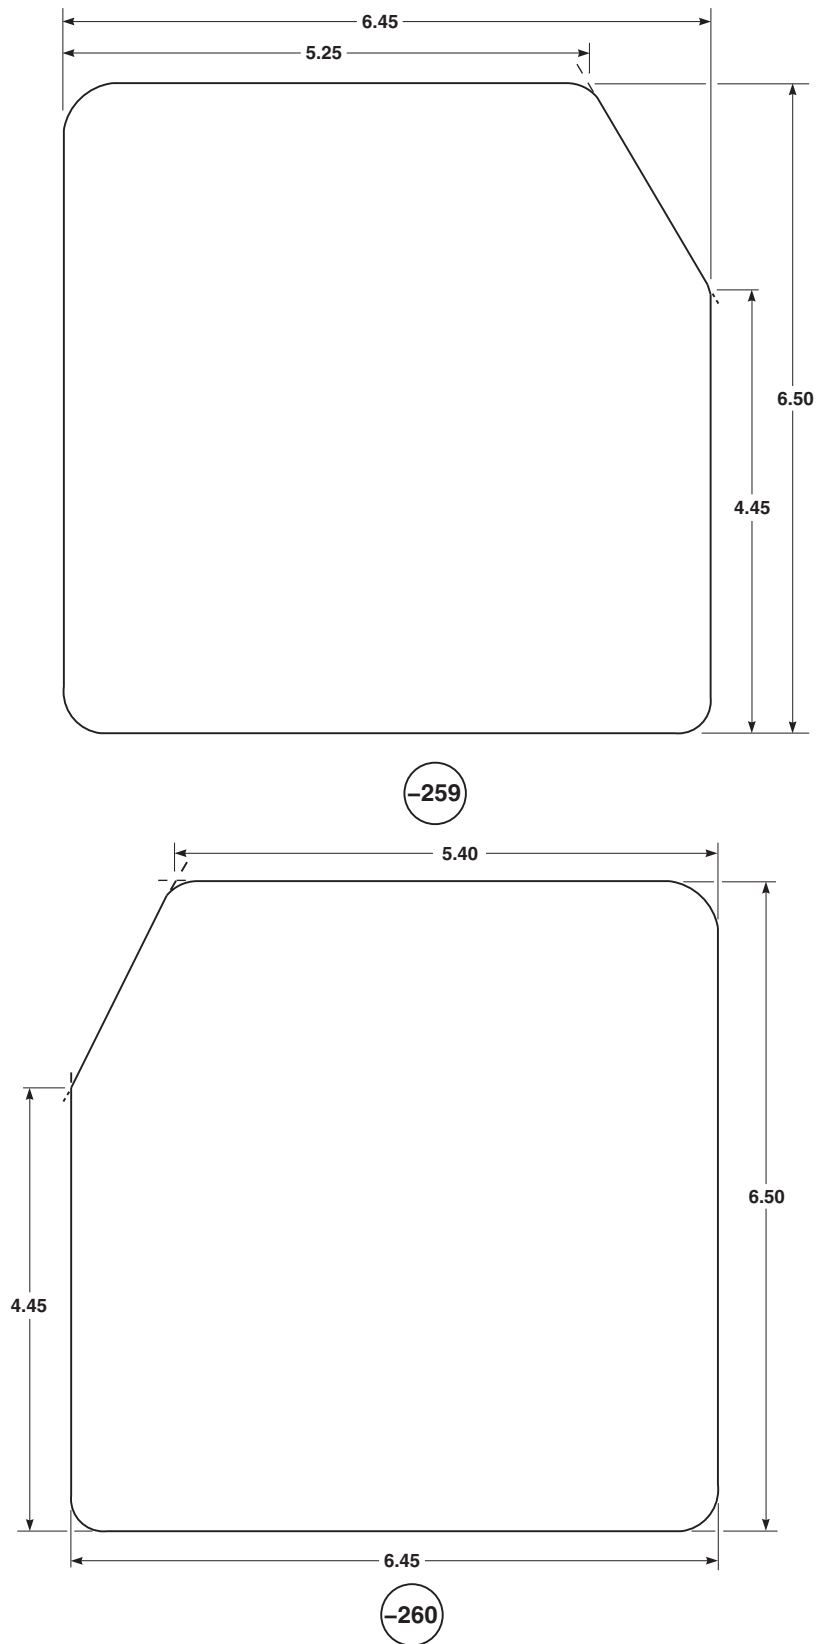

AK1770\_26A  
SA

Figure 131. Foil Panel Unusual Configuration. (Sheet 26 of 37)

FIELD MANUFACTURE ITEMS - Continued

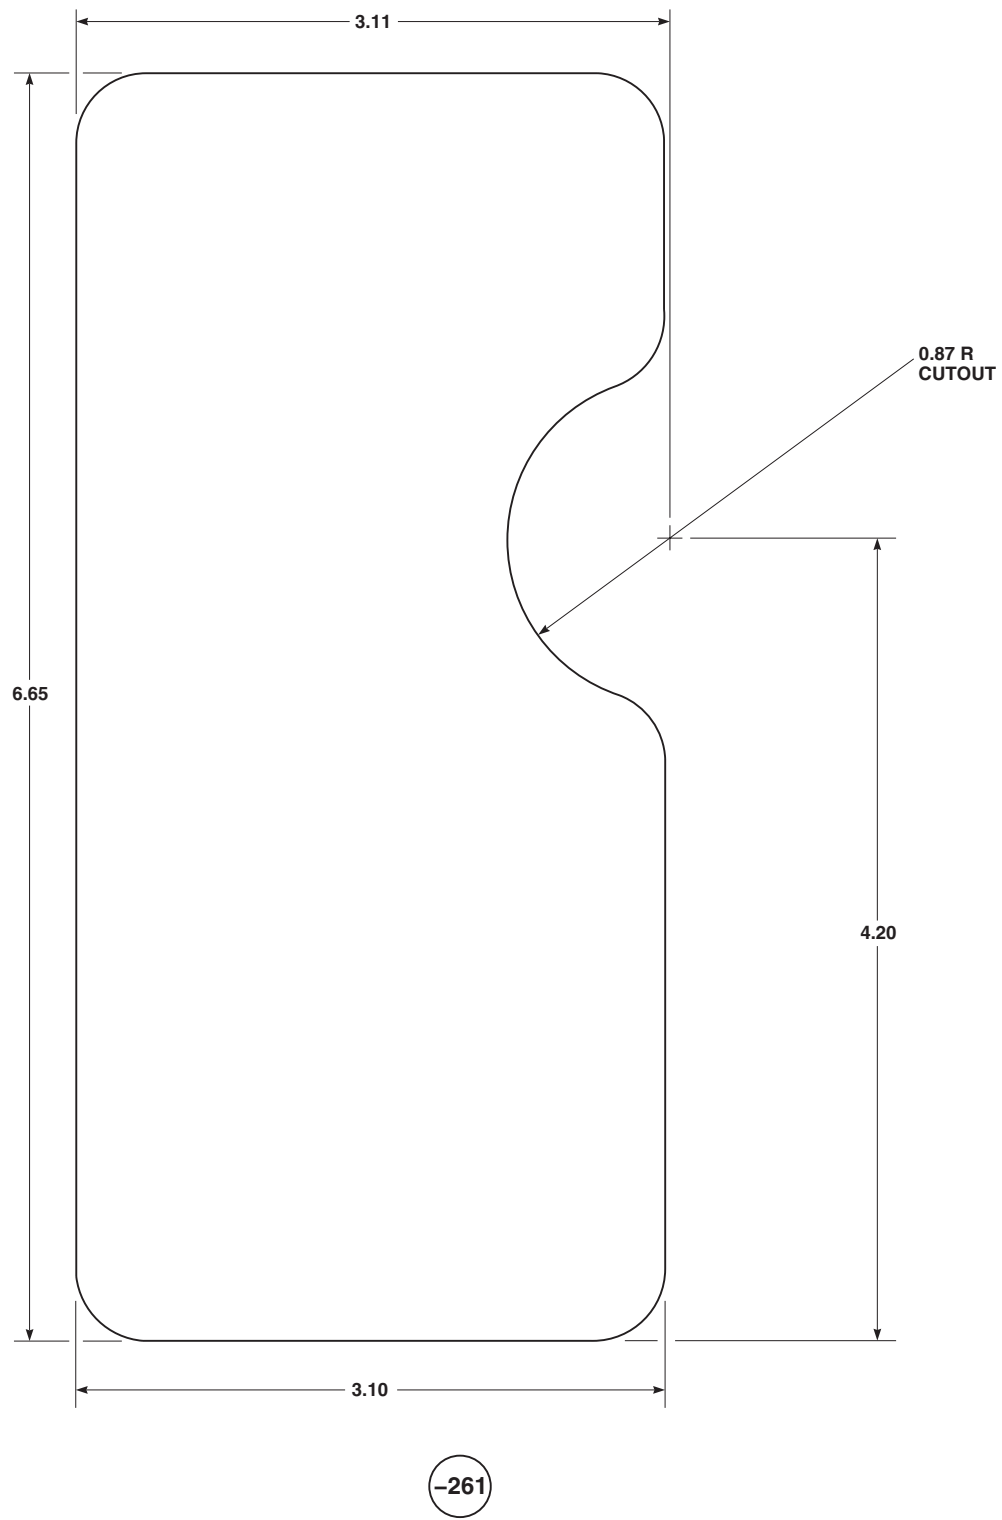


AK1770\_27A  
SA


Figure 131. Foil Panel Unusual Configuration. (Sheet 27 of 37)



FIELD MANUFACTURE ITEMS - Continued

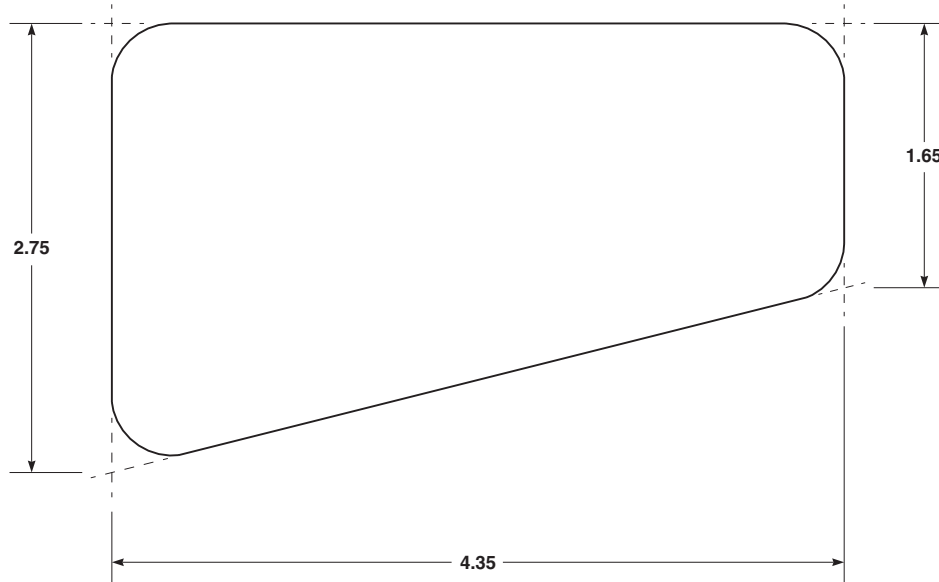

(-262)

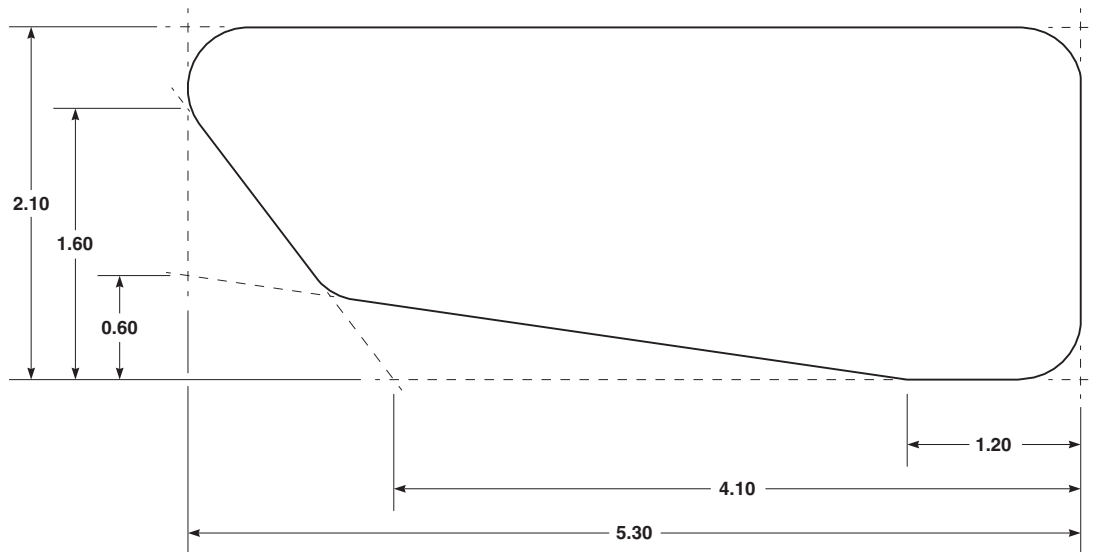


(-269) SHOWN

(-270) OPPOSITE


AK1770\_28A  
SA

Figure 131. Foil Panel Unusual Configuration. (Sheet 28 of 37)

FIELD MANUFACTURE ITEMS - Continued

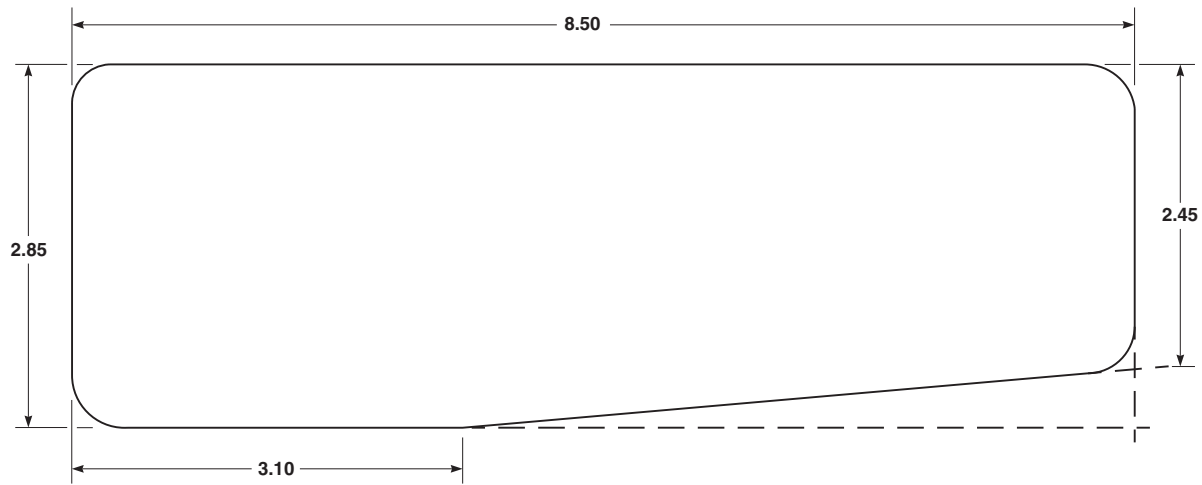

-271

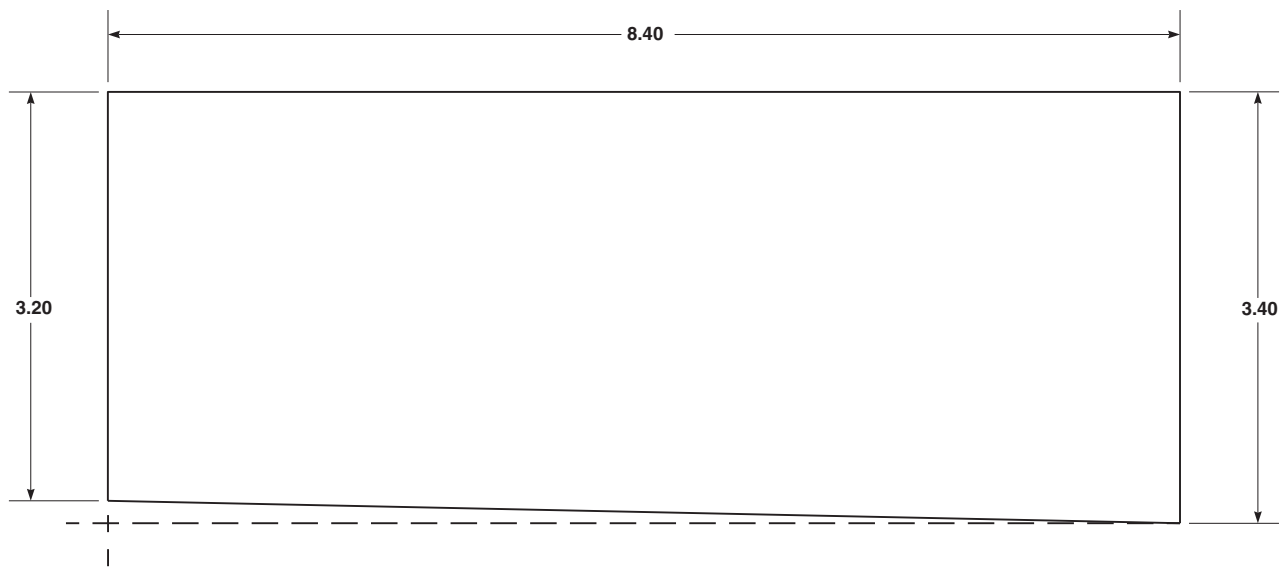



-273

AK1770\_29A  
SA

Figure 131. Foil Panel Unusual Configuration. (Sheet 29 of 37)

1805 00-254



FIELD MANUFACTURE ITEMS - Continued

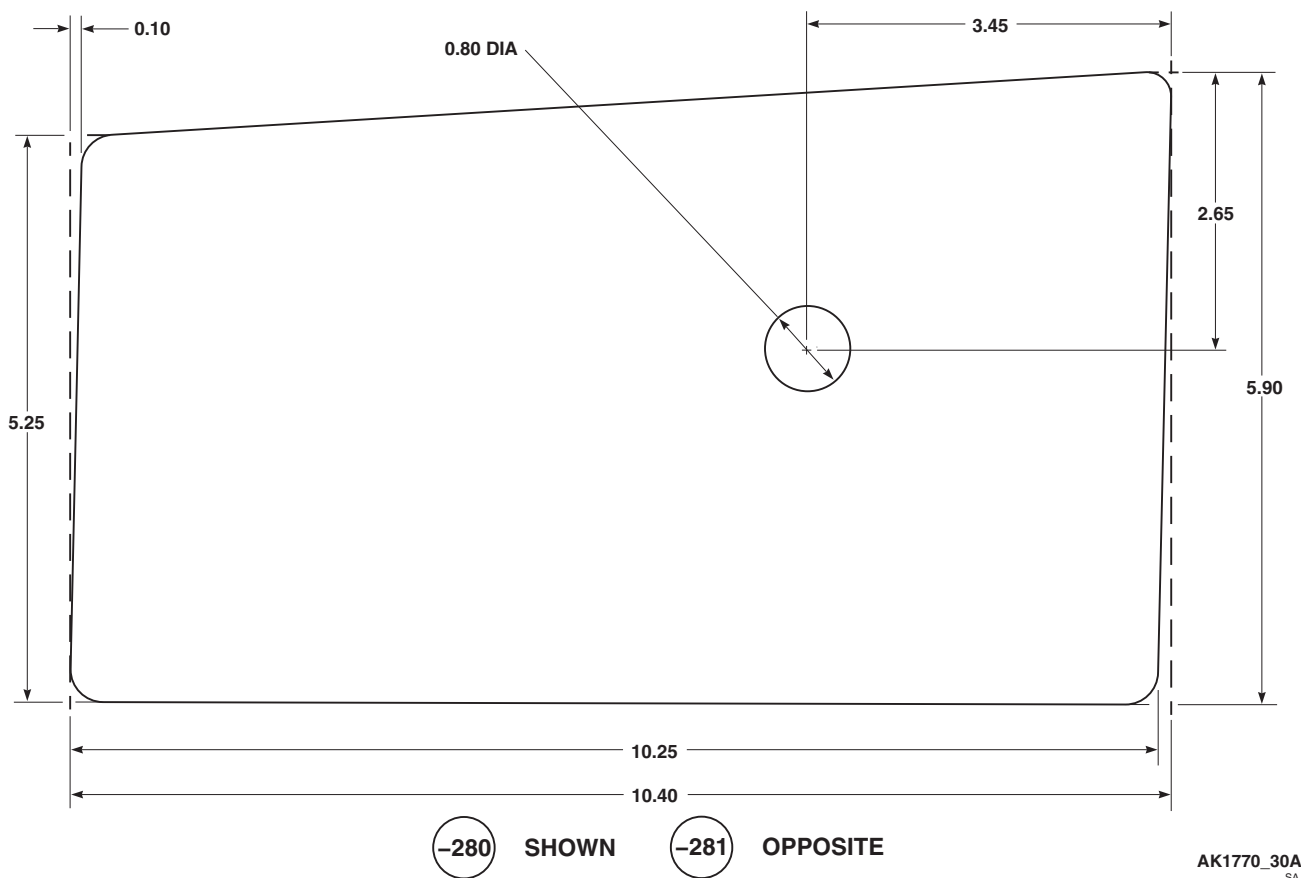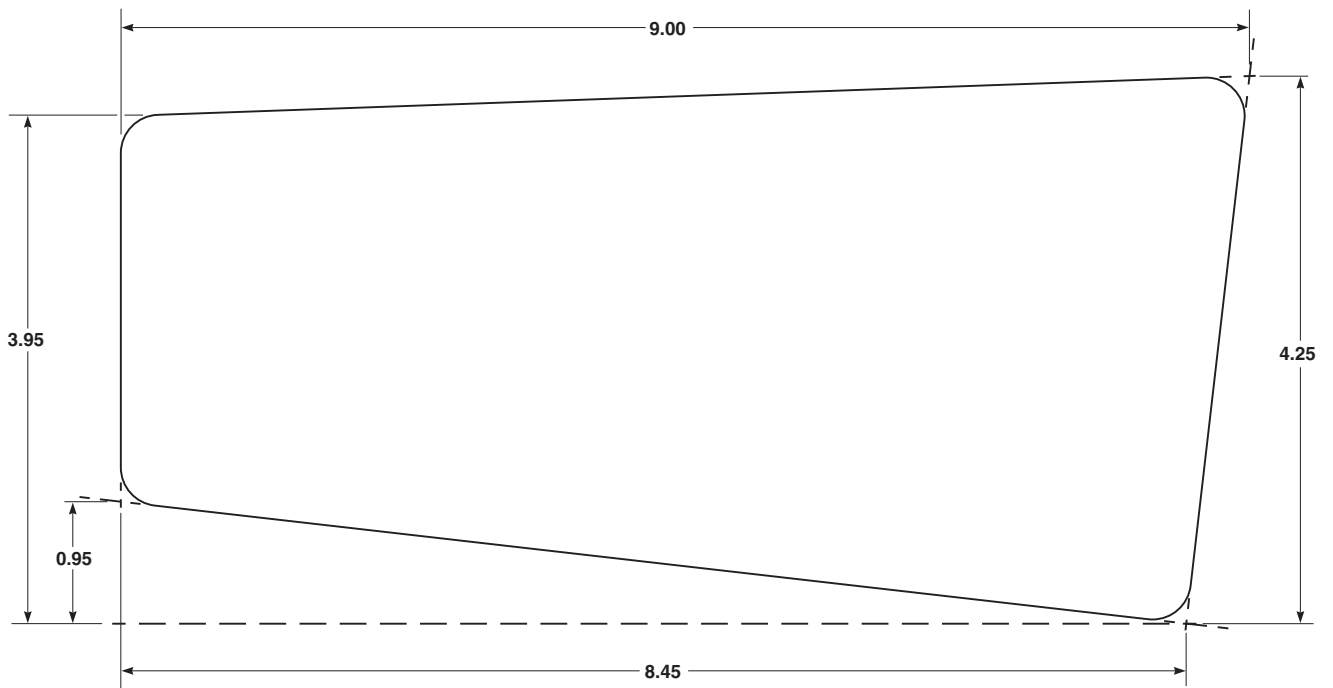

AK1770\_30A  
SA

Figure 131. Foil Panel Unusual Configuration. (Sheet 30 of 37)


FIELD MANUFACTURE ITEMS - Continued

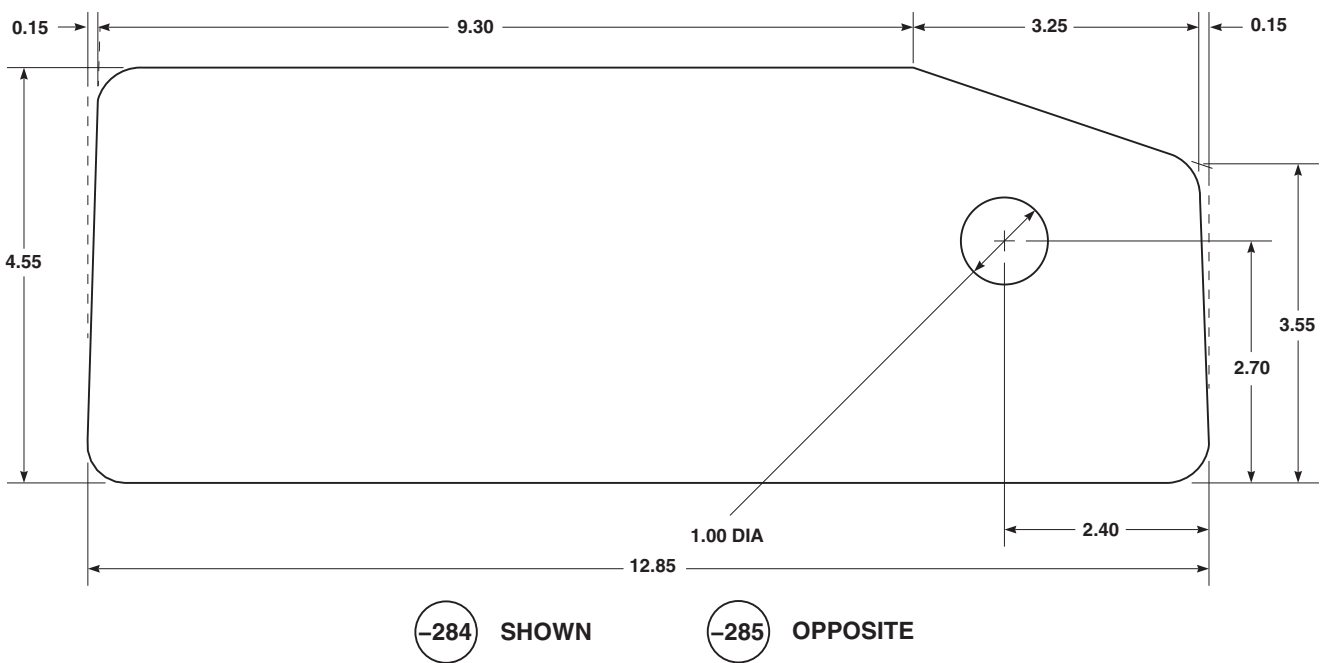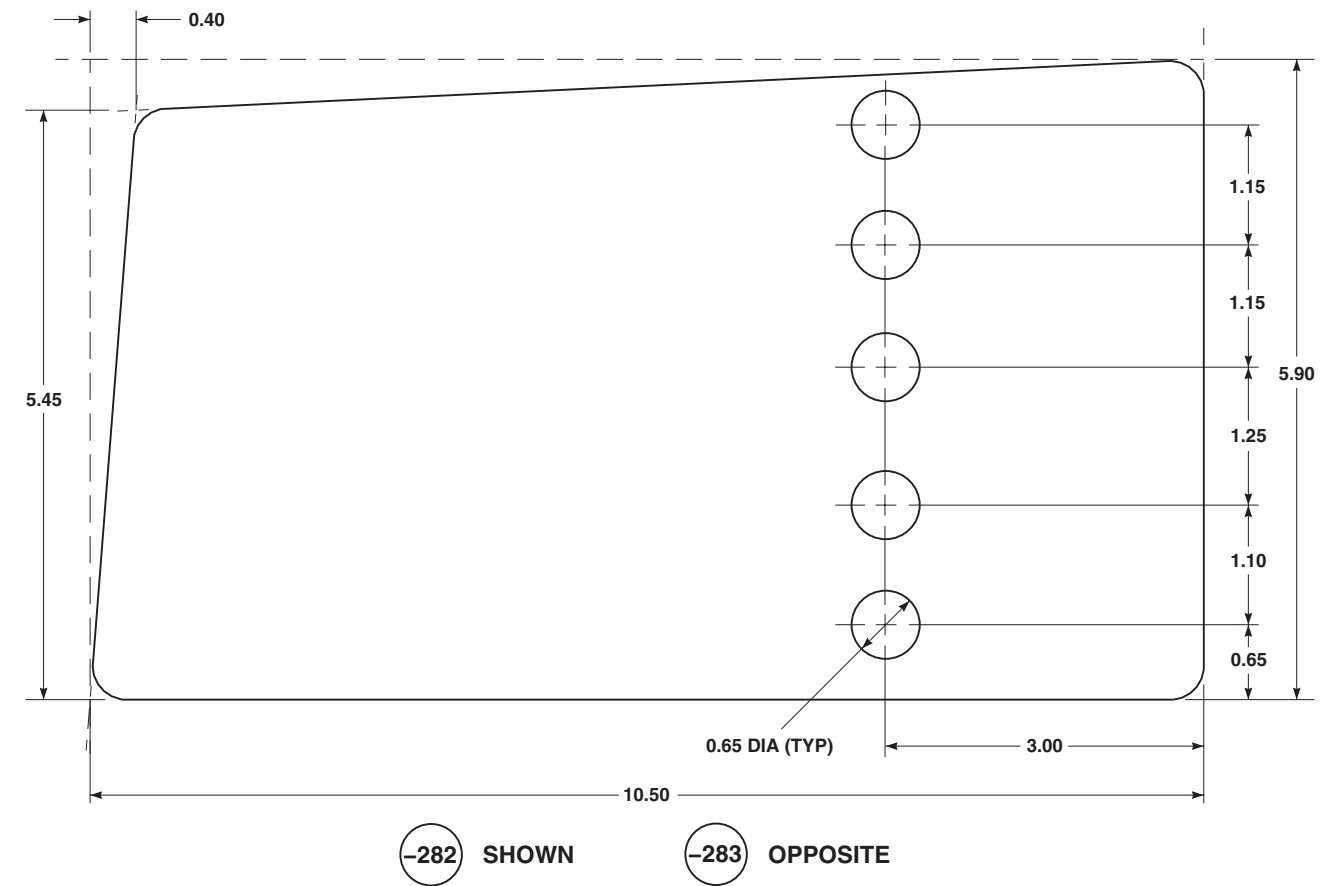


AK1770\_31A  
SA

Figure 131. Foil Panel Unusual Configuration. (Sheet 31 of 37)

FIELD MANUFACTURE ITEMS - Continued

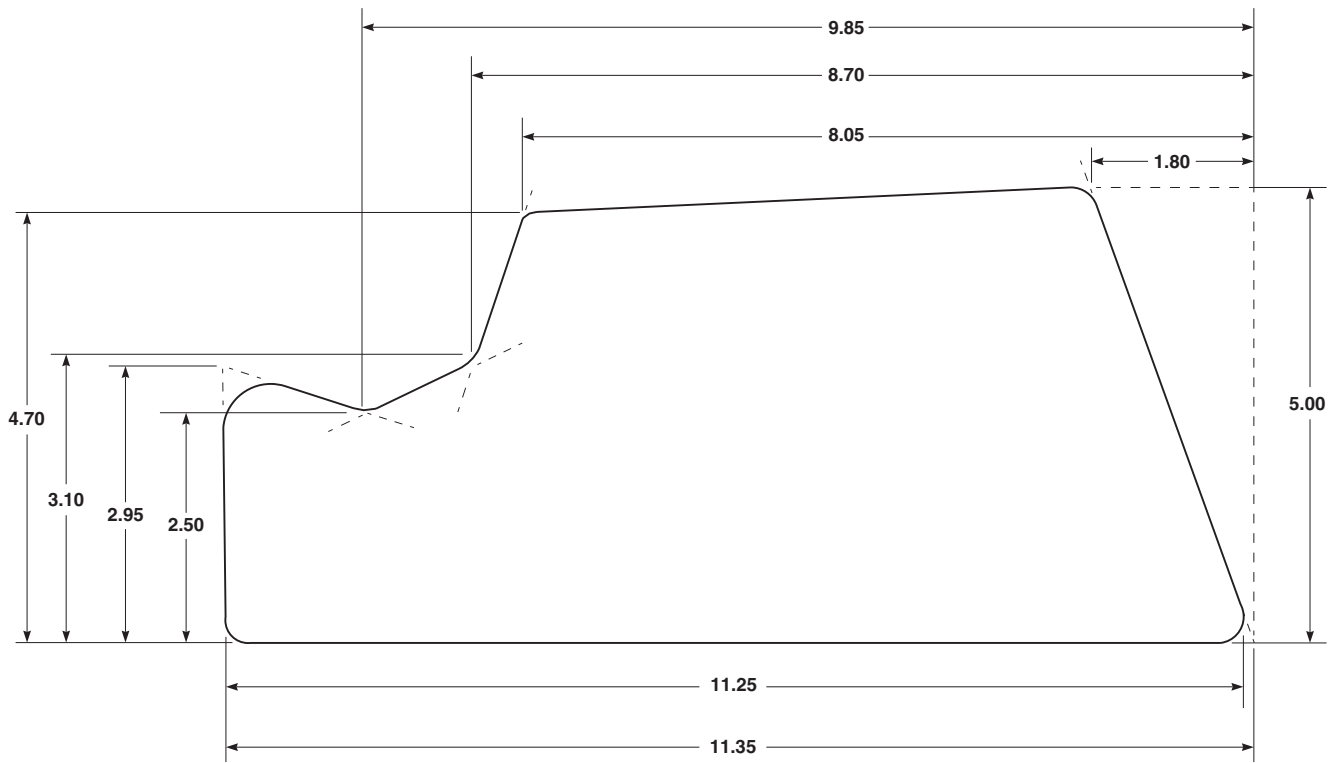

-286

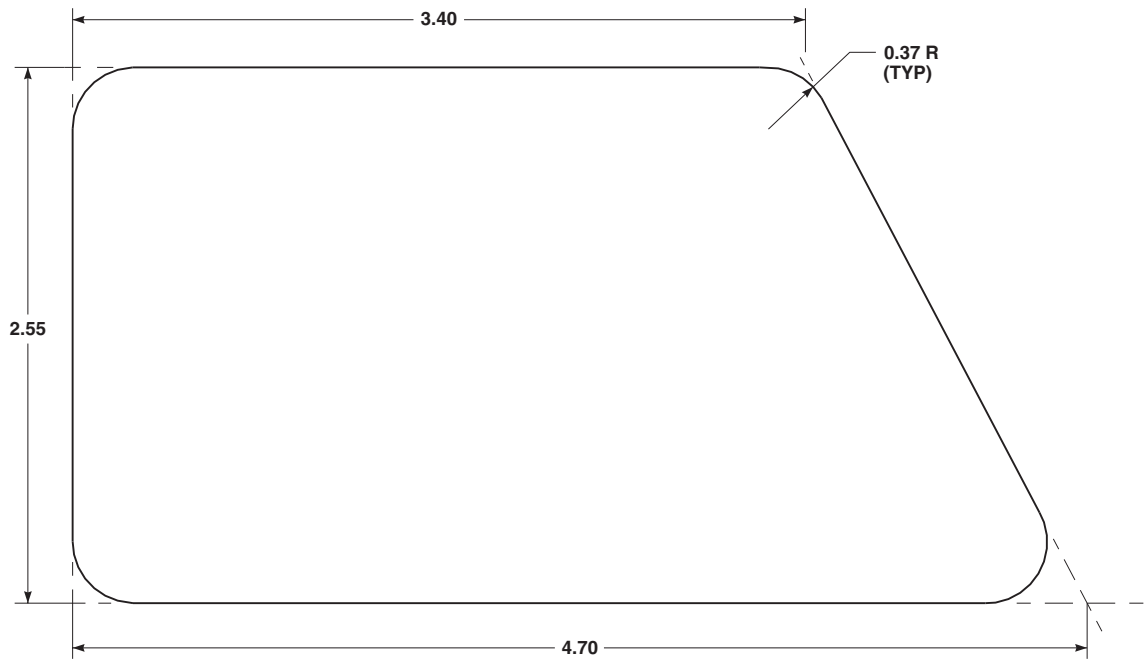


-287


AK1770\_32A  
SA

Figure 131. Foil Panel Unusual Configuration. (Sheet 32 of 37)

FIELD MANUFACTURE ITEMS - Continued

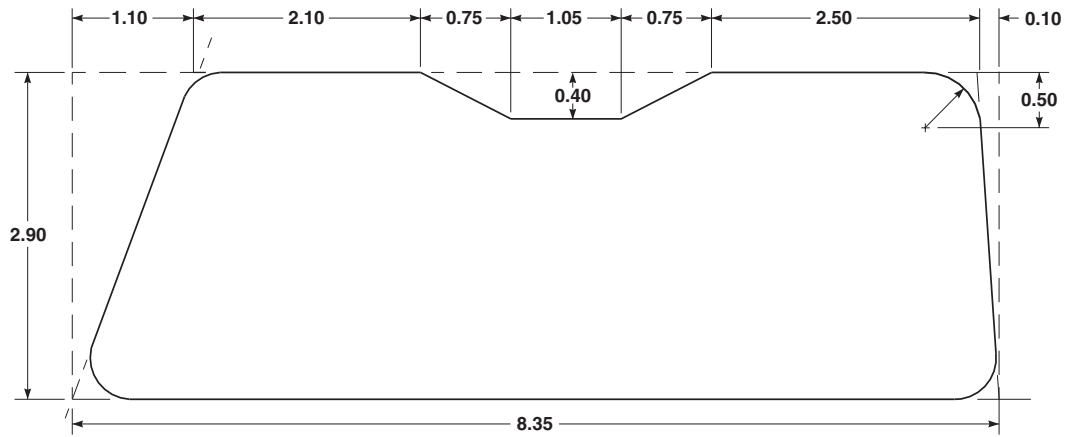

-288

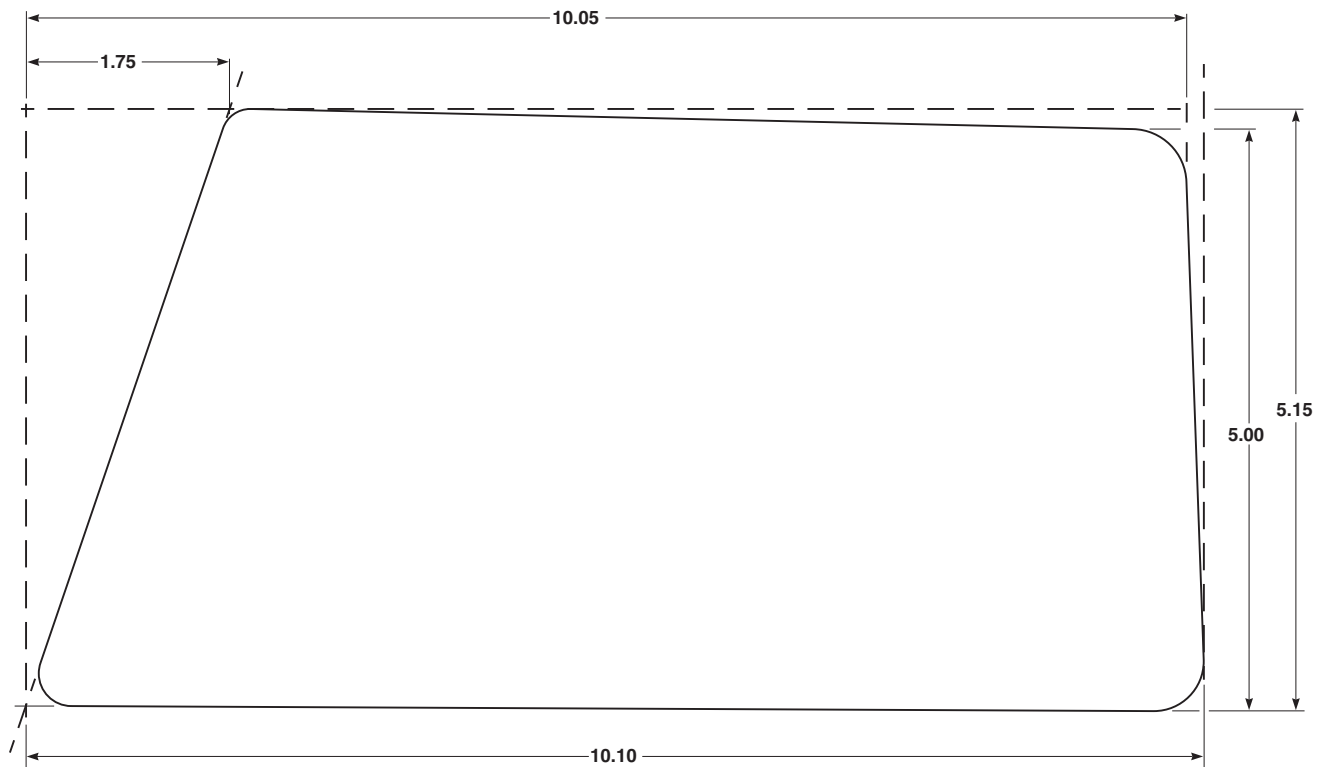


-289

AK1770\_33A  
SA

Figure 131. Foil Panel Unusual Configuration. (Sheet 33 of 37)


FIELD MANUFACTURE ITEMS - Continued

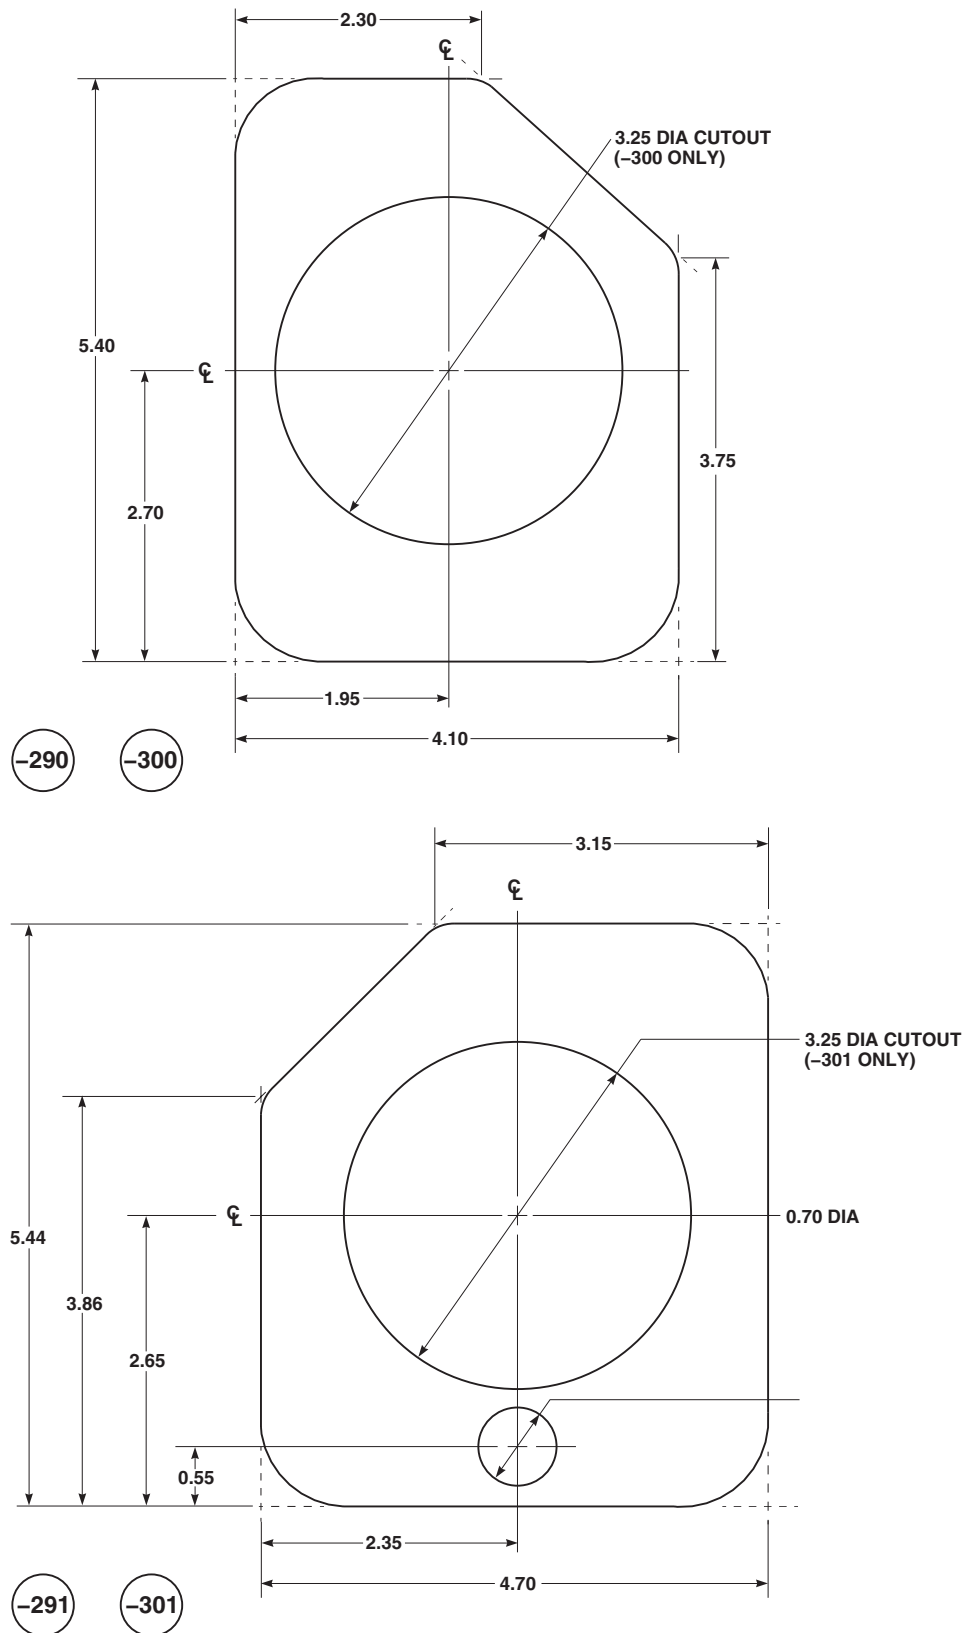


AK1770\_34A  
SA

Figure 131. Foil Panel Unusual Configuration. (Sheet 34 of 37)

FIELD MANUFACTURE ITEMS - Continued

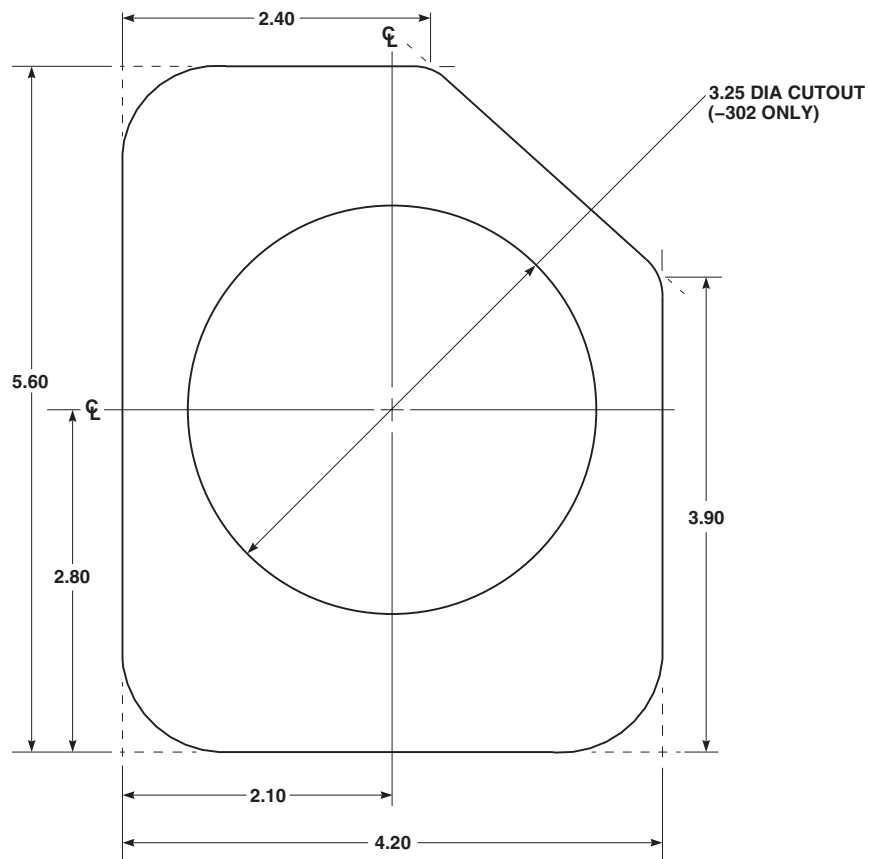

(-292) (-302)

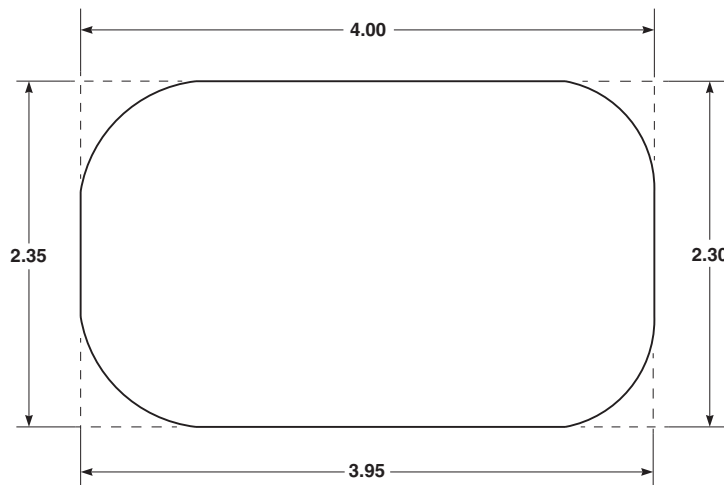


(-293)

AK1770\_35A  
SA

Figure 131. Foil Panel Unusual Configuration. (Sheet 35 of 37)



FIELD MANUFACTURE ITEMS - Continued

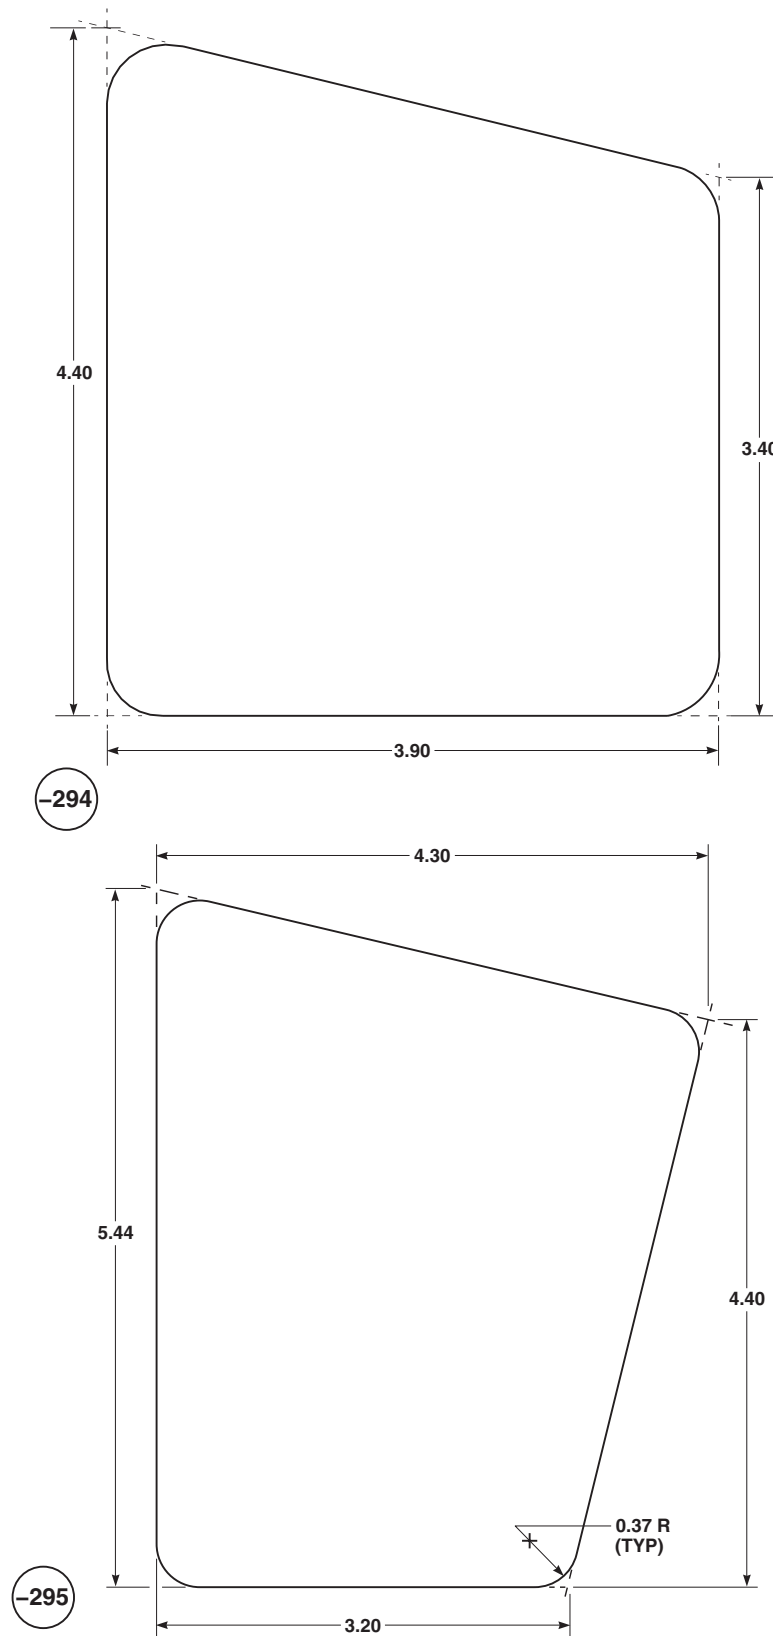

AK1770\_36A  
SA

Figure 131. Foil Panel Unusual Configuration. (Sheet 36 of 37)

---


**FIELD MANUFACTURE ITEMS - Continued****NOTES**

1. MAKE FROM DAMPING FOIL, SJ2017X, NSN 1560-01-184-1735.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. CUT DAMPING FOIL TO RECTANGULAR DIMENSIONS.
4. MEASURE AND MARK FINAL DIMENSIONS ON FOIL.
5. TRIM TO REQUIRED SIZE. ROUND OFF CORNERS TO PREVENT DELAMINATION. MINIMUM RADIUS IS 0.28 INCH.
6. IDENTIFY PARTS PER MIL-STD-130.
7. DASH NUMBERS SHOWN ARE TAKEN FROM SIKORSKY DRAWING, NUMBER 70500-02066, DAMPING INSTL-SOUND-ABSORBING.

AK1770\_37A  
SA

Figure 131. Foil Panel Unusual Configuration. (Sheet 37 of 37)

## FIELD MANUFACTURE ITEMS - Continued

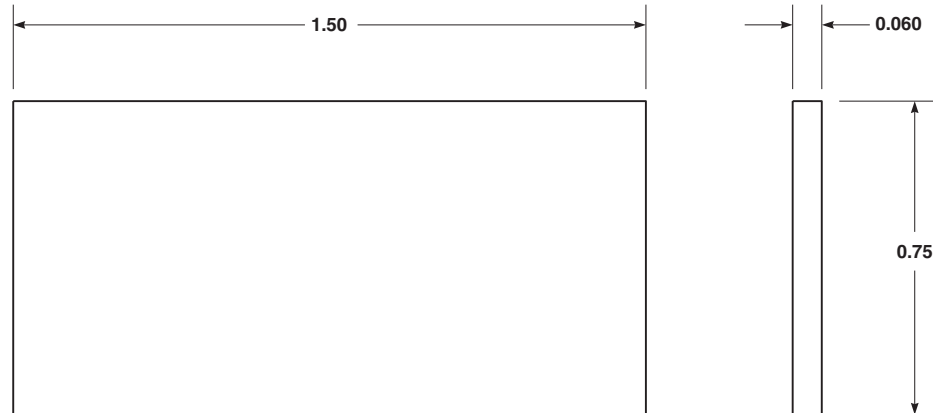

## NOTES

1. MAKE FROM 0.060 INCH THICK, CLASS 2, GRADE 60 RUBBER, MIL-R-6855, NSN 9320-01-157-9070.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. IDENTIFY PARTS PER MIL-STD-190. STAMP OR STENCIL PART NUMBER AND DATE OF MANUFACTURE ON PARTS WITH OPAQUE GREEN INK, TT-I-1795. USE 1/16 TO 1/8 INCH HIGH SANS SERIF CHARACTERS.


EXAMPLE: P/N 70216-02401-107      3Q 86  
                     PART NUMBER      THIRD QUARTER 1986

PART NUMBER: 70212-02139-106

AK1771A  
 SA

Figure 132. Upper Fuselage Gasket.

## FIELD MANUFACTURE ITEMS - Continued

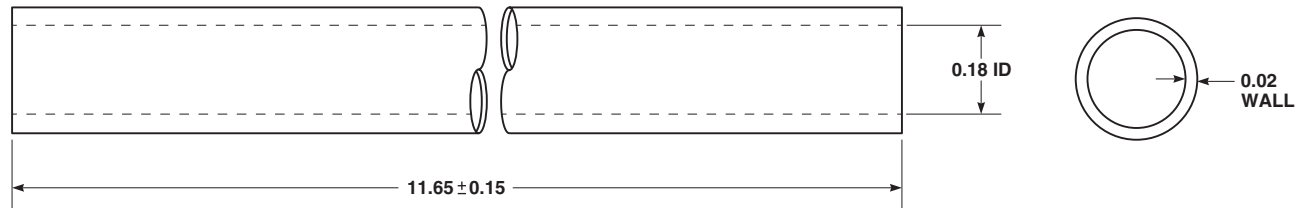

## NOTES


1. CUT TUBING TO LENGTH PER FIGURE, USING MS23053 / 5-105-C, NSN 5970-01-132-9963 MATERIAL.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. IDENTIFY PARTS PER MIL-STD-130.

PART NUMBER: 2652559-1

AK1772A  
SA

Figure 133. Chain Assembly Tubing.

---

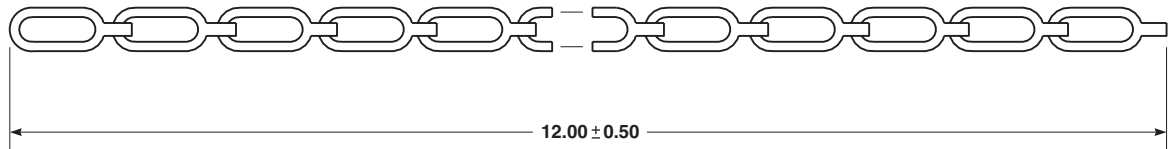FIELD MANUFACTURE ITEMS - Continued

## NOTES


1. MAKE FROM NO. 00 STEEL WELDLESS SAFETY CHAIN, RR-C-271, TYPE II, CLASS 2, CAGE 81348.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. CUT CHAIN TO REQUIRED LENGTH PER FIGURE.
4. IDENTIFY PARTS PER MIL-STD-130.

PART NUMBER: 1427-566558


AK1773B  
SA

Figure 134. Safety Chain.

FIELD MANUFACTURE ITEMS - Continued

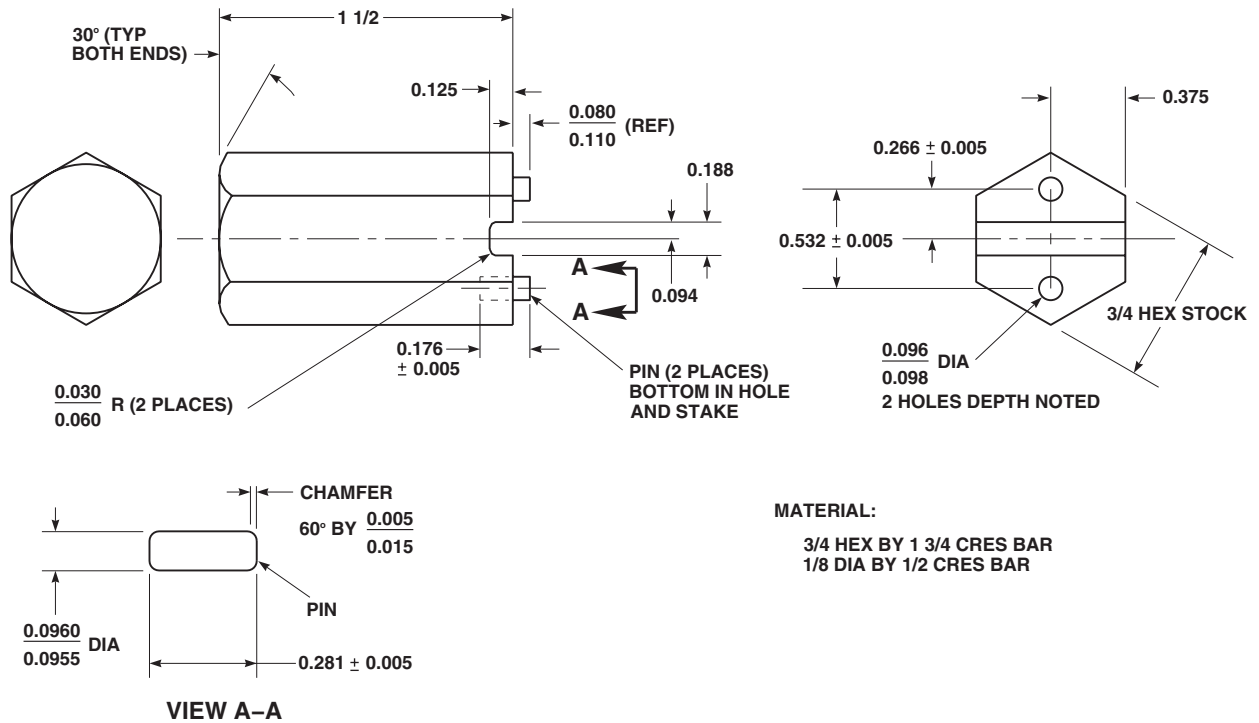

BREECH CAP PLUG ASSEMBLY WRENCH

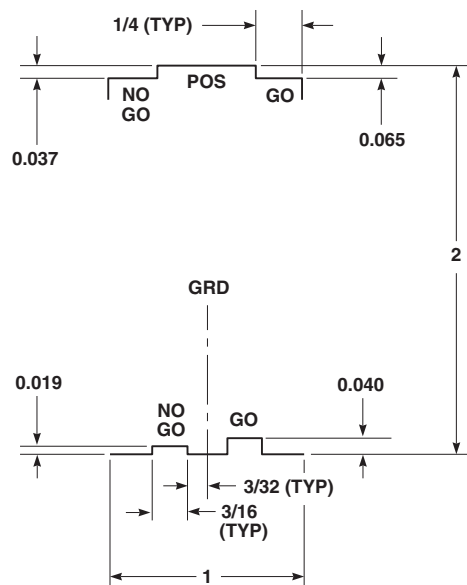

MATERIAL:

SAE 4130 STEEL OR EQUIVALENT 0.060 TO 0.095. USE 1/8 INCH STEEL STENCIL FOR LETTERS.

NOTE

ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.

GO-NO-GO BREECH CAP GAGE

AB2651  
SA

Figure 135. Breech Cap Plug Assembly Wrench and Go-No-Go Breech Cap Gage.

## FIELD MANUFACTURE ITEMS - Continued


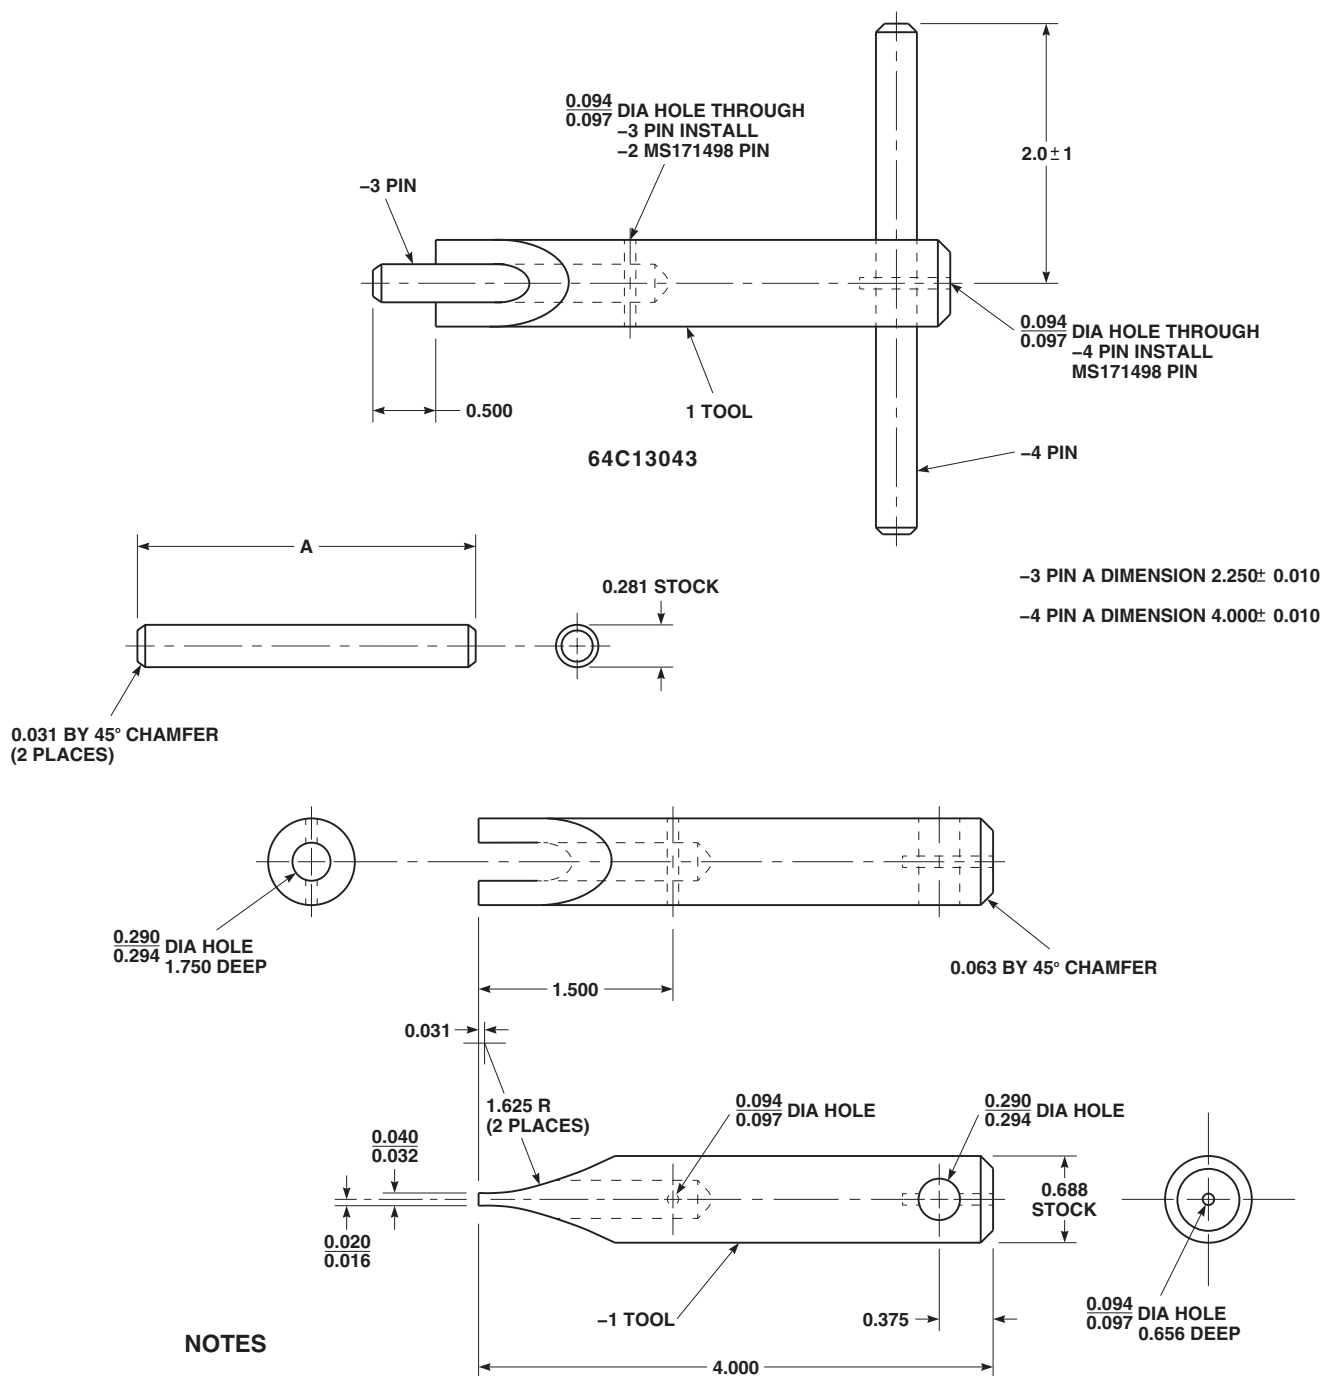
AB2652  
SA

Figure 136. Piston Guide Removal Tool.

## FIELD MANUFACTURE ITEMS - Continued

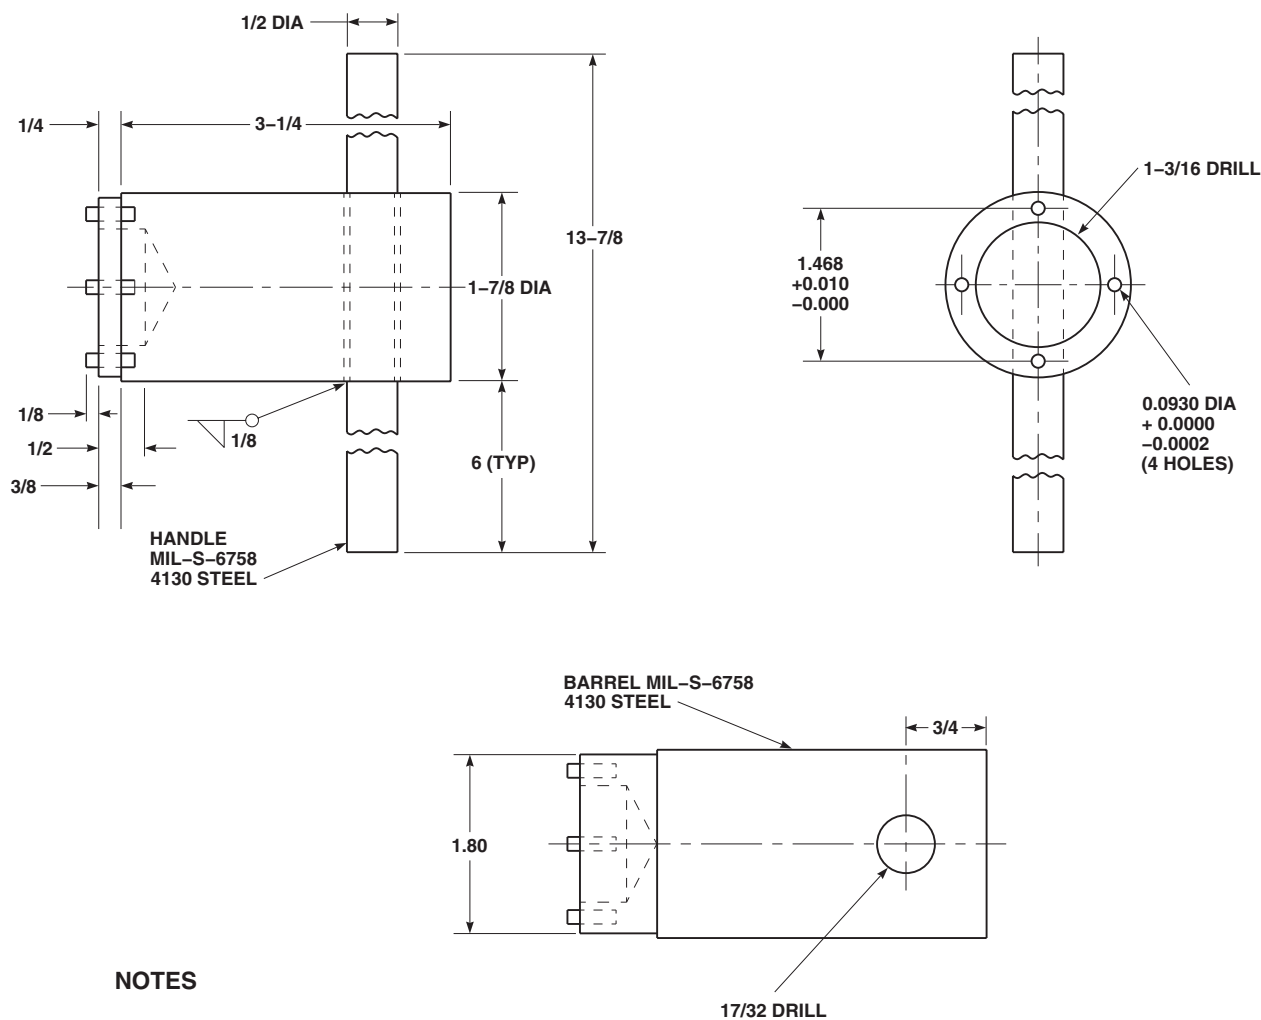

## NOTES


1. TOLERANCES  
FRACTIONS  $\pm 1/64$   
DECIMALS  $.XX \pm 0.03$   
125  $.XXX \pm 0.010$   
✓ ALL MACHINED SURFACES  
REMOVE BURRS & BREAK SHARP  
EDGES 0.005 -0.015
2. TREATMENT: HEAT TREAT BARREL  
AND HANDLE TO C-35 CONDITION  
PER MIL-H-6875.
3. FINISH: MIL-S-5002, CAD PLATE  
QQ-P-416 TYPE 1, CLASS C.
4. ALL DIMENSIONS ARE IN INCHES  
UNLESS NOTED.

AB2653  
SA

Figure 137. Piston Plug Removal Tool.



## FIELD MANUFACTURE ITEMS - Continued

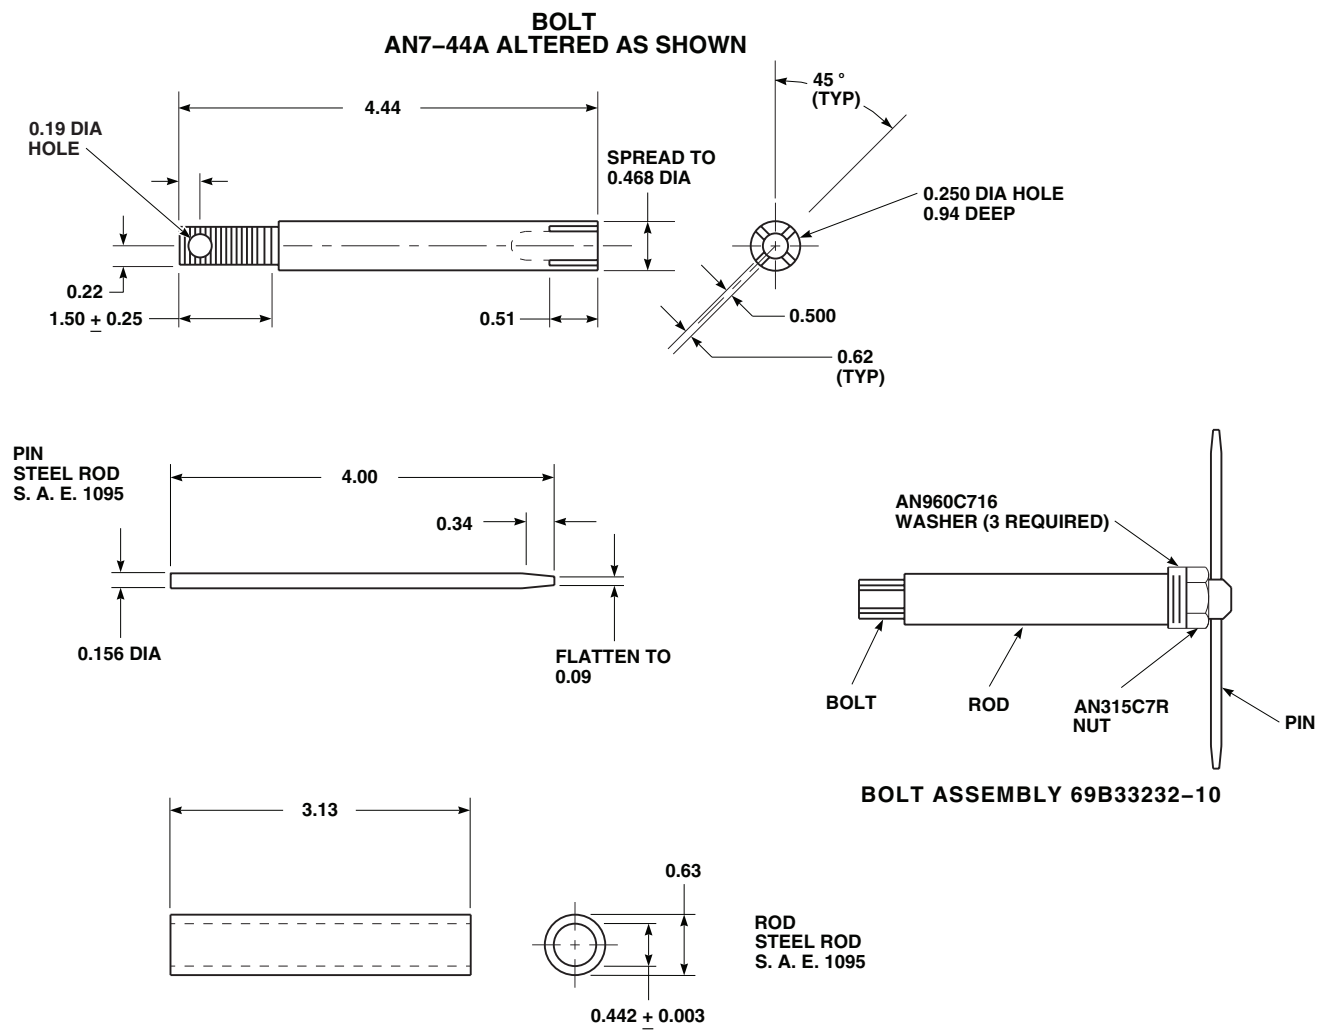
**NOTE**

ALL DIMENSIONS ARE IN INCHES  
UNLESS NOTED.

AB2654  
SA

Figure 138. ESSS Wrench.

## FIELD MANUFACTURE ITEMS - Continued

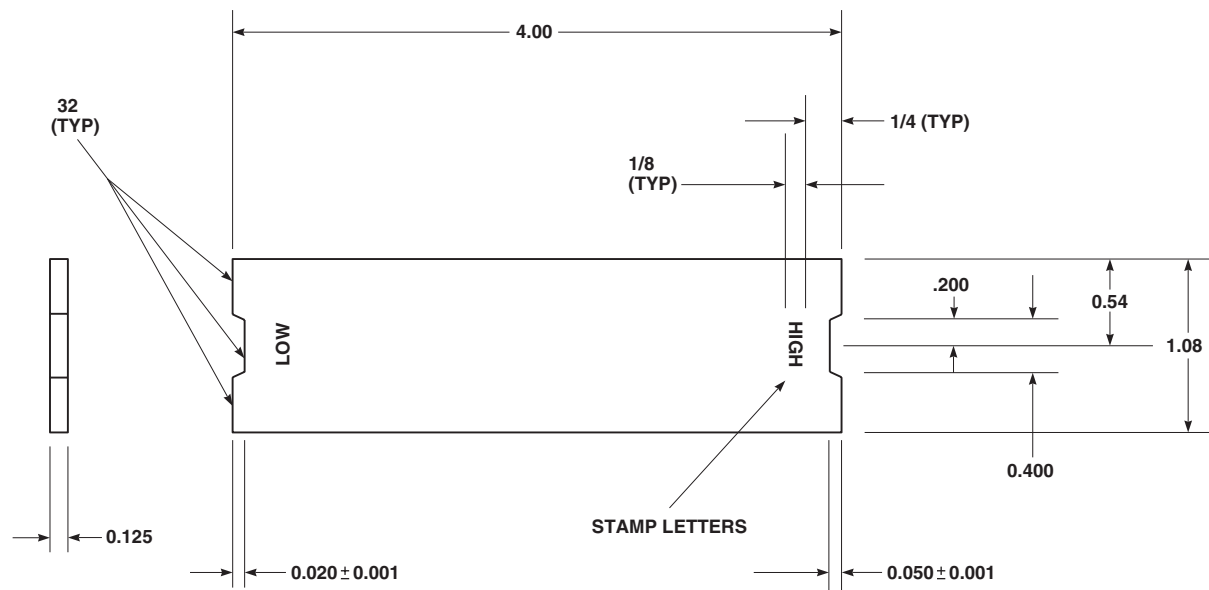


## NOTES

1. MATERIAL CRES 17-4PH COND "A".
2. HEAT TREAT TO COND 11925 PER MIL-H-6875.
3. CLEAN AND PASSIVATE PER QQ-P-35.
4. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.

AK1777A  
SA

Figure 139. High-Low Gage.

## FIELD MANUFACTURE ITEMS - Continued

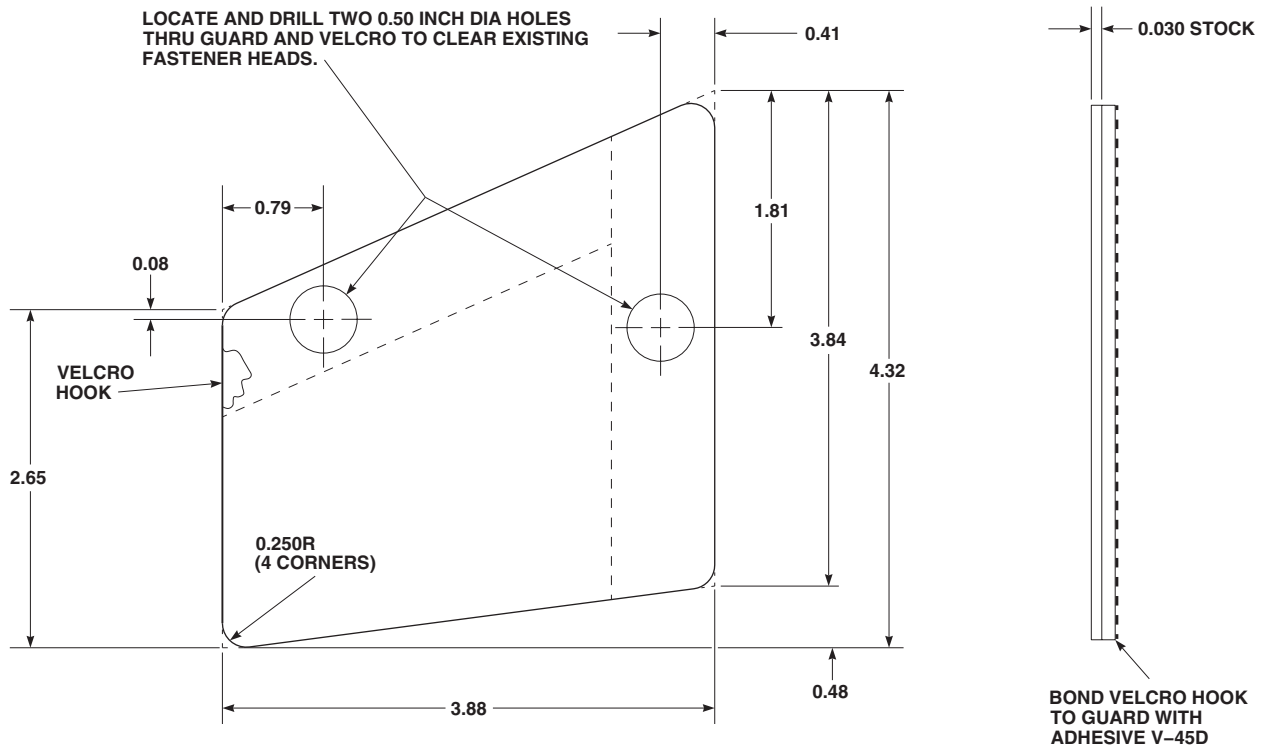

## NOTES



1. MAKE FROM CLEAR ACRYLIC PLASTIC SHEET, MIL-P-46144, TYPE I, CLASS 2, 0.030 INCH THICK, NSN 9330-01-208-1024.
2. BOND VELCRO HOOK TAPE TO GUARD WITH ADHESIVE, V45D, NSN 8040-01-203-8976.
3. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
4. IDENTIFY PARTS PER MIL-STD-130.
5. REMOVE BURRS AND SHARP EDGES.
6. USE 0.50-INCH WIDE VELCRO HOOK, NSN 8315-01-213-9560.

PART NUMBER: 70217-02708-051

AK1779A  
SA

Figure 140. Jettison Handle Guard.

## FIELD MANUFACTURE ITEMS - Continued

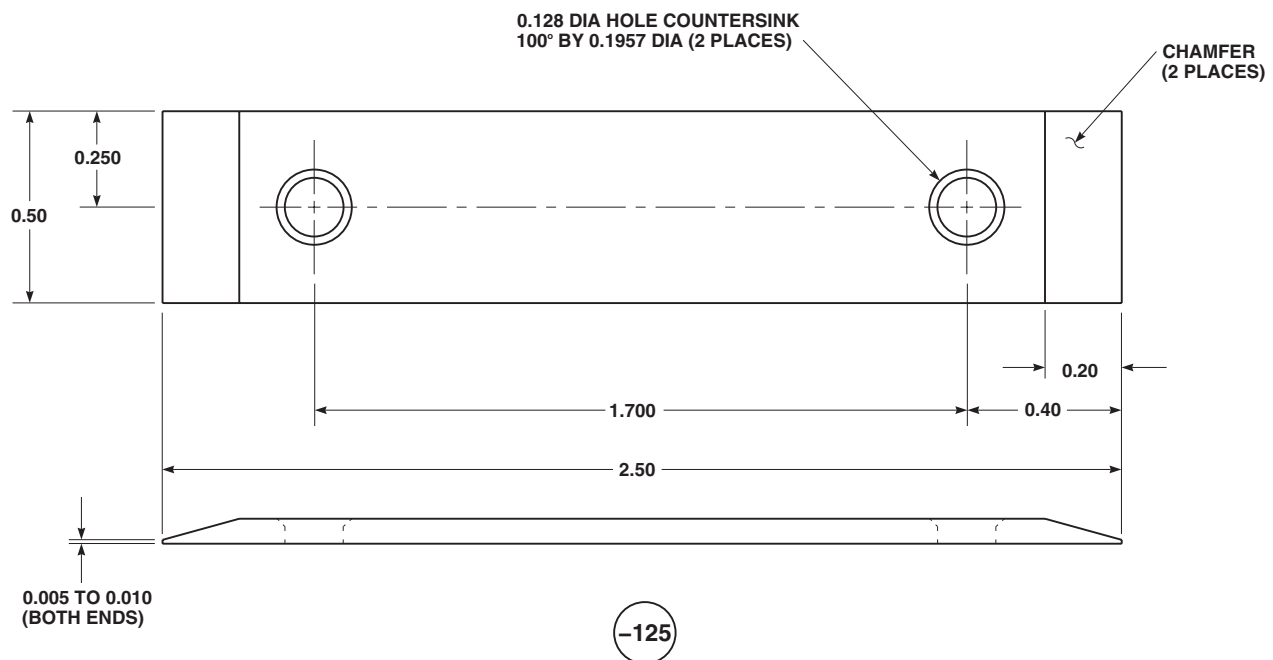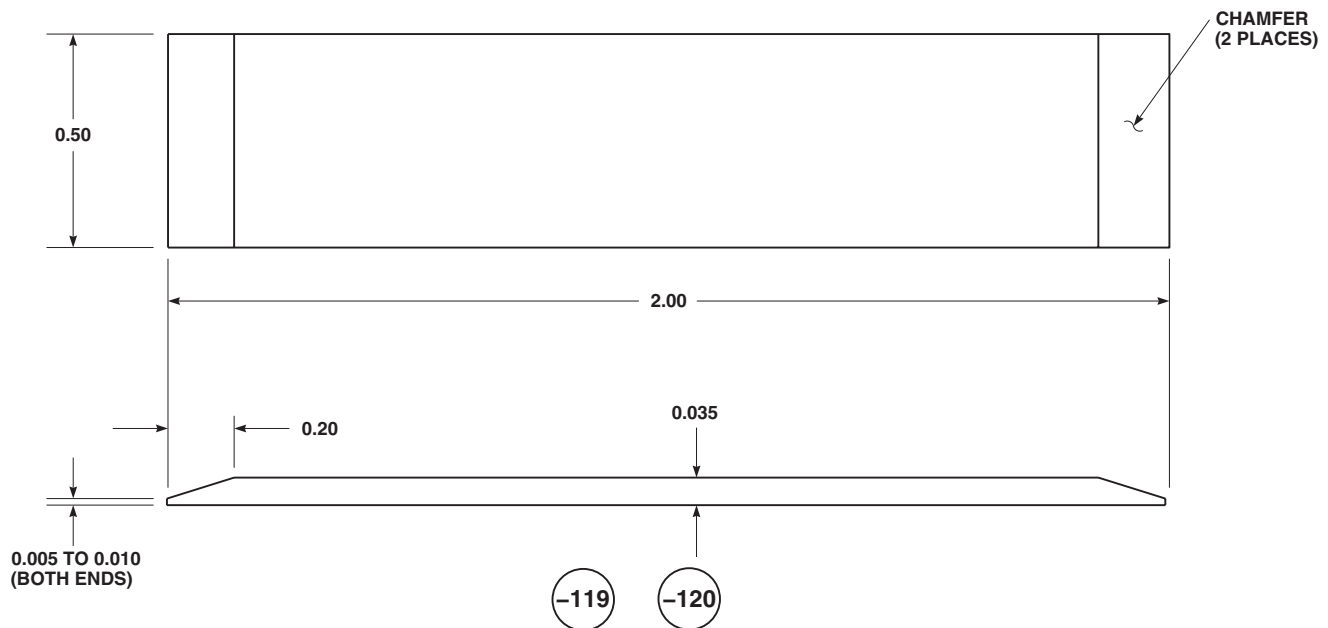

## NOTES


1. MAKE FROM STAINLESS STEEL, MIL-S-5059, 301 1/2 HARD, 0.036 INCH THICK, NSN 9515-00-235-7610.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. INSULATE DISSIMILAR METALS ON INSTALLATION (TM 1-1500-204-23).
4. IDENTIFY PARTS PER MIL-STD-130.

PART NUMBER: 70207-02727-119, -120, -125

AK1780B  
SA

Figure 141. Wear Strip.

## FIELD MANUFACTURE ITEMS - Continued

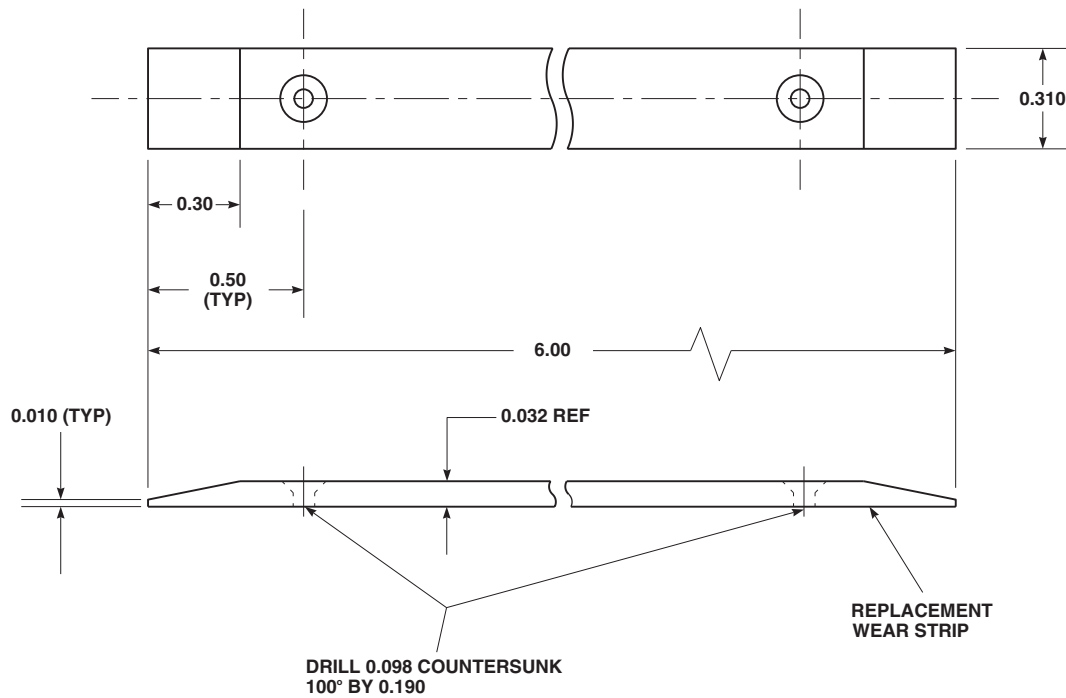


## NOTES

1. MAKE FROM STAINLESS STEEL, MIL-S-5059, 301 1/2 HARD, 0.032 INCH THICK.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. INSULATION DISSIMILAR METALS ON INSTALLATION (TM 1-1500-204-23).

AK2215\_1B  
SA

Figure 142. Wear Strip - Cargo Door Upper Track.

## FIELD MANUFACTURE ITEMS - Continued

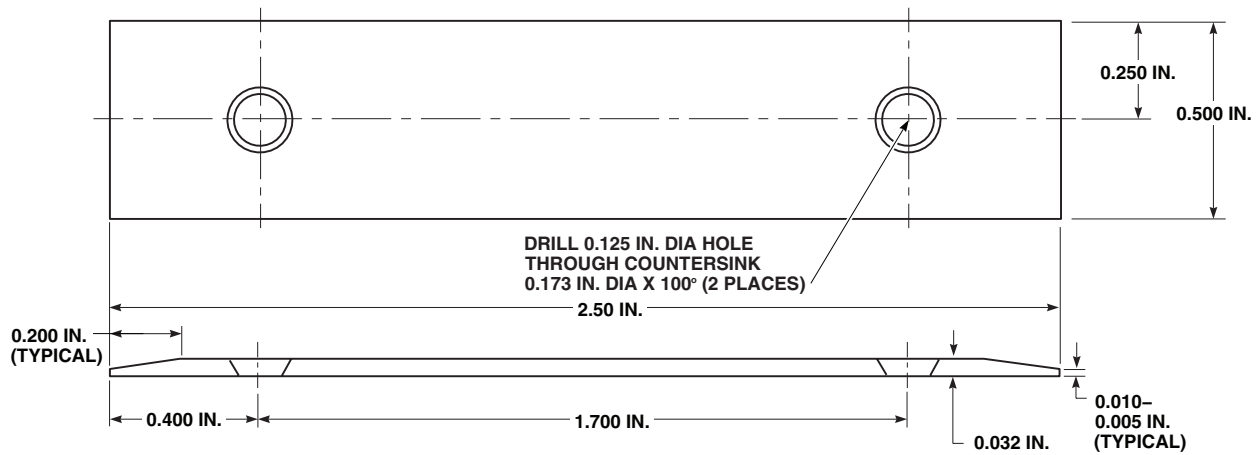


## NOTES

1. MAKE FROM STAINLESS STEEL, MIL-S-5059, 301 1/2 HARD, 0.032 INCH THICK.
2. ALL DIMENSIONS ARE IN INCHES.
3. INSULATE DISSIMILAR METALS ON INSTALLATION (TM 1-1500-204-23).


AK2787A  
SA

Figure 143. Wear Strip - Cargo Door Lower Track.

## FIELD MANUFACTURE ITEMS - Continued

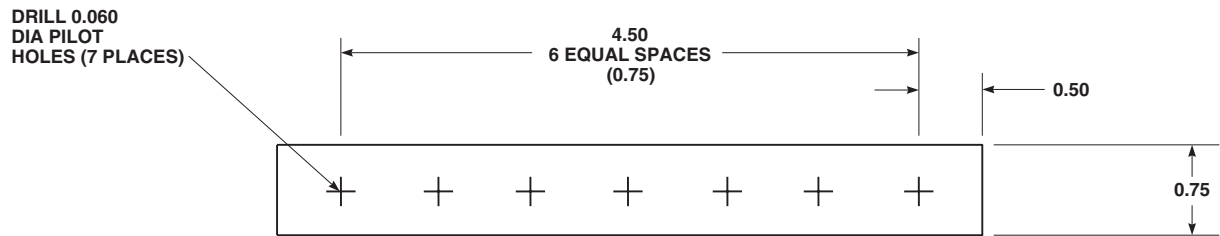

(-115) STRAP

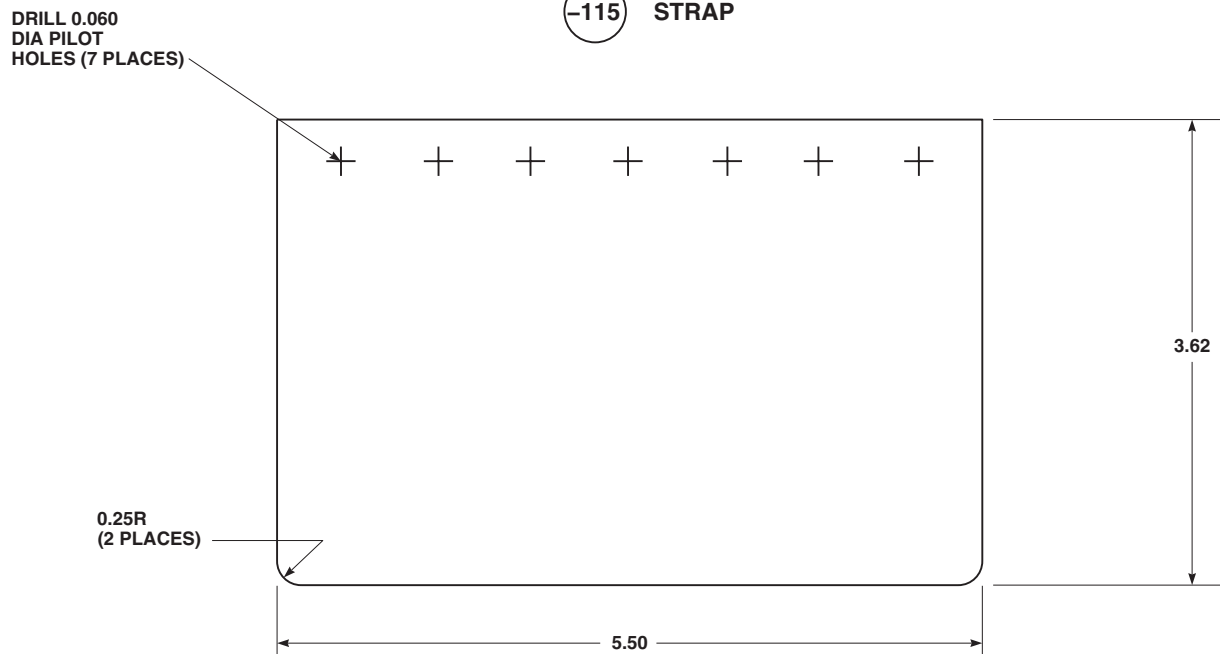

(-120) FLAP

## NOTES


1. MAKE 70205-06052-120 FROM 0.040 INCH THICK NYLON, L-P-410, NSN 9330-00-602-5921.
2. MAKE 70205-06052-115 FROM 0.040 INCH THICK ALUMINUM SHEET, QQ-A-250-13, 7075-T6.
3. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.

PART NUMBER: 70205-06052-115, -120

AB1289C  
SA

Figure 144. Hand Hold Flap and Strap.

---

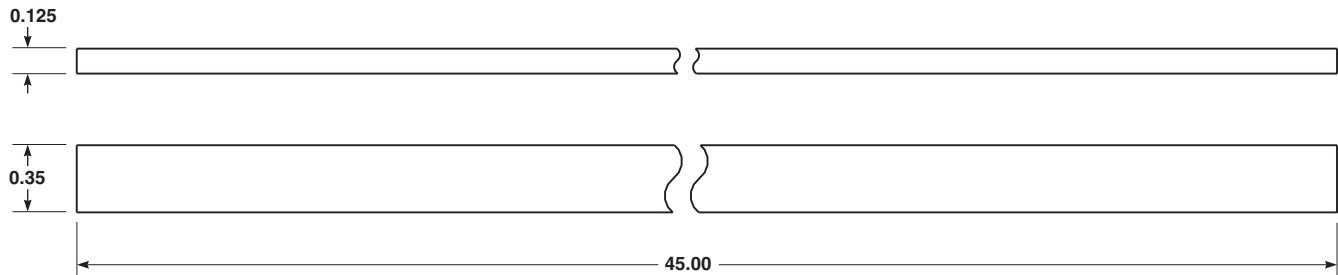FIELD MANUFACTURE ITEMS - Continued**NOTES**


1. MAKE FROM MIL-R-6855, CLASS 1, GRADE 40.
  2. NSN 9320-00-059-6504, 9320-00-241-9745, 5330-00-385-4446.
  3. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
- PART NUMBER: 70215-05002-130, -131.

AA9351A  
SA

Figure 145. Strip, Tail Rotor Drive Shaft Cover.



## FIELD MANUFACTURE ITEMS - Continued

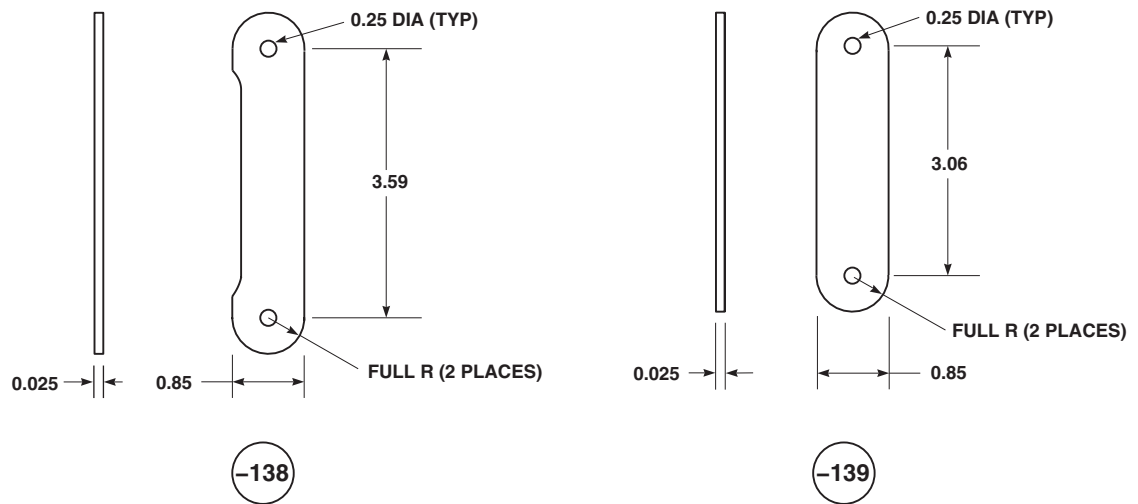

## NOTES


1. MAKE FROM 7075-T6 ALUMINUM ALLOY, QQ-A-250-13.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. IDENTIFY PARTS PER MIL-STD-130.

PART NUMBER: 70211-02104-138, -139

AK1784A  
SA

Figure 146. Frame Shim.

## FIELD MANUFACTURE ITEMS - Continued

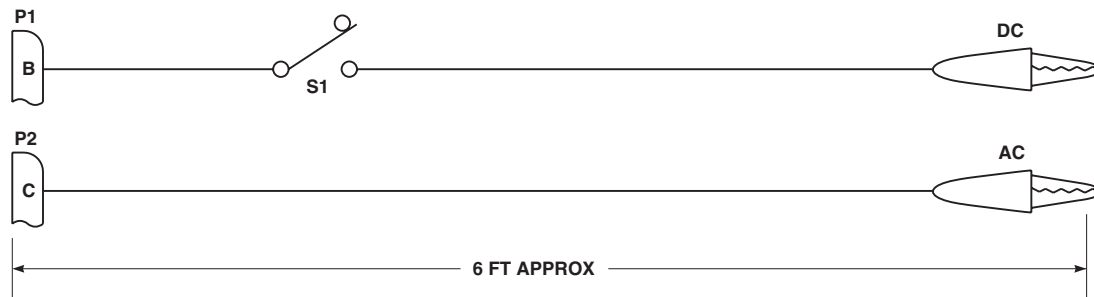

| NOMENCLATURE       | PART NUMBER      | QUANTITY       |
|--------------------|------------------|----------------|
| BOOT               | 5975-00-503-1440 | 2              |
| CONNECTOR, P1      | MS3456L16-11P    | 1              |
| CONNECTOR, P2      | MS3456L20-4P     | 1              |
| SWITCH             | MS25089-4GR      | 1              |
| TAPE ELECTRICAL    | 5790-419-4290    | AS REQUIRED    |
| WIRE               | 18-GAGE          | 12 FT (APPROX) |
| TUBING, INSULATION | MIL-I-631        | 12 FT (APPROX) |


## NOTE

IDENTIFY CONNECTORS AND ALLIGATOR CLIPS AS SHOWN.

AK1786  
SA


Figure 147. Blade Deice Test Harness.

FIELD MANUFACTURE ITEMS - Continued

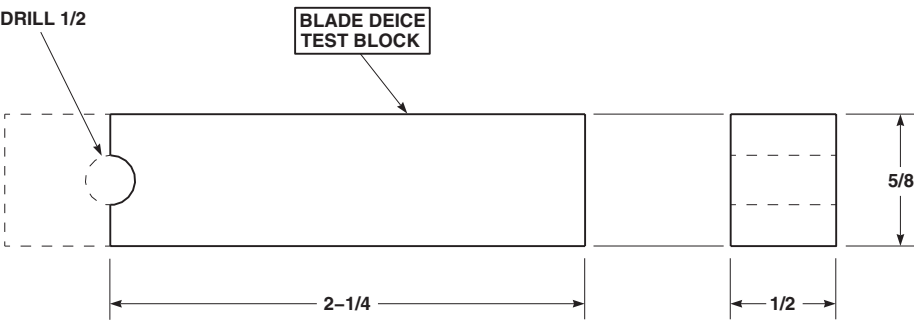

| NOMENCLATURE   | PART NUMBER | QTY |
|----------------|-------------|-----|
| PHENOLIC BLOCK | 1/2 THICK   | 1   |


NOTES

- 1. DRILL 1/2 INCH HOLE: THEN CUT END OF BLOCK OFF.
- 2.  INDICATES SUGGESTED MARKING.
- 3. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.

AK1787A  
SA

Figure 148. Blade Deice Test Block.

FIELD MANUFACTURE ITEMS - Continued

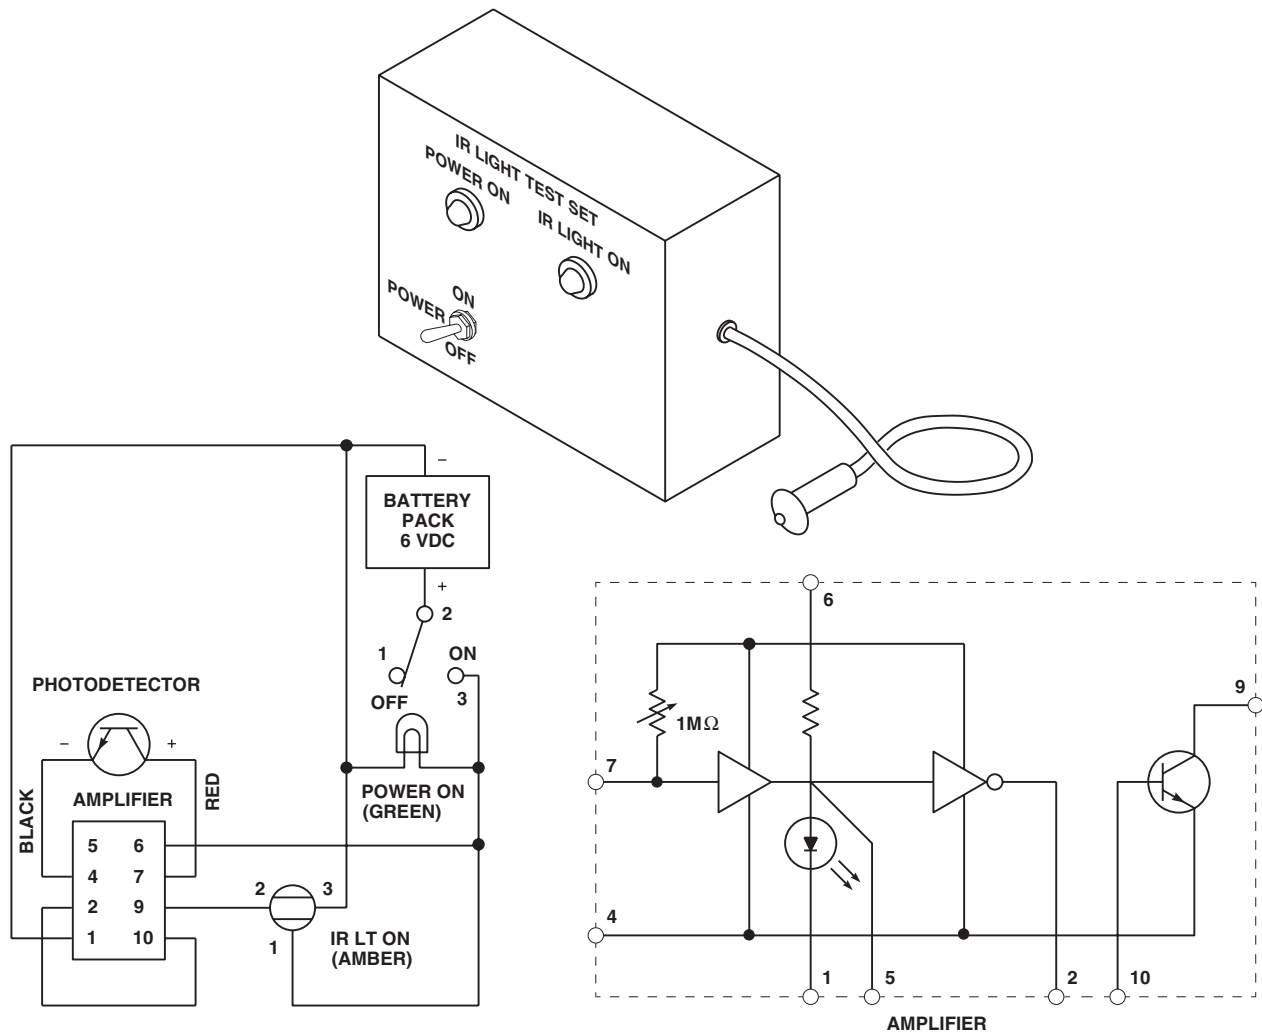

| NOMENCLATURE                 | PART NUMBER      | FSCM  | QTY | VENDER NAME             |
|------------------------------|------------------|-------|-----|-------------------------|
| AMPLIFIER                    | T21104           | 51522 | 1   | SKAN-A-MATIC. CORP.     |
| PHOTODETECTOR                | P11201           | 51522 | 1   |                         |
| SOCKET                       | B01001           | 51522 | 1   |                         |
| SWITCH. LOCK                 | MS24658-22D      |       | 1   |                         |
| LIGHT. IND                   | MS25041-8        |       | 1   |                         |
| LIGHT. IND                   | MS25256-4        |       | 1   |                         |
| LAMP 6 VDC                   | MS25237-328      |       | 2   |                         |
| HOLDER. BTRY                 | 148              | 91833 | 1   | KEYSTONE ELECTRONICS    |
| BATTERY (AA)                 | 49F1169          | 62332 | 4   | EVEREADY/UNION CAR      |
| BOX. UTILITY                 | 1411L            | 73831 | 1   | HAMMOND MFG. (5"x4"x3") |
| GROMMET                      | 2170             | N/A   | 1   | KUKLA. SMITH. INC.      |
| TUBING                       | M23053 / 5-104-0 |       |     |                         |
| WIRE                         | M22759 / 34-22   |       |     |                         |
| EQUIVALENT PARTS MAY BE USED |                  |       |     |                         |

AK1788  
SA

Figure 149. Infrared Light, Test Set.

FIELD MANUFACTURE ITEMS - Continued


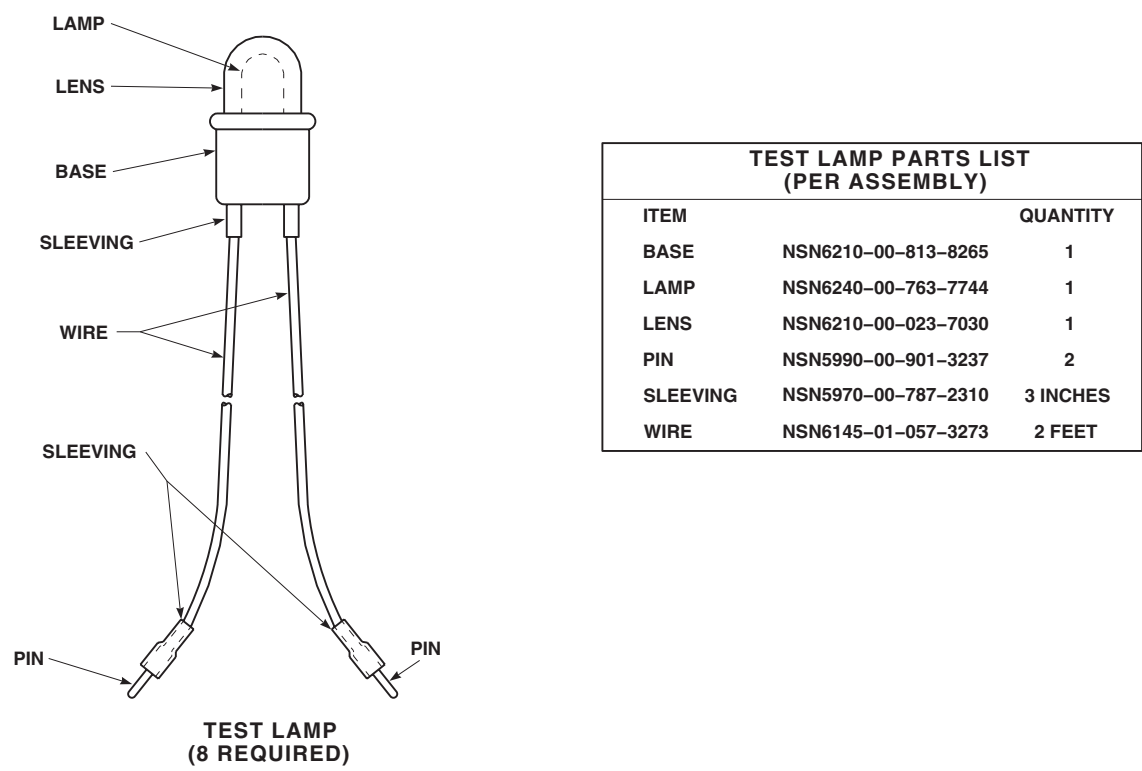


Figure 150. Stores Jettison System, Test Adapter.

## FIELD MANUFACTURE ITEMS - Continued

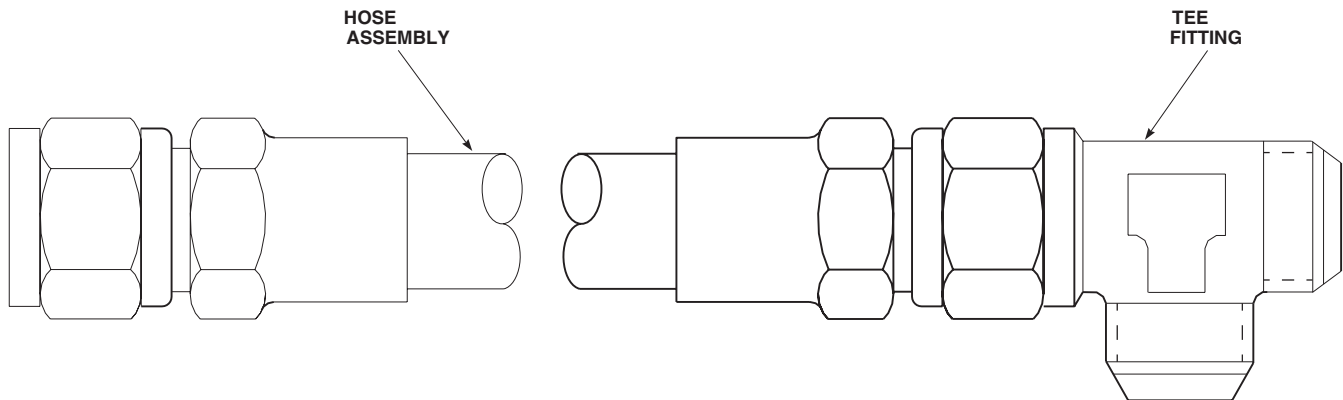

| PARTS LIST      |               |          |
|-----------------|---------------|----------|
| ITEM            | PART NUMBER   | QUANTITY |
| CAP (SEE NOTE)  | M5501 / 3-4   | 2        |
| HOSE ASSEMBLY   | AN6270-4D-096 | 1        |
| PLUG (SEE NOTE) | M5501 / 1-4   | 1        |
| TEE FITTING     | AN824-4D      | 1        |



## NOTE

WHEN ADAPTER IS NOT USED, PROTECT ADAPTER FITTINGS WITH CAPS AND PLUG.

AB3440  
SA

Figure 151. Pneumatic Adapter (ESSS).

FIELD MANUFACTURE ITEMS - Continued

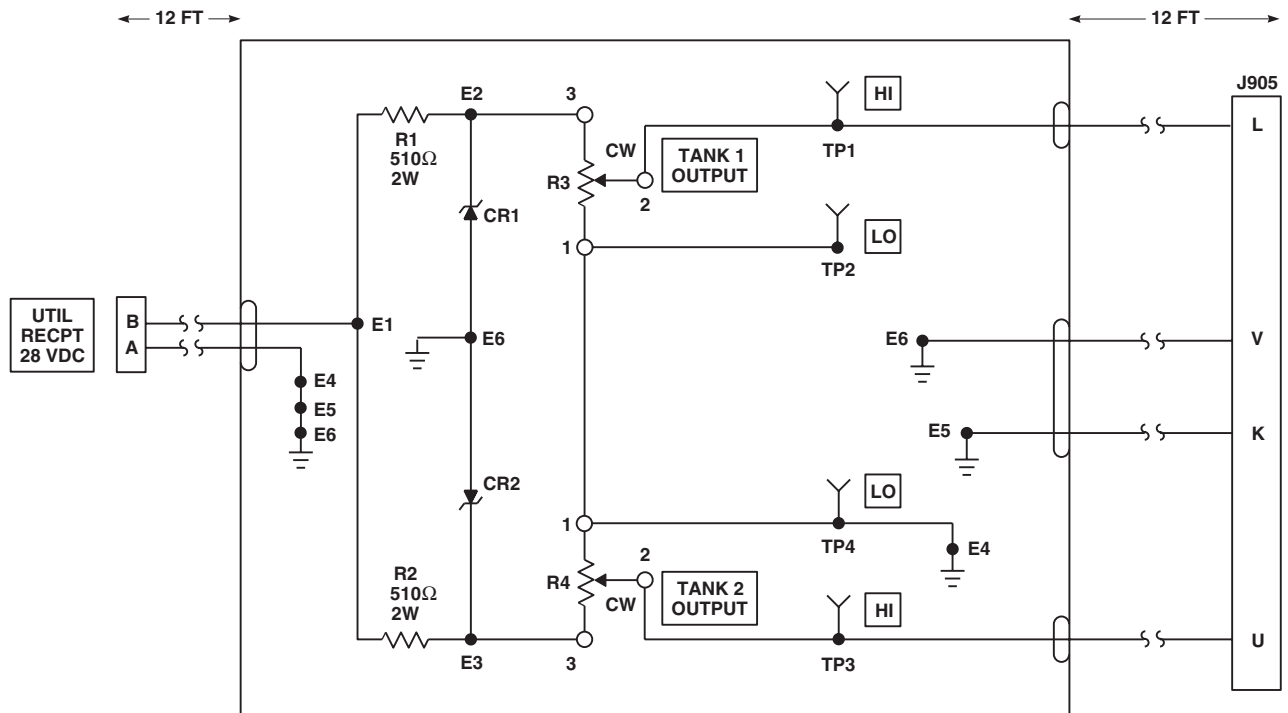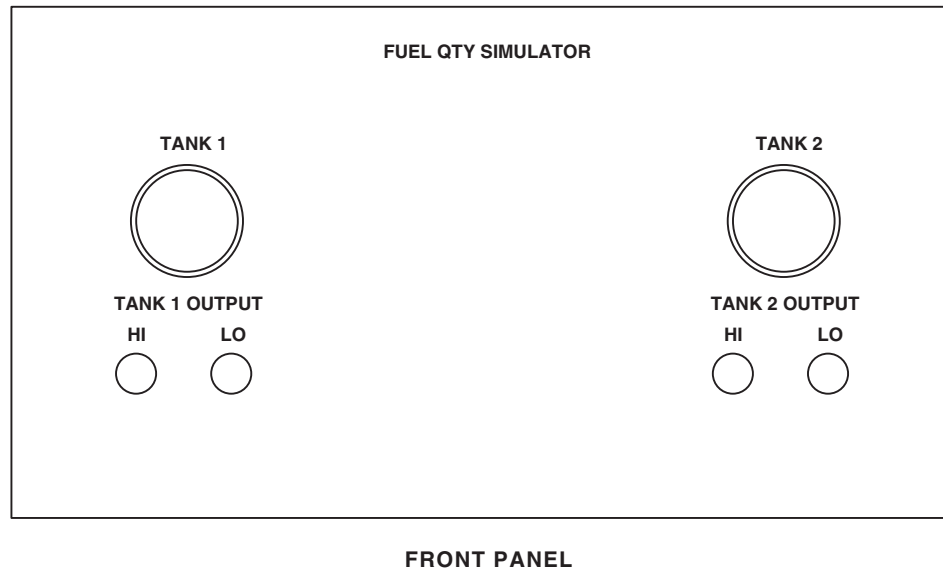

AK1791\_1  
SA

Figure 152. Fuel Quantity Simulator, Test Set. (Sheet 1 of 2)

## FIELD MANUFACTURE ITEMS - Continued

| NOMENCLATURE                           | PART NUMBER         | QUANTITY    |
|----------------------------------------|---------------------|-------------|
| ALUMINUM CHASSIS 8 IN. X 4 IN. X 2 IN. | AC-410 SEE NOTE 1   | 1           |
| CONNECTOR, J905                        | MS3472W14-19P       | 1           |
| CONNECTOR TO 28 VDC                    | MS3456W16-11P       | 1           |
| RESISTOR, R1 AND R2                    | RW67V511            | 2           |
| RESISTORS, VARIABLE R3, R4             | 3600S1-103          | 2           |
| ZENER DIODE, CR1 AND CR2               | 1N4739A             | 2           |
| POSTS, ELECTRICAL                      | S05-8 SEE NOTE 2    | 4           |
| TERMINALS, STUD                        | B2010B-1 SEE NOTE 3 | 14          |
| TEST POINT, YELLOW                     | M39024 / 10-08      | 2           |
| TEST POINT, WHITE                      | M39024 / 10-01      | 2           |
| ELECTRICAL TAPE                        | 5790-419-4290       | AS REQUIRED |
| WIRE                                   | M22759 / 11-22-9    | BULK        |
| INSULATION TUBING                      | MIL-I-631           | BULK        |

## NOTES


1. ITEM CAN BE OBTAINED FROM: BUD INDUSTRIES INC.,  
4605 E. 355TH ST., WILLOUGHBY, OHIO 44094
2. ITEM CAN BE OBTAINED FROM: DESIGNATRONICS INC., STERLING INSTRUMENT DIV.  
55 S. DENTON AVE., NEW HYDE PARK, NY 11040
3. ITEM CAN BE OBTAINED FROM: WINCHESTER ELECTRONICS, LITTON SYSTEMS, USECO DIV.,  
13536 SATICOY ST., VAN NUYS, CA 91409

AK1791\_2  
SA

Figure 152. Fuel Quantity Simulator, Test Set. (Sheet 2 of 2)



FIELD MANUFACTURE ITEMS - Continued

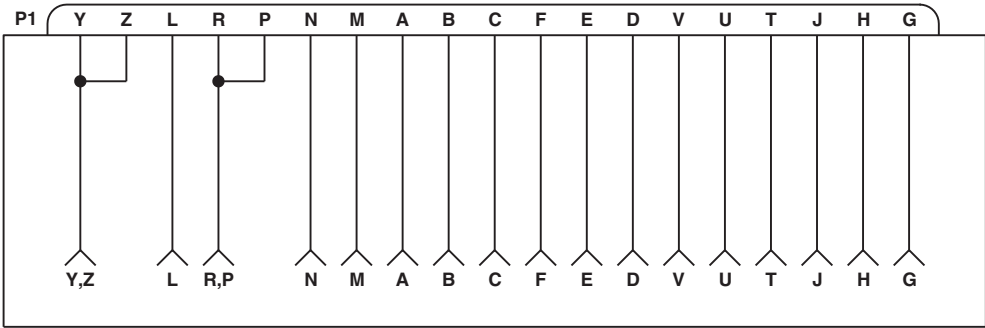

| NOMENCLATURE       | PART NUMBER            | QUANTITY    |
|--------------------|------------------------|-------------|
| BOX                | SEE NOTE 3             | 1           |
| CONNECTOR, P1      | MS3476L16-26S          | 1           |
| TEST JACK          | M39024 / 10-02 (RED)   | 14          |
| TEST JACK          | M39024 / 10-03 (BLACK) | 3           |
| TUBING, INSULATION | MIL-I-631              | AS REQUIRED |
| WIRE               | 22-GAGE                | AS REQUIRED |

NOTES

1. IDENTIFY CONNECTOR AND TEST JACKS AS SHOWN.
2. COVER WIRES WITH INSULATION TUBING.
3. ITEM CAN BE OBTAINED FROM:  
ZERO MFG CO.  
14501 49TH STREET  
NORTH CLEARWATER, FL. 33520  
OR LOCALLY-MADE
4. THESE TEST POINTS ARE BLACK: M, N, AND Y, Z. ALL OTHER POINTS ARE RED.

AK1792  
SA

Figure 153. Boost Pump Control Panel, Test Harness.

FIELD MANUFACTURE ITEMS - Continued


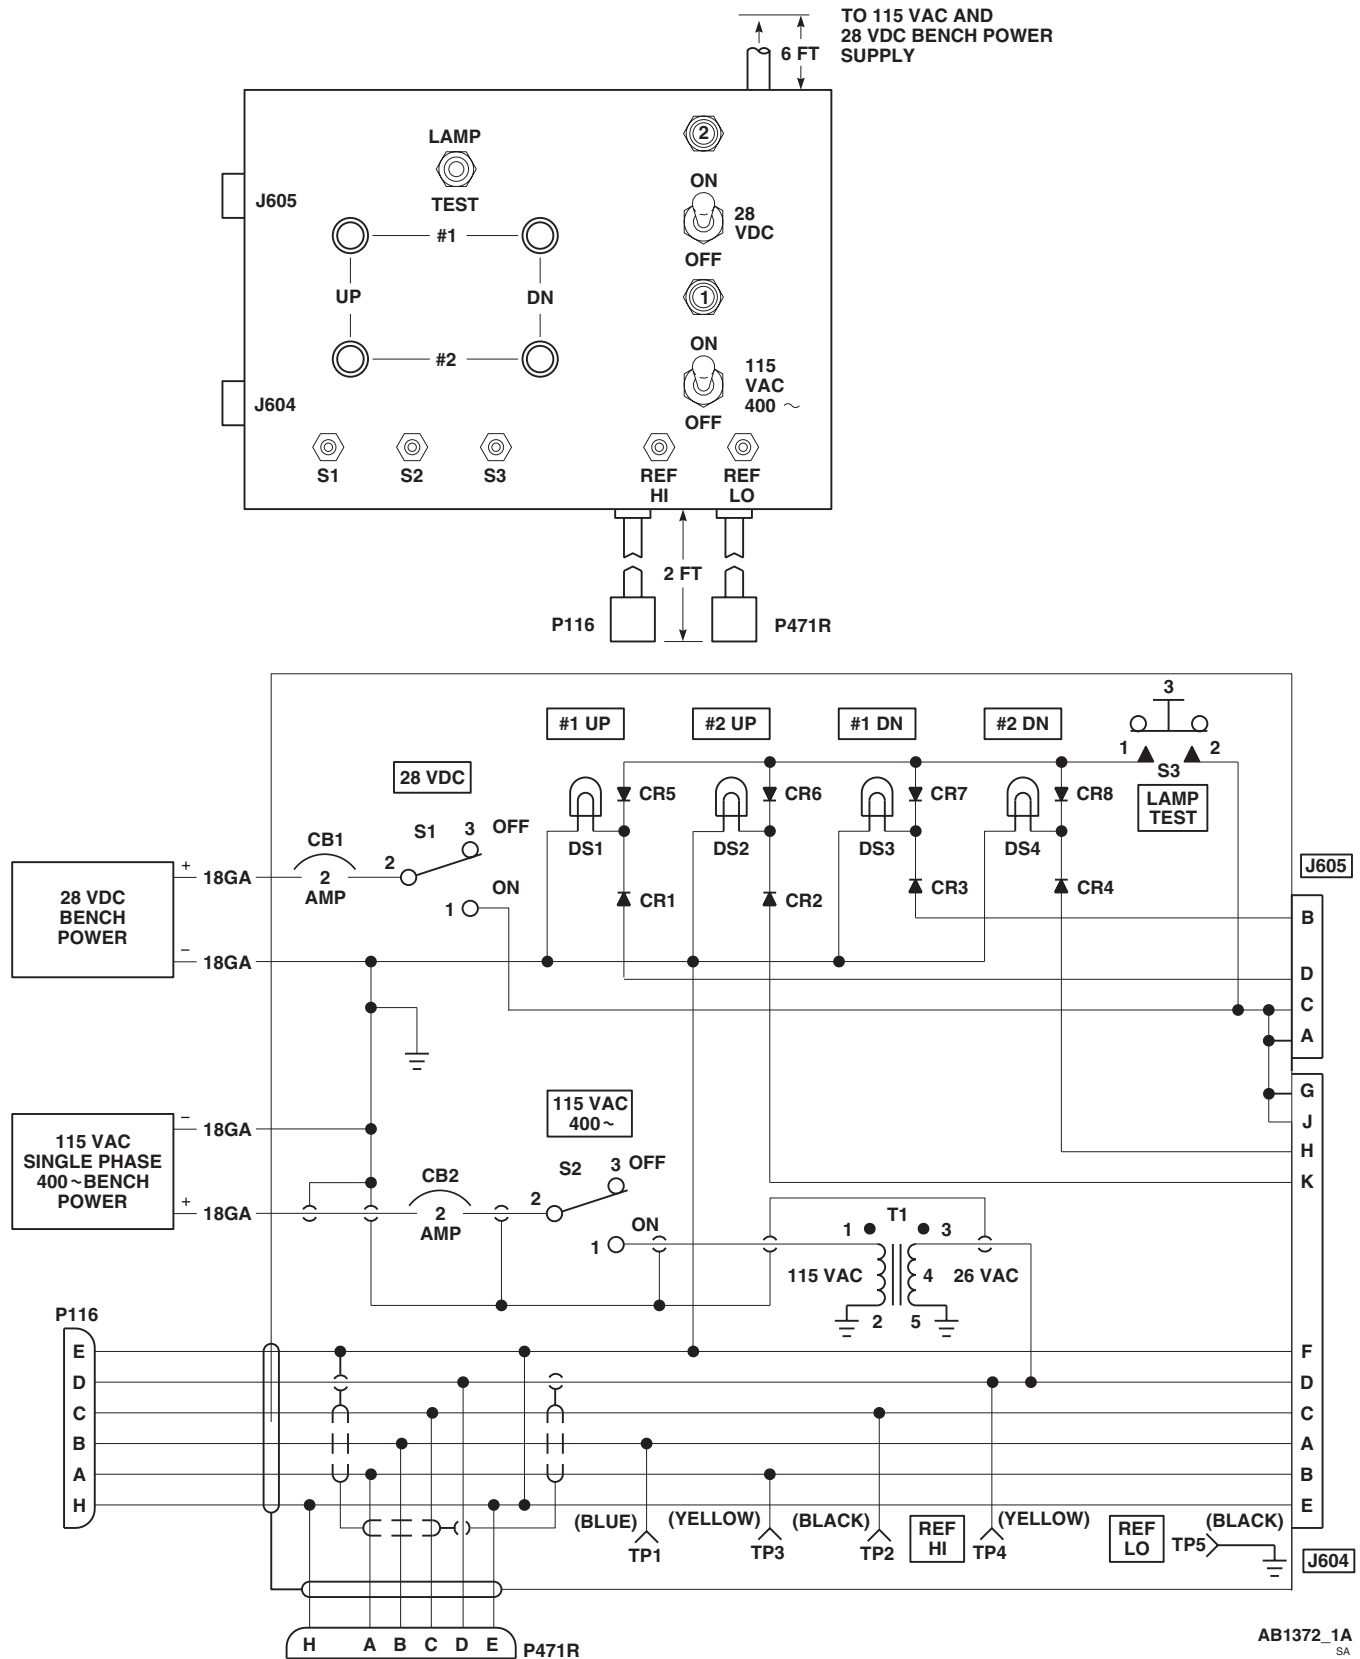


Figure 154. Stabilator Position Sensor/Limit Switch, Test Unit. (Sheet 1 of 3)

FIELD MANUFACTURE ITEMS - Continued

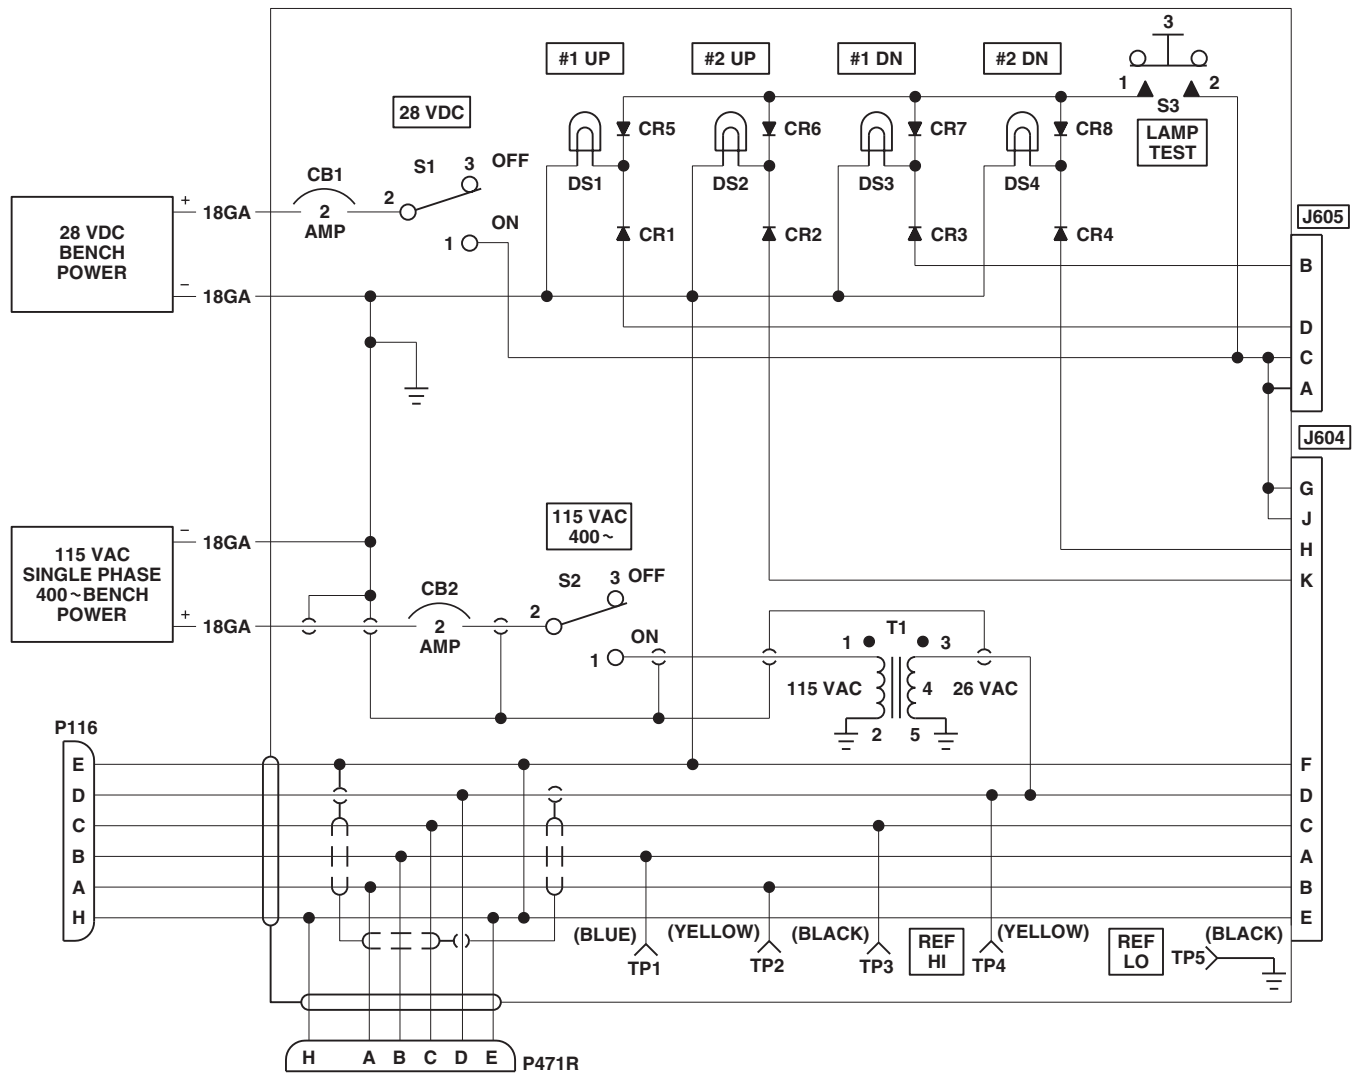

AK1793\_2A  
SA

Figure 154. Stabilator Position Sensor/Limit Switch, Test Unit. (Sheet 2 of 3)

## FIELD MANUFACTURE ITEMS - Continued

| TEST SET PARTS LIST                     |                        |          |
|-----------------------------------------|------------------------|----------|
| NOMENCLATURE                            | PART NO.               | QUANTITY |
| ALUMINUM BOX<br>(5 IN. x 7 IN. x 3 IN.) | AC-429<br>SEE NOTE 3   | 1        |
| CIRCUIT BREAKER, CB1                    | MS3320-2               | 1        |
| CIRCUIT BREAKER, CB2                    | MS3320-2               | 1        |
| LAMP, DS1, DS2, DS3, DS4                | MS25256-4              | 4        |
| SWITCH, S1, S2                          | MS24523-22             | 2        |
| SWITCH, S3                              | MS25089-4G             | 1        |
| TRANSFORMER, T1                         | TW-63271<br>SEE NOTE 4 | 1        |
| DIODE, CR1 THROUGH CR8                  | IN645                  | 8        |
| CONNECTOR, J604                         | MS3472L12-10S          | 1        |
| CONNECTOR, J604                         | MS3472L10-6S           | 1        |
| CONNECTOR, P116, P471R                  | MS3476L12-10S          | 2        |
| TEST JACK, BLUE                         | M39024/10-07           | 1        |
| TEST JACK, YELLOW                       | M39024/10-08           | 2        |
| TEST JACK, BLACK                        | M39024/10-03           | 2        |
| WIRE                                    | 18-GAGE SHIELDED       | BULK     |
| WIRE                                    | 22-GAGE SHIELDED       | BULK     |
| INSULATION TUBING                       | MIL-I-631              | BULK     |

## NOTES

1. USE 22 - GAGE WIRE FOR ALL CONNECTIONS EXCEPT WHERE OTHERWISE INDICATED.
2. AFTER COMPLETING HARNESS WIRING COVER WIRES WITH INSULATION TUBING.
3. ITEM CAN BE OBTAINED FROM: BUD INDUSTRIES INC.  
4605 E. 355TH ST.  
WILLOUGHBY, OHIO 44094
4. ITEM CAN BE OBTAINED FROM: MAGMETIRA  
410 OBERLIN AVENUE SOUTH  
LAKEWOOD, N.J. 08701

FIELD MANUFACTURE ITEMS - Continued

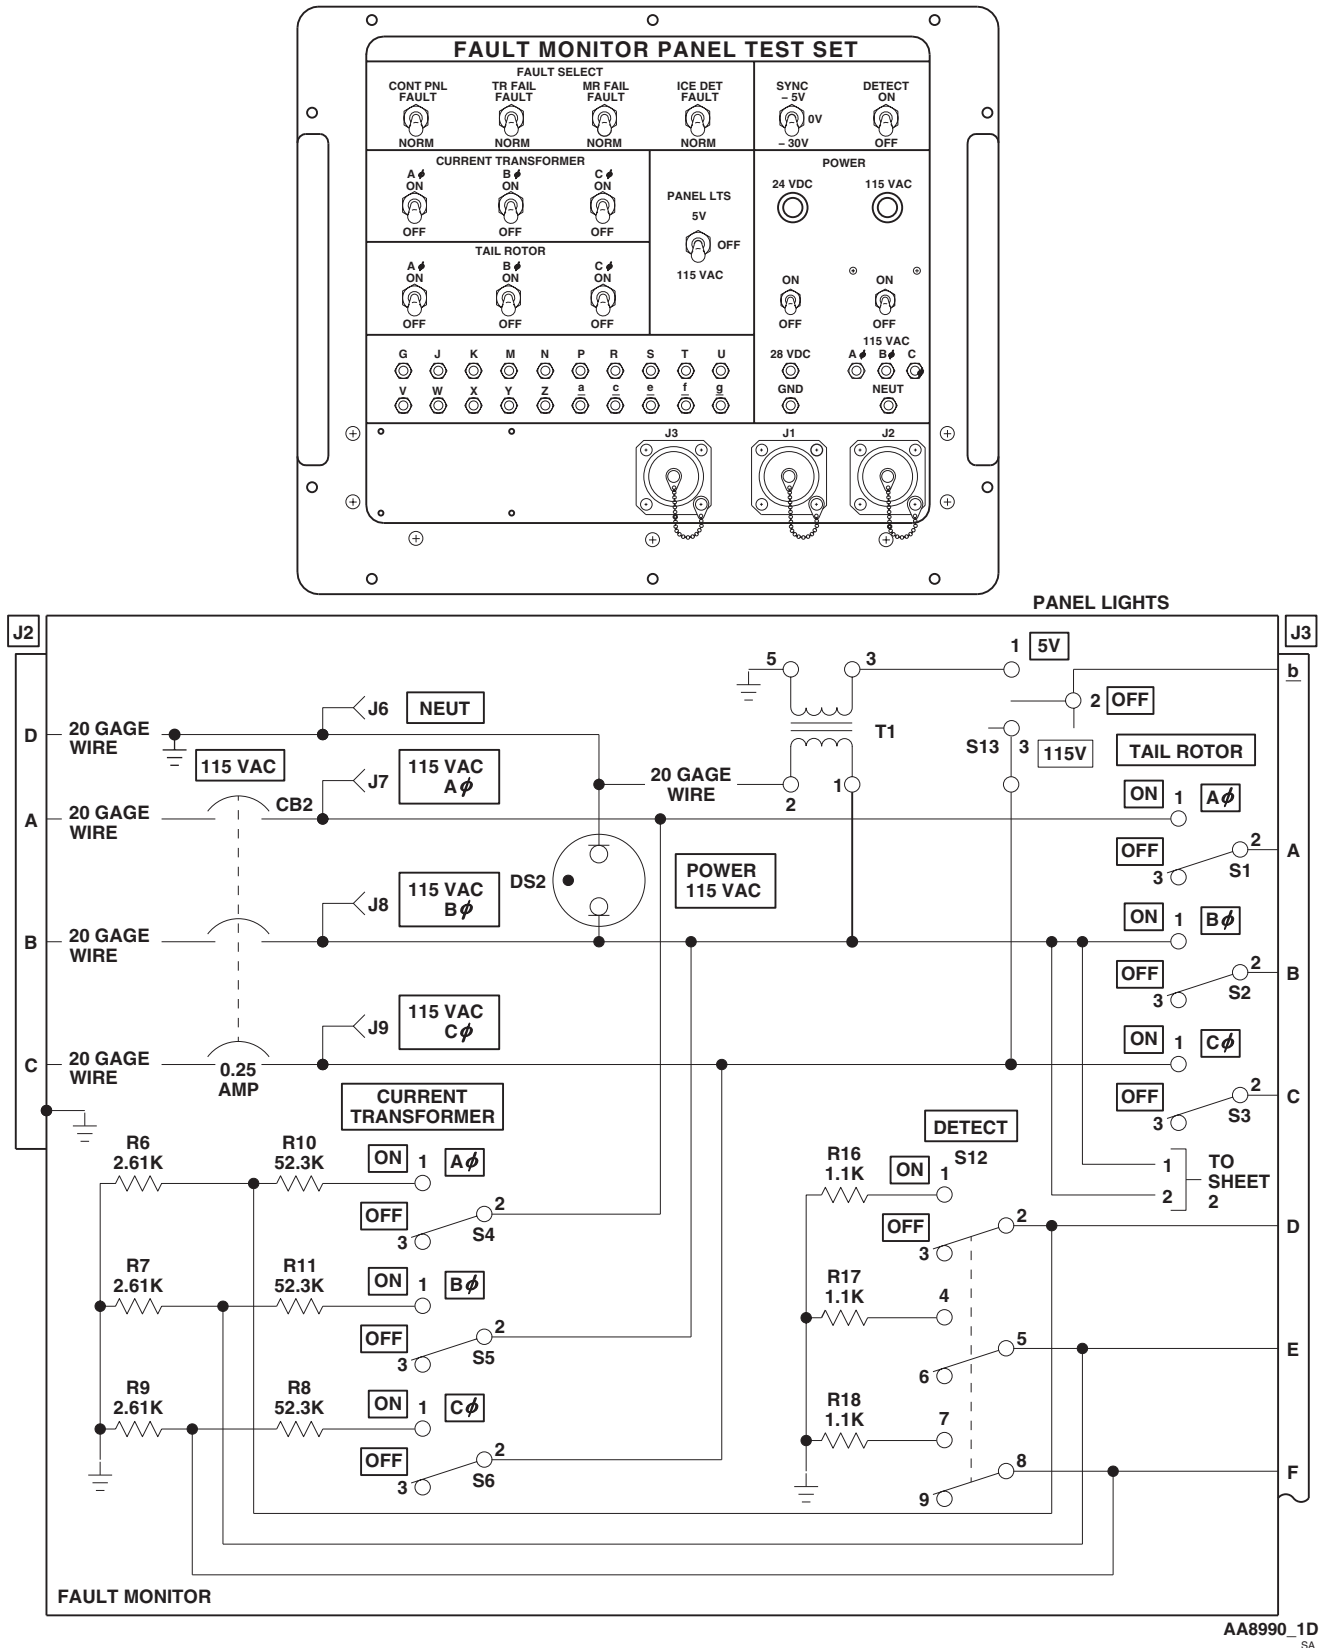


Figure 155. Blade Deice Test Set. (Sheet 1 of 5)

FIELD MANUFACTURE ITEMS - Continued

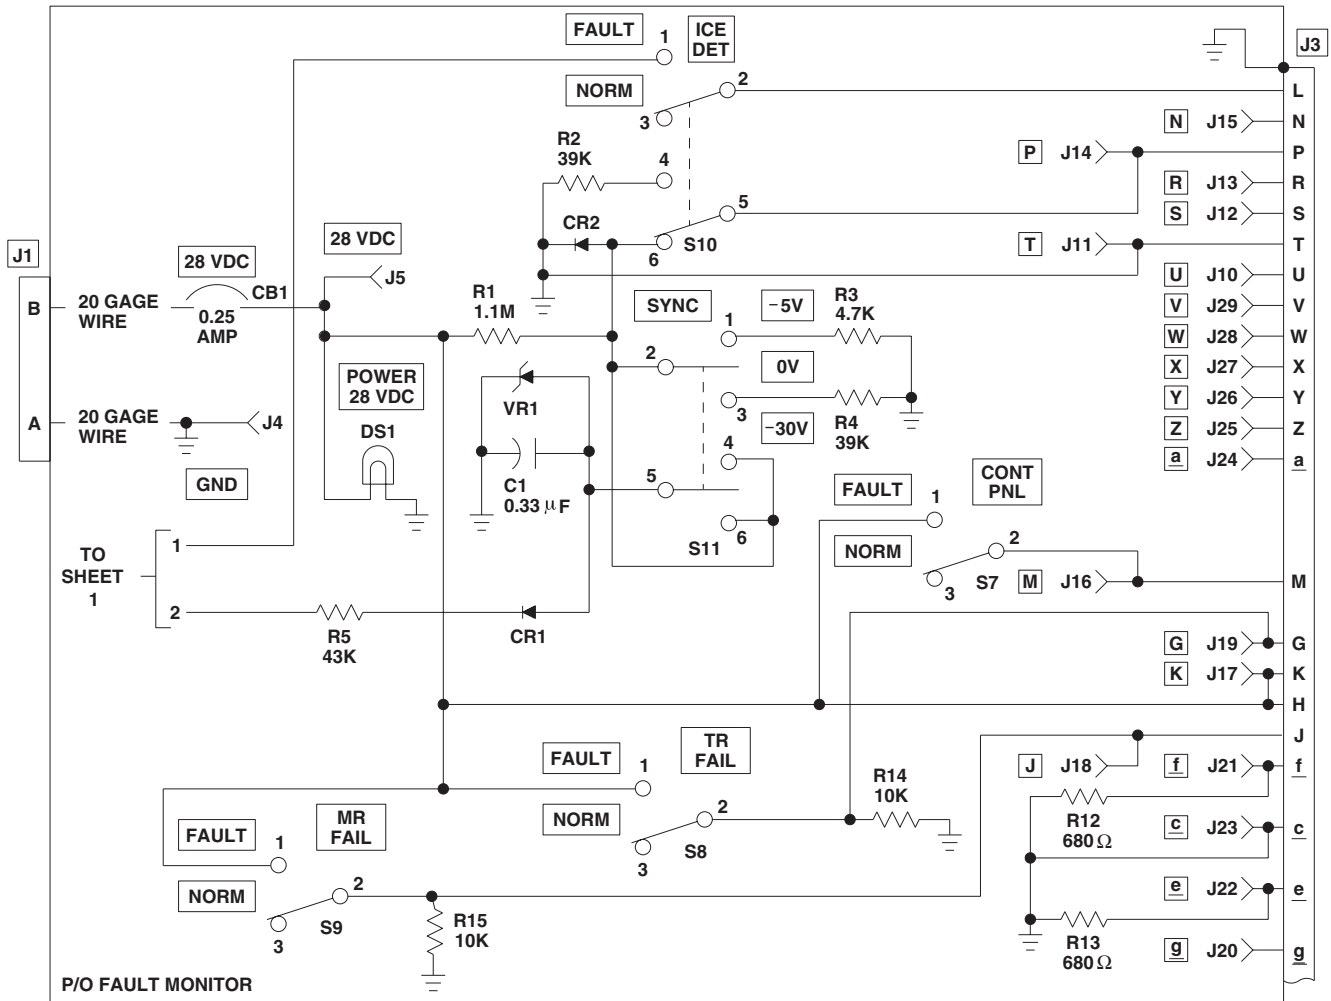



Figure 155. Blade Deice Test Set. (Sheet 2 of 5)

## FIELD MANUFACTURE ITEMS - Continued

| TEST SET PARTS LIST         |                  |          |
|-----------------------------|------------------|----------|
| NOMENCLATURE                | PART NO.         | QUANTITY |
| ALUMINUM CHASSIS            | AC-424           | 1        |
| 16 BY 13.5 BY 12.5          | (SEE NOTE 3)     |          |
| CAPACITOR                   | M39003 / 01-5272 | 1        |
| CIRCUIT BREAKER, CB1        | M39019 / 01-206  | 1        |
| CIRCUIT BREAKER, CB2        | M39019 / 05-206  | 1        |
| CONNECTOR, J1               | MS3102R16-11P    | 1        |
| CONNECTOR, J2               | MS3102R20-4P     | 1        |
| CONNECTOR, J3               | MS3472W18-325    | 1        |
| DIODE, CR1                  | JANTX1N5618      | 1        |
| DIODE, CR2                  | JANTX1N645A      | 1        |
| DIODE, VR1                  | JANTX1N4481      | 1        |
| INSULATION, TUBING          | MIL-I-22129      | BULK     |
| LAMP, DS1                   | MS25237-327      | 1        |
| LAMP, DS2                   | M15098 / 11-002  | 1        |
| LAMP HOLDER FOR DS1         | LH73 / 1         | 1        |
| LAMP HOLDER FOR DS2         | LH74 / 1         | 1        |
| LENS FOR DS1                | LC12GN2          | 1        |
| LENS FOR DS2                | LC13RN2          | 1        |
| RESISTOR, R1                | RCR20G115JR      | 1        |
| RESISTOR, R2 AND R4         | RCR20G393JM      | 2        |
| RESISTOR, R3                | RCR20G472JM      | 1        |
| RESISTOR, R5                | RCR20G433JR      | 1        |
| RESISTOR, R6, R7, AND R9    | RNR65C2611FM     | 3        |
| RESISTOR, R8, R10, AND R11  | RNR65C5232FM     | 3        |
| RESISTOR, R12 AND R13       | RCR42G681JR      | 2        |
| RESISTOR, R14 AND R15       | RCR20G103JR      | 2        |
| RESISTOR, R16, R17, AND R18 | RNC65H1101FS     | 3        |
| SWITCH, S1 THROUGH S9       | MS24523-23       | 9        |
| SWITCH, S10                 | MS24524-23       | 1        |
| SWITCH, S11                 | MS24524-21       | 1        |
| SWITCH, S12                 | MS24525-23       | 1        |
| SWITCH, S13                 | MS24523-21       | 1        |
| TERMINAL LUG FOR J2         | MS77068-1        | 1        |
| TERMINAL LUG FOR J3         | MS77068-2        | 1        |
| TEST POINT, BLACK           | M39024 / 10-03   | 5        |
| TEST POINT, GREEN           | M39024 / 10-05   | 15       |
| TEST POINT, RED             | M39024 / 10-02   | 3        |
| TEST POINT, WHITE           | M39024 / 10-01   | 3        |
| TRANSFORMER, T1             | 6E5CT            | 1        |
| WIRE                        | 20-GAGE          | BULK     |
| WIRE (SHIELDED)             | 18-GAGE          | BULK     |
| WIRE (SHIELDED)             | 22-GAGE          | BULK     |

Figure 155. Blade Deice Test Set. (Sheet 3 of 5)

FIELD MANUFACTURE ITEMS - Continued

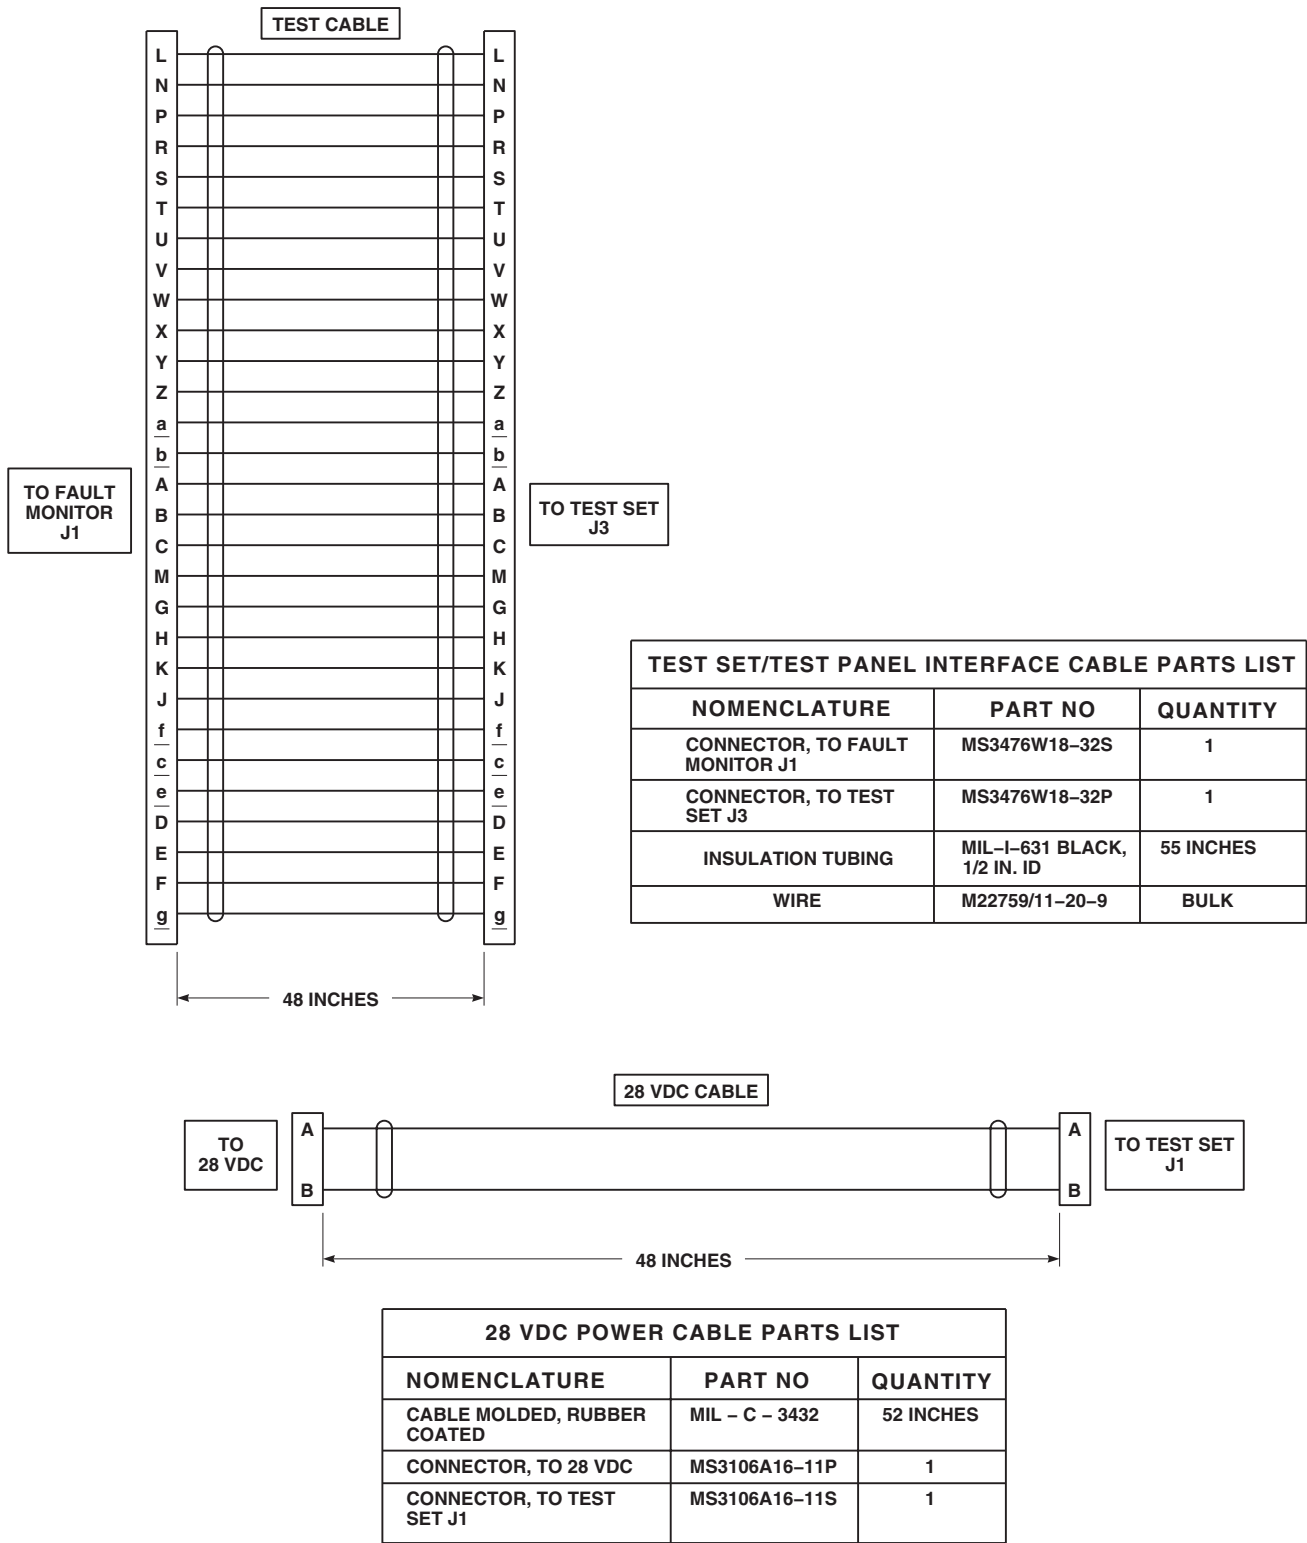


AA9352\_4A  
SA

Figure 155. Blade Deice Test Set. (Sheet 4 of 5)



## FIELD MANUFACTURE ITEMS - Continued

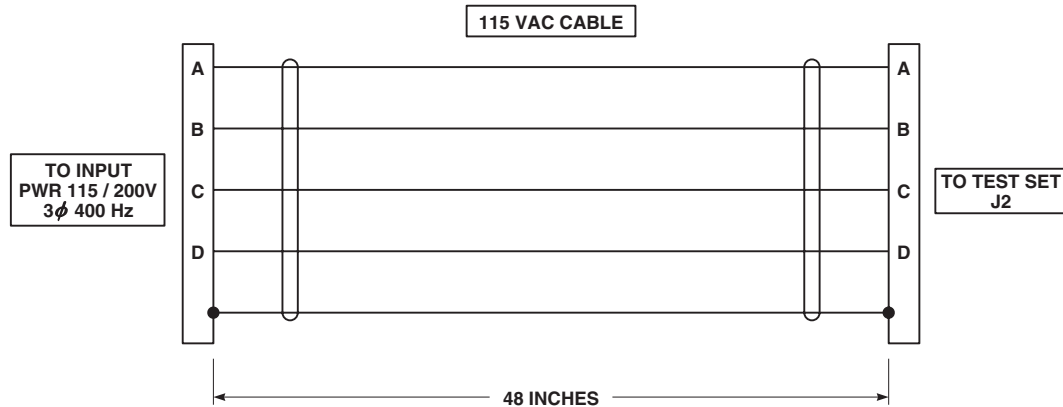

| 115 VAC POWER CABLE PARTS LIST              |                             |           |
|---------------------------------------------|-----------------------------|-----------|
| NOMENCLATURE                                | PART NO                     | QUANTITY  |
| CONNECTOR, TO TEST SET J2                   | MS3106F20-4S                | 1         |
| CONNECTOR TO INPUT PWR 115 / 200V 3φ 400 Hz | MS3106F20-4P                | 1         |
| INSULATION TUBING                           | MIL-I-631 BLACK 5/16 IN. ID | 55 INCHES |
| WIRE                                        | M22759 / 11-16-9            | BULK      |

## NOTES

1. INDICATES EQUIPMENT MARKINGS.
2. USE 20 - GAGE WIRE FOR ALL CONNECTIONS EXCEPT WHERE OTHERWISE INDICATED.
3. AFTER COMPLETING HARNESS WIRING, COVER WITH INSULATION TUBING.
4. DELETED.
5. ITEM CAN BE OBTAINED FROM:  
ABBOTT TRANSISTOR LABORATORIES, INC  
TRANSFORMER DIV  
639 S. GLENWOOD PLACE  
BURBANK, CA, 91506



## 6. THESE TEST POINTS ARE IN GREEN:

|     |     |     |
|-----|-----|-----|
| J5  | J15 | J21 |
| J10 | J16 | J25 |
| J12 | J17 | J26 |
| J13 | J18 | J27 |
| J14 | J19 | J28 |

TEST POINTS J4, J6, J11, J22, AND J23 ARE BLACK.  
TEST POINTS J7, J8, AND J9 ARE RED, AND  
TEST POINTS J20, J24, AND J29 ARE WHITE.

Figure 155. Blade Deice Test Set. (Sheet 5 of 5)

## FIELD MANUFACTURE ITEMS - Continued

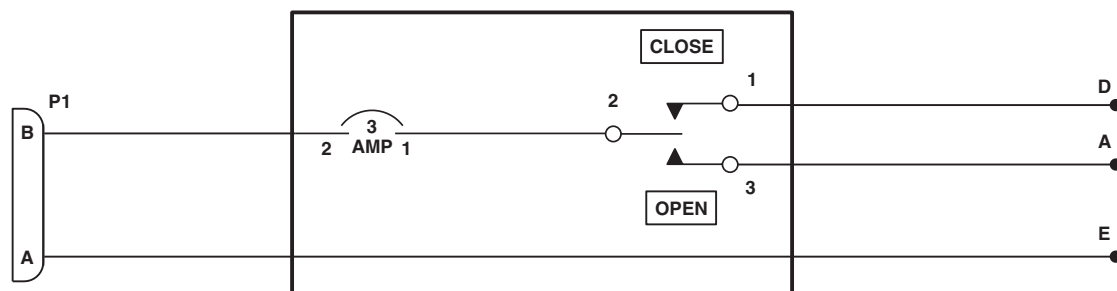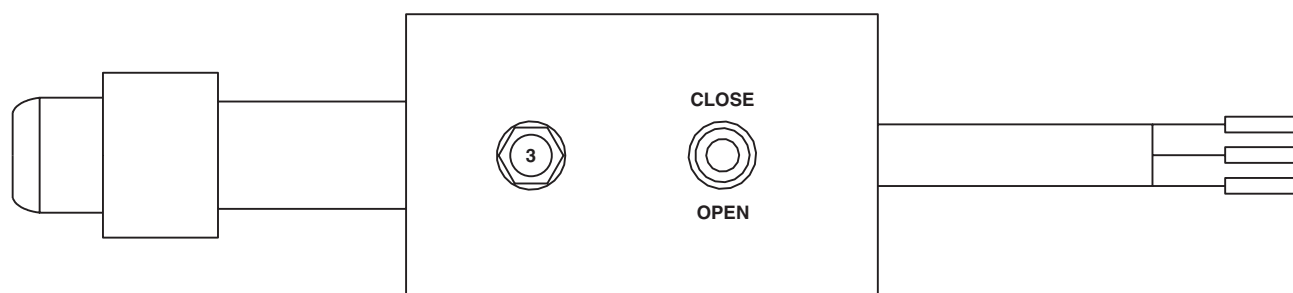


WIRING SCHEMATIC

| PARTS LIST       |                                                                        |             |
|------------------|------------------------------------------------------------------------|-------------|
| PART NUMBER      | ITEM NAME                                                              | QUANTITY    |
| MS3320-3         | CIRCUIT BREAKER                                                        | 1           |
| MS24655-271      | SWITCH, TOGGLE                                                         | 1           |
| MS3456W16-11P    | CONNECTOR                                                              | 1           |
|                  | PANEL, SHEET METAL<br>(1-1/2 INCH BY 2-1/2 INCH BY 1/32 INCH)          | 1           |
| M22759 / 11-22-9 | WIRE, 12 FT<br>(P1-B TO CIRCUIT BREAKER TERMINAL 2)                    | 1           |
| M22759 / 11-22-9 | WIRE, 13 FT 3 IN. (P1-A TO TERMINAL E)                                 | 1           |
| M22759 / 11-22-9 | WIRE, 15 IN. (SWITCH TERMINALS<br>1 AND 3 TO TERMINALS A AND D)        | 1           |
| M22759 / 11-22-9 | WIRE, AS REQUIRED (CIRCUIT BREAKER<br>TERMINAL 1 TO SWITCH TERMINAL 2) | 1           |
| M39029 / 31-228  | TERMINAL (A, D, E)                                                     | 3           |
|                  | SPIRAL WRAP                                                            | AS REQUIRED |

AA2203A  
SA

Figure 156. ESSS Gate Valve Test Harness.

## FIELD MANUFACTURE ITEMS - Continued

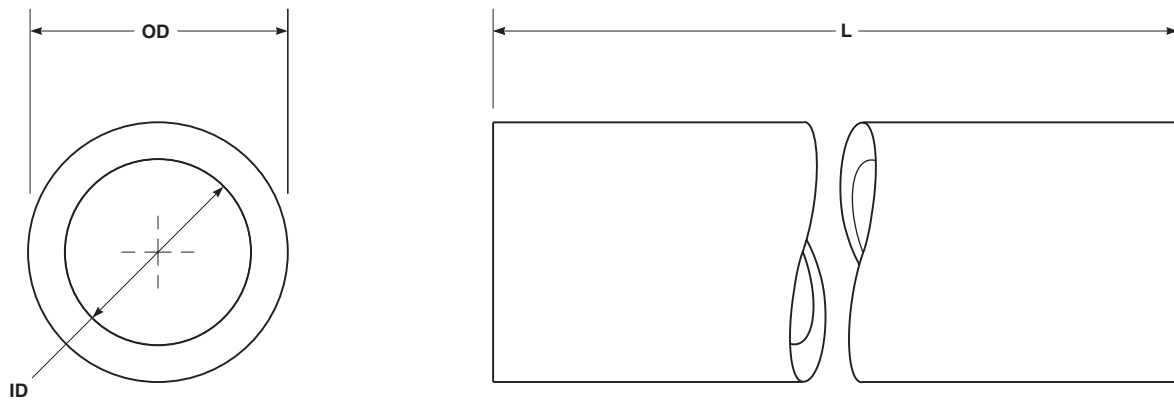

| NOMENCLATURE                     | L LENGTH | OD OUTSIDE DIAMETER | ID INSIDE DIAMETER |
|----------------------------------|----------|---------------------|--------------------|
| INPUT MODULE INPUT SEAL          | 4.00     | 3.50                | 3.00               |
| MAIN GEARBOX OUTPUT SEAL         | 4.00     | 3.25                | 2.75               |
| INTERMEDIATE GEARBOX INPUT SEAL  | 4.00     | 3.00                | 2.50               |
| INTERMEDIATE GEARBOX OUTPUT SEAL | 4.00     | 3.00                | 2.50               |
| TAIL GEARBOX INPUT SEAL          | 4.00     | 3.00                | 2.50               |
| TAIL GEARBOX OUTPUT SEAL         | 4.00     | 5.00                | 4.50               |


## NOTES

1. MAKE FROM ALUMINUM TUBING.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. DO NOT PAINT.

AK1796A  
SA

Figure 157. Seal Installation Tool.

## FIELD MANUFACTURE ITEMS - Continued

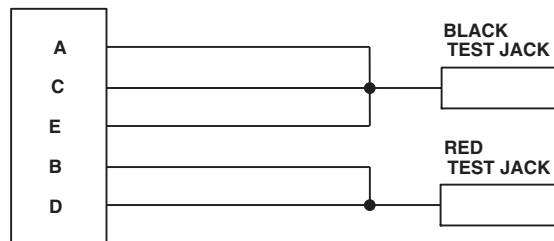

| PART NUMBER      | DESCRIPTION       | QUANTITY | NSN              |
|------------------|-------------------|----------|------------------|
| MS3106A20-22S    | CONNECTOR         | 1        | 5935-00-259-0024 |
| M22759 / 43-08-9 | ELECTRICAL WIRE   | AS REQ'D | 6145-01-208-2495 |
| M39024 / 10-02   | TEST JACK - RED   | 1        | 5935-00-687-8090 |
| M39024 / 10-03   | TEST JACK - BLACK | 1        | 5935-00-169-9437 |
| PR-1826-B-2      | SEALING COMPOUND  | kt       | 8030-01-240-5138 |
| SN60WRAP3 0.063  | SOLDER            | lb       | 3439-00-269-9610 |


## NOTES

1. SOLDER ONE END OF WIRE TO TEST JACKS.
2. AFTER ASSEMBLING CONNECTOR FILL BACK SHELL WITH SEALING COMPOUND, SETTING TEST JACKS INTO SEALING COMPOUND.

AB3439A  
SA

Figure 158. Auxillary Cabin Heater Jumper Plug.

## FIELD MANUFACTURE ITEMS - Continued

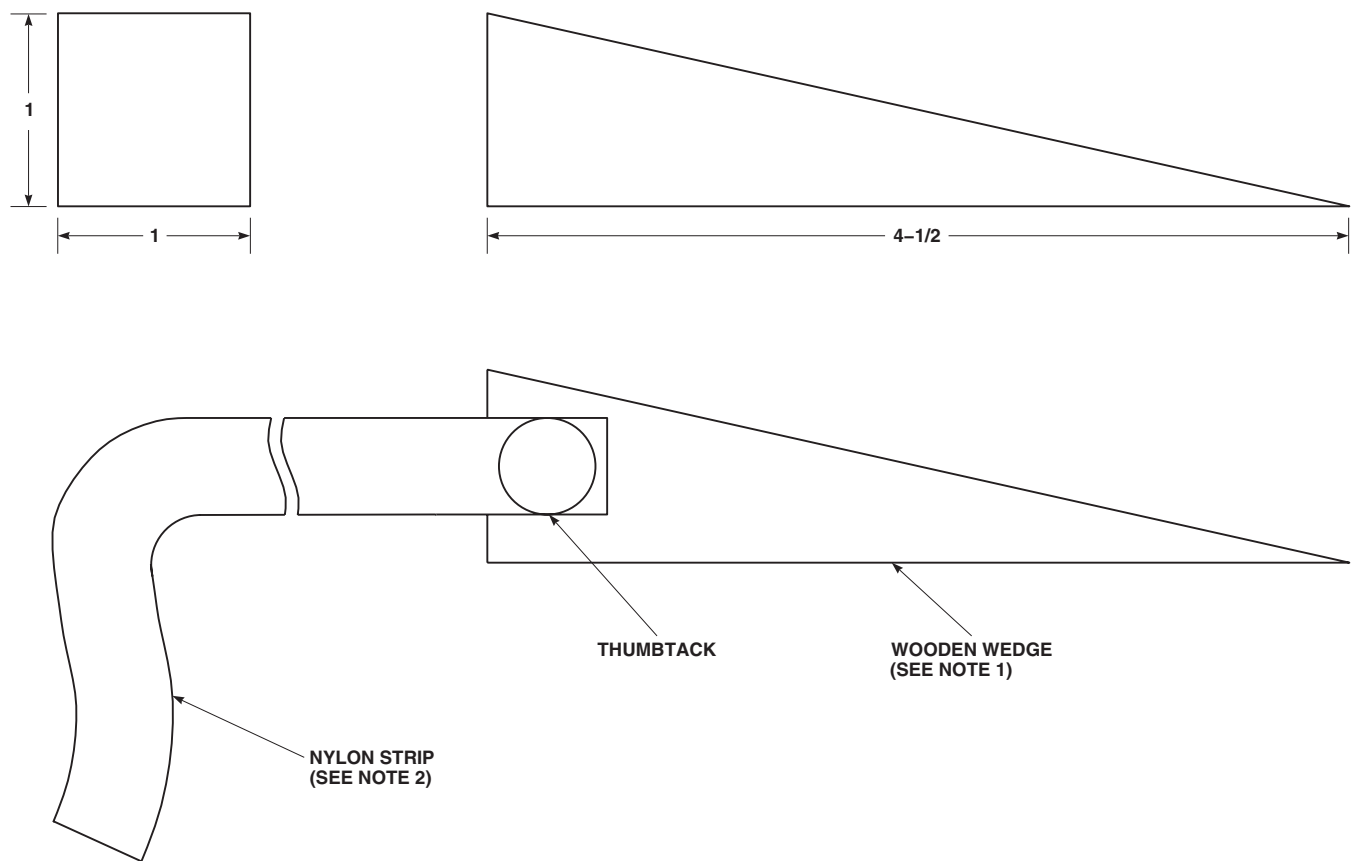


## NOTES

1. WOOD, MEDIUM TO HARD TYPE, OAK, MAPLE OR SIMILAR, 1 INCH THICK.
2. NYLON STRIP, WOVEN, PLASTIC COATED, FLUORESCENT RED, 14.0 INCHES BY 1/2 FOOT.
3. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.

AK1799A  
SA

Figure 159. Wooden Tuning Wedge.

## FIELD MANUFACTURE ITEMS - Continued

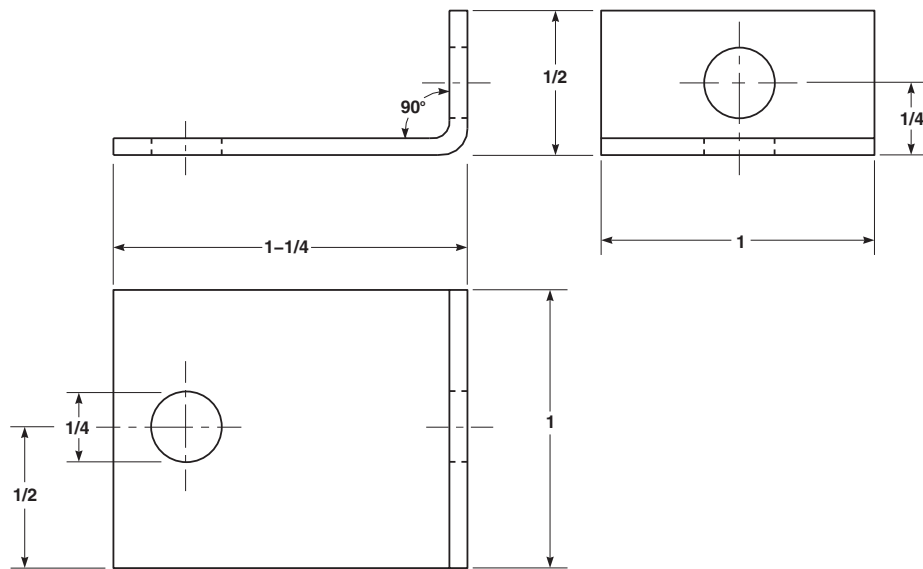

## NOTES

1. MAKE BRACKET FROM 7075 ALUMINUM ALLOY (ANY AVAILABLE TEMPER), USE 0.064 THICKNESS, BLEND RADIUS IS 0.25.
2. USE 1/4 INCH DRILL BIT DEBURR HOLE AFTER DRILLING
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. REMOVE HANDLE FROM PULLER.
4. INSTALL L-BRACKET TO PULLER USING BOLT, AN4-4.
5. CONNECT PULLER HANDLE TO L-BRACKET USING NUT, AN310-4.
6. TAIL GEARBOX SEAL PULLER ASSEMBLY USED ON TAIL GEARBOX OUTPUT SEAL, INPUT SEAL AND FLANGE SEAL.




AA1199D  
SA

Figure 160. Seal Puller.

## FIELD MANUFACTURE ITEMS - Continued




TOOL A

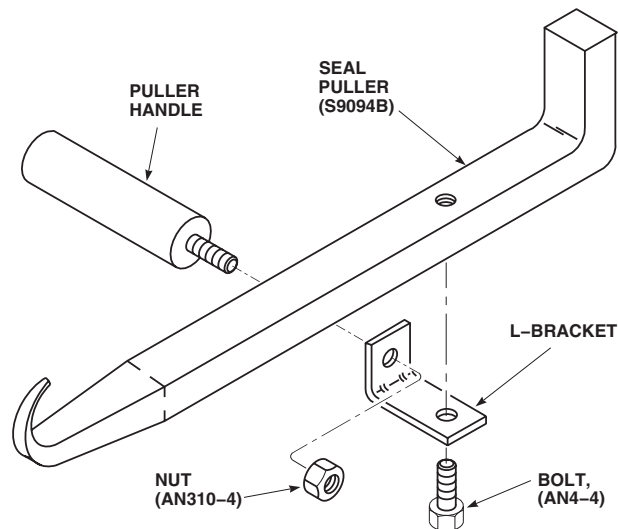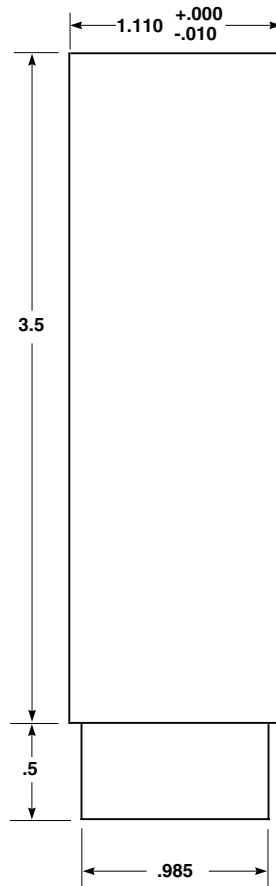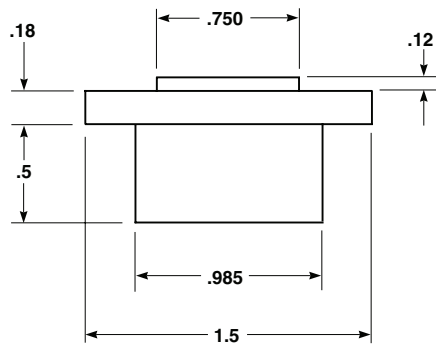


TOOL B

## NOTES

1. MATERIAL: STEEL
2. ALL CROSS SECTIONS ARE CIRCULAR.
3. BREAK ALL SHARP EDGES.
4. TOOLS MAY BE LOCALLY FABRICATED.

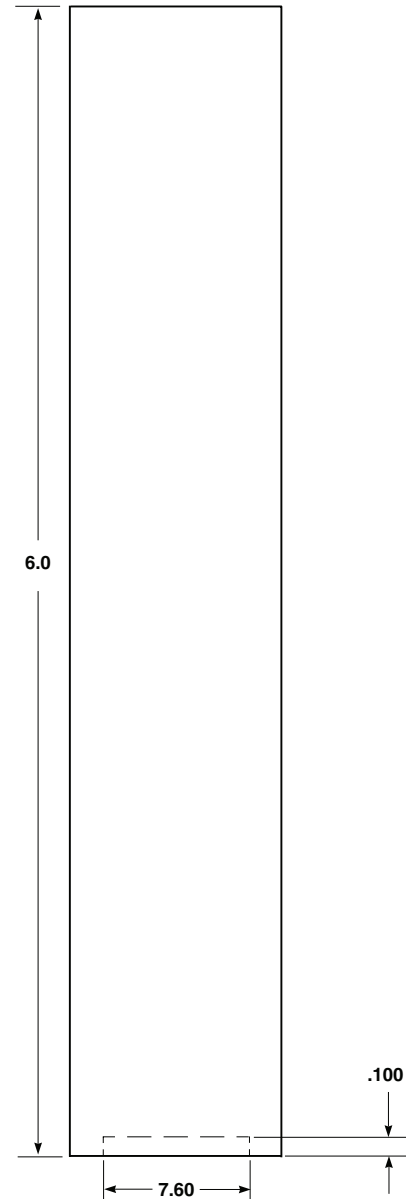

TOOL C

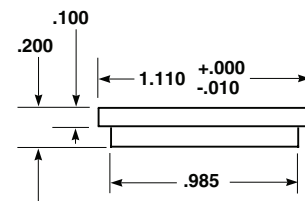


TOOL D

AB2500  
SA

Figure 161. Blade/Spindle Cuff Bushing Installation Tools.

FIELD MANUFACTURE ITEMS - Continued

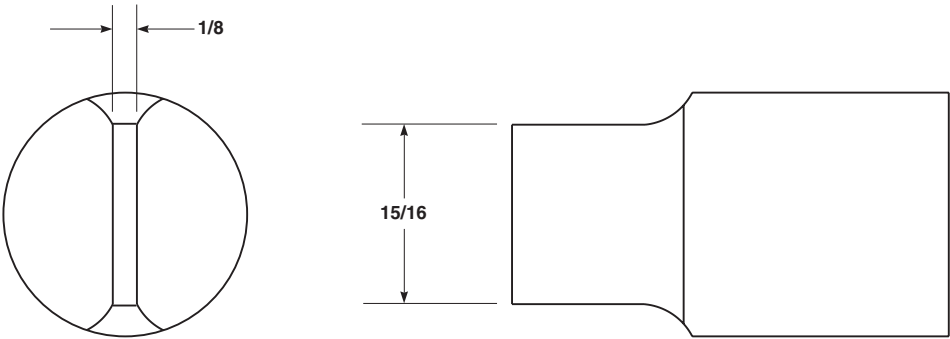

| PART NUMBER | DESCRIPTION                           | NSN              |
|-------------|---------------------------------------|------------------|
| GGG-B-1222  | FEMALE SOCKET, TYPE 1, 1/2 INCH DRIVE | 5120-00-277-3600 |

NOTES


1. REDUCE THICKNESS OF TIP TO APPROXIMATELY 1/8 INCH TO FIT RETAINING NUT RECESS ON AREA PILOT'S / COPILOT'S SEATS.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.

AK1802A  
SA

Figure 162. Drag Link Adjusting Tool.



## FIELD MANUFACTURE ITEMS - Continued

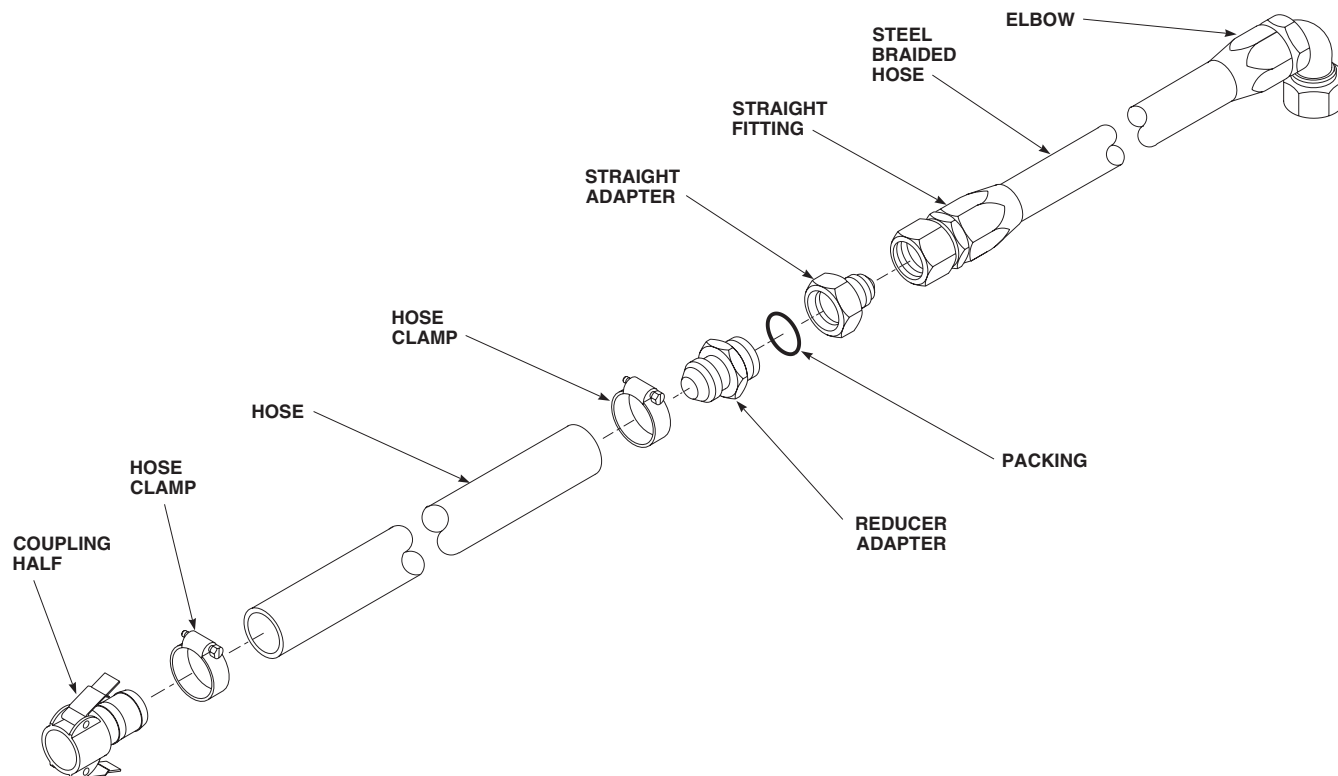

| CHART A      |                                                                    |          |                  |
|--------------|--------------------------------------------------------------------|----------|------------------|
| PART NUMBER  | DESCRIPTION                                                        | QUANTITY | NSN              |
| MS27025-5    | COUPLING HALF, QUICK DISCONNECT, CAM-LOCKING TYPE, FEMALE, TYPE VI | 1        | 4730-01-223-4931 |
| MS35842-12   | HOSE CLAMP                                                         | 2        | 4730-00-908-3193 |
| 601-20       | HOSE, 1-1/8 INCH ID                                                | 1 FT     | 4720-00-380-6944 |
| MS24393D12   | REDUCER ADAPTER                                                    | 1        | 4730-00-994-0883 |
| NAS1595-10   | PACKING                                                            | 1        | 5330-00-020-0067 |
| MS24398-12-8 | ADAPTER, STRAIGHT                                                  | 1        | 4730-00-883-8990 |
| M83798 / 1-8 | FITTING, STRAIGHT                                                  | 1        | 4730-00-632-2002 |
| 601 NO. 8    | STEEL BRAIDED HOSE                                                 | 1 FT     |                  |
| M83798 / 3-8 | ELBOW                                                              | 1        | 4730-00-795-0945 |


## NOTE

1. MAKE DEFUEL ADAPTER ASSEMBLY PER FIGURE, USING MATERIAL LISTED IN CHART A, OR APPROVED EQUIVALENT.


AA9532  
SA

Figure 163. Defuel Adapter.

## FIELD MANUFACTURE ITEMS - Continued

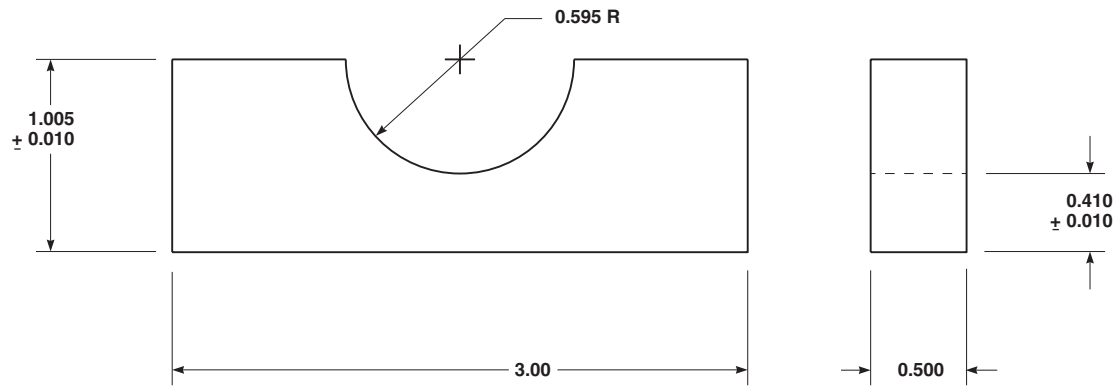

(SEE NOTES 1, 2, 3)

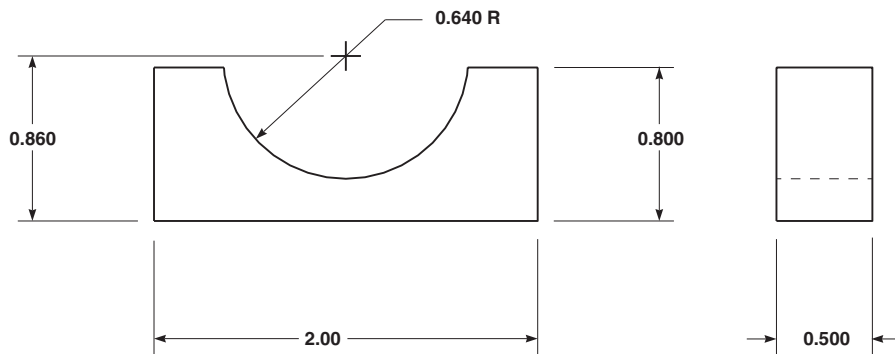

(SEE NOTES 1, 4, 5)


## NOTES

1. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
2. MAKE FROM 7075-T6 ALUMINUM ALLOY.
3. DAMPER P/N 9018-1-2.
4. MAKE FROM 6061-T6 ALUMINUM ALLOY.
5. DAMPER P/N 9341101.

AA9721A  
SA

Figure 164. Damper Indicator Cradle.

## FIELD MANUFACTURE ITEMS - Continued

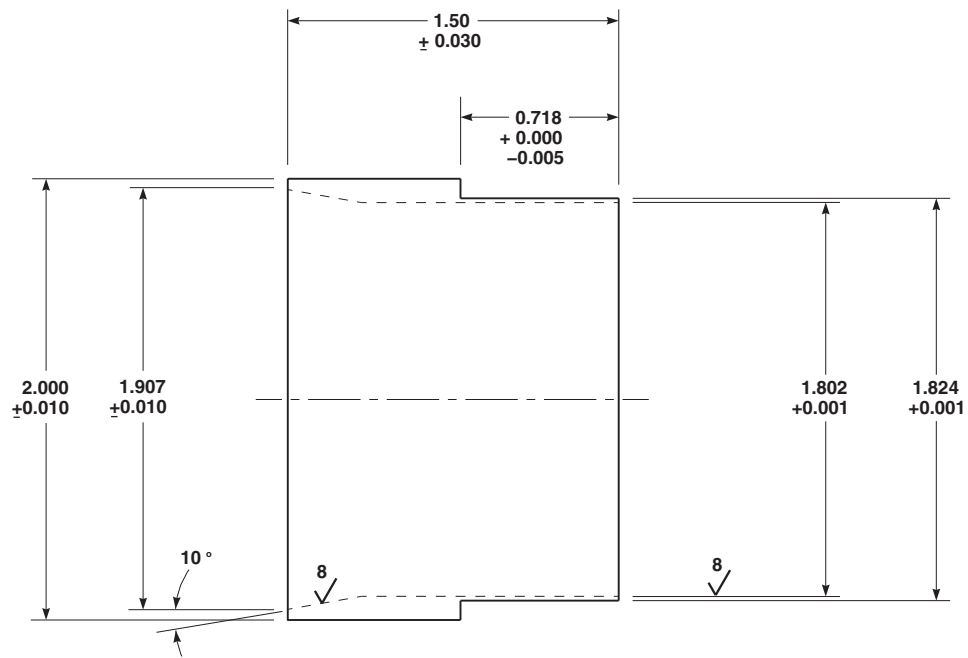


## NOTES

1. MAKE FROM 303 STAINLESS STEEL.
2. BLEND ID SMOOTH.
3. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.

AK1805A  
SA

Figure 165. Damper Indicator Insertion Tool.

FIELD MANUFACTURE ITEMS - Continued

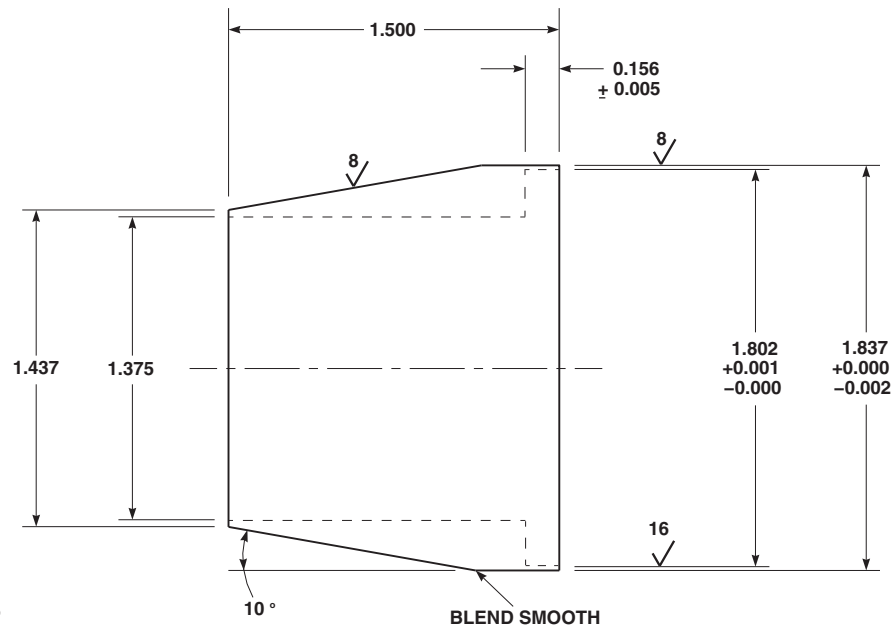


NOTES

1. MAKE FROM 303 STAINLESS STEEL.
2. BLEND OD SMOOTH.
3. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.

AK1806A  
SA

Figure 166. Damper Indicator Installation Tool.

## FIELD MANUFACTURE ITEMS - Continued

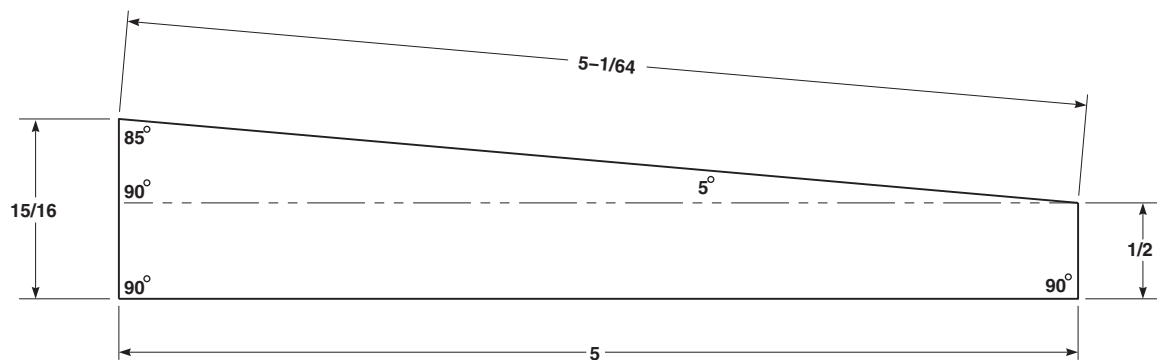

## NOTES


1. CUT FROM 2-INCH WOOD STOCK.
2. ENGRAVE DEGREE MARKS AS SHOWN.
3. IDENTIFY PARTS PER MIL-STD-130.
4. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.

PART NUMBER: A3012557

AK1807A  
SA

Figure 167. Drag Beam Wedge.

FIELD MANUFACTURE ITEMS - Continued

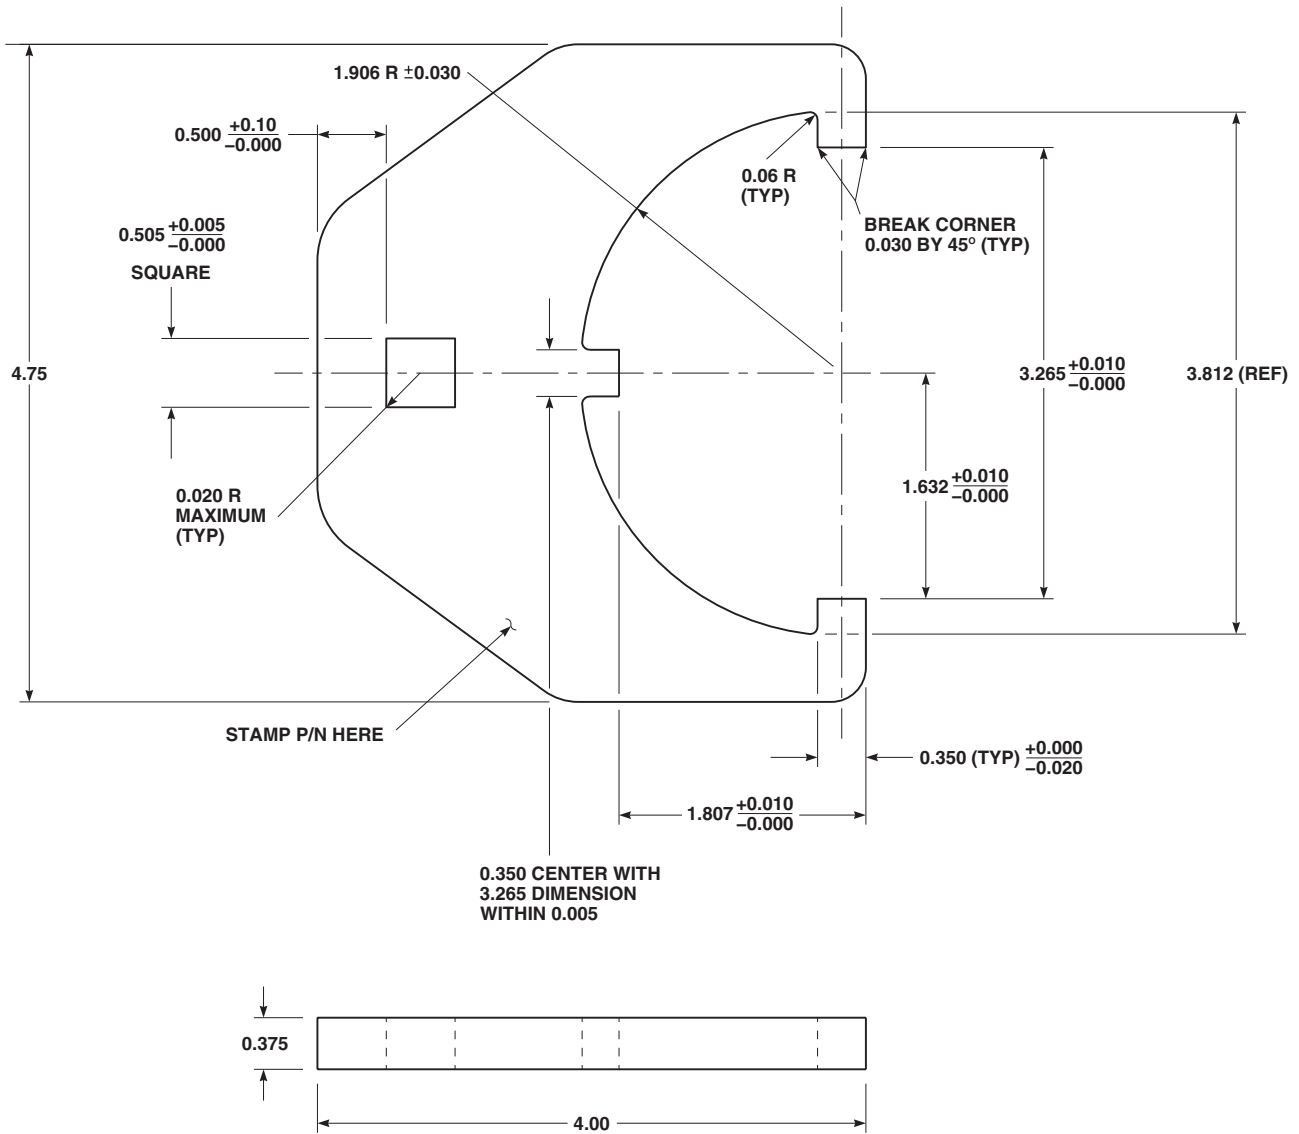

| NOMENCLATURE          | PART NUMBER   | MATERIAL   | THICKNESS | WIDTH | LENGTH |
|-----------------------|---------------|------------|-----------|-------|--------|
| DROOP STOP NUT WRENCH | 1520-BH53E001 | 4130 STEEL | 0.375     | 4.75  | 4.00   |

NOTES


1. MAKE DROOP STOP NUT WRENCH AS SHOWN IN FIGURE, USING MATERIAL LISTED IN CHART.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. IDENTIFY PARTS PER MIL-STD-130.

PART NUMBER: 1520-BH53E001

AB2655  
SA

Figure 168. Droop Stop Nut Wrench.

## FIELD MANUFACTURE ITEMS - Continued

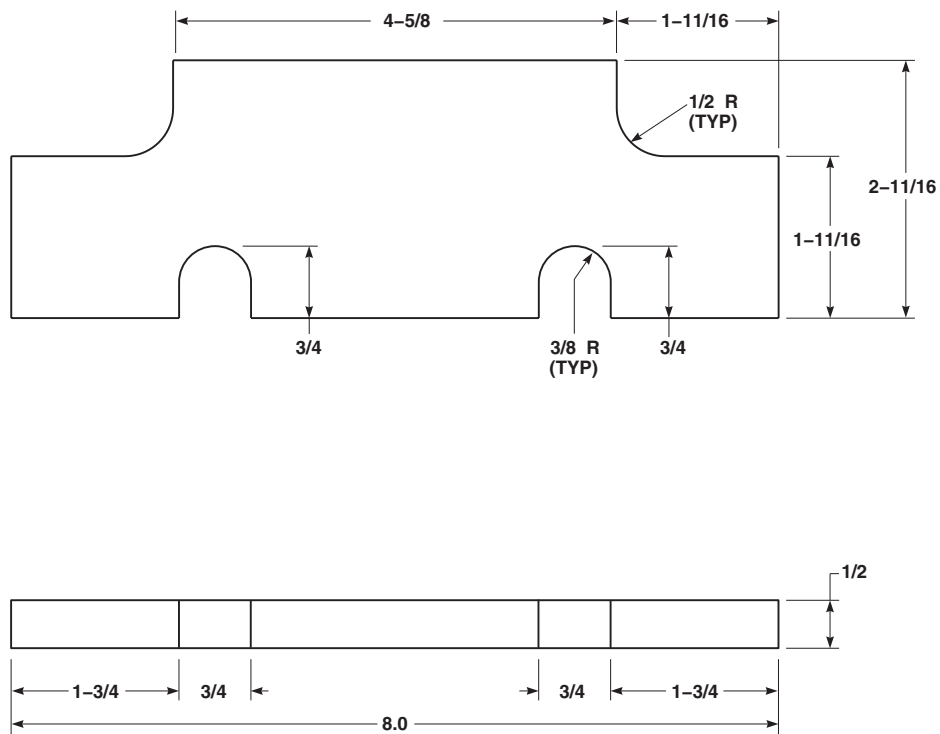

## NOTES


1. MAKE FROM 4130 STEEL PLATE, 0.50 INCH THICK.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. BREAK ALL SHARP EDGES.
4. IDENTIFY PART PER MIL-STD-130.

PART NUMBER: 4920BHS3E004

AK1809B  
SA

Figure 169. Stabilator Bolt Removal Tool.

---

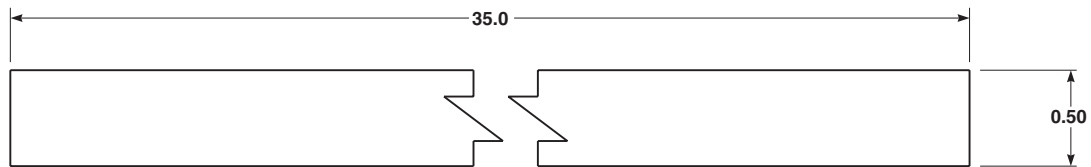**FIELD MANUFACTURE ITEMS** - Continued**NOTES**

1. MAKE FROM PRESSURE SENSITIVE FOIL TAPE, 2 MIL THICK.
2. MADE BY 3M CO., NO. 433, FSCM 26066.
3. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
4. CUT TAPE TO REQUIRED LENGTH.


PART NUMBER: 70216-01000-107.

AK1810A  
SA

Figure 170. Foil Tape.



---

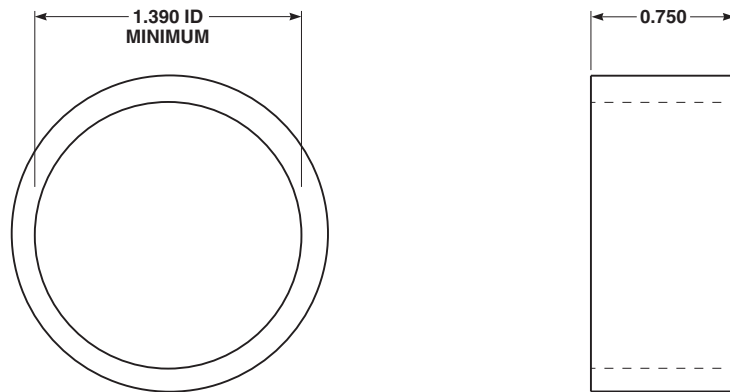
**FIELD MANUFACTURE ITEMS** - Continued**NOTES**

1. MAKE FROM SAE4130 STEEL TUBING, MIL-S-6731 OR EQUIVALENT.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.

AB2656  
SA

Figure 171. Stabilator Fitting Support.

---

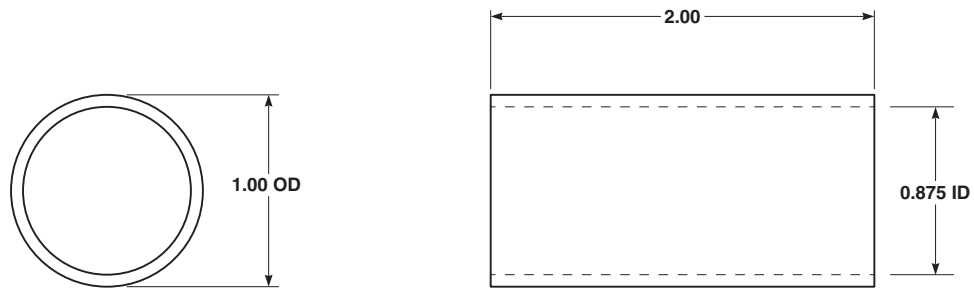
**FIELD MANUFACTURE ITEMS** - Continued**NOTES**

1. MAKE FROM ALUMINUM TUBING.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.

AK1812A  
SA

Figure 172. Pusher Tube.

## FIELD MANUFACTURE ITEMS - Continued

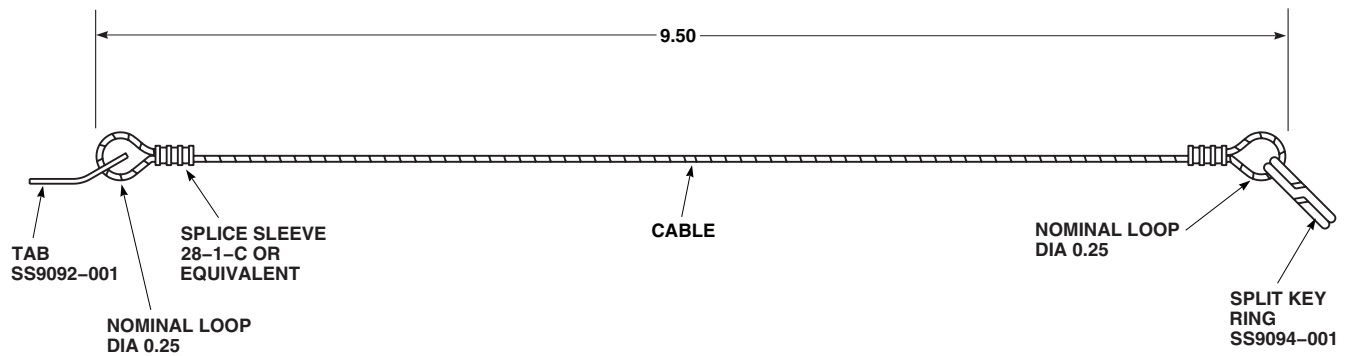

## NOTES


1. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
2. MAKE FROM:
  - A. CABLE 3/64 CRES WIRE CABLE, MIL-W-83420, TYPE II, COMP B, NSN 4010-00-082-5963.
  - B. SPLICE SLEEVE-28-1-6, NSN 4030-00-431-5536.
  - C. TAB-SS9092-001, FSCM 78286.
  - D. SPLIT KEY RING-SS9094-001, FSCM 78286.
3. CUT CABLE TO REQUIRED LENGTH. ASSEMBLE SPLICE SLEEVES, TAB, AND SPLIT KEY RING AS SHOWN.
4. REMOVE ALL BURRS AND SHARP EDGES.
5. IDENTIFY PARTS PER MIL-STD-130.

PART NUMBER: SS9096A06GG0095

AK1813A  
SA

Figure 173. Drip Pan Cable Assembly.

### FIELD MANUFACTURE ITEMS - Continued

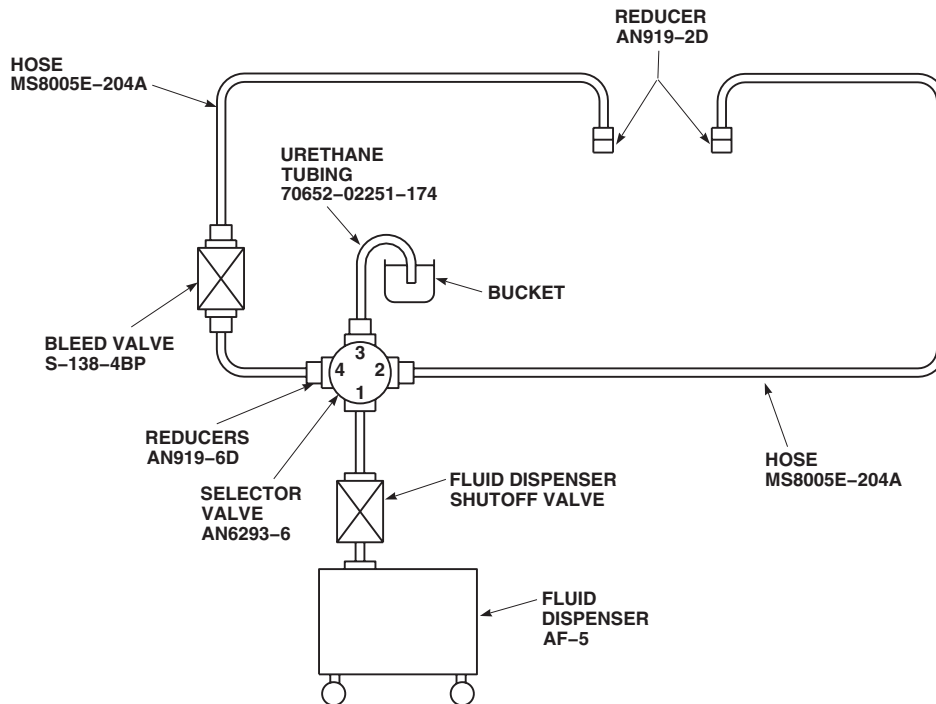

| PART NUMBER     | DESCRIPTION               | QUANTITY    |
|-----------------|---------------------------|-------------|
|                 | BUCKET, (2-GALLON)        | 1           |
| S-138-4BP       | BLEED VALVE               | 1           |
| MS8005E-204A    | HOSE                      | AS REQUIRED |
| AF-5            | HYDRAULIC FLUID DISPENSER | 1           |
| AN919-6D        | REDUCER                   | 4           |
| AN919-2D        | REDUCER                   | 2           |
| AN6293-6        | SELECTOR VALVE            | 1           |
| 70652-02251-174 | TUBING, URETHANE          | 2 FEET      |

## NOTES

1. MAKE DAMPER BLEED UNIT PER FIGURE, USING MATERIAL LISTED IN CHART OR EQUIVALENT.
2. IDENTIFY PARTS PER MIL-STD-130

**AK1815**  
SA

Figure 174. Damper Bleed Unit.

## FIELD MANUFACTURE ITEMS - Continued

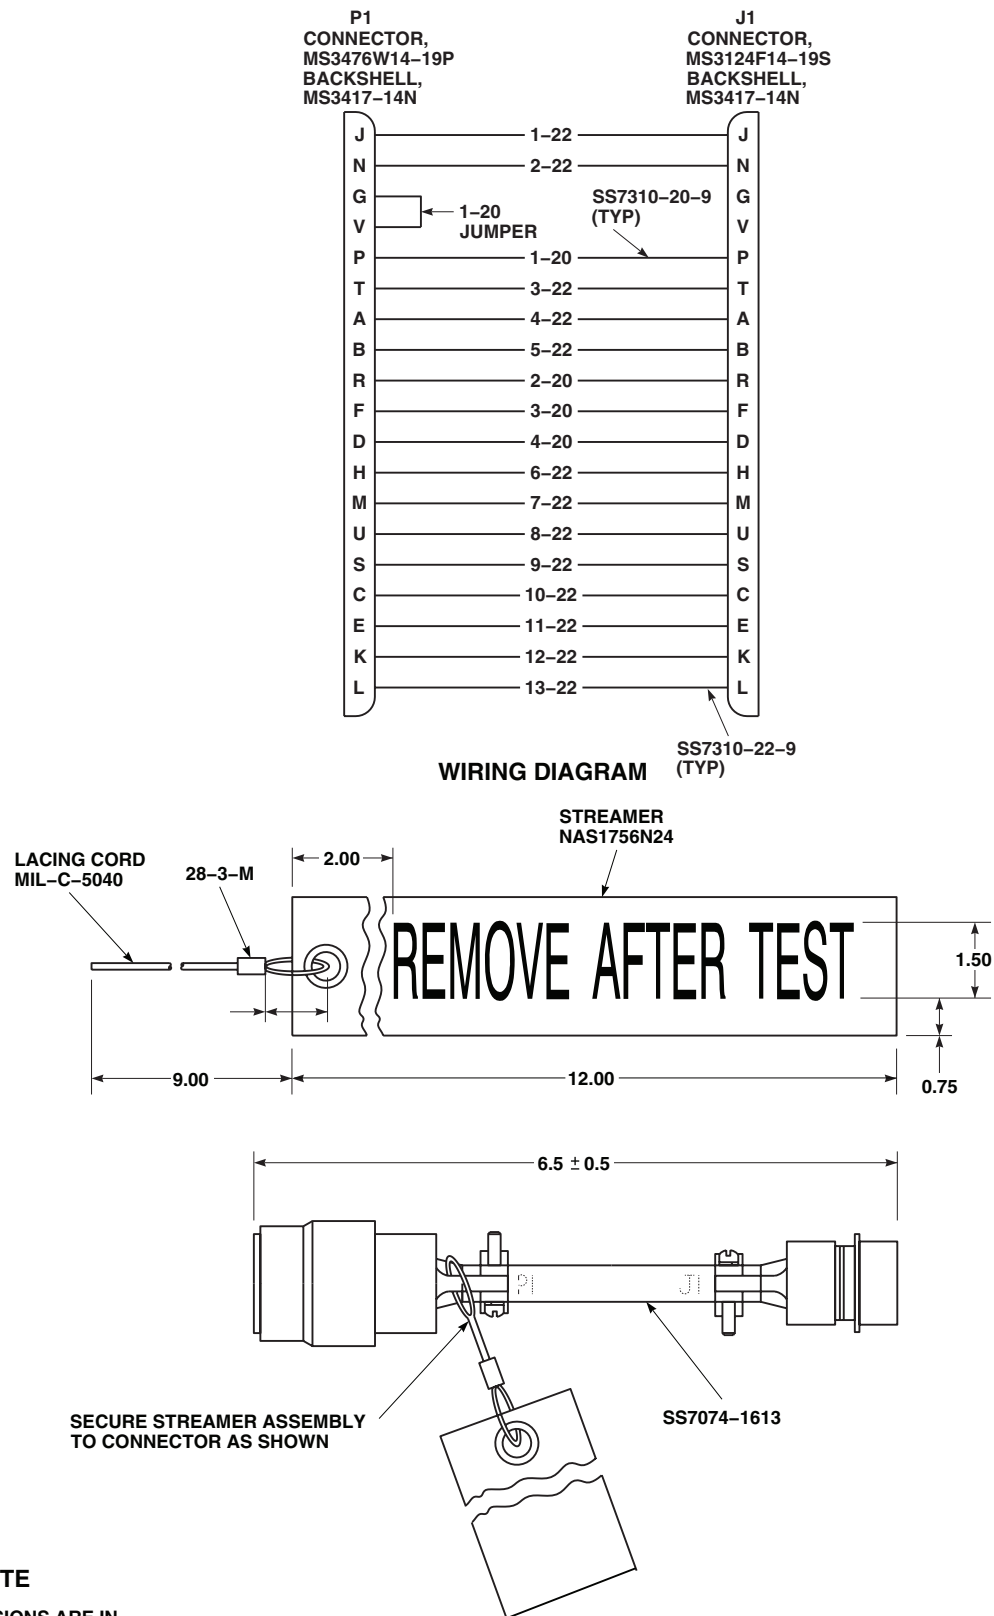
AA0128\_1C  
SA

Figure 175. Dispenser Test Cable. (Sheet 1 of 2)

---

**FIELD MANUFACTURE ITEMS** - Continued

| PART NUMBER   | DESCRIPTION          | QUANTITY    |
|---------------|----------------------|-------------|
| MIL-C-5040    | LACING CORD          | AS REQUIRED |
| MS3124F14-19S | ELECTRICAL CONNECTOR | 1           |
| MS3476W14-19P | ELECTRICAL CONNECTOR | 1           |
| MS3417-14N    | BACKSHELL            | 2           |
| SS7074-1613   | SLEEVE MARKER        | AS REQUIRED |
| SS7310-20-9   | WIRE                 | AS REQUIRED |
| SS7310-22-9   | WIRE                 | AS REQUIRED |
| 28-3-M        | SLEEVE               | 1           |
| NAS1756N24    | STREAMER             | 1           |


**NOTES**

1. MAKE DISPENSER TEST CABLE AS SHOWN IN FIGURE, USING MATERIALS LISTED IN CHART.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. IDENTIFY TEST CABLE AND CONNECTORS PER FIGURE AND MIL-STD-130.
4. STENCIL LETTERS USING WHITE, COLOR NO. 37875 PER FED-STD-595.
5. SECURE STREAMER TO CONNECTOR.

AA0128\_2B  
SA

Figure 175. Dispenser Test Cable. (Sheet 2 of 2)

## FIELD MANUFACTURE ITEMS - Continued

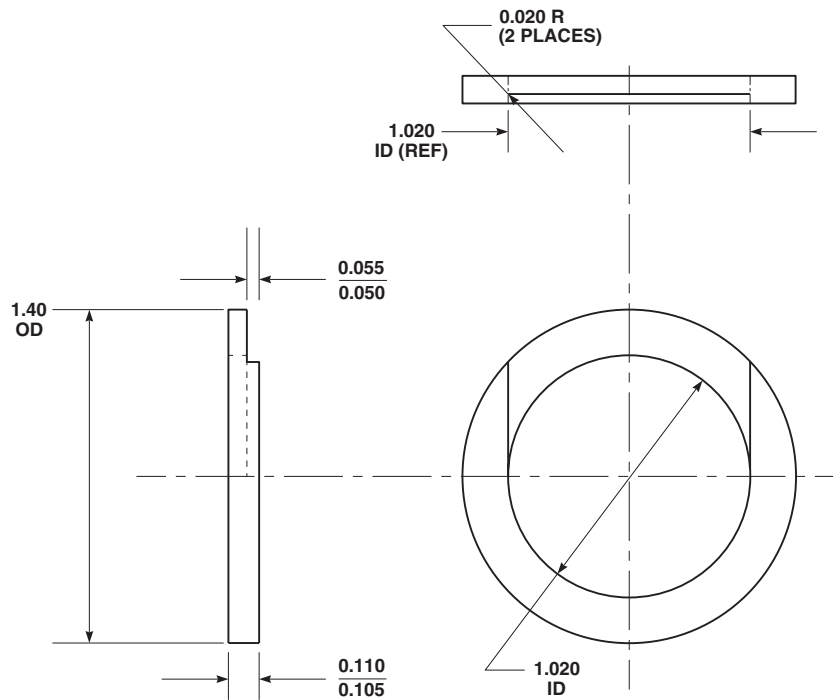

## NOTES


1. MAKE FROM 0.125 INCH THICK NYLON 6 / 6. L-P-410, NSN 9330-01-028-9334. MACHINE TO SPECIFIED THICKNESS.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. IDENTIFY PARTS PER MIL-STD-130.

PART NUMBER: 70250-13004-101


AK1818A  
SA

Figure 176. Tail Landing Gear Strut Limiter.


## FIELD MANUFACTURE ITEMS - Continued

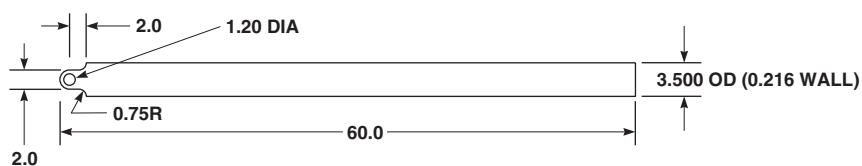

WT W/O APEX FITTING = 29 LBS  
WT COMPLETE = 38 LBS

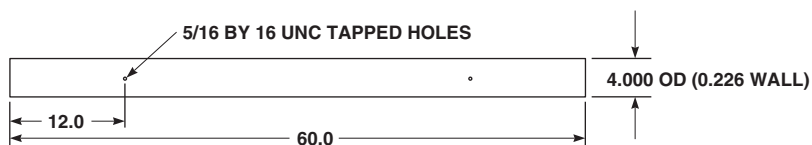

SCHEDULE 40 ALUMINUM PIPE  
6061T6

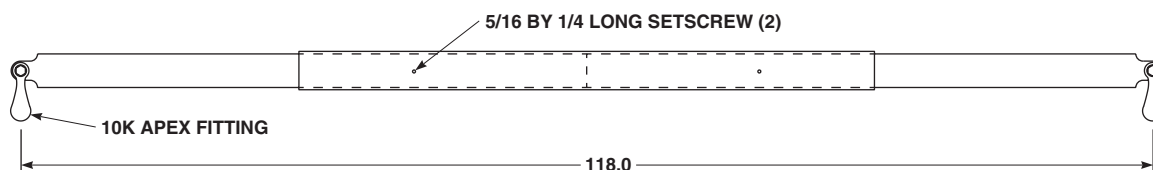

## NOTES


1. MAKE EXTENDER FROM ALUMINUM TUBE, 6061-T6511, 5.5 INCH OD BY 5 INCH ID BY 43 INCHES LONG. IF 5.5 INCH OD BY 0.25 INCH WALL TUBE IS NOT AVAILABLE. USE 5 INCH NOMINAL ALUMINUM TUBE, 6061-T6 TUBE (REFERENCE DIMENSIONS ARE 5.56 INCH OD BY 5.047 INCH ID, 0.258 INCH WALLS THICKNESS).
2. MAKE INNER TUBE ASSEMBLY FROM TWO SPREADER BARS, 81996-1670EG050.
3. DRILL FOUR 1.281 INCH DIAMETER HOLES THROUGH EXTENDER AND INNER TUBE ASSEMBLIES.
4. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.

AK1819B  
SA

Figure 177. Recovery Kit Spreader Bar.



---

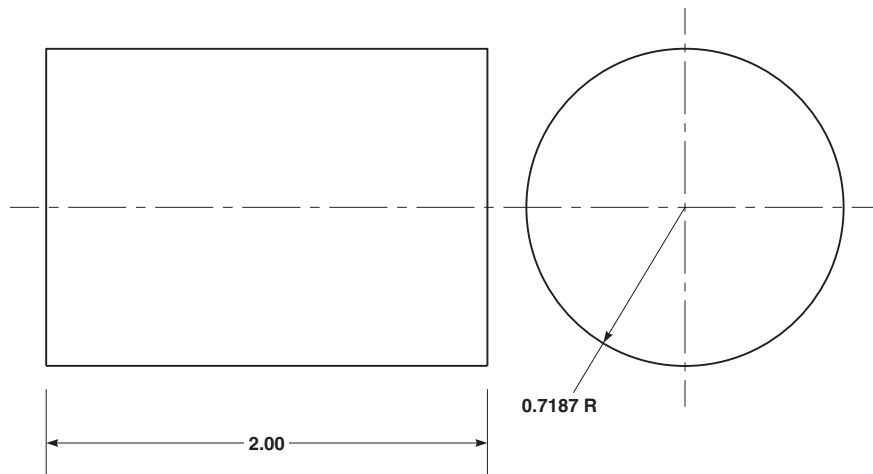
FIELD MANUFACTURE ITEMS - Continued**NOTES**

1. MAKE FROM BRASS.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.

AK1820A  
SA

Figure 178. Drag Beam Fuselage Support Fitting Bearing Drift.

## FIELD MANUFACTURE ITEMS - Continued

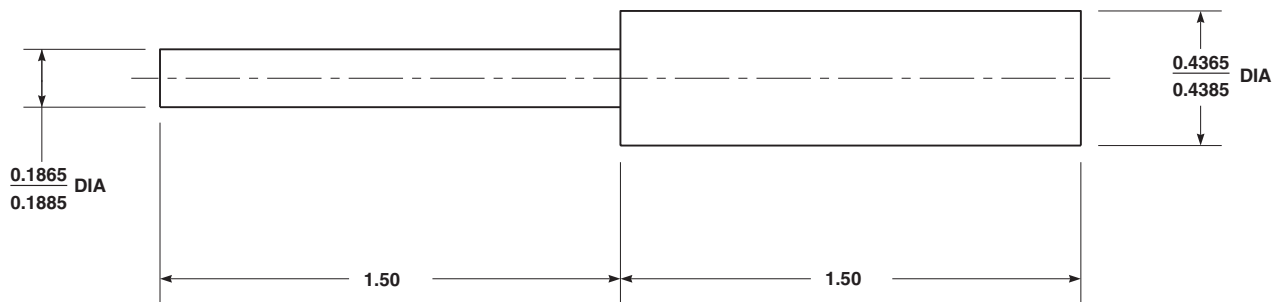

## NOTES

1. MAKE FROM AMS5643, 17-4PH STEEL.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. IDENTIFY PARTS PER MIL-STD-130.


PART NUMBER: A3012558

AK1831B  
SA

Figure 179. Stabilator Position Sensor Limit Switch Lockpin.



## FIELD MANUFACTURE ITEMS - Continued

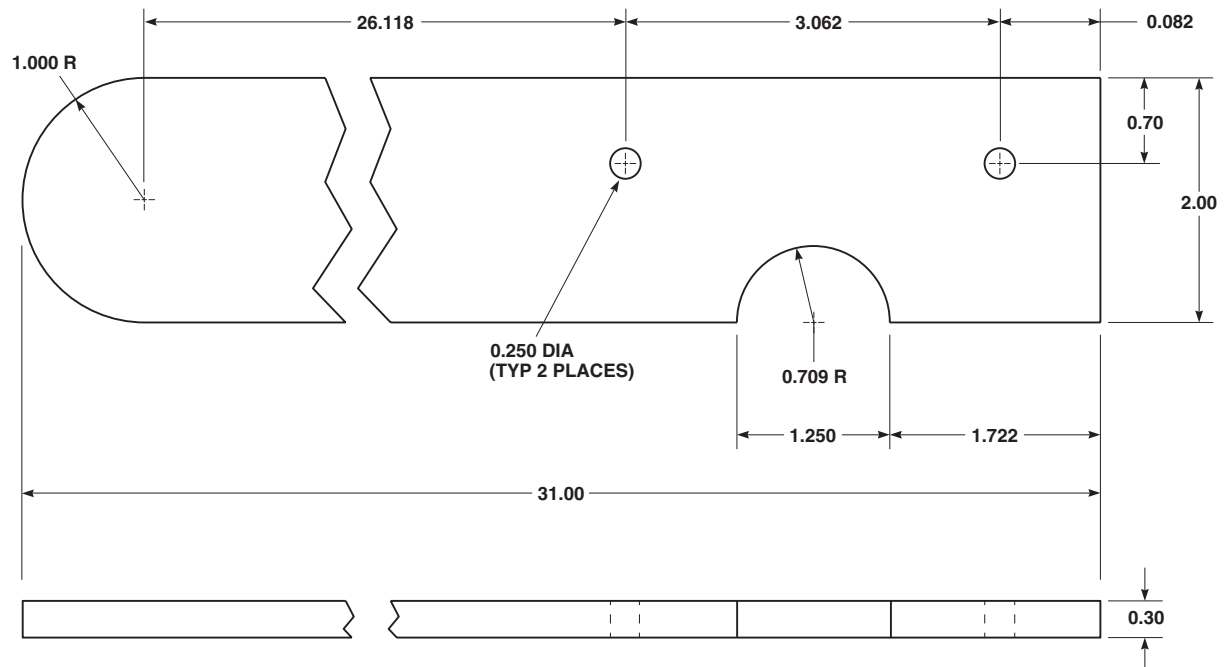

## NOTES


1. MAKE FROM 7075-T6 ALUMINUM STOCK, 0.30 INCH THICK.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. IDENTIFY ALL PART PER MIL-STD-130.

PART NUMBER: 410404-1

AA1134B  
SA

Figure 181. Torque Reactor Plate.

## FIELD MANUFACTURE ITEMS - Continued

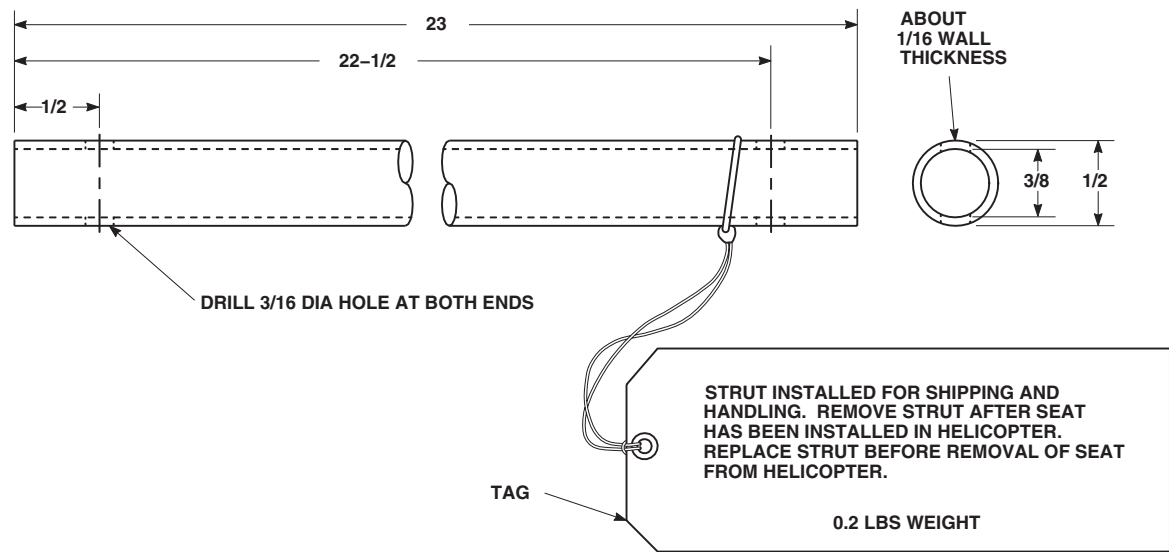


## NOTES

1. MAKE FROM ALUMINUM TUBING, 6061-T6, OR STAINLESS STEEL TUBING, MIL-S-6731.
2. FINISH PER MIL-PRF-23377 EPOXY PRIMER, NSN 8010-00-082-2477, 1 COAT, FED SPEC TT-L-20, AIRTIGHT RED LACQUER, NSN 8010-01-144-9873.
3. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
4. IDENTIFY PARTS PER MIL-STD-130.

AA0718D  
SA

Figure 182. Stabilizer Strut.

## FIELD MANUFACTURE ITEMS - Continued

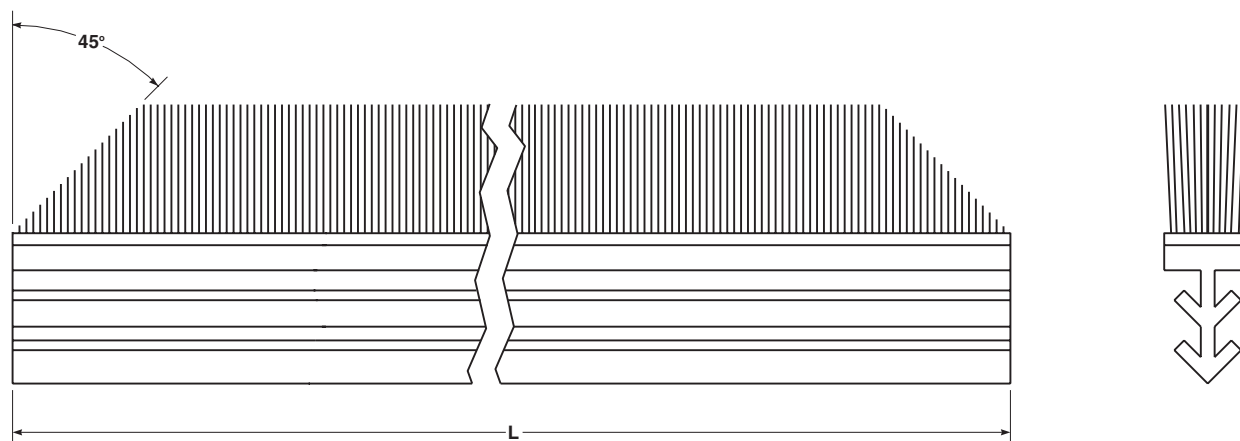

| NOMENCLATURE                  | L LENGTH | PART NUMBER |
|-------------------------------|----------|-------------|
| GUNNER'S WINDOW<br>BRUSH SEAL |          |             |
| UPPER FRONT                   | 14.38    | 0341-0001-3 |
| UPPER REAR                    | 15.04    | 0341-0002-3 |
| LOWER FRONT                   | 14.70    | 0341-0003-3 |
| LOWER REAR                    | 14.12    | 0341-0004-3 |

## NOTES


1. MAKE FROM POLY-FIN WEATHER STRIPPING, PART NUMBER 0341-0000-3-100, NSN 5330-01-344-3841, FSCM 77824.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED,  $\pm 0.030$ .
3. CUT SEALS TO LENGTH PER CHART.
4. TRIM SEAL PILE TO 45 ANGLE, BOTH ENDS.
5. IDENTIFY PARTS PER MIL-STD-190.

PART NUMBER: 0341-0001-3, 0341-0002-3, 0341-0003-3, 0341-0004-3.

AA1136D  
SA

Figure 183. Gunner's Window Brush Seal.

## FIELD MANUFACTURE ITEMS - Continued

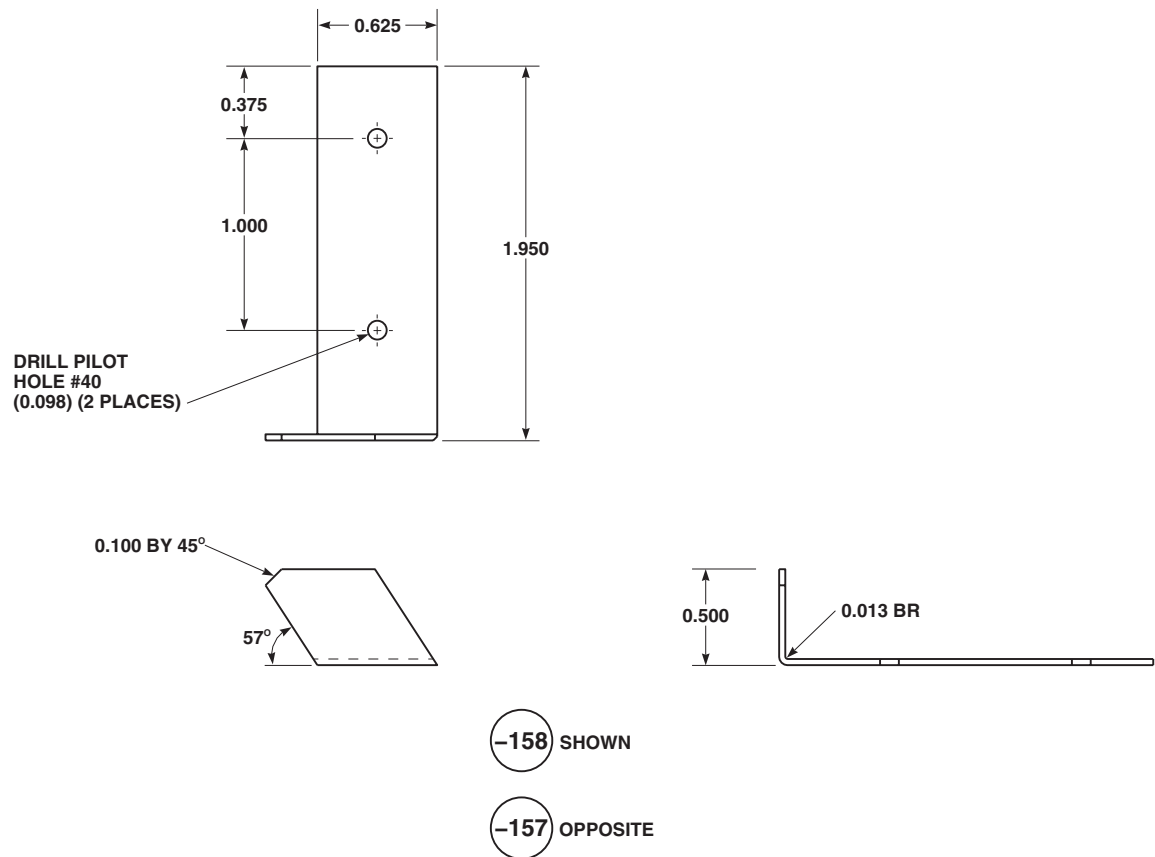


## NOTES

1. MAKE FROM 0.032 THICK 2024-T3 ALUMINUM ALLOY.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. DRILL PILOT HOLES AS INDICATED PER TM 1-1500-204-23.
4. IDENTIFY PARTS PER MIL-STD-130.

AA1137A  
SA

Figure 184. Clip.

## FIELD MANUFACTURE ITEMS - Continued

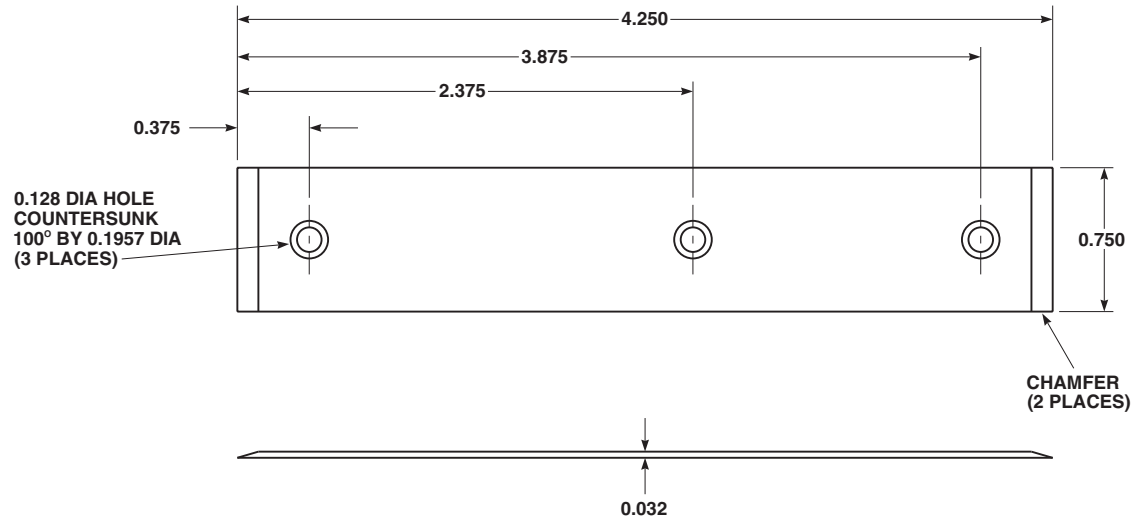

## NOTES


1. MAKE FROM STAINLESS STEEL, MIL-S-5059, 301 1/4 HARD, 0.032 INCH THICK.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. INSULATE DISSIMILAR METALS ON INSTALLATION.

AA1376A  
SA

Figure 185. Track Repair Plate.



---

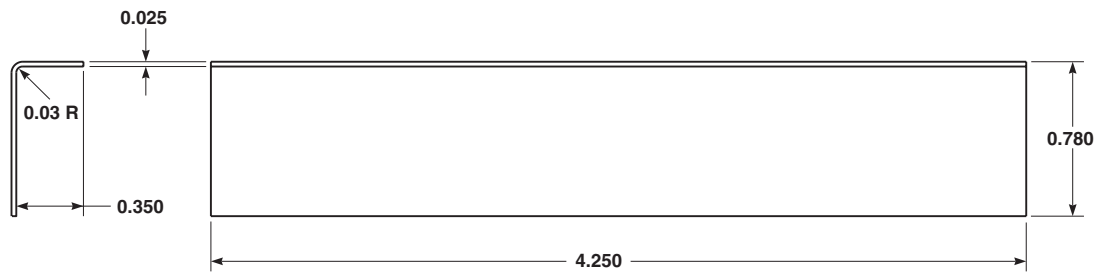FIELD MANUFACTURE ITEMS - Continued**NOTES**

1. MAKE FROM 301 STAINLESS STEEL, MIL-S-5059, 0.025 INCH THICK, TREATED TO 1/4 HARD AFTER FORMING.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. INSULATE DISSIMILAR METALS ON INSTALLATION.

AA1377A  
SA

Figure 186. Track Repair Angle.



---

**FIELD MANUFACTURE ITEMS** - Continued**NOTES**


1. MAKE FROM COATED CLOTH, TYPE II, CLASS II, MIL-C-20696, NSN 8305-00-880-8155.
2. CUT CLOTH TO FLAT PATTERN DIMENSIONS.
3. FOLD CLOTH 1 INCH UNDER ON ALL SIDES.
4. STITCHING TO BE PER FED-STD-751, TYPE 301, USING V-T-295, BLACK NYLON THREAD.
5. ALL SEWING PATTERNS TO BE BACK STITCHED 1/4 INCH.
6. POSITION 1730BH025-5 PATCH ASSEMBLY AND 1/4 INCH NYLON CORD, NSN 4020-00-263-1801 ON MAIN ROTOR BLADE COVER AND SEW.
7. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
8. IDENTIFY PER MIL-STD-130.

PART NUMBER: 1730BH025-1

AA1378\_2A  
SA

Figure 187. Main Rotor Blade Cover. (Sheet 2 of 2)

FIELD MANUFACTURE ITEMS - Continued

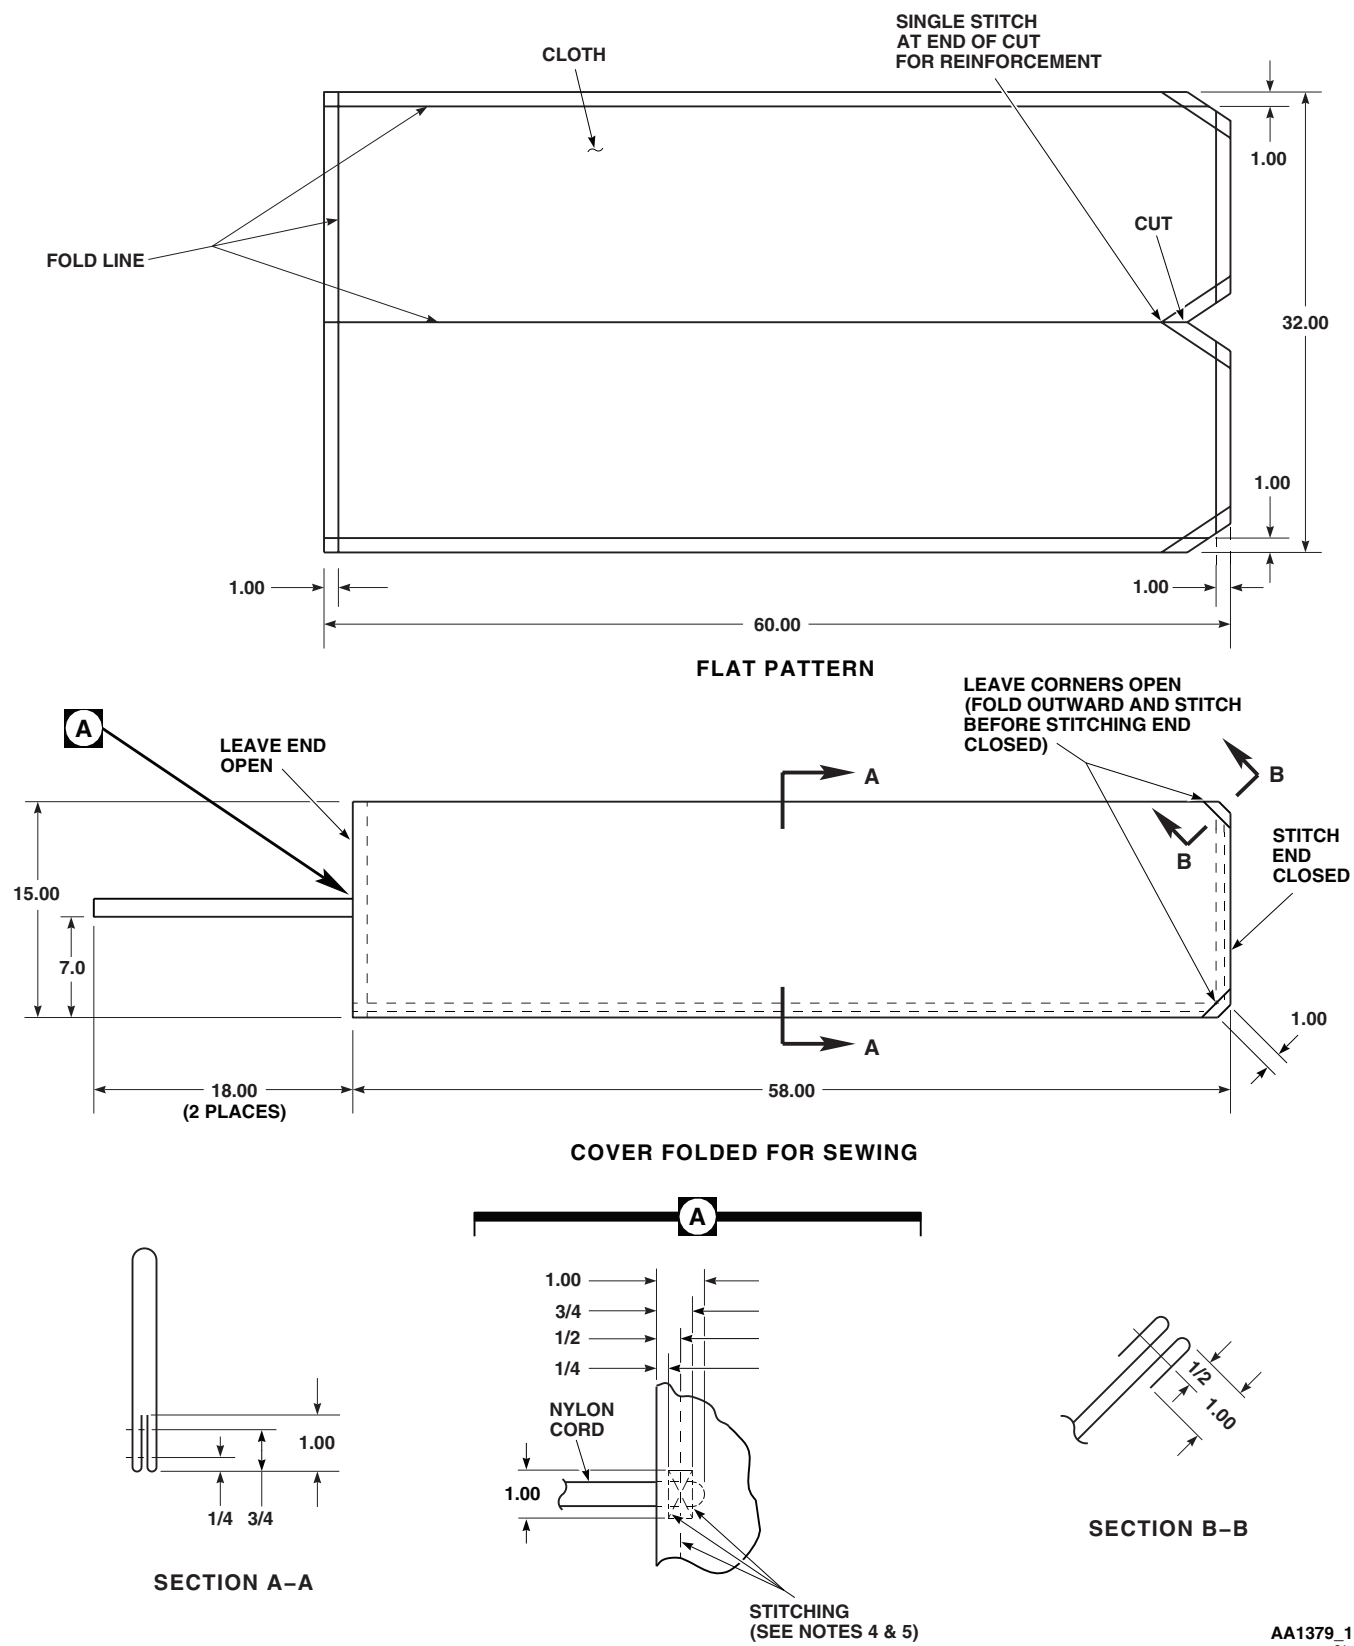

AA1379\_1  
SA

Figure 188. Tail Rotor Blade Cover. (Sheet 1 of 2)

---

**FIELD MANUFACTURE ITEMS** - Continued**NOTES**

1. MAKE FROM COATED CLOTH, TYPE II, CLASS II, MIL-C-20696, NSN 8305-00-880-8155.
2. CUT CLOTH TO FLAT PATTERN DIMENSIONS.
3. FOLD CLOTH 1 INCH UNDER ON ALL SIDES. POSITION 1/4 INCH NYLON CORD NSN 4020-00-263-1801.
4. STITCHING TO BE PER FED-STD-751, TYPE 301, USING V-T-295, BLACK NYLON THREAD.
5. ALL SEWING PATTERNS TO BE BACK STITCHED 1/4 INCH.
6. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
7. IDENTIFY PER MIL-STD-130.

PART NUMBER: 1730BH025-2

AA1379\_2A  
SA

Figure 188. Tail Rotor Blade Cover. (Sheet 2 of 2)

## FIELD MANUFACTURE ITEMS - Continued

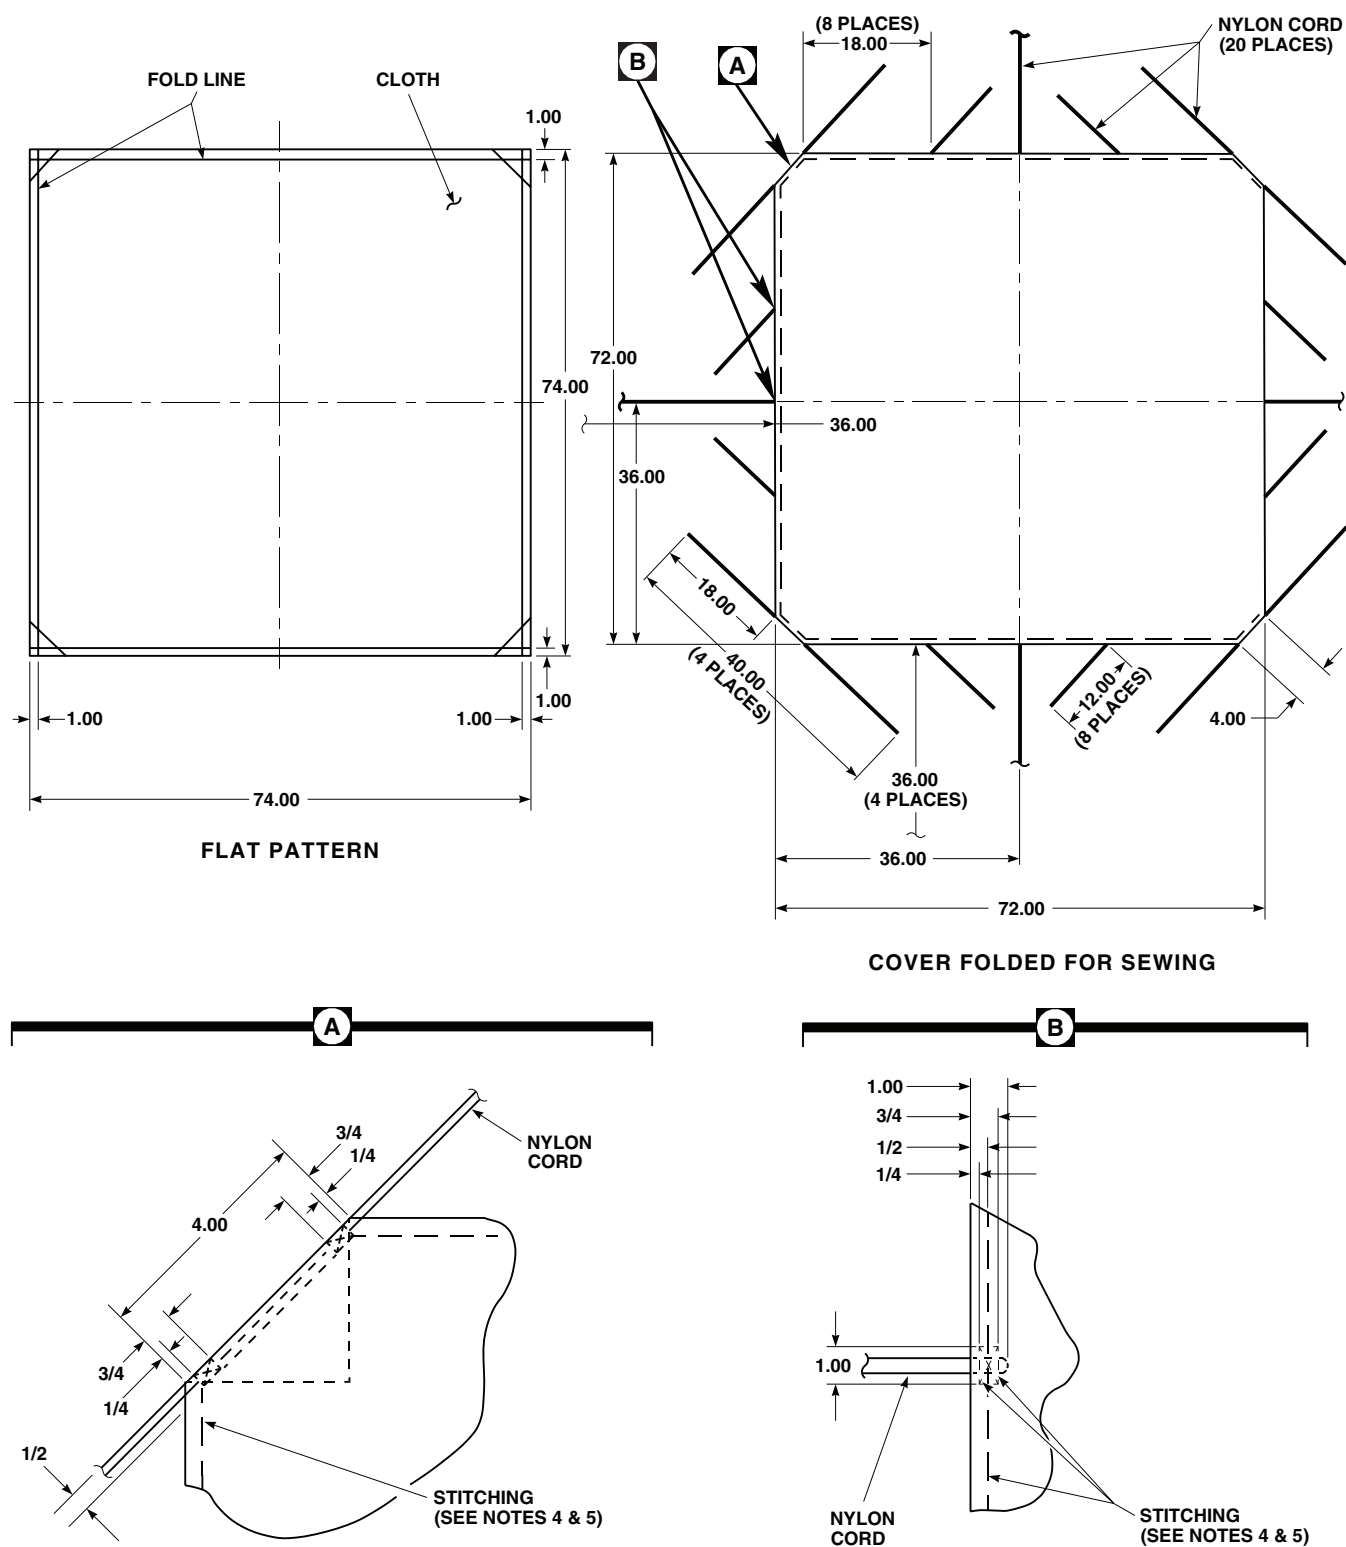
AA1380\_1  
SA

Figure 189. Main Rotor Head Cover. (Sheet 1 of 2)

---

**FIELD MANUFACTURE ITEMS** - Continued**NOTES**


1. MAKE FROM COATED CLOTH, TYPE II, CLASS II, MIL-C-20696, NSN 8305-00-880-8155.
2. CUT CLOTH TO FLAT PATTERN DIMENSIONS.
3. FOLD CLOTH 1 INCH UNDER ON ALL SIDES. POSITION 1/4 INCH NYLON CORD NSN 4020-00-263-1801.
4. STITCHING TO BE PER FED-STD-751, TYPE 301, USING V-T-295, BLACK NYLON THREAD.
5. ALL SEWING PATTERNS TO BE BACK STITCHED 1/4 INCH.
6. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
7. IDENTIFY PER MIL-STD-130.

PART NUMBER: 1730BH025-3

AA1380\_2A  
SA

Figure 189. Main Rotor Head Cover. (Sheet 2 of 2)

FIELD MANUFACTURE ITEMS - Continued

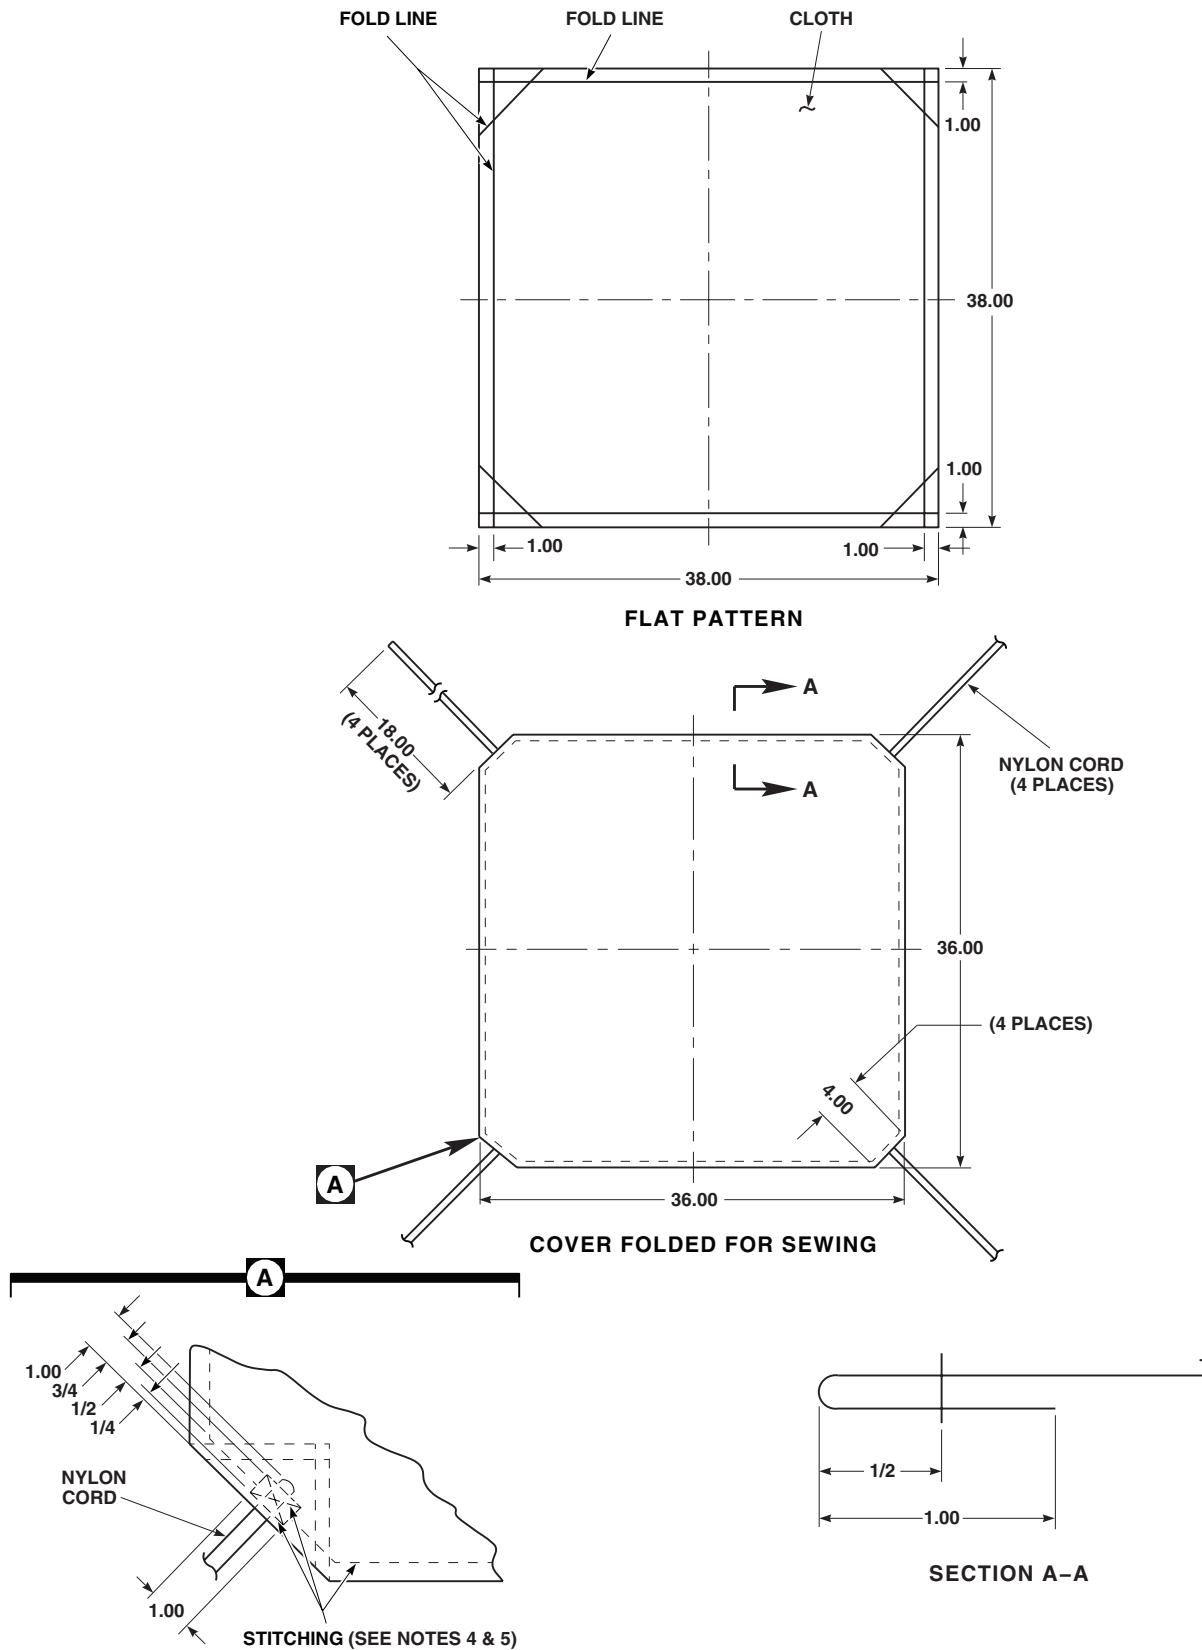

AA1381\_1  
SA

Figure 190. Tail Rotor Gearbox Cover. (Sheet 1 of 2)



---

**FIELD MANUFACTURE ITEMS** - Continued**NOTES**





1. MAKE FROM COATED CLOTH, TYPE II, CLASS II, MIL-C-20696, NSN 8305-00-880-8155.
2. CUT CLOTH TO FLAT PATTERN DIMENSIONS.
3. FOLD CLOTH 1 INCH UNDER ON ALL SIDES. POSITION 1/4 INCH NYLON CORD NSN 4020-00-263-1801.
4. STITCHING TO BE PER FED-STD-751, TYPE 301, USING V-T-295, BLACK NYLON THREAD.
5. ALL SEWING PATTERNS TO BE BACK STITCHED 1/4 INCH.
6. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
7. IDENTIFY PER MIL-STD-130.

PART NUMBER: 1730BH025-4

AA1381\_2A  
SA

Figure 190. Tail Rotor Gearbox Cover. (Sheet 2 of 2)

FIELD MANUFACTURE ITEMS - Continued

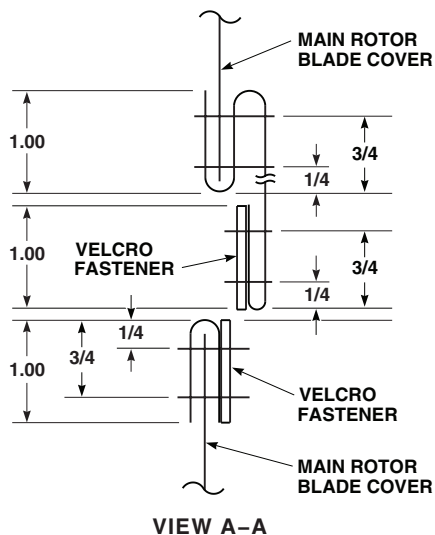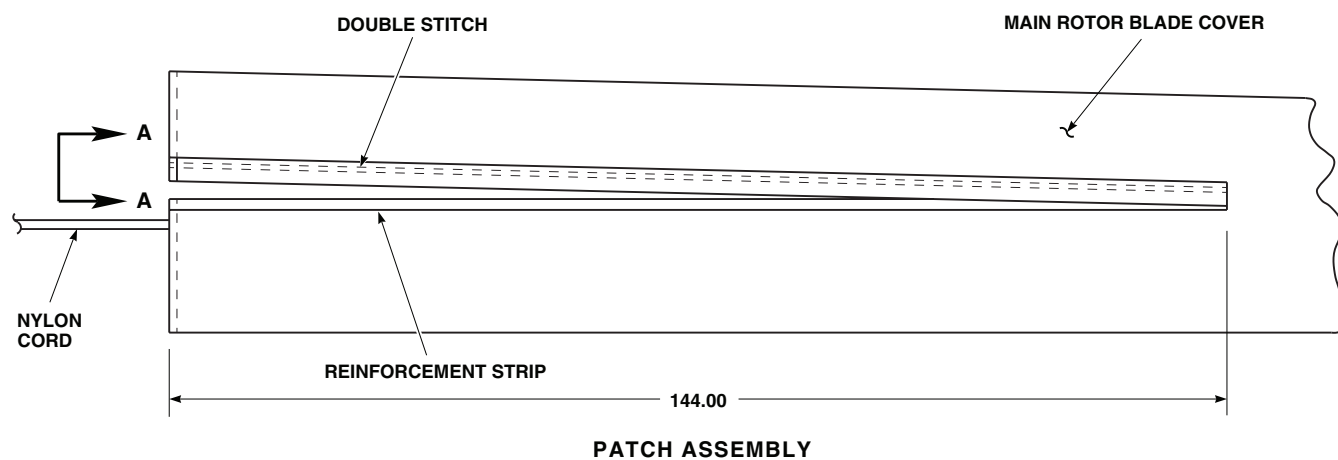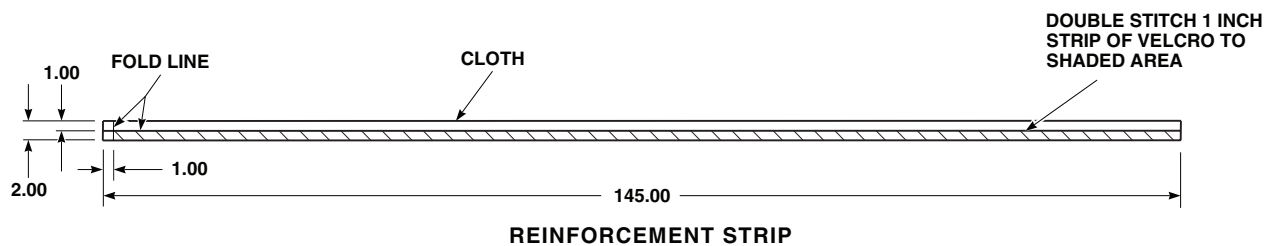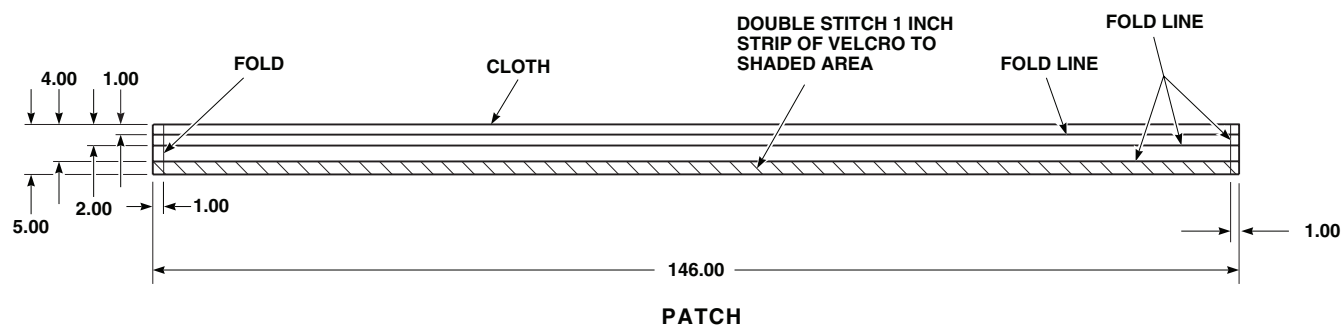

AA1382\_1  
SA

Figure 191. Patch Assembly. (Sheet 1 of 2)

---

**FIELD MANUFACTURE ITEMS** - Continued**NOTES**

1. MAKE FROM COATED CLOTH, TYPE II, CLASS II, MIL-C-20696, NSN 8305-00-880-8155.
2. CUT CLOTH TO FLAT PATTERN DIMENSIONS.
3. FOLD CLOTH 1 INCH UNDER ON ALL SIDES. POSITION 1/4 INCH NYLON CORD NSN 4020-00-263-1801.
4. STITCHING TO BE PER FED-STD-751, TYPE 301, USING V-T-295, BLACK NYLON THREAD.
5. ALL SEWING PATTERNS TO BE BACK STITCHED 1/4 INCH.
6. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
7. IDENTIFY PER MIL-STD-130.

PART NUMBER: 1730BH025-5

AA1382\_2A  
SA

Figure 191. Patch Assembly. (Sheet 2 of 2)

## FIELD MANUFACTURE ITEMS - Continued

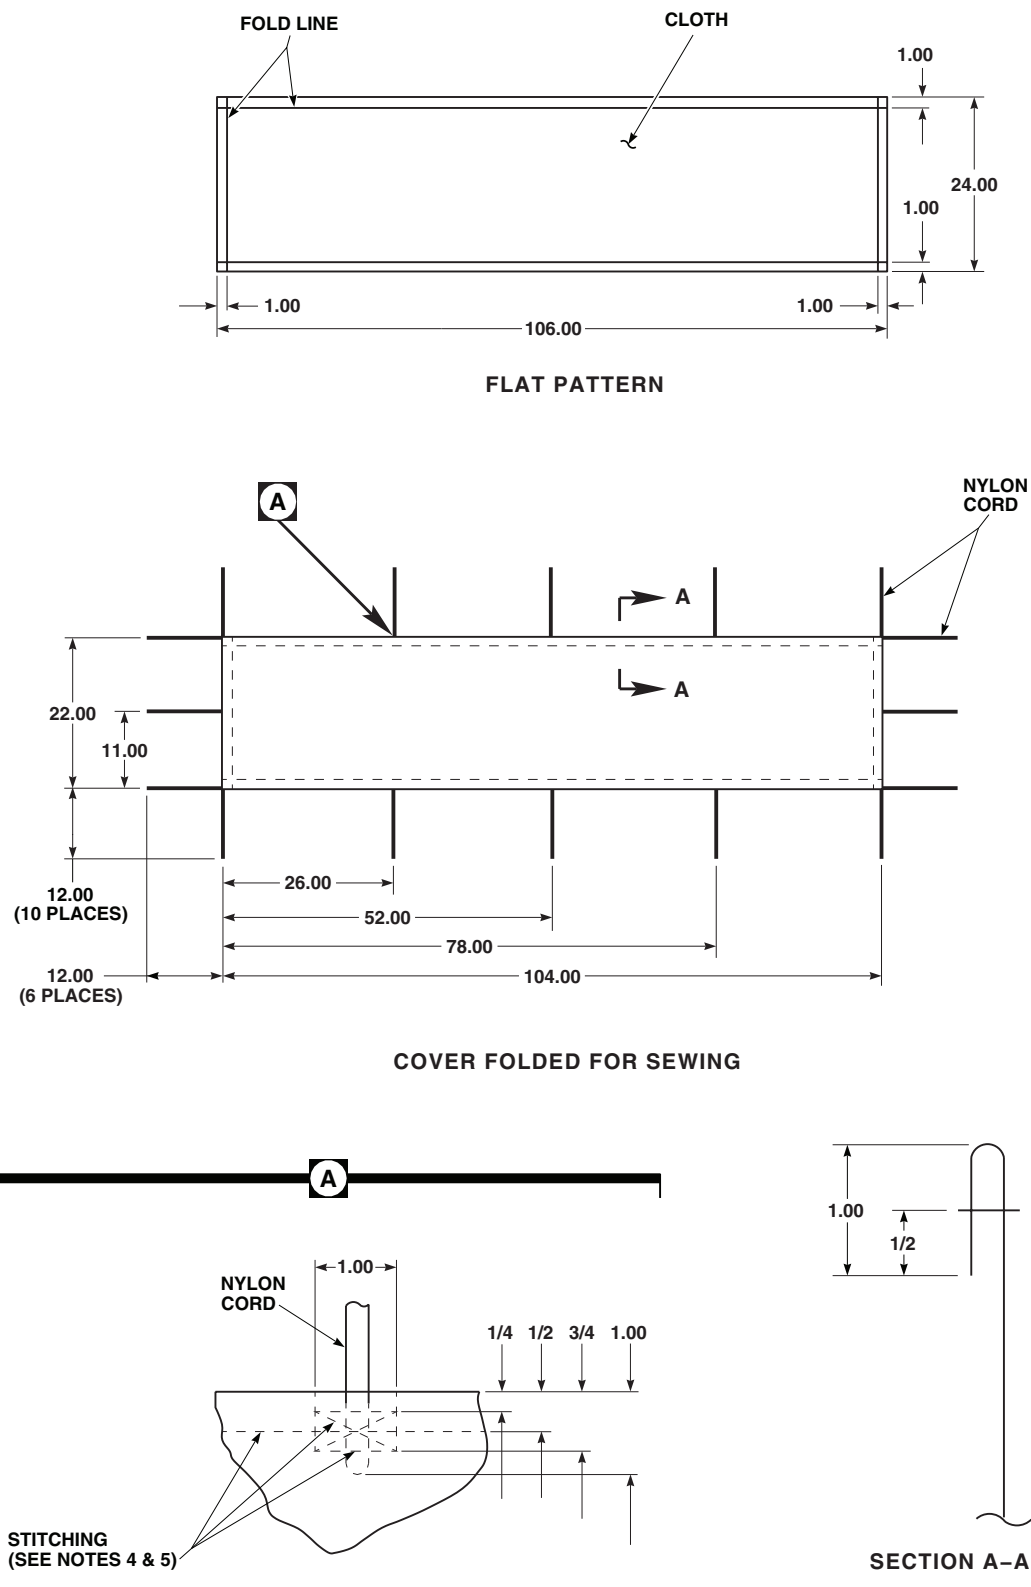
AA1383\_1  
SA

Figure 192. Mast Cover. (Sheet 1 of 2)

---

**FIELD MANUFACTURE ITEMS** - Continued**NOTES**


1. MAKE FROM COATED CLOTH, TYPE II, CLASS II, MIL-C-20696, NSN 8305-00-880-8155.
2. CUT CLOTH TO FLAT PATTERN DIMENSIONS.
3. FOLD CLOTH 1 INCH UNDER ON ALL SIDES. POSITION 1/4 INCH NYLON CORD NSN 4020-00-263-1801.
4. STITCHING TO BE PER FED-STD-751, TYPE 301, USING V-T-295, BLACK NYLON THREAD.
5. ALL SEWING PATTERNS TO BE BACK STITCHED 1/4 INCH.
6. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
7. IDENTIFY PER MIL-STD-130.

PART NUMBER: 1730BH025-6

AA1383\_2A  
SA

Figure 192. Mast Cover. (Sheet 2 of 2)

## FIELD MANUFACTURE ITEMS - Continued

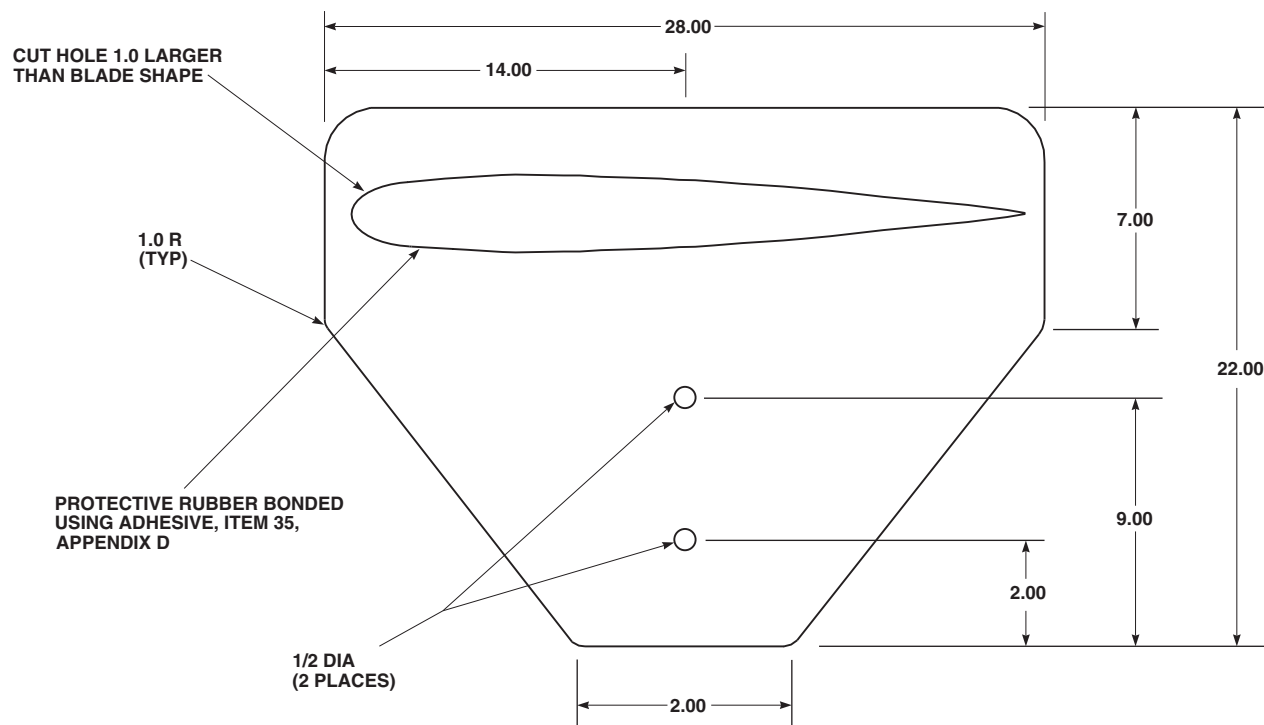



## NOTES

1. REMOVE UPPER MS9048-238 PIN FROM 70700-20395-041 BLADE POLE.
2. REMOVE IL1456-6 LOCK ASSEMBLY FROM 70700-20395-041 BLADE POLE.
3. MAKE SUPPORT FROM 0.75 INCH THICK EXTERIOR GRADE PLYWOOD, A-A-1417, NSN 5530-00-051-0512.
4. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
5. MAKE RUBBER PROTECTIVE STRIP FROM NITRILE RUBBER, MIL-R-6855, CLASS 1, GRADE 40, 0.06 INCH THICK, NSN 9320-00-241-9741.
6. BOND RUBBER USING ADHESIVE, ITEM 35, APPENDIX D.
7. DRILL 1/2 INCH DIAMETER HOLES AS SHOWN IN FIGURE.
8. DRILL TWO 1/2 INCH DIAMETER HOLES LOCATED 67.00 AND 74.00 INCHES UP FROM BASE OF BLADE POLE ASSEMBLY 70700-20395-041.
9. BREAK ALL SHARP EDGES AND DEBURR HOLES.
10. ATTACH BLADE SUPPORT TO BLADE POLE ASSEMBLY USING 2 BOLTS (NSN 5306-01-014-1732), 4 WASHERS (NSN 5318-00-149-9130), AND TWO NUT (NSN 5310-00-126-5754).
11. IDENTIFY PARTS PER MIL-STD-130.



AA1912A  
SA

Figure 193. Main Rotor Blade Holder.

## FIELD MANUFACTURE ITEMS - Continued

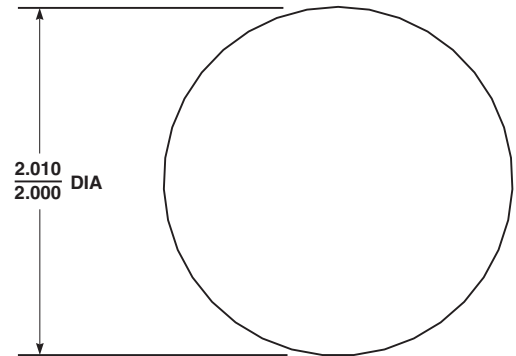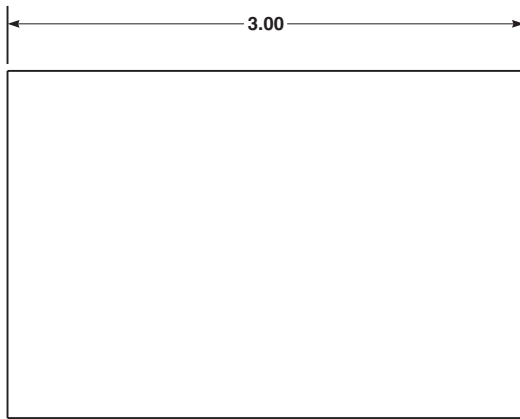

## FORWARD BUSHING

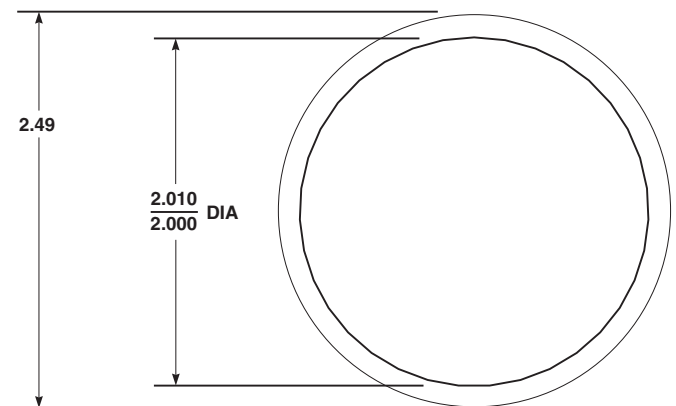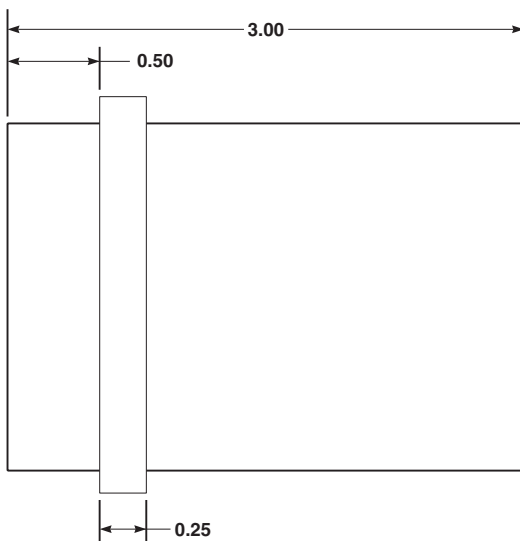

## AFT BUSHING


## NOTES

1. MAKE FROM 6061 OR 7075 ALUMINUM ALLOY.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. TWO PIECES REQUIRED.
4. REMOVE BURRS AND SHARP EDGES.
5. IDENTIFY PARTS PER MIL-STD-130.

AA2186B  
SA

Figure 194. Cargo Hook Bushing Installation Block.

## FIELD MANUFACTURE ITEMS - Continued

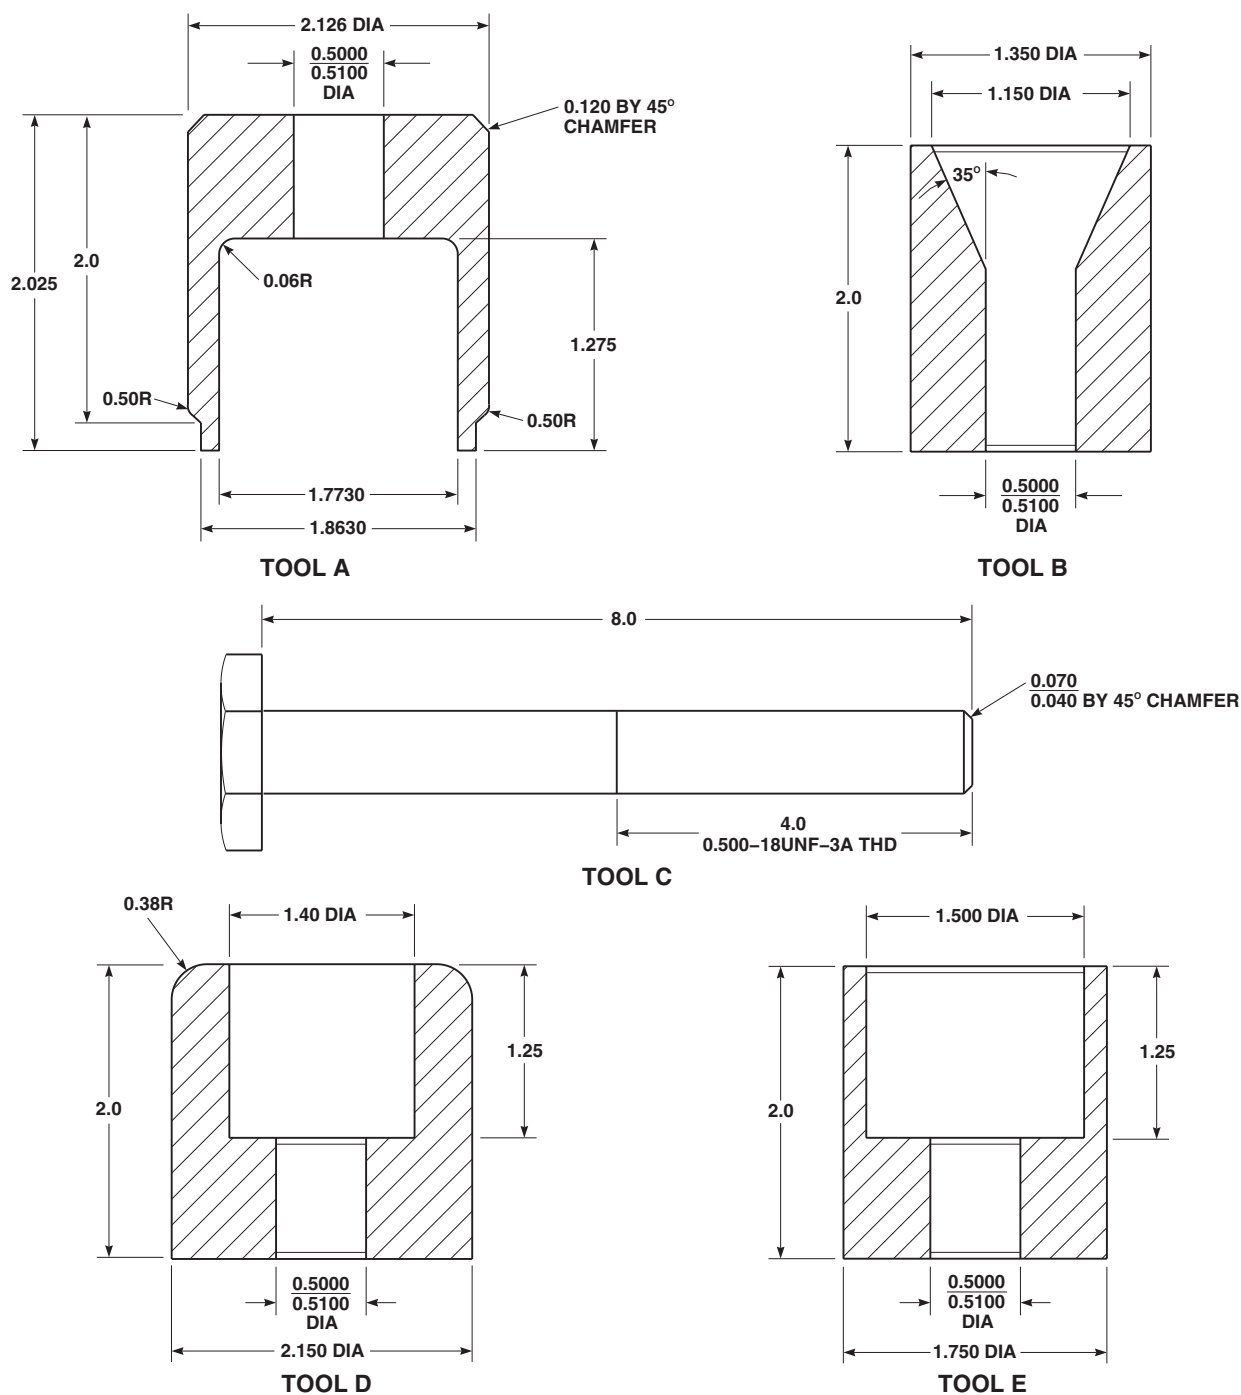

## NOTES


1. MAKE FROM 4340 COND. C. HEAT TREAT TO 125,000 PSI MIN T.S. ROCKWELL C26-33.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. TOOL C INCLUDES, AN960-1016 (OR EQUIVALENT), WASHER AND NUT MEASURING, 0.5000-18 UNF-3A THD.

AA2187A  
SA

Figure 195. Spherical Bearing Remover/Installer.



## FIELD MANUFACTURE ITEMS - Continued

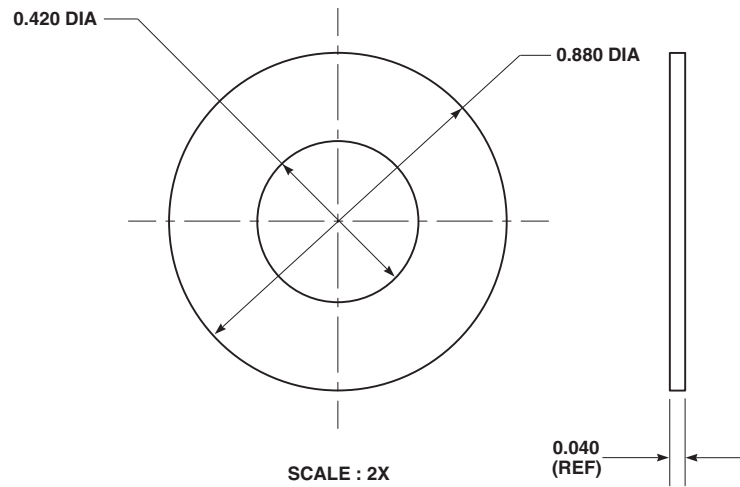


## NOTES

1. MAKE FROM 0.040 IN. THICK PLASTIC SHEET, MIL-P-410, 9330-00-602-5921.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.

PART NUMBER: 70400-06661-104

AA2188B  
SA

Figure 196. Washer, Spring Cylinder.

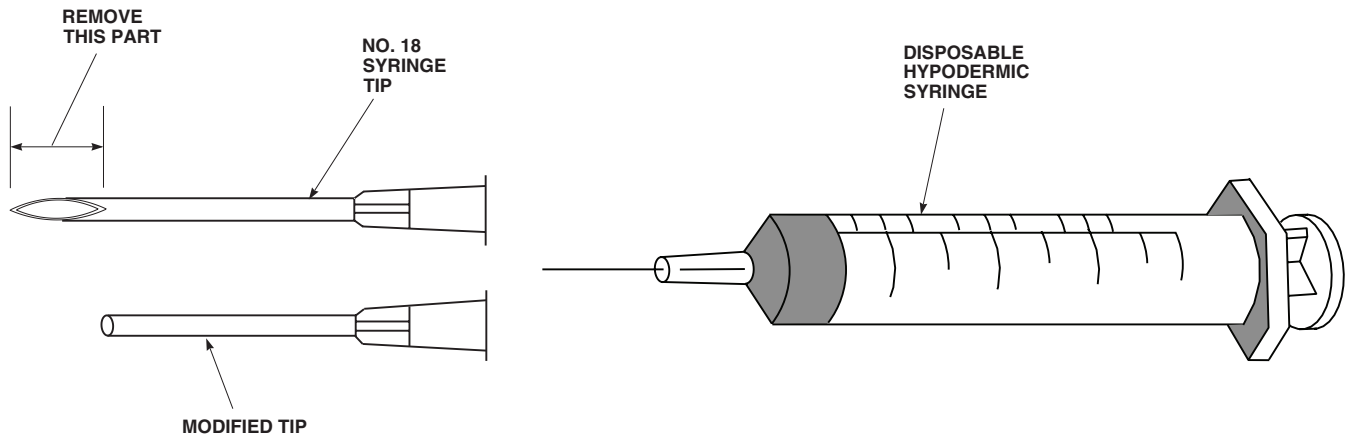
**FIELD MANUFACTURE ITEMS - Continued****NOTES**

1. DISPOSABLE HYPODERMIC SYRINGE WITH NO. 18 TIP, MIL-S-36157.
2. MODIFY TIP AS SHOWN.

AA2189  
SA

Figure 197. Hypodermic Syringe.


FIELD MANUFACTURE ITEMS - Continued

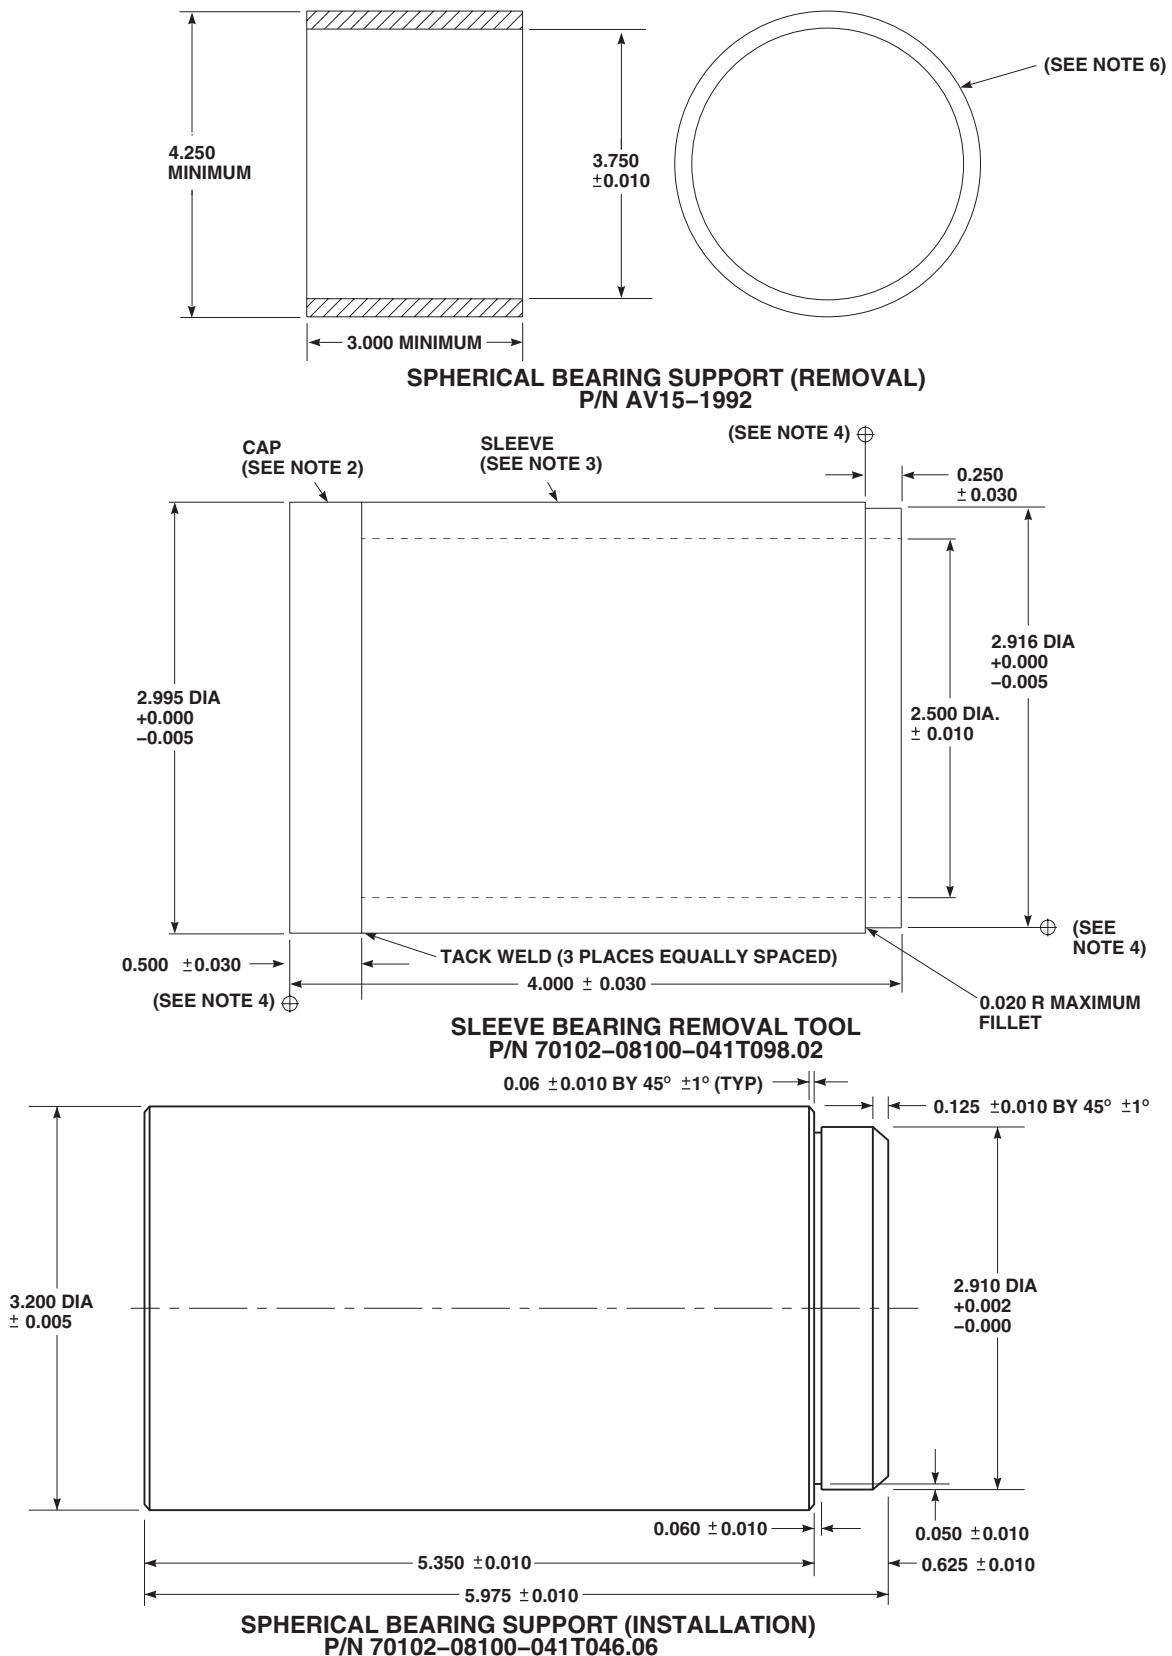

AA3310\_1A  
SA

Figure 198. Sleeve Bearing Removal/Installation Tools. (Sheet 1 of 2)

## FIELD MANUFACTURE ITEMS - Continued

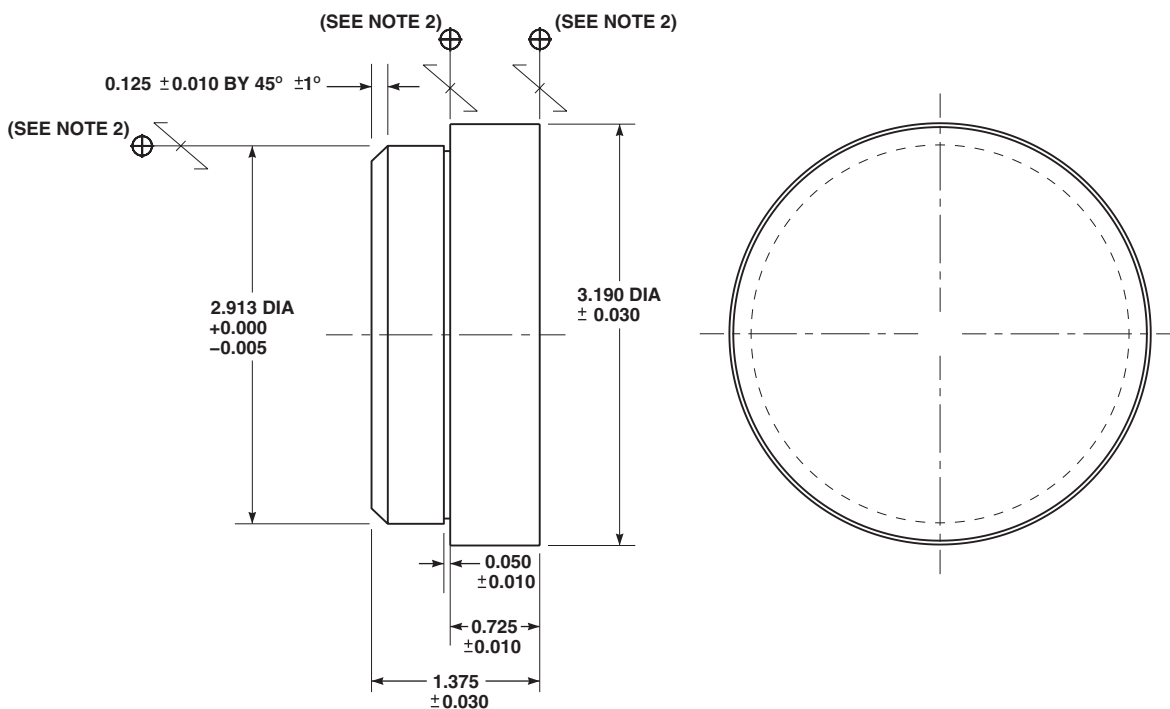

**SLEEVE BEARING INSTALLATION TOOL**  
P/N 70102-08100-041T046.06


**NOTES**

1. MAKE FROM 6061-T6 ALUMINUM OR EQUIVALENT.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. MINIMUM DIMENSIONS REPRESENT SPACE TO RECEIVE THE SB5203-202 BEARING DURING REMOVAL.
4. IDENTIFY PART PER MIL-STD-130.
5. REMOVE BURRS AND SHARP EDGES.
6. LENGTH AND OD DIMENSIONS CAN BE INCREASED AS DESIRED.
7. APPLY INSULATION TAPE, ITEM 408, APPENDIX D, OR EQUIVALENT, EVENLY TO EDGE CONTACTING ELASTOMERIC BEARING ENDPLATE TO PREVENT SCORING.
8. MAKE FROM 4340 STEEL OR EQUIVALENT
9. CAP, DIMENSIONS, 3.000 DIA BY 0.5.000.
10. SLEEVE, TUBE DIMENSIONS, 3.000 OD BY 2.500 ID BY 3.630.
11. SQUARE AND / OR PARALLEL WITHIN 0.003 INCH.

AA3310\_2A  
SA

Figure 198. Sleeve Bearing Removal/Installation Tools. (Sheet 2 of 2)

## FIELD MANUFACTURE ITEMS - Continued

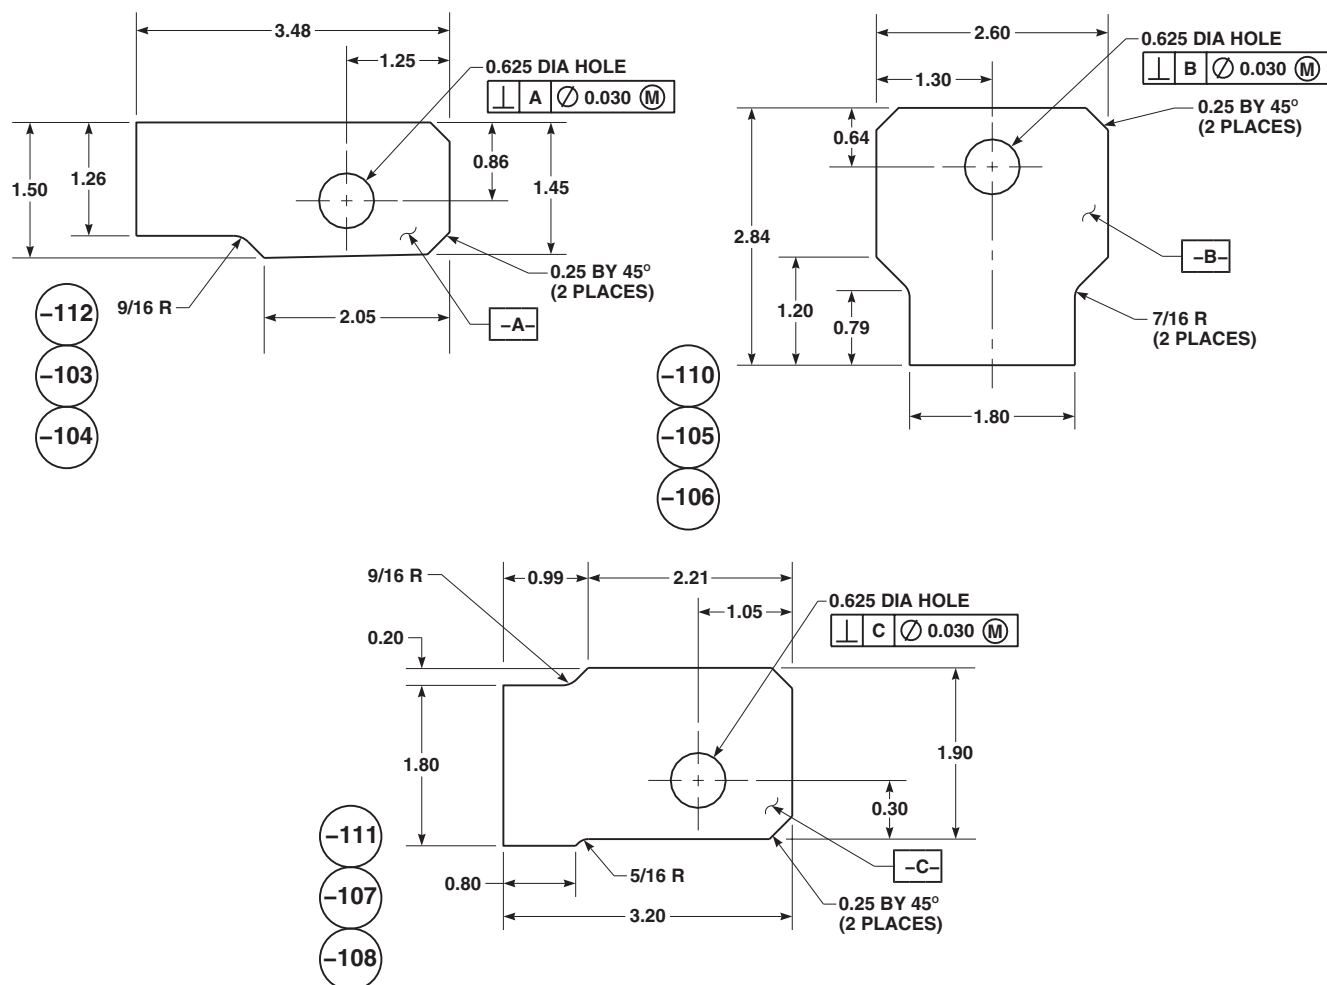

| SIKORSKY PART NUMBER | THICKNESS |
|----------------------|-----------|
| 70219-06000-103      | 0.032     |
| 70219-06000-104      | 0.060     |
| 70219-06000-105      | 0.032     |
| 70219-06000-106      | 0.060     |
| 70219-06000-107      | 0.032     |
| 70219-06000-108      | 0.060     |
| 70219-06000-110      | 0.020     |
| 70219-06000-111      | 0.020     |
| 70219-06000-112      | 0.020     |

## NOTES


1. MAKE 70219-06000-103 THROUGH 70219-06000-108 AND 70219-06000-110 THROUGH 70219-06000-112 FROM 7075-T6 ALUMINUM ALLOY, QQ-A-250-13, USING THICKNESS LISTED IN CHART.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. IDENTIFY PARTS PER MIL-STD-130.

PART NUMBER: 70219-06000-103 THROUGH 70219-06000-108 AND 70219-06000-110 THROUGH 70219-06000-112

AA2190B  
SA

Figure 199. Gear Box Shim.

FIELD MANUFACTURE ITEMS - Continued

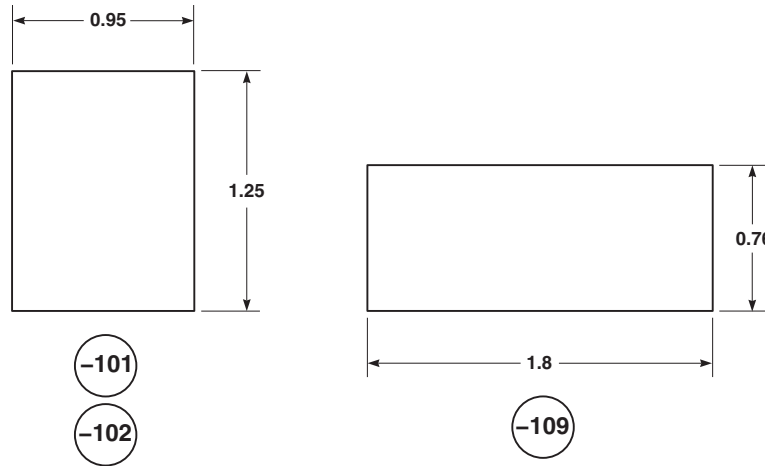

| SIKORSKY PART NUMBER | THICKNESS |
|----------------------|-----------|
| 70219-06000-101      | 0.2150    |
| 70219-06000-102      | 0.2880    |
| 70219-06000-109      | 0.0200    |

NOTES


1. MAKE 70219-06000-101 AND -102 FROM 7075-T651 PL, ALUMINUM ALLOY, QQ-A-250-13, USING THICKNESS LISTED IN CHART.
2. MAKE 70219-06000-109 FROM 7075-T6, ALUMINUM ALLOY, QQ-A-250-13, USING THICKNESS LISTED IN CHART.
3. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
4. IDENTIFY PARTS PER MIL-STD-130.

PART NUMBER: 70219-06000-101, -102, -109

AA2191A  
SA

Figure 200. Gear Box Spacer.

## FIELD MANUFACTURE ITEMS - Continued

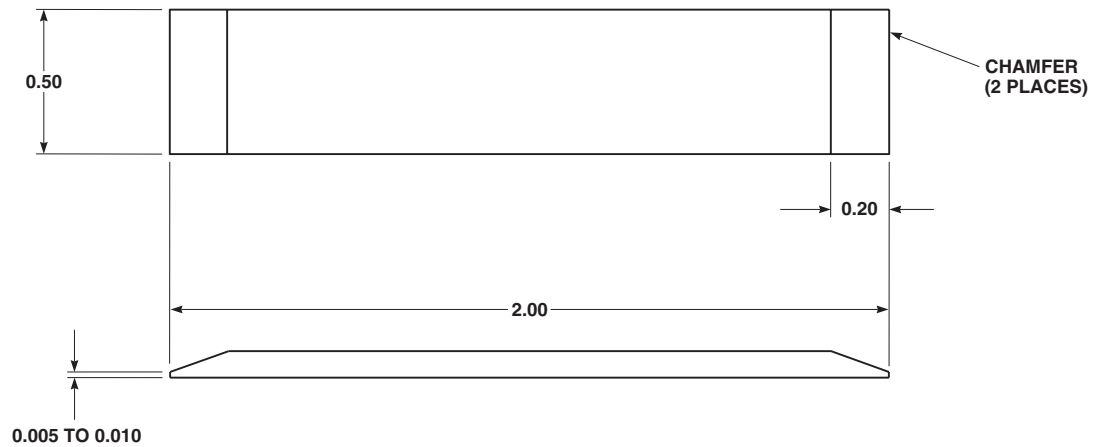


## NOTES

1. MAKE FROM STAINLESS STEEL, MIL-S-5059, 301 1/2 HARD, 0.020 INCH THICK, NSN 9515-00-23-7779.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. INSULATE DISSIMILAR METALS ON IMSTALLATION (TM 1-1500-204-23).
4. BREAK SHARP EDGES AND DEBURR ALL HOLES.
5. IDENTIFY PARTS PER MIL-STD-130.

AA7737A  
SA

Figure 201. Wear Strip.

## FIELD MANUFACTURE ITEMS - Continued

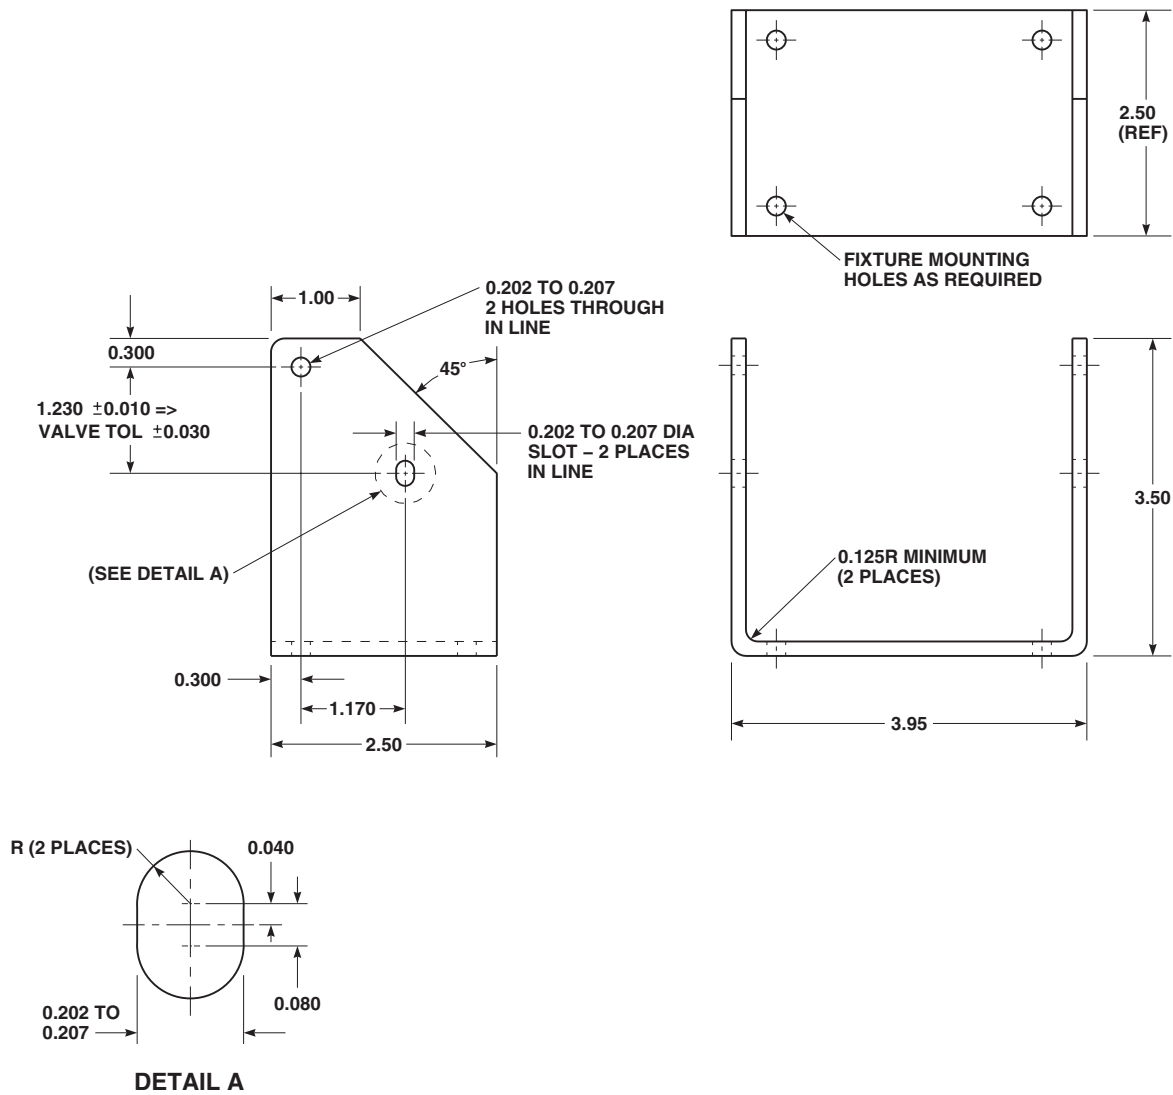

## NOTES


1. MAKE FROM 0.093 INCH STEEL PLATE.  
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.

AK1825A  
SA

Figure 202. Valve Test Fixture.



## FIELD MANUFACTURE ITEMS - Continued

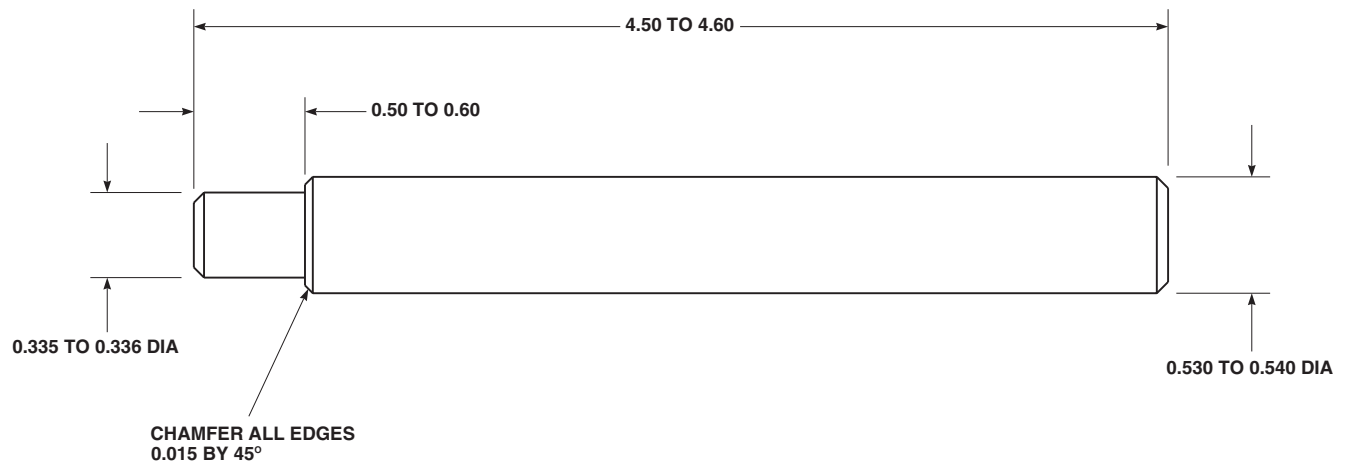


## NOTES

1. MAKE FROM MILD STEEL.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.

AK1823A  
SA

Figure 203. Tail Landing Gear Lockpin Bushing Drift.

## FIELD MANUFACTURE ITEMS - Continued

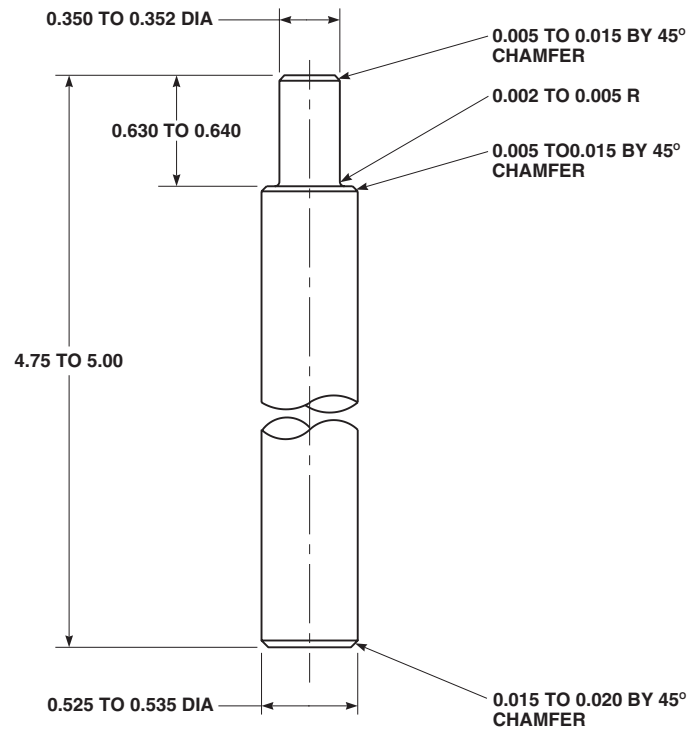


## NOTES

1. MAKE FROM MILD STEEL OR BRASS
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. STAMP OR VIBRO-ETCH TOOL APPLICATION ON BODY "DRIFT" BUSHING, TAIL LG LOCKPIN.

AK1824A  
SA

Figure 204. Tail Landing Gear Lockpin Bushing Drift.

## FIELD MANUFACTURE ITEMS - Continued

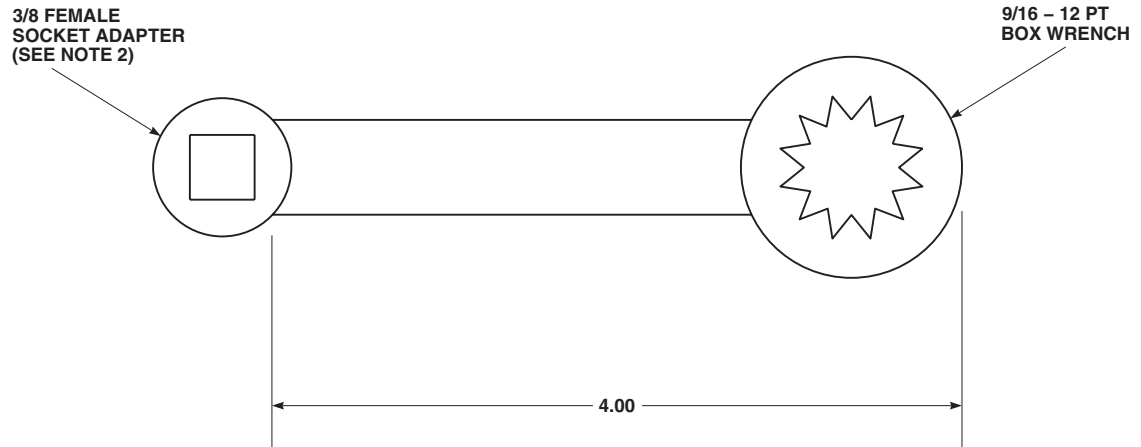

## NOTES

1. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
2. CUT 9/16 INCH BOX END WRENCH, 4 INCHES FROM BOX END.
3. WELD 3/8 INCH FEMALE SOCKET ADAPTER TO BOX END WRENCH WITH SQUARE OF ADAPTER PARALLEL TO WRENCH.
4. GRIND WELD TO SMOOTH CONTOUR.

AK1822A  
SA

Figure 205. Spindle Horn Nut Torque Adapter.

## FIELD MANUFACTURE ITEMS - Continued

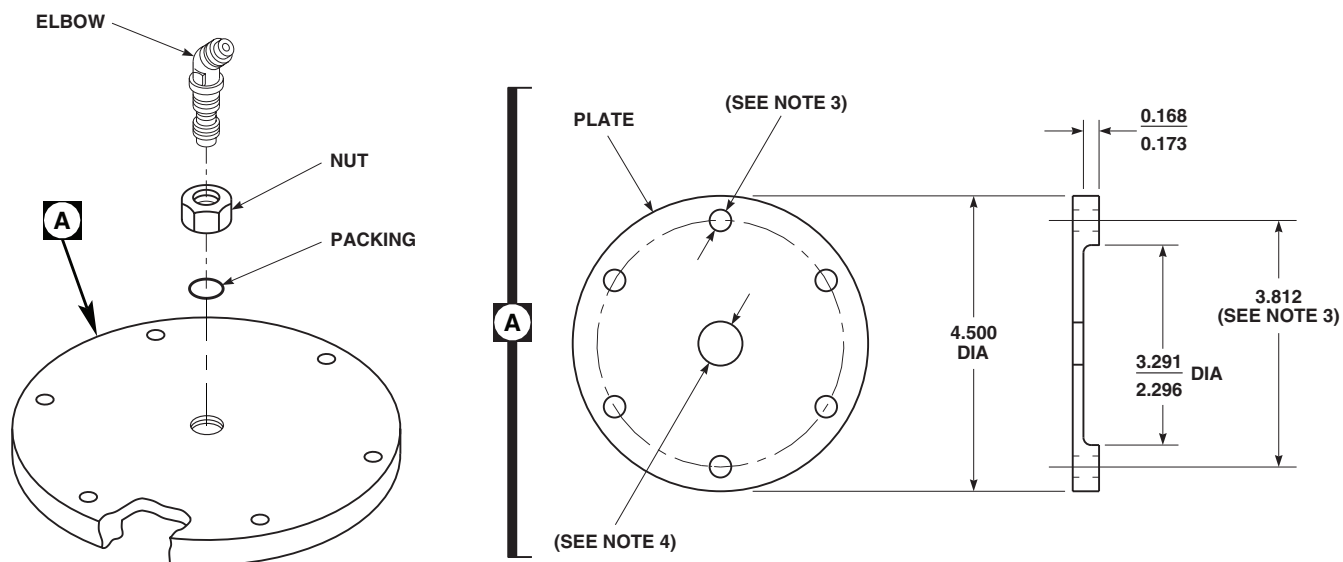


CHART A

| NOMENCLATURE | PART NUMBER | QUANTITY | NSN          |
|--------------|-------------|----------|--------------|
| ELBOW        | AN837-6D    | 1        |              |
| NUT          | AN6289-6D   | 1        |              |
| PACKING      | MS29512-6   | 1        |              |
| PLATE        |             | 1        | (SEE NOTE 2) |


## NOTES

1. MAKE FUEL CELL PRESSURE TEST PLATE PER FIGURE, USING MATERIAL LISTED IN CHART A, OR APPROVED EQUIVALENT.
2. MAKE FROM 0.292 TO 0.312 INCH THICK ALUMINUM STOCK.
3. SIX HOLES REQUIRED 0.328 TO 0.338 INCH DIAMETER EQUALLY SPACED 60+DG APART.
4. TREAD SIZE IS 0.5625-18. BOSS PER MS33649.06.
5. ALL DIMENSION ARE IN INCHES UNLESS NOTED.

AK1821A  
SA

Figure 206. Fuel Cell Pressure Test Plate.

---

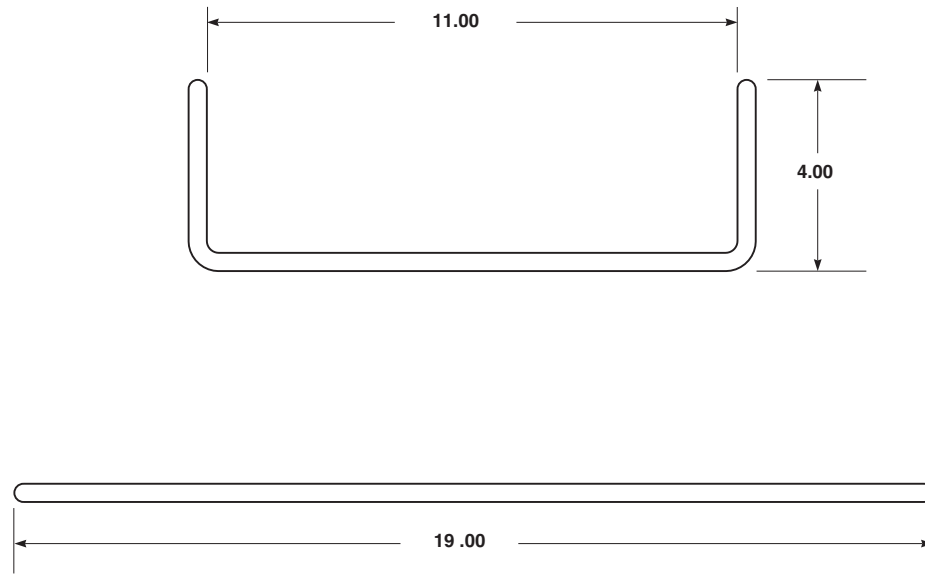
FIELD MANUFACTURE ITEMS - Continued**NOTES**

1. MAKE FROM 3/8 INCH ROD.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.

AK1826A  
SA

Figure 207. Tail Rotor Blade Boot Installation Tool.

---

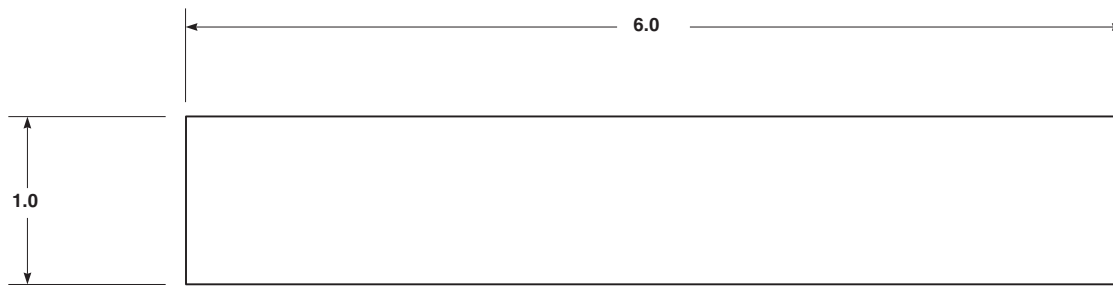
**FIELD MANUFACTURE ITEMS - Continued****NOTES**

1. MAKE FROM 302 STAINLESS STEEL 0.001 OR 0.002 INCH THICK SHIM STOCK.  
OR KIT 88S, FSCM 31633, NSN:5365-01-077-2092.
2. THIS IS CHECKING SHIM ONLY AND MUST BE REMOVED FROM HELICOPTER AFTER  
TAIL ROTOR INSTALLATION IS COMPLETED.
3. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.

**AK1827B**  
SA

Figure 208. Tail Rotor Installation Checking Shim.

## FIELD MANUFACTURE ITEMS - Continued

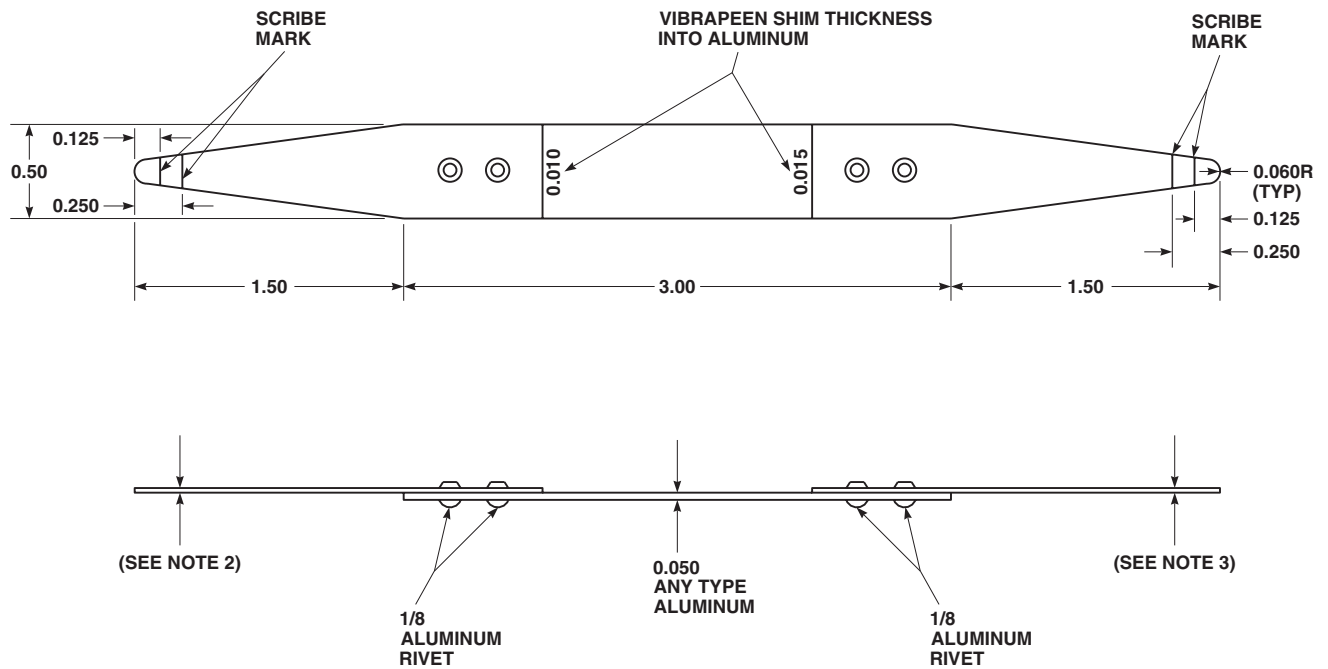


## NOTES

1. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
2. 0.010 PLASTIC SHIM STOCK, ARTUS BROWN, NSN 9330-01-209-9056.
3. 0.015 PLASTIC SHIM STOCK, ARTUS PINK, NSN 9330-01-208-1025.

AK1828A  
SA

Figure 209. Teflon Lined Spherical Bearing Plastic Feeler Gage.

## FIELD MANUFACTURE ITEMS - Continued

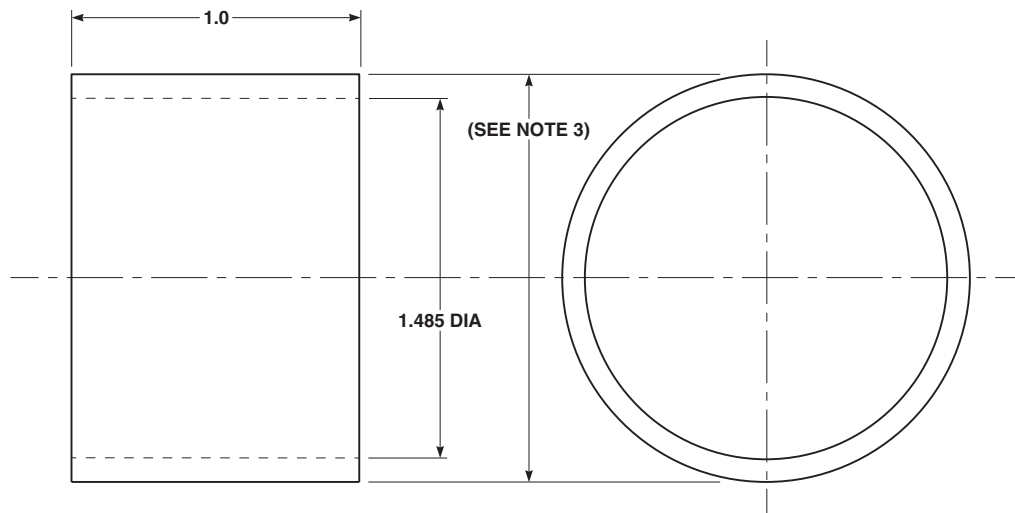

## NOTES


1. MAKE FROM NICKEL / ALUMINUM / BRONZE MATERIAL PER AMS-4590.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. OD TO BE 0.001 TO 0.0035 INCH ID OF BUSHING BORE IN TAIL LANDING GEAR FORK TO PROVIDE PRESS FIT.
4. IDENTIFY PART PER MIL-STD-130.

AK3067B  
SA

Figure 210. Tail Landing Gear Oversized Axle Bushing.



## FIELD MANUFACTURE ITEMS - Continued

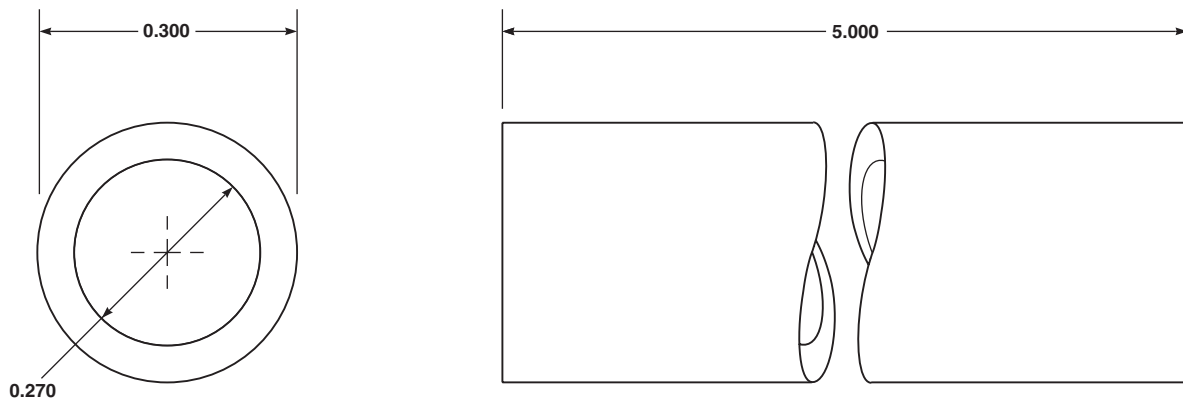


## NOTES

1. MAKE FROM STEEL TUBING, MIL-T-6736.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. IDENTIFY PART PER MIL-STD-130, 0.270 ID / 0.300 OD.

AA8550A  
SA

Figure 211. Rotary Input Bearing Removal Tube.

## FIELD MANUFACTURE ITEMS - Continued

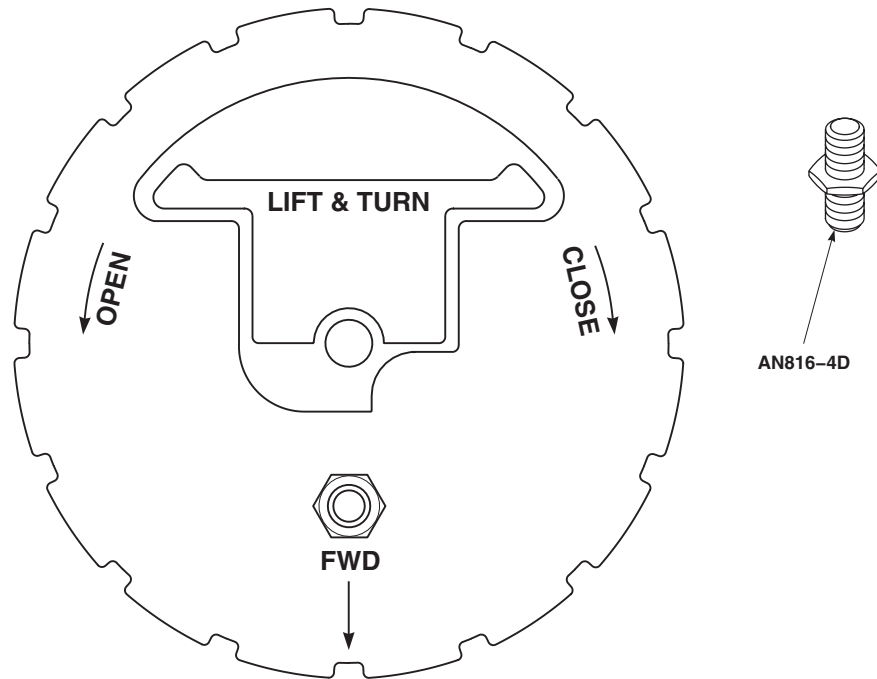

## NOTES

1. USE "R" DRILL BIT.
2. TAP WITH 1/8 INCH PIPE THREAD TAP.

AA8914  
SA

Figure 212. Fuel Cell Cap Pressure Test Adapter.

Technical drawing of a mechanical part, showing three views: front view, top view, and side view.

**Front View:**

- Overall width: 6.75
- Overall height: 1.875
- Central hole diameter: 0.921
- Section A-A is indicated.
- Section B-B is indicated.
- Section C-C is indicated.
- Feature dimensions: 0.06 X 60°, 0.50, 2.50, 3.37, 0.126, FULL KNURL.

**Top View:**

- Overall diameter: 2.0
- Central hole diameter: 0.921
- Section A-A is indicated.

**Side View:**

- Overall diameter: 1.5
- Central hole diameter: 0.921
- Thread specification: 1 1/2-6 UNC THD
- Section C-C is indicated.

**Section A-A:** Shows a cross-section of the part with a diameter of 2.0 and a central hole of 0.921.

**Section B-B:** Shows a cross-section of the part with a diameter of 1.875 and a central hole of 0.921.

**Section C-C:** Shows a cross-section of the part with a diameter of 1.5 and a central hole of 0.921.

**Other Dimensions:**

- 0.921 (hole diameter)
- 1.875 (width)
- 0.50 (width)
- 2.50 (width)
- 3.37 (width)
- 0.06 X 60° (fillet)
- 0.126 (width)
- FULL KNURL (knurling)
- 1.312 X 0.187 (thread)


**Reference:** REF ITEM-4 FOR DIMENSIONS

**Section Markers:** -A-, -B-, -C-

**Part Number:** AA8915\_1

Figure 213. Bifilar Bushings Replacement Tools. (Sheet 1 of 5)


FIELD MANUFACTURE ITEMS - Continued

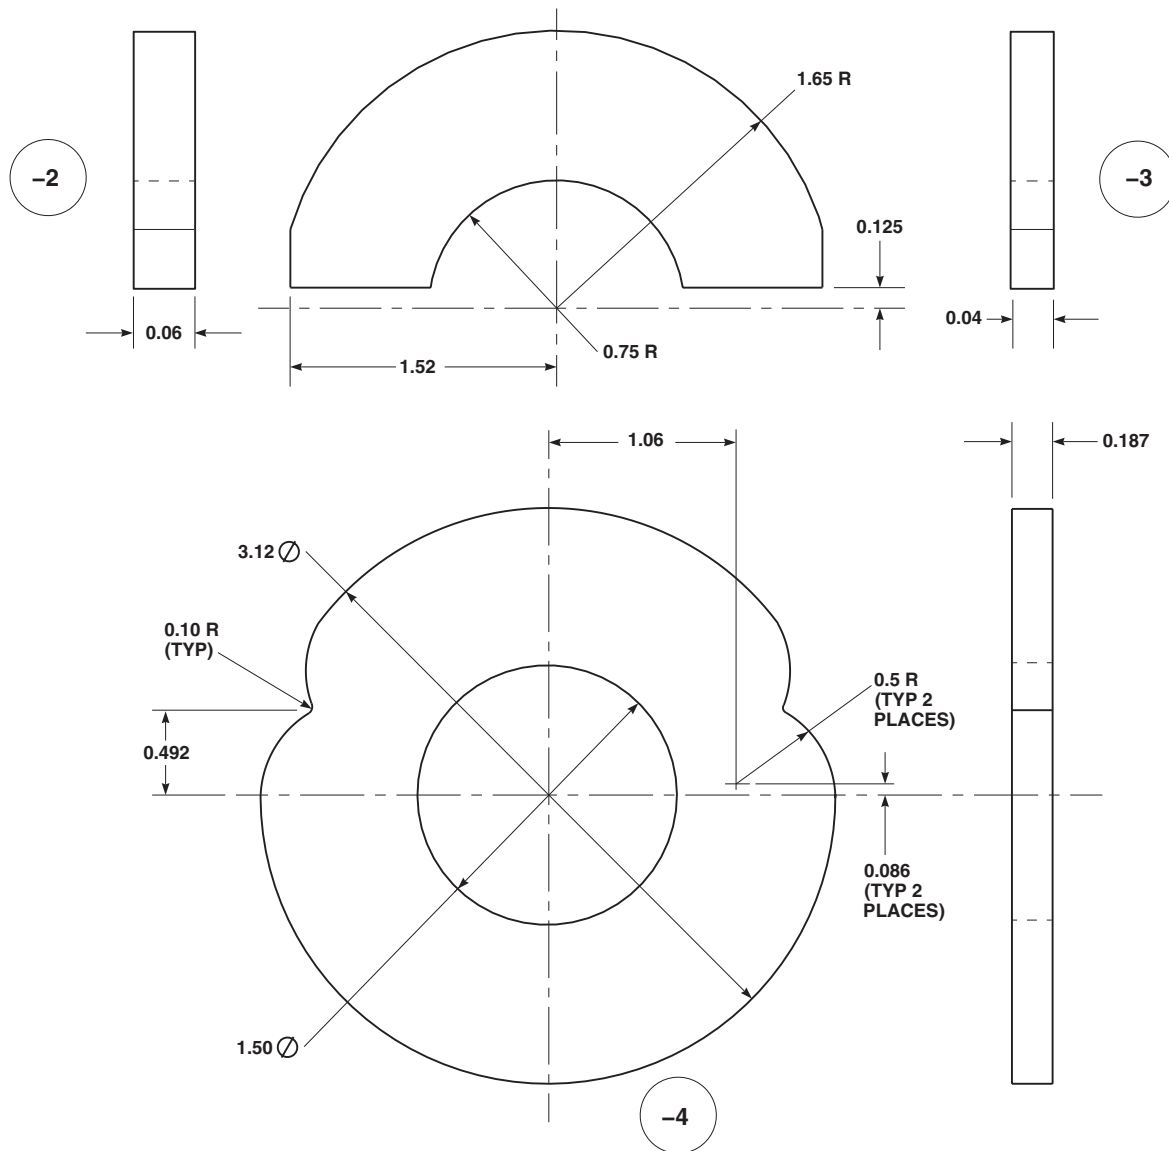

AA8915\_2A  
SA

Figure 213. Bifilar Bushings Replacement Tools. (Sheet 2 of 5)


FIELD MANUFACTURE ITEMS - Continued

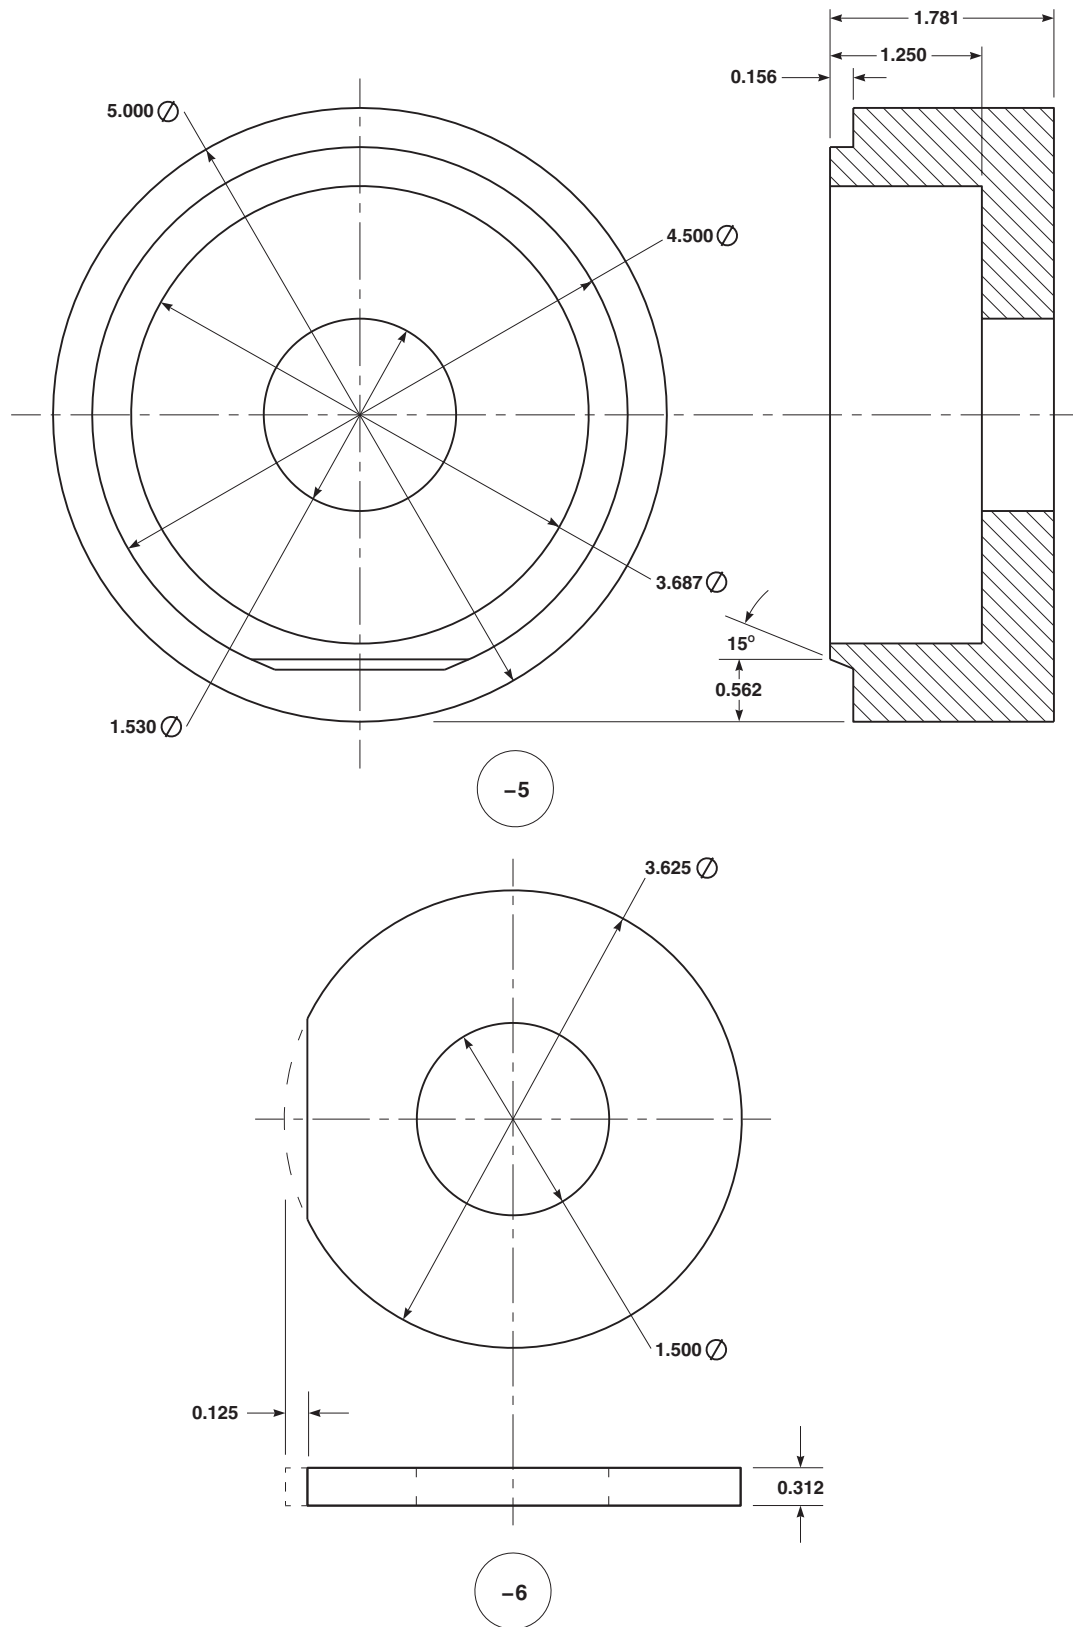

AA8915\_3  
SA

Figure 213. Bifilar Bushings Replacement Tools. (Sheet 3 of 5)

FIELD MANUFACTURE ITEMS - Continued

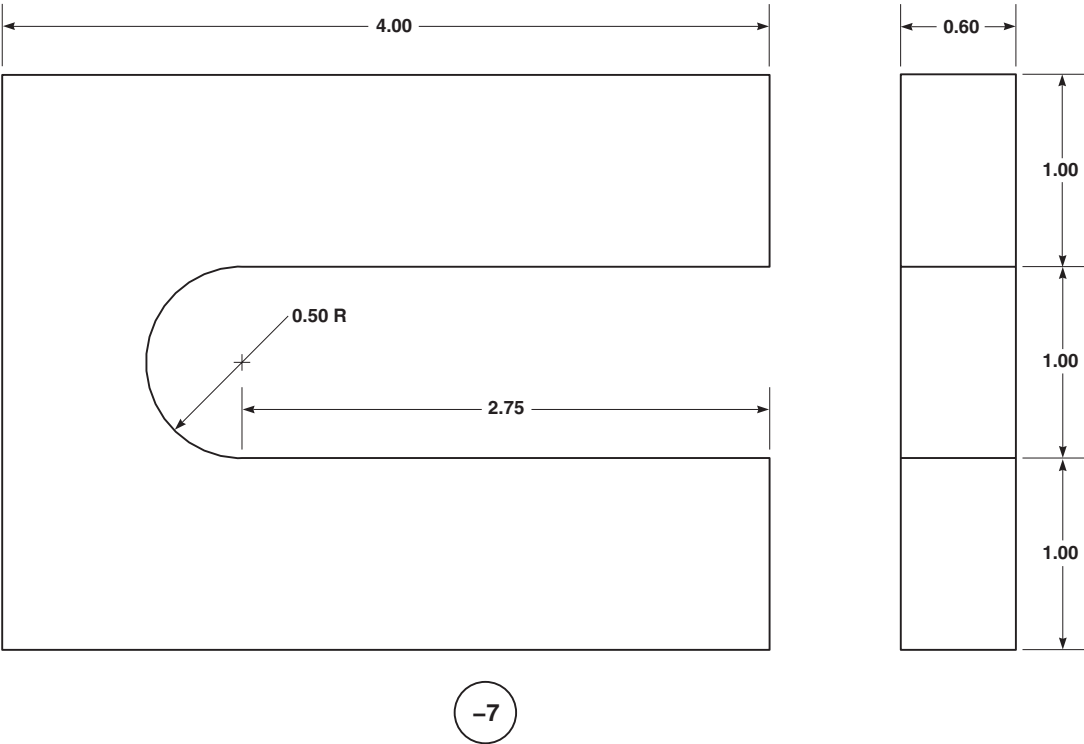

| NOMENCLATURE                                          | PART NUMBER |
|-------------------------------------------------------|-------------|
| BIFILAR BUSHINGS<br>REMOVAL AND INSTALLATION<br>TOOLS | 2763-1      |
|                                                       | 2763-2      |
|                                                       | 2763-3      |
|                                                       | 2763-4      |
|                                                       | 2763-5      |
|                                                       | 2763-6      |
|                                                       | 2763-7      |
|                                                       | 2803-1      |
|                                                       | 2803-2      |
|                                                       |             |


NOTES

- 1. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
- 2. PARTS 2763-1 THRU -4 AND -7 MAKE FROM 4130 STEEL.
- 3. PARTS 2763-5 AND -6 MAKE FROM 2024-T3 ALUMINUM.

AA8915\_4A  
SA

Figure 213. Bifilar Bushings Replacement Tools. (Sheet 4 of 5)



FIELD MANUFACTURE ITEMS - Continued

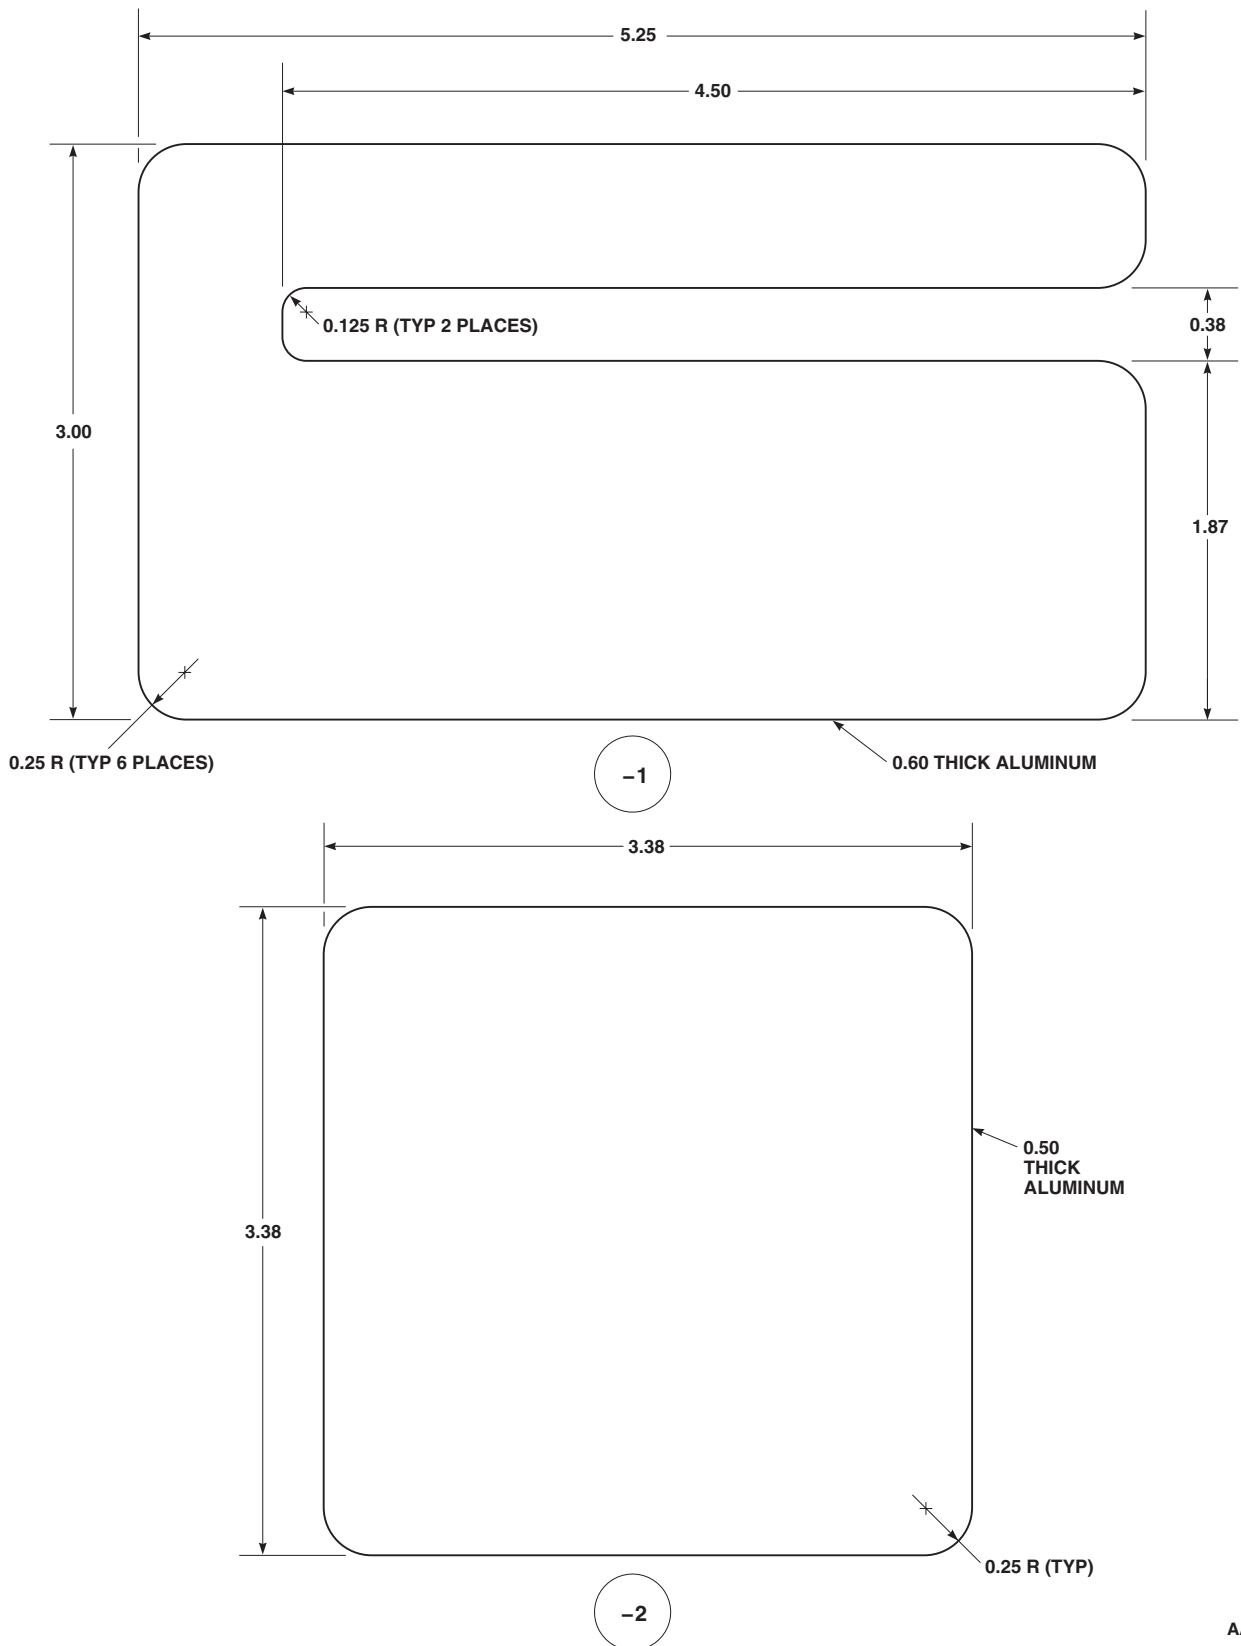

AA8915\_5  
SA

Figure 213. Bifilar Bushings Replacement Tools. (Sheet 5 of 5)

FIELD MANUFACTURE ITEMS - Continued

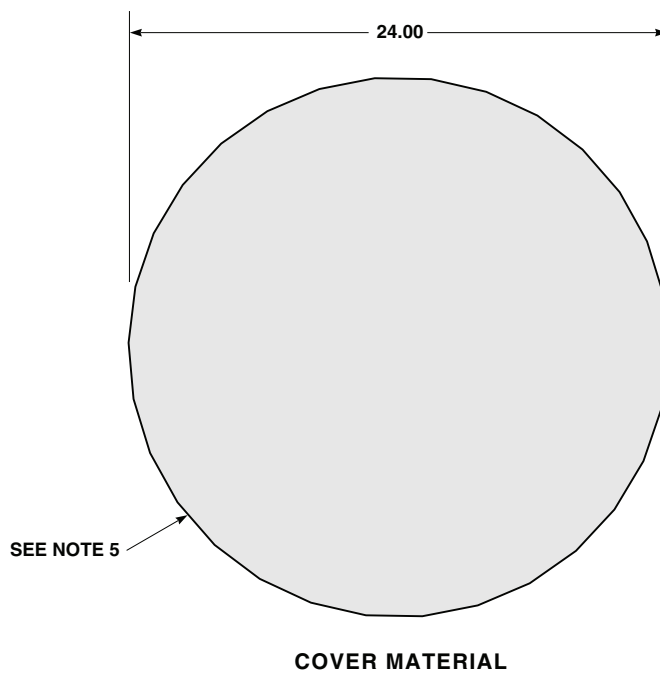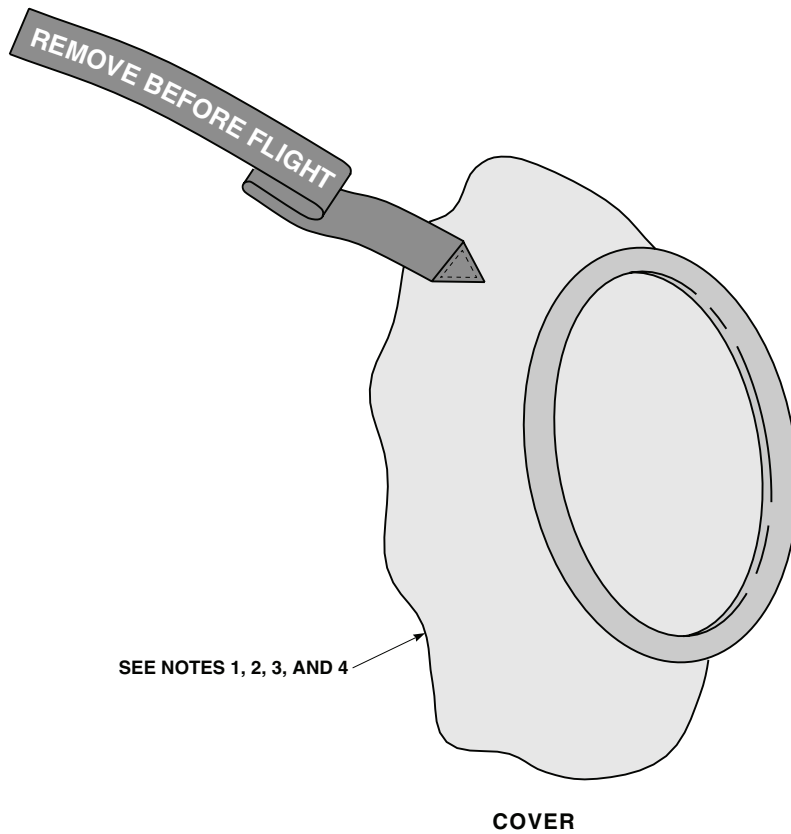


AA8916\_1  
SA

Figure 214. Chaff/Flare Dispenser Cover. (Sheet 1 of 4)




FIELD MANUFACTURE ITEMS - Continued

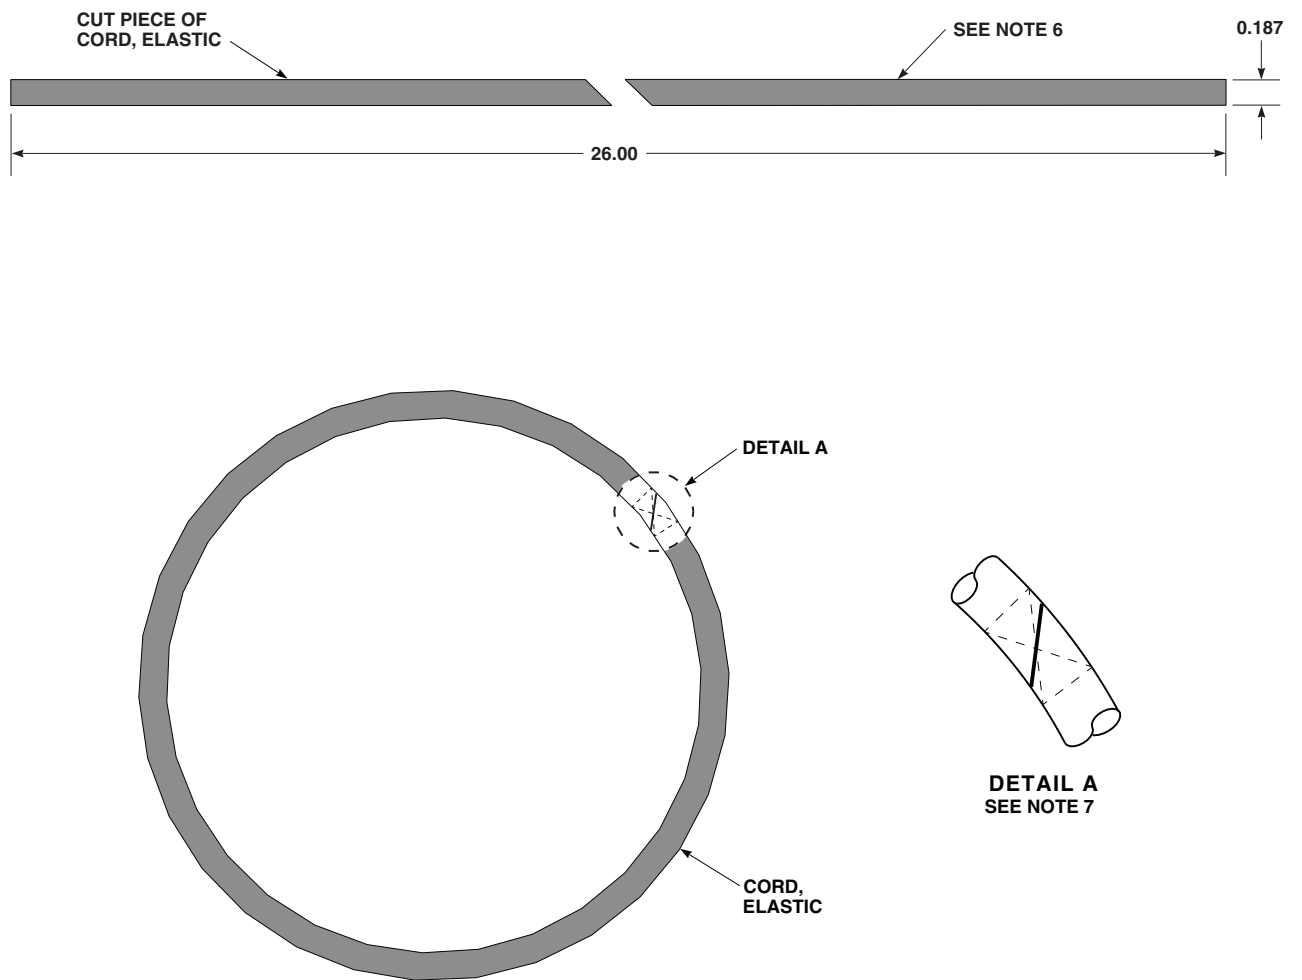


AA8916\_2  
SA

Figure 214. Chaff/Flare Dispenser Cover. (Sheet 2 of 4)


FIELD MANUFACTURE ITEMS - Continued

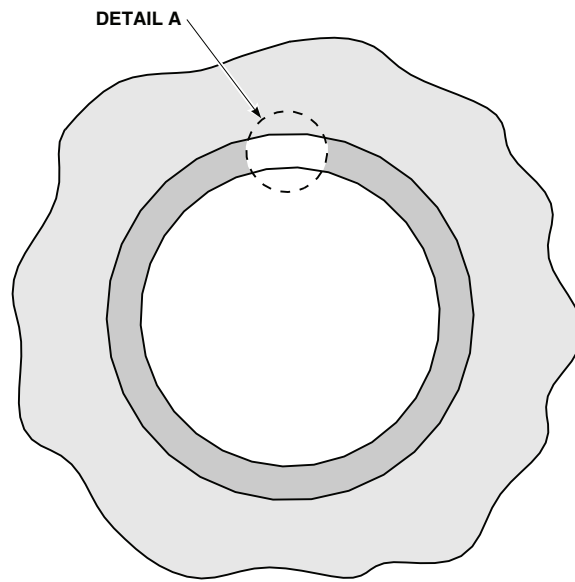

COVER

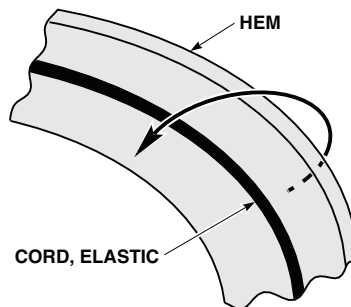

DETAIL A  
SEE NOTE 8

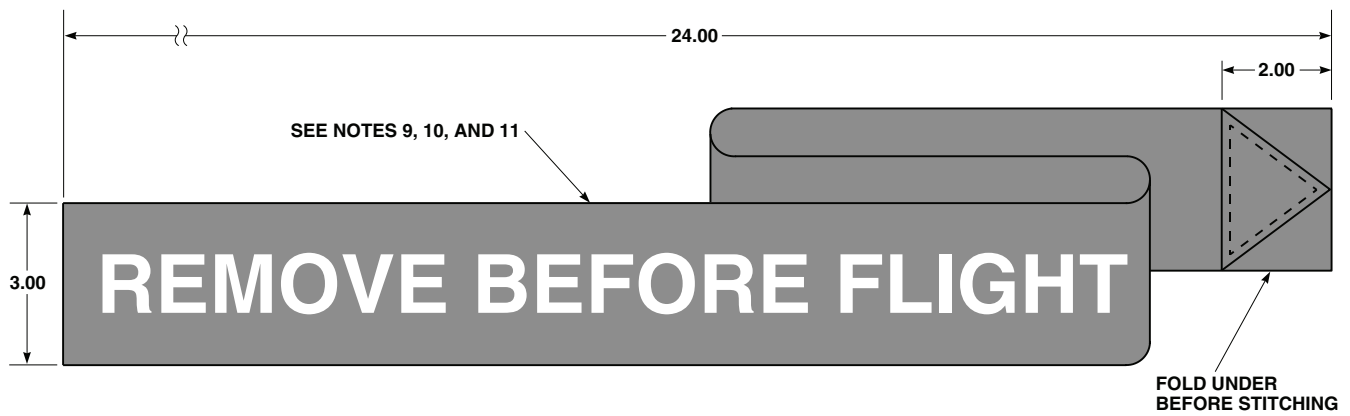

AA8916\_3  
SA

Figure 214. Chaff/Flare Dispenser Cover. (Sheet 3 of 4)

## FIELD MANUFACTURE ITEMS - Continued

| SIKORSKY<br>PART NUMBER | DESCRIPTION                                     | MATERIAL                                                                           | NSN                                                      |
|-------------------------|-------------------------------------------------|------------------------------------------------------------------------------------|----------------------------------------------------------|
| 70700-20511-119         | ELASTIC CORD<br>PROTECTIVE COVER<br>NYLON CLOTH | MIL-C-5651, TYPE 3<br>MIL-C-20696, TYPE 1, CLASS 2<br>MIL-C-20696, TYPE 1, CLASS 2 | 8305-00-267-3116<br>8415-00-111-7028<br>8305-01-234-5049 |

## NOTES

1. MAKE PROTECTIVE COVER FROM NSN 8415-01-111-7028.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED,  $\pm 0.010$ .
3. IDENTIFY PARTS PER MIL-STD-130.
4. ALL SEAMS AND STITCHING TO BE IN ACCORDANCE WITH FED-STD-751 AND TM 1-1500-204-23.
5. CUT PROTECTIVE COVER MATERIAL TO 24 INCH DIA.
6. CUT ELASTIC CORD TO 26 INCH LENGTH.
7. SEW ENDS OF CORD TOGETHER (OVERLAP 1 INCH).
8. FOLD HEM 0.385 INCH THEN FOLD OVER ELASTIC CORD AND SEW (APPROX 1 INCH FOLD).
9. MAKE FROM RED VINYL COATED NYLON CLOTH.
10. STENCIL LETTERS "REMOVE BEFORE FLIGHT", 1.50 INCH HIGH, WHITE COLOR, IN CENTER OF STRIP.
11. SEW FOLDER END TO COVER 3 INCH FROM ELASTIC BAND.


PART NUMBER: BH102-9311434

## CHAFF / FLARE DISPENSER COVER

AA8916\_4A  
SA


Figure 214. Chaff/Flare Dispenser Cover. (Sheet 4 of 4)

## FIELD MANUFACTURE ITEMS - Continued

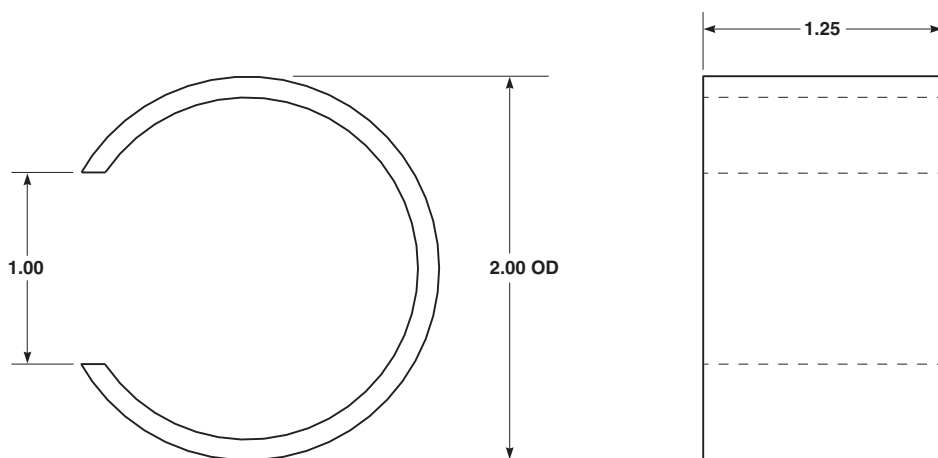

## NOTES

1. MAKE FROM PVC TUBING, SCHEDULE 40, PROCURE LOCALLY.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. DEBURR ALL SHARP EDGES.

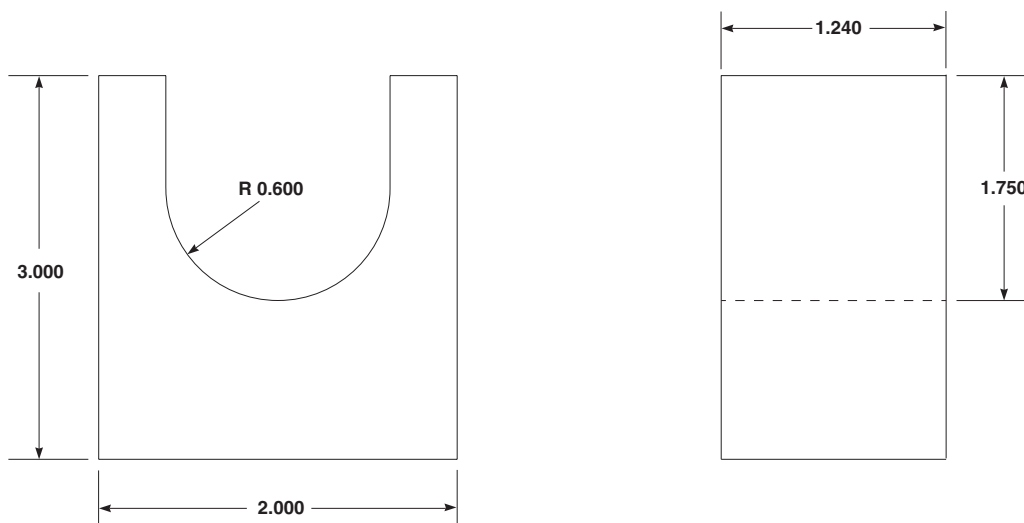

## ALTERNATE


## NOTES

1. MAKE FROM PHENOLIC PLASTIC, HARDWOOD, OR OTHER SUITABLE MATERIAL.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. DEBURR ALL SHARP EDGES.

AA8917C  
SA

Figure 215. Damper Indicator Handle Retainer.


FIELD MANUFACTURE ITEMS - Continued

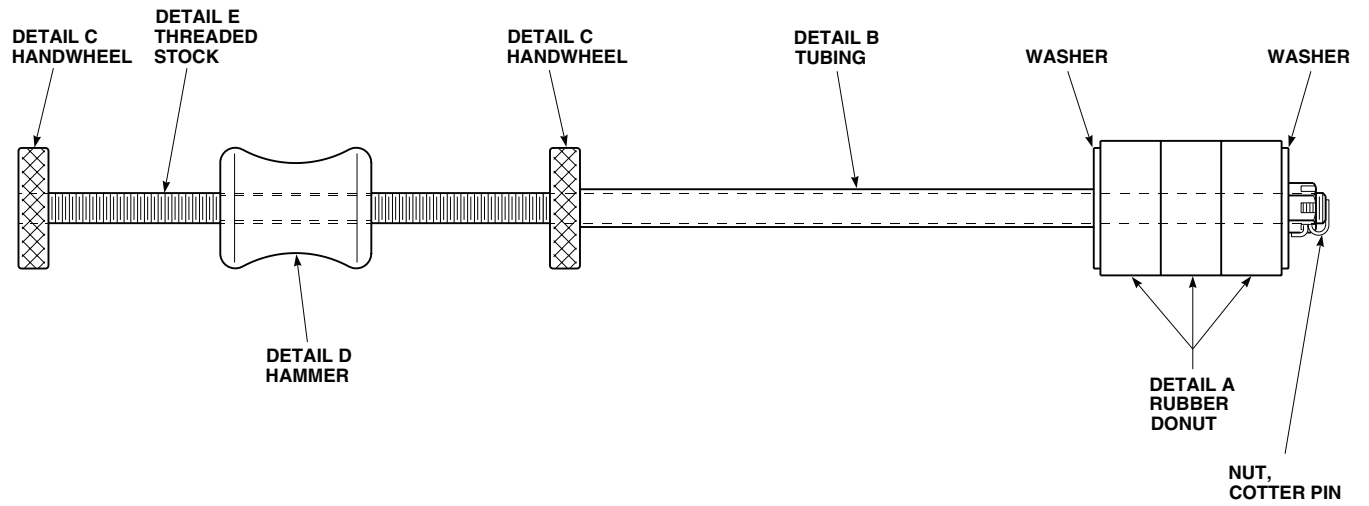

AA8918\_1  
SA

Figure 216. Output Drive Shaft Puller (A). (Sheet 1 of 3)

FIELD MANUFACTURE ITEMS - Continued

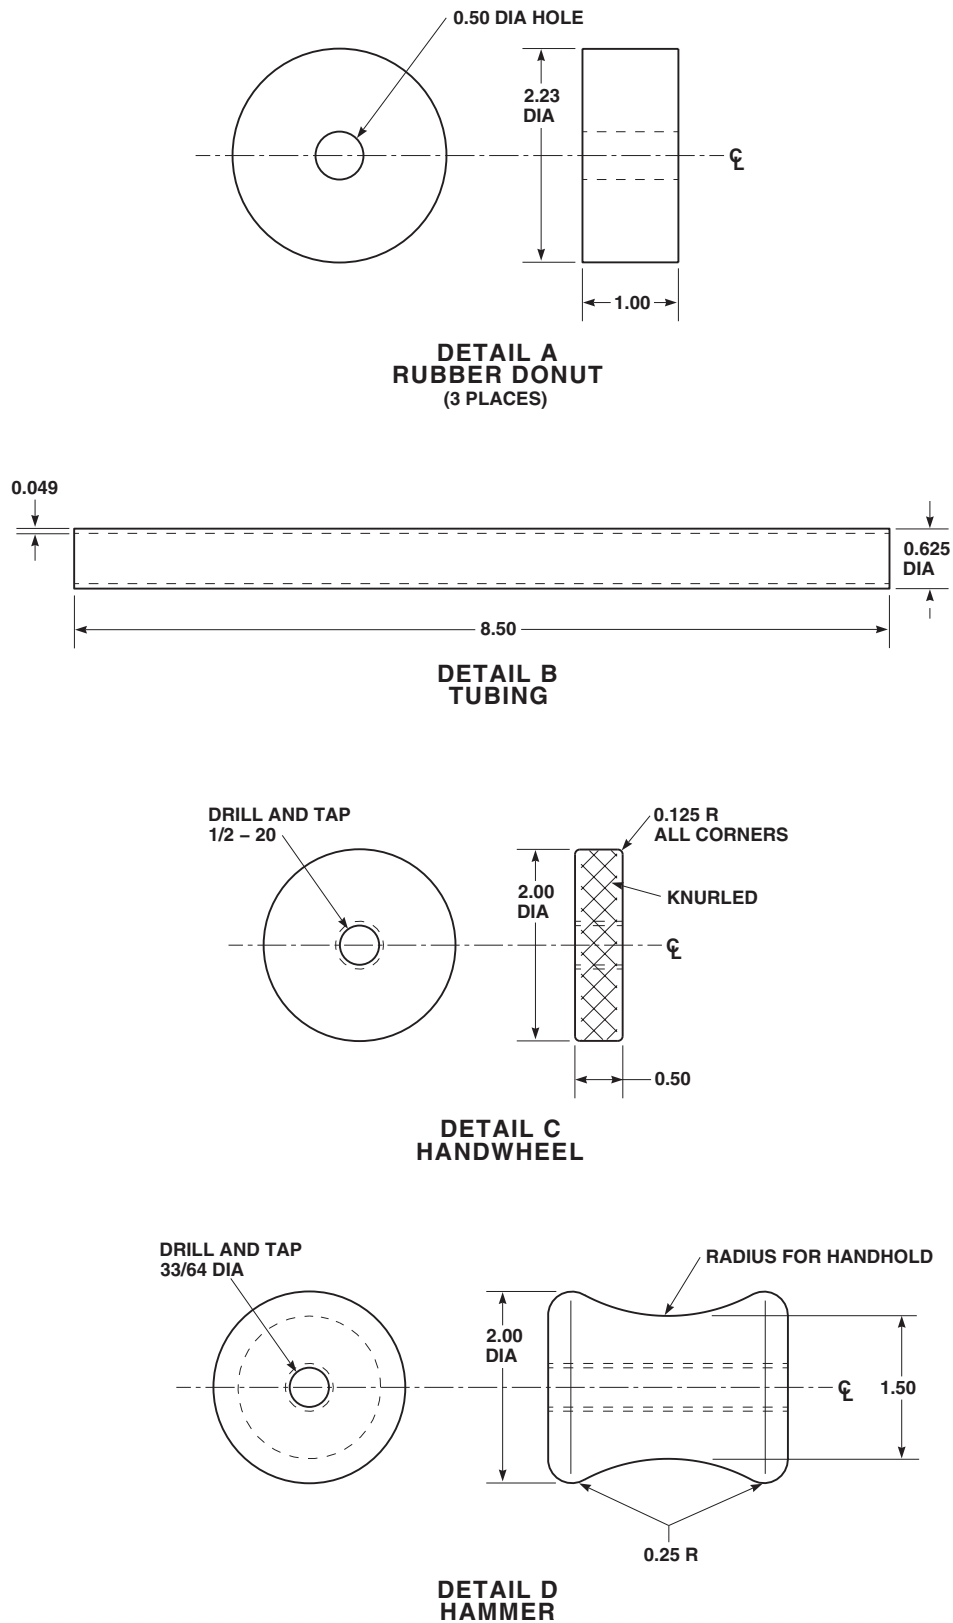

AA8918\_2A  
SA

Figure 216. Output Drive Shaft Puller (A). (Sheet 2 of 3)

## FIELD MANUFACTURE ITEMS - Continued

## PARTS LIST

| NOMENCLATURE                | NSN              | QUANTITY    | UI |
|-----------------------------|------------------|-------------|----|
| RUBBER 1 INCH THICK         | 9320-00-261-5807 | 3           | SH |
| STAINLESS STEEL TUBING      | 4710-00-278-3302 | 1           | FT |
| ROUND STOCK STEEL 1045      | 9510-00-229-4835 | 3           | FT |
| THREADED ROD 1/2 BY 20 + PI | 5300-01-205-3580 | 1           | EA |
| NUT 1/2 BY 20               | 5310-00-732-0560 | 1           | PK |
| COTTER PIN                  | -                | AS REQUIRED | HD |
| WASHERS                     | 5310-00-167-0769 | 2           | HD |
| RTV ITEM 31 APPD            | 8040-00-522-3424 | AS REQUIRED | AR |


## NOTES

1. SEAL END WITH NUT AND COTTER PIN WITH RTV.
2. WELD ROUND STOCK TO THREADED ROD END.
3. DRILL END OF THREADED ROD TO ACCEPT COTTER PIN.
4. DRILL AND TAP HOLES PER TM 1-1500-204-23.
5. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
6. IDENTIFY PARTS PER MIL-STD-130.

AB3757\_3  
SA

Figure 216. Output Drive Shaft Puller (A). (Sheet 3 of 3)

## FIELD MANUFACTURE ITEMS - Continued

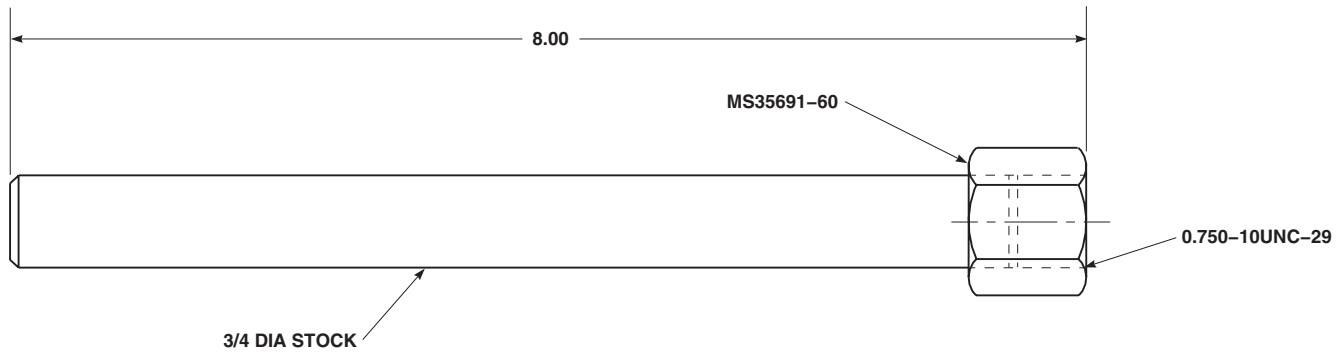

## NOTES


1. MAKE TOOL FROM BRASS.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.

AA8919A  
SA

Figure 217. Switch Adjustment Tool.



## FIELD MANUFACTURE ITEMS - Continued

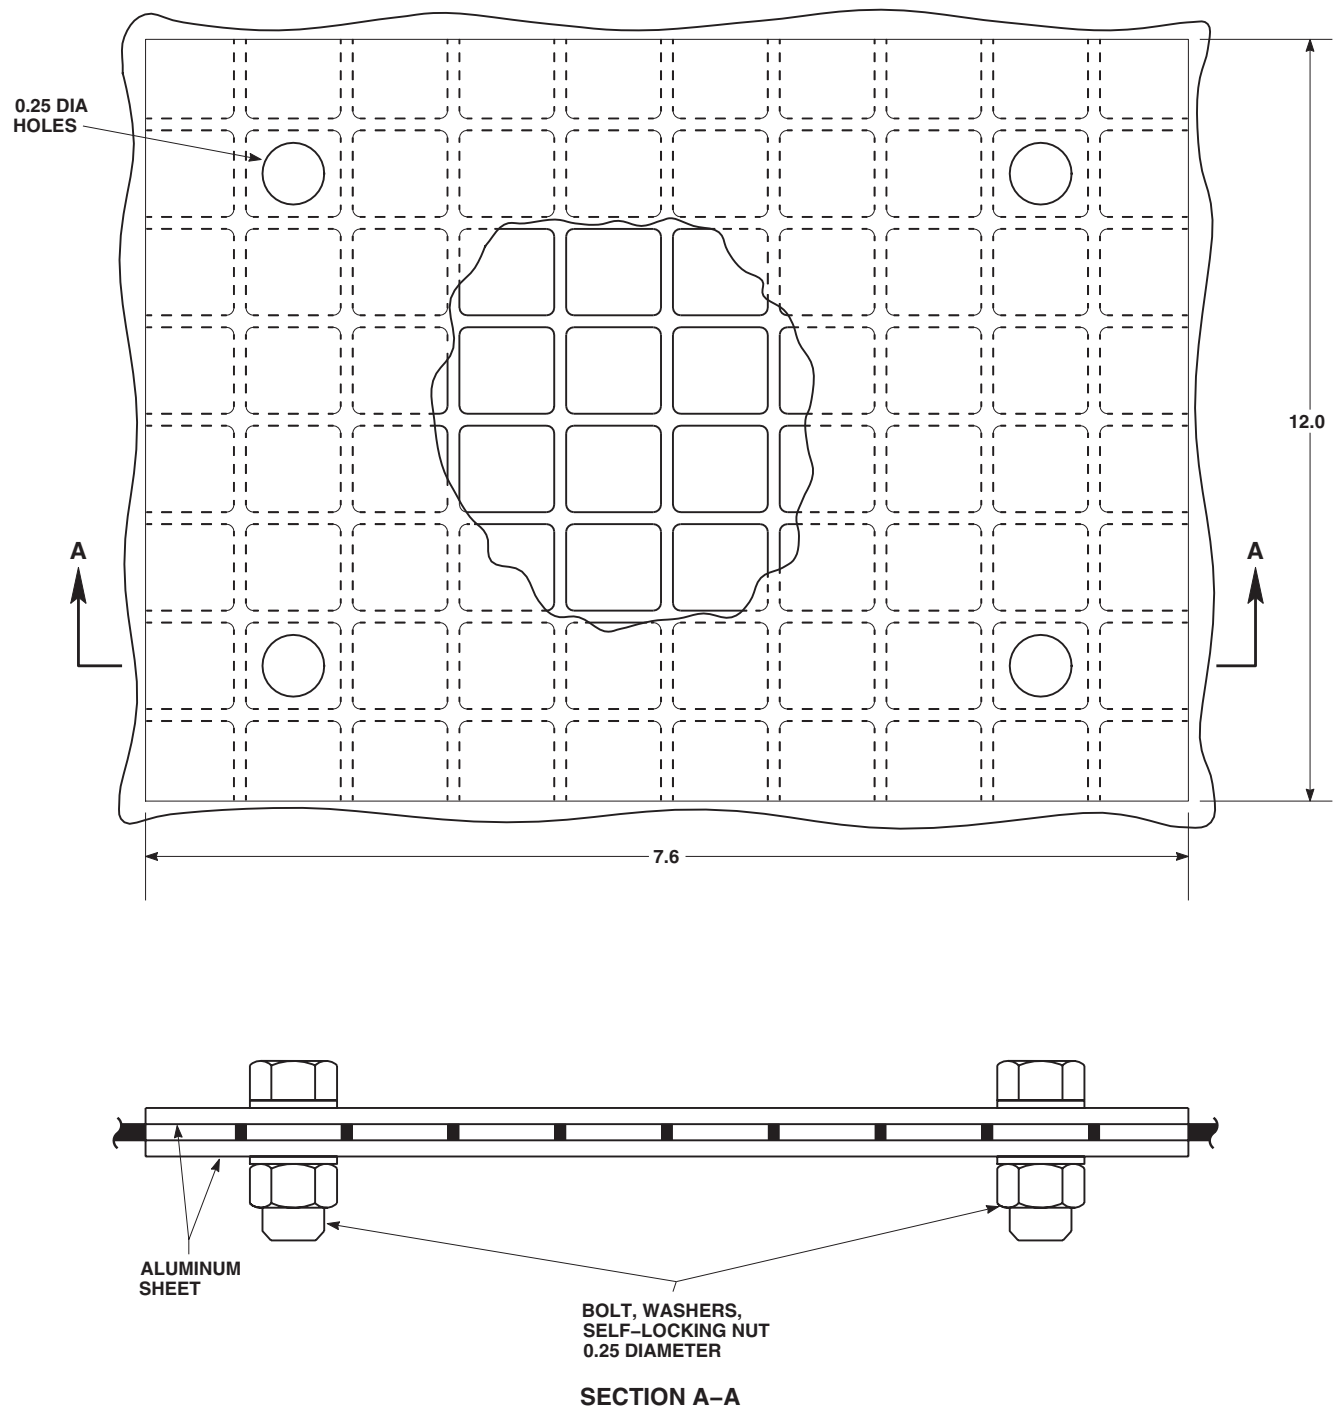


## NOTES

1. MAKE FROM 0.030 ALUMINUM SHEET.
2. CUT FOUR 0.25 DIA HOLES AS REQUIRED.
3. ANODIZE PER MIL-A-8625.
4. PRIME PER MIL-PRF-23377 AND PAINT PER SS8555.
5. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.

AA9250B  
SA

Figure 218. A.F.C.S. Screen Cover.

FIELD MANUFACTURE ITEMS - Continued

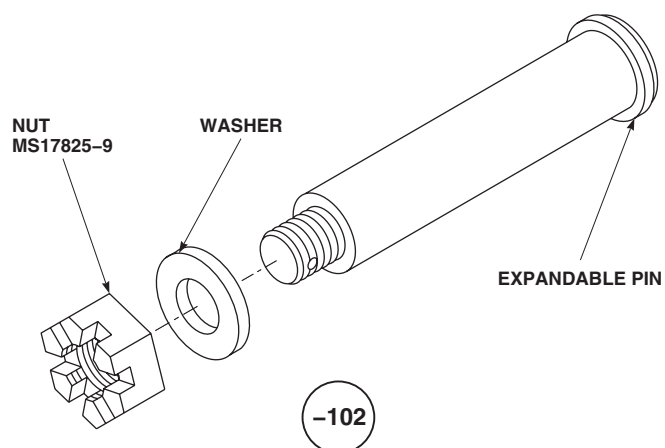

| NOMENCLATURE        | SIKORSKY<br>PART NUMBER |
|---------------------|-------------------------|
| SPACER REMOVAL TOOL | 70104-08015-102         |


NOTES

1. MAKE PIN FROM NSN 5315-01-096-9169
2. MAKE NUT FROM NSN 5310-00-181-6798.
3. PAINT TOOL RED, TAG "NOT FOR FLIGHT".

AA9408A  
SA

Figure 219. Spacer Removal Tool.

FIELD MANUFACTURE ITEMS - Continued

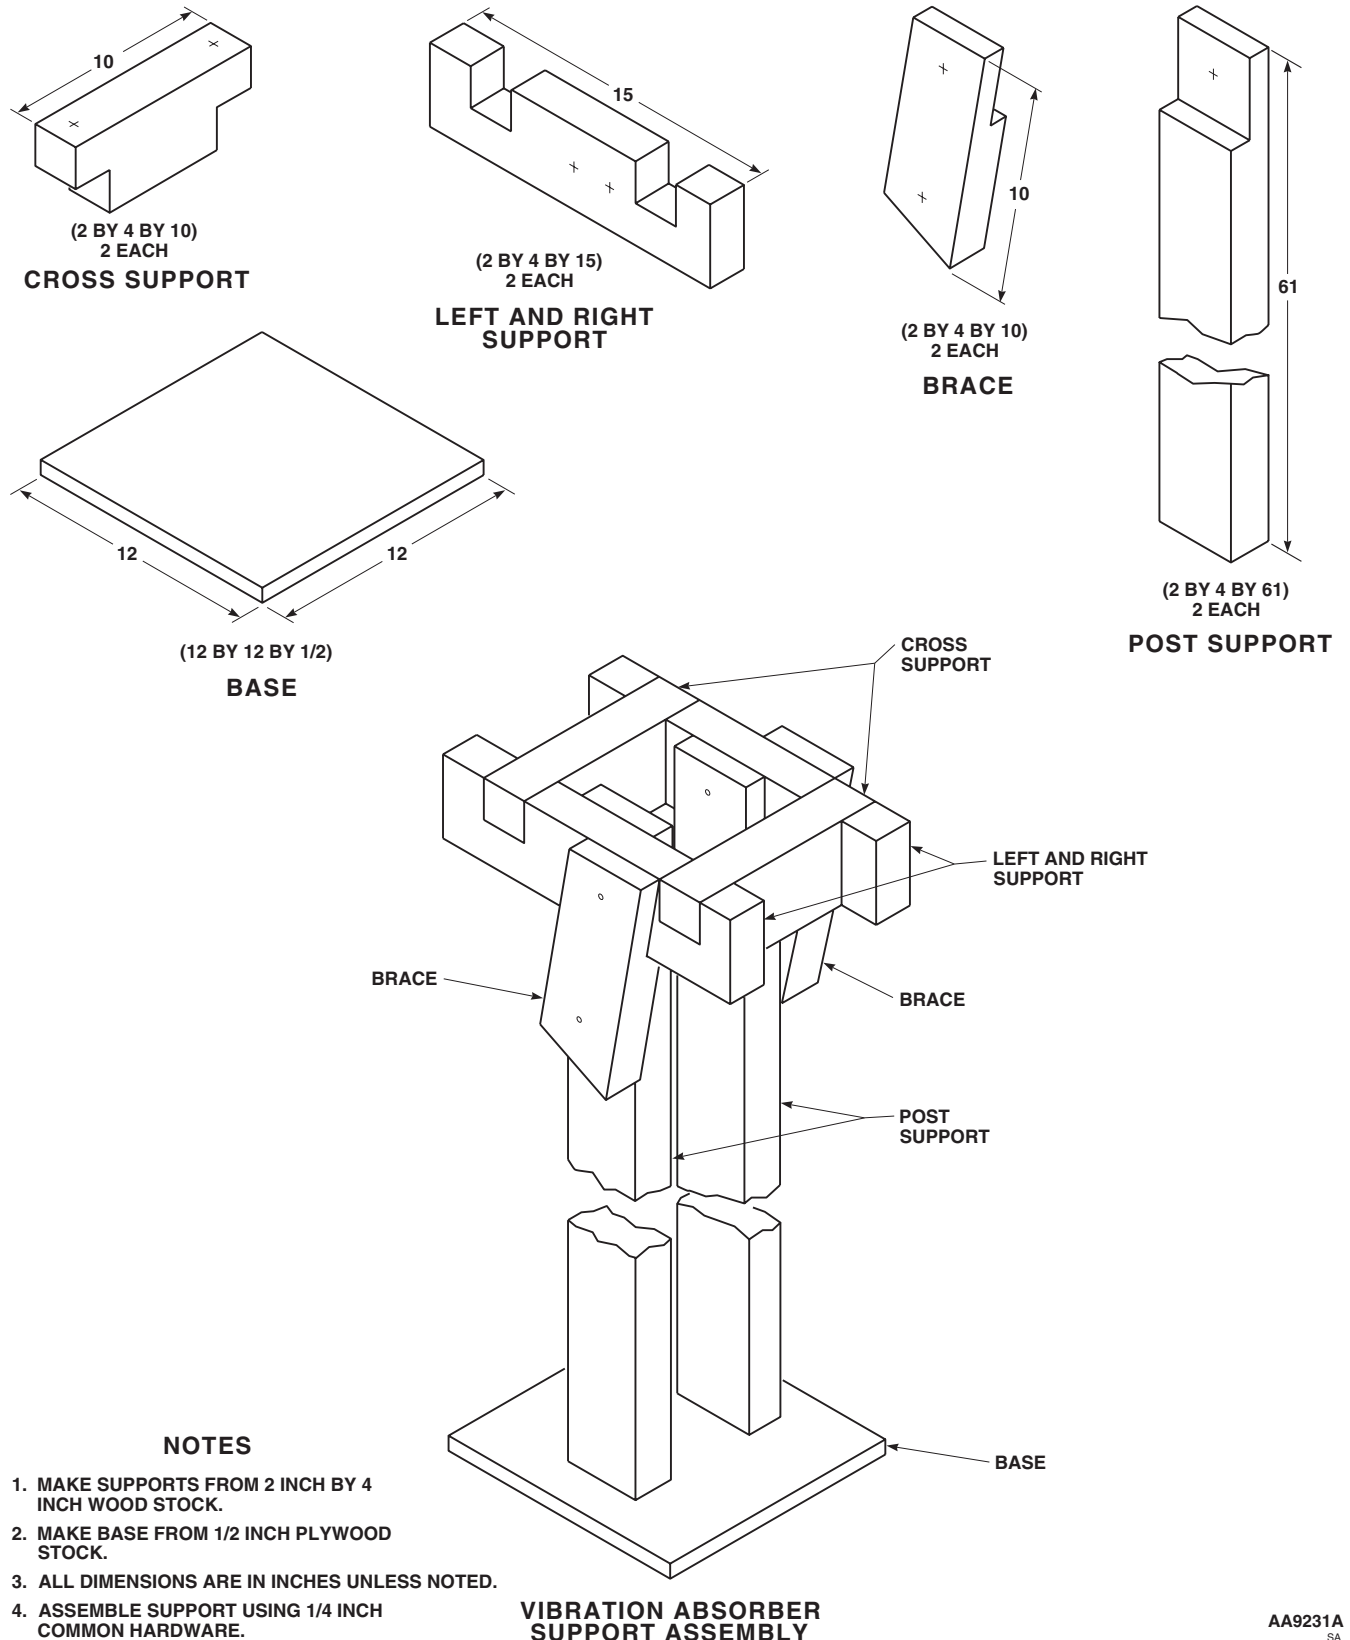

AA9231A  
SA

Figure 220. Vibration Absorber Support Assembly.

## FIELD MANUFACTURE ITEMS - Continued

## NOTES

1. MAKE FROM 304 STAINLESS STEEL TUBING.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. IDENTIFY PART PER MIL-STD-130.

PART NUMBER: 1560-EG-159

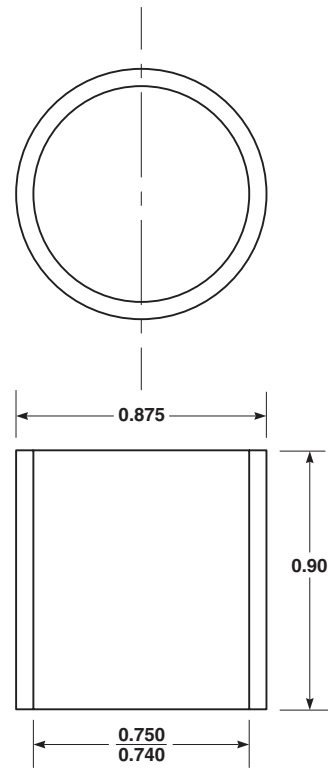
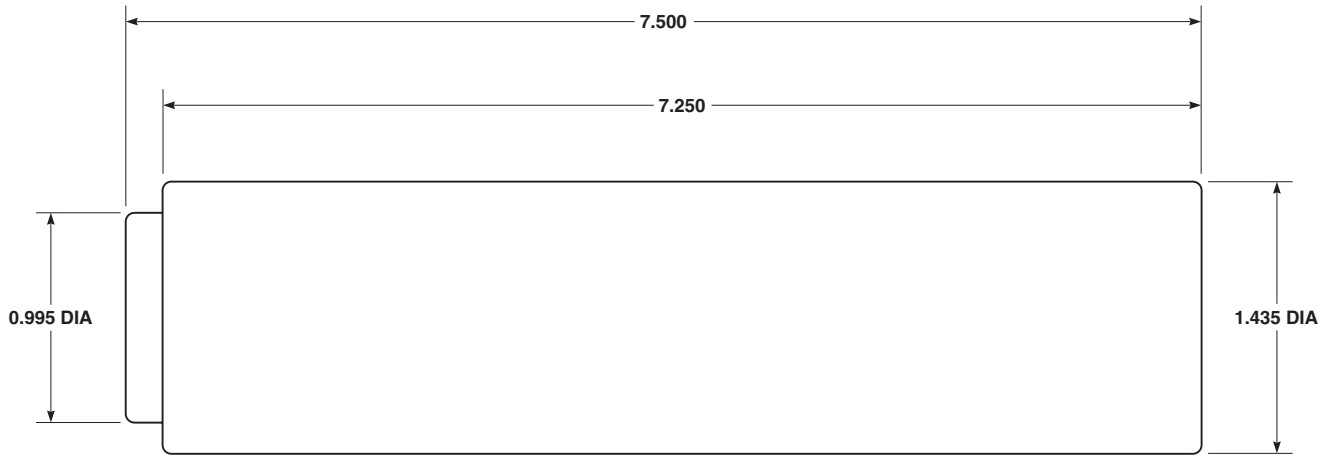
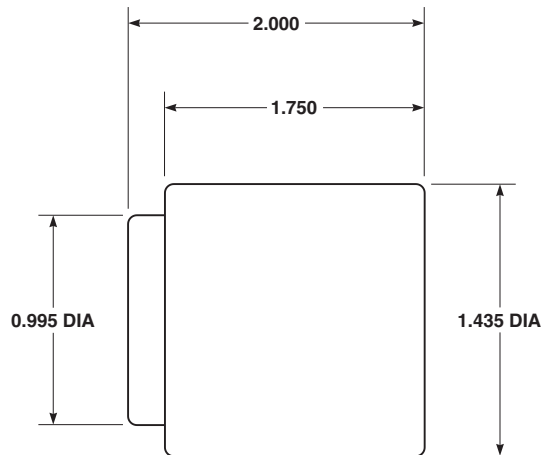
AA9448A  
SA

Figure 221. Tail Landing Gear Lockpin Oversize Bushing.

## FIELD MANUFACTURE ITEMS - Continued

INSTALLATION TOOL  
DETAIL AREMOVAL TOOL  
DETAIL B


## NOTES

1. MAKE BUSHING INSTALLATION TOOL PER DIMENSIONS IN DETAIL A, USING ALUMINUM ALLOY BAR.
2. IMPRESSION STAMP PART NUMBER 70106-08100-T1A.
3. MAKE BUSHING REMOVAL TOOL PER DIMENSIONS IN DETAIL B, USING ALUMINUM ALLOY BAR.
4. IMPRESSION STAMP PART NUMBER 70106-08100-T1B.
5. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.


AA9533A  
SA

Figure 222. Main Rotor Damper Sleeve Bearing Installation/Removal Tool.

FIELD MANUFACTURE ITEMS - Continued

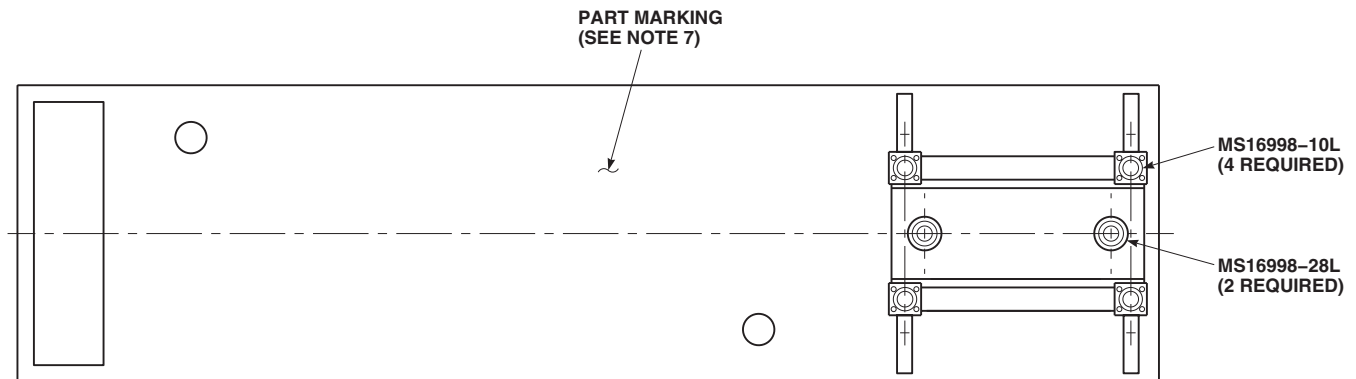

HOLDING FIXTURE ASSEMBLY  
70700-77315-041

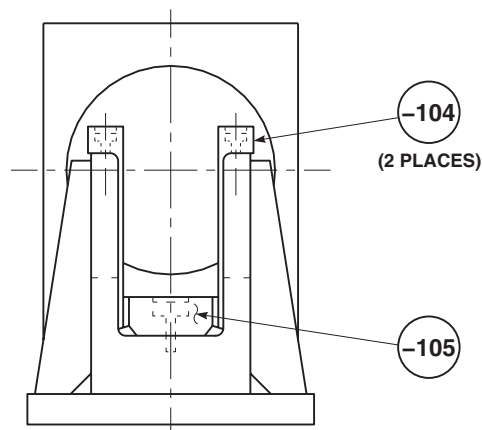

VIEW A-A

AA9534\_1A  
SA

Figure 223. Main Rotor Damper Holding Fixture. (Sheet 1 of 4)

FIELD MANUFACTURE ITEMS - Continued

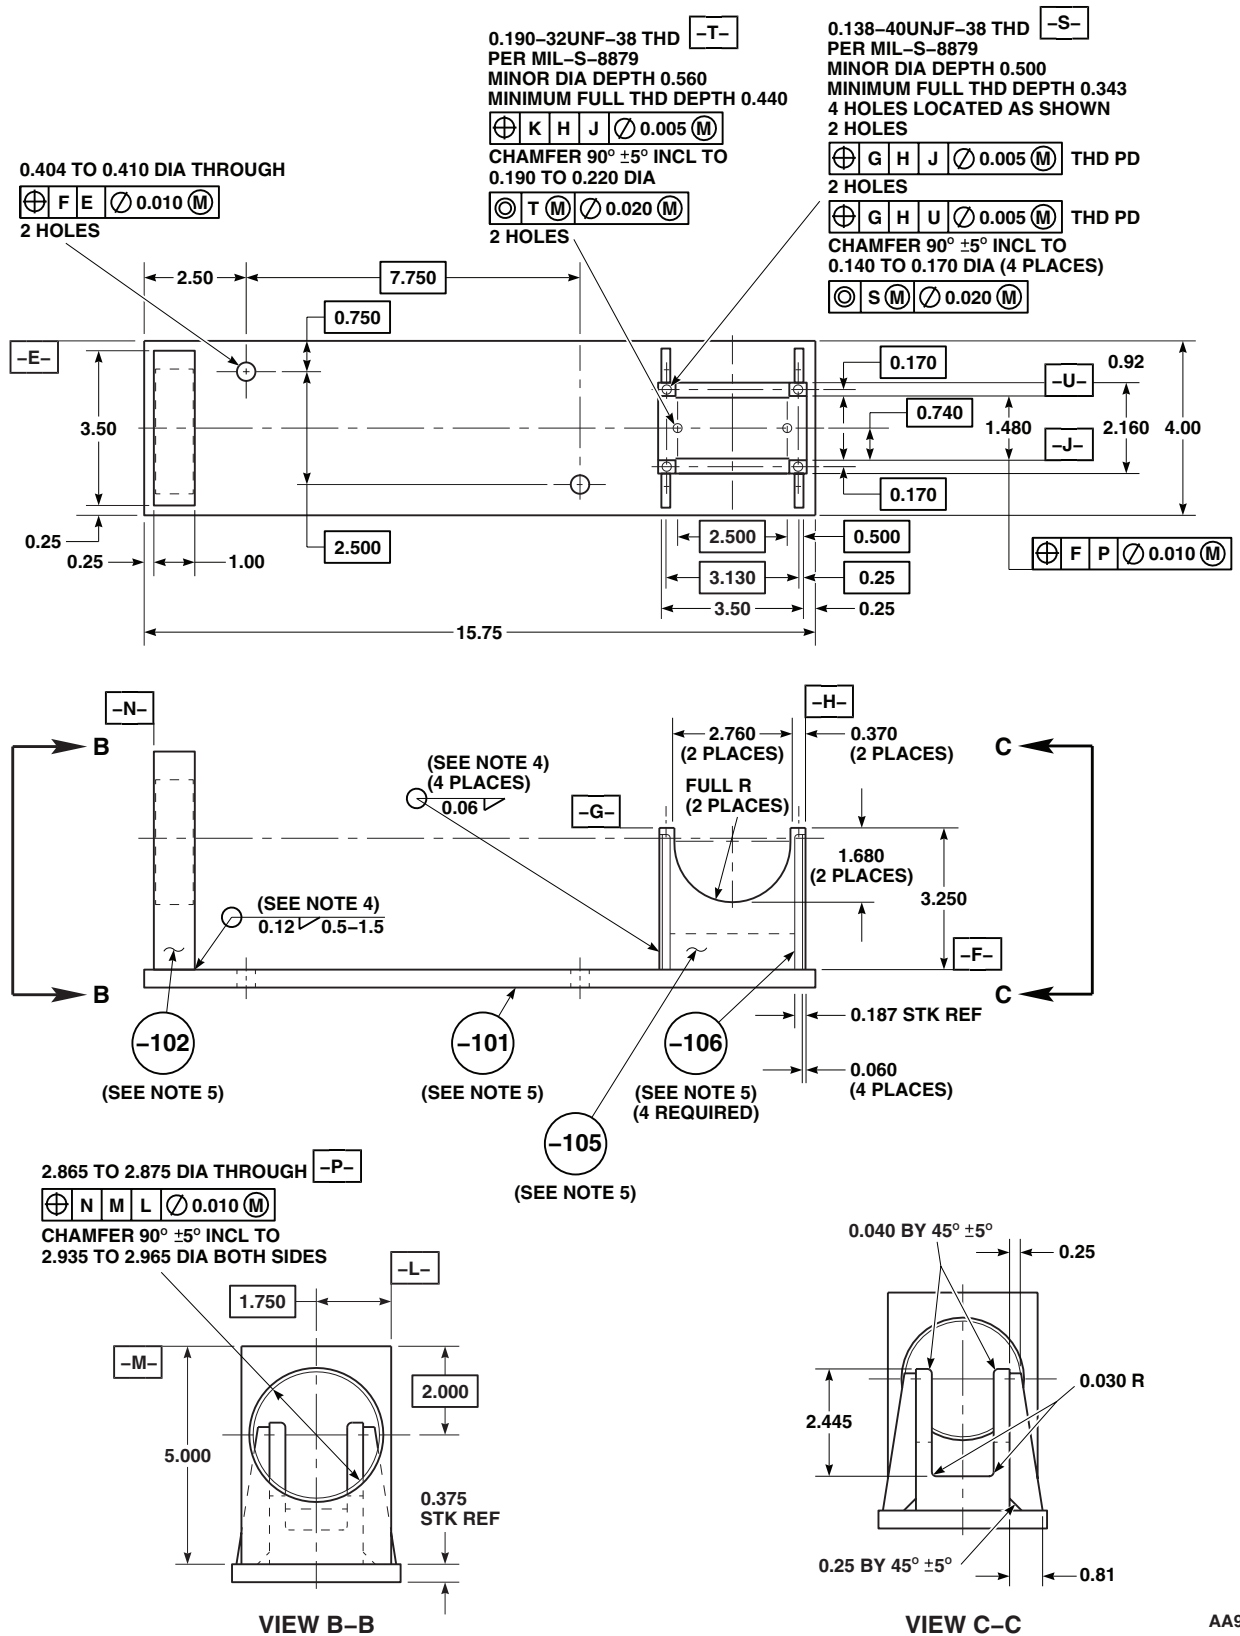


Figure 223. Main Rotor Damper Holding Fixture. (Sheet 2 of 4)

## FIELD MANUFACTURE ITEMS - Continued

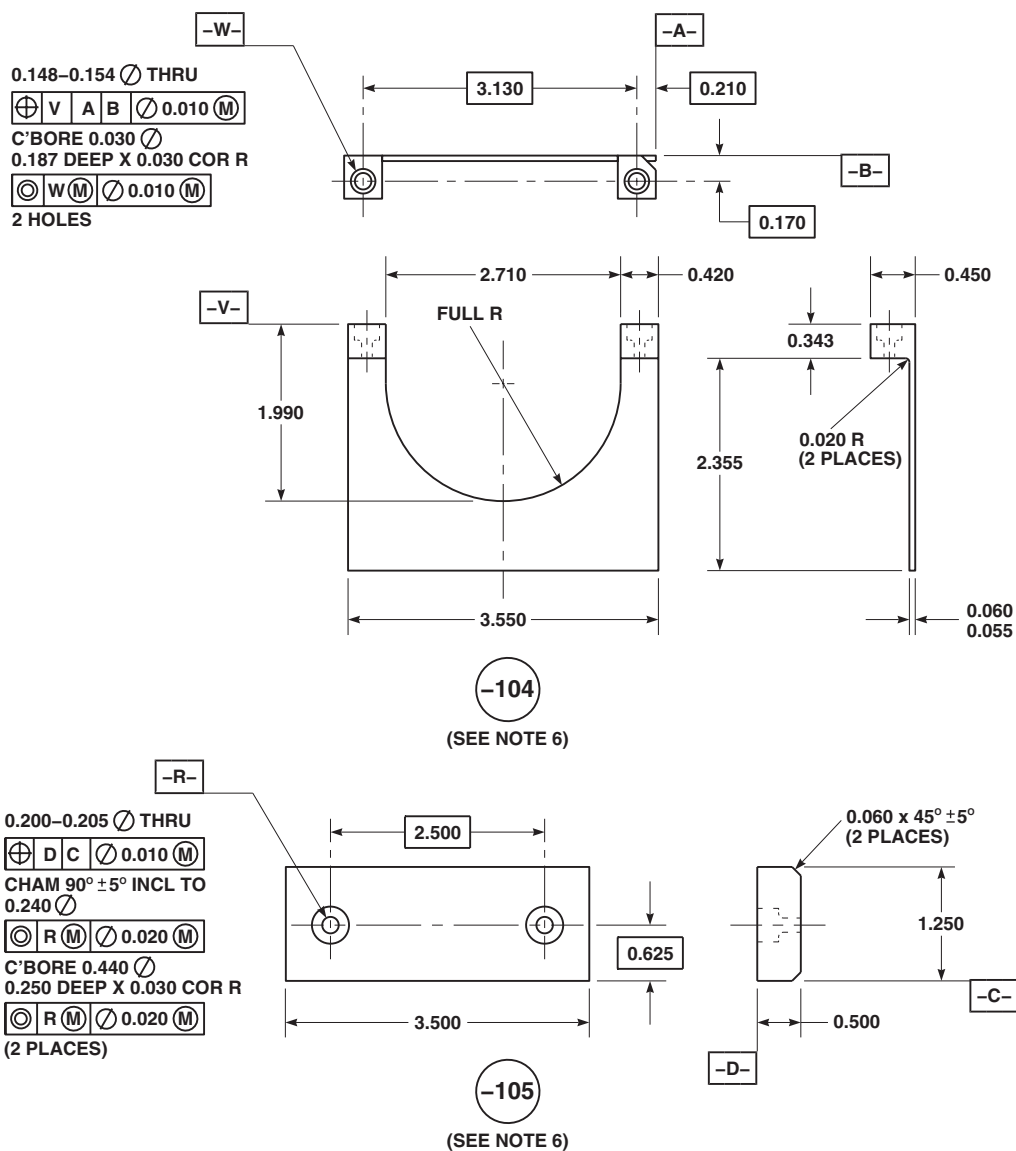
AA9534 3  
SA

Figure 223. Main Rotor Damper Holding Fixture. (Sheet 3 of 4)



## FIELD MANUFACTURE ITEMS - Continued


## NOTES

1. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
2. BREAK ALL SHARP EDGES 0.005 – 0.015 RADIUS UNLESS OTHERWISE NOTED.
3. 125 MICROINCH SURFACE FINISH ON ALL MACHINED SURFACES UNLESS OTHERWISE SPECIFIED.
4. WELD PER MIL-STD-2219.
5. MAKE FROM STEEL PLATE.
6. MAKE FROM NYLON, PHENOLIC, TEFLON, OR OTHER SUITABLE MATERIAL WHICH WILL NOT DAMAGE DAMPER ASSEMBLY SURFACES.
7. IMPRESSION STAMP 70700-77315-041 IN LOCATION SHOWN.
8. TOLERANCES UNLESS OTHERWISE NOTED:  
 ANGULAR  $\pm 0^{\circ} 30'$   
 LINEAR (EXCEPT HOLES):  
 X.XX  $\pm 0.03$   
 X.XXX  $\pm 0.010$
9. SYMBOL(S):  
 $\oplus$  TRUE POSITION  
 $\odot$  CONCENTRICITY  
 $\oslash$  DIAMETER  
 $\textcircled{M}$  MAXIMUM MATERIAL CONDITION (MMC)  
 $\square$  BASIC DIMENSION
10. MAKE HOLDING FIXTURE ASSEMBLY DETAIL PARTS PER DIMENSIONS AND MATERIALS SHOWN.
11. WELD DETAIL PARTS TO BASE PLATE PER MIL-STD-2219.
12. AFTER WELDING, DRILL AND TAP HOLES AS SHOWN.
13. ATTACH DETAIL -104 TO HOLDING FIXTURE WITH CAP SCREWS, MS16698-10L. ATTACH DETAIL -105 WITH SCREWS MS16998-28L.
14. IMPRESSION STAMP 70700-77315-041 ON HOLDING FIXTURE TO IDENTIFY FOR FUTURE USE.

AA9534\_4A  
SA

Figure 223. Main Rotor Damper Holding Fixture. (Sheet 4 of 4)

## FIELD MANUFACTURE ITEMS - Continued

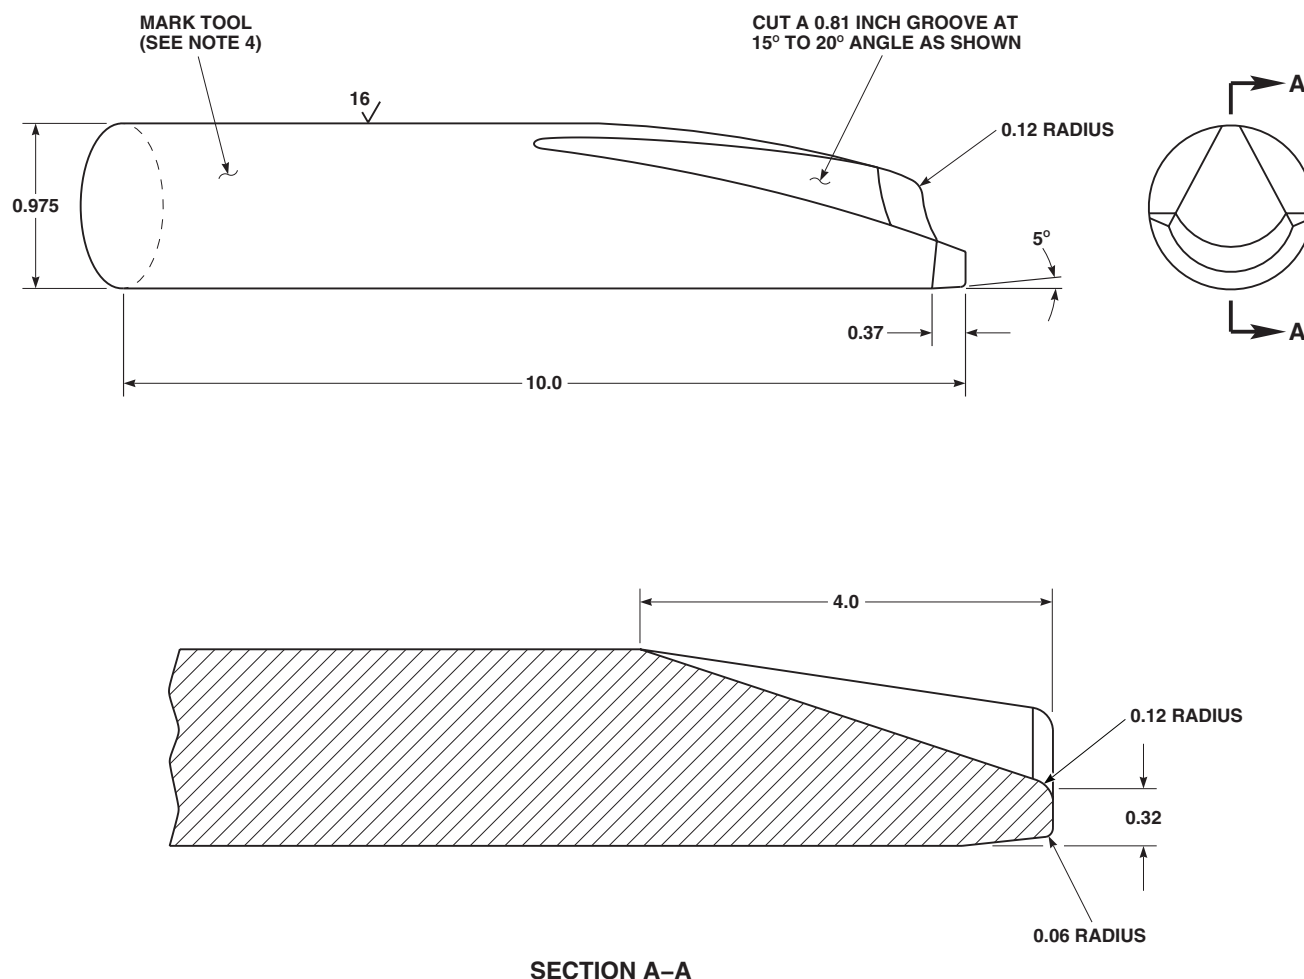


## NOTES

1. ALL DIMENSIONS ARE IN INCHES UNLESS OTHERWISE NOTED.
2. BREAK ALL SHARP CORNERS 0.005 TO 0.015 RADIUS.
3. MAKE FROM NYLON ROD.
4. IMPRESSION STAMP AS SEAL EXPANSION TOOL. 70106-28000-045T046.
5. SYMBOL(S):  
✓ MICROINCH FINISH
6. TOLERANCES UNLESS OTHERWISE NOTED:  
ANGULAR  $\pm 0^\circ 30'$   
LINEAR (EXCEPT HOLES):  
X.XX  $\pm 0.03$   
X.XXX  $\pm 0.010$
7. MAKE SEAL EXPANSION TOOL PER DIMENSIONS.
8. MAKE FROM NYLON MATERIAL.
9. IMPRESSION STAMP 70106-08100-T4 TO IDENTIFY FOR FUTURE USE.

AA9535  
SA

Figure 224. Main Rotor Damper Seal Expansion Tool.

## FIELD MANUFACTURE ITEMS - Continued

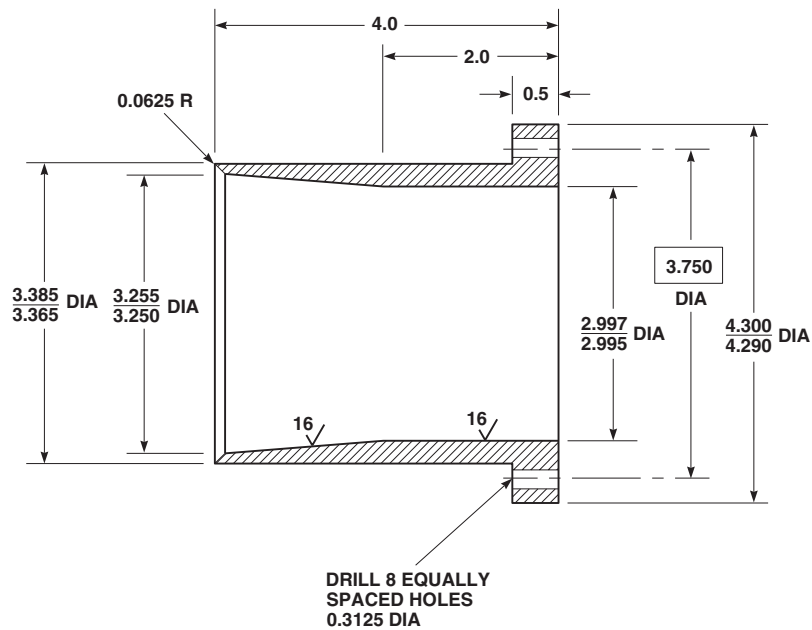


## NOTES

1. ALL DIMENSIONS ARE IN INCHES UNLESS OTHERWISE NOTED.
2. BREAK ALL SHARP CORNERS 0.005 TO 0.015 RADIUS.
3. SYMBOL(S):  
 ✓ MICROINCH FINISH  
 □ BASIC DIMENSION
4. MAKE PISTON ROD INSERTION TOOL SEAL EXPANSION TOOL PER DIMENSION.
5. MAKE FROM NYLON MATERIAL.
6. IMPRESSION STAMP 70106-08100-T5 TO IDENTIFY FOR FUTURE USE.

Figure 225. Main Rotor Damper Piston Rod Insertion Tool.

## FIELD MANUFACTURE ITEMS - Continued

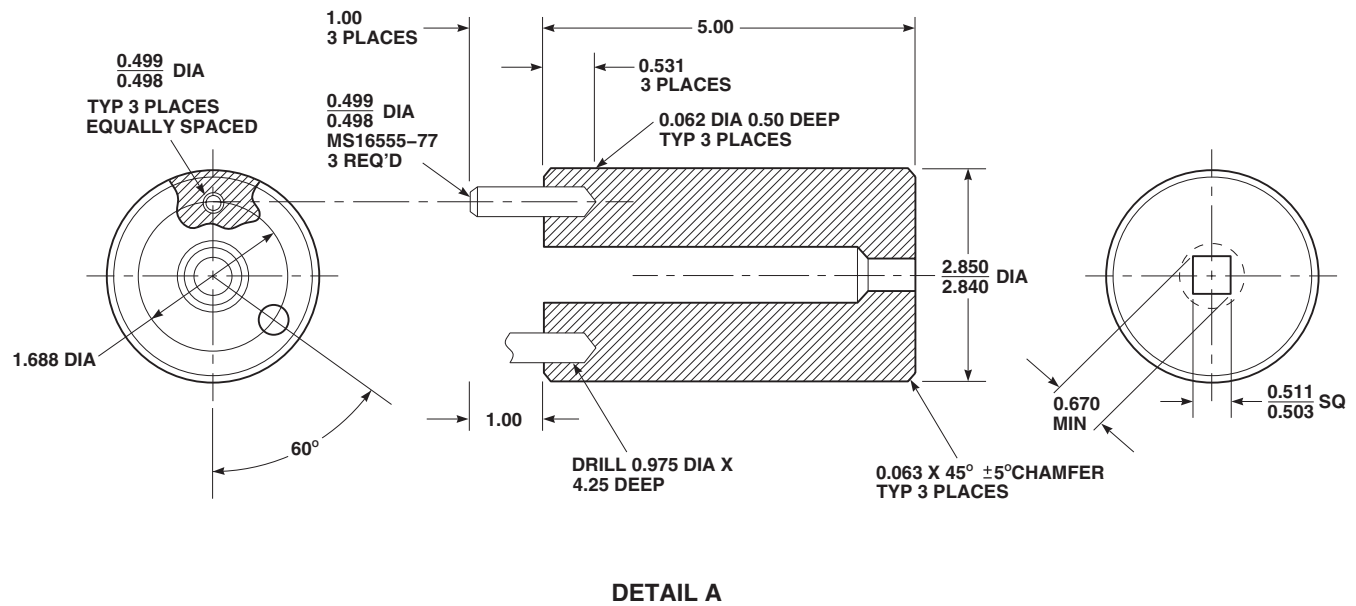

## NOTES





1. ALL DIMENSIONS ARE IN INCHES UNLESS OTHERWISE NOTED.
2. MAKE FROM STEEL BAR STOCK 4340.
3. MAKE PISTON ROD ASSEMBLY WRENCH PER DIMENSIONS.
4. USING STEEL BAR STOCK 4340.
5. IMPRESSION STAMP PART NUMBER 70106-08100-T6.

AA9537  
SA

Figure 226. Main Rotor Damper Piston Rod Wrench.




FIELD MANUFACTURE ITEMS - Continued

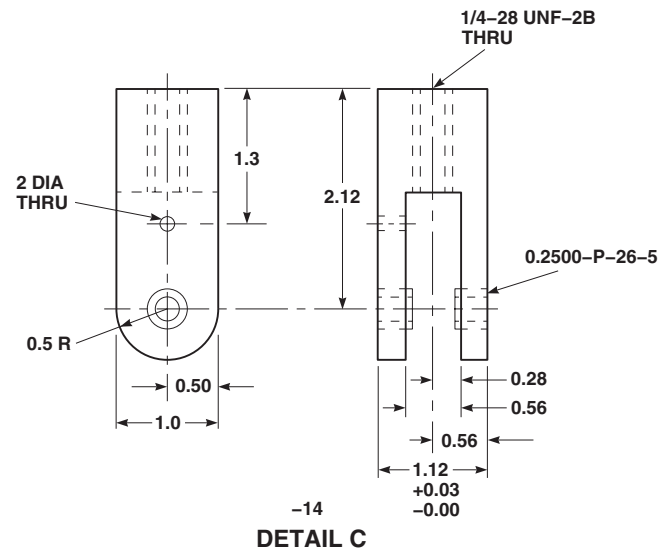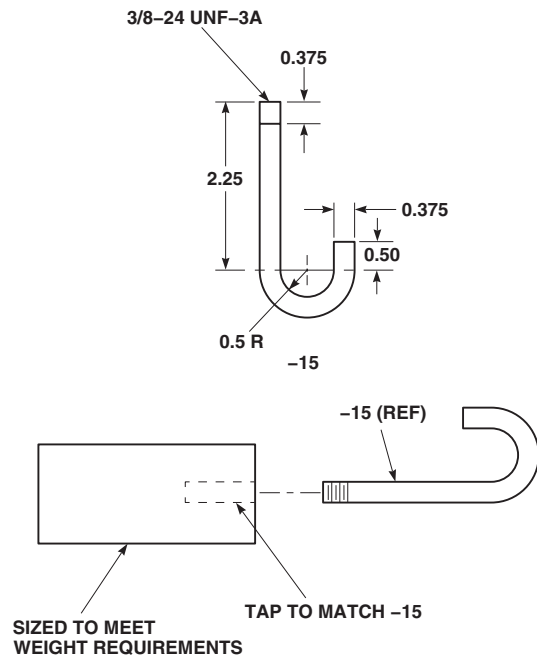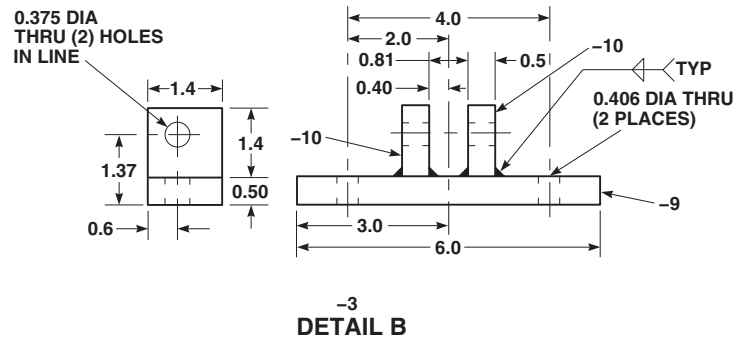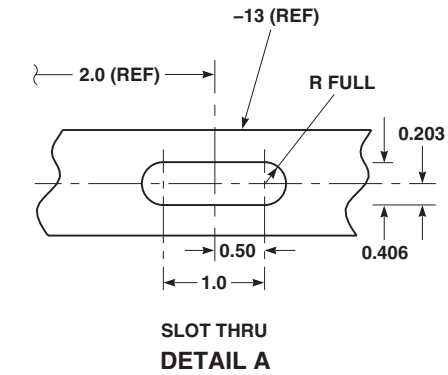

AA9531\_2  
SA

Figure 227. Master Brake Cylinder Test Stand. (Sheet 2 of 4)

FIELD MANUFACTURE ITEMS - Continued

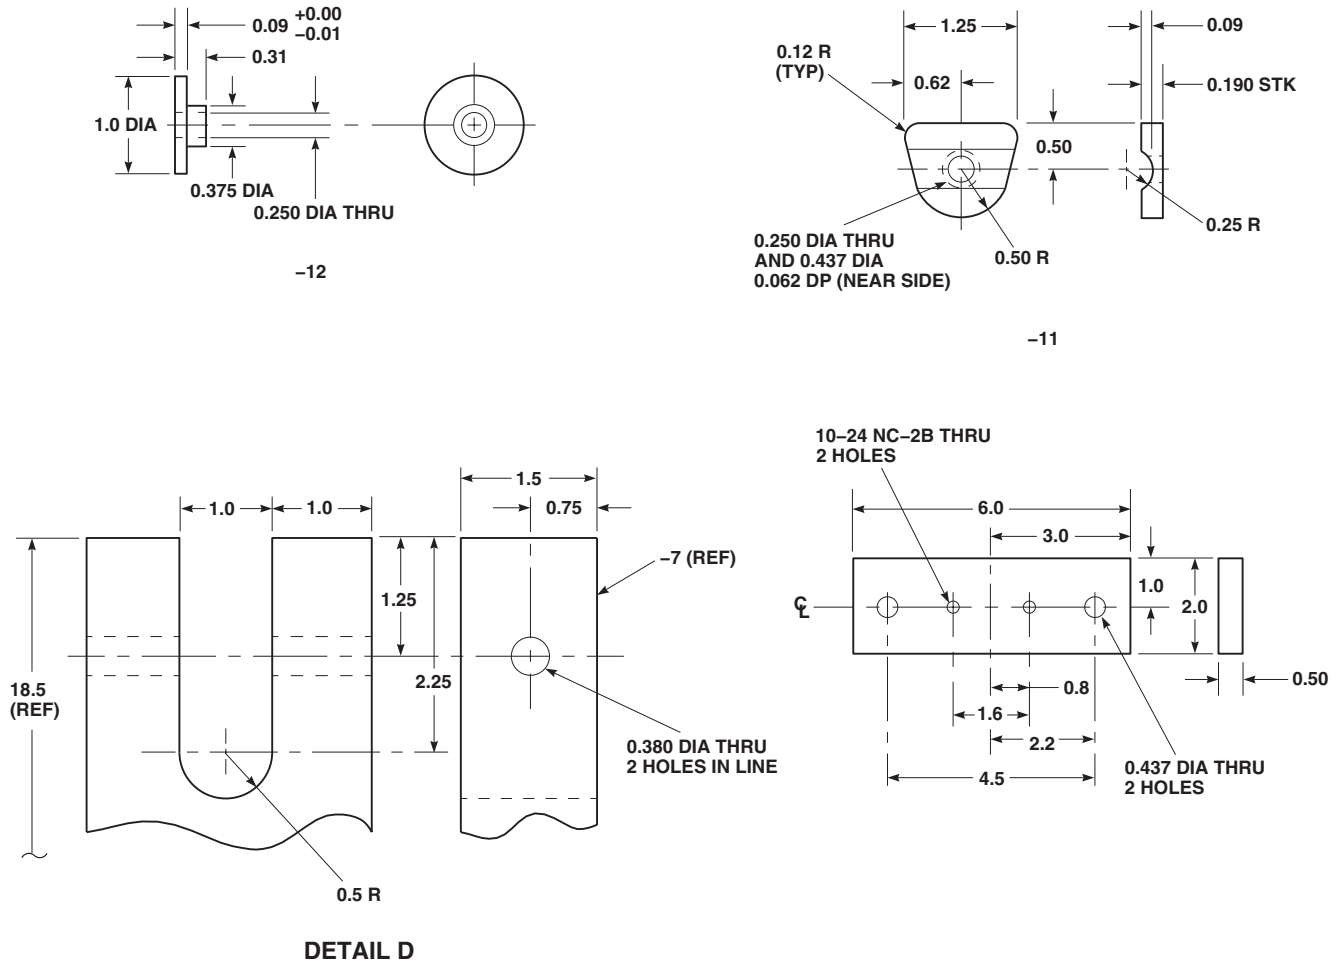

AA9531\_3  
SA

Figure 227. Master Brake Cylinder Test Stand. (Sheet 3 of 4)

## FIELD MANUFACTURE ITEMS - Continued

| NOMENCLATURE             | MATERIAL                         | NSN              |
|--------------------------|----------------------------------|------------------|
| CARR LANE CL-9-LP        | L PIN                            | 5315-00-547-3809 |
| CARR LANE CL-5-LP        | L PIN                            | 5315-00-075-7845 |
| CARR LANE CL-2-C-9.0     | NYLON CABLE                      | 4018-00-069-5180 |
| CARR LANE CL-2-F         | FERRULE                          | 4030-01-219-8678 |
| ACE OR EQUIV 2500-P-26-5 | HEADLESS P.F. BUSHING            | 3120-00-598-8720 |
| MS35425-74               | WING NUT                         | 5310-01-088-2490 |
| MS27039-4-12             | PAN HD SCREW                     | 5305-00-891-1784 |
| AN315-6                  | SELF-LOCKING NUT                 | 5310-00-843-4824 |
| AN960-616                | FLAT WASHER                      | 5310-01-016-4871 |
| AN960-416                | FLAT WASHER                      | 5310-00-141-1795 |
| AN6-10A                  | HEX HD BOLT                      | 5306-00-208-3636 |
| AN526-1032R7             | TRUSS HD MACH SCREW              | 5305-00-272-4951 |
| AN4-17A                  | HEX HD BOLT                      | 5306-00-151-1417 |
| HOOK                     | CRS 3/8 DIA BY 8.1               | 9510-00-607-1491 |
| BRACKET                  | CRS 1 BY 1-1/4 BY 2.8            | 9510-00-481-0671 |
| ARM                      | 2024-T351 1 BY 1-1/2 BY 59.3     |                  |
| BUSHING                  | CRS 1.0 DIA BY 0.5               | 9510-00-975-2640 |
| SPACER                   | 2024-T3 0.190 BY 1.2 BY 1.5      |                  |
| LUG                      | 6061-T651 1/2 BY 1.4 BY 1.4      |                  |
| BASE                     | 6061-T651 1/2 BY 1.4 BY 6.0      |                  |
| RETAINER                 | CRS 3/8-16 UNC BY 18.0           | 9510-00-607-1491 |
| COLUMN                   | CRS 1-1/2 BY 3 BY 18-1/2         |                  |
| PAD                      | 2024-T351 ALUM BAR 1/2 BY 2 BY 6 |                  |
| BASE                     | CRS 1/2 BY 6 BY 18.0             | 9510-00-001-3315 |

## NOTE


ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.

AA9531\_4A  
SA

Figure 227. Master Brake Cylinder Test Stand. (Sheet 4 of 4)



---

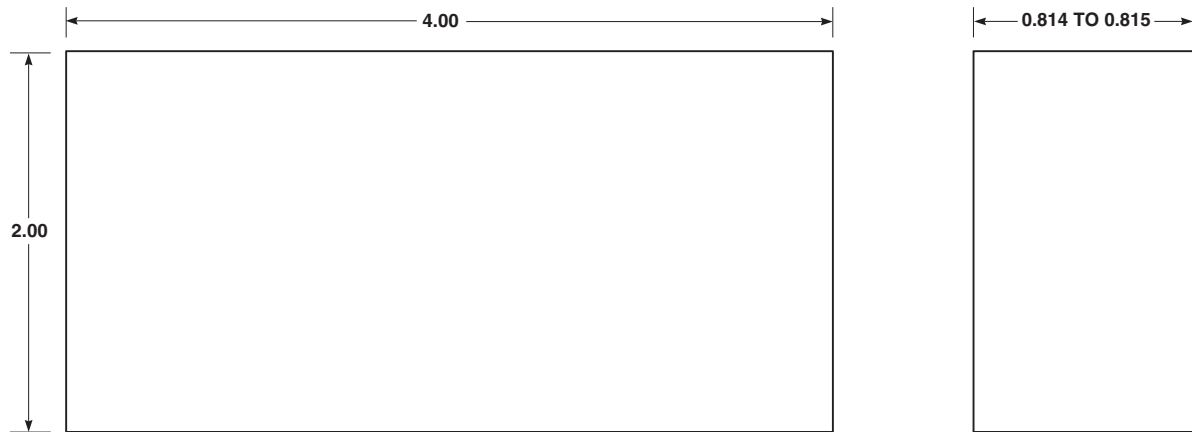FIELD MANUFACTURE ITEMS - Continued

PART NUMBER: 1420-BH-002


**NOTES**

1. MAKE FROM STEEL STOCK, MIL-S-5626, NSN 9510-00-596-2176.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. BREAK ALL SHARP EDGES TO 0.005 TO 0.015 RADIUS.
4. IDENTIFY PARTS PER MIL-STD-130.

AA9538A  
SA

Figure 228. Pitch Beam/Horn Bushing Sizing Block.

FIELD MANUFACTURE ITEMS - Continued

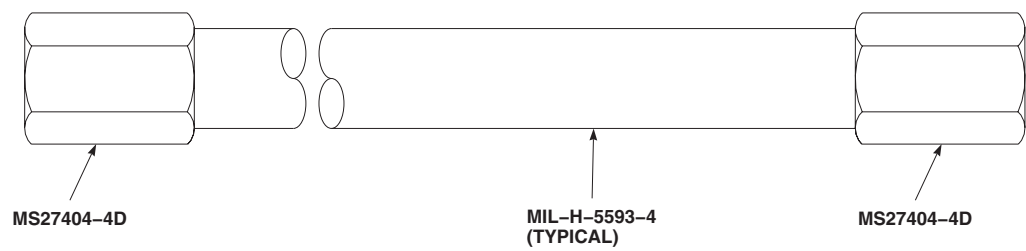

| PART NUMBER  | DESCRIPTION                 | QUANTITY            | NSN              |
|--------------|-----------------------------|---------------------|------------------|
| MS27404-4D   | ADAPTER, 1/4 INCH TUBE OD   | 8                   | 4730-00-497-4281 |
| MIL-H-5593-4 | HOSE, FLEXIBLE, 1/4 INCH ID | 4 INCH<br>(3 EACH)  | 4720-00-540-1962 |
| MIL-H-5593-4 | HOSE, FLEXIBLE, 1/4 INCH ID | 36 INCH<br>(1 EACH) | 4720-00-540-1962 |

NOTES

- 1. MAKE HOSE ASSEMBLIES USING MATERIALS LISTED, OR APPROVED EQUIVALENT.
- 2. CAP ENDS OF HOSE WHEN NOT IN USE.

AA9539  
SA

Figure 229. Fuel Feed System Test Hose Assembly.

## FIELD MANUFACTURE ITEMS - Continued


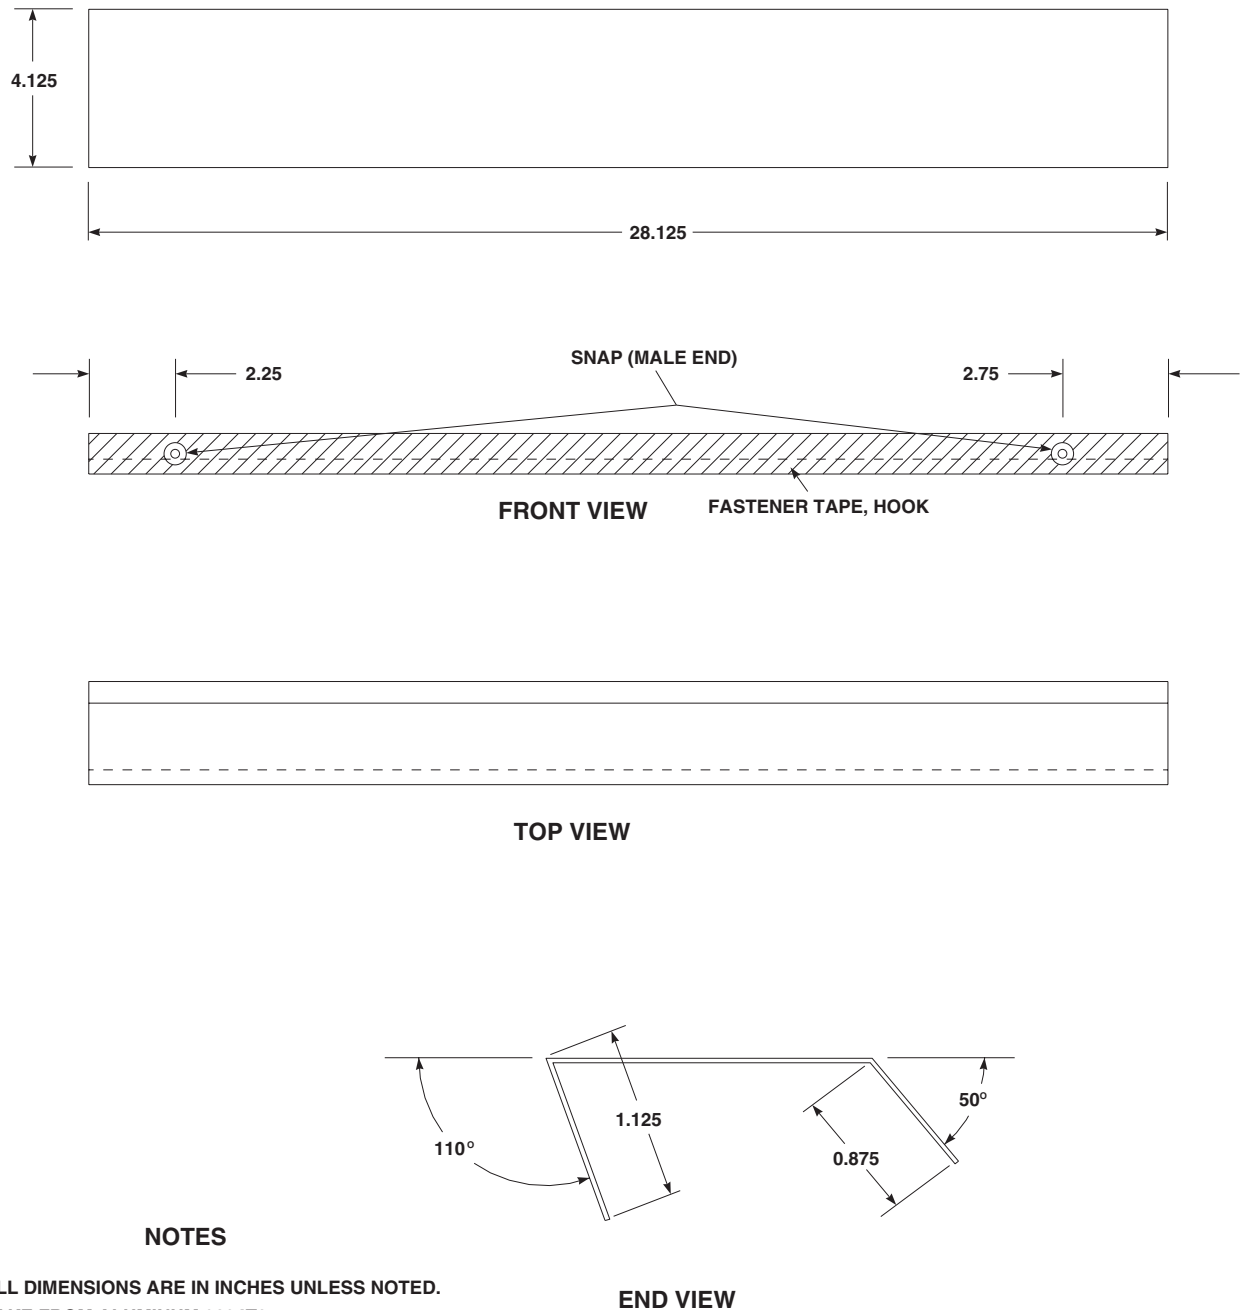
AB3758A  
SA

Figure 230. Gunner's Window Upper Channel Insert/Support.

## FIELD MANUFACTURE ITEMS - Continued

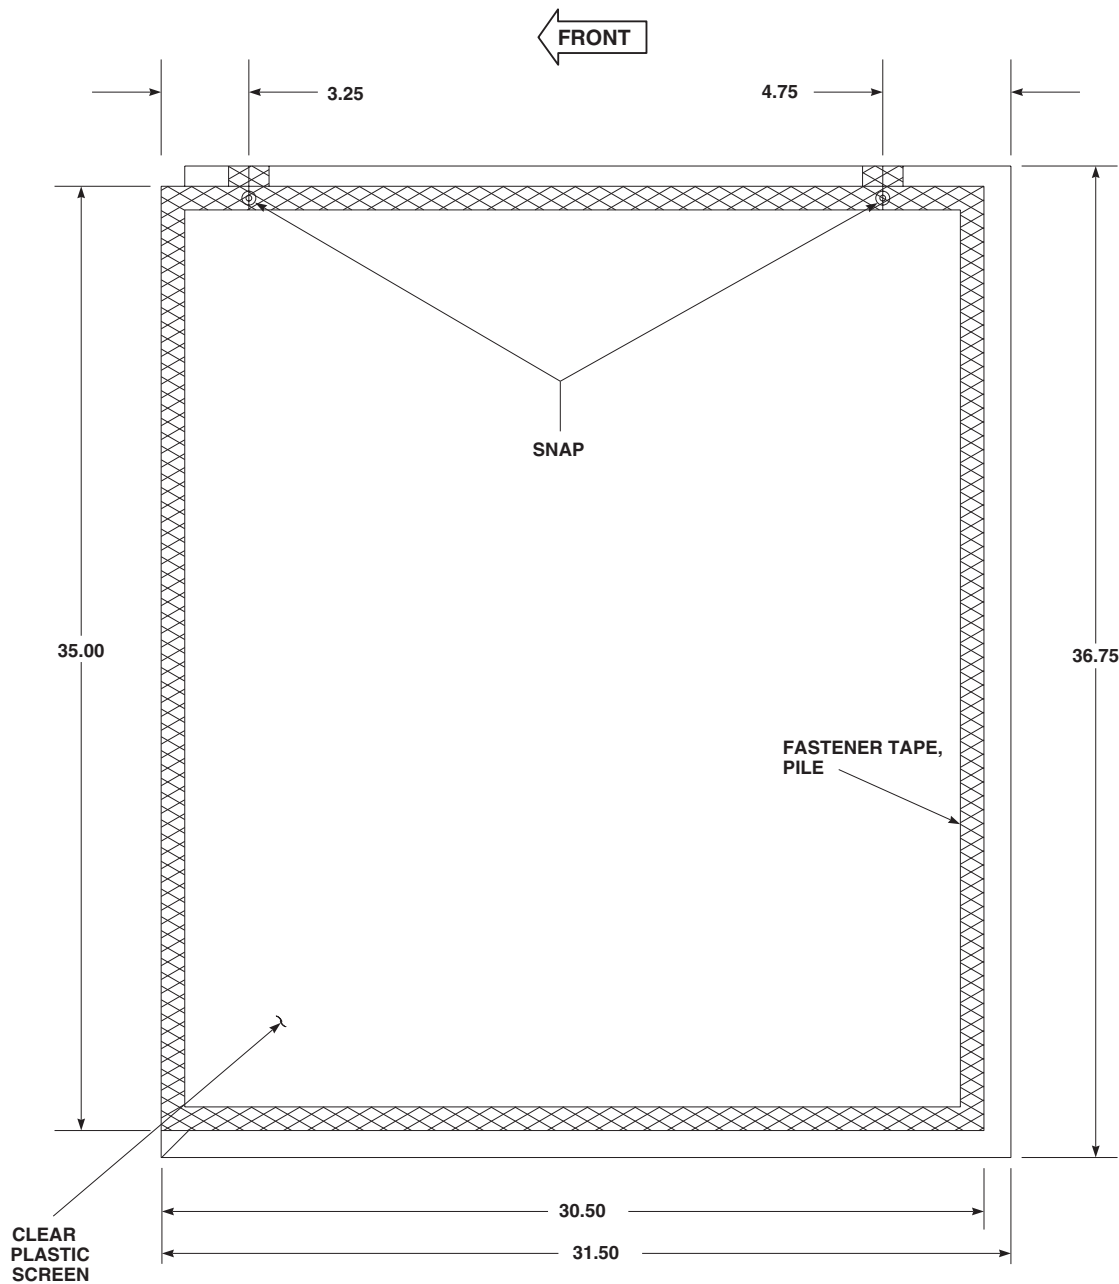


## NOTES

1. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
2. MAKE FROM 20 ML CLEAR PLASTIC  
0.020 INCH THICK, ITEM 218, WP 1803 00.
3. INSTALL SNAPS (FEMALE END).
4. FASTENER TAPE, PILE, ITEM 121, WP 1803 00.

AB3759A  
SA

Figure 231. Gunner's Window Clear Plastic Screen.

## FIELD MANUFACTURE ITEMS - Continued

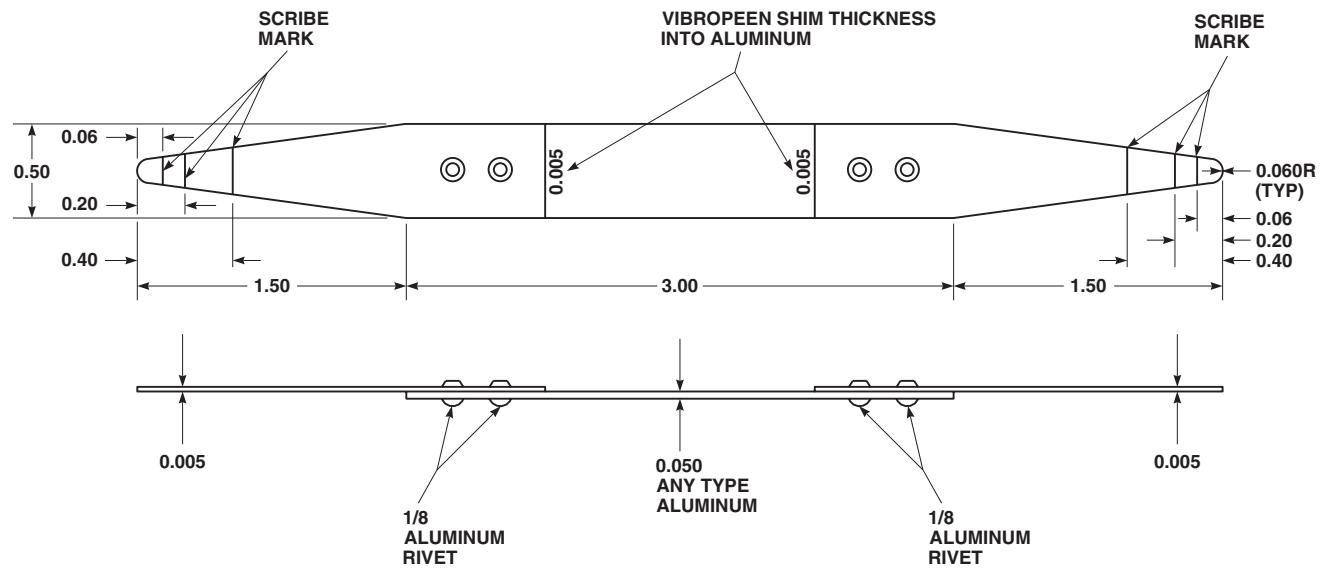


## NOTES

1. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
2. 0.005 INCH PLASTIC SHEET, PN 20INX20INX0.005INTHK BLUE, NSN 9330-01-293-7678.

AA9969B  
SA

Figure 232. Elastomeric Rod End Bearing Plastic Feeler Gage.

FIELD MANUFACTURE ITEMS - Continued

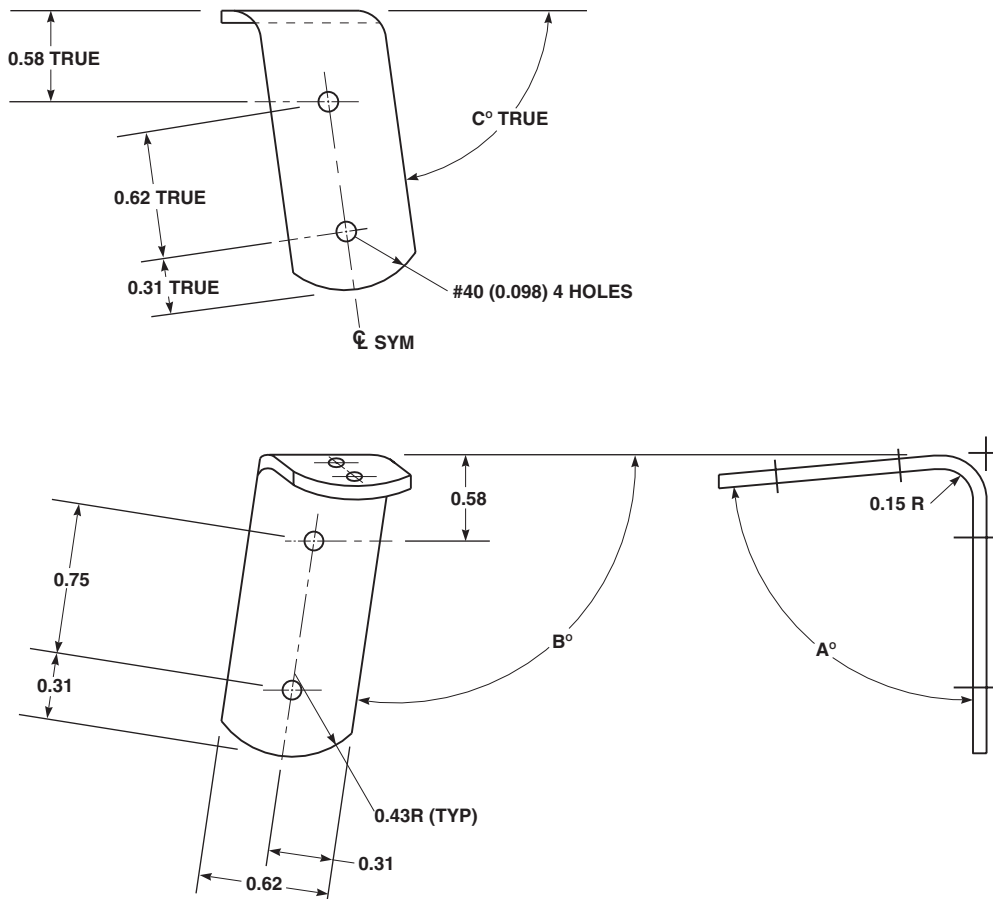

| DASH NUMBER | A° | B° | C°  |
|-------------|----|----|-----|
| -65         | 87 | 90 | 96  |
| -131        | 90 | 69 | 102 |
| -147        | 90 | 75 | 90  |
| -194        | 90 | 90 | 100 |
| -328        | 93 | 90 | 96  |

| PART NUMBER | MAKE FROM                             |
|-------------|---------------------------------------|
| SS1082-65   | ALUMINUM STOCK 7075-T6<br>0.040 THICK |
| SS1082-131  |                                       |
| SS1082-147  |                                       |
| SS1082-194  |                                       |
| SS1082-328  |                                       |

Figure 233. Bracket Angle. (Sheet 1 of 2)

---


**FIELD MANUFACTURE ITEMS** - Continued**NOTES**

1. MAKE FROM 7075-T6 ALUMINUM STOCK, 0.040 THICK.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. DRILL PILOT HOLES AS INDICATED PER TM55-1520-24.
4. IDENTIFY ALL PARTS PER MIL-STD-130.


AB0122\_2A  
SA

Figure 233. Bracket Angle. (Sheet 2 of 2)


## FIELD MANUFACTURE ITEMS - Continued

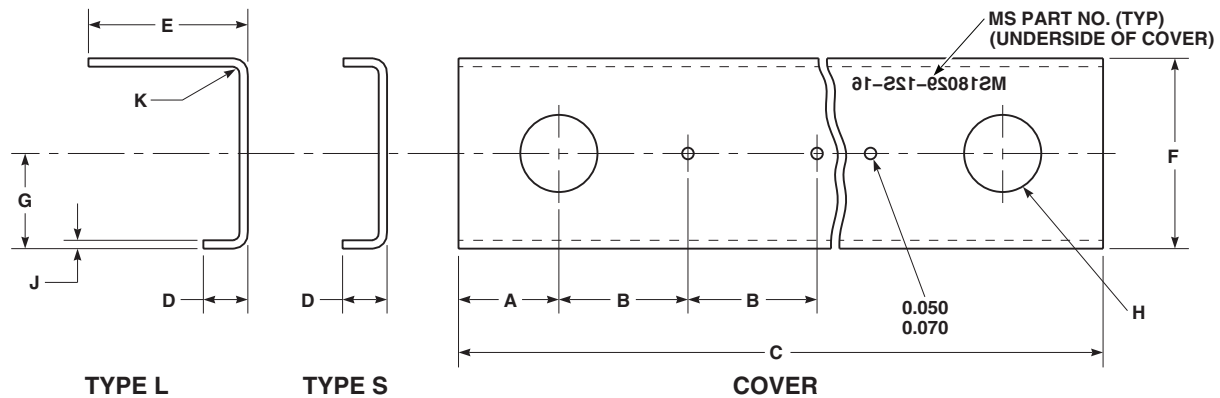

| MS DASH NO. |          | STUD SIZE<br>(REF) | MAX. NO.<br>OF STUDS<br>(REF) | A     | B          | C            | D          | E                    | F     | G     | H                 | J          | K     |
|-------------|----------|--------------------|-------------------------------|-------|------------|--------------|------------|----------------------|-------|-------|-------------------|------------|-------|
| TYPE L      | TYPE S   |                    |                               |       | $\pm .016$ | MAX<br>(REF) | $\pm .030$ | $\pm .030$<br>TYPE L |       |       | DIA<br>$\pm .002$ | $\pm .010$ | RAD   |
| -12L-(N)    | -12S-(N) | 0.190-32           | 16                            | 0.593 | 0.750      | 12.454       | 0.234      | 0.906                | 1.063 | 0.531 | 0.430             | 0.034      | 0.062 |

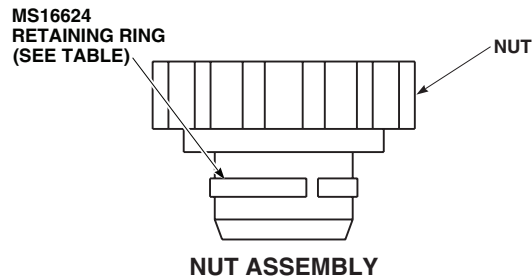

| MS<br>DASH<br>NO. | THREAD T        | RETAINING RING | A     | B     | C     | D     | E     | F                 | H     | J          | K     | M          | N                 | O     | P                    |
|-------------------|-----------------|----------------|-------|-------|-------|-------|-------|-------------------|-------|------------|-------|------------|-------------------|-------|----------------------|
|                   | INSERT          |                |       |       |       | REF   | REF   | DIA<br>$\pm .005$ | DIA   | DIA<br>REF | REF   | DIA<br>REF | DIA<br>$\pm .008$ |       | $\pm .0312$<br>(REF) |
| 22                | 0.190-32 UNC 2B | MS16624-1040   | 0.129 | 0.176 | 0.250 | 0.313 | 0.500 | 0.373             | 0.397 | 0.562      | 0.310 | 0.750      | 0.365             | 0.125 | 0.365                |

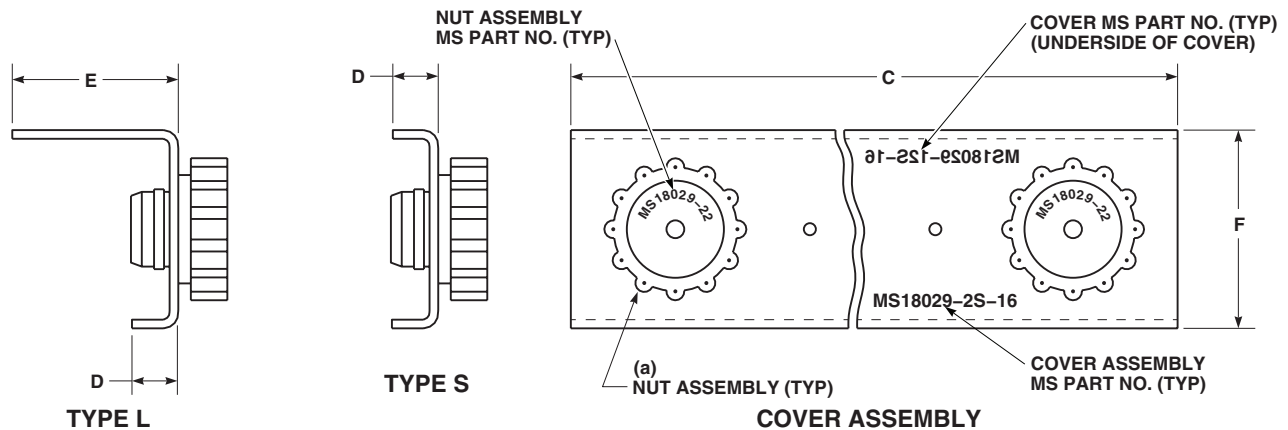

| ASSEMBLY<br>NO.  | COVER DASH NO. |          | STUDS    |        | NUT<br>ASSEMBLY<br>DASH NO. | C      | D     | E     | F     |
|------------------|----------------|----------|----------|--------|-----------------------------|--------|-------|-------|-------|
|                  | TYPE L         | TYPE S   | (N) MAX. | SIZE   |                             | (REF)  | (REF) | (REF) | (REF) |
| MS18029-2(L)-(4) | -12L-(N)       |          | 16       | 190-32 | 22                          | 12.454 | 0.234 | 0.906 | 1.063 |
| MS18029-25-4     |                | -12S-(N) | 16       | 190-32 | 22                          | 12.454 | 0.234 |       | 1.063 |

AB0121\_1A  
SA

Figure 234. Terminal Board Cover. (Sheet 1 of 2)



---


**FIELD MANUFACTURE ITEMS** - Continued**NOTES**

1. MAKE COVER MS18029-2L-4 FROM MS18029-12L COVER.
2. MAKE COVER MS18029-2S-4 FROM MS18029-12S COVER.
3. CUT COVER TO SIZE.
4. REMOVE BURRS AND SHARP EDGES.
5. INSTALL NUT ASSEMBLY INTO COVER WITH RETAINER.
6. INK STAMP MS18029 (SIZE DASH NUMBERS) ON INSIDE AND OUTSIDE COVER.

AB0121\_2  
SA

Figure 234. Terminal Board Cover. (Sheet 2 of 2)

## FIELD MANUFACTURE ITEMS - Continued

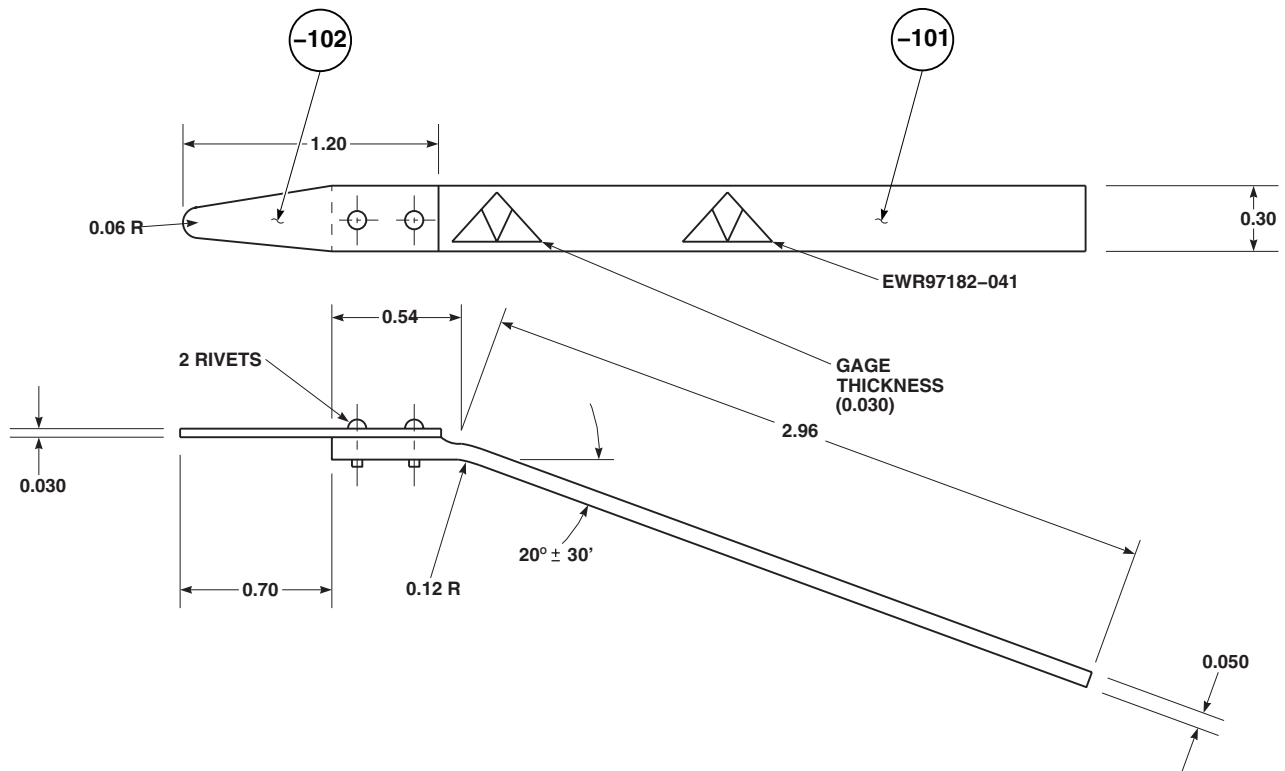


## NOTES

1. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
2. MAKE PER MIL-STD-190.
3. ANY TYPE ALUMINUM AND PLASTIC SHIMSTOCK.

AB0123A  
SA

Figure 235. Feeler Gage.

## FIELD MANUFACTURE ITEMS - Continued

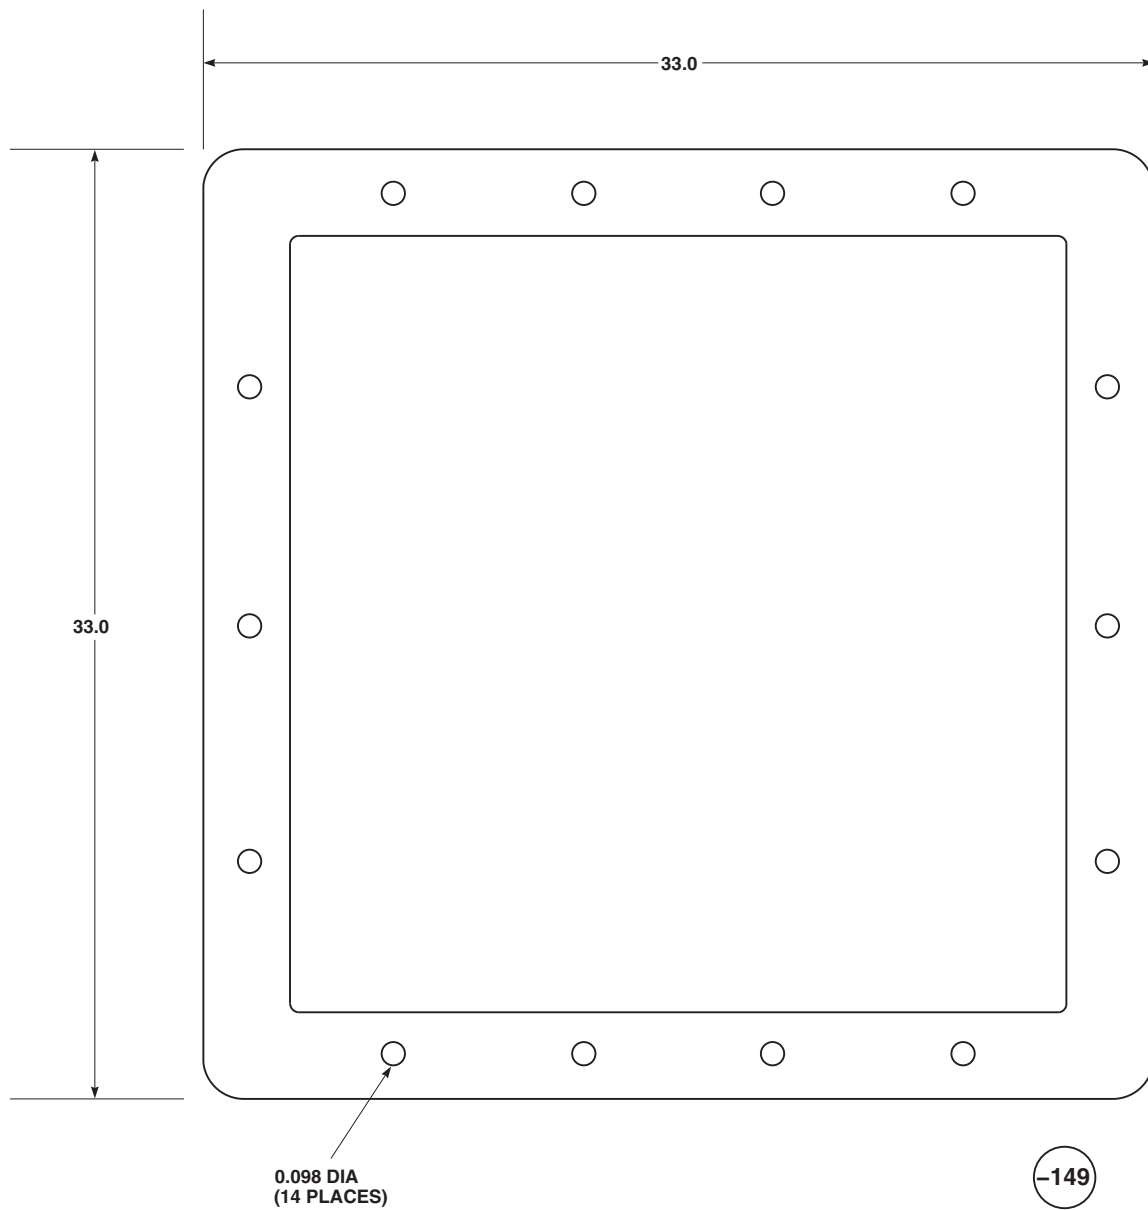

## NOTES


1. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
2. MAKE -149 FROM 0.125 INCH THICK SCE-3L RUBBER SHEET, MIL-STD-670, NSN 9320-01-154-2235.
3. CUT TO FIT.

## H-DRIP PAN SEAL

AB0124A  
SA

Figure 236. Drip Pan Seal.

## FIELD MANUFACTURE ITEMS - Continued

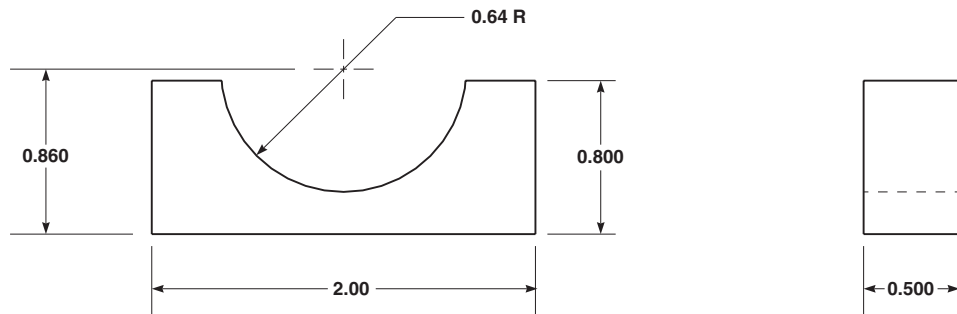


## NOTES

1. MAKE FROM 6061-T6 ALUMINUM ALLOY, PER QQ-A225/8.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.

AB0225A  
SA

Figure 237. Damper Indicator Disassembly Tool.

## FIELD MANUFACTURE ITEMS - Continued

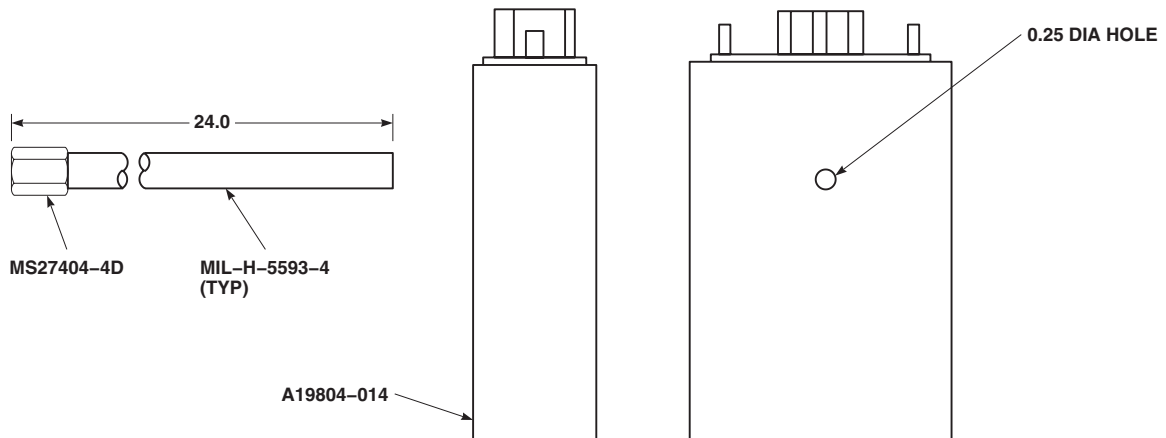

| PART NUMBER  | DESCRIPTION                 | QUANTITY | NSN              |
|--------------|-----------------------------|----------|------------------|
| MIL-H-5593-4 | HOSE, FLEXIBLE, 1/4 ID      | 24.0 IN. | 4720-00-540-1962 |
| MS27404-4D   | ADAPTER, 1/4 TUBE OD        | 1        | 4730-00-497-4281 |
| A19804-014   | CELL, NICKEL-CADMIUM, 5H120 | 1        | -                |

**WARNING**

INJURY TO PERSONNEL COULD OCCUR WHEN MANUFACTURING BATTERY TEST CELL. MAKE SURE TECHNICIAN IS AWARE OF PROPER TOOLS/MATERIAL, ALL WARNINGS, CAUTIONS, AND NOTES CONTAINED IN PARA 9.17 FOR HANDLING OF ELECTROLYTE.


**NOTES**

1. MAKE BATTERY TEST CELL USING MATERIAL LISTED IN CHART OR APPROVED EQUIVALENT.
2. NICKEL-CADMIUM CELL ELECTROLYTE MUST BE NEUTRALIZED, SOLUTION OF 3 PARTS BORIC ACID TO 7 PARTS WATER, AND FLUSHED CLEAN WITH FRESH WATER.
3. DRAIN FLUIDS AND ALLOW TO AIR-DRY.
4. INSERT FLEXIBLE HOSE INTO CELL AND EPOXY, MIL-C-22750.
5. CAP END OF HOSE WHEN NOT IN USE.
6. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.

FB1423A  
SA

Figure 238. Battery Test Cell.

## FIELD MANUFACTURE ITEMS - Continued

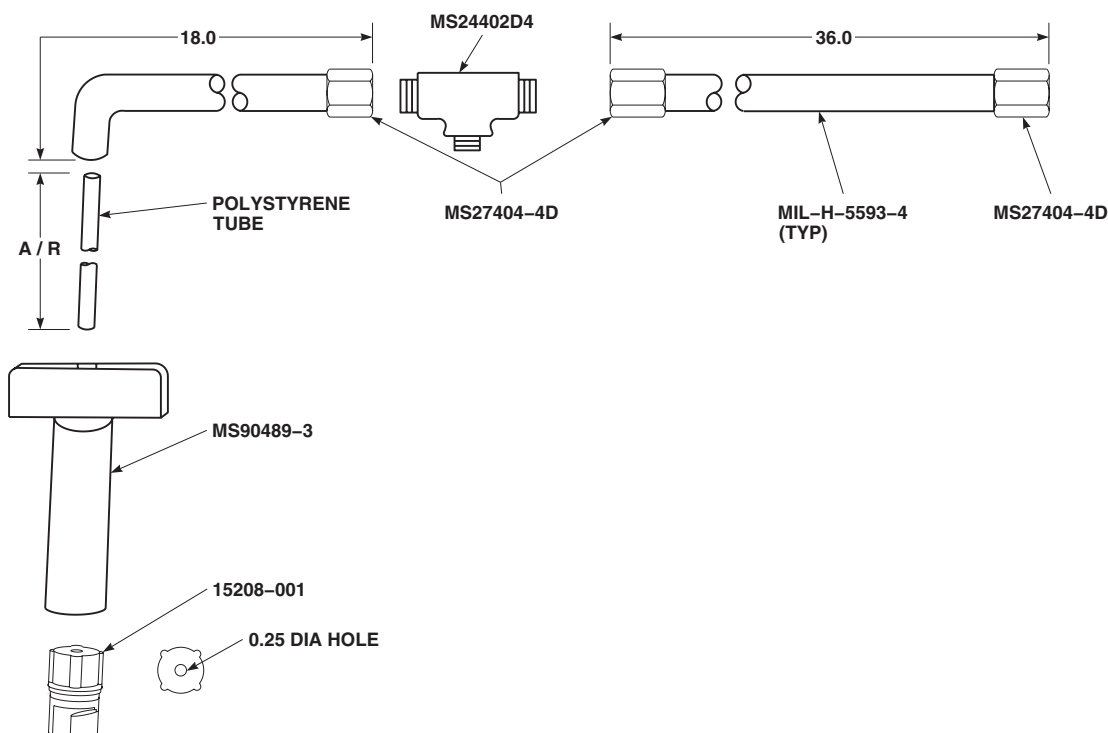

| PART NUMBER  | DESCRIPTION               | QUANTITY    | NSN              |
|--------------|---------------------------|-------------|------------------|
| MIL-H-5593-4 | HOSE, FLEXIBLE, 1/4 ID    | 54.0 IN.    | 4720-00-540-1962 |
| MS24402D4    | TEE, TUBE, 1/4 TUBE OD    | 1           | 4730-00-722-1207 |
| MS27404-4D   | ADAPTER, 1/4 TUBE OD      | 3           | 4730-00-497-4281 |
| MS90489-3    | WRENCH, VENT CAP          | 1           | 5120-00-618-5320 |
| 15208-001    | VENT CAP ASSEMBLY         | 1           |                  |
|              | TUBE, POLYSTYRENE, 1/4 OD | AS REQUIRED |                  |


## NOTES

1. MAKE BATTERY TEST VENT CAP AND TEE USING MATERIAL LISTED IN CHART OR APPROVED EQUIVALENT.
2. REMOVE VENT PLUG FROM VENT CAP ASSY.
3. DRILL 1/4 INCH DIA HOLE THROUGH TOP TO BOTTOM OF VENT CAP WRENCH.
4. INSERT POLYSTYRENE TUBE THROUGH VENT CAP WRENCH AND VENT CAP. EPOXY, MIL-C-22750, TUBE AND VENT CAP TO VENT CAP WRENCH.
5. EPOXY TOP OF POLYSTYRENE TUBE TO FLEXIBLE HOSE.
6. CAP END OF HOSE AND TEE WHEN NOT IN USE.
7. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.

FB1422A  
SA

Figure 239. Battery Test Vent Cap and Tee.

## FIELD MANUFACTURE ITEMS - Continued

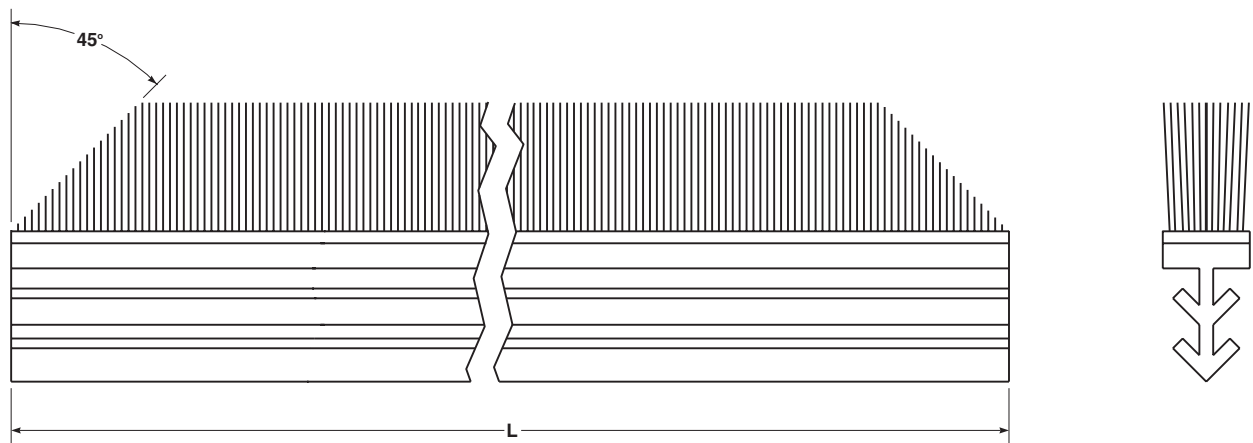

| NOMENCLATURE                      | L LENGTH | PART NUMBER |
|-----------------------------------|----------|-------------|
| CREW CHIEF'S WINDOW<br>BRUSH SEAL |          |             |
| UPPER FRONT                       | 14.38    | 0341-0001-3 |
| UPPER REAR                        | 15.04    | 0341-0002-3 |
| LOWER FRONT                       | 14.70    | 0341-0003-3 |
| LOWER REAR                        | 14.12    | 0341-0004-3 |

## NOTES

1. MAKE FROM POLY-FIN WEATHER STRIPPING, PART NUMBER 0341-0000-3-100, NSN 5330-01-H77-6285, FSCM 77824.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED,  $\pm 0.030$ .
3. CUT SEALS TO LENGTH PER CHART.
4. TRIM SEAL PILE TO 45° ANGLE, BOTH ENDS.
5. IDENTIFY PARTS PER MIL-STD-190.

FB2130B  
SA

Figure 240. Crew Chief's Window Brush Seal.

The diagram illustrates the internal forces in a beam. On the left, a vertical section of the beam is shown with a rectangular cross-section. Two horizontal arrows, labeled  $T$ , point outwards from the top and bottom edges of this section, representing tensile forces. To the right, a larger rectangular area represents the beam's longitudinal section. A horizontal double-headed arrow at the top is labeled  $L$ , indicating the length. A vertical double-headed arrow on the right is labeled  $W$ , indicating the width. A jagged break symbol is located in the center of the longitudinal section, indicating that the beam is longer than shown.

| NOMENCLATURE             | T THICKNESS | W WIDTH | L LENGTH | SIKORSKY<br>PART NUMBER |
|--------------------------|-------------|---------|----------|-------------------------|
| CREW CHIEF'S WINDOW SEAL | 0.125       | 0.69    | 36.44    | 70216-02402-139         |

1. MAKE FROM RUBBER, MIL-R-6130, GRADE A, TYPE 1, 0.125 INCH THICK, NSN 9320-00-291-0416.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. IDENTIFY PARTS PER MIL-STD-190. STAMP OR STENCIL PART NUMBER AND DATE OF MANUFACTURE ON PARTS WITH OPAQUE GREEN INK, TT-I-1795. USE 1/16 TO 1/8 INCH HIGH SANS SERIF CHARACTERS.

**EXAMPLE:**    P/N 70216-02401-107                      3Q 86  
                                 **PART NUMBER**                      **THIRD QUARTER 1986**

**FB2113A**  
SA

**1805 00-404**



FIELD MANUFACTURE ITEMS - Continued


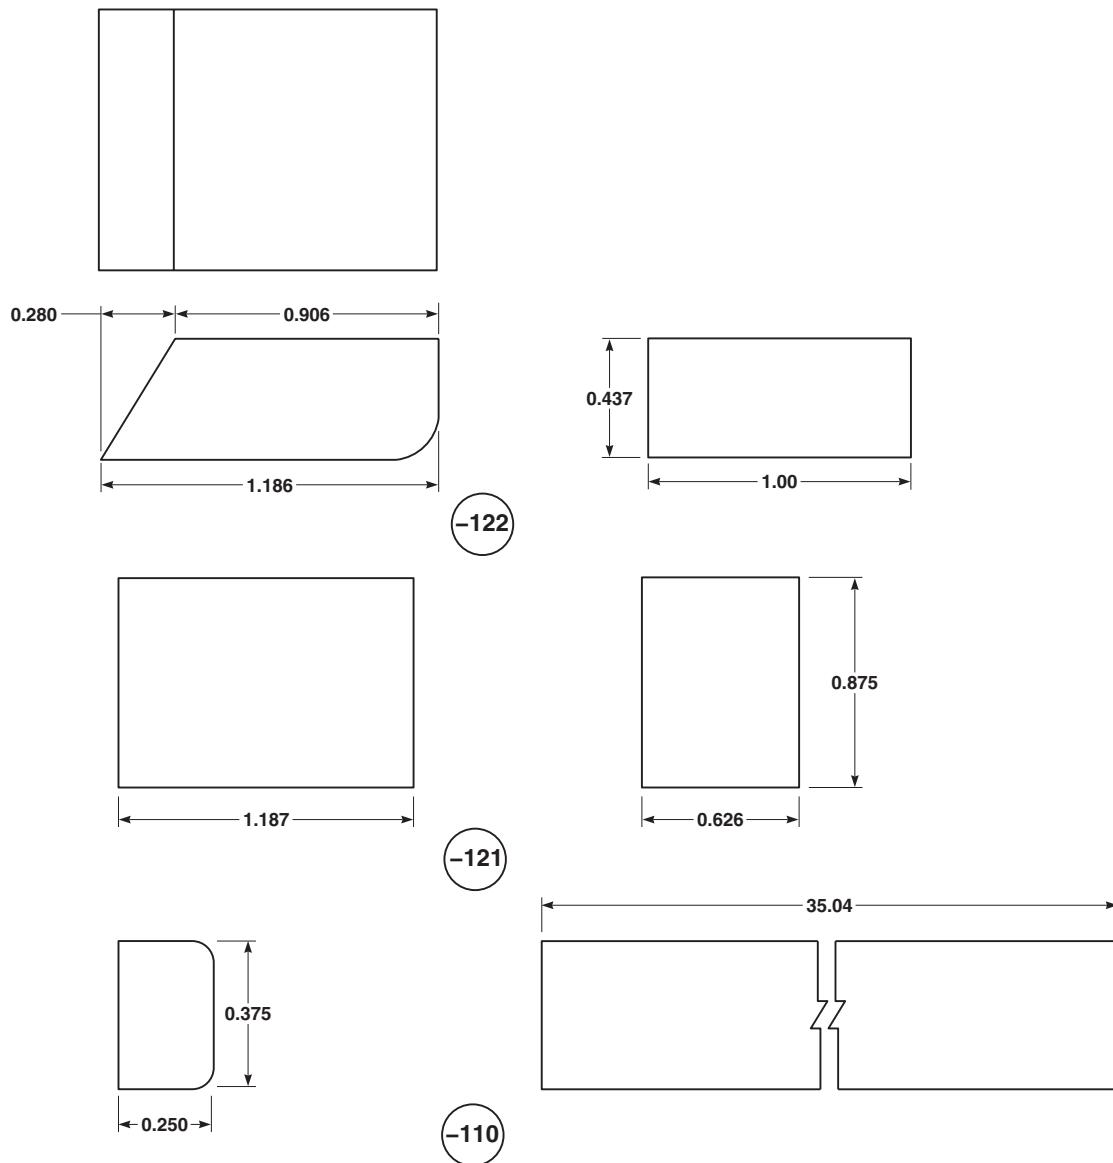


Figure 242. Crew Chief's Window Seal. (Sheet 1 of 2)

## FIELD MANUFACTURE ITEMS - Continued

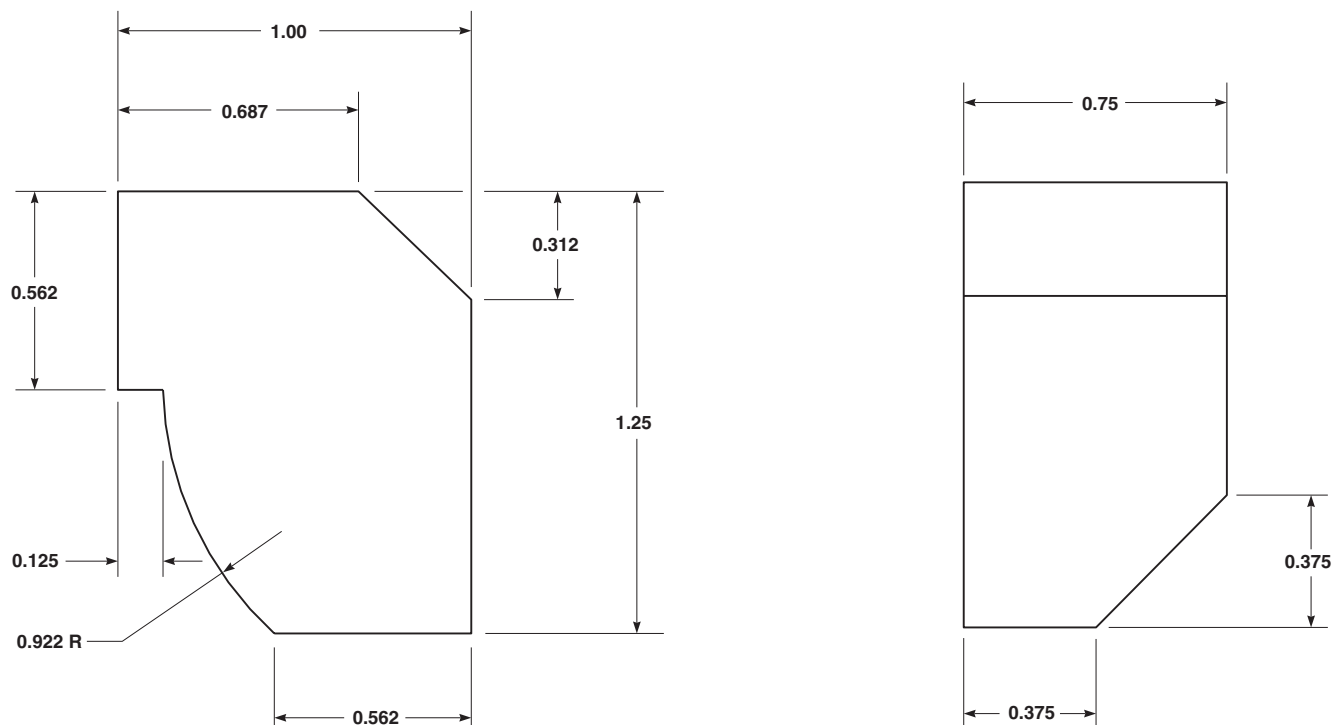

-129

| NOMENCLATURE             | SIKORSKY PART NUMBER |
|--------------------------|----------------------|
| CREW CHIEF'S WINDOW SEAL | 70216-02401-110      |
|                          | 70216-02401-121      |
|                          | 70216-02401-122      |
|                          | 70216-02401-129      |

## NOTES

1. MAKE -122 FROM NEOPRENE, MIL-R-6855, CLASS 2, GRADE 60, 0.437 INCH THICK, NSN 9320-00-800-1819.
2. MAKE 121 FROM NEOPRENE, MIL-R-6855, CLASS 2, GRADE 60, 0.626 INCH THICK, NSN 9320-00-241-9766.
3. MAKE -110 FROM SILICONE SPONGE RUBBER, S6105-2108-2, NSN 5330-00-804-6813.
4. MAKE -129 FROM 0.50 INCH THICK SILICONE SPONGE, AMS 3195, NSN 9320-01-037-2499.
5. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
6. IDENTIFY PARTS PER MIL-STD-190. STAMP OR STENCIL PART NUMBER AND DATE OF MANUFACTURE ON PARTS WITH OPAQUE GREEN INK, TT-I-1795. USE 1/16 TO 1/8 INCH HIGH SANS SERIF CHARACTERS.


EXAMPLE: P/N 70216-02401-107      3Q 86  
                     PART NUMBER      THIRD QUARTER 1986

PART NUMBER: 70216-02401-110, -121, -122, -129

FB2114\_2A  
SA

Figure 242. Crew Chief's Window Seal. (Sheet 2 of 2)

FIELD MANUFACTURE ITEMS - Continued

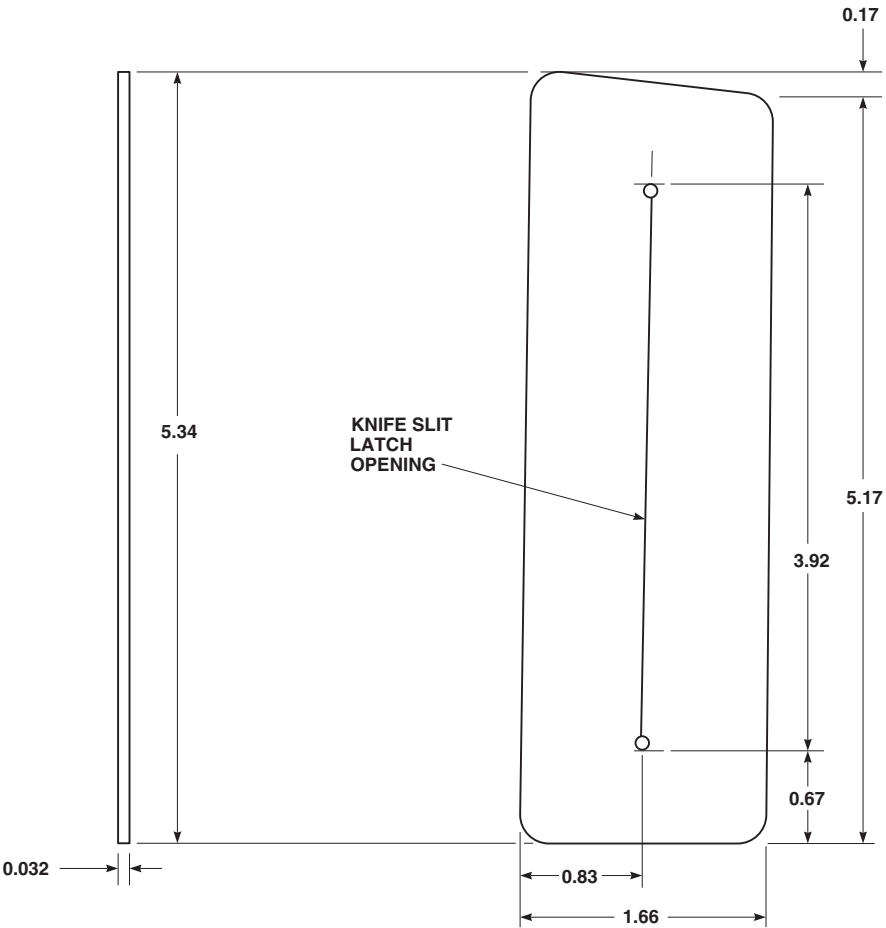

| NOMENCLATURE                   | SIKORSKY<br>PART NUMBER            |
|--------------------------------|------------------------------------|
| CREW CHIEF'S WINDOW LATCH SEAL | 70216-02402-122<br>70216-02402-150 |

NOTES

1. MAKE FROM NEOPRENE, MIL-R-6855, CLASS 2, GRADE 60, 0.032 INCH THICK, NSN 9320-01-157-9069.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. IDENTIFY PARTS PER MIL-STD-190. STAMP OR STENCIL PART NUMBER AND DATE OF MANUFACTURE ON PARTS WITH OPAQUE GREEN INK, TT-I-1795. USE 1/16 TO 1/8 INCH HIGH SANS SERIF CHARACTERS.


EXAMPLE: P/N 70216-02401-107      3Q 86  
PART NUMBER      THIRD QUARTER 1986

PART NUMBER: 70216-02402-122, -150

FB2115A  
SA

Figure 243. Crew Chief's Window Latch Seal.

---

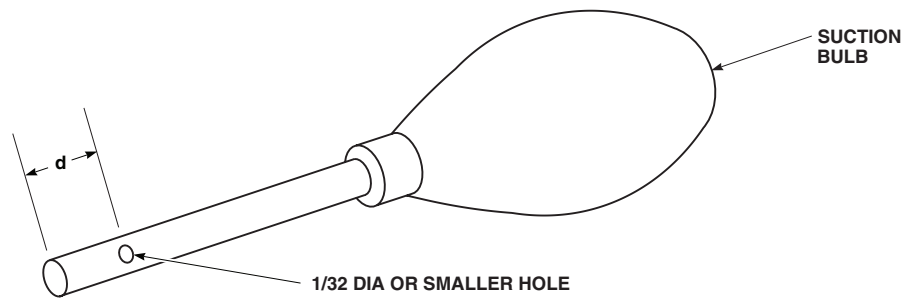
FIELD MANUFACTURE ITEMS - Continued**NOTES**

1. MAKE FROM STANDARD SYRINGE.
2. DRILL 1/32 INCH HOLE IN END OF SYRINGE TUBE AS SHOWN IN DIMENSION "d".
  - A. IF THE ELECTROLYTE LEVEL IS CHECKED ONE HOUR AFTER COMPLETION OF CHARGE, DRILL HOLE 1/4 INCH FROM END OF TUBE.
  - B. IF THE ELECTROLYTE LEVEL IS CHECKED THREE HOURS AFTER COMPLETION OF CHARGE, DRILL HOLE 1/8 INCH FROM END OF TUBE.
3. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.

FB1122A  
SA

Figure 244. Electrolyte Removal Tool.

## FIELD MANUFACTURE ITEMS - Continued

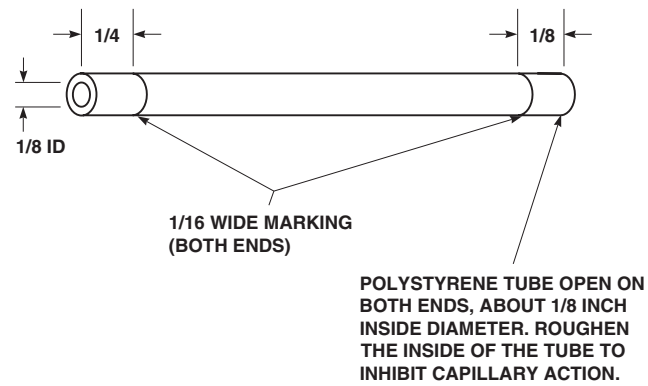

## NOTES

1. MAKE FROM POLYSTYRENE TUBE, 4 INCH LONG, WITH  $\frac{1}{8}$  INCH ID.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. BREAK ALL SHARP EDGES.

FB1121A  
SA

Figure 245. Electrolyte Level Checker.

---

**FIELD MANUFACTURE ITEMS - Continued****PROCEDURE FOR COVERING OF MASTER WARNING PANEL LIGHTS WHILE OPERATING WITH SOFT LIGHTING.**


PRIOR TO SOFT LIGHTING OPERATION, APPLY TAPE MODIFICATION TO THE PILOT'S AND COPILOT'S MASTER WARNING PANELS. THE FOLLOWING PROCEDURES WILL ALLOW THE NAKED EYE TO SEE THE MASTER WARNING LIGHTS IF ACTIVATED, AND PREVENT ADHESIVE BUILD-UP ON THE WARNING SEGMENT PANELS. THE FOLLOWING PROCEDURES WILL BE FOLLOWED:

- a. USING TWO PIECES OF DUCT TAPE, NSN 7510-00-074-5174, (ONE HUNDRED MPH TAPE, GREEN TAPE).
  - (1) CUT FIRST PIECE OF TAPE TO 1-1/4 INCHES WIDE BY 6 INCHES IN LENGTH.
  - (2) CUT SECOND PIECE OF TAPE TO 1 INCH WIDE BY 4 INCHES IN LENGTH. USING A PAPER PUNCH, PUNCH FIVE EACH 1/4 INCH HOLES IN TAPE SO THAT THEY WILL CENTER ON EACH SEGMENT OF THE MASTER CAUTION WARNING PANEL LIGHTS. PLACE THE PIECES OF TAPE TOGETHER TO ENSURE THAT THE ADHESIVE IS TO ADHESIVE AND THAT THE SMALLER PIECE OF TAPE IS CENTERED TO ALLOW APPROXIMATELY 1 INCH OF ADHESIVE TO REMAIN AT EACH END AND 1/8 INCH TO REMAIN AT TOP AND BOTTOM.
  - (3) CENTER THE TAPE OVER THE MASTER WARNING PANEL SO THAT THE EXPOSED ADHESIVE ENDS MATE TO ALL SIDES OF MASTER WARNING PANEL, AND SECURE THE TAPE.
- b. ADJUST THE LIGHT INTENSITY TO MID-INTENSITY POSITION AND INSURE THAT THE LIGHT IS VISIBLE TO THE UNAIDED EYE; FURTHER ADJUST THE LIGHT INTENSITY TO PILOT'S PREFERENCE.
- c. IT IS RECOMMENDED THAT TEMPLATES BE LOCALLY MANUFACTURED FOR BOTH TAPE PIECES.
- d. AFTER COMPLETION OF SOFT LIGHTING FLIGHT, REMOVE TAPE.

FB2129  
SA

Figure 246. Soft Lighting Master Warning Panel.

## FIELD MANUFACTURE ITEMS - Continued

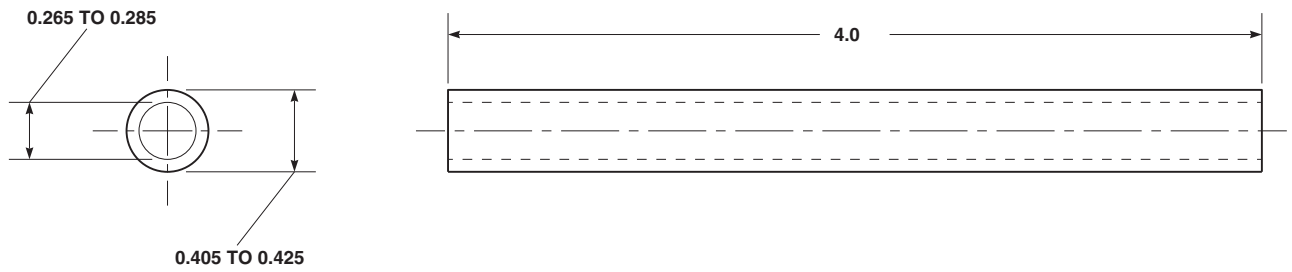


## NOTES

1. MAKE FROM ALUMINUM TUBING.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. IDENTIFY PARTS PER MIL-STD-130.

AK1829A  
SA

Figure 247. Torqueless Grip Installation Tool.

## FIELD MANUFACTURE ITEMS - Continued

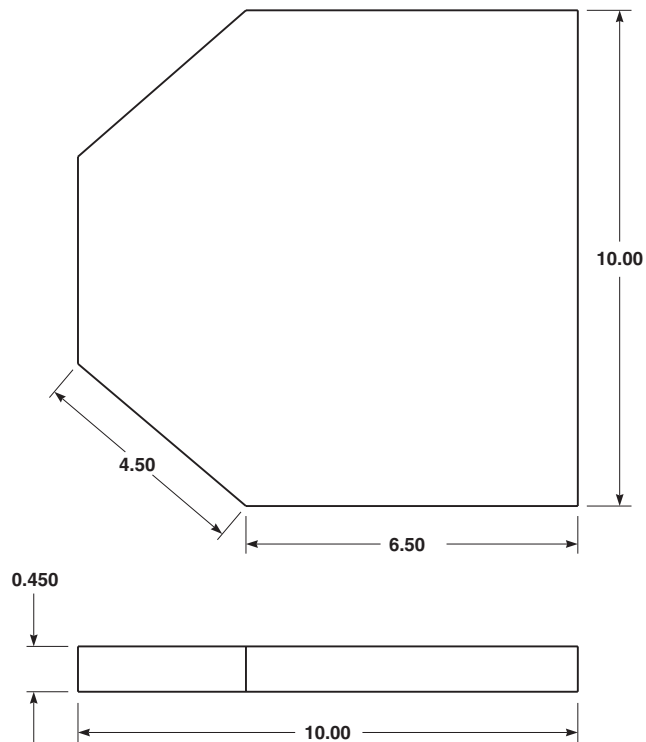

## NOTES


1. MAKE FROM 0.450 INCH THICK STEEL, ALUMINUM, OR WOOD.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. IDENTIFY PARTS PER MIL-STD-130.

AK1830A  
SA

Figure 248. Torqueless Grip Installation Plate.



## FIELD MANUFACTURE ITEMS - Continued

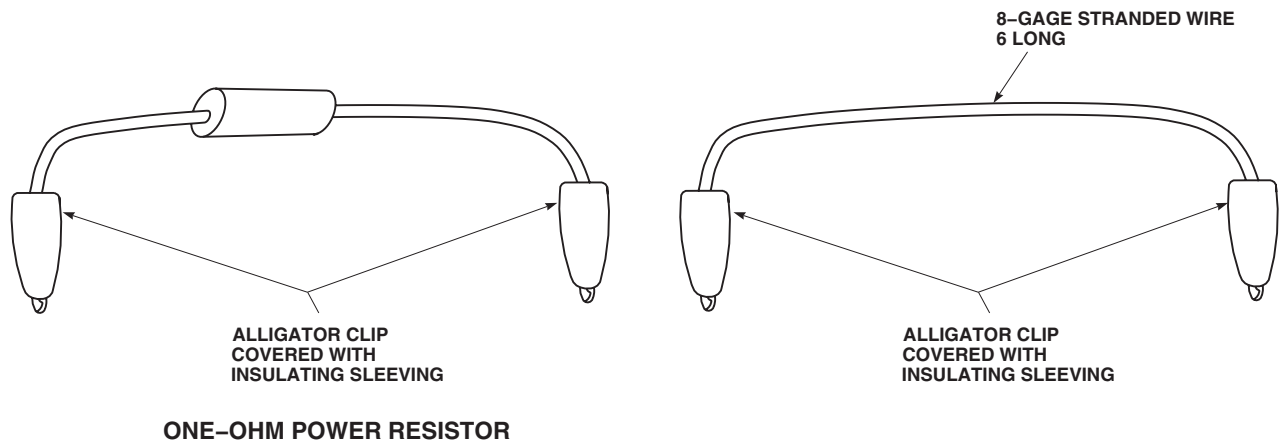


## NOTES

1. MAKE SHORTING CLIPS FROM:
  - A. WIRE, 8 GAGE STRANDED, 6 INCH LONG.
  - B. RESISTOR, ONE-OHM POWER RESISTOR FOR ONE SHORTING CLIPS.
  - C. ALLIGATOR CLIPS WITH INSULATING SLEEVING.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.

FB1120A  
SA

Figure 249. Shorting Jumpers.

## FIELD MANUFACTURE ITEMS - Continued

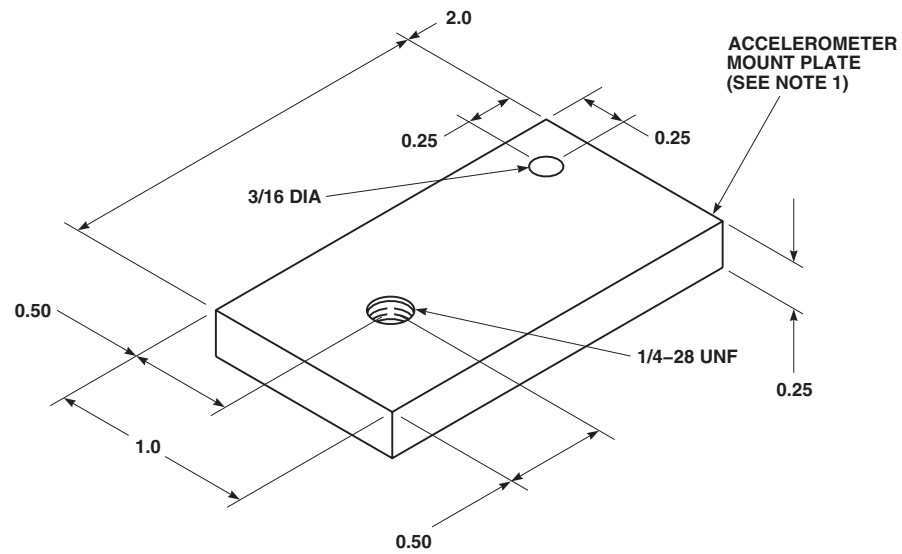


## NOTES

1. MAKE LOCALLY USING STEEL PLATE.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.

AK1798A  
SA

Figure 250. Accelerometer Mount Plate.


## FIELD MANUFACTURE ITEMS - Continued

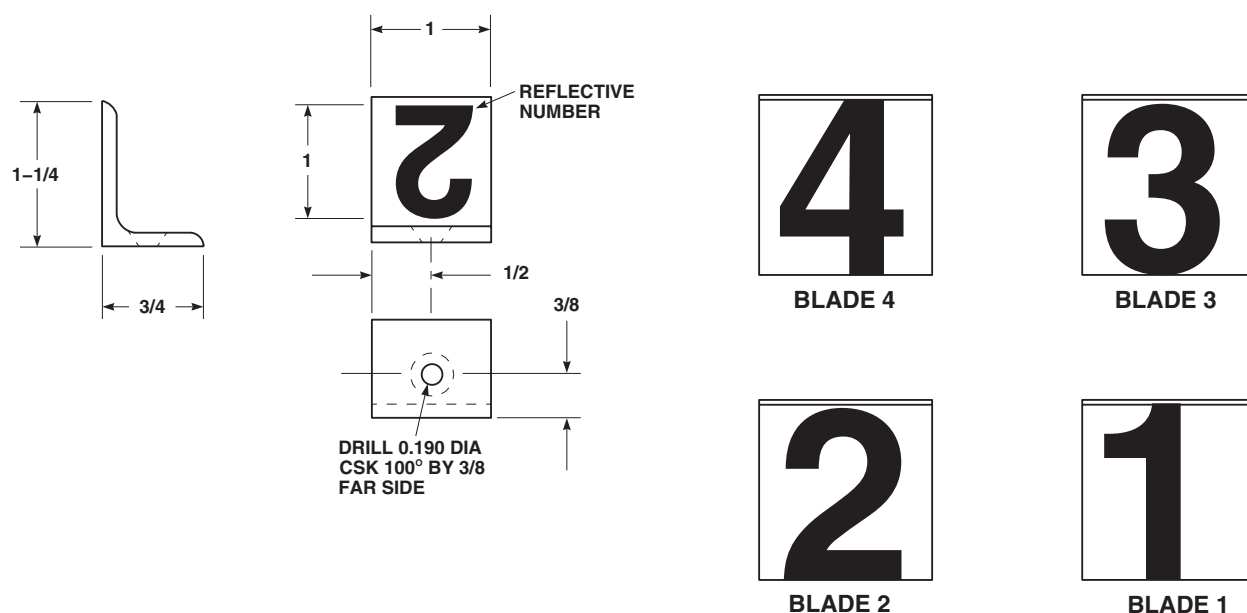

APPLYING  
REFLECTIVE NUMBERS TO TARGETS  
(PRIMARY)

## NOTES


1. MAKE BRACKETS FROM 2024-T4 ALUMINUM ALLOY OR EQUIVALENT.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. MAKE PRIMARY TIP TARGET NUMBERS USING HIGH GRAIN REFLECTIVE TAPE, 1 INCH HIGH AND 1/8 INCH WIDE.
4. MAKE ALTERNATOR TIP TARGET MARKINGS USING HIGH GRAIN REFLECTIVE TAPE, CUT TO 1/8 INCH WIDE.
5. CLEAN ALL TIP TARGETS USING ALCOHOL, ITEM 48, WP 1803 00.
6. REMOVE BACKING PAPER FROM REFLECTIVE TAPE. AVOID CONTACT WITH ADHESIVE ON REFLECTIVE TAPE.
7. POSITION REFLECTIVE TAPE ON BRACKET AS SHOWN. CENTER NUMBER ON TIP TARGET BRACKET. PRESS INTO PLACE. MAKE SURE EDGES OF NUMBERS ARE SECURED.
8. DO 6. AND 7. TO INSTALL REMAINING MARKING ON TIP TARGET BRACKETS.
9. IDENTIFY MAIN ROTOR TIP TARGETS PER MIL-STD-130.

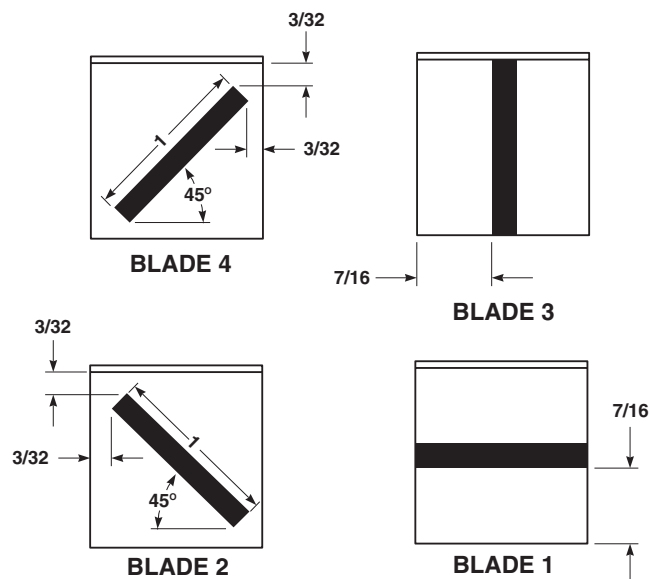

APPLYING  
REFLECTIVE TAPE TO TARGETS  
(ALTERNATE)

Figure 251. Main Rotor Blade Tip Targets.

FIELD MANUFACTURE ITEMS - Continued

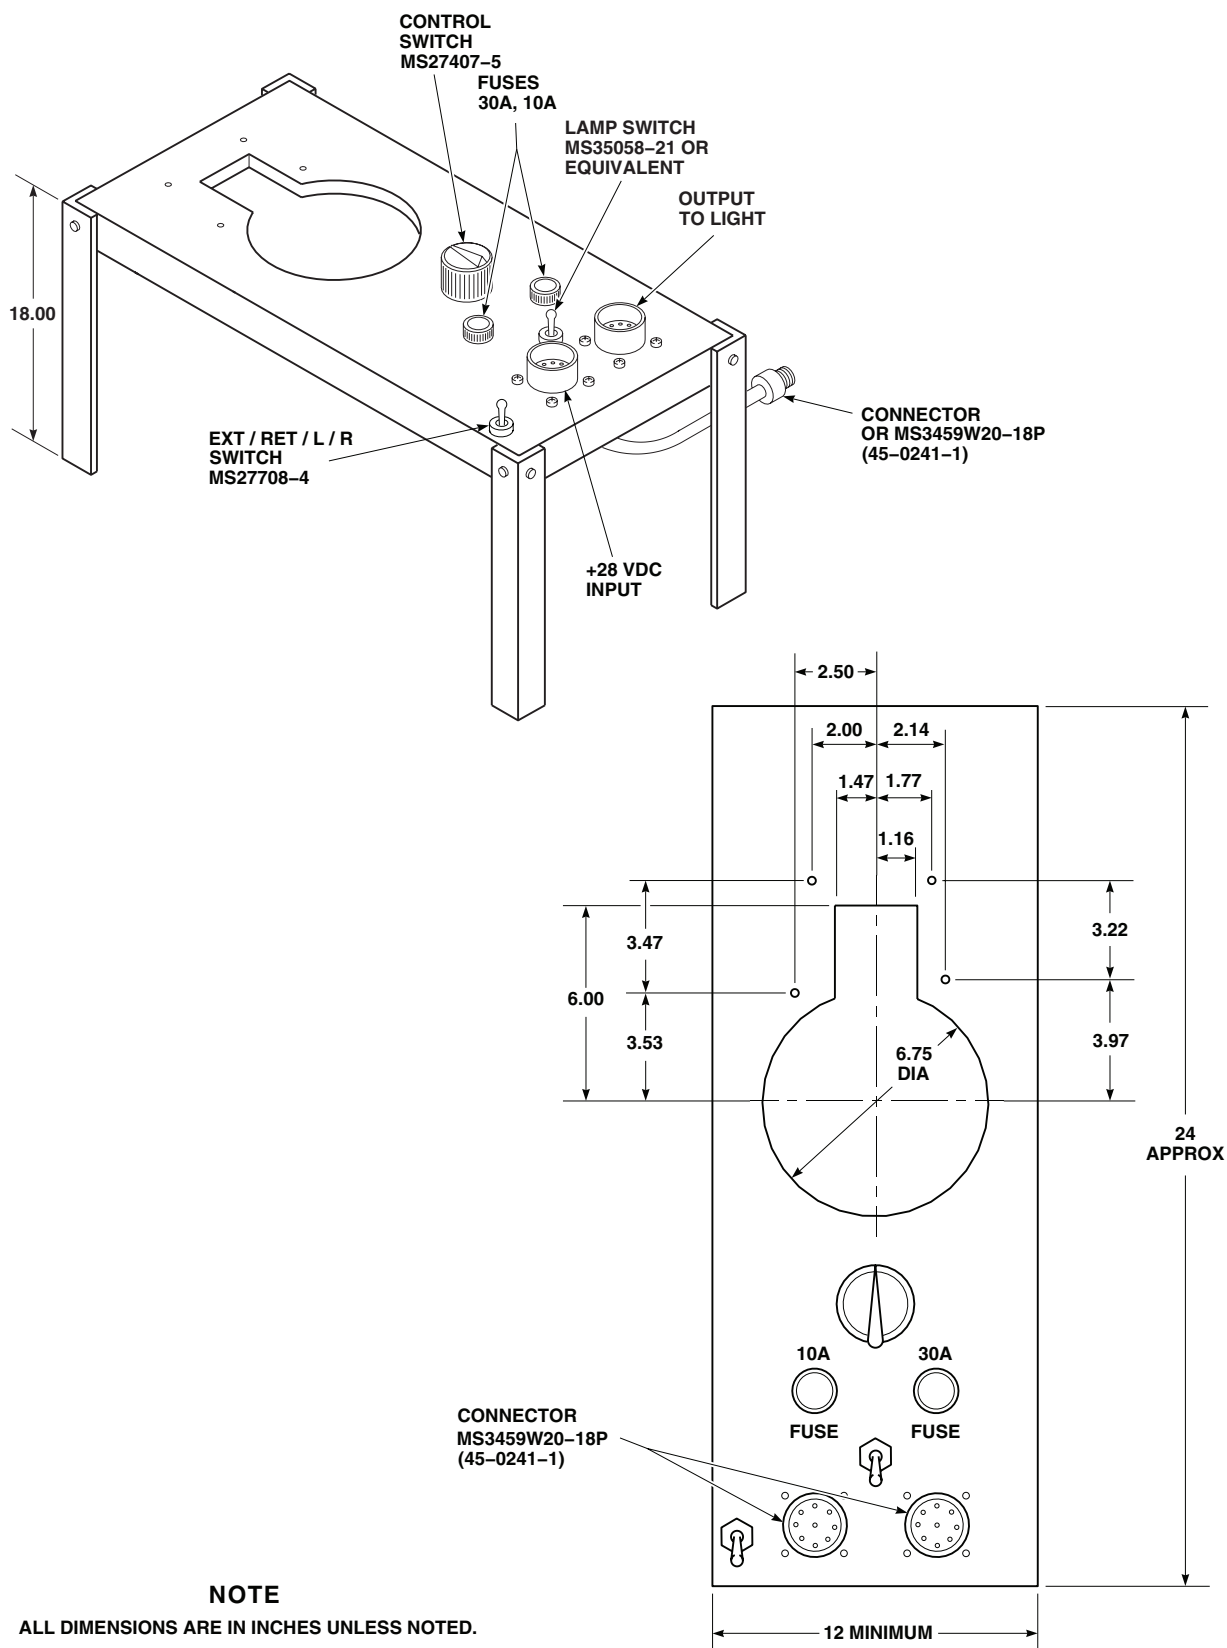

AB0793\_1B  
SA

Figure 252. Searchlight Test Stand. (Sheet 1 of 2)

## FIELD MANUFACTURE ITEMS - Continued


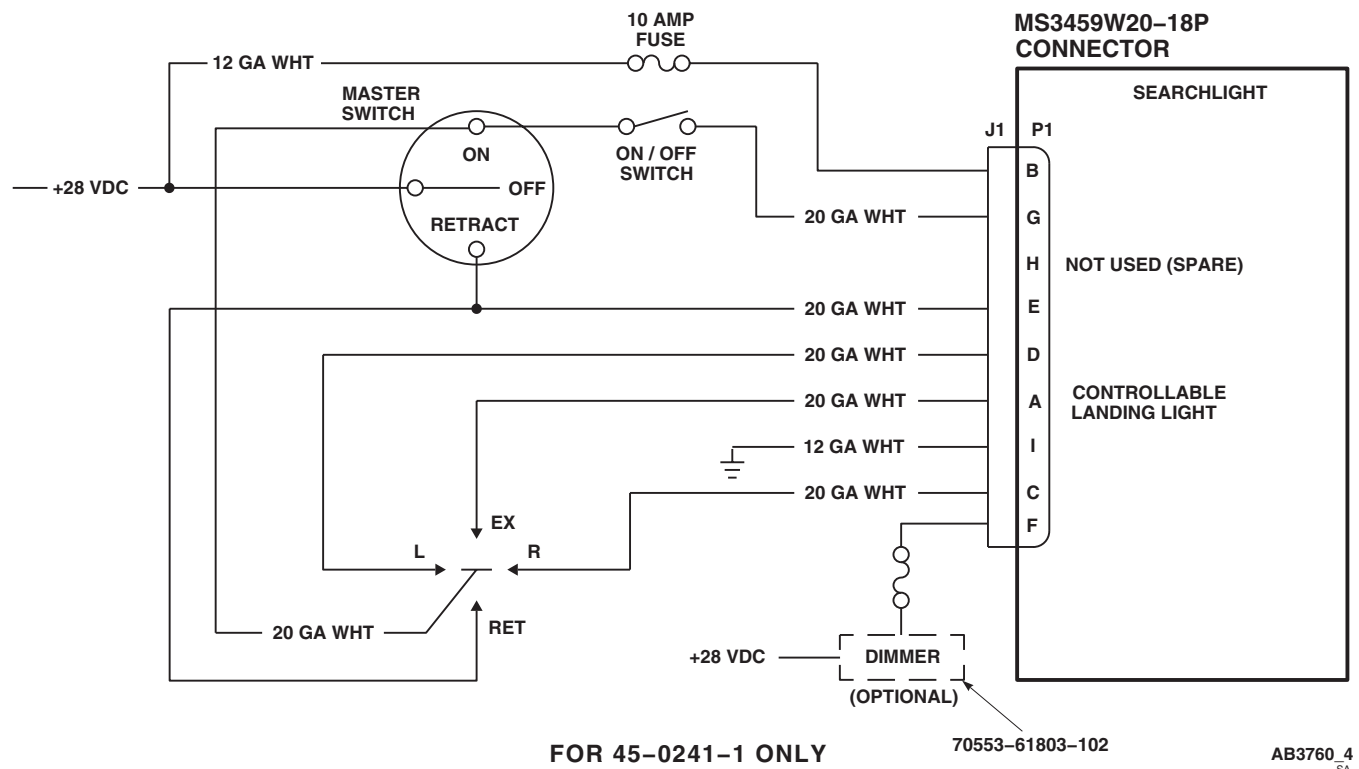


Figure 252. Searchlight Test Stand. (Sheet 2 of 2)

FIELD MANUFACTURE ITEMS - Continued

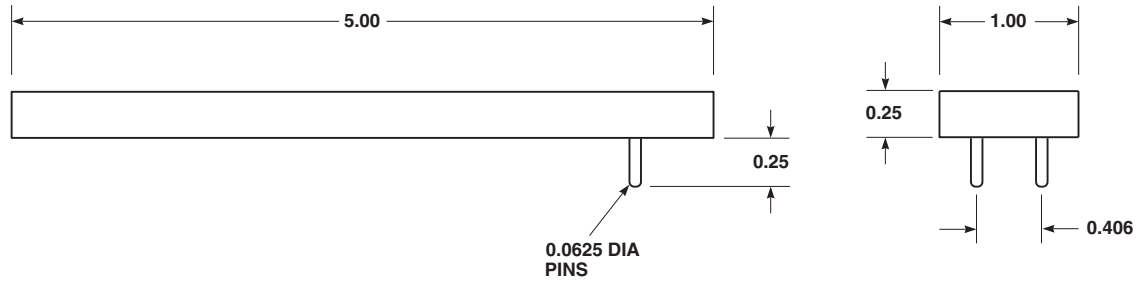


NOTE

1. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
2. MATERIAL: 7075 ALUMINUM.

AB0794A  
SA

Figure 253. Searchlight Spanner Wrench.

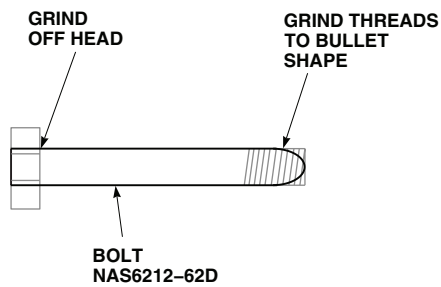

AB0796  
SA

Figure 254. Stabilator Drift Pin.

FIELD MANUFACTURE ITEMS - Continued


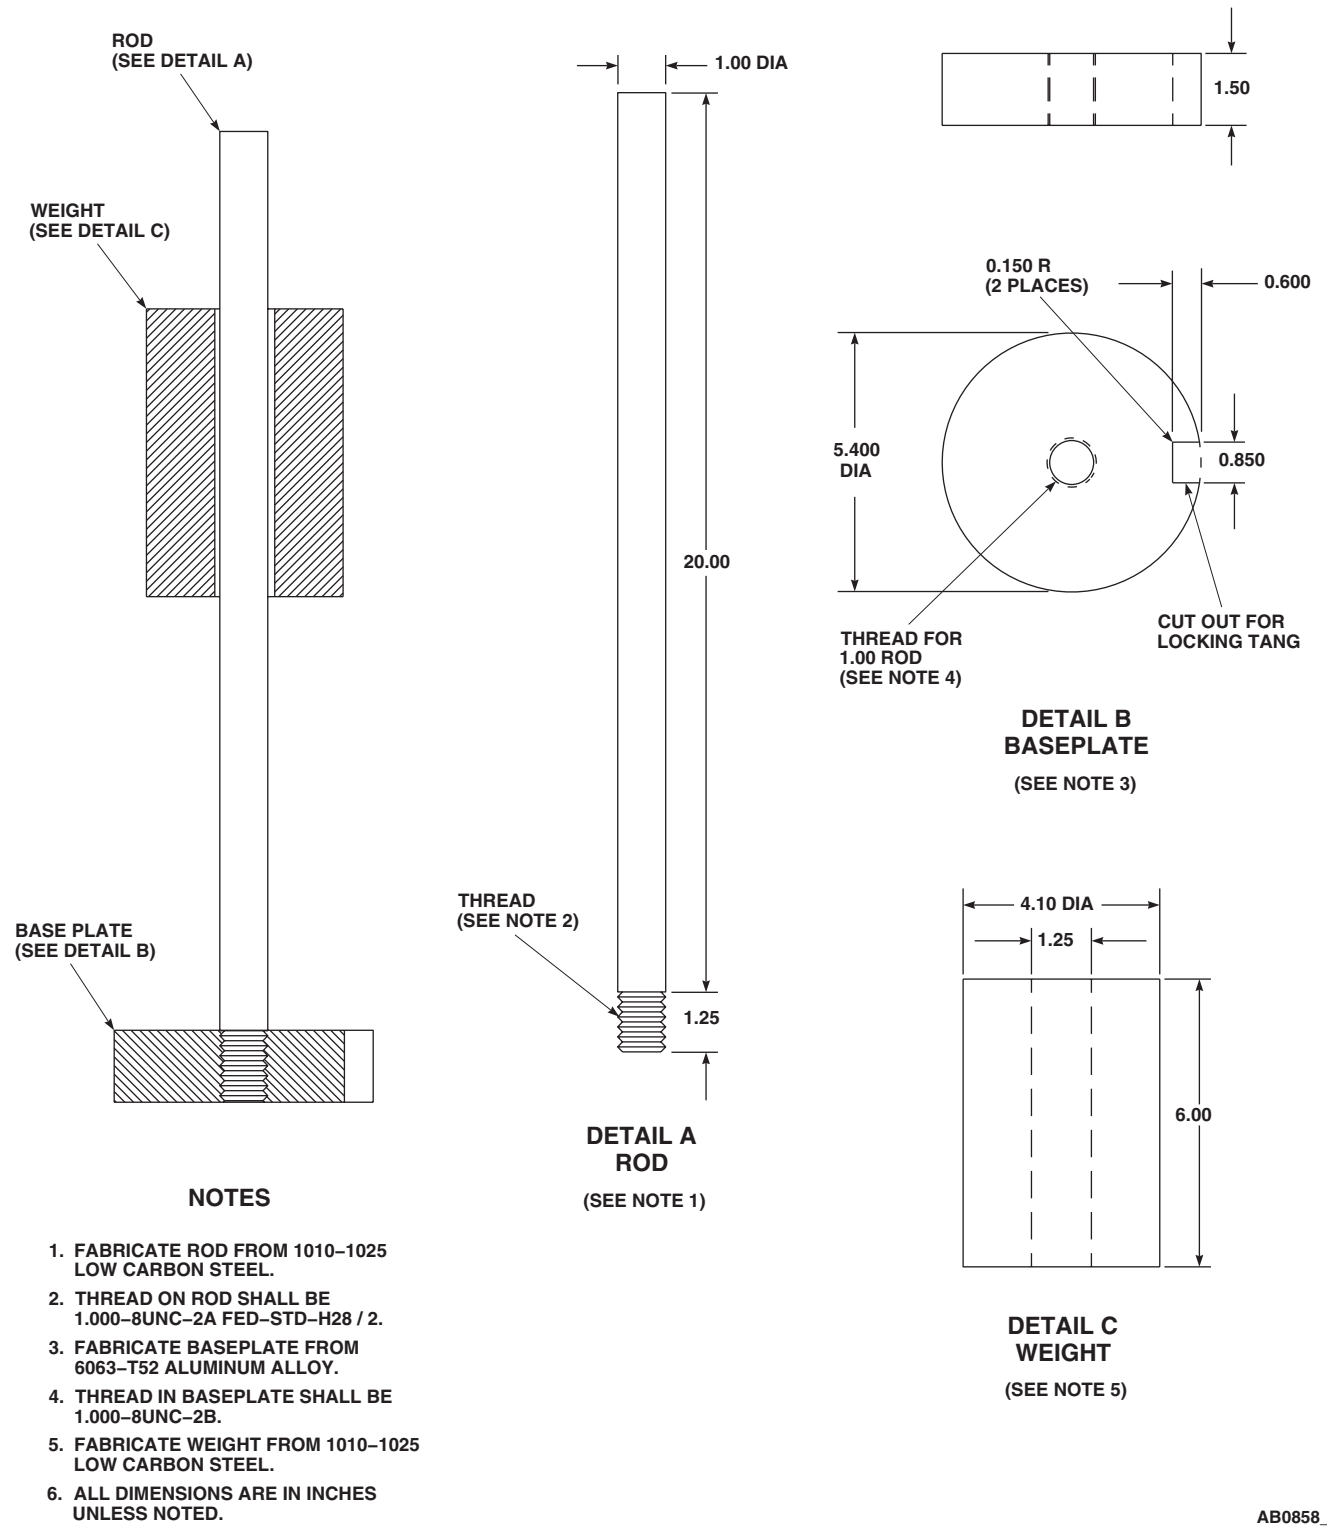


Figure 255. Main Rotor Shaft Impact Tool.

## FIELD MANUFACTURE ITEMS - Continued

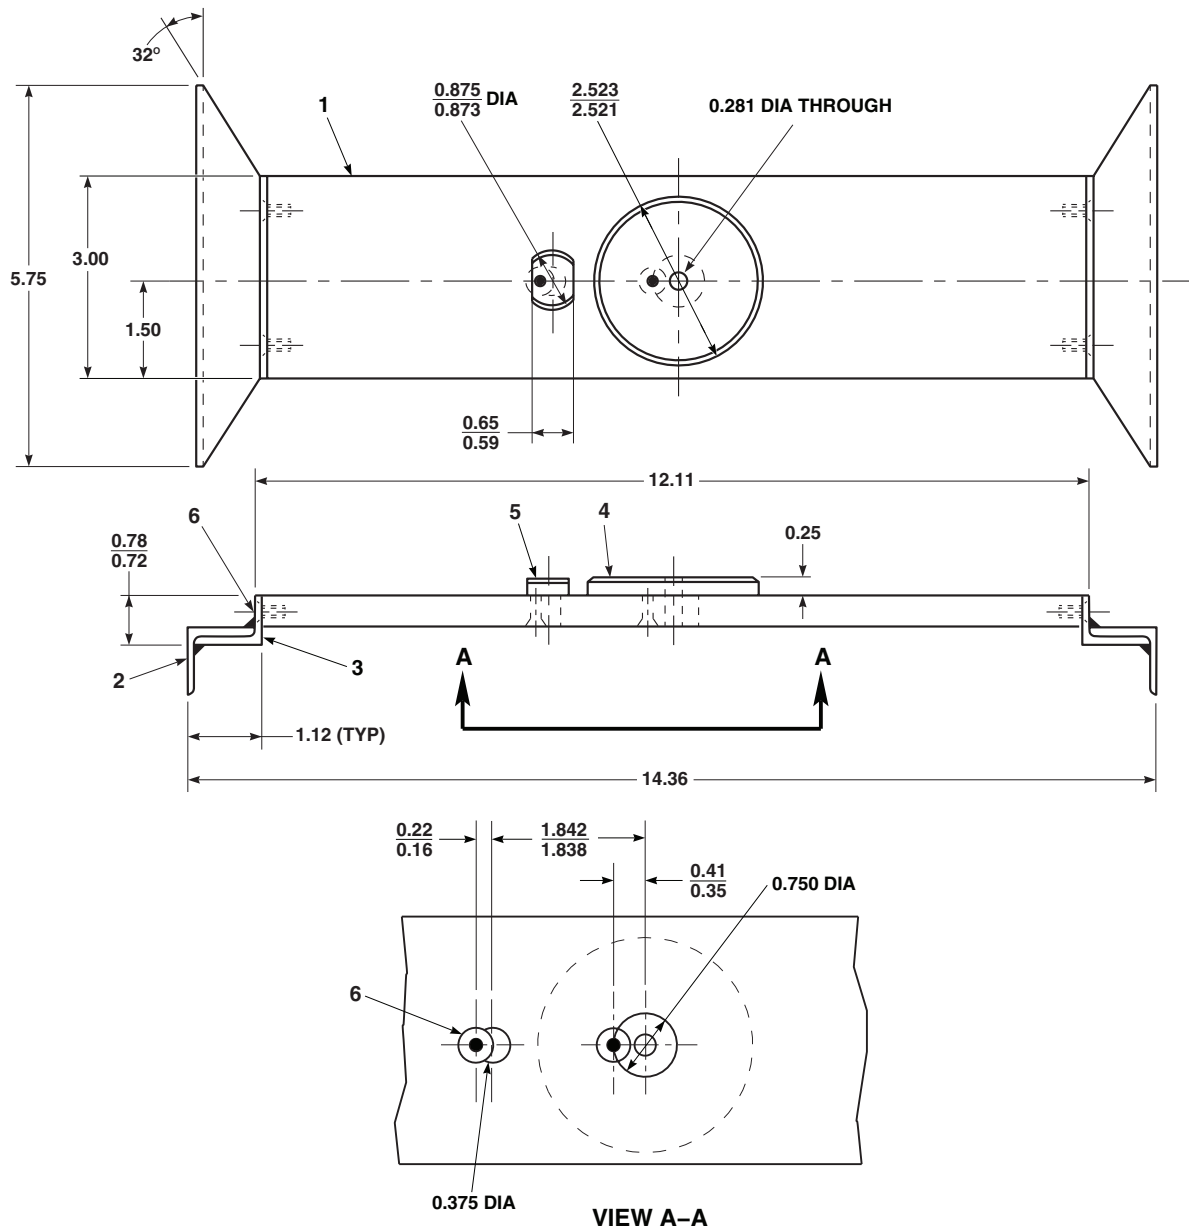

## NOTES

1. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
2. BREAK ALL SHARP EDGES 0.005 TO 0.015 RADIUS.
3. HOLE PREPARATION AND WELDING SHALL BE BEST TOOL MAKING PRACTICES.
4. TOLERANCES:  
ANGULAR  $\pm 5^\circ$   
LINEAR X.XX  $\pm 0.03$   
X.XXX  $\pm 0.010$
5. SYMBOL:  
Ø DIAMETER


| ITEM NO. | NOMENCLATURE    | SIZE/MATERIAL                                   |
|----------|-----------------|-------------------------------------------------|
| 1        | PLATE           | 0.50 BY 3.00 BY 12.38<br>QQ-A-250 / 12F, 7075T6 |
| 2        | ANGLE           | 1.00 BY 1.00 BY 0.125<br>QQ-A-200 / 3F, 2024T3  |
| 3        | ANGLE           | 1.00 BY 1.00 BY 0.125<br>QQ-A-200 / 3F, 2024T3  |
| 4        | LOCATOR         | 2.63 Ø BY 1.00<br>QQ-A-200 / 3F, 2024T3         |
| 5        | LOCATOR         | 1.00 Ø BY 1.00<br>QQ-A-200 / 3F, 2024T3         |
| 6        | SCREW, FLATHEAD | NO. 10-24 BY 0.375                              |

AB2657  
SA

Figure 256. Boot Support Locator.



## FIELD MANUFACTURE ITEMS - Continued

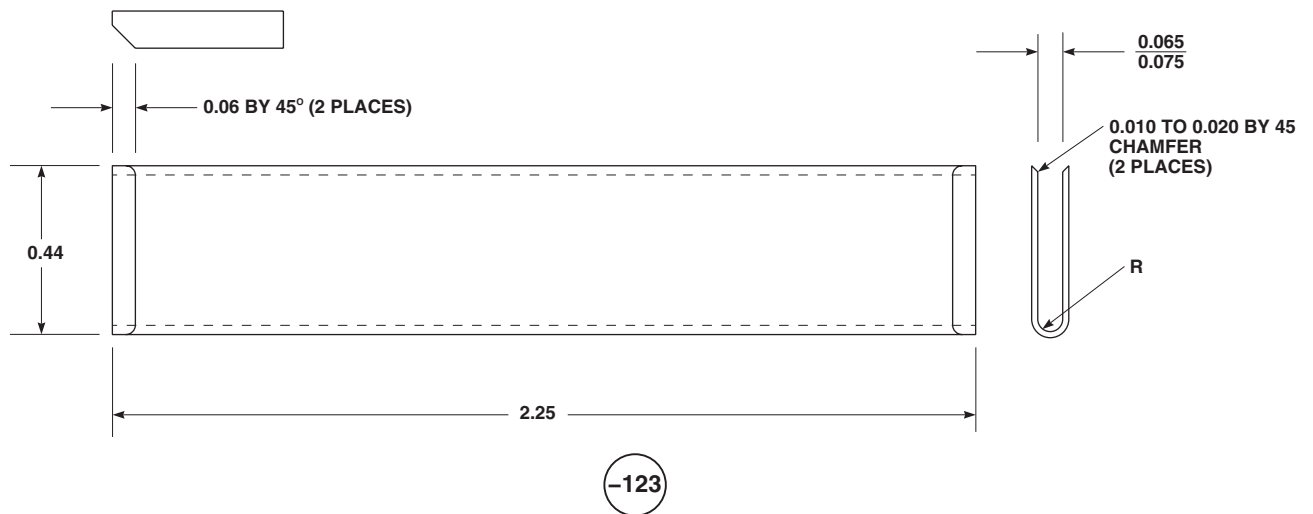

## NOTES


1. MAKE FROM MIL-S-5059, CLASS 301, 1/4 HARD, 0.032 INCH THICK.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. IDENTIFY PARTS PER MIL-STD-130.

PART NUMBER: 70216-02407-123

AB0954A  
SA

Figure 257. Wear Strip.

FIELD MANUFACTURE ITEMS - Continued

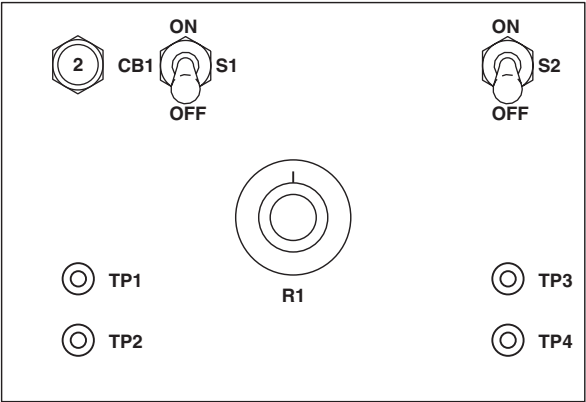


FRONT PANEL



FB4393\_1  
SA

Figure 258. Battery Sensor Relay Tester. (Sheet 1 of 3)

FIELD MANUFACTURE ITEMS - Continued

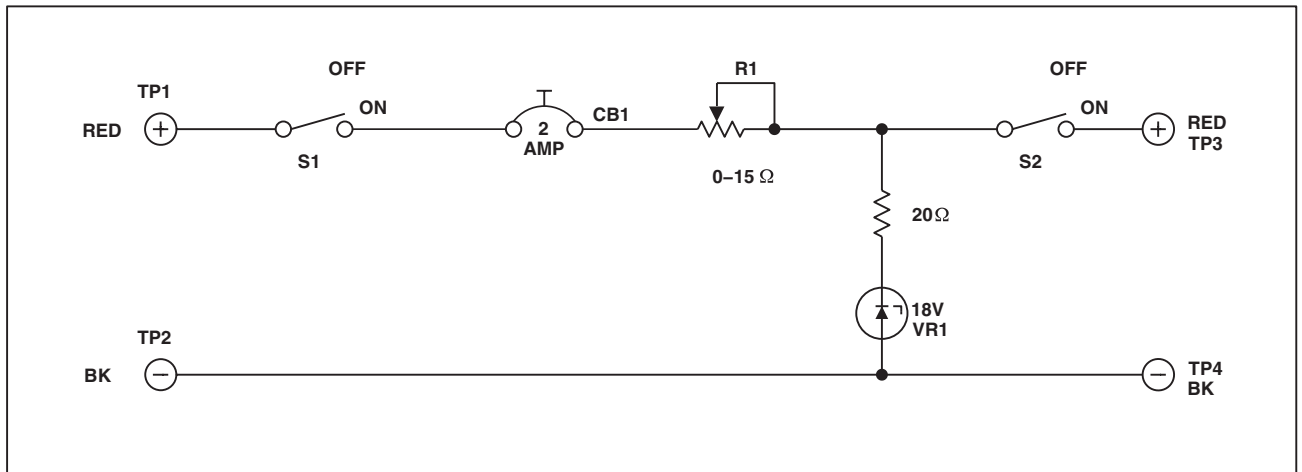

SCHEMATIC

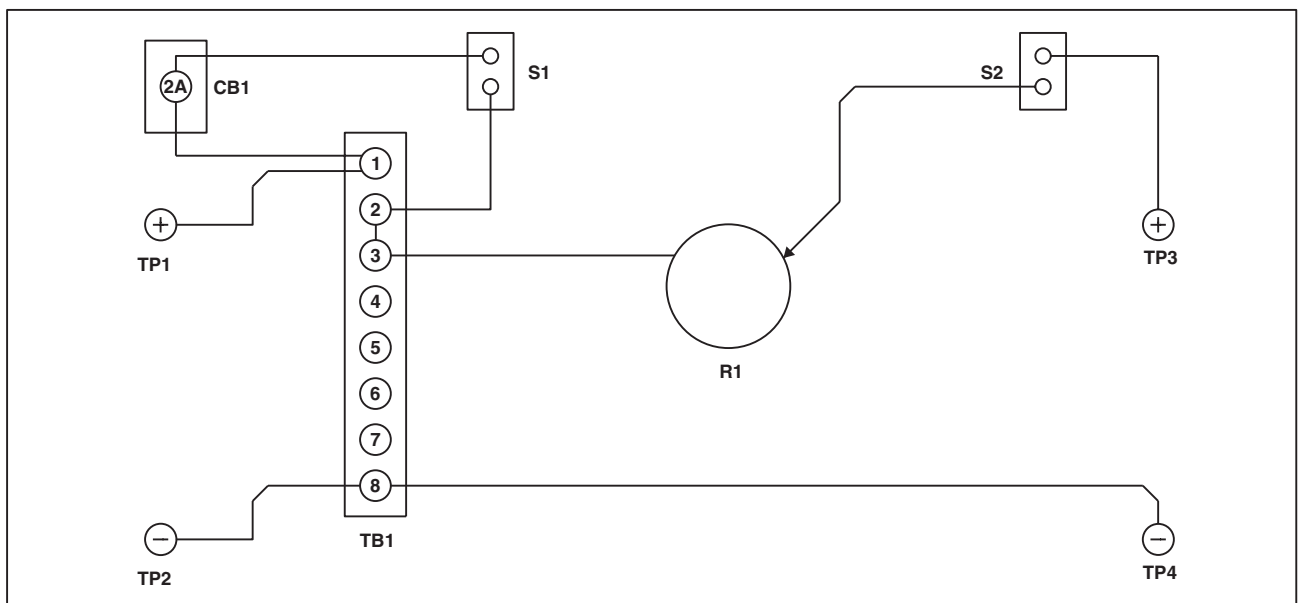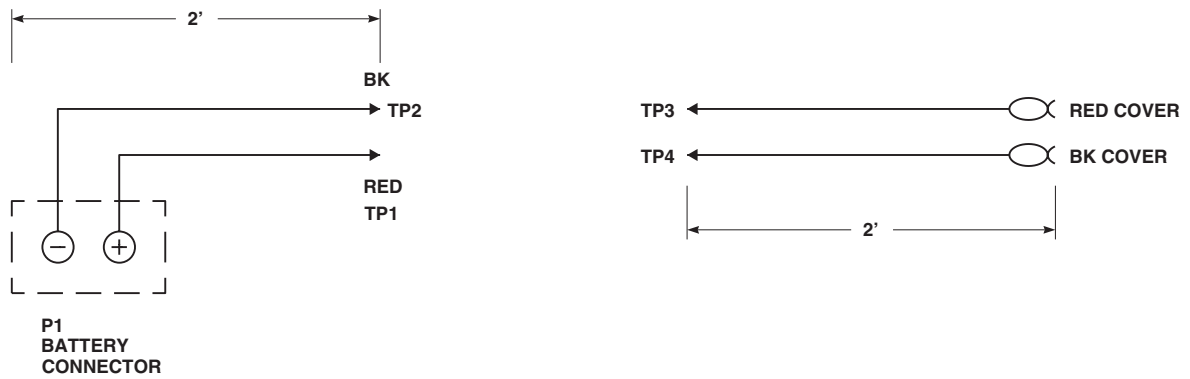

WIRING DIAGRAM


FB4393\_2  
SA

Figure 258. Battery Sensor Relay Tester. (Sheet 2 of 3)

## FIELD MANUFACTURE ITEMS - Continued

| CIRCUIT PART NO/PARTS LIST/QTY                                  | PART NUMBER/CAGE            | STOCK NUMBER                               | QUANTITY |
|-----------------------------------------------------------------|-----------------------------|--------------------------------------------|----------|
| (P1) BATTERY PLUG                                               | MS25182-2 / 96906           | 9N-5935-00-686-0447                        | 1        |
| BUD BOX                                                         | CU-347 / 71218              | 9G-5975-00-124-2980                        | 1        |
| (R1) RHEOSTAT 0-15 OHMS @ 12.5 WATTS                            | 1159 / 17745                | 9N-5905-00-193-2098                        | 1        |
| KNOB FOR RHEOSTAT                                               | 452 / 17745                 | 9Z-5355-01-044-2843                        | 1        |
| DIAL FOR R1                                                     | 14F2604 / 17745             | 9Z-5355-01-044-2811                        | 1        |
| (TB1) 8 POST TERMINAL BLOCK                                     | MS27212-1-8 / 96906         | 9G-5940-00-950-1610                        | 1        |
| (R1) 20 OHM 1 WATT $\pm 10\%$                                   | RCR 32G200JP / 818349       | 9N-5905-00-106-1277                        | 1        |
| (VR1) 18V 5 WATT ZENER                                          | 1N5355B / 04713             | 9N-5961-00-422-3719                        | 1        |
| 20 AWG WIRE                                                     | MS22759 / 43-20-9 / 81349   | 9N-6145-01-195-3394                        | 3 FEET   |
| TERMINAL LUGS                                                   | MS25036-101 / 96906         | 9G-5940-00813-0698                         | 24       |
| TERMINAL LUGS                                                   | MS25036-27                  | 5940-00-557-4340                           | 2        |
| (S1, S2) SPST                                                   | (23F337) MS24523-23 / 91929 | 9N-5930-01-065-2684                        | 2        |
| (CB1) CIRCUIT BREAKER 2 AMP (2CT12-2)                           | MS3320-2 / 96906            | 9N-5925-00-224-7425                        | 1        |
| (TP1, TP3) RED 5 WAY BIND PST                                   | 899-102                     | 9N-5940-00-269-2220                        | 2        |
| (TP2, TP4) BK 5 WAY BIND POST                                   | 899-103                     | 9G-5940-00-269-2219                        | 2        |
| BLACK BANANA PLUG<br>RED BANANA PLUG                            | MIL-39024<br>MIL-39024      | 9N-5935-00-762-0312<br>9N-5935-01-033-5275 | 2<br>2   |
| BOOT, ALLIGATOR BLACK<br>BOOT, ALLIGATOR RED<br>ALLIGATOR CLIPS | 331-BLACK<br>331-RED        | 4935-01-302-8186<br>4935-01-302-8185       | 1<br>1   |

## FIELD MANUFACTURE ITEMS - Continued

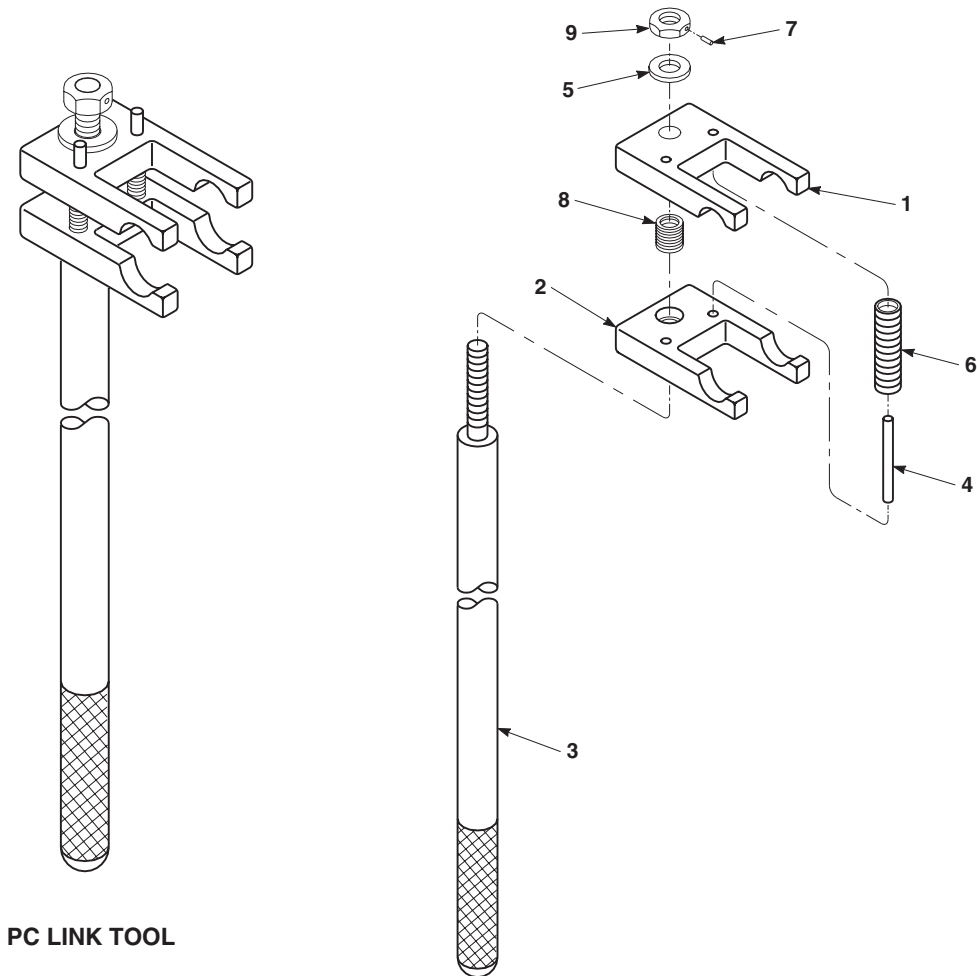


| ITEM NO. | PART NO.  | CAGE NO. | NOMENCLATURE   | SIZE/MATERIAL                        | QTY |
|----------|-----------|----------|----------------|--------------------------------------|-----|
| 1        |           |          | TOP            | ALUM PLT, 6061-T6, 1.00 THK          | 1   |
| 2        |           |          | BOTTOM         | ALUM PLT, 6061-T6, 1.00 THK          | 1   |
| 3        |           |          | HANDLE         | ALUM BAR, 6061-T6, 1.00 OD           | 1   |
| 4        |           | 39428    | PIN            | STL, 0.25 OD BY 3.50 LONG            | 2   |
| 5        | 90126A033 | 39428    | WASHER, FLAT   | STL, 0.531 ID BY 1.06 ID             | 1   |
| 6        | LC049HL-8 |          | SPRING         | 0.660 OD BY 0.042 WIRE BY 1.875 LONG | 2   |
| 7        | 90692A179 | 39428    | PIN, SPRING    | STL, 0.125 DIA BY 0.625 LONG         | 1   |
| 8        | SRW503    | 39428    | HELICAL INSERT | STL, 0.50-13                         | 1   |
| 9        | 93839A823 | 39428    | NUT, THIN HEX  | STL, 0.50-13                         | 1   |

AB1094\_1C  
SA

Figure 259. Pitch Control Link Tool. (Sheet 1 of 2)


FIELD MANUFACTURE ITEMS - Continued

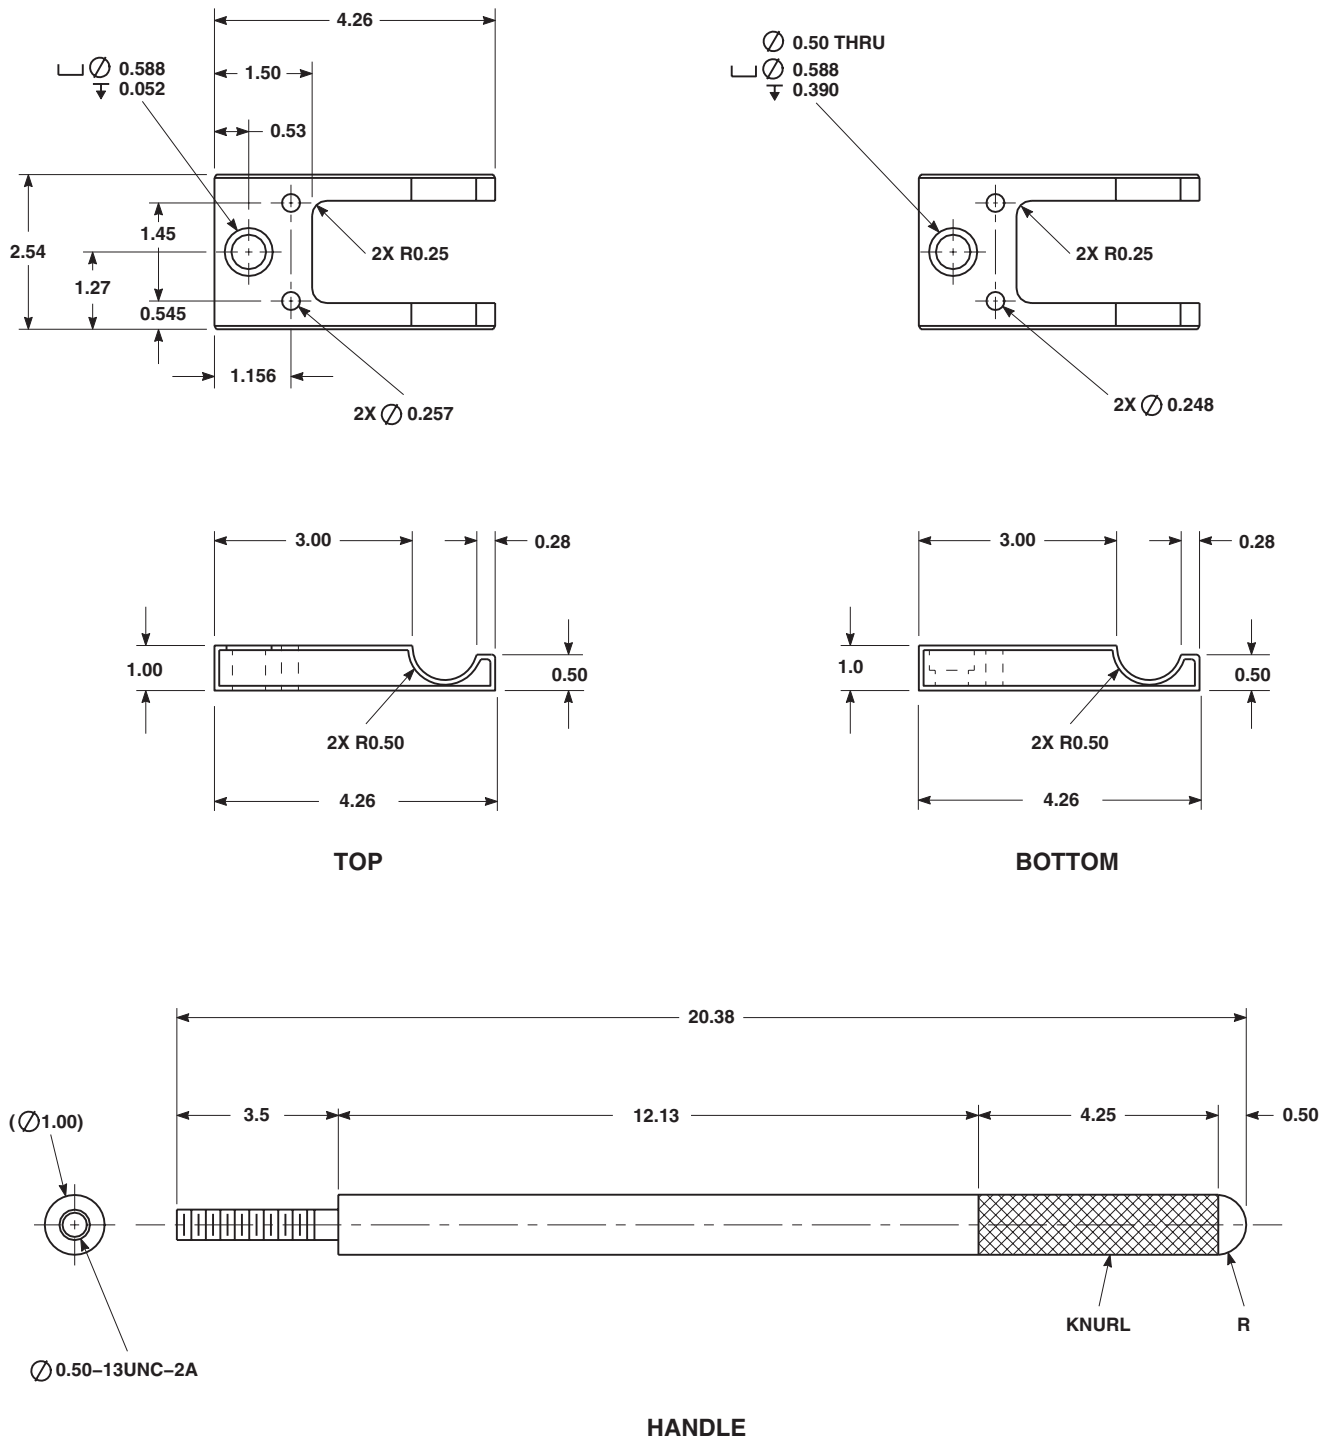

AB1094\_2A  
SA

Figure 259. Pitch Control Link Tool. (Sheet 2 of 2)

## FIELD MANUFACTURE ITEMS - Continued

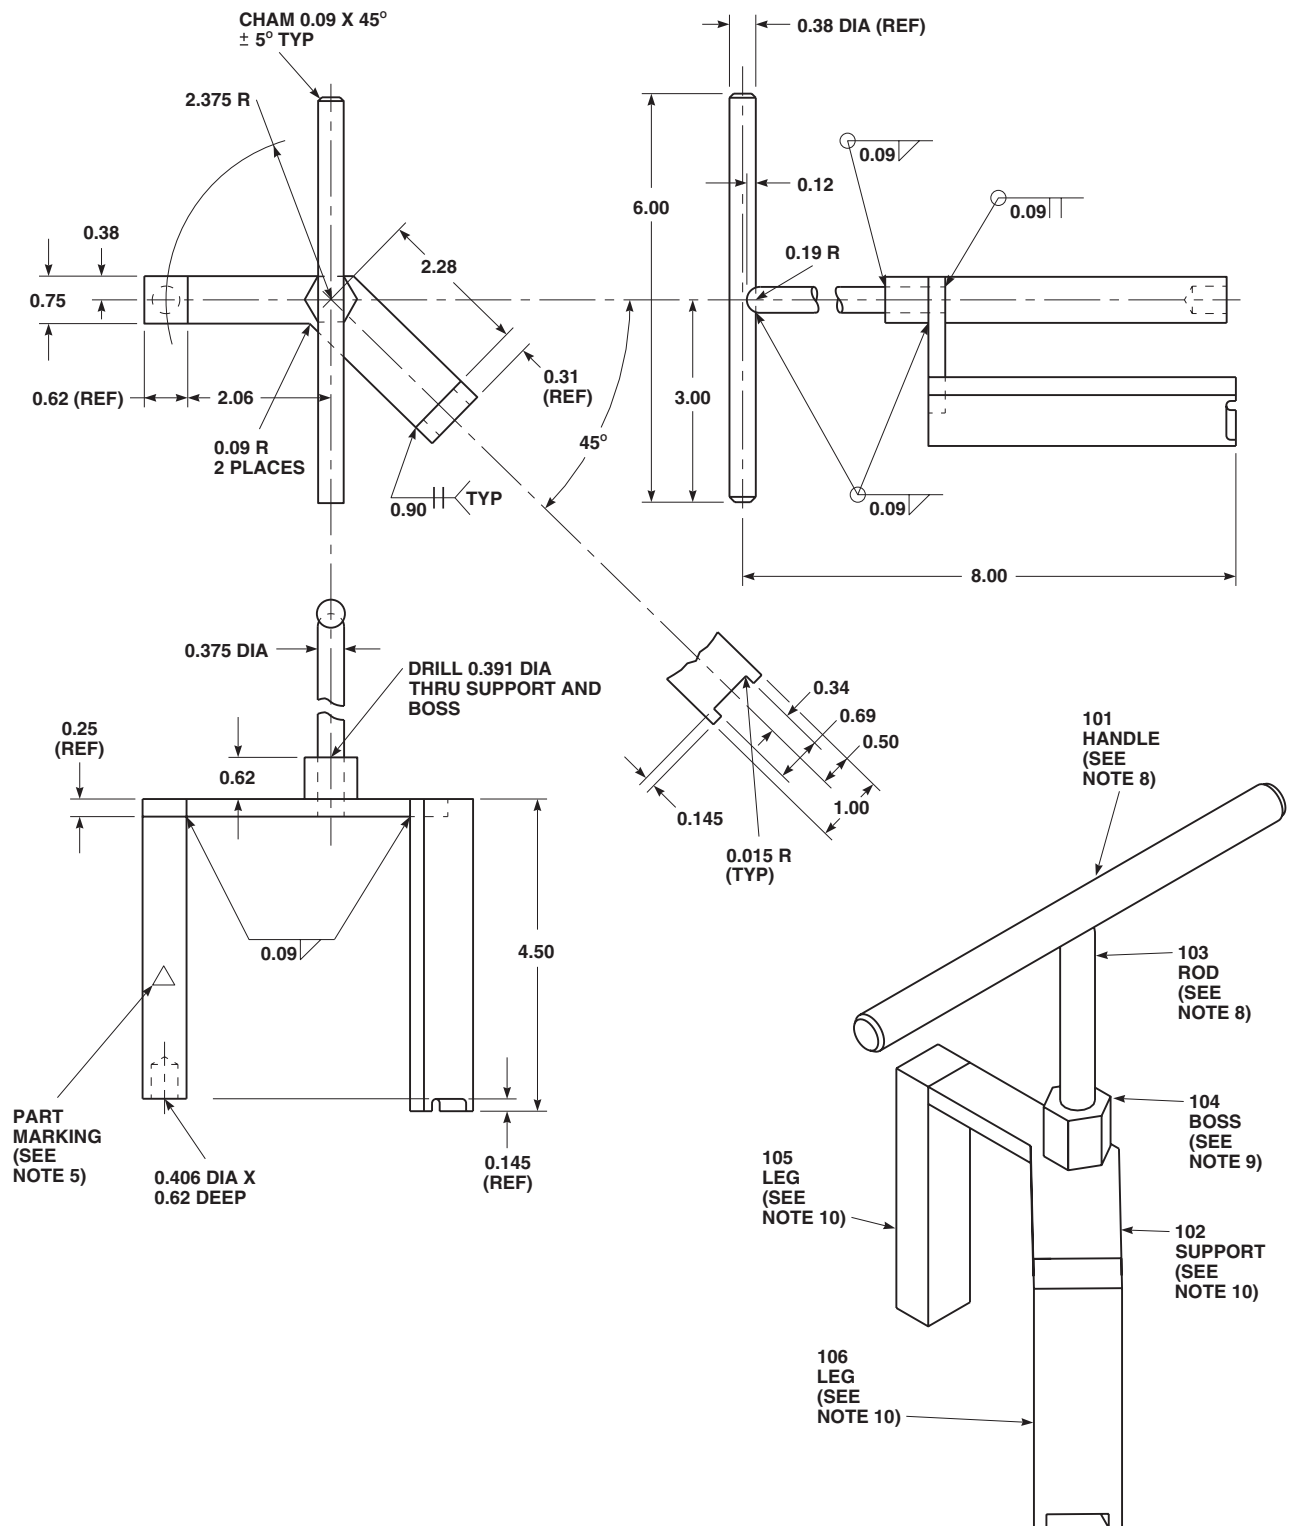

**POSITIONER ASSEMBLY**  
70700-20403-041

AB1095\_1  
SA

Figure 260. Positioner Tool. (Sheet 1 of 2)

## FIELD MANUFACTURE ITEMS - Continued

## NOTES


1. ALL DIMENSIONS ARE IN INCHES  
UNLESS NOTED.
2. BREAK ALL SHARP EDGES 0.005 TO 0.015  
RADIUS UNLESS OTHERWISE NOTED.
3. 125 MICROINCH SURFACE FINISH  
ON ALL MACHINED SURFACES.
4. WELD PER MIL-W-8611 USING  
MIL-R-5632, CALSS 2, TYPE 3, FILLER  
WIRE.
5. IMPRESSION STAMP 70700-20403-041  
IN LOCATION SHOWN.
6. TOLERANCES UNLESS OTHERWISE  
NOTED:  
    ANGULAR  $\pm 0^{\circ} 30'$   
    LINEAR (EXCEPT HOLES):  
        X.XX  $\pm 0.03$   
        X.XXX  $\pm 0.010$
7. AFTER WELDING AND BEFORE FINISH  
MACHINING, HEAT TREAT TO 125,000 PSI  
MINIMUM ROCKWELL C 26-33, PER  
MIL-4-6875.
8. MAKE FROM 4130 STEEL, CONDITION C  
(MIL-S-6758), ROD STOCK, 0.375 INCH  
DIAMETER.
9. MAKE FROM 4130 STEEL, CONDITION C  
(MIL-S-6758), HEX STOCK, 0.750 INCH  
ACROSS FLATS.
10. MAKE FROM 4130 STEEL, CONDITION N  
(MIL-S-18729).
11. CADMIUM PLATE ASSEMBLY PER  
QQ-P-416, CL 2, TYPE II.

AB1095\_2A  
SA

Figure 260. Positioner Tool. (Sheet 2 of 2)



## FIELD MANUFACTURE ITEMS - Continued

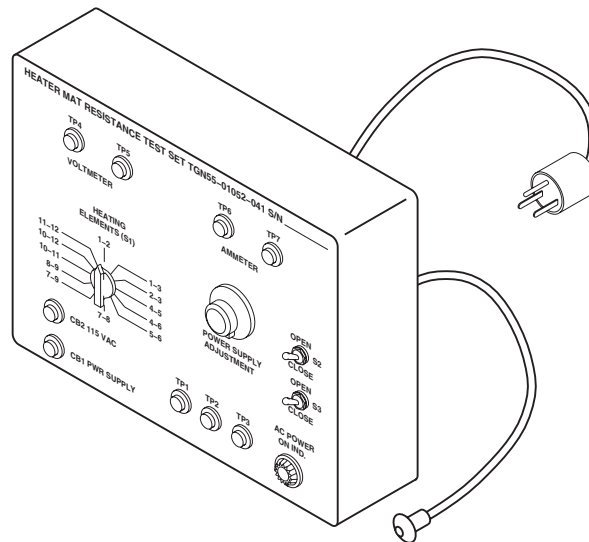

HEATER MAT RESISTANCE TEST SET

| NOMENCLATURE                                                                                                                                                  | PART NUMBER       | STOCK NUMBER     | QUANTITY |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------|------------------|----------|
| TERMINAL STRIP                                                                                                                                                | MS27212-1-3       | 5940-00-950-1610 | 1        |
| TERMINAL STRIP                                                                                                                                                | MS27212-1-12      | 5940-01-005-4733 | 1        |
| COVER ASSEMBLY                                                                                                                                                | MS18029-1S-3      | 5940-00-082-4642 | 2        |
| CIRCUIT BREAKER                                                                                                                                               | MS3320-2          | 5925-00-224-7425 | 2        |
| TOGGLE SWITCH                                                                                                                                                 | MS75028-23        | 5930-01-160-8920 | 2        |
| CONNECTOR                                                                                                                                                     | M83723 / 86W2212N | 5935-01-169-4135 | 1        |
| CLAMP, STRAIN RELIEF                                                                                                                                          | M85049 / 52-1-22W | 5935-01-172-8574 | 1        |
| SWITCH, 1 POLE, 12 POSITION,<br>2 DECK ROTARY                                                                                                                 | M3786 / 4-0033    | 5930-00-224-5969 | 1        |
| RESISTOR, VARIABLE, 0-6 OHM,<br>50 WATT                                                                                                                       | RP151FD6R0KK      | 5905-00-258-0253 | 1        |
| BINDING POST, BLACK                                                                                                                                           | 29-1 BLACK        | 5940-00-577-3695 | 3        |
| BINDING POST, RED                                                                                                                                             | 29-1 RED          | 5940-00-817-4880 | 4        |
| LIGHT, INDICATOR                                                                                                                                              | 262-2342-010      | 6210-00-809-4274 | 1        |
| LENS, LIGHT                                                                                                                                                   | 262-0674-00       | 6210-00-978-8463 | 1        |
| POWER SUPPLY, 12 VOLT @<br>1.8 AMP                                                                                                                            | 83-12-218-03      | CAGE 0RJ90       | 1        |
| WIRE, 16 AWG                                                                                                                                                  | M22759 / 11-16-9  | 6145-00-013-8651 | 72 FT    |
| WIRE, 20 AWG                                                                                                                                                  | M22759 / 11-20-9  | 6145-00-939-4964 | 6 FT     |
| INSULATION TUBING                                                                                                                                             | MIL-I-631         | 5970-00-057-9987 | 6FT      |
| TERMINAL LUG                                                                                                                                                  | MS25036-101       | 5940-00-813-0698 | 32       |
| TERMINAL LUG                                                                                                                                                  | MS25036-106       | 5940-00-283-5280 | 12       |
| KNOB                                                                                                                                                          | MS91528-2F2B      | 5355-00-579-6390 | 1        |
| KNOB                                                                                                                                                          | MS91528-2L2B      | 5355-00-999-4007 | 1        |
| POWER CORD, 3 CONDUCTOR                                                                                                                                       | 17513             | 6150-01-121-7893 | 1        |
| PORTACAB, 8X8X10.5                                                                                                                                            | WA-1542           | 5975-00-901-6113 | 1        |
| DURAMARK TAG                                                                                                                                                  | TMSCM124H9        | 9905-01-159-6447 | 1        |
| NOTE: THE ABOVE LISTED PARTS ARE PREFERRED PARTS, REASONABLE AND LIKE EQUIVALENT PARTS<br>MAY BE SUBSTITUTED TO FABRICATE THE HEATER MAT RESISTANCE TEST BOX. |                   |                  |          |

**PARTS REQUIRED FOR FABRICATION OF UH-60 MAIN ROTOR BLADE  
HEATER MAT TEST SET P/N TGN55-01052**

AB1097\_1A  
SA

Figure 261. Heater Mat Resistance Test Set. (Sheet 1 of 5)

## FIELD MANUFACTURE ITEMS - Continued



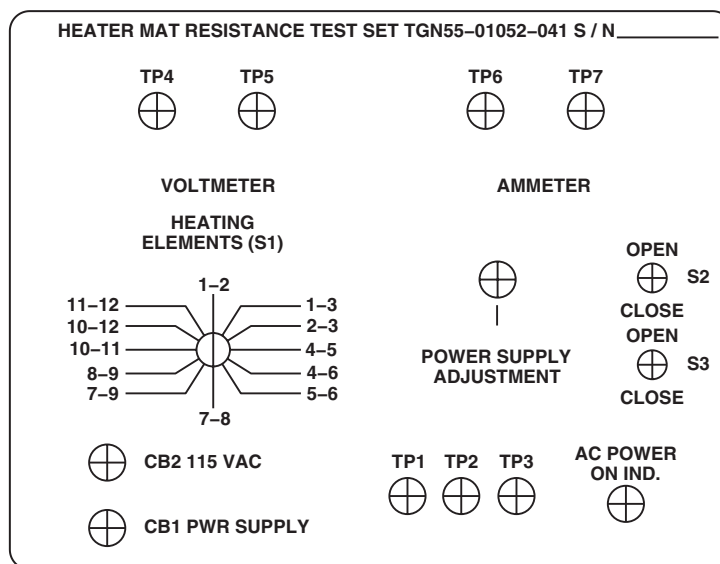
AB1097\_2  
SA

Figure 261. Heater Mat Resistance Test Set. (Sheet 2 of 5)

## FIELD MANUFACTURE ITEMS - Continued

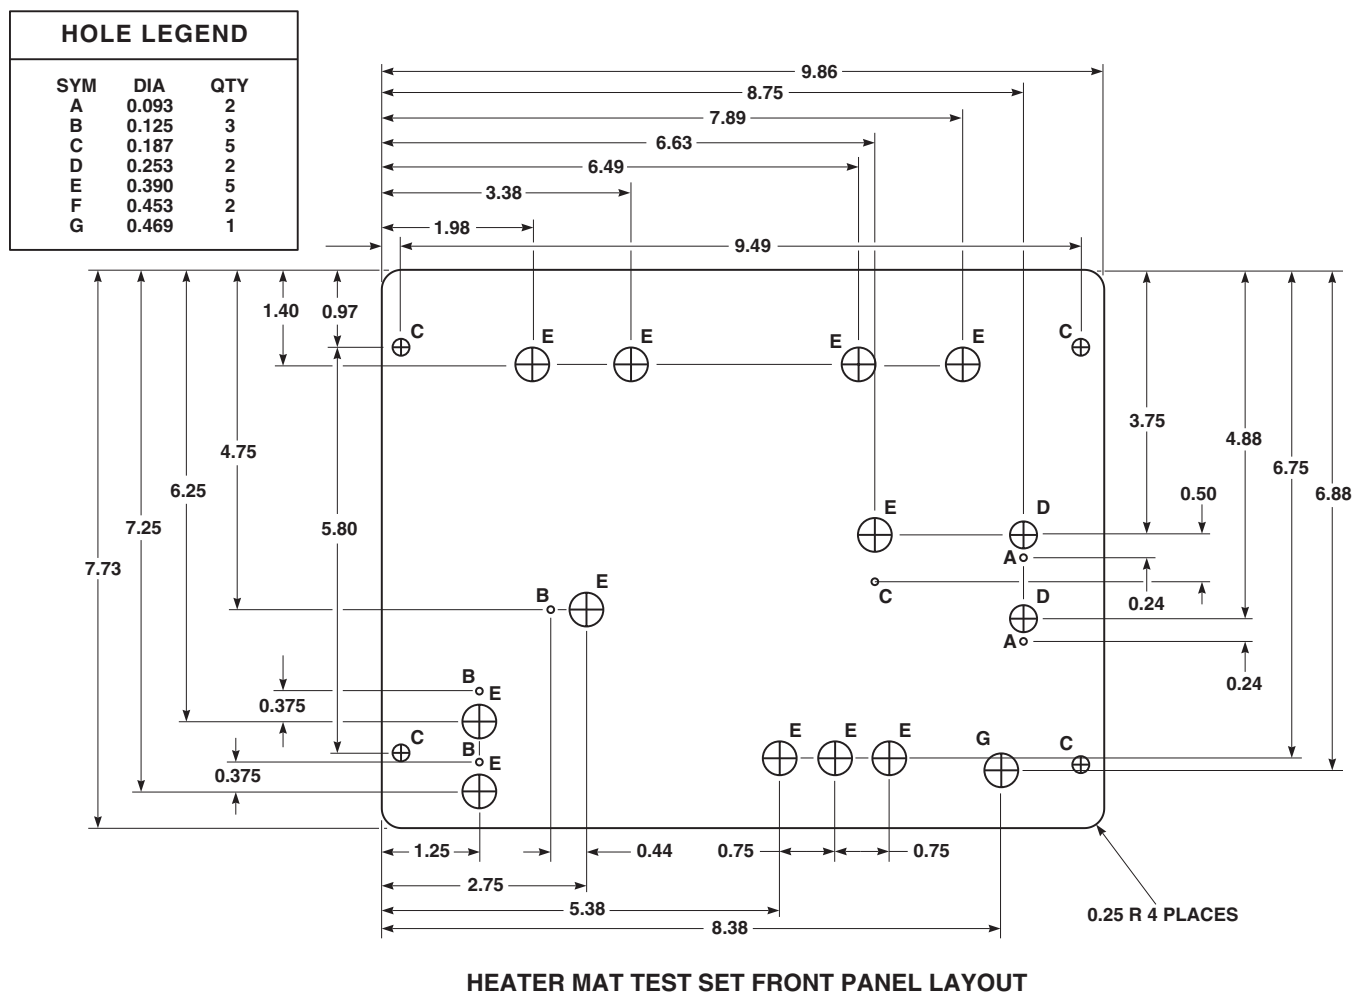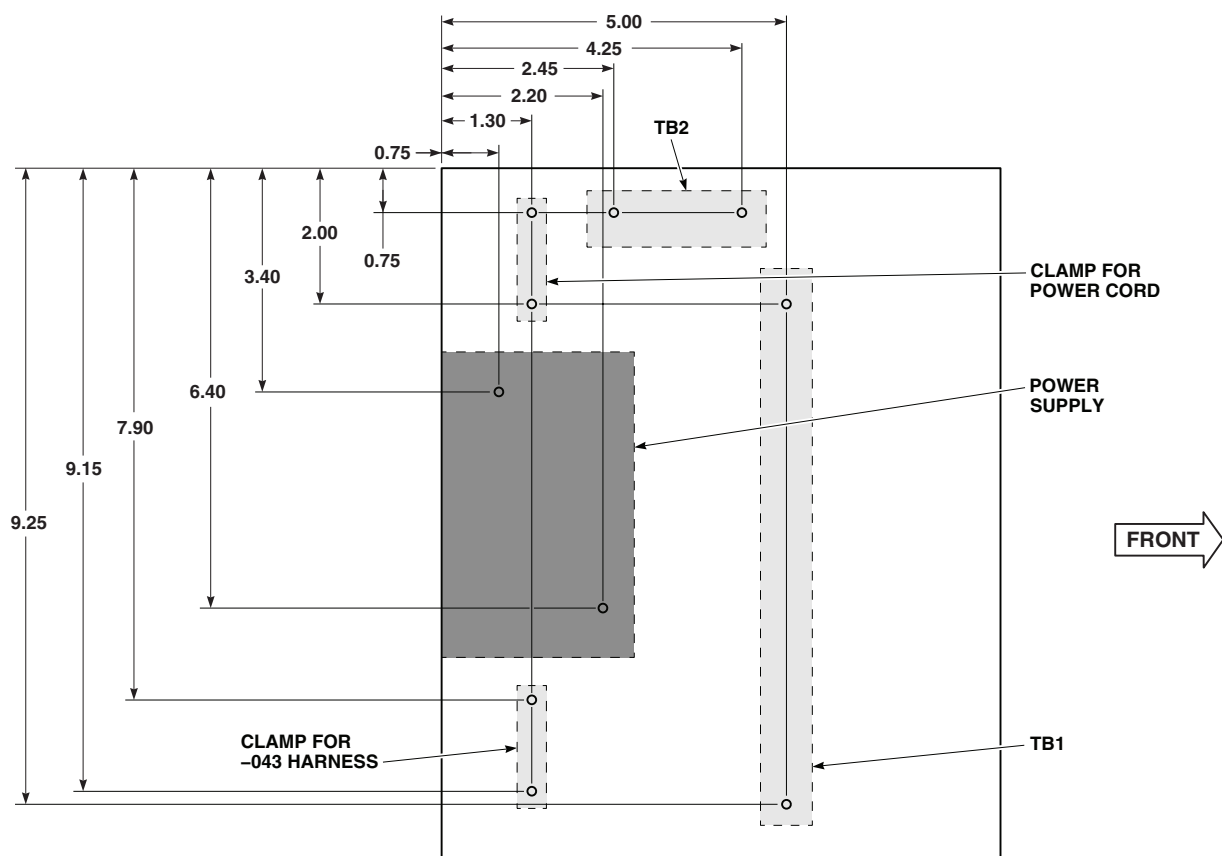

## INSTRUCTIONS

## HEATER MAT TEST SET BOX LAYOUT

1. FABRICATE FRONT PANEL IN ACCORDANCE WITH FIGURE 1 LAYOUT PATTERN.
  - A. DRILL 0.390 INCH DIAMETER HOLES, NINE PLACES, PER FIGURE 1 FOR TP1 THROUGH TP7, R1, AND S1 WAFER SWITCH.
  - B. DRILL 0.125 INCH DIAMETER HOLE FOR S1 SWITCH LOCKING TANG.
  - C. DRILL 0.187 INCH DIAMETER HOLE FOR R1 LOCKING TANG.
  - D. DRILL 0.187 INCH DIAMETER HOLE, FOUR PLACES, FOR FRONT PANEL MOUNTING.
  - E. DRILL 0.253 INCH DIAMETER HOLES, TWO PLACES, FOR S2 AND S3 SWITCHES.
  - F. DRILL 0.093 INCH DIAMETER HOLES, FOR S2 AND S3 LOCKING TANGS.
  - G. DRILL 0.435 INCH DIAMETER HOLES, 2 PLACES, FOR CB1 AND CB2 CIRCUIT BREAKERS.
  - H. DRILL 0.125 INCH DIAMETER HOLES, TWO PLACES, FOR CB1 AND CB2 LOCKING TANGS.
2. MARK COMPONENTS IN ACCORDANCE WITH FIGURE 2. ALL LETTERING TO BE 0.187 HIGH GOTHIC STYLE EXCEPT OPEN / CLOSE NOMENCLATURE FOR S2 AND S3 WHICH ARE 0.125.
3. MOUNT COMPONENTS ON FRONT PANEL USING FIGURE 2 AS A GUIDE.
  - A. MOUNT S1 WAFER SWITCH, P/N M3786 / 4-0033, IN APPROPRIATE 0.390 DIAMETER HOLE. TAKE CARE TO ENGAGE LOCKING TANG.  
NOTE: YOU MAY WISH TO LEAVE S1 LOOSE TO ALLOW ACCESS FOR ATTACHING WIRING TO BE INSTALLED IN STEP 4.
  - B. MOUNT RED BINDING POST, P/N 29-1 RED, IN HOLES FOR TP1, TP2, TP4, AND TP7.
  - C. MOUNT BLACK BINDING POST, P/N 29-1 BLACK, IN HOLES FOR TP3, TP5, AND TP6.
  - D. MOUNT R1 VARIABLE RESISTOR, P/N RP151FD6R0KK, IN HOLE MARKED "POWER SUPPLY ADJUSTMENT". TAKE CARE TO ENGAGE LOCKING TANG.
  - E. MOUNT SWITCHES S2 AND S3, P/N MS75028-23, IN APPROPRIATE HOLES. TAKE CARE TO ENGAGE LOCKING TANGS.
  - F. MOUNT CIRCUIT BREAKERS CB1 AND CB2, P/N MS3320-2, IN APPROPRIATE HOLES. TAKE CARE TO ENGAGE LOCKING TANGS.
  - G. MOUNT LAMP ASSEMBLY, CONSISTING OF P/N 262-2342-010 INDICATOR LAMP & P/N 262-0674-00 LENS, IN HOLE MARKED "AC ] POWER ON IND."
4. DRILL HOLES IN ACCORDANCE WITH FIGURE 3 FOR MOUNTING OF TB1, TB2, POWER SUPPLY, AND TWO ELECTRICAL CABLE CLAMPS.
5. FABRICATE WIRING HARNESS, TGN55-01052-043, IN ACCORDANCE WITH FIGURE 4. WRAP INSULATION TUBING WITH P594 SILICON TAPE, OR EQUIVALENT, IN A SUFFICIENT QUANTITY SO THAT WHEN STRAIN RELIEF CLAMP, P/N M85049 / 52-1-22W, IS INSTALLED THE WIRES SHALL BE SECURED ON THE SILICON TAPE. TAG AS SHOWN IN FIGURE 4 WITH DURAMARK TAGS, P/N TMSCM124H9, WITH BLACK 0.12 HIGH BOLD FACE LETTERING "TO BLADE". SECURE TAG WITH MS3367-1-9 TYRAPS.
6. ROUTE WIRING IN ACCORDANCE WITH FIGURE 5 WIRING SCHEMATIC. WIRES ARE 20 AWG PART NUMBER M22759 / 11-20-9 EXCEPT FOR -043 HARNESS.


## NOTE

ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.

AB1097\_3A  
SA

Figure 261. Heater Mat Resistance Test Set. (Sheet 3 of 5)

FIELD MANUFACTURE ITEMS - Continued

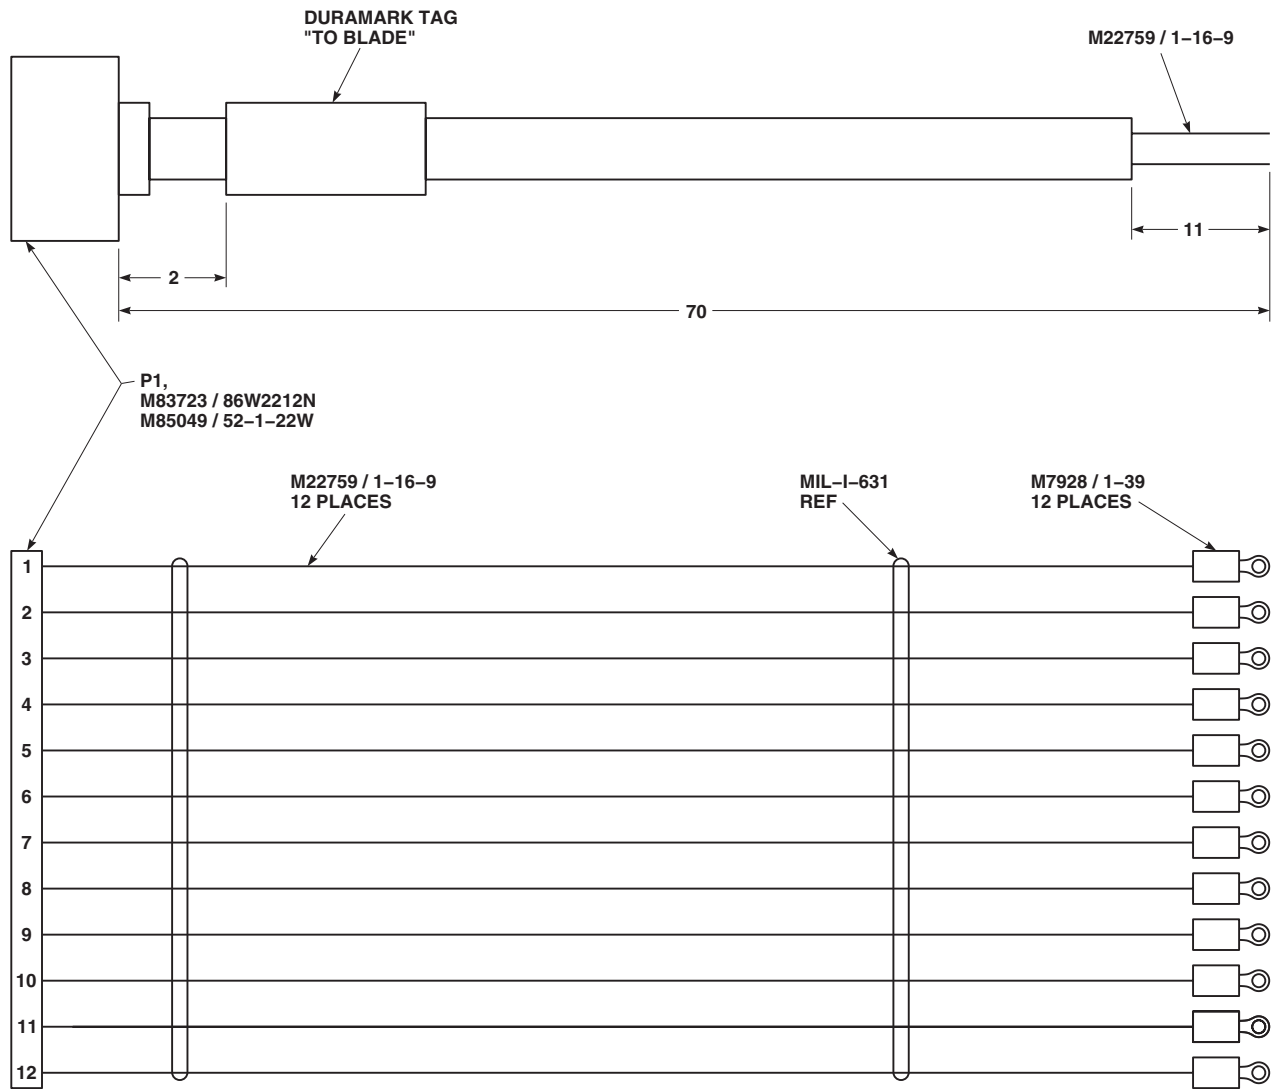


HEATER MAT RESISTANCE TEST SET BLADE HARNESS

AB1097 4  
SA

Figure 261. Heater Mat Resistance Test Set. (Sheet 4 of 5)

FIELD MANUFACTURE ITEMS - Continued

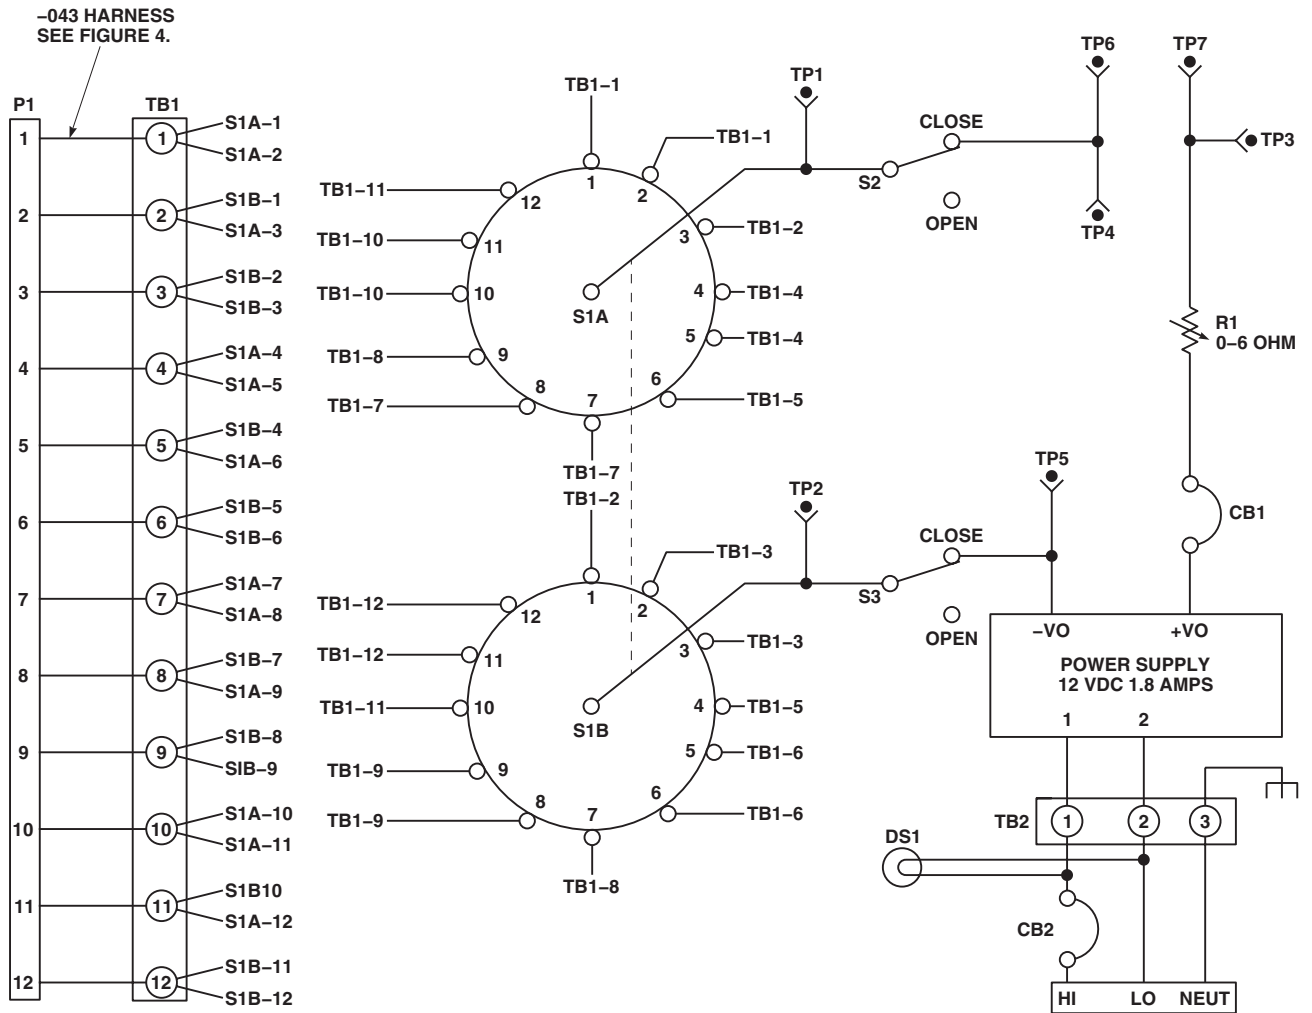


UH-60 BLADE HEATER MAT TEST SET

AB1097\_5  
SA

Figure 261. Heater Mat Resistance Test Set. (Sheet 5 of 5)



## FIELD MANUFACTURE ITEMS - Continued

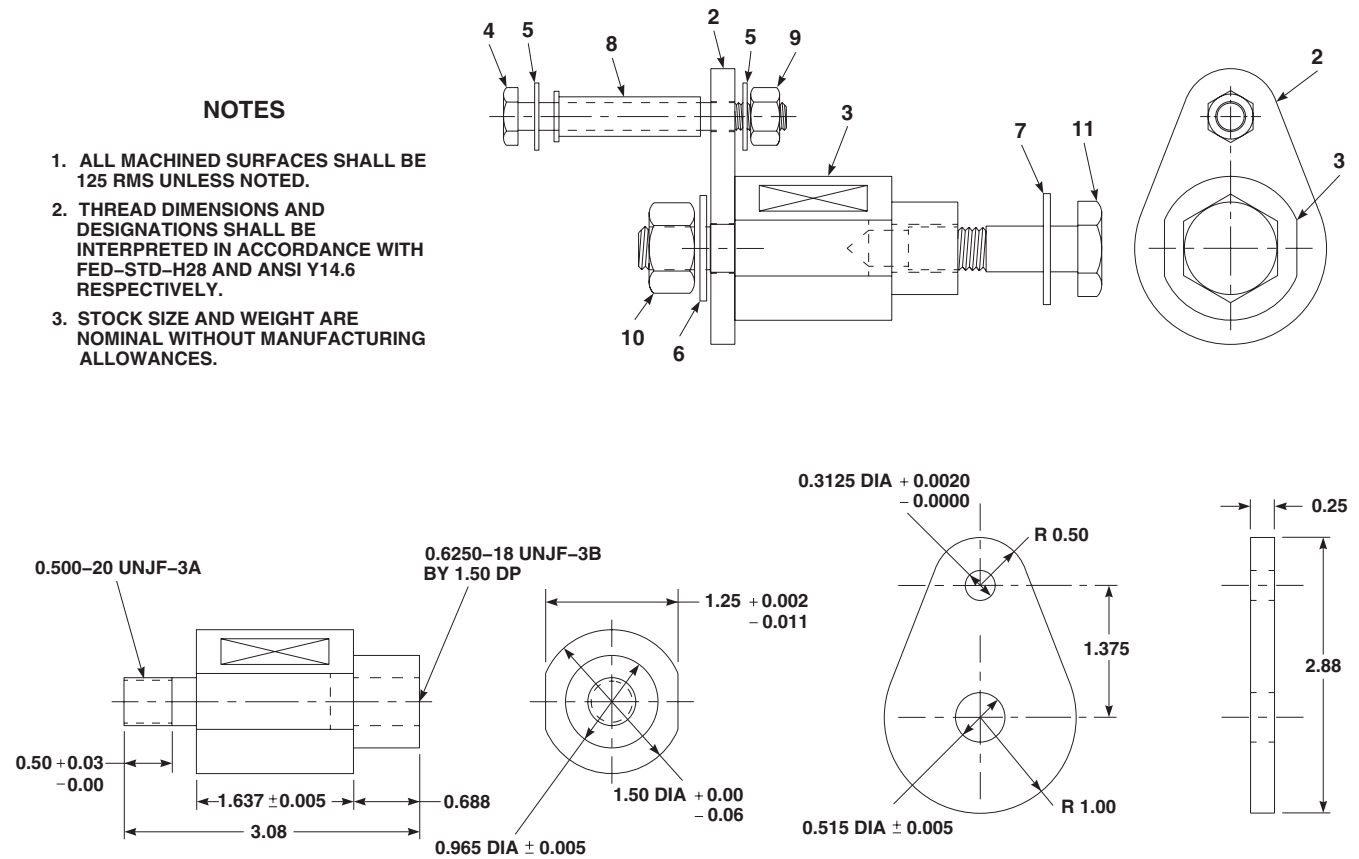


| ITEM NO. | PART NO.    | NOMENCLATURE                                      | SIZE/MATERIAL                                            |
|----------|-------------|---------------------------------------------------|----------------------------------------------------------|
| 11       | NAS1960C19  | BOLT, HEX HEAD                                    |                                                          |
| 10       | NAS509-8    | NUT, JAM                                          |                                                          |
| 9        | NAS509-5    | NUT, JAM                                          |                                                          |
| 8        | NAS77-5-157 | BUSHING - FLANGED                                 |                                                          |
| 7        | MS20002C10  | WASHER, FLAT, C'SINK                              |                                                          |
| 6        | AN960C816L  | WASHER, FLAT                                      |                                                          |
| 5        | AN960KD516L | WASHER, FLAT                                      |                                                          |
| 4        | AN5-26A     | BOLT, HEX HEAD                                    |                                                          |
| 3        |             | STEP PIN                                          | 1.50 BY 3.5 STEEL DRILL ROD, GRIND & POLISH              |
| 2        |             | SPACER LINK                                       | 0.25 BY 2.00 BY 2.88 ALLOY STEEL ASTM A434, 4140, HT, CF |
| 1        |             | LOCATING TOOL, STABILATOR POSITION SENSOR BRACKET |                                                          |

AB3761  
SA

Figure 263. Stabilator Position Sensor Bracket Locating Tool.

## FIELD MANUFACTURE ITEMS - Continued

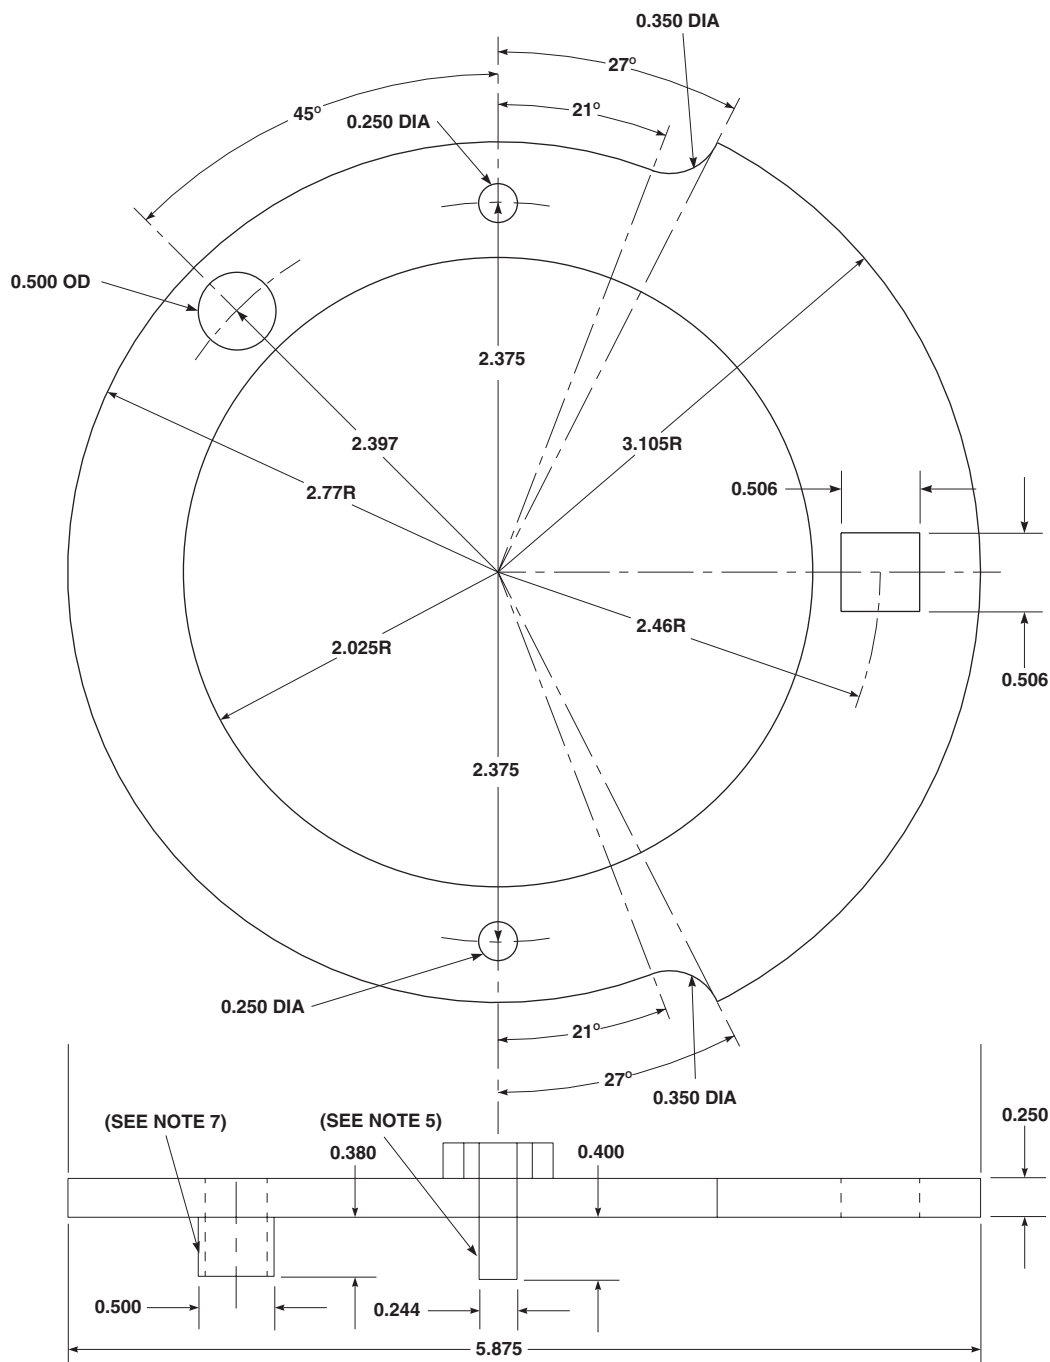

## NOTES


1. MAKE FROM 4130 STEEL, CONDITION N (MIL-S-18729).
2. BREAK ALL SHARP EDGES 0.005 TO 0.015.
3. TOLERANCES UNLESS NOTED OTHERWISE LINEAR  $\pm 0.005$ .
4. TO ENHANCE TOOL DURABILITY, HEAT TREAT AFTER MACHINING TO ROCKWELL HARDNESS C26-33, PER MIL-4-6875.
5. MAKE TWO 1/4-28 UNF, GRADE 8, BY 1.000 LONG BOLT OR EQUIVALENT.
6. IDENTIFY TOOL, OIL FILTER FLOW VALVE POSITIONER, AS PER MIL-STD-130.
7. MAKE FROM 1/2 TUBE STEEL 0.65" LONG. PRESS FIT AND SEAL.
8. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.

AB2242C  
SA

Figure 264. Main Transmission Oil Filter Flow Valve Positioner.



## FIELD MANUFACTURE ITEMS - Continued

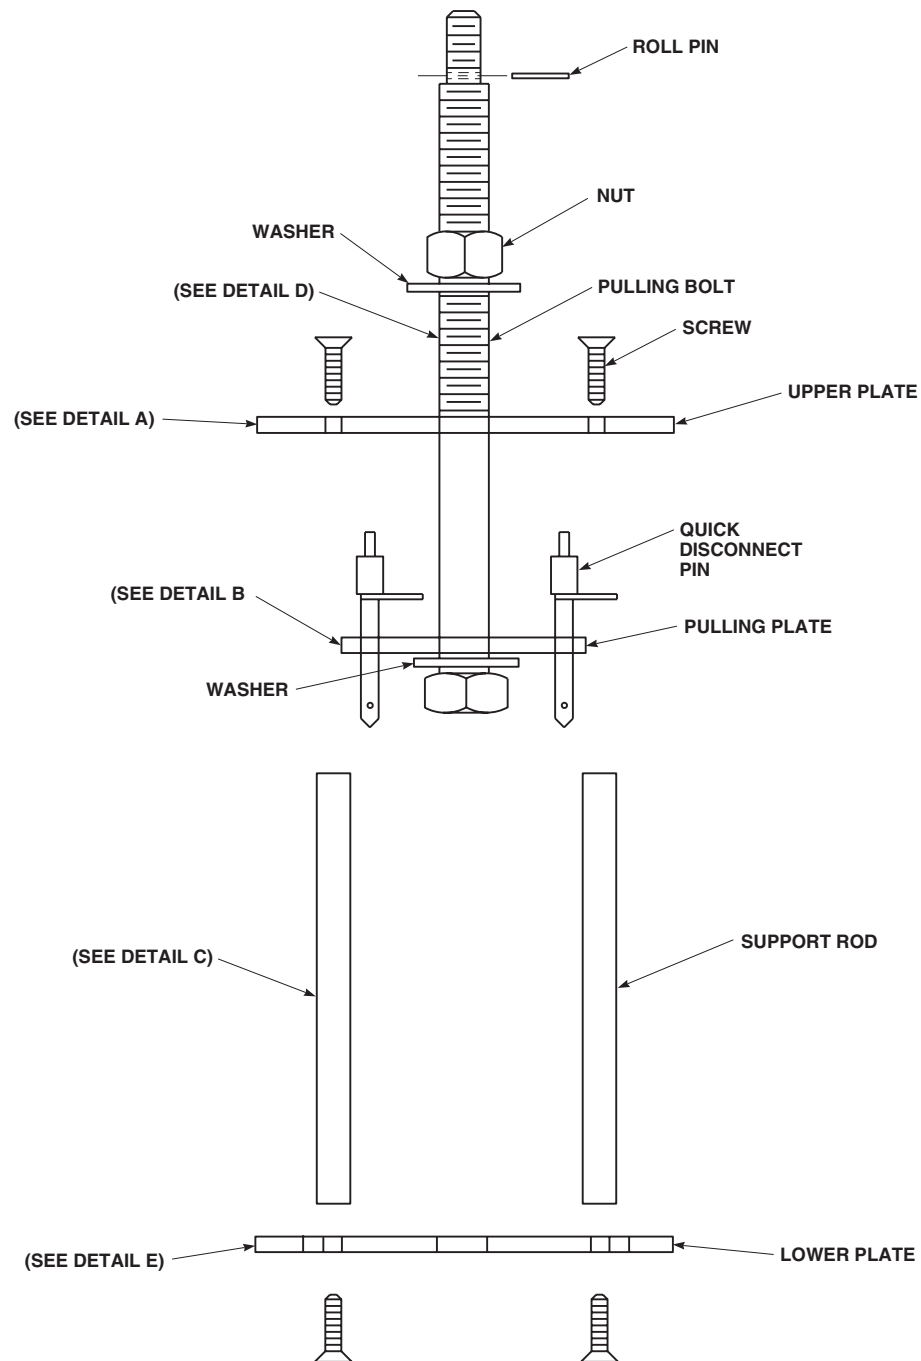


## NOTES

1. MATERIAL: 7075-T6 ALUMINUM.
2. 1/4 INCH FLAT STOCK.
3. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
4. ENDS SLIGHTLY CHAMFERED.
5. ALL EDGES AND HOLES DEBURRED.


AB2243\_1A  
SA

Figure 265. Output Drive Shaft Puller (B). (Sheet 1 of 4)

FIELD MANUFACTURE ITEMS - Continued

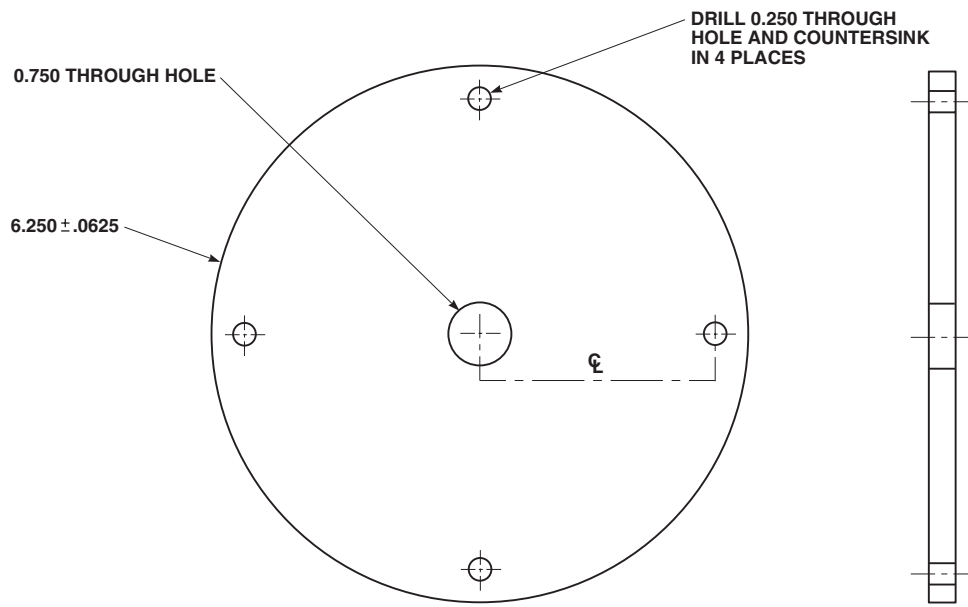

DETAIL A

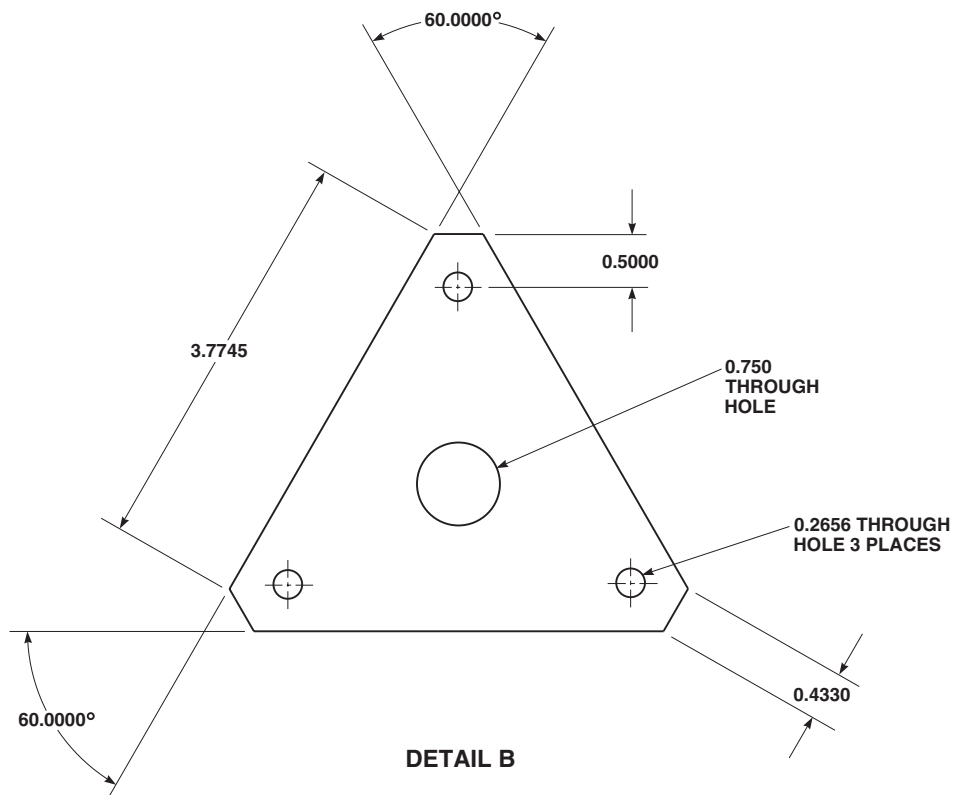


DETAIL B


AB2243\_2  
SA

Figure 265. Output Drive Shaft Puller (B). (Sheet 2 of 4)


FIELD MANUFACTURE ITEMS - Continued

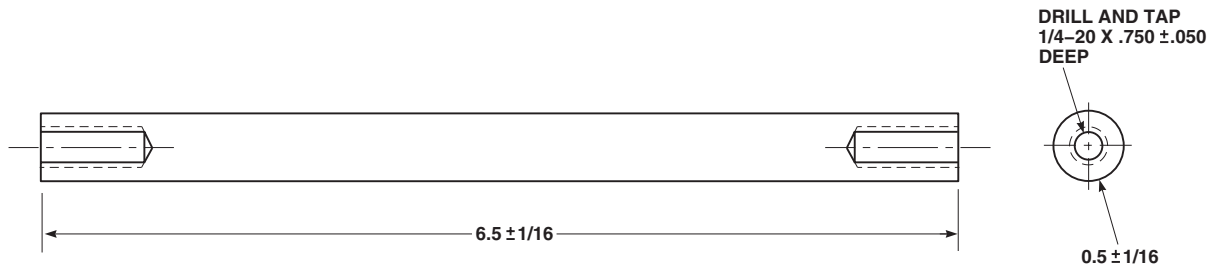

DETAIL C

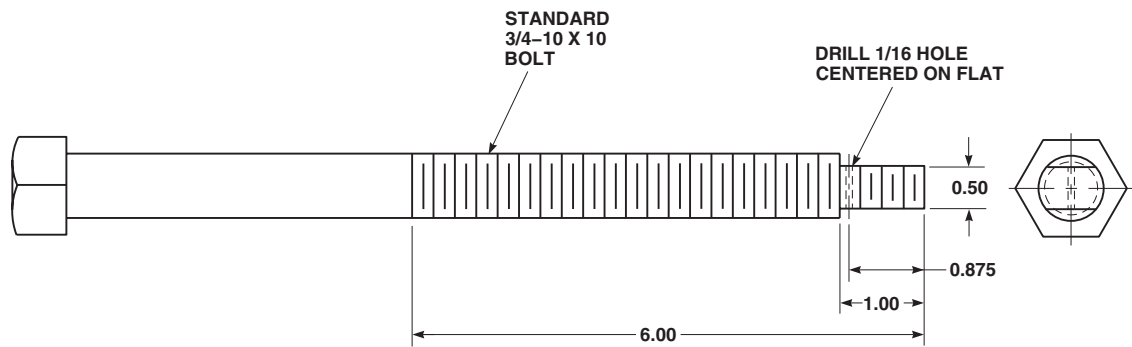

DETAIL D

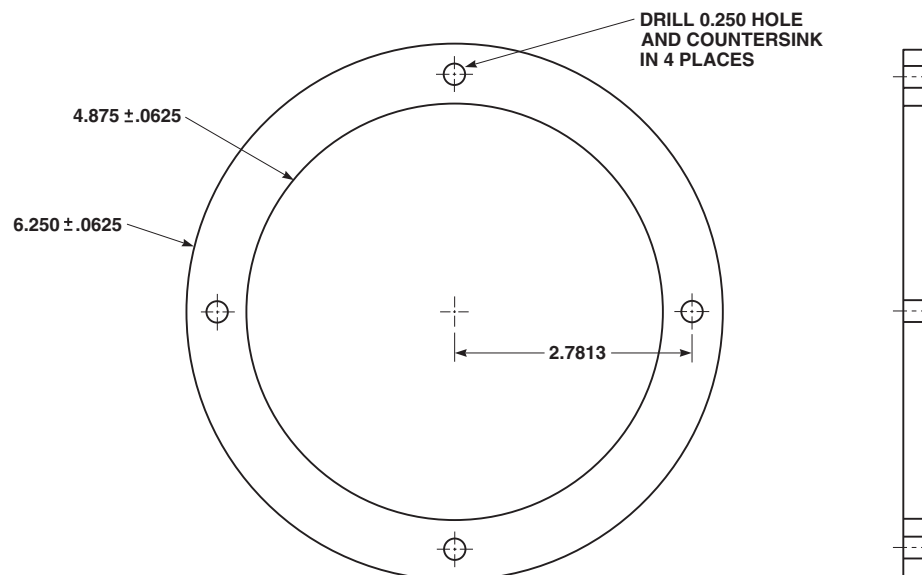

DETAIL E

AB2243\_3A  
SA

Figure 265. Output Drive Shaft Puller (B). (Sheet 3 of 4)

## FIELD MANUFACTURE ITEMS - Continued

## PARTS LIST

| NOMENCLATURE                       | NSN              | QUANTITY |
|------------------------------------|------------------|----------|
| QUICK DISCONNECT PIN<br>1/4 BY 2   | 5315-00-952-2617 | 3        |
| ROLL PIN<br>1/16 BY 1              | 5305-00-150-9212 | 1        |
| FLAT HEAD SCREW<br>1/4 - 20 BY 3/4 | LOCAL PURCHASE   | 8        |
| FLAT WASHER<br>GRADE 5-3/4         | 5310-00-187-2404 | 2        |
| NUT                                | LOCAL PURCHASE   | 1        |
| BOLT                               | DETAIL D         | 1        |
| PLATE                              | DETAIL B         | 1        |
| PLATE                              | DETAIL E         | 1        |
| PLATE                              | DETAIL A         | 1        |
| SUPPORT ROD                        | DETAIL C         | 4        |


## NOTES

1. MATERIAL: 7075-T6 ALUMINUM.
2. 1/4 INCH FLAT STOCK.
3. ALL DIMENSIONS ARE IN INCHES  
UNLESS NOTED.
4. ENDS SLIGHTLY CHAMFERED.
5. ALL EDGES AND HOLES DEBURRED.

AB2243\_4A  
SA

Figure 265. Output Drive Shaft Puller (B). (Sheet 4 of 4)

## FIELD MANUFACTURE ITEMS - Continued

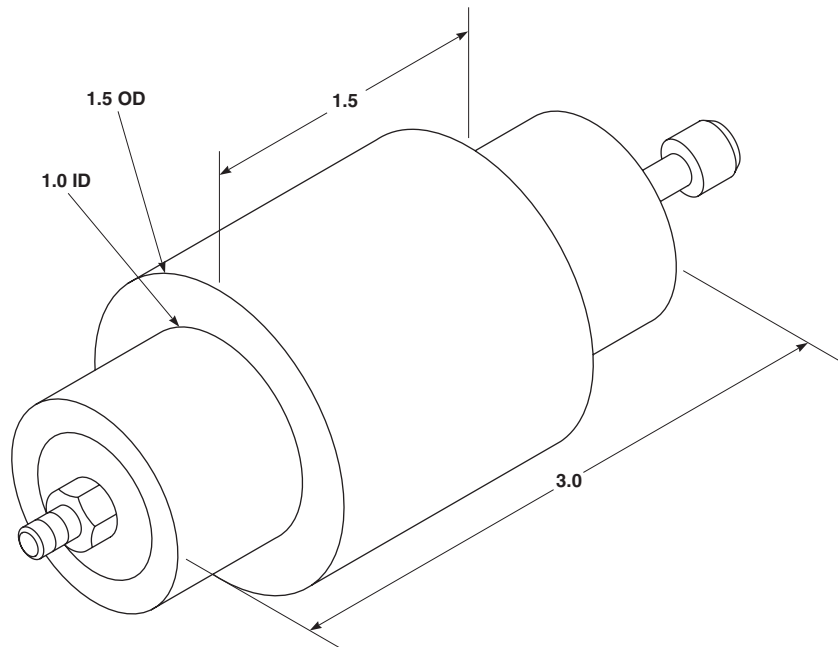


## NOTES

1. ALUMINUM ROUND, P/N MS14258C069.
2. NSN 9530-00-236-1379.
3. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.

AB2266A  
SA

Figure 266. Spline Adapter Removal Tool.

## FIELD MANUFACTURE ITEMS - Continued

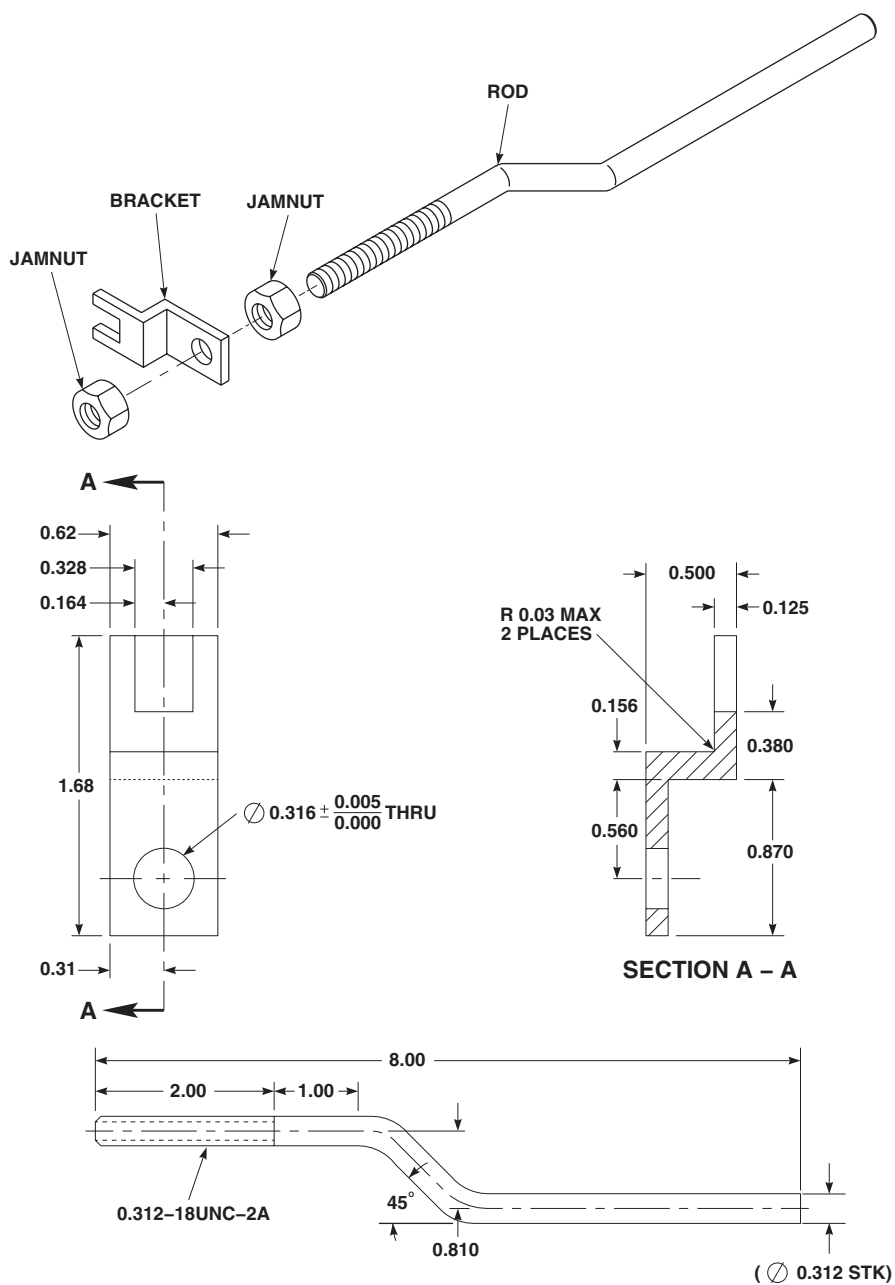

| PART NUMBER | MAKE FROM MATERIAL | NOMENCLATURE |
|-------------|--------------------|--------------|
| 3218AS517-3 | CRES               | ROD          |
| 3218AS517-4 | CRES               | BRACKET      |
| 94805A030   | MS35691-11         | JAMNUT       |


## NOTES

1. MAKE ROD AND BRACKET PER MATERIAL AND DIMENSIONS LISTED IN CHART.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. IDENTIFY PARTS PER MIL-STD-130.

AB2338B  
SA

Figure 267. Alignment Bar and Bracket.

---

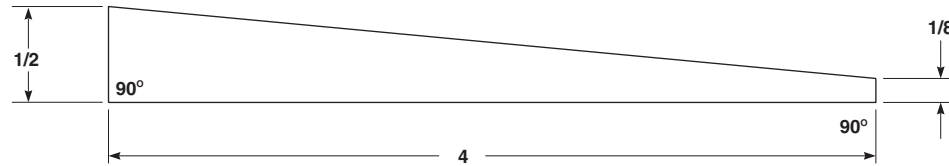
FIELD MANUFACTURE ITEMS - Continued**NOTES**

1. CUT FROM NYLON.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.

AB2430A  
SA

Figure 268. Nylon Wedge.

## FIELD MANUFACTURE ITEMS - Continued

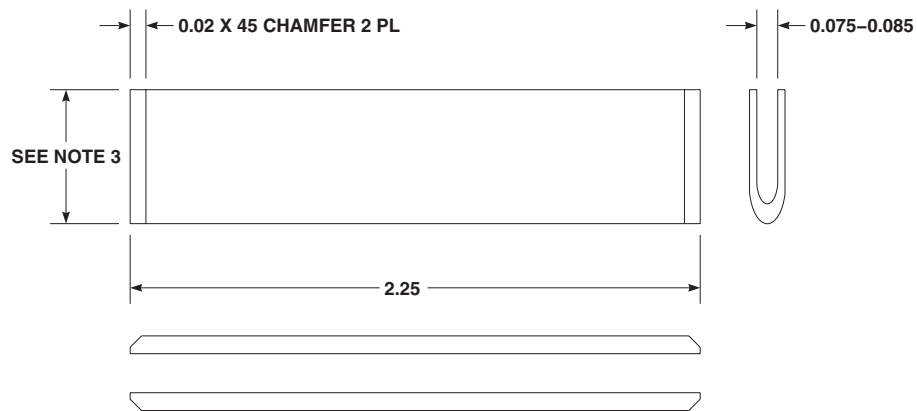

## NOTES


1. MAKE FROM 301 STAINLESS STEEL, MIL-S-5059, 0.032 INCH THICK TREATED TO 1/4 HARD AFTER FORMING.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. INBRD STRIPS  $0.205 \pm 0.050$ , OUTBRD  $0.243 \pm 0.050$ .
4. INSULATE DISSIMILAR METALS ON INSTALLATION (TM 1-1520-204-23).

AB3681\_1  
SA

Figure 269. Wear Strip Upper Gunner's Window Track. (Sheet 1 of 2)



## FIELD MANUFACTURE ITEMS - Continued

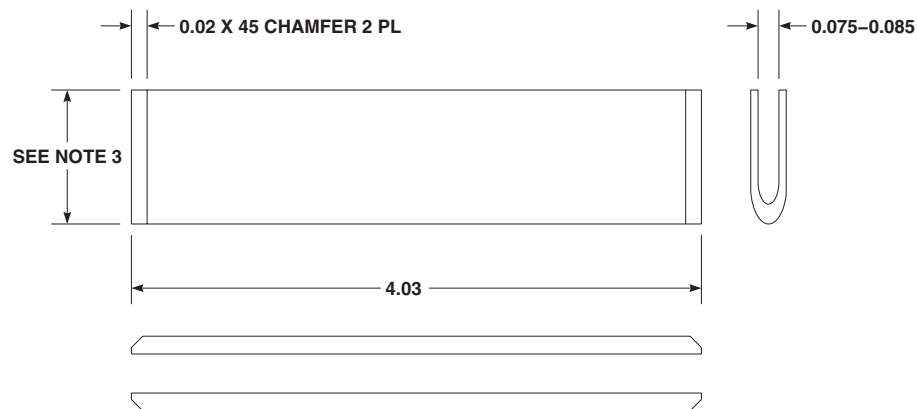

## NOTES

1. MAKE FROM 301 STAINLESS STEEL,  
MIL-S-5059, 0.032 INCH THICK  
TREATED TO 1/4 HARD AFTER  
FORMING.
2. ALL DIMENSIONS ARE IN INCHES  
UNLESS NOTED.
3. INBRD STRIPS  $0.205 \pm 0.050$ ,  
OUTBRD  $0.243 \pm 0.050$ .
4. INSULATE DISSIMILAR METALS ON  
INSTALLATION (TM 1-1520-204-23).

AB3681\_2  
SA

Figure 269. Wear Strip Upper Gunner's Window Track. (Sheet 2 of 2)

## FIELD MANUFACTURE ITEMS - Continued


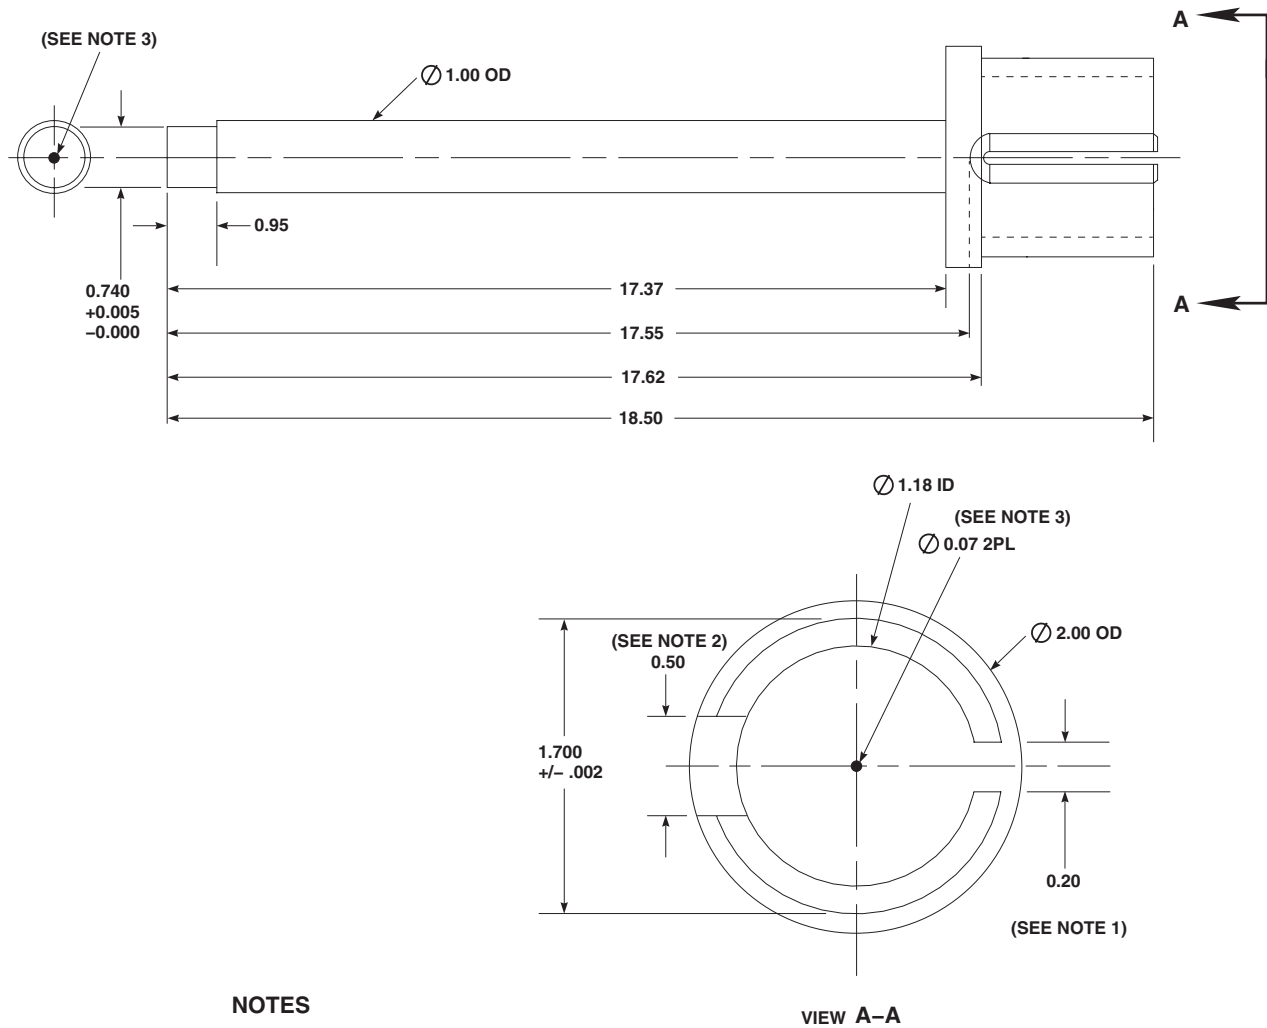
AB3890  
SA

Figure 270. Plumb Bob Alignment Tool.

## FIELD MANUFACTURE ITEMS - Continued

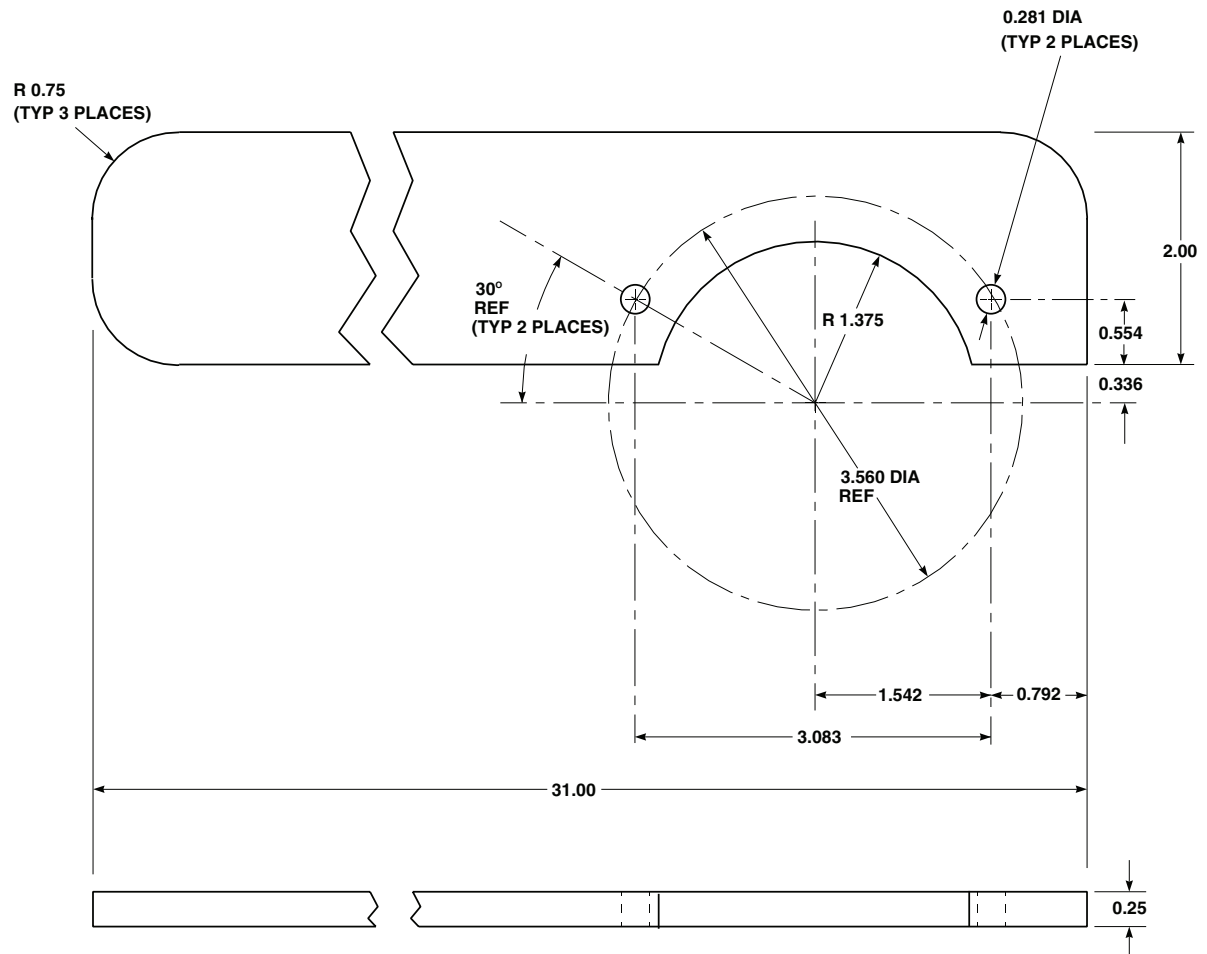


## NOTES

1. MAKE FROM 7075-T6 ALUMINUM STOCK, 0.25 INCH THICK.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. IDENTIFY ALL PART PER MIL-STD-130.


AB3509  
SA

Figure 271. Torque Reactor Plate.

FIELD MANUFACTURE ITEMS - Continued

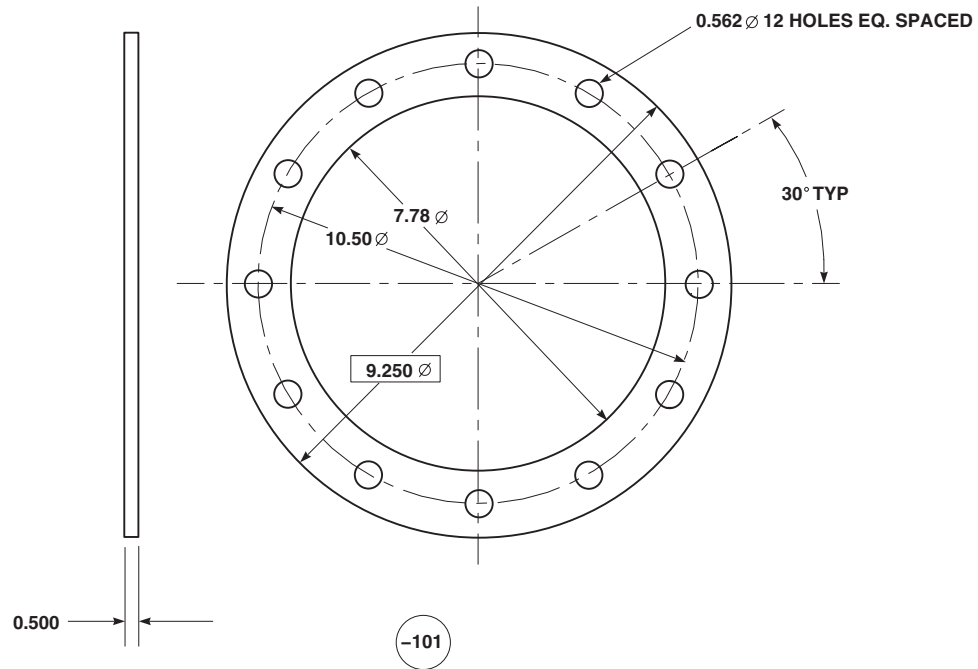

SPINDLE LINER FLAT PLATE TOOL

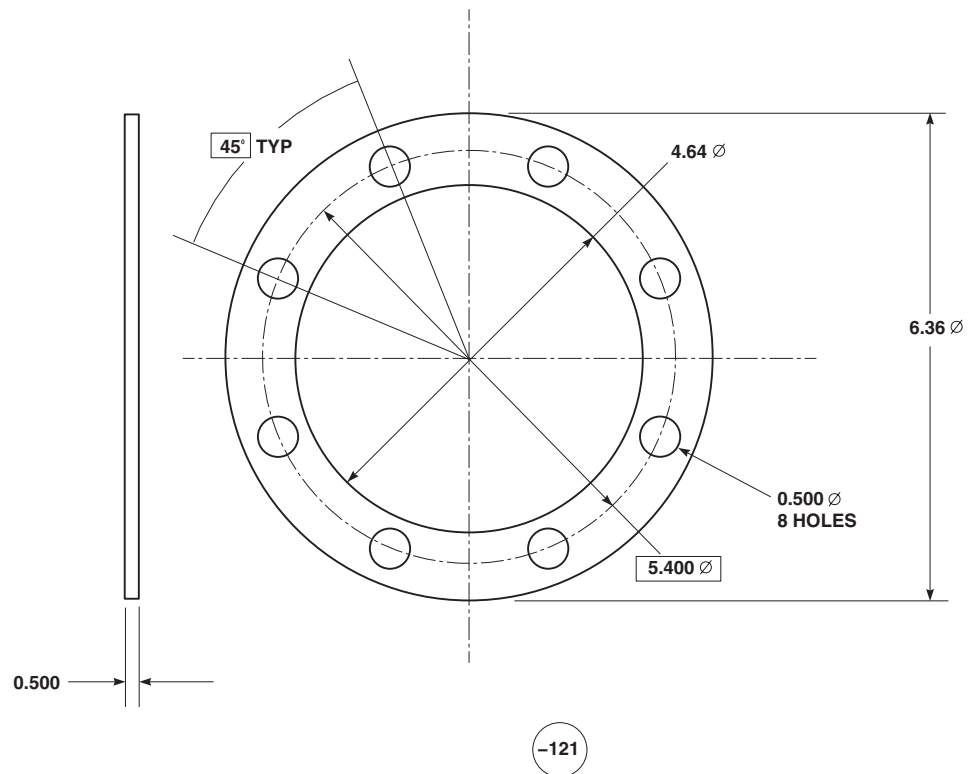

DAMPER BRACKET LINER FLAT PLATE TOOL

NOTES

1. FABRICATE FROM T6 ALUMINUM PLATE
2. DIMENSION ARE SAME AS ROTOR FACE LINER.
3. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED
4. ALL EDGES AND HOLES DEBURRED.

AB4356\_1  
SA

Figure 272. Main Rotor Hub Flat Plate Tool. (Sheet 1 of 2)

FIELD MANUFACTURE ITEMS - Continued



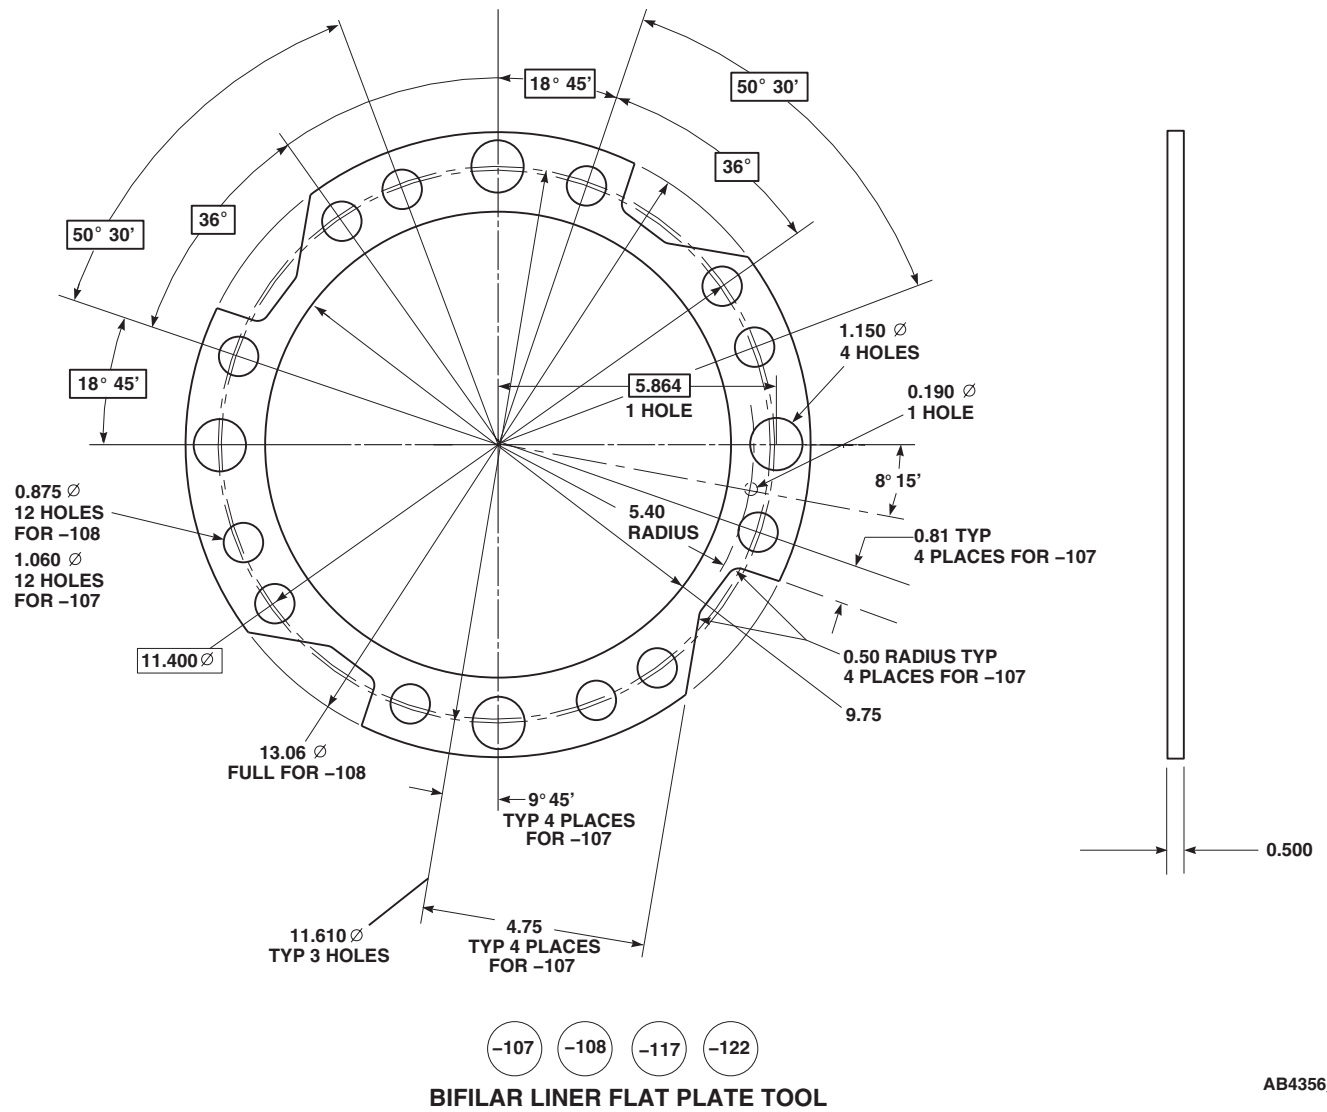


Figure 272. Main Rotor Hub Flat Plate Tool. (Sheet 2 of 2)


## FIELD MANUFACTURE ITEMS - Continued

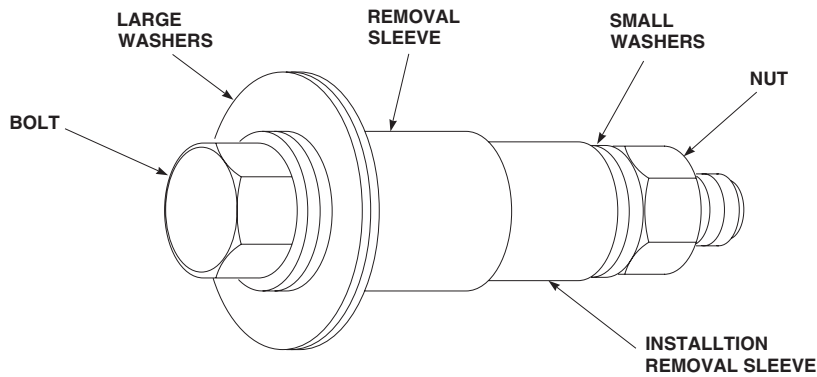

**REMOVAL MODE**  
(SEE NOTE 1)

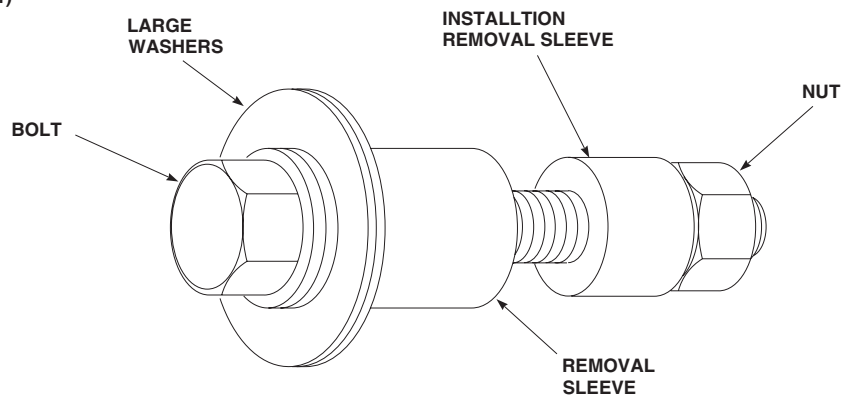

**INSTALLATION MODE**

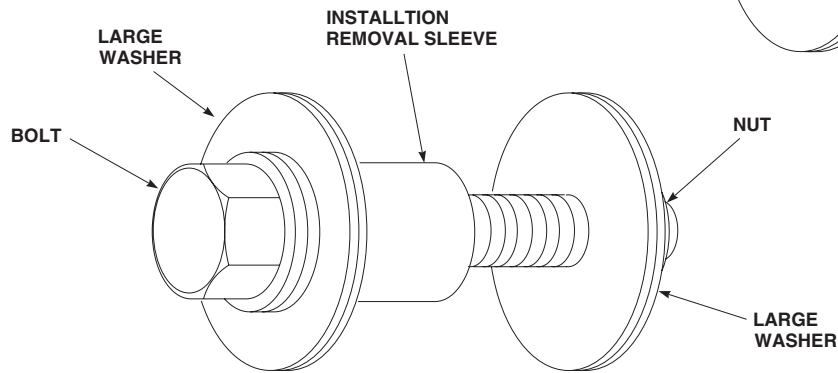

**REMOVAL MODE**  
(SEE NOTE 2)

## NOTES

1. WITH SMALL WASHERS ADDED AS NECESSARY TO PREVENT NUT FROM SHAKING OUT BOLT.
2. ADD SMALL WASHERS AS NECESSARY TO PREVENT NUT SHAKING OUT ON BOLT AS IN REMOVAL MODE.

| NOMENCLATURE                | NSN              | DIMENSIONS                                                         | QUANTITY |
|-----------------------------|------------------|--------------------------------------------------------------------|----------|
| REMOVAL SLEEVE              | 3120-01-101-4184 | I/D MACHINED 1.135                                                 | 1        |
| INSTALLATION REMOVAL SLEEVE | 3210-01-095-7686 | SHOULDER O/D MACHINED 0.873                                        | 1        |
| LARGE WASHER                | 5310-01-096-1264 | N/A                                                                | 4        |
| SMALL WASHER                | N/A              | 5/16 I/D X 0.075 O/D X 0.075 THICK                                 | 5        |
| BOLT                        | N/A              | 5/16 DIA. X 18 THREADS PER INCH X 3 IN. LONG 2.5 IN. THREAD LENGTH | 1        |
| NUT                         | N/A              | 5/16 DIA. X 18 THREADS PER INCH HEX NUT                            | 1        |

AB4789  
SA

Figure 273. Droop Stop Bushing Replacement Tool.

## FIELD MANUFACTURE ITEMS - Continued


AM5402\_1  
SA

Figure 274. Solid Blade Pin Removal Tool. (Sheet 1 of 6)

## FIELD MANUFACTURE ITEMS - Continued



AM5402\_2  
SA


Figure 274. Solid Blade Pin Removal Tool. (Sheet 2 of 6)

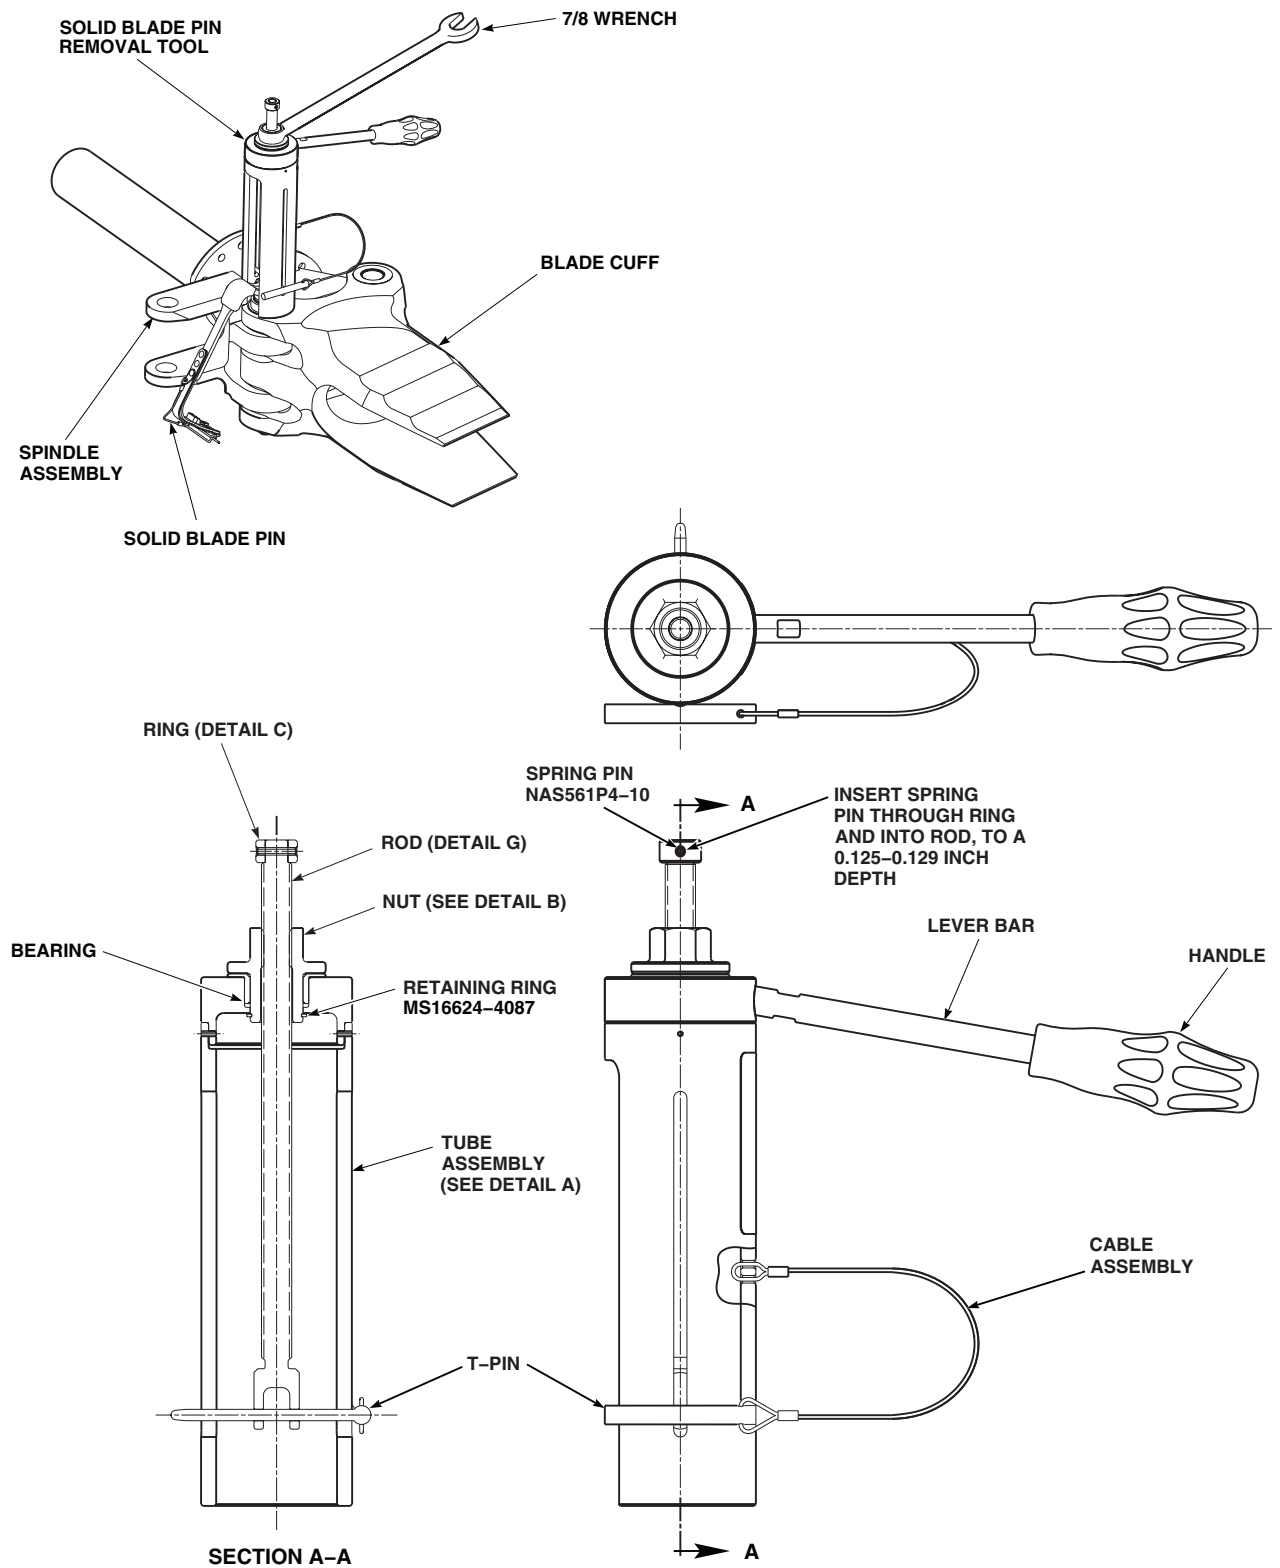



FIELD MANUFACTURE ITEMS - Continued

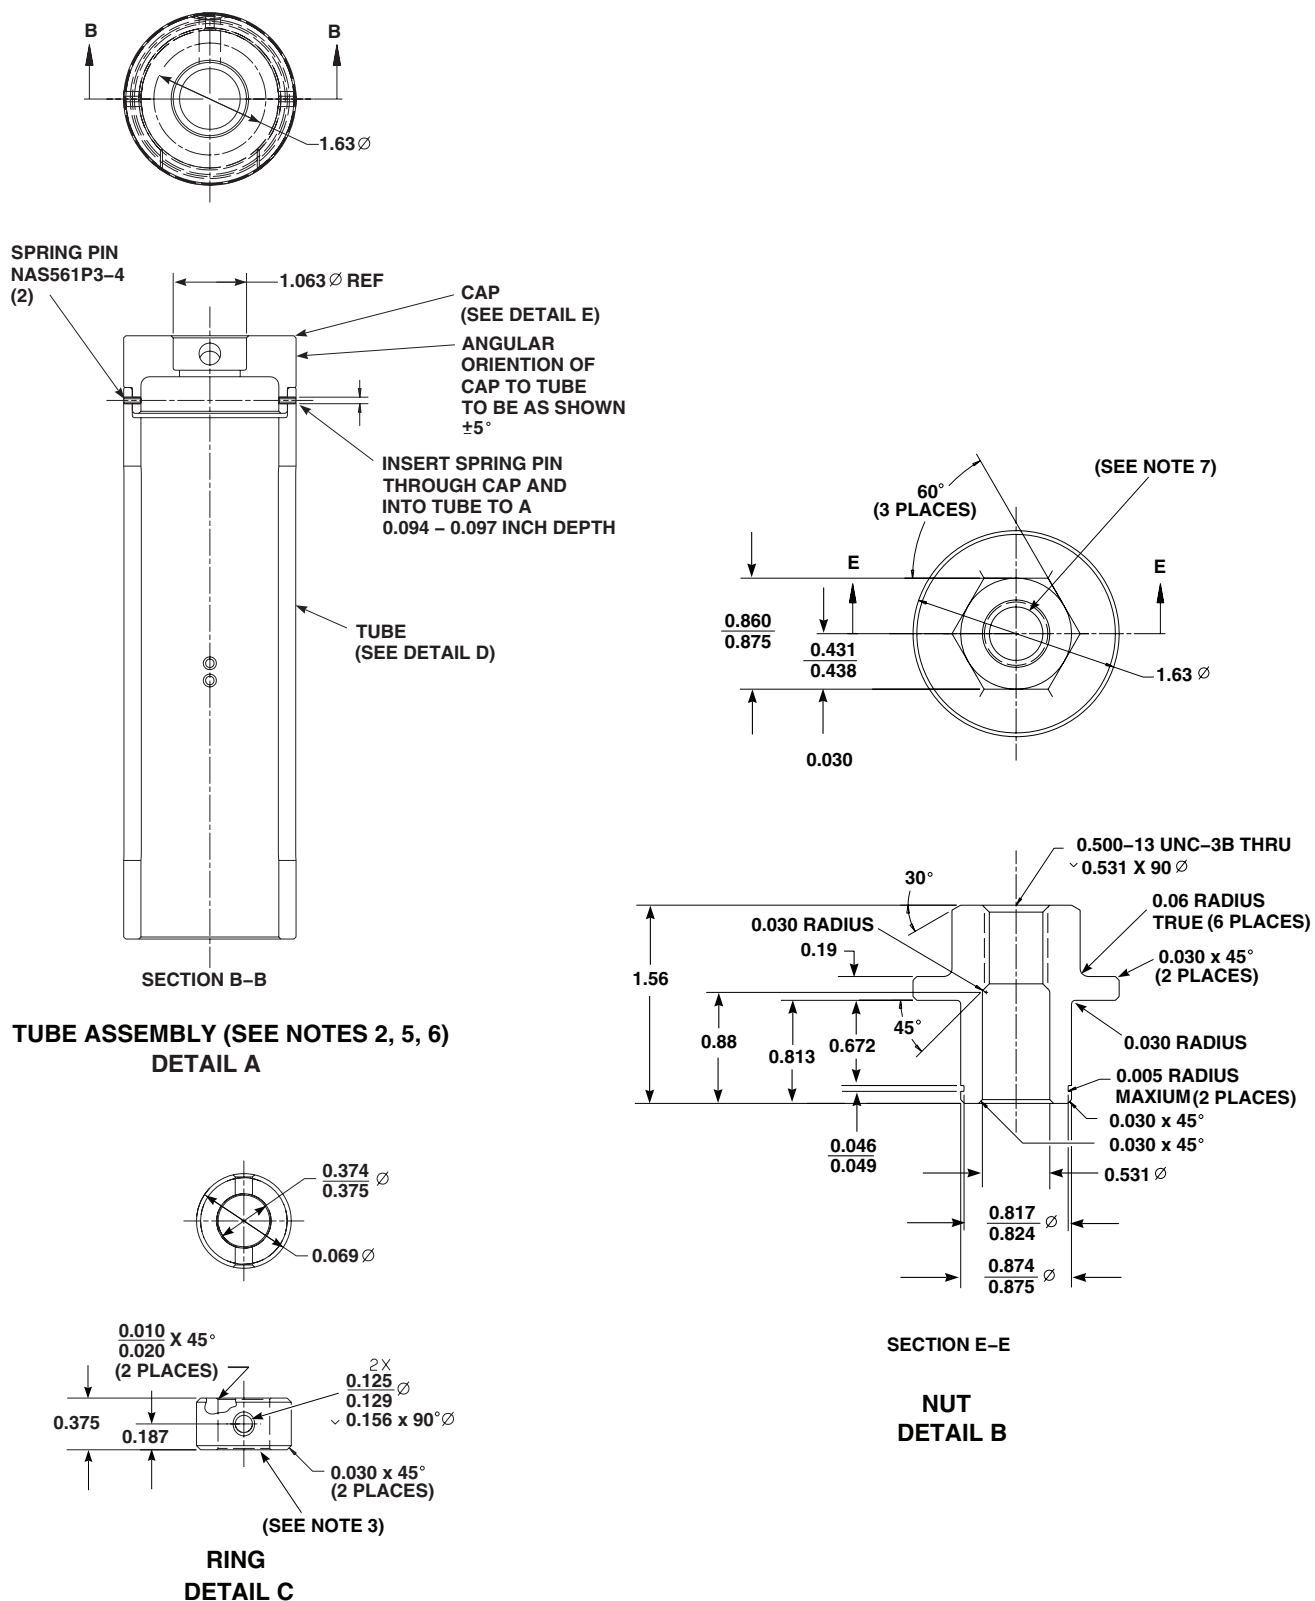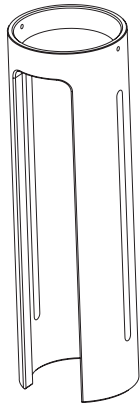

TUBE

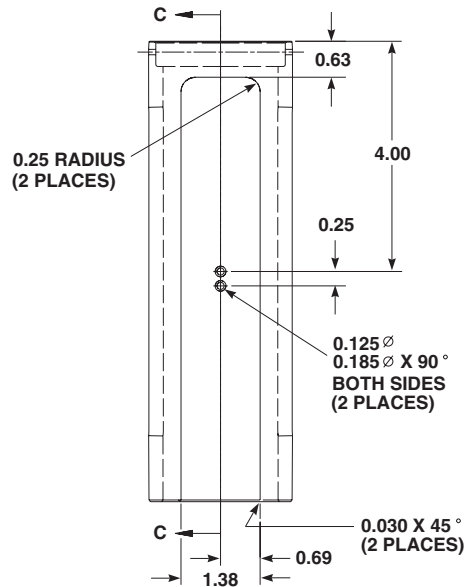

BREAK SHARP  
EDGES ALL AROUND  
1.38 WIDE SLOT  
0.015  
0.030 RADIUS

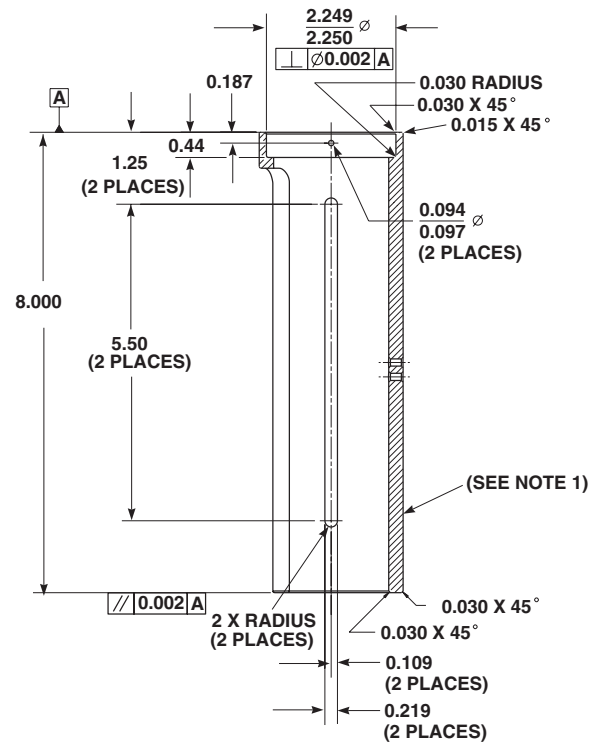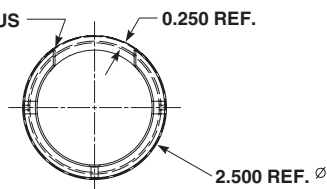


SECTION C-C

TUBE  
DETAIL D

AM5402\_3  
SA

Figure 274. Solid Blade Pin Removal Tool. (Sheet 3 of 6)

FIELD MANUFACTURE ITEMS - Continued

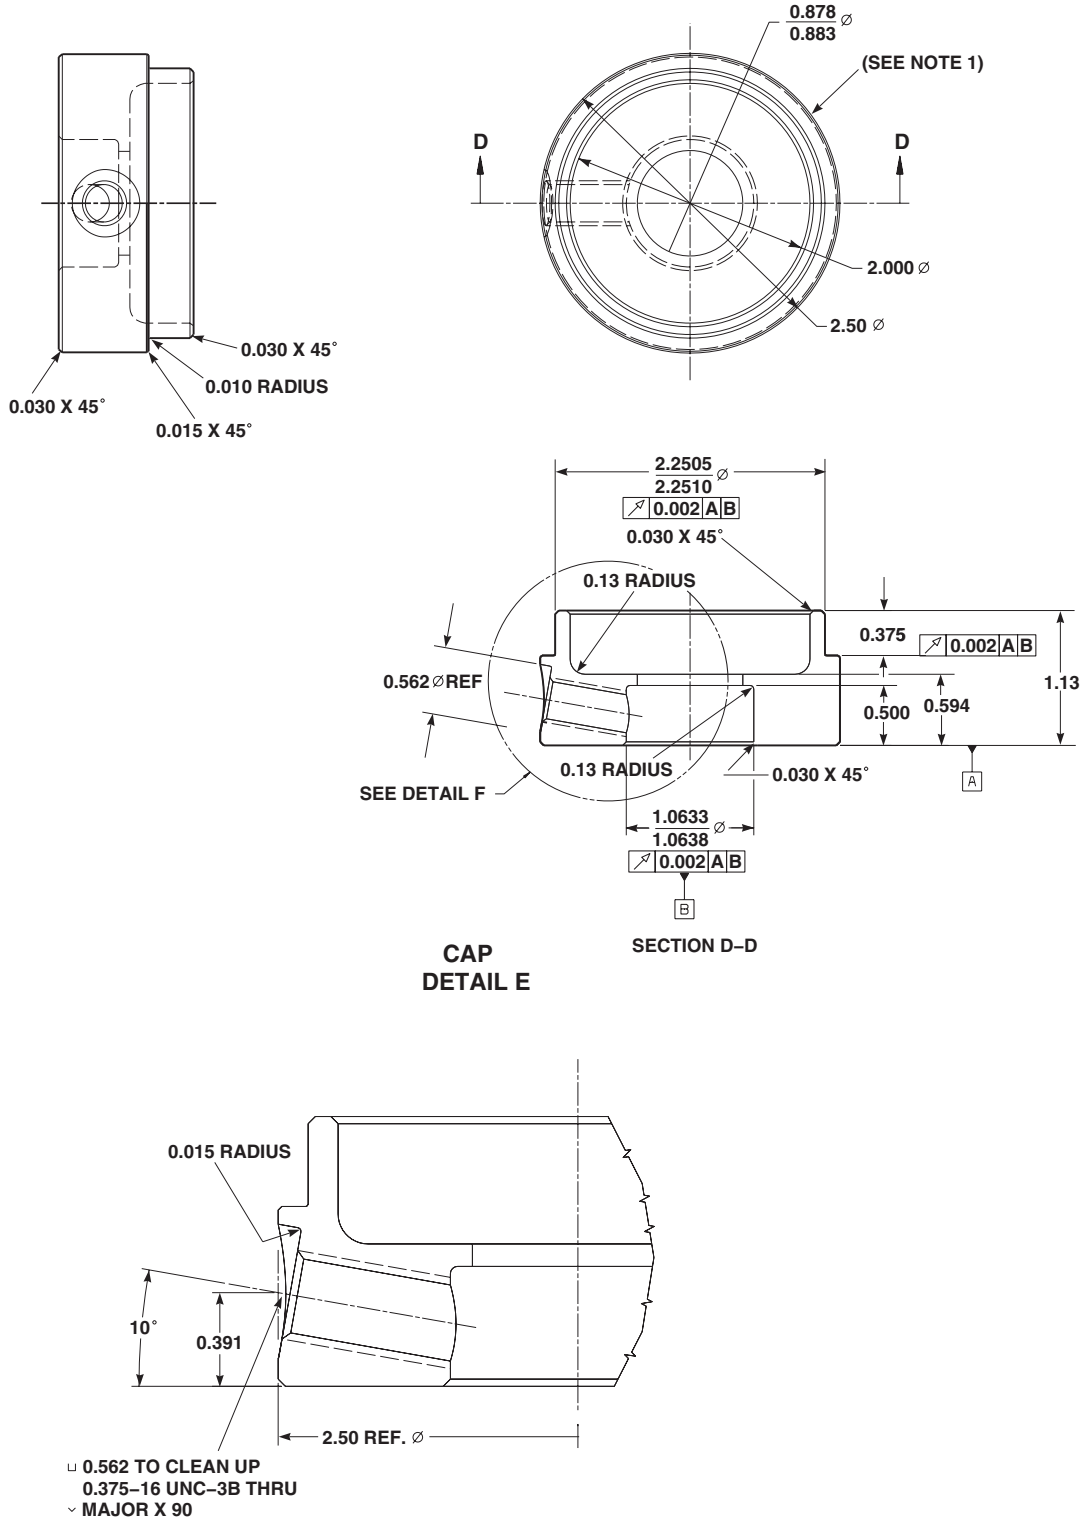

DETAIL F

AM5402\_4  
SA

Figure 274. Solid Blade Pin Removal Tool. (Sheet 4 of 6)

FIELD MANUFACTURE ITEMS - Continued

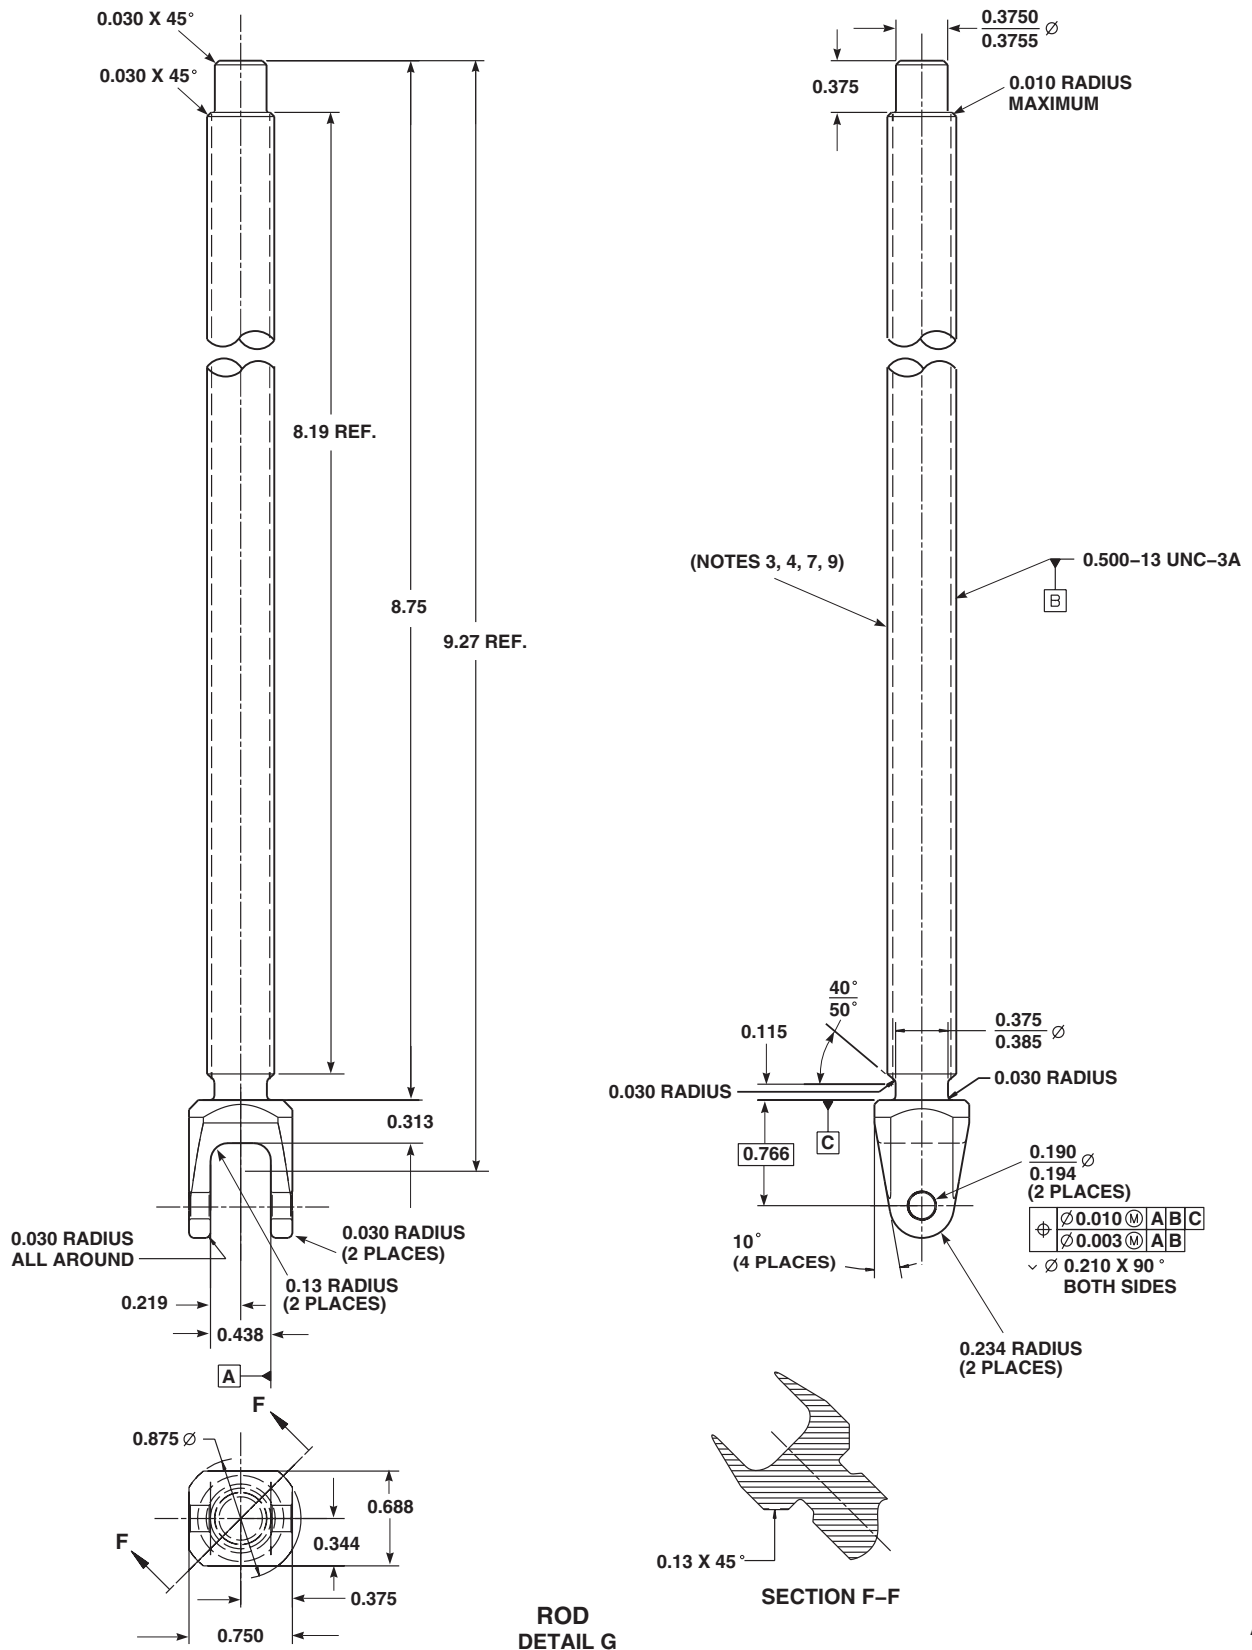


Figure 274. Solid Blade Pin Removal Tool. (Sheet 5 of 6)

## FIELD MANUFACTURE ITEMS - Continued

| MAIN ROTOR BLADE REMOVAL TOOL PARTS LIST |                                                                                                                                         |          |
|------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------|----------|
| NOMENCLATURE                             | MATERIAL                                                                                                                                | QUANTITY |
| TUBE ASSEMBLY<br>(CONSISTS OF:)          |                                                                                                                                         | 1        |
| TUBE                                     | QQ-A-200/8 EXTRUDED SEAMLESS ALUMINUM TUBING                                                                                            | 1        |
| CAP                                      | AMS 4341 7050T73511 EXTRUSION                                                                                                           | 1        |
| SPRING PIN                               | NAS561P3-4 (CAGE 80205)                                                                                                                 | 2        |
| NUT                                      | COPPER TQ50 EXTRUSION                                                                                                                   | 1        |
| ROD                                      | AMS 6415 STEEL ALLOY                                                                                                                    | 1        |
| RING                                     | AMS 6415 STEEL ALLOY                                                                                                                    | 1        |
| BEARING                                  | M81934/2-14A014 (CAGE 81349)                                                                                                            | 1        |
| SPRING PIN                               | NAS561P4-10 (CAGE 80205)                                                                                                                | 1        |
| RETAINING RING                           | MS16624-4087 (CAGE 96906)                                                                                                               | 1        |
| T-PIN                                    | CL-1-TP (CAGE 99862)                                                                                                                    | 1        |
| LEVER BAR                                | CL-647-LVB-S (CAGE 99862)                                                                                                               | 1        |
| HANDLE                                   | CL-652-PGH (CAGE 99862)                                                                                                                 | 1        |
| CABLE ASSEMBLY                           | 3/64-INCH DIAMETER, PLASTIC COATED, 270-POUND MINIMUM BREAKING STRENGTH, 0.05-INCH OVAL SPLICE SLEEVE END LOOPS, 12.0-INCH TOTAL LENGTH | 1        |


## NOTES

1. ANODIZE PER MIL-A-8625
2. APPLY EPOXY PRIMER MIL-P-85582
3. BEFORE FINISH MACHINING, HEAT TREAT TO 150,000 PSI MINIMUM U.T.S., ROCKWELL C33-38 PER MIL-H-6875.
4. ZINC/NICKEL PLATE PER AMS 2417, TYPE 2 TO A THICKNESS RANGE OF 0.004-0.007 - INCH. BAKE IN ACCORDANCE WITH SAME REQUIREMENTS FOR CADMIUM PLATING.
5. PAINT USING MIL-C-85285, RED #11136 PER FED-STD-595
6. DO NOT PRIME OR PAINT HOLES.
7. ALL SURFACES OF REVOLUTION ON COMMON AXIS TO BE WITHIN 0.005 FIM CIRCULAR RUNOUT UNLESS INDICATED.
8. APPLY SOLID FILM LUBRICANT, MIL-L-23398 TO THREADS OF RODS.

AM5402\_6  
SA

Figure 274. Solid Blade Pin Removal Tool. (Sheet 6 of 6)

FIELD MANUFACTURE ITEMS - Continued

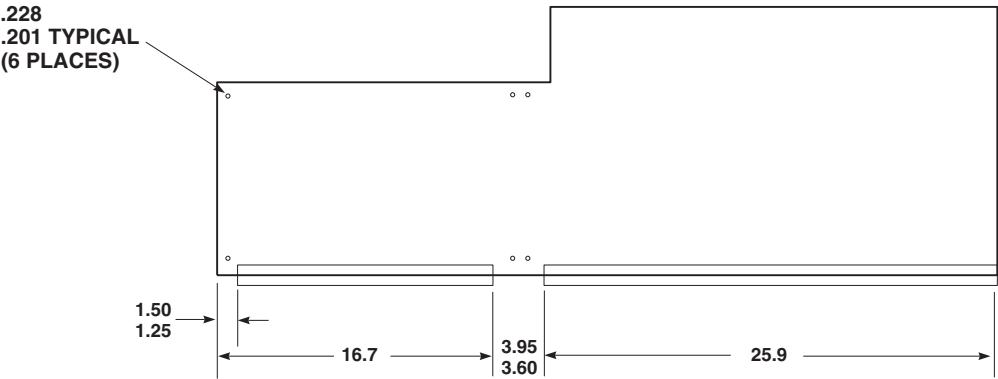

| PART NUMBER  | MAKE FROM<br>PART NUMBER |
|--------------|--------------------------|
| LSF01756-002 | 70500-02061-056          |


NOTES

- 1. MAKE FROM PANEL ASSY, ACFT CEI, CAGEC 78286.
- 2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
- 3. MATCH LOCATE TWO HOLES IN ACOUSTIC PANEL, FROM RESPECTIVE HOLES LOCATIONS, PER M4 MOUNT INSTALLATION (LSF017838-001).
- 4. TRIM HINGE AS SHOWN REMOVING ANY EXSITING FASTENERS IN THE NOTED AREA.

GF0885  
SA

Figure 275. M4 Mount Ceiling Panel. (Sheet 1 of 5)

FIELD MANUFACTURE ITEMS - Continued

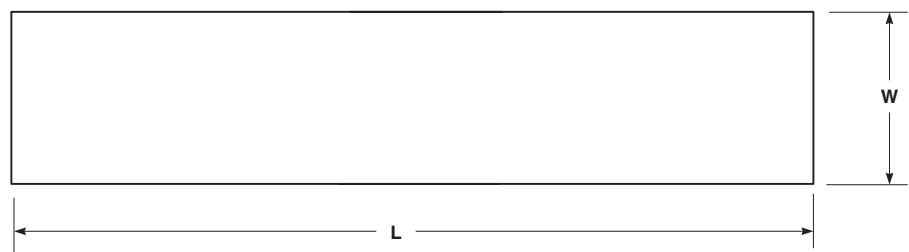

| PART NUMBER  | LENGTH | WIDTH | MAKE FROM<br>PART NUMBER |
|--------------|--------|-------|--------------------------|
| LSF01931-003 | 6.0    | 2.0   | MIL-R-6130               |


NOTES

- 1. MAKE FROM CELLULAR RUBBER SHEET, NSN 9320-00009-0213.
- 2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
- 3. TRIM TO FIT.

GF0881  
SA

Figure 275. M4 Mount Ceiling Panel. (Sheet 2 of 5)

FIELD MANUFACTURE ITEMS - Continued

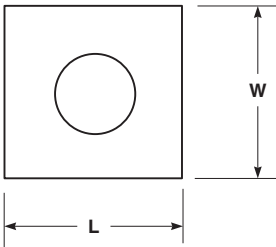

| PART NUMBER  | LENGTH | WIDTH | MAKE FROM<br>PART NUMBER |
|--------------|--------|-------|--------------------------|
| LSF01738-002 | 2.0    | 2.0   | 85765K71                 |


NOTES

- 1. MAKE FROM ECH RUBBER, HIGH-TEMP, CAGEC 39426.
- 2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
- 3. CUT HOLE IN CENTER TO FIT M4 FLASH SUPPRESSOR RESTRAINT.

GF0882  
SA

Figure 275. M4 Mount Ceiling Panel. (Sheet 3 of 5)

FIELD MANUFACTURE ITEMS - Continued

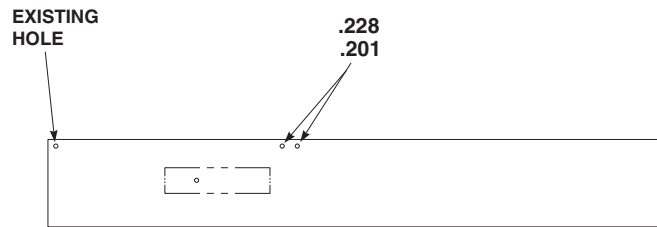

| PART NUMBER  | MAKE FROM PART NUMBER |
|--------------|-----------------------|
| LSF01756-001 | 70500-02061-053       |

NOTES


1. MAKE FROM PANEL ASSY, ACFT, CEI, CAGEC 78286.
2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
3. MATCH LOCATE TWO HOLES IN ACOUSTIC PANEL, FROM RESPECTIVE HOLES LOCATIONS, PER M4 MOUNT INSTALLATION (LSF017838-001).

GF0883  
SA

Figure 275. M4 Mount Ceiling Panel. (Sheet 4 of 5)



FIELD MANUFACTURE ITEMS - Continued

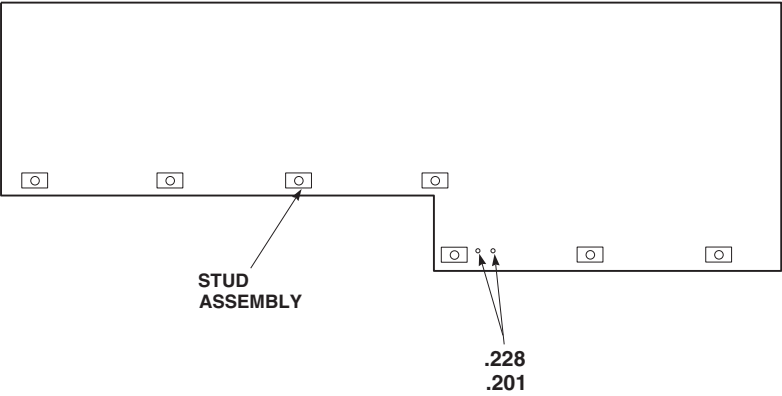

| PART NUMBER  | MAKE FROM PART NUMBER |
|--------------|-----------------------|
| LSF01756-002 | 70500-02061-056       |


NOTES

- 1. MAKE FROM PANEL ASSY, ACFT CEI, CAGEC 78286.
- 2. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
- 3. MATCH LOCATE TWO HOLES IN ACOUSTIC PANEL, FROM RESPECTIVE HOLES LOCATIONS, PER M4 MOUNT INSTALLATION (LSF017838-001).
- 4. REMOVE STUD ASSEMBLY AND DISCARD PER LOCAL PROCEDURES.

GF0884  
SA

Figure 275. M4 Mount Ceiling Panel. (Sheet 5 of 5)

## FIELD MANUFACTURE ITEMS - Continued

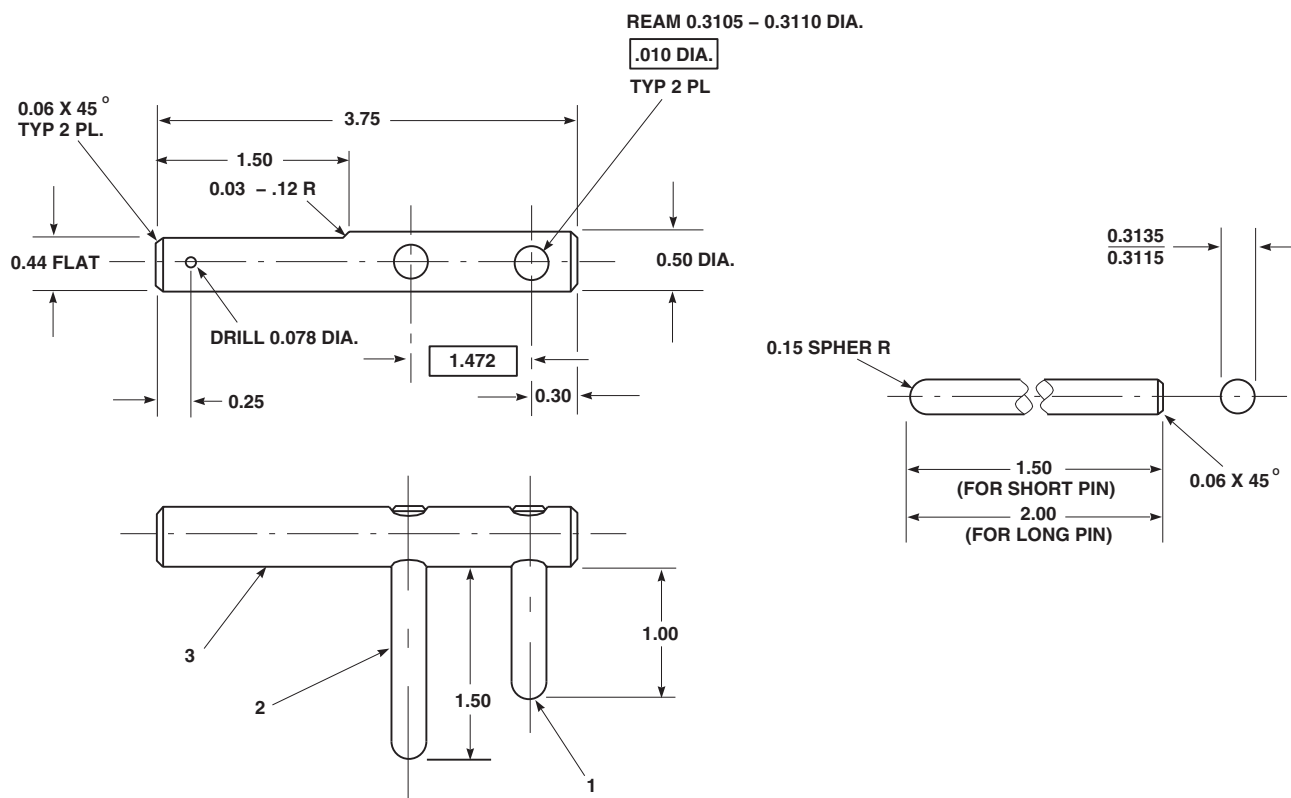

| ITEM NO. | NOMENCLATURE | SIZE / MATERIAL                                 |
|----------|--------------|-------------------------------------------------|
| 1        | SHORT PIN    | 0.3115 - 0.3135 IN DIAMETER X 1.5 IN. LONG CRS  |
| 2        | LONG PIN     | 0.3115 - 0.3135 IN DIAMETER X 2.00 IN. LONG CRS |
| 3        | HANDLE       | 0.50 IN. DIAMETER X 3.75 IN. LONG CRS           |


## NOTE

1. ALL DIMENSIONS ARE IN INCHS UNLESS NOTED.
2. BREAK ALL SHARP EDGES 0.06 RADIUS WITH 45 DEGREE ANGLE
3. CADMIUM PLATE ASSEMBLY PER QQ-P-416, CL2, TYPE II

AM4495  
SA

Figure 276. Collective Boost Actuator "F" Rigging PIN.

## FIELD MANUFACTURE ITEMS - Continued

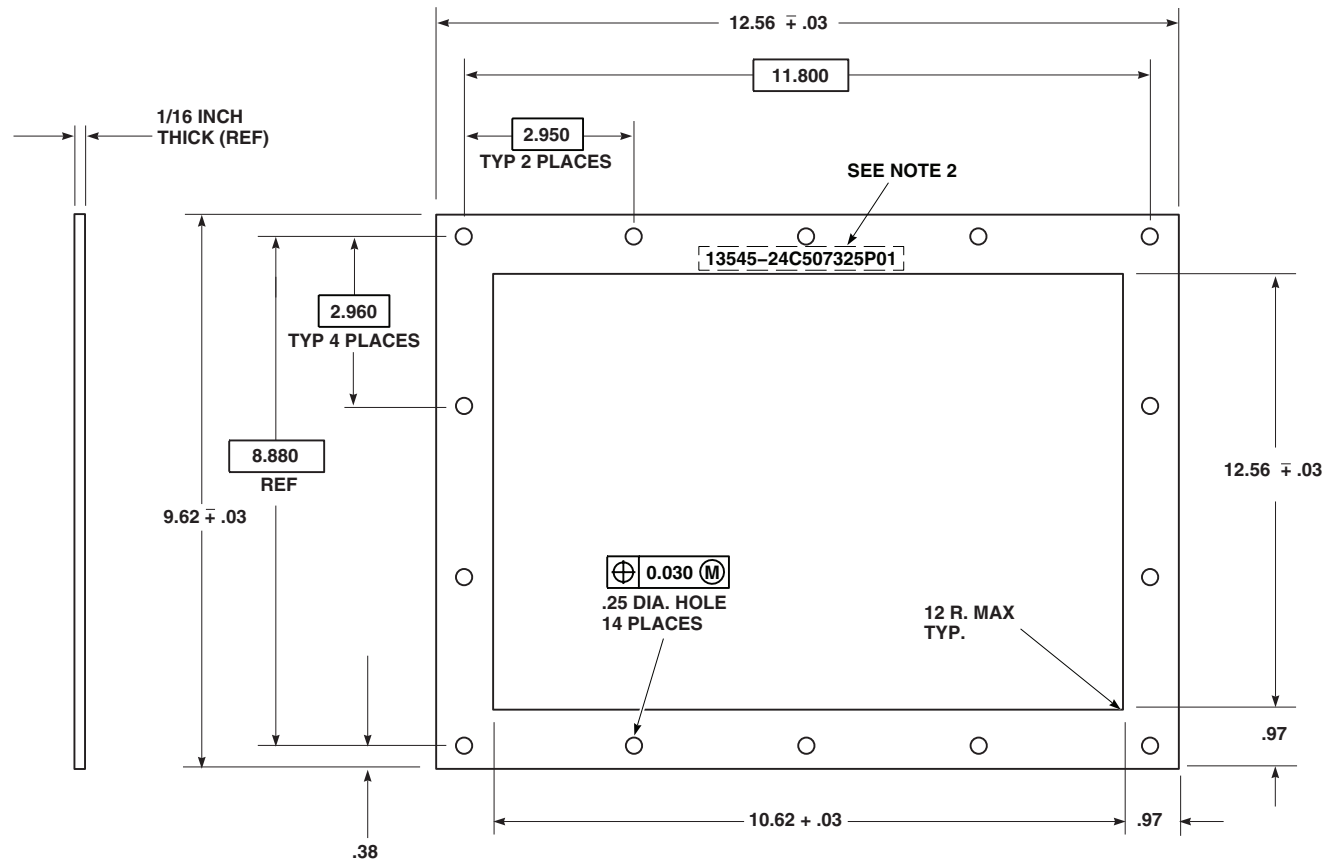


## NOTES

1. MAKE FROM 0.063 THICK ARAMID FIBER GASGET SHEET, ASTFM F-146 STD, NSN 5330-01-282-9276, OR P/N 3000 X 1/16 THK 60 X 60, TOTAL MANUFACTURED YEILD OF 16 EACH P/N 24C50732P01 GASKET PER SHEET.
2. IDENTIFY PARTS PER MIL-STD-130. METHODS, MATERIALS, AND EQUIPMENT SHALL BE PER AS478 AND APPICABLE DRAWING CALLOUT. REPLACE 13545 WITH "81996 PREFIX PORTION OF P/N 24C507325P01.
3. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.

AA2877  
SA

Figure 277. Gasket.

## FIELD MANUFACTURE ITEMS - Continued

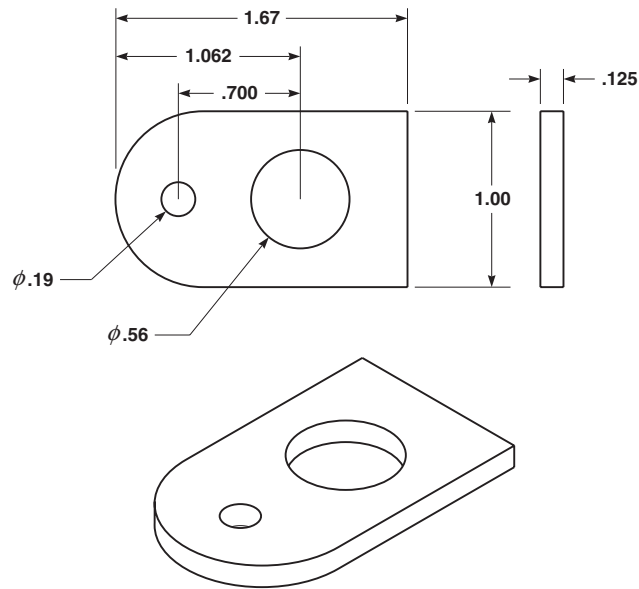


## NOTES

1. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
2. MAKE FROM SHIM STOCK P / N AMS-DTL -22499, CAGE 81343, NSN 9535-01-242-1990.
3. CUT SHIM STOCK TO REQUIRED DIMENSIONS.
4. REMOVE ALL BURRS AND SHARP EDGES.

AA2067  
SA

Figure 278. Shim.

## FIELD MANUFACTURE ITEMS - Continued

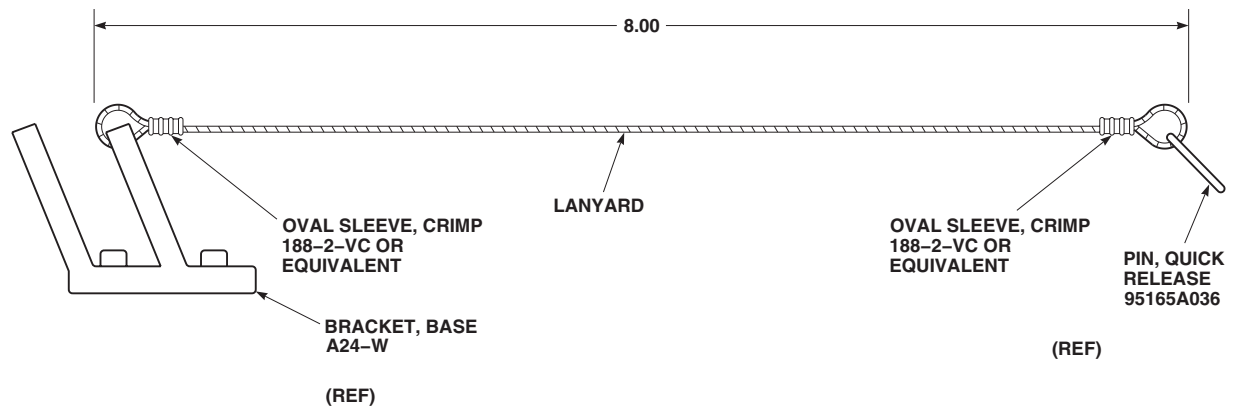


## NOTES

1. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
2. MAKE FROM:
  - A. COATED WIRE ROPE P / N 3459T41, CAGE A0543.
  - B. SWAGING SLEEVE, WIRE ROPE P / N 188-2-VC, CAGE, NSN 4030-01-105-7341.
  - C. BRACKET, BASE P / N A24-W. (REF)
  - D. QUICK RELEASE PIN P / N 95165A036. (REF)
3. CUT LANYARD TO REQUIRED LENGTH. ASSEMBLE SWAGING SLEEVES, BRACKET AND QUICK RELEASE PIN AS SHOWN.
4. REMOVE ALL BURRS AND SHARP EDGES.

AA2082  
SA

Figure 279. Lanyard.

## FIELD MANUFACTURE ITEMS - Continued

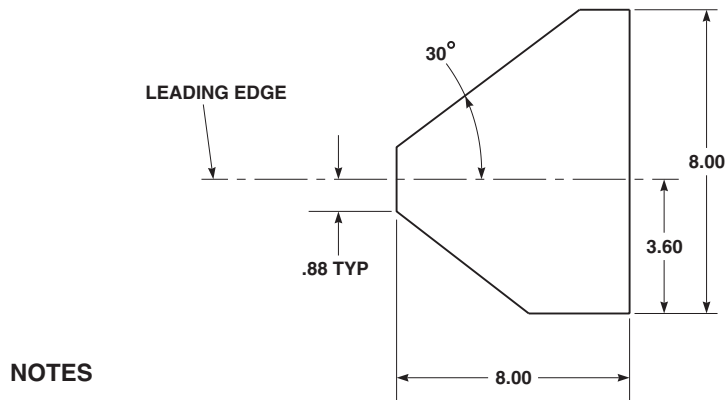


## NOTES

1. MAKE FROM TAPE ADHESIVE, RUBBER, SS9538-002.
2. MADE BY 3M CO.
3. ALL DIMENSIONS ARE IN INCHES UNLESS NOTED.
4. CUT TAPE TO REQUIRED LENGTH. PART NUMBER: 70150-09100-101.

AA2026  
SA

Figure 280. Main Rotor Blade Patch.

## FIELD MANUFACTURE ITEMS - Continued

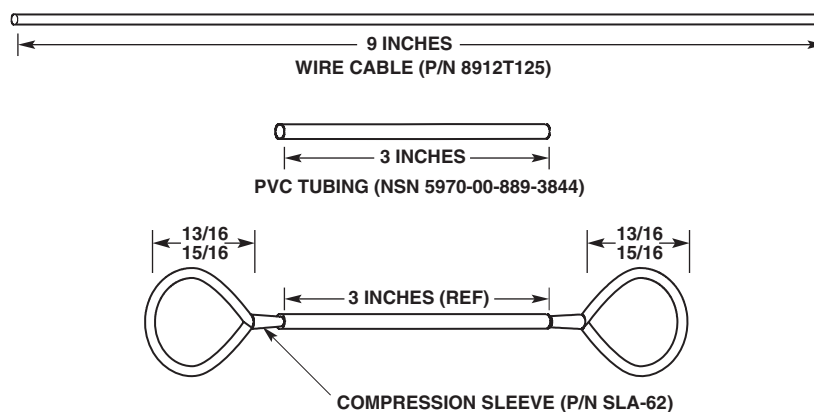


## NOTES

1. MAKE FROM WIRE CABLE, MIL-DTL-83420, P/N 8912T125.
2. MAKE FROM PVC TUBING, MIL-I-631D, NSN 5970-00-889-3844.
3. MAKE FROM COMPRESSION SLEEVE, MIL SPEC 51844, P/N SLA-62.
4. ALL DIMENSIONS ARE IN INCHES, UNLESS OTHERWISE NOTED.
5. CUT 1 LENGTH PER DIAGRAM.
6. FORM ONE END OF THE WIRE CABLE INTO A LOOP MEASURING NOT LESS THAN 13/16 INCHES AND NOT MORE THAN 15/16 INCHES.
7. PLACE COMPRESSION SLEEVE ON LOOPEd END OF WIRE AND CLOSE USING A WIRE CRIMPING TOOL.
8. SLIDE THE PVC TUBING ONTO THE CABLE.
9. PLACE COMPRESSION SLEEVE ON LOOSE END OF WIRE.
10. FORM END OF THE WIRE CABLE INTO A LOOP MEASURING NOT LESS THAN 13/16 INCHES AND NOT MORE THAN 15/16 INCHES.
11. CLOSE COMPRESSION SLEEVE USING A WIRE CRIMPING TOOL.
12. WHEN ASSEMBLED, CONFIRM PVC TUBING IS CENTERED ON CABLE WITH APPROXIMATELY 3/32" PLAY ON EACH END.
13. FINISHED PRODUCT SHOULD MEASURE NOT LESS THAN 5-7/8 INCHES AND NOT MORE THAN 6-1/8 INCHES.

AA2879  
SA

Figure 281. Pull Handle.

## FIELD MANUFACTURE ITEMS - Continued

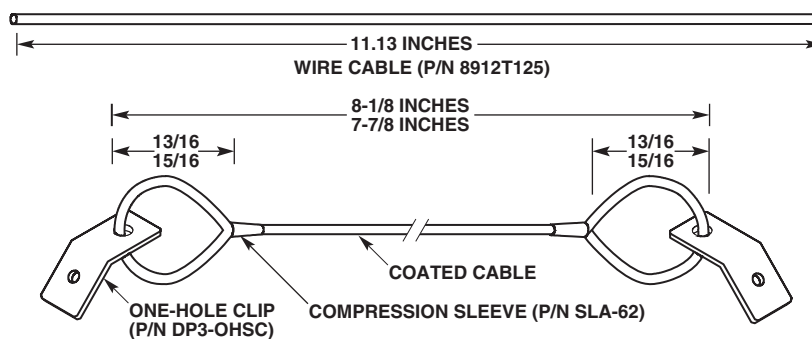

## NOTES

1. MAKE FROM WIRE CABLE, MIL-DT-83420, P/N 8912T125.
2. MAKE FROM COMPRESSION SLEEVE, MIL SPEC 51844, P/N SLA-62.
3. MAKE FROM ONE-HOLE CLIP, P/N DP3-OHSC.
4. ALL DIMENSIONS ARE IN INCHES, UNLESS OTHERWISE NOTED.
5. CUT 1 LENGTH PER DIAGRAM.
6. PLACE A COMPRESSION SLEEVE ONTO EACH END OF THE WIRE CABLE.
7. THREAD EACH END OF THE WIRE CABLE THROUGH THE LARGER HOLE OF A STAINLESS STEEL ONE-HOLE CLIP.
8. FORM EACH END OF WIRE CABLE INTO A LOOP MEASURING NOT LESS THAN 13/16 INCHES AND NOT MORE THAN 15/16 INCHES.
9. CLOSE EACH COMPRESSION SLEEVE USING A WIRE CRIMPING TOOL.
10. FINISHED PRODUCT SHOULD MEASURE NOT LESS THAN 7-7/8 INCHES AND NOT MORE THAN 8-1/8 INCHES.

AA2878  
SA

Figure 282. Lanyard.

END OF WORK PACKAGE



## GLOSSARY

|                           |                                                                                                                                                                                                                                                                  |
|---------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ACCESS                    | This is a means of getting into a part of a helicopter. Doors allow one access or entry. However, many panels (access panels) are designed as covers that may be opened or removed to allow personnel to get to areas otherwise concealed, to do required tasks. |
| ANEMOSTAT                 | An adjustable opening in the heating/ventilating ducts that is used to control airflow into the cockpit and cabin of the helicopter.                                                                                                                             |
| ATTACHING PARTS           | Parts that are attached to a larger assembly, such as a gear box, and which must be removed in order to isolate the larger assembly.                                                                                                                             |
| BIM                       | Blade inspection method.                                                                                                                                                                                                                                         |
| BLOCK DIAGRAM             | A figure that shows by means of blocks, representing pieces of equipment or systems, how components tie into one another.                                                                                                                                        |
| BREAKING TORQUE           | To gradually reduce, by loosening, the tension on an attaching device, such as a bolt and nut.                                                                                                                                                                   |
| BUILDUP                   | The reverse of TEARDOWN. It is the installation onto a larger component or assembly, of lines, wiring, supports, and other parts, so that a larger component or assembly remains for shipping or storage.                                                        |
| CALIBRATE                 | To adjust the operation of a piece of equipment so that it will operate within certain specified limits.                                                                                                                                                         |
| CENTERLINE                | An imaginary line through the middle of a designated area, from which a measurement is to be taken.                                                                                                                                                              |
| CHECK                     | Usually used to indicate that an examination is to be made for condition or workability, and that one's senses will be used (sight, hearing, touch, smell).                                                                                                      |
| ENABLE                    | To make it possible for a piece of electronic equipment to operate, usually by putting a controlling switch ON.                                                                                                                                                  |
| ESU                       | Electronic Sequence Unit.                                                                                                                                                                                                                                        |
| FAULT DISABLE             | When a fault develops in certain equipment the component will turn itself off to prevent further damage.                                                                                                                                                         |
| FAULT ISOLATION PROCEDURE | A procedure that is followed to correct malfunctions in equipment.                                                                                                                                                                                               |
| FUNCTION                  | The job a piece of equipment does either by itself, or working in combination with other equipment.                                                                                                                                                              |

|                                  |                                                                                                                                                                                                                                                                                                             |
|----------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| INSPECT                          | Usually used to indicate that an examination is to be made for condition or workability, and that equipment, such as instruments and/or tools, will be used.                                                                                                                                                |
| JACKSCREW                        | Screws that are used to separate parts. Each jackscrew used is turned a small amount, until the parts gradually separate.                                                                                                                                                                                   |
| LEFT-HAND THREAD                 | A thread that spirals to the left, as opposed to a standard right-hand thread that spirals to the right. A left-hand thread typically used on some control rods and on turnbuckles, opposing a right-hand thread on the opposite end.                                                                       |
| LOCATION DIAGRAM                 | An illustration that shows various assemblies involved in a particular configuration, in their normal location on the helicopter.                                                                                                                                                                           |
| LOGIC-TYPE TROUBLESHOOTING CHART | A chart that states a problem that has caused a component to malfunction, and then gives step-by-step instructions, in outlined rectangles, that will discover the cause of the malfunction and tell how to eliminate the problem or repair the component.                                                  |
| MAINTENANCE                      | One or more of a number of actions on the helicopter done to make sure that it is kept in good flying condition. This includes many procedures related to systems and components, including: removal, replacement, inspection, checking, adjustment, testing, repair, lubrication, installation, servicing. |
| OPERATIONAL CHECK                | Where required, it is a testing procedure that follows a maintenance action on an assembly, and precedes the in-flight use of that assembly. It is done to make sure that the component is in proper working condition.                                                                                     |
| REMOVE SLACK                     | To adjust so that there is no looseness, such as with a pulley belt. Where there is more than one element involved, as with cables of a sling, slack must be removed uniformly from all elements.                                                                                                           |
| ROTATE                           | To turn on a fixed axis. However, this concerns successive turnings of 360 degrees. You can manually turn a rotor head. An operating rotor head rotates. Likewise, a control switch that turns on a central axis is turned by the operator, not rotated.                                                    |
| TEARDOWN                         | The reverse of BUILDUP. It is the removal, from a larger component or assembly, of lines, hoses, wiring, supports, and other parts, so that the component or assembly, as originally received from shipping or storage, remains.                                                                            |
| THEORY OF OPERATION              | A description of a system, or a part of that system, telling how things work, hydraulically, electrically, and mechanically.                                                                                                                                                                                |

## INDEX

### WP Sequence No.

200 Gallon External Tank **CEFS** ..... 1574 14

### A

AC Bus Tie Contactor, K4 ..... 0844 00  
 AC Electrical Auxiliary Power System Description and Data..... 0030 00  
 AC Electrical External Power System Description and Data ..... 0031 00  
 AC Electrical Primary System Description and Data..... 0029 00  
 AC Electrical System **HH-60A HH-60L** ..... 0122 00  
 AC Electrical System Description and Data..... 0028 00  
 AC Electrical System..... 0101 00  
 AC Essential Bus Relays, K8 and K13 ..... 0845 00  
 AC Secondary Bus Contactor, K11 ..... 0847 00  
 Accessory Module Chip Detector ..... 0643 00  
 Accessory Module Housing Repair..... 0641 00  
 Accessory Module Inspection..... 0620 00  
 Accessory Module Oil Screen ..... 0644 00  
 Accessory Module Shim..... 0658 00  
 Accessory Module Spline Adapter ..... 0657 00  
 Accessory Module..... 0656 00  
 Actuator Limit Switch Adjustment **EH60A** ..... 0927 00  
 Adapter Defuel External Tanks ..... 1620 00  
 Aeromedical Evacuation Kit 115 Volt/60 HZ AC Power Receptacles ..... 1398 00  
 Aeromedical Evacuation Kit Description and Data..... 0053 00  
 Aeromedical Evacuation Kit Frequency Converter ..... 1388 00  
 Aeromedical Evacuation Kit Inspection..... 1376 00  
 Aeromedical Evacuation Kit Installation ..... 1382 00  
 Aeromedical Evacuation Kit I.V. Bag Support and I.V. Hooks..... 1393 00  
 Aeromedical Evacuation Kit Litter Belts ..... 1389 00  
 Aeromedical Evacuation Kit Litter Latch, Support Guides, and Stops ..... 1390 00  
 Aeromedical Evacuation Kit Litter Light Assembly ..... 1385 00  
 Aeromedical Evacuation Kit Litter Light Harness Assembly ..... 1387 00  
 Aeromedical Evacuation Kit Litter Light Lamp..... 1384 00  
 Aeromedical Evacuation Kit Litter Light Switch..... 1386 00  
 Aeromedical Evacuation Kit Litter Support Center Pivot..... 1396 00  
 Aeromedical Evacuation Kit Litter Support End Lock Levers..... 1395 00  
 Aeromedical Evacuation Kit Litter Support Safety Belt Buckle ..... 1397 00  
 Aeromedical Evacuation Kit Litter Support Wear Strips ..... 1394 00  
 Aeromedical Evacuation Kit Lock Mechanism ..... 1391 00  
 Aeromedical Evacuation Kit Medevac Floor Support (AVIM)..... 1575 00  
 Aeromedical Evacuation Kit Oxygen Bottle Strap..... 1392 00  
 Aeromedical Evacuation Kit Removal..... 1383 00

## INDEX - CONTINUED

## WP Sequence No.

|                                                                               |         |
|-------------------------------------------------------------------------------|---------|
| Aeromedical Evacuation Kit.....                                               | 0157 00 |
| Aft Bellcrank Inspections .....                                               | 1026 00 |
| Aft Bellcrank Support CSI Inspection .....                                    | 1024 00 |
| Aft Bellcrank Support.....                                                    | 1141 00 |
| Aft Bellcrank.....                                                            | 1137 00 |
| Aft Control Rod .....                                                         | 1126 00 |
| Aft Engine Mount Fittings (AVIM) .....                                        | 0516 00 |
| Aft Engine Mount Links (AVIM).....                                            | 0517 00 |
| Aft Engine Mount Struts (AVIM) .....                                          | 0515 00 |
| Aft Engine Mount Supports (AVIM) .....                                        | 0518 00 |
| Aft Engine Mounts.....                                                        | 0485 00 |
| Aft Longitudinal Bellcrank Support Arm CSI Inspection.....                    | 1029 00 |
| Aft Tie Rod and Support Fitting CSI Inspection.....                           | 1025 00 |
| Aft Tie Rod and Support Fitting .....                                         | 1139 00 |
| After Dual-Engine Operation With Gust Lock Engaged.....                       | 1707 00 |
| After Engine Output Shaft Maintenance.....                                    | 1713 00 |
| After Exceeding 145 KIAS With Cargo Doors Opened .....                        | 1708 00 |
| After Fire Extinguishing System Discharge (Halon-Type) .....                  | 1709 00 |
| After Firing BRU-22A/A Ejector Rack.....                                      | 1711 00 |
| After Firing Chaff Dispenser.....                                             | 1710 00 |
| After Firing MAU-40/A Ejector Rack .....                                      | 1712 00 |
| After Main Rotor Blade Contact With ALQ-144 IR Jammer.....                    | 1715 00 |
| After Main Rotor Blade Contact With Tail Rotor Pylon or Tailcone.....         | 1714 00 |
| After Operating Transmission With Oil Pressure Below 20 PSI.....              | 1716 00 |
| After Single-Engine Operation Above Idle With Gust Lock Engaged.....          | 1717 00 |
| Air Transport Hydraulic Cart Control Box.....                                 | 1412 00 |
| Air Transport Hydraulic Cart Control Pendant.....                             | 1411 00 |
| Air Transport Hydraulic Cart Directional Control Valve/Special Manifold ..... | 1417 00 |
| Air Transport Hydraulic Cart Filter Assembly .....                            | 1415 00 |
| Air Transport Hydraulic Cart Filter Element.....                              | 1414 00 |
| Air Transport Hydraulic Cart Flow Regulators/Needle Valves.....               | 1418 00 |
| Air Transport Hydraulic Cart Grounding Cable .....                            | 1422 00 |
| Air Transport Hydraulic Cart Hydraulic Lines .....                            | 1420 00 |
| Air Transport Hydraulic Cart Power Cable .....                                | 1423 00 |
| Air Transport Hydraulic Cart Pressure Switch .....                            | 1416 00 |
| Air Transport Hydraulic Cart Pump and Motor Assembly .....                    | 1413 00 |
| Air Transport Hydraulic Cart Reservoir.....                                   | 1421 00 |
| Air Transport Hydraulic Cart Wheel.....                                       | 1419 00 |
| Air Transport Hydraulic Cart.....                                             | 0164 00 |
| Aircraft Description and Data .....                                           | 0002 00 |
| Aircraft Inventory Master Guide .....                                         | 1744 00 |
| Airframe Description and Data .....                                           | 0003 00 |
| Airspeed Indicator.....                                                       | 0771 00 |
| Anticollision Light Assemblies.....                                           | 0913 00 |

## INDEX - CONTINUED

|                                                                        | WP Sequence No. |
|------------------------------------------------------------------------|-----------------|
| Anticollision Light Base Subassemblies .....                           | 0914 00         |
| Anticollision Light Red and White Subassemblies .....                  | 0912 00         |
| Anticollision Lights Power Supply Unit.....                            | 0915 00         |
| Anti-collision Lights .....                                            | 0115 00         |
| Antiflap Assembly .....                                                | 0554 00         |
| APU Access Door Beam .....                                             | 0305 00         |
| APU Access Door .....                                                  | 0303 00         |
| APU Accumulator Handpump .....                                         | 0744 00         |
| APU Accumulator Pressure Gage .....                                    | 0749 00         |
| APU Accumulator Pressure Switch.....                                   | 0748 00         |
| APU Accumulator Start Valve Fittings (AVIM) .....                      | 0765 00         |
| APU Accumulator .....                                                  | 0742 00         |
| APU Check Valve .....                                                  | 0698 00         |
| APU Compartment Pneumatic Tubes.....                                   | 0701 00         |
| APU Drain Lines .....                                                  | 1370 00         |
| APU Electronic Sequence Unit (ESU).....                                | 0865 00         |
| APU Engine Air Particle Separator (EAPS) Air Particle Separator .....  | 1516 00         |
| APU Engine Air Particle Separator (EAPS) Collector Box.....            | 1517 00         |
| APU Engine Air Particle Separator (EAPS) Ejector Support Bracket ..... | 1519 00         |
| APU Engine Air Particle Separator (EAPS) Kit Installation .....        | 1514 00         |
| APU Engine Air Particle Separator (EAPS) Kit Removal.....              | 1515 00         |
| APU Engine Air Particle Separator (EAPS) Scavenge Exhaust Duct.....    | 1518 00         |
| APU Exhaust Duct.....                                                  | 1360 00         |
| APU Exhaust Fairing .....                                              | 0306 00         |
| APU Exhaust Pipe .....                                                 | 1361 00         |
| APU Front Inboard and Outboard Support Mounts Repair .....             | 1373 00         |
| APU Front Inboard Support Mount .....                                  | 1371 00         |
| APU Front Mounting Lugs.....                                           | 1363 00         |
| APU Front Outboard Support Mount.....                                  | 1372 00         |
| APU Fuel Line Prime .....                                              | 1367 00         |
| APU Fuel Line .....                                                    | 1369 00         |
| APU Fuel Shutoff Valve .....                                           | 1368 00         |
| APU Generator.....                                                     | 0842 00         |
| APU Igniter Plug .....                                                 | 1375 00         |
| APU Panel.....                                                         | 0307 00         |
| APU Rear Mounting Lug .....                                            | 1364 00         |
| APU Rear Support Mount .....                                           | 1374 00         |
| APU Screens .....                                                      | 0304 00         |
| APU Shroud Assembly .....                                              | 1362 00         |
| APU Spline Adapter.....                                                | 1366 00         |
| APU Start Check Valve Restrictor .....                                 | 0747 00         |
| APU Start Hydraulic Flex Hoses .....                                   | 0751 00         |
| APU Start Hydraulic Rigid Tubing Lines.....                            | 0752 00         |
| APU Start Motor.....                                                   | 1365 00         |

## INDEX - CONTINUED

## WP Sequence No.

|                                                                                     |         |
|-------------------------------------------------------------------------------------|---------|
| APU Start Tee Check Valve .....                                                     | 0750 00 |
| APU Start Valve .....                                                               | 0743 00 |
| APU T-Handle Fire Detection Lamps .....                                             | 1202 00 |
| APU T-Handle Fire Extinguisher Switch Assembly .....                                | 1203 00 |
| APU T-Handle .....                                                                  | 1201 00 |
| APU/External Power Contactor, K3 .....                                              | 0840 00 |
| Armament Description and Data .....                                                 | 0052 00 |
| Autotransformer, T12 .....                                                          | 0833 00 |
| Auxiliary Cabin Heater (AVIM) .....                                                 | 0165 00 |
| Auxiliary Cabin Heater Blower Power Harness .....                                   | 1508 00 |
| Auxiliary Cabin Heater Blower Support .....                                         | 1498 00 |
| Auxiliary Cabin Heater Control Harness .....                                        | 1506 00 |
| Auxiliary Cabin Heater Distribution Elbow/Distribution Duct Support .....           | 1499 00 |
| Auxiliary Cabin Heater Distribution Elbow/Distribution Duct .....                   | 1501 00 |
| Auxiliary Cabin Heater Duct Cycling/Overheat Thermostat Assembly .....              | 1513 00 |
| Auxiliary Cabin Heater Ducts, Configuration III .....                               | 1510 00 |
| Auxiliary Cabin Heater Ducts, Configuration IV .....                                | 1511 00 |
| Auxiliary Cabin Heater Ducts, Configurations I and II .....                         | 1509 00 |
| Auxiliary Cabin Heater Electrical Connector (AVIM) .....                            | 1584 00 |
| Auxiliary Cabin Heater Elements (AVIM) .....                                        | 1585 00 |
| Auxiliary Cabin Heater Kit Blower .....                                             | 1504 00 |
| Auxiliary Cabin Heater Kit Installation (AVIM) .....                                | 1495 00 |
| Auxiliary Cabin Heater Kit Installation .....                                       | 1493 00 |
| Auxiliary Cabin Heater Kit Removal .....                                            | 1494 00 |
| Auxiliary Cabin Heater Muffler Support .....                                        | 1496 00 |
| Auxiliary Cabin Heater Muffler/Blower Support .....                                 | 1497 00 |
| Auxiliary Cabin Heater Muffler .....                                                | 1503 00 |
| Auxiliary Cabin Heater Power Harness .....                                          | 1507 00 |
| Auxiliary Cabin Heater Support .....                                                | 1500 00 |
| Auxiliary Cabin Heater System Description and Data .....                            | 0059 00 |
| Auxiliary Cabin Heater Thermostat Assembly (AVIM) .....                             | 1586 00 |
| Auxiliary Cabin Heater Transition Duct .....                                        | 1505 00 |
| Auxiliary Cabin Heater Transition Section Heater Ducts .....                        | 1512 00 |
| Auxiliary Cabin Heater .....                                                        | 0161 00 |
| Auxiliary Cabin Heater .....                                                        | 1502 00 |
| Auxiliary Fuel Management Panel <b>MWO 50-78</b> .....                              | 1549 00 |
| Auxiliary Fuel Management Panel Integrally Illuminated Panel <b>MWO 50-78</b> ..... | 1550 00 |
| Auxiliary Power System Description and Data .....                                   | 0050 00 |
| Auxiliary Power Unit (APU) .....                                                    | 1359 00 |
| Auxiliary Power Unit Description and Data .....                                     | 0051 00 |
| Auxiliary Power Unit System (116305 Series) .....                                   | 0155 00 |
| Auxiliary Power Unit System (3800480 Series) .....                                  | 0156 00 |
| Avionics Compartment Access Door <b>HH-60L</b> .....                                | 0349 00 |

## INDEX - CONTINUED

WP Sequence No.

## B

|                                                             |         |
|-------------------------------------------------------------|---------|
| Backup Hydraulic Pump Module .....                          | 0707 00 |
| Backup Hydraulic Pump Motor Fan .....                       | 0872 00 |
| Backup Hydraulic Pump Motor Hood .....                      | 0871 00 |
| Backup Hydraulic Pump Motor.....                            | 0870 00 |
| Backup Hydraulic Pump Relay, K19 .....                      | 0873 00 |
| Balance Springs.....                                        | 1099 00 |
| Barometric Altimeter.....                                   | 0772 00 |
| Battery Access Door <b>HH-60L</b> .....                     | 0348 00 |
| Battery Junction Box <b>HH-60A HH-60L</b> .....             | 0932 00 |
| Battery Junction Box <b>UH60L 96-26723-SUBQ</b> .....       | 0928 00 |
| Battery Relay.....                                          | 0856 00 |
| Battery Switch.....                                         | 0861 00 |
| Bearing Friction Wear Inspection.....                       | 1008 00 |
| Before Every Flight .....                                   | 1719 00 |
| Before First Flight of Day .....                            | 1700 00 |
| Bellcrank Bearings (AVIM).....                              | 1179 00 |
| Bifilar Arm Bushings (AVIM) .....                           | 0601 00 |
| Bifilar Arm Weight Bushings (AVIM) .....                    | 0602 00 |
| Bifilar Cover Gasket .....                                  | 0575 00 |
| Bifilar Inspection .....                                    | 0543 00 |
| Bifilar Weight .....                                        | 0574 00 |
| Bifilar.....                                                | 0573 00 |
| BIM® Indicators .....                                       | 0081 00 |
| Blackout Curtains.....                                      | 1408 00 |
| Blackout Devices Kit Description and Data .....             | 0054 00 |
| Blade Deice Auxiliary Junction Box.....                     | 1227 00 |
| Blade Deice Contactor, K60.....                             | 1233 00 |
| Blade Deice Contactor, K62.....                             | 1234 00 |
| Blade Deice Contactor, K63.....                             | 1235 00 |
| Blade Deice Control Panel Information Plate and Lamps ..... | 1225 00 |
| Blade Deice Control Panel Test-in-Progress Lamp .....       | 1224 00 |
| Blade Deice Control Panel .....                             | 1223 00 |
| Blade Deice Controller .....                                | 1226 00 |
| Blade Deice Current Limiter Holder.....                     | 1229 00 |
| Blade Deice Current Limiters, CL10 Through CL15.....        | 1228 00 |
| Blade Deice Current Transformer, T10.....                   | 1236 00 |
| Blade Deice Current Transformer, T14.....                   | 1237 00 |
| Blade Deice Diode, CR11, CR15, CR16 .....                   | 1239 00 |
| Blade Deice Flange Seal and Packing .....                   | 1218 00 |
| Blade Deice OAT Sensor.....                                 | 1243 00 |
| Blade Deice Relay, K61 .....                                | 1230 00 |
| Blade Deice Relay, K64 .....                                | 1231 00 |

## INDEX - CONTINUED

## WP Sequence No.

|                                                                                       |         |
|---------------------------------------------------------------------------------------|---------|
| Blade Deice Relay, K65 .....                                                          | 1232 00 |
| Blade De-ice Test Panel (AVIM).....                                                   | 0148 00 |
| Blade Deice Test Panel Circuit Board (AVIM) .....                                     | 1264 00 |
| Blade Deice Test Panel Detector Hose Assembly .....                                   | 1245 00 |
| Blade Deice Test Panel Detector .....                                                 | 1244 00 |
| Blade Deice Test Panel Electrical Connector (AVIM) .....                              | 1262 00 |
| Blade Deice Test Panel Indicator Lamps .....                                          | 1241 00 |
| Blade Deice Test Panel Indicator Light (AVIM) .....                                   | 1261 00 |
| Blade Deice Test Panel Information Plate/Lamps .....                                  | 1242 00 |
| Blade Deice Test Panel Printed Wiring Board and Circuit Board Components (AVIM) ..... | 1265 00 |
| Blade Deice Test Panel Printed Wiring Board (AVIM) .....                              | 1263 00 |
| Blade Deice Test Panel Rotary Selector Switch (AVIM).....                             | 1260 00 |
| Blade Deice Test Panel .....                                                          | 1240 00 |
| Blade Deice Tube Assembly and Packing .....                                           | 1219 00 |
| Blade Deicing System Description and Data.....                                        | 0044 00 |
| Blade Deicing System.....                                                             | 0145 00 |
| Blade Indication Method (BIM®) Pressure Indicator .....                               | 0581 00 |
| Bleed Damper (Damper Removed).....                                                    | 0562 00 |
| Bleed Hydraulic Systems.....                                                          | 0755 00 |
| Bleed Main Landing Gear Wheel Brake System.....                                       | 0457 00 |
| Bleed-Air Shutoff Valve (AVIM) .....                                                  | 0757 00 |
| Bleed-Air Shutoff Valve.....                                                          | 0697 00 |
| Blower Unit Repair (AVIM).....                                                        | 1311 00 |
| Boost Servo and Pilot-Assist Module Manifold .....                                    | 0731 00 |
| Boost Servo to Mixer Control Rods (AVIM) .....                                        | 1175 00 |
| Brake Flange Spacers.....                                                             | 0440 00 |
| Breakaway Tee Valve.....                                                              | 0988 00 |
| BRU-22A/A Ejector Rack Cleaning and Surface Treatment (AVIM) .....                    | 1581 00 |
| BRU-22A/A Ejector Rack Explosive Cartridge.....                                       | 1442 00 |
| BRU-22A/A Ejector Rack Repair .....                                                   | 1443 00 |
| BRU-22A/A Ejector Rack Test (AVIM) .....                                              | 1583 00 |
| BRU-22A/A Ejector Rack Wiring Harness (AVIM).....                                     | 1582 00 |
| BRU-22A/A Ejector Rack .....                                                          | 1441 00 |
| Buddy Start System Hose.....                                                          | 1594 00 |
| Bulkhead Breakaway Valve .....                                                        | 0989 00 |

## C

|                                              |         |
|----------------------------------------------|---------|
| Cabin Bellcranks and Bellcrank Supports..... | 1132 00 |
| Cabin Control Rods .....                     | 1110 00 |
| Cabin Dome Dimming Control .....             | 0877 00 |
| Cabin Dome Light Assemblies.....             | 0888 00 |
| Cabin Dome Light Lamps .....                 | 0887 00 |
| Cabin Dome Lights.....                       | 0107 00 |



## INDEX - CONTINUED

|                                                                                      | WP Sequence No. |
|--------------------------------------------------------------------------------------|-----------------|
| Cabin Emergency Equipment Description and Data .....                                 | 0065 00         |
| Cabin Emergency Equipment .....                                                      | 1588 00         |
| Cabin Flight Control Cables .....                                                    | 1143 00         |
| Cabin Floor Inspections .....                                                        | 0180 00         |
| Cabin Floor Leveling Plate .....                                                     | 0265 00         |
| Cabin Floor Repair .....                                                             | 0402 00         |
| Cabin Floor Seat Stud .....                                                          | 0264 00         |
| Cabin Floor .....                                                                    | 0262 00         |
| Cabin Fuel Harness <b>MWO 50-78</b> .....                                            | 1551 00         |
| Cabin ICS Floodlight Control Panel .....                                             | 0921 00         |
| Cabin Maintenance Crane (AVIM) .....                                                 | 1595 00         |
| Cabin Maintenance Crane .....                                                        | 1590 00         |
| Cabin Section Beaded Inner Fuselage Plating STA 295.0 Through STA 308.0 Repair ..... | 0390 00         |
| Cabin Section Forward Framing Repair .....                                           | 0386 00         |
| Cabin Section Lower Framing Repair .....                                             | 0388 00         |
| Cabin Section Plating Repair .....                                                   | 0389 00         |
| Cabin Section Upper Framing Repair .....                                             | 0387 00         |
| Cabin Steps <b>ESSS</b> .....                                                        | 0295 00         |
| Cabin Steps <b>W/O ESSS</b> .....                                                    | 0294 00         |
| Cabin Tiedown Fittings .....                                                         | 1683 00         |
| Cabin Vibration Absorber (Box Frame) <b>UH60L 95-26610, 95-26621-SUBQ</b> .....      | 0222 00         |
| Cabin Vibration Absorber Fitting Bearings (AVIM) .....                               | 0354 00         |
| Cabin Vibration Absorber (Spring Type) .....                                         | 0221 00         |
| Cable Cutter and Anvil <b>HH-60A HH-60L HOIST BL-29900-30</b> .....                  | 1345 00         |
| Cargo Door Lower Track Fairing Repair .....                                          | 0392 00         |
| Cargo Door Lower Track Wear Strips Repair .....                                      | 0393 00         |
| Cargo Door Upper Track Repair .....                                                  | 0391 00         |
| Cargo Door Window (AVIM) .....                                                       | 0360 00         |
| Cargo Door Window Frame (AVIM) .....                                                 | 0361 00         |
| Cargo Hook Door Hinges .....                                                         | 0269 00         |
| Cargo Hook Door Latch .....                                                          | 0267 00         |
| Cargo Hook Door Repair .....                                                         | 0270 00         |
| Cargo Hook Door Seal .....                                                           | 0268 00         |
| Cargo Hook Door Strap Seal .....                                                     | 0263 00         |
| Cargo Hook Door .....                                                                | 0266 00         |
| Cargo Hook Emergency Release System Resistor, R4 .....                               | 0880 00         |
| Cargo Hook Explosive Cartridge .....                                                 | 1252 00         |
| Cargo Hook Keeper and Keeper Spring .....                                            | 1253 00         |
| Cargo Hook Light Dimming Control Panel <b>MWO 50-56 UH60L 96-26723-SUBQ</b> .....    | 0886 00         |
| Cargo Hook Lights <b>UH-60A UH-60L HH-60A HH-60L</b> .....                           | 0116 00         |
| Cargo Hook Lights <b>UH60A UH60L</b> .....                                           | 0920 00         |
| Cargo Hook Manual Release Handle .....                                               | 1254 00         |
| Cargo Hook Support Fitting and Retainer Bushings .....                               | 1255 00         |

## INDEX - CONTINUED

## WP Sequence No.

|                                                                                                                 |         |
|-----------------------------------------------------------------------------------------------------------------|---------|
| Cargo Hook System <b>UH-60A UH-60L HH-60A HH-60L</b> .....                                                      | 0146 00 |
| Cargo Hook System Description and Data .....                                                                    | 0045 00 |
| Cargo Hook .....                                                                                                | 1251 00 |
| Caution/Advisory Audible Warning Unit .....                                                                     | 0789 00 |
| Caution/Advisory Panel (AVIM) .....                                                                             | 0097 00 |
| Caution/Advisory Panel Capsule Parts .....                                                                      | 0787 00 |
| Caution/Advisory Panel Channel/Control Cards (AVIM) .....                                                       | 0815 00 |
| Caution/Advisory Panel Connectors (AVIM) .....                                                                  | 0822 00 |
| Caution/Advisory Panel Diode CR1 (AVIM) .....                                                                   | 0819 00 |
| Caution/Advisory Panel Diode CR2 (AVIM) .....                                                                   | 0820 00 |
| Caution/Advisory Panel Diode CR3 Overvoltage Protector (AVIM) .....                                             | 0821 00 |
| Caution/Advisory Panel Heat Sink/Transistors (AVIM) .....                                                       | 0817 00 |
| Caution/Advisory Panel Lamps .....                                                                              | 0786 00 |
| Caution/Advisory Panel (LED) (AVIM) .....                                                                       | 0097 01 |
| Caution/Advisory Panel (LED) Legend (AVIM) .....                                                                | 0822 01 |
| Caution/Advisory Panel (LED) Test Switch (AVIM) .....                                                           | 0822 02 |
| Caution/Advisory Panel Relay K1 (AVIM) .....                                                                    | 0818 00 |
| Caution/Advisory Panel Test Switch (AVIM) .....                                                                 | 0816 00 |
| Caution/Advisory Panel .....                                                                                    | 0785 00 |
| Caution/Advisory System Dimming Control .....                                                                   | 0788 00 |
| Caution/Advisory System Dimming Control .....                                                                   | 0884 00 |
| Caution/Advisory Warning System Description and Data .....                                                      | 0026 00 |
| Caution/Advisory Warning System .....                                                                           | 0090 00 |
| Center Windshield (Glass) .....                                                                                 | 0227 00 |
| Center Windshield (Plastic) .....                                                                               | 0228 00 |
| Central Display Unit (70450-01043-122) (AVIM) .....                                                             | 0092 00 |
| Central Display Unit (70450-01043-125, 70450-21943-118, or 70450-01916-105) (AVIM) .....                        | 0093 00 |
| Central Display Unit Bar Graph Filament (BGF) Lamps and Direct View Filament (DVF) Modules<br><b>EMEP</b> ..... | 0778 00 |
| Central Display Unit Description and Data .....                                                                 | 0024 00 |
| Central Display Unit Digital Readout Modules (AVIM) .....                                                       | 0804 00 |
| Central Display Unit Display Lamp Driver Modules (AVIM) .....                                                   | 0802 00 |
| Central Display Unit Faceplate and EMI Shield .....                                                             | 0777 00 |
| Central Display Unit Fuses .....                                                                                | 0779 00 |
| Central Display Unit Lamp Assembly <b>W/O EMEP</b> .....                                                        | 0780 00 |
| Central Display Unit Voltage Regulator and Interface Modules (AVIM) .....                                       | 0803 00 |
| Central Display Unit .....                                                                                      | 0776 00 |
| Chaff Dispense Switch .....                                                                                     | 1525 00 |
| Chaff Dispenser (M130) System <b>UH-60A UH-60L HH-60A HH-60L</b> .....                                          | 0162 00 |
| Chaff Dispenser System and M130 Chaff/Flare Dispenser System Description and Data .....                         | 0061 00 |
| Chaff/Flare Dispenser Assembly and Electronic Module .....                                                      | 1520 00 |
| Chaff/Flare Dispenser Control Panel Fuse .....                                                                  | 1524 00 |
| Chaff/Flare Dispenser Control Panel Indicator Lamp .....                                                        | 1523 00 |
| Chaff/Flare Dispenser Control Panel .....                                                                       | 1522 00 |

## INDEX - CONTINUED

|                                                                  | WP Sequence No. |
|------------------------------------------------------------------|-----------------|
| Chaff/Flare Dispenser Payload Module Assembly .....              | 1521 00         |
| Chaff/Flare Dispenser (XM130) System <b>EH-60A</b> .....         | 0163 00         |
| Chip Detector Resistor Unit (AVIM) .....                         | 0098 00         |
| Chip Detector Resistor Unit (AVIM) .....                         | 0823 00         |
| Chip Detector Resistor Unit .....                                | 0798 00         |
| Circuit Breakers .....                                           | 0824 00         |
| Clean Air Inlet Anti-Ice Valve .....                             | 1657 00         |
| Clean and Preserve ESSS Extended Range Tanks .....               | 1621 00         |
| Clean APU Engine Air Particle Separator (EAPS).....              | 1655 00         |
| Clean Blackout Curtains .....                                    | 1652 00         |
| Clean BRU-22A/A Ejector Rack.....                                | 1645 00         |
| Clean Cargo Hook.....                                            | 1637 00         |
| Clean Central Display Unit Faceplate.....                        | 1650 00         |
| Clean Cockpit Door Window .....                                  | 1647 00         |
| Clean ECM Antenna Actuator Assembly <b>EH-60A</b> .....          | 1653 00         |
| Clean Engine .....                                               | 1632 00         |
| Clean Exterior Surface of External Fuel Tank.....                | 1654 00         |
| Clean Flight Controls and Hydraulic Deck.....                    | 1630 00         |
| Clean Helicopter Exterior .....                                  | 1631 00         |
| Clean HIRSS Fairing .....                                        | 1658 01         |
| Clean Horizontal Stores Support (HSS) Pneumatic Check Valve..... | 1658 00         |
| Clean Main and Tail Landing Gear.....                            | 1638 00         |
| Clean Main and Tail Rotor Blades.....                            | 1633 00         |
| Clean Main Rotor Blade Pins.....                                 | 1634 00         |
| Clean Main Rotor Deice Slipping and Brush Block.....             | 1642 00         |
| Clean Main Rotor Head.....                                       | 1635 00         |
| Clean MAU-40/A Ejector Rack.....                                 | 1644 00         |
| Clean Pilot's Display Unit Faceplate .....                       | 1651 00         |
| Clean Pilot's/Copilot's Seats Sliding Backframe .....            | 1648 00         |
| Clean Powertrain .....                                           | 1636 00         |
| Clean Rescue Hoist <b>HH-60A HH-60L</b> .....                    | 1656 00         |
| Clean Soundproofing Panels and Airframe Behind Panels .....      | 1649 00         |
| Clean Tail Rotor Deice Slipping .....                            | 1643 00         |
| Clean Tail Wheel Lockpin .....                                   | 1639 00         |
| Clean Tail Wheel Tow Adapters.....                               | 1640 00         |
| Clean Troop and Gunner Seats.....                                | 1641 00         |
| Clean Windshield Wiper Pivot Studs .....                         | 1646 00         |
| Cleaning Requirements .....                                      | 1629 00         |
| Clock Battery .....                                              | 0795 00         |
| Clock.....                                                       | 0794 00         |
| Closed Circuit Refuel.....                                       | 1614 00         |
| Cockpit Air Bag System (CABS).....                               | 1589 00         |
| Cockpit Air Bag System Description and Data .....                | 0066 00         |
| Cockpit Air Bag System .....                                     | 0171 00         |

## INDEX - CONTINUED

## WP Sequence No.

|                                                                          |         |
|--------------------------------------------------------------------------|---------|
| Cockpit Bellcranks and Levers.....                                       | 1131 00 |
| Cockpit Door Adjustment .....                                            | 0199 00 |
| Cockpit Door Check Components.....                                       | 0200 00 |
| Cockpit Door Conductive Seals .....                                      | 0211 00 |
| Cockpit Door Front Crank Mechanism.....                                  | 0206 00 |
| Cockpit Door Hinge Fittings .....                                        | 0212 00 |
| Cockpit Door Hinge Rod End .....                                         | 0213 00 |
| Cockpit Door Hinge Support Fitting (AVIM).....                           | 0351 00 |
| Cockpit Door Inspections .....                                           | 0174 00 |
| Cockpit Door Jettison Components.....                                    | 0201 00 |
| Cockpit Door Jettisonable Window .....                                   | 0205 00 |
| Cockpit Door Latches .....                                               | 0207 00 |
| Cockpit Door Lock .....                                                  | 0214 00 |
| Cockpit Door Rear Crank Mechanism .....                                  | 0208 00 |
| Cockpit Door Repair.....                                                 | 0383 00 |
| Cockpit Door Retainer and Clip.....                                      | 0202 00 |
| Cockpit Door Seal.....                                                   | 0210 00 |
| Cockpit Door Stationary Window .....                                     | 0203 00 |
| Cockpit Door Striker Plate .....                                         | 0209 00 |
| Cockpit Door Vent Window .....                                           | 0204 00 |
| Cockpit Door.....                                                        | 0198 00 |
| Cockpit Emergency Equipment Description and Data .....                   | 0064 00 |
| Cockpit Emergency Equipment .....                                        | 1587 00 |
| Cockpit Flood and Secondary Lights .....                                 | 0108 00 |
| Cockpit Floor .....                                                      | 0230 00 |
| Cockpit Steps .....                                                      | 0293 00 |
| Cockpit/Cabin Blackout Kit Installation .....                            | 1406 00 |
| Cockpit/Cabin Blackout Kit Removal.....                                  | 1407 00 |
| Cold Weather Operations .....                                            | 1743 00 |
| Collective Boost Assembly Inspection .....                               | 1013 00 |
| Collective Boost Assembly Pressure Switch and Thermal Relief Valve ..... | 1086 00 |
| Collective Boost Assembly .....                                          | 1085 00 |
| Collective Input Control Rod .....                                       | 1111 00 |
| Collective Servo to Mixer Control Rod.....                               | 1116 00 |
| Collective Stick Assembly .....                                          | 0135 00 |
| Collective Stick Balance Spring Adjustment .....                         | 1041 00 |
| Collective Stick Bearings.....                                           | 1077 00 |
| Collective Stick Boot and Cover.....                                     | 1060 00 |
| Collective Stick Collet Blocks.....                                      | 1063 00 |
| Collective Stick ENG RPM Switch .....                                    | 1069 00 |
| Collective Stick Grip Assembly .....                                     | 1065 00 |
| Collective Stick Grip Lighted Panel and Lamps .....                      | 1066 00 |
| Collective Stick HUD Control Switch <b>HUD</b> .....                     | 1072 00 |
| Collective Stick Inspections.....                                        | 1011 00 |

## INDEX - CONTINUED

|                                                                                         | WP Sequence No. |
|-----------------------------------------------------------------------------------------|-----------------|
| Collective Stick LDG LT and EMERG HOOK REL Switches .....                               | 1068 00         |
| Collective Stick RAD SEL Switch <b>HH-60A HH-60L</b> .....                              | 1070 00         |
| Collective Stick Socket .....                                                           | 1076 00         |
| Collective Stick SRCH LT On/Off and SVO Off Switches .....                              | 1067 00         |
| Collective Stick SRCH LT Switch .....                                                   | 1071 00         |
| Collective Torque Shaft and Levers .....                                                | 1094 00         |
| Composite Structure Repair .....                                                        | 0379 00         |
| Control Rod Connection Inspection .....                                                 | 1009 00         |
| Control Rod Pivot Bearing (AVIM) .....                                                  | 1173 00         |
| Control Rods (AVIM) .....                                                               | 1172 00         |
| Controllable Searchlight (AVIM) .....                                                   | 0959 00         |
| Controllable Searchlight Dimming Control .....                                          | 0882 00         |
| Controllable Searchlight Lamp .....                                                     | 0918 00         |
| Controllable Searchlight .....                                                          | 0112 00         |
| Controllable Searchlight .....                                                          | 0919 00         |
| Conversion of Hydraulic Fluids .....                                                    | 0705 00         |
| Converters .....                                                                        | 0859 00         |
| Copilot's Collective Control Rods .....                                                 | 1109 00         |
| Copilot's Collective Stick Grip Coil Cord .....                                         | 1073 00         |
| Copilot's Collective Stick Support (AVIM) .....                                         | 1185 00         |
| Copilot's Collective Stick .....                                                        | 1062 00         |
| Copilot's Directional and Cyclic Control Rods .....                                     | 1108 00         |
| Copilot's Yaw Pedals and Adjuster Control Rods .....                                    | 1107 00         |
| Corrosion Inspections .....                                                             | 0173 00         |
| Crashworthy External Fuel System Description and Data .....                             | 0058 01         |
| Crashworthy External Fuel System Maintenance Operational Check .....                    | 0170 03         |
| Crashworthy External Fuel System Pressure Refueling Maintenance Operational Check ..... | 0170 04         |
| Crew Hoist Control Panel <b>HH-60A HH-60L HOIST BL-29900-30</b> .....                   | 1349 00         |
| Crewman's Cargo Hook Pendant <b>UH60A UH60L</b> .....                                   | 0147 00         |
| Crewman's Cargo Hook Pendant Cable Assembly .....                                       | 1258 00         |
| Crewman's Cargo Hook Pendant Switches and Gaurds .....                                  | 1257 00         |
| Crewman's Cargo Hook Pendant .....                                                      | 1256 00         |
| Critical Safety Item (CSI) Program .....                                                | 1804 00         |
| Crossfeed Breakaway Valve .....                                                         | 0987 00         |
| Current Limiters, CL1 Through CL6 .....                                                 | 0836 00         |
| Cyclic Stick Assembly .....                                                             | 0134 00         |
| Cyclic Stick Balance Spring Adjustment .....                                            | 1040 00         |
| Cyclic Stick Bearings .....                                                             | 1058 00         |
| Cyclic Stick Boot .....                                                                 | 1049 00         |
| Cyclic Stick Grip .....                                                                 | 1052 00         |
| Cyclic Stick ICS/Radio Switch .....                                                     | 1055 00         |
| Cyclic Stick Inspections .....                                                          | 1010 00         |
| Cyclic Stick PNL LTS, Cargo REL, Trim REL, RTSS, and GA Switches .....                  | 1053 00         |
| Cyclic Stick Socket .....                                                               | 1057 00         |

## INDEX - CONTINUED

## WP Sequence No.

|                                    |         |
|------------------------------------|---------|
| Cyclic Stick Trim Switch.....      | 1054 00 |
| Cyclic Stick Tube.....             | 1059 00 |
| Cyclic Stick Wiring.....           | 1056 00 |
| Cyclic Stick Yoke and Housing..... | 1051 00 |
| Cyclic Stick .....                 | 1050 00 |

## D

|                                                              |         |
|--------------------------------------------------------------|---------|
| Damper Bracket .....                                         | 0560 00 |
| Damper Indicator (AVIM) .....                                | 0596 00 |
| Damper Indicator .....                                       | 0559 00 |
| Damper Inspections.....                                      | 0537 00 |
| Damper Rod End Bearing .....                                 | 0561 00 |
| Damper Seals (AVIM) .....                                    | 0597 00 |
| Damper .....                                                 | 0558 00 |
| DC Bus Tie Contactor, K15 .....                              | 0854 00 |
| DC Current Limiter.....                                      | 0860 00 |
| DC Electrical Battery System Description and Data.....       | 0034 00 |
| DC Electrical Primary System Description and Data.....       | 0033 00 |
| DC Electrical System <b>HH-60A HH-60L</b> .....              | 0123 00 |
| DC Electrical System Description and Data.....               | 0032 00 |
| DC Electrical System.....                                    | 0102 00 |
| DC Essential Bus Supply Relays, K9 and K10.....              | 0855 00 |
| DC Monitor Bus Supply Relay, K5 .....                        | 0864 00 |
| DC Primary Bus Contactors, K6 and K16.....                   | 0853 00 |
| Demountable Power Package .....                              | 0482 00 |
| Digital Clock .....                                          | 0091 00 |
| Dimming Control Power Supply .....                           | 0885 00 |
| Diodes, CR13 and CR14 .....                                  | 0848 00 |
| Diodes, CR17, CR18, CR19, and CR20 .....                     | 0849 00 |
| Diodes, CR21, CR22, and CR23.....                            | 0850 00 |
| Directional Control Valve (AVIM) .....                       | 1266 00 |
| Drag Beam Support Fairing Incandescent Position Lights ..... | 0905 00 |
| Drag Beam Support Fairing Infrared Position Lights .....     | 0906 00 |
| Drag Beam Support Fairing.....                               | 0286 00 |
| Drag Beam Support Fitting Bearings.....                      | 0441 00 |
| Droop Stop Bushings.....                                     | 0556 00 |
| Droop Stop Inspection .....                                  | 0536 00 |
| Droop Stop Pad.....                                          | 0557 00 |
| Droop Stop .....                                             | 0555 00 |

## E

|                                                         |         |
|---------------------------------------------------------|---------|
| ECM Antenna Actuator Assembly (AVIM) <b>EH60A</b> ..... | 0119 00 |
|---------------------------------------------------------|---------|

## INDEX - CONTINUED

|                                                                                                                         | WP Sequence No. |
|-------------------------------------------------------------------------------------------------------------------------|-----------------|
| ECM Antenna Actuator Assembly <b>EH60A</b> .....                                                                        | 0117 00         |
| ECM Antenna Actuator Assembly <b>EH60A</b> .....                                                                        | 0926 00         |
| ECM Antenna Limit Switches (AVIM) <b>EH60A</b> .....                                                                    | 0958 00         |
| ECM Antenna Linear Actuator Assembly (AVIM) <b>EH60A</b> .....                                                          | 0957 00         |
| EH-60A Helicopters Environmental Control System Wire Data List By Reference Designator .....                            | 1773 00         |
| EH-60A Helicopters Environmental Control System Wire Data List By Wire Number .....                                     | 1772 00         |
| EH-60A Helicopters* MEP ALQ-151(V)2 Wire Data List By Wire Number .....                                                 | 1780 00         |
| EH-60A Helicopters Modified by MWO 1-1520-237-50-78 Wire Data List By Reference Designator.....                         | 1787 00         |
| EH-60A Helicopters Modified by MWO 1-1520-237-50-78 Wire Data List By Wire Number .....                                 | 1786 00         |
| EH-60A Helicopters Prior to Serial No. 87-24667 Stabilator Slew-Up Switch, Wire Data List By Reference Designator ..... | 1771 00         |
| EH-60A Helicopters Prior to Serial No. 87-24667 Stabilator Slew-Up Switch, Wire Data List By Wire Number.....           | 1770 00         |
| EH-60A Helicopters Prior to Serial No. 88-24067 Stabilator Slew-Up Switch, Wire Data List By Wire Number.....           | 1764 00         |
| EH-60A Helicopters Tracor Wire Data List By Reference Designator .....                                                  | 1775 00         |
| EH-60A Helicopters Tractor Wire Data List By Wire Number .....                                                          | 1774 00         |
| EH-60A Helicopters Wire Data List By Reference Designator .....                                                         | 1769 00         |
| EH-60A Helicopters Wire Data List By Wire Number .....                                                                  | 1768 00         |
| EH-60A Helicopters* Wire Data List By Wire Number .....                                                                 | 1779 00         |
| EH-60A/L Helicopters Modified By MWO 1-1520-237-50-82 Wire Data List By Reference Designator .....                      | 1797 00         |
| EH-60A/L Helicopters Modified By MWO 1-1520-237-50-82 Wire Data List By Wire Number .....                               | 1796 00         |
| EH-60L Helicopters Serial No. 96-26723 * and 97-26738 and Subsequent Wire Data List By Reference Designator .....       | 1795 00         |
| EH-60L Helicopters Serial No. 96-26723 * and 97-26738 and Subsequent Wire Data List By Wire Number.                     | 1794 00         |
| EH-60L Helicopters Wire Data List By Reference Designator .....                                                         | 1793 00         |
| EH-60L Helicopters Wire Data List By Wire Number .....                                                                  | 1792 00         |
| Engine Air Inlet Anti-Ice Thermal Switch .....                                                                          | 1217 00         |
| Engine Air Inlet Anti-Ice Valve.....                                                                                    | 1216 00         |
| Engine Air Inlet.....                                                                                                   | 0484 00         |
| Engine and Engine Interface .....                                                                                       | 0072 00         |
| Engine Anti-ice System .....                                                                                            | 0078 00         |
| Engine Anti-Ice Systems Description and Data.....                                                                       | 0043 00         |
| Engine Chip Detector System .....                                                                                       | 0077 00         |
| Engine Compartment Breakaway Valve.....                                                                                 | 0985 00         |
| Engine Compartment Heat Shield.....                                                                                     | 0319 00         |
| Engine Compartment Pneumatic Tubes .....                                                                                | 0702 00         |
| Engine Control Cable Inspection.....                                                                                    | 0478 00         |
| Engine Control Quadrant Canopy Plunger .....                                                                            | 0502 00         |
| Engine Control Quadrant Engine Starter Switch (AVIM).....                                                               | 0527 00         |
| Engine Control Quadrant Fire Extinguisher Arming Switch (AVIM) .....                                                    | 0530 00         |
| Engine Control Quadrant Front Cover Information Plate Wiring Harness (AVIM) .....                                       | 0532 00         |
| Engine Control Quadrant Front Cover Information Plate .....                                                             | 0514 00         |
| Engine Control Quadrant Left and Right Cover Information Plate (AVIM).....                                              | 0531 00         |



## INDEX - CONTINUED

### WP Sequence No.

|                                                              |         |
|--------------------------------------------------------------|---------|
| Engine Control Quadrant Power Lever (AVIM).....              | 0524 00 |
| Engine Control Quadrant Starter Abort Switch (AVIM).....     | 0528 00 |
| Engine Control Quadrant Starter Override Switch (AVIM).....  | 0529 00 |
| Engine Control Quadrant T-Handle and Fuel Lever (AVIM) ..... | 0525 00 |
| Engine Control Quadrant Threaded Inserts (AVIM).....         | 0526 00 |
| Engine Control Quadrant.....                                 | 0501 00 |
| Engine Control System Description and Data .....             | 0006 00 |
| Engine Controls Quadrant (AVIM) .....                        | 0080 00 |
| Engine Cowling Blanket Insulation.....                       | 0315 00 |
| Engine Cowling Fitting Bearing (AVIM).....                   | 0365 00 |
| Engine Cowling Fitting.....                                  | 0317 00 |
| Engine Cowling Inspections .....                             | 0183 00 |
| Engine Cowling Latch .....                                   | 0316 00 |
| Engine Cowling Lower Fairing .....                           | 0314 00 |
| Engine Cowling Support Fitting Bearing (AVIM).....           | 0363 00 |
| Engine Cowling Support Fitting Bushings (AVIM) .....         | 0364 00 |
| Engine Cowling Support Fitting.....                          | 0318 00 |
| Engine Cowling.....                                          | 0313 00 |
| Engine Exhaust Ejector and Fairings (AVIM).....              | 0520 00 |
| Engine Exhaust Module Duct Assembly (AVIM) .....             | 0521 00 |
| Engine Exhaust Module Ejector.....                           | 0488 00 |
| Engine Exhaust Module Inspection.....                        | 0477 00 |
| Engine Exhaust Module.....                                   | 0487 00 |
| Engine Ignition Switch .....                                 | 0923 00 |
| Engine Indicating Systems Description and Data.....          | 0009 00 |
| Engine Load-Demand Cable Support Clip (AVIM) .....           | 0533 00 |
| Engine Load-Demand Push/Pull Cable Supports .....            | 0511 00 |
| Engine Load-Demand Push/Pull Cable .....                     | 0506 00 |
| Engine Load-Demand Push/Pull Friction Check .....            | 0479 00 |
| Engine LRU's.....                                            | 0483 00 |
| Engine Mount Crotch Assembly (AVIM) .....                    | 0519 00 |
| Engine Mount Restrainer Rings .....                          | 0513 00 |
| Engine Output Shaft Inspection After Disconnect.....         | 1720 00 |
| Engine Output Shaft Inspection.....                          | 1688 00 |
| Engine Overspeed Protection System .....                     | 0075 00 |
| Engine Overspeed Relay Assembly.....                         | 0924 00 |
| Engine Power-Available Push/Pull Cable .....                 | 0507 00 |
| Engine Power-Available System Rigging and Adjustment .....   | 0512 00 |
| Engine Prime Boost Diode Board Assembly .....                | 0869 00 |
| Engine Speed Control Potentiometer .....                     | 0500 00 |
| Engine Speed Governing Systems Description and Data.....     | 0008 00 |
| Engine Speed Trim System .....                               | 0076 00 |
| Engine Start and Ignition System Description and Data.....   | 0007 00 |
| Engine Start and Ignition System.....                        | 0079 00 |



## INDEX - CONTINUED

|                                                                                                                               | WP Sequence No. |
|-------------------------------------------------------------------------------------------------------------------------------|-----------------|
| Engine Starter, 3505300 Series .....                                                                                          | 0694 00         |
| Engine Starter, 36E144-12A .....                                                                                              | 0695 00         |
| Engine Starter Abort Switch Adjustment .....                                                                                  | 0504 00         |
| Engine Starter Control Valve .....                                                                                            | 0696 00         |
| Engine Starter Override Switch Adjustment .....                                                                               | 0505 00         |
| Engine Starter Switch Adjustment .....                                                                                        | 0503 00         |
| Engine Warning Systems Description and Data .....                                                                             | 0010 00         |
| Engine Whine/High Frequency Vibration Inspection .....                                                                        | 1721 00         |
| Engine .....                                                                                                                  | 0481 00         |
| Environmental Control System - Service <b>EH60A</b> .....                                                                     | 1622 00         |
| Environmental Control System Baffle <b>EH60A</b> .....                                                                        | 1294 00         |
| Environmental Control System Cabin Ducting <b>EH60A</b> .....                                                                 | 1290 00         |
| Environmental Control System Compressor - Service <b>EH60A</b> .....                                                          | 1623 00         |
| Environmental Control System Compressor (AVIM) <b>EH60A</b> .....                                                             | 1316 00         |
| Environmental Control System Condenser and Transition Duct (AVIM) <b>EH60A</b> .....                                          | 1314 00         |
| Environmental Control System Condenser and Transition Duct (AVIM) <b>HH-60A HH-60L</b> .....                                  | 1326 00         |
| Environmental Control System Condenser Blower <b>EH60A</b> .....                                                              | 1287 00         |
| Environmental Control System Condenser Blower <b>HH-60A HH-60L</b> .....                                                      | 1298 00         |
| Environmental Control System Condenser Electrical Harness <b>EH60A</b> .....                                                  | 1288 00         |
| Environmental Control System Condenser Exhaust Duct <b>EH60A</b> .....                                                        | 1292 00         |
| Environmental Control System Condenser Exhaust Duct <b>HH-60A HH-60L</b> .....                                                | 1299 00         |
| Environmental Control System Condenser Lines, Burst Disc, and Relief Valve (AVIM) <b>EH60A</b> .....                          | 1313 00         |
| Environmental Control System Condenser Lines, Burst Disc, and Relief Valve Condenser Pallet (AVIM) <b>HH-60A HH-60L</b> ..... | 1325 00         |
| Environmental Control System Condenser Paller (AVIM) <b>EH60A</b> .....                                                       | 1312 00         |
| Environmental Control System Condenser Pallet <b>HH-60A HH-60L</b> .....                                                      | 1303 00         |
| Environmental Control System Condenser Pallet Pressure Test (AVIM) <b>HH-60A HH-60L</b> .....                                 | 1324 00         |
| Environmental Control System Control Panel <b>HH-60A HH-60L</b> .....                                                         | 1309 00         |
| Environmental Control System Ducting Repair <b>EH60A</b> .....                                                                | 1296 00         |
| Environmental Control System Ducting Repair <b>HH-60A HH-60L</b> .....                                                        | 1301 00         |
| Environmental Control System Ducts, Evaporator, Heatet/Demister (AVIM) <b>EH60A</b> .....                                     | 1318 00         |
| Environmental Control System (ECS) <b>EH60A</b> .....                                                                         | 0150 00         |
| Environmental Control System (ECS) <b>HH-60A HH-60L</b> .....                                                                 | 0151 00         |
| Environmental Control System (ECS) Description and Data <b>EH60A</b> .....                                                    | 0047 00         |
| Environmental Control System (ECS) Description and Data <b>HH-60A HH-60L</b> .....                                            | 0048 00         |
| Environmental Control System Electrical Control Unit <b>HH-60A HH-60L</b> .....                                               | 1300 00         |
| Environmental Control System Electrical Control Unit (ECU) <b>EH60A</b> .....                                                 | 1295 00         |
| Environmental Control System Electrical Pallet (AVIM) <b>EH60A</b> .....                                                      | 1320 00         |
| Environmental Control System Electrical Pallet <b>HH-60A HH-60L</b> .....                                                     | 1305 00         |

## INDEX - CONTINUED

## WP Sequence No.

|                                                                                                    |         |
|----------------------------------------------------------------------------------------------------|---------|
| Environmental Control System Evaporator Blower <b>EH60A</b> .....                                  | 1283 00 |
| Environmental Control System Evaporator Blower <b>HH-60A HH-60L</b> .....                          | 1297 00 |
| Environmental Control System Evaporator Electrical Harness <b>EH60A</b> .....                      | 1284 00 |
| Environmental Control System Evaporator Pallet (AVIM) <b>EH60A</b> .....                           | 1315 00 |
| Environmental Control System Evaporator Pallet <b>HH-60A HH-60L</b> .....                          | 1304 00 |
| Environmental Control System Filter/Dryer (AVIM) <b>EH60A</b> .....                                | 1319 00 |
| Environmental Control System Filter/Dryer <b>HH-60A HH-60L</b> .....                               | 1302 00 |
| Environmental Control System High and Low Pressure Switch <b>HH-60A HH-60L</b> .....               | 1308 00 |
| Environmental Control System High and Low Pressure Switches (AVIM) <b>EH60A</b> .....              | 1323 00 |
| Environmental Control System Hot Gas Bypass (HGBP) Valve (AVIM) <b>EH60A</b> .....                 | 1317 00 |
| Environmental Control System Inspection.....                                                       | 1268 00 |
| Environmental Control System Low and High Temperature Switches <b>EH60A</b> .....                  | 1286 00 |
| Environmental Control System Plenum <b>EH60A</b> .....                                             | 1289 00 |
| Environmental Control System Servicing Manifold (AVIM) <b>EH60A</b> .....                          | 1321 00 |
| Environmental Control System Servicing Manifold <b>HH-60A HH-60L</b> .....                         | 1306 00 |
| Environmental Control System Sight Glass (AVIM) <b>EH60A</b> .....                                 | 1322 00 |
| Environmental Control System Sight Glass <b>HH-60A HH-60L</b> .....                                | 1307 00 |
| Environmental Control System Supply Ducting <b>EH60A</b> .....                                     | 1291 00 |
| Environmental Control System Temperature Limiting Switch <b>EH60A</b> .....                        | 1285 00 |
| Environmental Control System Temperature Sensor <b>EH60A</b> .....                                 | 1293 00 |
| ESSS Auxiliary Fuel Management Control Panel <b>W/O AUX FUEL QTY</b> .....                         | 1448 00 |
| ESSS Auxiliary Fuel Management Control Panel Density Switches <b>W/O AUX FUEL QTY</b> .....        | 1452 00 |
| ESSS Auxiliary Fuel Management Control Panel Digital Display Segment <b>W/O AUX FUEL QTY</b> ..... | 1450 00 |
| ESSS Auxiliary Fuel Management Control Panel Indicator Lamps <b>W/O AUX FUEL QTY</b> .....         | 1451 00 |
| ESSS Auxiliary Fuel Management Control Panel Information Plate <b>W/O AUX FUEL QTY</b> .....       | 1449 00 |
| ESSS Cabin Fuel Harness <b>W/O AUX FUEL QTY</b> .....                                              | 1453 00 |
| ESSS Cabin Jettison Harness <b>W/O AUX FUEL QTY</b> .....                                          | 1462 00 |
| ESSS Control Display Panel <b>AUX FUEL QTY</b> .....                                               | 1459 00 |
| ESSS External 230 Gallon Fuel Tank Access Doors .....                                              | 1474 00 |
| ESSS External 230 Gallon Fuel Tank Air Interface.....                                              | 1471 00 |
| ESSS External 230 Gallon Fuel Tank Drain Valve .....                                               | 1466 00 |
| ESSS External 230 Gallon Fuel Tank Electrical Interface Cable .....                                | 1469 00 |
| ESSS External 230 Gallon Fuel Tank Filler Cap .....                                                | 1468 00 |
| ESSS External 230 Gallon Fuel Tank Fuel Interface.....                                             | 1470 00 |
| ESSS External 230 Gallon Fuel Tank Fuel Probe Wiring Harness <b>AUX FUEL QTY</b> .....             | 1477 00 |
| ESSS External 230 Gallon Fuel Tank Fuel Quantity Sensor Harness <b>W/O AUX FUEL QTY</b> .....      | 1476 00 |
| ESSS External 230 Gallon Fuel Tank Fuel Supply Tube .....                                          | 1479 00 |
| ESSS External 230 Gallon Fuel Tank Fuel Valve .....                                                | 1478 00 |
| ESSS External 230 Gallon Fuel Tank Grounding Jack.....                                             | 1467 00 |

## INDEX - CONTINUED

|                                                                                                  | WP Sequence No. |
|--------------------------------------------------------------------------------------------------|-----------------|
| ESSS External 230 Gallon Fuel Tank Inlet Air Tube .....                                          | 1480 00         |
| ESSS External 230 Gallon Fuel Tank Pressure Test .....                                           | 1481 00         |
| ESSS External 230 Gallon Fuel Tank Probes <b>AUX FUEL QTY MWO 50-78</b> .....                    | 1552 00         |
| ESSS External 230 Gallon Fuel Tank Probes <b>AUX FUEL QTY</b> .....                              | 1475 00         |
| ESSS External 230 Gallon Fuel Tank Repair .....                                                  | 1482 00         |
| ESSS External 230 Gallon Fuel Tank Stabilizer Fin.....                                           | 1473 00         |
| ESSS External 230 Gallon Fuel Tank Suspension Lug.....                                           | 1472 00         |
| ESSS External 230 Gallon Fuel Tanks .....                                                        | 1465 00         |
| ESSS External Stores Support System Description and Data.....                                    | 0056 00         |
| ESSS Flow Sensor Panel Components .....                                                          | 1437 00         |
| ESSS Flow Transmitter.....                                                                       | 1438 00         |
| ESSS Fuel Overflow Sensor.....                                                                   | 1457 00         |
| ESSS Horizontal Stores Support (HSS) Bleed-Air Regulator Valves, Unions and Tee Fitting.....     | 1439 00         |
| ESSS Horizontal Stores Support (HSS) Fairings Repair .....                                       | 1429 00         |
| ESSS Horizontal Stores Support (HSS) Fairings .....                                              | 1428 00         |
| ESSS Horizontal Stores Support (HSS) Framing Repair .....                                        | 1430 00         |
| ESSS Horizontal Stores Support (HSS) Fuel Hoses, Fuel Tube Assembly, and Fuel Tee Union.....     | 1433 00         |
| ESSS Horizontal Stores Support (HSS) Fuel Shutoff Gate Valve .....                               | 1440 00         |
| ESSS Horizontal Stores Support (HSS) Fuel System Front Electrical Harness <b>MWO 50-78</b> ..... | 1554 00         |
| ESSS Horizontal Stores Support (HSS) Fuel System Front Electrical Harness .....                  | 1455 00         |
| ESSS Horizontal Stores Support (HSS) Fuel System Rear Electrical Harness <b>MWO 50-78</b> .....  | 1553 00         |
| ESSS Horizontal Stores Support (HSS) Fuel System Rear Electrical Harness.....                    | 1454 00         |
| ESSS Horizontal Stores Support (HSS) Jettison System Harness .....                               | 1463 00         |
| ESSS Horizontal Stores Support (HSS) Jettison System Position Harness.....                       | 1464 00         |
| ESSS Horizontal Stores Support (HSS) Pneumatic Hoses and Pneumatic Check Valve .....             | 1434 00         |
| ESSS Horizontal Stores Support (HSS) Position Light Harness .....                                | 1456 00         |
| ESSS Horizontal Stores Support (HSS) Root-to-Fuselage Fuel Hose.....                             | 1431 00         |
| ESSS Horizontal Stores Support (HSS) Root-to-Fuselage Pneumatic Hose .....                       | 1432 00         |
| ESSS Horizontal Stores Support (HSS) Struts Repair .....                                         | 1427 00         |
| ESSS Horizontal Stores Support (HSS).....                                                        | 1426 00         |
| ESSS Jettison System Description and Data .....                                                  | 0058 00         |
| ESSS Range Extension System Description and Data.....                                            | 0057 00         |
| ESSS Signal Conditioner <b>AUX FUEL QTY</b> .....                                                | 1458 00         |
| ESSS Stores Jettison Control Panel Diodes (AVIM).....                                            | 1579 00         |
| ESSS Stores Jettison Control Panel Electrical Connectors (AVIM).....                             | 1580 00         |
| ESSS Stores Jettison Control Panel Information Plate/Lamps.....                                  | 1461 00         |
| ESSS Stores Jettison Control Panel Relays (AVIM).....                                            | 1578 00         |
| ESSS Stores Jettison Control Panel Rotary Selector Switches (AVIM).....                          | 1576 00         |
| ESSS Stores Jettison Control Panel Toggle Switches (AVIM) .....                                  | 1577 00         |
| ESSS Stores Jettison Control Panel .....                                                         | 1460 00         |
| ESSS Vertical Support Pylon (VSP) Fuel Hose, Fuel Tube and Isolation Check Valve .....           | 1436 00         |
| ESSS Vertical Support Pylon (VSP) Pneumatic Hose and Elbow.....                                  | 1435 00         |
| ESSS Vertical Support Pylon (VSP) .....                                                          | 1447 00         |

## INDEX - CONTINUED

## WP Sequence No.

|                                                                                         |         |
|-----------------------------------------------------------------------------------------|---------|
| Every 1000 Hours / 48 Months.....                                                       | 1699 00 |
| Every 12 Months.....                                                                    | 1706 00 |
| Every 120 Days.....                                                                     | 1704 00 |
| Every 120 Hours.....                                                                    | 1697 00 |
| Every 14 Days.....                                                                      | 1701 00 |
| Every 30 Days.....                                                                      | 1702 00 |
| Every 360 Hours.....                                                                    | 1698 00 |
| Every 40 Hours.....                                                                     | 1696 00 |
| Every 48 Months.....                                                                    | 1706 01 |
| Every 6 Months.....                                                                     | 1705 00 |
| Every 90 Day Corrosion Inspection.....                                                  | 1703 00 |
| Expendable and Durable Items List.....                                                  | 1803 00 |
| Explosive Cartridge <b>HH-60A HH-60L HOIST BL-29900-30</b> .....                        | 1351 00 |
| Extended Range Breakaway Valve <b>ESSS</b> .....                                        | 0980 00 |
| Extended Range Interconnect Hose <b>ESSS</b> .....                                      | 0972 00 |
| Exterior Lighting Description and Data.....                                             | 0036 00 |
| External Electrical Power.....                                                          | 1685 00 |
| External Hydraulic Power Quick-Disconnect .....                                         | 0710 00 |
| External Hydraulic Power.....                                                           | 1684 00 |
| External Power Monitor Panel .....                                                      | 0843 00 |
| External Power Receptacle Cover .....                                                   | 0394 00 |
| External Power Receptacle .....                                                         | 0841 00 |
| External Rescue Hoist Inspections <b>HH-60A HH-60L HOIST BL-29900-30</b> .....          | 1327 00 |
| External Stores Support System (ESSS) External Tank Check <b>MWO 50-78</b> .....        | 0169 00 |
| External Stores Support System (ESSS) External Tank Check <b>W/O MWO 50-78</b> .....    | 0159 00 |
| External Stores Support System (ESSS) Fuselage Fitting Bearing .....                    | 0395 00 |
| External Stores Support System (ESSS) Inspections .....                                 | 1377 00 |
| External Stores Support System (ESSS) Jettison System .....                             | 0160 00 |
| External Stores Support System (ESSS) Kit Installation .....                            | 1424 00 |
| External Stores Support System (ESSS) Kit Removal.....                                  | 1425 00 |
| External Stores Support System (ESSS) Range Extension System <b>HH-60A HH-60L</b> ..... | 0167 00 |
| External Stores Support System (ESSS) Range Extension System <b>MWO 50-78</b> .....     | 0168 00 |
| External Stores Support System (ESSS) Range Extension System <b>W/O MWO 50-78</b> ..... | 0158 00 |
| Extrusion Charts.....                                                                   | 0380 00 |

## F

|                                                 |         |
|-------------------------------------------------|---------|
| Fire Detection System Control Amplifier .....   | 1205 00 |
| Fire Detection System Description and Data..... | 0041 00 |
| Fire Detection System.....                      | 0141 00 |
| Fire Detector Test Switch .....                 | 1207 00 |
| Fire Detectors.....                             | 1206 00 |

## INDEX - CONTINUED

|                                                                                                       | WP Sequence No. |
|-------------------------------------------------------------------------------------------------------|-----------------|
| Fire Extinguishing Agent Container Cartridge .....                                                    | 1196 00         |
| Fire Extinguishing Agent Container Check Valve .....                                                  | 1197 00         |
| Fire Extinguishing Agent Container Thermal Disc .....                                                 | 1198 00         |
| Fire Extinguishing System Agent Container .....                                                       | 1195 00         |
| Fire Extinguishing System Description and Data .....                                                  | 0042 00         |
| Fire Extinguishing System Directional Valve .....                                                     | 1200 00         |
| Fire Extinguishing System Discharge Tubes .....                                                       | 1199 00         |
| Fire Extinguishing System Inspection .....                                                            | 1192 00         |
| Fire Extinguishing System .....                                                                       | 0142 00         |
| Fire Extinguishing T-Handle Lamps .....                                                               | 1204 00         |
| Fixed Bleed-Air Lines and Disconnects <b>ESSS</b> .....                                               | 0998 00         |
| Fixed Fuel Lines and Disconnects <b>ESSS</b> .....                                                    | 0999 00         |
| Flare Dispenser Assembly <b>EH-60A</b> .....                                                          | 1527 00         |
| Flares Switch <b>EH-60A</b> .....                                                                     | 1526 00         |
| Flight Control Cable Conduit .....                                                                    | 1147 00         |
| Flight Control Cable Lockout Blocks .....                                                             | 1142 00         |
| Flight Control Cable Pulleys .....                                                                    | 1146 00         |
| Flight Control Cables and Pulleys Inspection .....                                                    | 1031 00         |
| Flight Control Rigging Pins .....                                                                     | 1103 00         |
| Flight Control Rods General Information .....                                                         | 1034 00         |
| Flight Control System Description and Data .....                                                      | 0038 00         |
| Flight Control System General Rigging Instructions .....                                              | 1035 00         |
| Flight Controls (Mechanical) .....                                                                    | 0136 00         |
| Flight Instruments Description and Data .....                                                         | 0020 00         |
| Flir Central Electronics Unit (CEU) <b>HH-60A HH-60L</b> .....                                        | 1557 00         |
| Flir Central Electronics Unit (CEU) Mount <b>HH-60A HH-60L</b> .....                                  | 1559 00         |
| Flir Control Panel <b>HH-60A HH-60L</b> .....                                                         | 1558 00         |
| Flir Hand Control Unit and Post <b>HH-60A HH-60L</b> .....                                            | 1559 01         |
| FLIR System Description and Data <b>HH-60A</b> .....                                                  | 0063 00         |
| FLIR System Description and Data <b>HH-60L</b> .....                                                  | 0063 01         |
| Flush Hydraulic Systems .....                                                                         | 0756 00         |
| Fold/Spread Main Rotor Blades .....                                                                   | 1679 00         |
| Fold/Spread Tail Rotor Blades .....                                                                   | 1680 00         |
| Fold/Unfold Tail Pylon .....                                                                          | 1681 00         |
| Formation Lights .....                                                                                | 0111 00         |
| Forward, Aft, and Lateral Flight Control Channel Inspection .....                                     | 1030 00         |
| Forward Bellcrank Inspections .....                                                                   | 1027 00         |
| Forward Bellcrank Support CSI Inspection .....                                                        | 1021 00         |
| Forward Bellcrank Support .....                                                                       | 1140 00         |
| Forward Bellcrank .....                                                                               | 1135 00         |
| Forward Control Rod .....                                                                             | 1125 00         |
| Forward, Lateral, Aft Bellcrank/Walking Beam and Aft Bellcrank Support Assembly Bushings (AVIM) ..... | 1188 00         |

## INDEX - CONTINUED

## WP Sequence No.

|                                                                    |         |
|--------------------------------------------------------------------|---------|
| Forward Looking Infrared (FLIR) <b>HH-60A HH-60L</b> .....         | 0170 00 |
| Forward Looking Infrared (FLIR) <b>HH-60L</b> .....                | 0170 01 |
| Forward Quadrant and Supports.....                                 | 1102 00 |
| Forward Support Tube/Engine Output Shaft.....                      | 0486 00 |
| Free-Air Thermometer .....                                         | 0796 00 |
| Fuel Boost Pump <b>MWO 50-25</b> .....                             | 0973 00 |
| Fuel Boost Pump Control Panel (AVIM).....                          | 0118 00 |
| Fuel Boost Pump Control Panel Electrical Connector (AVIM) .....    | 0956 00 |
| Fuel Boost Pump Control Panel Indicator Lamps .....                | 0868 00 |
| Fuel Boost Pump Control Panel Indicator Light (AVIM) .....         | 0954 00 |
| Fuel Boost Pump Control Panel Information Plate Lamps (AVIM) ..... | 0955 00 |
| Fuel Boost Pump Control Panel Information Plate .....              | 0867 00 |
| Fuel Boost Pump Control Panel Toggle Switch (AVIM) .....           | 0953 00 |
| Fuel Boost Pump Control Panel.....                                 | 0866 00 |
| Fuel Cell Wiring Harness .....                                     | 0995 00 |
| Fuel Feed System.....                                              | 1000 00 |
| Fuel Low Level Warning System.....                                 | 0127 00 |
| Fuel Pressure Switch <b>MWO 50-25</b> .....                        | 0975 00 |
| Fuel Prime Boost System .....                                      | 0129 00 |
| Fuel Quantity Probe .....                                          | 0994 00 |
| Fuel Quantity Signal Conditioner.....                              | 0997 00 |
| Fuel Quantity System Harness Adapter (AVIM) .....                  | 0133 00 |
| Fuel Quantity System Harness Adapter .....                         | 1592 00 |
| Fuel Quantity System Using Test Set PSD60-1AF .....                | 0132 00 |
| Fuel Quantity System Using Test Set TF-579 .....                   | 0131 00 |
| Fuel Selector Valve Control Box.....                               | 0510 00 |
| Fuel Selector Valve Push/Pull Cable.....                           | 0509 00 |
| Fuel Selector Valve .....                                          | 0986 00 |
| Fuel System Description and Data.....                              | 0037 00 |
| Fuel System Drain Lines .....                                      | 0990 00 |
| Fuel System Priming.....                                           | 0962 00 |
| Fuel System Vent Lines .....                                       | 0991 00 |
| Fuel Tank Interface <b>CEFS</b> .....                              | 1574 12 |
| Fuel Valve <b>MWO 50-78</b> .....                                  | 1555 00 |
| Fuselage Jackpads .....                                            | 0285 00 |
| Fuselage Power-Available Push/Pull Cable .....                     | 0508 00 |

## G

|                                                               |         |
|---------------------------------------------------------------|---------|
| Gear Boxes, Mounting Bolts Torque Check - 9 to 11 Hours ..... | 1689 00 |
| General Information.....                                      | 1747 00 |
| General .....                                                 | 0001 00 |
| Generator and APU Current Transformers, T2, T3, and T13 ..... | 0837 00 |

## INDEX - CONTINUED

|                                                             | WP Sequence No. |
|-------------------------------------------------------------|-----------------|
| Generator Control Units.....                                | 0838 00         |
| Glare Shield Harness .....                                  | 0893 00         |
| Glare Shield Lamps .....                                    | 0892 00         |
| Glare Shield.....                                           | 0215 00         |
| Gravity Defuel Main Tanks .....                             | 1616 00         |
| Gravity Refuel External Tanks <b>CEFS</b> .....             | 1619 01         |
| Gravity Refuel External Tanks .....                         | 1619 00         |
| Gravity Refuel Main Tanks .....                             | 1613 00         |
| Ground Handling General.....                                | 1673 00         |
| Ground Support Equipment Description and Data .....         | 0068 00         |
| Grounding Receptacle.....                                   | 0414 00         |
| Gunner Communication Cord.....                              | 1405 00         |
| Gunner's and Cabin Door Windows Blackout Installation ..... | 1409 00         |
| Gunner's and Cabin Door Windows Blackout Removal.....       | 1410 00         |
| Gunner's Seat Restraint System .....                        | 0235 00         |
| Gunner's Window Inspections.....                            | 0178 00         |
| Gunner's Window Latch Assembly.....                         | 0238 00         |
| Gunner's Window Lower Track .....                           | 0396 00         |
| Gunner's Window Repair .....                                | 0400 00         |
| Gunner's Window Seals.....                                  | 0240 00         |
| Gunner's Window Security Device .....                       | 0243 00         |
| Gunner's Window Slide.....                                  | 0239 00         |
| Gunner's Window Track Repairs .....                         | 0397 00         |
| Gunner's Window Upper and Lower Rollers .....               | 0242 00         |
| Gunner's Window Upper Track Fairing.....                    | 0399 00         |
| Gunner's Window Upper Track Seals.....                      | 0241 00         |
| Gunner's Window Upper Track.....                            | 0398 00         |
| Gunners Window Winterization Kit Installation.....          | 1547 00         |
| Gunners Window Winterization Kit Removal .....              | 1548 00         |
| Gunner's Window .....                                       | 0237 00         |
| Gust Lock Indicator Switch.....                             | 0638 00         |
| Gust Lock Rod and Lever .....                               | 0637 00         |
| Gust Lock System.....                                       | 0084 00         |

## H

|                                                      |         |
|------------------------------------------------------|---------|
| Hard Landing .....                                   | 1722 00 |
| Heads-Up Display Converter Control Unit Housing..... | 1531 00 |
| Heads-Up Display Converter Control Unit Knobs .....  | 1529 00 |
| Heads-Up Display Converter Control Unit Lamps.....   | 1530 00 |
| Heads-Up Display Converter Control Unit.....         | 1528 00 |
| Heads-Up Display Signal Data Converter Mount .....   | 1533 00 |
| Heads-Up Display Signal Data Converter .....         | 1532 00 |
| Heads-Up Display System Supply Unit Knob.....        | 1536 00 |



## INDEX - CONTINUED

## WP Sequence No.

|                                                                                                      |         |
|------------------------------------------------------------------------------------------------------|---------|
| Heads-Up Display Thermocouple Amplifier Support.....                                                 | 1535 00 |
| Heads-Up Display Thermocouple Amplifier.....                                                         | 1534 00 |
| Heating and Ventilation System Air Duct Valve Assemblies.....                                        | 1281 00 |
| Heating and Ventilation System Air Outlets.....                                                      | 1274 00 |
| Heating and Ventilation System Bleed-Air Tube.....                                                   | 1272 00 |
| Heating and Ventilation System Blower.....                                                           | 1280 00 |
| Heating and Ventilation System Cockpit Door Ducts.....                                               | 1278 00 |
| Heating and Ventilation System Description and Data.....                                             | 0046 00 |
| Heating and Ventilation System Heater Control Adapter.....                                           | 1276 00 |
| Heating and Ventilation System Heater Control Shaft.....                                             | 1275 00 |
| Heating and Ventilation System Heater Duct.....                                                      | 1279 00 |
| Heating and Ventilation System Heater Muffler.....                                                   | 1277 00 |
| Heating and Ventilation System Inspection.....                                                       | 1267 00 |
| Heating and Ventilation System Lower Temperature Sensing Tube.....                                   | 1271 00 |
| Heating and Ventilation System Mixer Temperature Sensor.....                                         | 1273 00 |
| Heating and Ventilation System Mixing Valve.....                                                     | 1269 00 |
| Heating and Ventilation System Repair.....                                                           | 1282 00 |
| Heating and Ventilation System Upper Temperature Sensing Tube.....                                   | 1270 00 |
| Heating and Ventilation System.....                                                                  | 0149 00 |
| Helicopter Painted Surfaces Touchup Repair.....                                                      | 0381 00 |
| Helicopter Subject to Excessive Spin Rate.....                                                       | 1723 00 |
| Helicopter Subject to Salt Water Immersion or Dry Chemical Fire Extinguishing Agents.....            | 1724 00 |
| HH-60A Helicopter Wire Data List By Wire Number.....                                                 | 1788 00 |
| HH-60A Helicopters Wire Data List By Reference Designator.....                                       | 1789 00 |
| High Level Shutoff Valves.....                                                                       | 0965 00 |
| HIRSS Bulkhead Repair.....                                                                           | 0496 00 |
| HIRSS Emissive Coating Repair.....                                                                   | 0497 00 |
| HIRSS Extender.....                                                                                  | 0495 00 |
| HIRSS Inlet Seal (AVIM).....                                                                         | 0522 00 |
| HIRSS Nacelle Fairing Support Mounts.....                                                            | 0492 00 |
| HIRSS Nacelle Fairing.....                                                                           | 0493 00 |
| HIRSS Rear Fairings and Panels.....                                                                  | 0490 00 |
| HIRSS Suppressor Core and Baffle.....                                                                | 0494 00 |
| HIRSS Suppressor Support Mounts.....                                                                 | 0491 00 |
| HIRSS.....                                                                                           | 0489 00 |
| Hook Assembly <b>HH-60A HH-60L HOIST BL-29900-30</b> .....                                           | 1344 00 |
| Horizontal Stores Support (HSS) <b>CEFS</b> .....                                                    | 1574 01 |
| Horizontal Stores Support (HSS) Fairings <b>CEFS</b> .....                                           | 1574 02 |
| Horizontal Stores Support (HSS) Fairings Repair <b>CEFS</b> .....                                    | 1574 03 |
| Horizontal Stores Support (HSS) Fuel Hoses, Fuel Tube Assembly, and Fuel Tee Union <b>CEFS</b> ..... | 1574 05 |
| Horizontal Stores Support (HSS) Fuel Shutoff Gate Valve <b>CEFS</b> .....                            | 1574 07 |
| Horizontal Stores Support (HSS) Fuel System Rear Electrical Harness <b>CEFS</b> .....                | 1574 08 |
| Horizontal Stores Support (HSS) Root-to-Fuselage Fuel Hose <b>CEFS</b> .....                         | 1574 04 |



## INDEX - CONTINUED

|                                                                                  | WP Sequence No. |
|----------------------------------------------------------------------------------|-----------------|
| Horizontal Stores Support Incandescent Position Lights Lamps and Lenses.....     | 0904 00         |
| Horizontal Stores Support Incandescent Position Lights .....                     | 0907 00         |
| Horizontal Stores Support Infrared Position Lights .....                         | 0908 00         |
| Hover Infrared Suppression System (HIRSS) Description and Data.....              | 0011 00         |
| Hydraulic Pump Module Bleed Relief Valve.....                                    | 0713 00         |
| Hydraulic Pump Module Differential Pressure Indicator and Shutoff Assembly ..... | 0717 00         |
| Hydraulic Pump Module Electrical Solenoid (AVIM) .....                           | 0762 00         |
| Hydraulic Pump Module Filter Housing Packing and Retainer.....                   | 0709 00         |
| Hydraulic Pump Module Filter.....                                                | 0708 00         |
| Hydraulic Pump Module Fluid Ident and Level Indicator Plate.....                 | 0716 00         |
| Hydraulic Pump Module Inspection.....                                            | 0693 00         |
| Hydraulic Pump Module Low Level Switch (AVIM) .....                              | 0760 00         |
| Hydraulic Pump Module Low Level Switch Connector (AVIM) .....                    | 0759 00         |
| Hydraulic Pump Module Pressure and Return Quick-Disconnects .....                | 0711 00         |
| Hydraulic Pump Module Relief Valve .....                                         | 0706 01         |
| Hydraulic Pump Module Seal Drain Elbow .....                                     | 0712 00         |
| Hydraulic Pump Module Shaft Seals (AVIM) .....                                   | 0761 00         |
| Hydraulic Pump Module Sight Glass.....                                           | 0714 00         |
| Hydraulic Pump Module Temperature Indicators .....                               | 0715 00         |
| Hydraulic Refill Handpump Filter.....                                            | 0746 00         |
| Hydraulic Refill Handpump.....                                                   | 0745 00         |
| Hydraulic Self-Sealing Couplings .....                                           | 0737 00         |
| Hydraulic Servos, Actuators, and Modules Description and Data.....               | 0019 00         |
| Hydraulic System Drain Lines .....                                               | 0741 00         |
| Hydraulic System Flex Hoses .....                                                | 0740 00         |
| Hydraulic System Rigid Tubing (AVIM) .....                                       | 0764 00         |
| Hydraulic System Rigid Tubing .....                                              | 0739 00         |
| Hydraulic System Seal Leakage Inspection.....                                    | 0691 00         |
| Hydraulic System Selector Valve Fill Lines .....                                 | 0754 00         |
| Hydraulic System Selector Valve .....                                            | 0753 00         |
| Hydraulic Systems Description and Data .....                                     | 0018 00         |
| Hydraulic Systems .....                                                          | 0086 00         |

## I

|                                                   |         |
|---------------------------------------------------|---------|
| Icing Rate Meter Lamps .....                      | 1222 00 |
| Icing Rate Meter .....                            | 1221 00 |
| Illustrated Field Manufacture Items List.....     | 1805 00 |
| Indicator Light Switch <b>HH-60A HH-60L</b> ..... | 0800 00 |
| Indicator Lights Dimmer Box Fuse.....             | 0879 00 |
| Indicator Lights Dimmer Box .....                 | 0878 00 |
| Inner Retention Plate and Seals.....              | 0683 00 |
| Input Module Chip Detector.....                   | 0645 00 |
| Input Module Gimbal.....                          | 0654 01 |

## INDEX - CONTINUED

## WP Sequence No.

|                                                                                            |         |
|--------------------------------------------------------------------------------------------|---------|
| Input Module Housing Repair .....                                                          | 0640 00 |
| Input Module Input Flange .....                                                            | 0655 00 |
| Input Module Inspections .....                                                             | 0619 00 |
| Input Module Seal .....                                                                    | 0654 00 |
| Input Module .....                                                                         | 0653 00 |
| Inspect Pneumatic Tube .....                                                               | 0480 00 |
| Inspect Turret Flir Unit (TFU) Scan Cavity (BIT/FIT Indication) <b>HH-60A HH-60L</b> ..... | 1740 00 |
| Instrument Display System Description and Data .....                                       | 0022 00 |
| Instrument Display System .....                                                            | 0089 00 |
| Instrument Panel And Consoles Indicator Lights Dimming <b>HH-60A HH-60L</b> .....          | 0126 00 |
| Instrument Panel and Consoles Indicator Lights Dimming .....                               | 0110 00 |
| Instrument Panel Button Lamps <b>UH60L</b> .....                                           | 0929 00 |
| Instrument Panel Lights <b>HH-60A HH-60L</b> .....                                         | 0125 00 |
| Instrument Panel Lights .....                                                              | 0105 00 |
| Instrument Panel .....                                                                     | 0216 00 |
| Interior Lighting Description and Data .....                                               | 0035 00 |
| Intermediate Gear Box Chip Detector Particle Inspection .....                              | 0622 00 |
| Intermediate Gear Box Chip Detector .....                                                  | 0665 00 |
| Intermediate Gear Box Fairing .....                                                        | 0335 00 |
| Intermediate Gear Box Housing Repair .....                                                 | 0664 00 |
| Intermediate Gear Box Input Seal and Flange .....                                          | 0660 00 |
| Intermediate Gear Box Inspections .....                                                    | 0621 00 |
| Intermediate Gear Box Oil Filler Plug .....                                                | 0663 00 |
| Intermediate Gear Box Output Seal and Flange .....                                         | 0661 00 |
| Intermediate Gear Box Serviceability Inspection .....                                      | 0623 00 |
| Intermediate Gear Box Sight Plug .....                                                     | 0662 00 |
| Intermediate Gear Box .....                                                                | 0659 00 |
| IR Jammer Fairing .....                                                                    | 0309 00 |
| IR Jammer Panel .....                                                                      | 0310 00 |

## J

|                                              |         |
|----------------------------------------------|---------|
| Jack Helicopter .....                        | 1675 00 |
| Junction Box Relays, K80, K81, and K82 ..... | 0851 00 |

## K

|                        |         |
|------------------------|---------|
| Kneel Helicopter ..... | 1682 00 |
|------------------------|---------|

## L

|                                         |         |
|-----------------------------------------|---------|
| Landing Gear Description and Data ..... | 0004 00 |
| Lateral Bellcrank Inspections .....     | 1028 00 |

## INDEX - CONTINUED

|                                                                           | WP Sequence No. |
|---------------------------------------------------------------------------|-----------------|
| Lateral Bellcrank.....                                                    | 1136 00         |
| Lateral Control Rod .....                                                 | 1127 00         |
| Lateral Input Control Rod .....                                           | 1114 00         |
| Lateral Torque Shaft and Levers .....                                     | 1096 00         |
| Left Hand Relay Panel (AVIM) .....                                        | 0121 00         |
| Left Relay Panel Fuses .....                                              | 0826 00         |
| Left Relay Panel Indicator Lights Dimming Control Relay, K40 (AVIM) ..... | 0942 00         |
| Left Relay Panel Left Pitot Heat Transformer, T1 (AVIM) .....             | 0937 00         |
| Left Relay Panel No. 1 Engine Start Relay, K45 (AVIM).....                | 0941 00         |
| Left Relay Panel Searchlight Relay, K41 (AVIM) .....                      | 0938 00         |
| Left Relay Panel Searchlight Relay, K51 (AVIM) .....                      | 0939 00         |
| Left Relay Panel Searchlight Relay, K52 (AVIM) .....                      | 0940 00         |
| Left/Right Relay Panels .....                                             | 0825 00         |
| Lever Assembly Bearings (AVIM).....                                       | 1182 00         |
| Life Limited Components .....                                             | 1742 00         |
| Lighted Switches Dimming Control.....                                     | 0876 00         |
| Limit Switch Setting/Check <b>HH-60A HH-60L HOIST BL-29900-30</b> .....   | 1350 00         |
| Load Cable <b>HH-60A HH-60L HOIST BL-29900-30</b> .....                   | 1343 00         |
| Load-Demand Rotary Input .....                                            | 0498 00         |
| Long Control Rod .....                                                    | 1128 00         |
| Longitudinal Bellcrank Bearings (AVIM).....                               | 1187 00         |
| Low Level Shutoff Valve.....                                              | 0970 00         |
| Low Level Warning Conditioner .....                                       | 0996 00         |
| Lower Apu Fuel Line.....                                                  | 1004 00         |
| Lower Console Auxiliary Dimming Control <b>HH-60A HH-60L</b> .....        | 0935 00         |
| Lower Main Fuel Lines .....                                               | 1005 00         |
| Lower Main Landing Gear Fairing <b>ESSS</b> .....                         | 0289 00         |
| Lower Main Landing Gear Fairing <b>W/O ESSS</b> .....                     | 0287 00         |
| Lower Windows .....                                                       | 0225 00         |
| Lubricate Bifilar .....                                                   | 1660 00         |
| Lubricate BRU-22A/A Ejector Rack.....                                     | 1671 00         |
| Lubricate Door Locks .....                                                | 1670 00         |
| Lubricate ECM Antenna Actuator Assembly <b>EH-60A</b> .....               | 1672 00         |
| Lubricate Landing Gear Shock Struts .....                                 | 1664 00         |
| Lubricate Mixer Bellcranks .....                                          | 1662 00         |
| Lubricate Rotary Inputs .....                                             | 1663 00         |
| Lubricate Stabilator Actuator Assembly.....                               | 1665 00         |
| Lubricate Swashplate .....                                                | 1661 00         |
| Lubricate Tail Wheel Bearings .....                                       | 1669 00         |
| Lubricate Tail Wheel Lockpin .....                                        | 1668 00         |
| Lubricate Windshield Wiper Converter.....                                 | 1667 00         |
| Lubricate Windshield Wiper Pivot Studs .....                              | 1666 00         |
| Lubrication Requirements .....                                            | 1659 00         |

## INDEX - CONTINUED

## WP Sequence No.

## M

|                                                                                           |         |
|-------------------------------------------------------------------------------------------|---------|
| M4 Mount Clamp Assembly Replacement .....                                                 | 1404 02 |
| M4 Mount Flash Suppressor Restraint Replacement .....                                     | 1404 01 |
| M4 Mount I-Beam Replacement .....                                                         | 1404 03 |
| M4 Mounting Bracket Replacement .....                                                     | 1404 04 |
| Main And Tail Rotor Blade Erosion Protection Kit Description and Data .....               | 0060 00 |
| Main Engine Prime Fuel Shutoff Valve .....                                                | 0976 00 |
| Main Fuel Breakaway Valve.....                                                            | 0979 00 |
| Main Fuel Cell Ballistic Ring (AVIM) .....                                                | 1006 00 |
| Main Fuel Cell Check Valve .....                                                          | 0974 00 |
| Main Fuel Cell Plate and Attached Components.....                                         | 0964 00 |
| Main Fuel Cell Pressure Test .....                                                        | 0960 00 |
| Main Fuel Cell .....                                                                      | 0963 00 |
| Main Fuel Line Check Valve.....                                                           | 0969 00 |
| Main Fuel System Check Valve .....                                                        | 0984 00 |
| Main Fuel System Inspections.....                                                         | 0961 00 |
| Main Fuel System Vent Valve .....                                                         | 0978 00 |
| Main Generators.....                                                                      | 0839 00 |
| Main, Input, and Accessory Module Housing Water Entrapment Area Corrosion Protection..... | 0642 00 |
| Main, Intermediate, and Tail Gear Box AOAP Sampling .....                                 | 1718 00 |
| Main Landing Gear Axle .....                                                              | 0439 00 |
| Main Landing Gear Drag Beam and Axle Inspections .....                                    | 0431 00 |
| Main Landing Gear Drag Beam Bushings.....                                                 | 0441 01 |
| Main Landing Gear Drag Beam Jackpod and Tiedown Ring.....                                 | 0442 00 |
| Main Landing Gear Drag Beam Switch .....                                                  | 0443 00 |
| Main Landing Gear Drag Beam.....                                                          | 0438 00 |
| Main Landing Gear Fuselage Fitting Spherical Bearing (AVIM).....                          | 0359 00 |
| Main Landing Gear Inspection Shock Strut Quick Service Check .....                        | 0432 00 |
| Main Landing Gear Shock Strut Air Valve.....                                              | 0446 00 |
| Main Landing Gear Shock Strut (AVIM) .....                                                | 0466 00 |
| Main Landing Gear Shock Strut Kneeling Valve .....                                        | 0445 00 |
| Main Landing Gear Shock Strut Lower Stage Spherical Bearing (AVIM).....                   | 0467 00 |
| Main Landing Gear Shock Strut .....                                                       | 0444 00 |
| Main Landing Gear Ski Adapter .....                                                       | 1542 00 |
| Main Landing Gear Skis.....                                                               | 1543 00 |
| Main Landing Gear Tire Inspection .....                                                   | 0433 00 |
| Main Landing Gear Tire .....                                                              | 0450 00 |
| Main Landing Gear Wheel and Tire .....                                                    | 0447 00 |
| Main Landing Gear Wheel (AVIM) .....                                                      | 0468 00 |
| Main Landing Gear Wheel Brake (AVIM) .....                                                | 0469 00 |
| Main Landing Gear Wheel Brake Inspection .....                                            | 0434 00 |
| Main Landing Gear Wheel Brake Lines and Hoses.....                                        | 0453 00 |

## INDEX - CONTINUED

|                                                                                           | WP Sequence No. |
|-------------------------------------------------------------------------------------------|-----------------|
| Main Landing Gear Wheel Brake .....                                                       | 0451 00         |
| Main Landing Gear Wheel Disk Drive Keys .....                                             | 0449 00         |
| Main Landing Gear Wheel Valve .....                                                       | 0448 00         |
| Main Module Housing Repair .....                                                          | 0639 00         |
| Main Module Sump Chip Detector .....                                                      | 0646 00         |
| Main Rotor Blade Air Valve .....                                                          | 0582 00         |
| Main Rotor Blade Cuff Bushings (AVIM) .....                                               | 0603 00         |
| Main Rotor Blade Cuff Decal .....                                                         | 0577 00         |
| Main Rotor Blade Deice Distributor and Slipping/Brush Assembly .....                      | 1220 00         |
| Main Rotor Blade Deice Junction Box .....                                                 | 1238 00         |
| Main Rotor Blade Erosion Protection Kit Inspections .....                                 | 1378 00         |
| Main Rotor Blade Inspections .....                                                        | 0544 00         |
| Main Rotor Blade Pin Inspections .....                                                    | 0542 00         |
| Main Rotor Blade Receiver Assembly .....                                                  | 0578 00         |
| Main Rotor Blade Spar Inspections .....                                                   | 0541 00         |
| Main Rotor Blade Spar Leakage Test .....                                                  | 0584 00         |
| Main Rotor Blade Tip Cap Erosion Protection Kit Boot to Tip Cap Installation .....        | 1487 00         |
| Main Rotor Blade Tip Cap Erosion Protection Kit Boot to Tip Cap Removal/Repair .....      | 1488 00         |
| Main Rotor Blade Tip Cap Erosion Protection Kit Polyurethane Coating Installation .....   | 1485 00         |
| Main Rotor Blade Tip Cap Erosion Protection Kit Polyurethane Coating Removal/Repair ..... | 1486 00         |
| Main Rotor Blade Tip Cap Erosion Protection Kit Polyurethane Tape Installation .....      | 1483 00         |
| Main Rotor Blade Tip Cap Erosion Protection Kit Polyurethane Tape Removal/Repair .....    | 1484 00         |
| Main Rotor Blade Tip Cap Screws - 9 to 11 Hours .....                                     | 1690 00         |
| Main Rotor Blade Track and Balance .....                                                  | 0580 00         |
| Main Rotor Blade Trim Tab Adjustment .....                                                | 0579 00         |
| Main Rotor Blade Whirl Test (One Hour) .....                                              | 0583 00         |
| Main Rotor Blade .....                                                                    | 0576 00         |
| Main Rotor Blades (AVIM) .....                                                            | 0082 00         |
| Main Rotor Blades Dropped During Blade Fold .....                                         | 1725 00         |
| Main Rotor Blades Subject to High Winds .....                                             | 1726 00         |
| Main Rotor Control Pivot Bolt CSI Inspection .....                                        | 1019 00         |
| Main Rotor Control Rod CSI Inspection .....                                               | 1023 00         |
| Main Rotor Droop Stop Pounding .....                                                      | 1727 00         |
| Main Rotor Head and Shaft Extension .....                                                 | 0547 00         |
| Main Rotor Head Bolts .....                                                               | 0550 00         |
| Main Rotor Head Torque Check - 9 to 11 Hours .....                                        | 1691 00         |
| Main Rotor Hub Threaded Inserts .....                                                     | 0549 00         |
| Main Rotor Hub .....                                                                      | 0548 00         |
| Main Rotor Pylon Air Inlet Fairings .....                                                 | 0301 00         |
| Main Rotor Pylon Electro-Luminescent Formation Light .....                                | 0897 00         |
| Main Rotor Pylon Fairing Repair .....                                                     | 0404 00         |
| Main Rotor Pylon Framing Repair .....                                                     | 0403 00         |
| Main Rotor Pylon Infrared Formation Light .....                                           | 0898 00         |
| Main Rotor Pylon Inspections .....                                                        | 0182 00         |

## INDEX - CONTINUED

## WP Sequence No.

|                                                                                |         |
|--------------------------------------------------------------------------------|---------|
| Main Rotor Pylon Rear Fairing.....                                             | 0311 00 |
| Main Rotor Pylon Sliding Cover Horizontal Rollers .....                        | 0299 00 |
| Main Rotor Pylon Sliding Cover Latch .....                                     | 0297 00 |
| Main Rotor Pylon Sliding Cover Vertical Rollers .....                          | 0298 00 |
| Main Rotor Pylon Sliding Cover.....                                            | 0296 00 |
| Main Rotor Pylon Transmission Cover.....                                       | 0302 00 |
| Main Rotor Pylon Work Platform .....                                           | 0300 00 |
| Main Rotor Shaft Inspections .....                                             | 0614 00 |
| Main Rotor Shaft Inspect/Repair.....                                           | 0636 00 |
| Main Rotor Shaft Nut (AVIM).....                                               | 0592 00 |
| Main Rotor Shaft Plug.....                                                     | 0635 00 |
| Main Rotor System Complete Rig .....                                           | 1036 00 |
| Main Rotor System Description and Data .....                                   | 0012 00 |
| Main Rotor System Rig Check .....                                              | 1037 00 |
| Main Transmission and Gear Box Chip Detector System Description and Data ..... | 0017 00 |
| Main Transmission Breather Plug .....                                          | 0633 00 |
| Main Transmission Chip Detector Particle Inspection .....                      | 0617 00 |
| Main Transmission Dowel Pin Inspection .....                                   | 0613 00 |
| Main Transmission Drip Pan <b>DP3-5-01</b> .....                               | 0261 01 |
| Main Transmission Drip Pan <b>EH60A</b> .....                                  | 0259 00 |
| Main Transmission Drip Pan <b>UH60A 77-22714-79-23317SUBQ</b> .....            | 0260 00 |
| Main Transmission Drip Pan <b>UH60A 77-22722</b> .....                         | 0261 00 |
| Main Transmission Functional Test.....                                         | 0615 00 |
| Main Transmission Lubrication System Description and Data.....                 | 0015 00 |
| Main Transmission Lubrication System Inspection.....                           | 0618 00 |
| Main Transmission Mounting Bolt Inspection.....                                | 0612 00 |
| Main Transmission Oil Filter/Sleeve.....                                       | 0647 00 |
| Main Transmission Oil Gage Tube Assembly .....                                 | 0651 00 |
| Main Transmission Oil Pressure Sensor .....                                    | 0649 00 |
| Main Transmission Oil Pump Pressure Regulating Valves .....                    | 0650 00 |
| Main Transmission Oil Pump.....                                                | 0648 00 |
| Main Transmission Oil Temperature Switch.....                                  | 0652 00 |
| Main Transmission Output Shaft Seal.....                                       | 0632 00 |
| Main Transmission Serviceability Inspection .....                              | 0616 00 |
| Main Transmission Tail Takeoff Flange.....                                     | 0631 00 |
| Main Transmission Warning and Indicating System Description and Data .....     | 0016 00 |
| Main Transmission .....                                                        | 0630 00 |
| Main/Tail Landing Gear Skis Description and Data .....                         | 0062 00 |
| Main/Tail Landing Gear Skis Repair .....                                       | 1546 00 |
| Main/Tail Landing Gear Skis Types of Damage .....                              | 1545 00 |
| Maintenance Allocation Chart (MAC) .....                                       | 1801 00 |
| Maintenance Allocation Chart .....                                             | 1802 00 |
| Maintenance Light .....                                                        | 1593 00 |

## INDEX - CONTINUED

|                                                                                        | WP Sequence No. |
|----------------------------------------------------------------------------------------|-----------------|
| Manifold Self-Sealing Couplings .....                                                  | 0736 00         |
| Manifold Shims (AVIM).....                                                             | 0763 00         |
| Mask Blower Power Distribution Box (PDB) Assembly .....                                | 1574 00         |
| Master Brake Cylinder (AVIM).....                                                      | 0470 00         |
| Master Brake Cylinder .....                                                            | 0452 00         |
| Master Warning and Radar Altimeter Dimming Control <b>HH-60A HH-60L</b> .....          | 0934 00         |
| Master Warning Dimming Control.....                                                    | 0793 00         |
| Master Warning Panel Capsule Parts .....                                               | 0792 00         |
| Master Warning Panel Lamps.....                                                        | 0791 00         |
| Master Warning Panel.....                                                              | 0790 00         |
| MAU-40/A Ejector Rack Explosive Cartridge .....                                        | 1445 00         |
| MAU-40/A Ejector Rack Repair .....                                                     | 1446 00         |
| MAU-40/A Ejector Rack .....                                                            | 1444 00         |
| Medium and High Frequency Vibrations .....                                             | 0083 00         |
| Metal Structure Repair .....                                                           | 0378 00         |
| MFD/Caution/Advisory Warning System <b>HH-60A HH-60L</b> .....                         | 0100 00         |
| Microclimate Cooling System and Mask Blower Wiring Assembly Description and Data ..... | 0067 00         |
| Microclimate Cooling System (MCS) and Mask Blower Assembly Kit Installation .....      | 1560 00         |
| Microclimate Cooling System (MCS) and Mask Blower Assembly Kit Removal .....           | 1561 00         |
| Microclimate Cooling System (MCS) Bypass Control Mounts.....                           | 1572 00         |
| Microclimate Cooling System (MCS).....                                                 | 1381 00         |
| Microclimate Cooling System (MCU) Power Harnesses .....                                | 1573 00         |
| Microclimate Cooling Unit and Mask Blower Assemblies.....                              | 0172 00         |
| Microclimate Cooling Unit (MCU) Cleaning .....                                         | 1567 00         |
| Microclimate Cooling Unit (MCU) Coolant Charging/Purging .....                         | 1571 00         |
| Microclimate Cooling Unit (MCU) Coolant Preparation .....                              | 1570 00         |
| Microclimate Cooling Unit (MCU) Hose Assembly Crew's 1 and 2 .....                     | 1562 00         |
| Microclimate Cooling Unit (MCU) Hose Assembly Pilot's and Copilot's .....              | 1563 00         |
| Microclimate Cooling Unit (MCU) Hose Assembly Repair .....                             | 1564 00         |
| Microclimate Cooling Unit (MCU) Mount Assembly.....                                    | 1568 00         |
| Microclimate Cooling Unit (MCU) Resilient Mounts.....                                  | 1569 00         |
| Microclimate Cooling Units (MCU) Coolant Filter Replacement .....                      | 1566 00         |
| Microclimate Cooling Units (MCU) Copilot's, Crew 2, Crew 1 and Pilot's .....           | 1565 00         |
| Midsection Bellcranks and Shaft.....                                                   | 1100 00         |
| Miscellaneous Instruments Description and Data.....                                    | 0021 00         |
| Miscellaneous Switch Panel (AVIM) .....                                                | 0099 00         |
| Miscellaneous Switch Panel Button Lamps.....                                           | 0831 00         |
| Miscellaneous Switch Panel Electrical Connectors (AVIM) .....                          | 0951 00         |
| Miscellaneous Switch Panel Information Plate and Lamps .....                           | 0832 00         |
| Miscellaneous Switch Panel Printed Wiring Board Assembly (AVIM).....                   | 0952 00         |
| Miscellaneous Switch Panel Pushbutton Switches (AVIM) .....                            | 0949 00         |
| Miscellaneous Switch Panel Toggle Switch (AVIM) .....                                  | 0950 00         |
| Miscellaneous Switch Panel .....                                                       | 0830 00         |
| Mission Electrical Interface <b>EH60A</b> .....                                        | 0103 00         |



## INDEX - CONTINUED

## WP Sequence No.

|                                                                                                        |         |
|--------------------------------------------------------------------------------------------------------|---------|
| Mission Operator's Seat <b>EH60A</b> .....                                                             | 0236 00 |
| Mixer Inspection .....                                                                                 | 1014 00 |
| Mixer Small Link on Bellcrank (AVIM) .....                                                             | 1171 00 |
| Mixer to Aft Primary Servo Control Rod .....                                                           | 1121 00 |
| Mixer to Forward Primary Servo Control Rod .....                                                       | 1120 00 |
| Mixer to Lateral Primary Servo Control Rod .....                                                       | 1122 00 |
| Mixer to Yaw Lever Pushrod .....                                                                       | 1123 00 |
| Mixer .....                                                                                            | 1089 00 |
| Mixture Temperature Sensor Pressure Bellows Repair (AVIM) .....                                        | 1310 00 |
| M-60D Machine Gun Mount Detent Spring .....                                                            | 1402 00 |
| M-60D Machine Gun Mount Outboard Fitting .....                                                         | 1404 00 |
| M-60D Machine Gun Mount Pintle .....                                                                   | 1403 00 |
| M-60D Machine Gun Mount .....                                                                          | 1401 00 |
| Multifunction Display <b>HH-60A HH-60L</b> .....                                                       | 0799 00 |
| Multifunction Display/ Caution Advisory Warning System Description and Data <b>HH-60A HH-60L</b> ..... | 0027 00 |

## N

|                                                                                         |         |
|-----------------------------------------------------------------------------------------|---------|
| NiCad Battery Conditioner/Analyzer <b>UH-60A EH-60A UH60L 89-26149 - 96-26722</b> ..... | 0858 00 |
| NiCad Battery .....                                                                     | 0857 00 |
| Nipple-Check Valve .....                                                                | 0703 00 |
| No. 1 AC Generator Contactor, K1 .....                                                  | 0834 00 |
| No. 1 and No. 2 Hydraulic Pump Modules .....                                            | 0706 00 |
| No. 1 Engine Instruments and Warning Lights System .....                                | 0073 00 |
| No. 1 Primary Servo Manifold .....                                                      | 0719 00 |
| No. 1 Transfer Module Hoses and Fittings .....                                          | 0722 00 |
| No. 1 Transfer Module Manifold .....                                                    | 0718 00 |
| No. 1 Transfer Module Pressure Switch .....                                             | 0721 00 |
| No. 1 Transfer Module .....                                                             | 0720 00 |
| No. 2 AC Generator Contactor, K2 .....                                                  | 0835 00 |
| No. 2 Engine Instruments and Warning Lights System .....                                | 0074 00 |
| No. 2 Primary Servo Manifold .....                                                      | 0724 00 |
| No. 2 Transfer Module Hoses and Fittings .....                                          | 0727 00 |
| No. 2 Transfer Module Manifold .....                                                    | 0723 00 |
| No. 2 Transfer Module Pressure Switch .....                                             | 0726 00 |
| No. 2 Transfer Module .....                                                             | 0725 00 |
| No. 3 Collective Stick Position Sensor .....                                            | 1090 00 |
| No. 3 Relay Panel <b>EH60A</b> .....                                                    | 0827 00 |
| Nose Door Adjustment .....                                                              | 0189 00 |
| Nose Door Cover and Screen .....                                                        | 0194 00 |
| Nose Door Drain Hoses .....                                                             | 0197 00 |
| Nose Door Hinge Fitting .....                                                           | 0192 00 |
| Nose Door Lock .....                                                                    | 0193 00 |



## INDEX - CONTINUED

|                                                                                | WP Sequence No. |
|--------------------------------------------------------------------------------|-----------------|
| Nose Door Repair .....                                                         | 0382 00         |
| Nose Door Seals.....                                                           | 0195 00         |
| Nose Door Stops .....                                                          | 0196 00         |
| Nose Door Strut Catch Assembly .....                                           | 0191 00         |
| Nose Door Strut .....                                                          | 0190 00         |
| Nose Door .....                                                                | 0188 00         |
| Nose Section Avionic Compartment Cover .....                                   | 0217 00         |
| Nose Section Framing Repair.....                                               | 0384 00         |
| Nose Section Plating Repair.....                                               | 0385 00         |
| Nose Section Thermal Barriers.....                                             | 0218 00         |
| Nose Vibration Absorber (Box Frame) <b>UH60L 95-26610, 95-26621-SUBQ</b> ..... | 0220 00         |
| Nose Vibration Absorber Fitting Bearings (AVIM).....                           | 0353 00         |
| Nose Vibration Absorber (Spring Type).....                                     | 0219 00         |
| NVG Power Supply <b>MWO 50-56 UH60L 96-26723-SUBQ</b> .....                    | 0930 00         |

## O

|                                                                                              |         |
|----------------------------------------------------------------------------------------------|---------|
| Oil Cooler Compartment Access Door .....                                                     | 0308 00 |
| Oil Cooler Compartment Pneumatic Tubes .....                                                 | 0700 00 |
| Oil Cooler Forward Support (AVIM).....                                                       | 0367 00 |
| Oil Cooler Inspections .....                                                                 | 0626 00 |
| Oil Cooler Radiator Line and Elbows.....                                                     | 0677 00 |
| Oil Cooler Radiator Thermostatic Valve.....                                                  | 0676 00 |
| Oil Cooler Radiator.....                                                                     | 0675 00 |
| Oil Cooler Rear Support (AVIM).....                                                          | 0368 00 |
| Oil Cooler Spline Wear Indicator System.....                                                 | 0679 00 |
| Oil Cooler Support (AVIM).....                                                               | 0366 00 |
| Oil Cooler Vibration Check.....                                                              | 0680 00 |
| Oil Cooler.....                                                                              | 0678 00 |
| Operating Helicopter in Erosive Conditions .....                                             | 1728 00 |
| Operating Helicopter in Heavy Rainfall .....                                                 | 1729 00 |
| Operating Helicopter in Nuclear or Biochemically Contaminated Atmosphere.....                | 1731 00 |
| Operating Helicopter in Tropical Environments .....                                          | 1730 00 |
| Option II Cabin Heater and Ventilation System .....                                          | 0170 02 |
| Option II Cabin Heater System Relay Panel <b>HH-60A UH-60L</b> .....                         | 1586 01 |
| Option II Heating System Aft Heat Lines and Fittings <b>HH-60A UH-60L</b> .....              | 1513 01 |
| Option II Heating System Ejectors <b>HH-60A UH-60L</b> .....                                 | 1513 04 |
| Option II Heating System Engine Start Tube <b>HH-60A UH-60L</b> .....                        | 1513 03 |
| Option II Heating System Solenoid Valve <b>HH-60A UH-60L</b> .....                           | 1513 02 |
| Outboard Retention Plate (AVIM).....                                                         | 0611 00 |
| Outboard Retention Plate Nuts and Pitch Beam Retaining Nut Torque Check - 9 to 11 Hours..... | 1692 00 |
| Outboard Retention Plate Repair.....                                                         | 0589 00 |
| Outboard Windshields.....                                                                    | 0226 00 |

## INDEX - CONTINUED

## WP Sequence No.

Outside Air Temperature (OAT) Sensor..... 0801 00

## P

Park Helicopter..... 1678 00

Parking Brake Handle and Mechanism..... 0458 00

Parking Brake Rod Inspection..... 0435 00

Parking Brake System..... 0070 00

Parking Brake Valve (AVIM) ..... 0471 00

Parking Brake Valve Switch..... 0455 00

Parking Brake Valve ..... 0454 00

Pilot Display Unit 70450-01043-121 and 70450-01043-123 Driver Modules/Lamps (AVIM) ..... 0808 00

Pilot Display Unit 70450-01043-121 and 70450-01043-123 Torque Display Analog Modules/Lamps (AVIM)..... 0810 00

Pilot Display Unit 70450-01043-124 and 70450-01916-104 Driver Modules (AVIM) ..... 0809 00

Pilot Display Unit 70450-01043-124 and 70450-01916-104 Torque Display Analog Modules (AVIM)..... 0811 00

Pilot Display Unit Autodim Module (AVIM) ..... 0813 00

Pilot Display Unit Bar Graph Filament (BGF) Lamps and Direct View Filament (DVF) Modules **EMEP** ... 0784 00

Pilot Display Unit NVG Filters (AVIM)..... 0814 00

Pilot Display Unit Torque Digital Readout Module (AVIM)..... 0812 00

Pilot Hoist Control Panel **HH-60A HH-60L HOIST BL-29900-30** ..... 1348 00

Pilot-Assist Module (AVIM)..... 0140 00

Pilot-Assist Module Pressure Switch ..... 0729 00

Pilot-Assist Module Thermal Relief Valve ..... 0730 00

Pilot-Assist Module..... 0728 00

Pilot-Assist Servo Module Pressure Reducer (AVIM) ..... 1170 00

Pilot-Assist Servo Module Three-Way Valves (AVIM)..... 1169 00

Pilot/Copilot Display Unit Faceplate and EMI Shield ..... 0783 00

Pilot/Copilot Display Unit ..... 0782 00

Pilot's and Copilot's Collective Stick Bellcrank Bearings (AVIM) ..... 1186 00

Pilot's and Copilot's Collective Stick Support..... 1064 00

Pilot's and Copilot's Utility Light Lamps ..... 0889 00

Pilot's and Copilot's Utility Lights..... 0890 00

Pilot's Collective Control Rods..... 1106 00

Pilot's Collective Stick Bellcrank Support (AVIM) ..... 1184 00

Pilot's Collective Stick Friction Lock..... 1075 00

Pilot's Collective Stick Grip Wire..... 1074 00

Pilot's Collective Stick Support (AVIM) ..... 1183 00

Pilot's Collective Stick ..... 1061 00

Pilot's Directional and Cyclic Control Rods ..... 1105 00

Pilots Display Unit (AVIM)..... 0094 00

Pilot's Display Unit Description and Data ..... 0025 00

Pilot's Yaw Pedals and Adjuster Control Rods ..... 1104 00

Pilot's/Copilot's Seat Inspections..... 0176 00

## INDEX - CONTINUED

|                                                                                      | WP Sequence No. |
|--------------------------------------------------------------------------------------|-----------------|
| Pilot's/Copilot's Seats, D-3801-1 and D-3177 .....                                   | 0232 00         |
| Pilot's/Copilot's Seats, RA 30525-1, RA 100900-1, RA 100900-3, and RA 100900-5 ..... | 0231 00         |
| Pin Filter Adapters <b>EMEP</b> .....                                                | 0925 00         |
| Pitch Control Rod Adjustment.....                                                    | 0566 00         |
| Pitch Control Rod End Spherical Bearings.....                                        | 0564 00         |
| Pitch Control Rod Inspections.....                                                   | 0538 00         |
| Pitch Control Rod Upper and Lower Rod Ends.....                                      | 0565 00         |
| Pitch Control Rods.....                                                              | 0563 00         |
| Pitch Torque Shaft and Levers .....                                                  | 1095 00         |
| Pitch Trim Actuator (AVIM).....                                                      | 0139 00         |
| Pitch/Trim Assembly SAS Actuator (AVIM).....                                         | 1165 00         |
| Pitch/Trim Assembly SAS Actuator Bleed Screw and Packing.....                        | 1084 00         |
| Pitch/Trim Assembly SAS Servovalve (AVIM).....                                       | 1164 00         |
| Pitch/Trim Assembly to Mixer Control Link.....                                       | 1117 00         |
| Pitch/Trim Assembly.....                                                             | 1083 00         |
| Pitch/Trim Input Control Rod.....                                                    | 1112 00         |
| Pitot Heater.....                                                                    | 0088 00         |
| Pitot-Static Head Support <b>UH60A 82-23748 - 83-23870 W/O MWO 50-22</b> .....       | 0768 00         |
| Pitot-Static Head .....                                                              | 0767 00         |
| Pitot-Static Lines and Components .....                                              | 0769 00         |
| Pitot-Static System.....                                                             | 0087 00         |
| Platform Scale Weighing .....                                                        | 1686 00         |
| Pneumatic System Inspection .....                                                    | 0692 00         |
| Portable Maintenance Light Lamp .....                                                | 0891 00         |
| Position Lights Flasher Unit.....                                                    | 0903 00         |
| Position Lights .....                                                                | 0113 00         |
| Position Sensor/Limit Switch Electrical Connector (AVIM).....                        | 0373 00         |
| Position Sensor/Limit Switches (AVIM).....                                           | 0371 00         |
| Position Transmitter Limit Switch, 70400-06705.....                                  | 0346 00         |
| Position Transmitter Limit Switch, 70400-06712.....                                  | 0347 00         |
| Position Transmitter/Limit Switch Assembly (AVIM).....                               | 0069 00         |
| Post Lightning Strike Inspection .....                                               | 1732 00         |
| Power Contactor, K83 <b>EH60A</b> .....                                              | 0862 00         |
| Power Current Limiter, CL10 <b>EH60A</b> .....                                       | 0863 00         |
| Power-Available Rotary Input .....                                                   | 0499 00         |
| Powerplant Description and Data.....                                                 | 0005 00         |
| Preserve Main Fuel Cell Tank.....                                                    | 1618 00         |
| Pressure Defuel Main and External Tanks <b>CEFS</b> .....                            | 1615 01         |
| Pressure Defuel Main Tanks.....                                                      | 1615 00         |
| Pressure Reduced Indicator (AVIM) .....                                              | 0766 00         |
| Pressure Refuel Main and External Tanks <b>CEFS</b> .....                            | 1612 01         |
| Pressure Refuel Main Tanks.....                                                      | 1612 00         |
| Pressure Refuel/Defuel System .....                                                  | 0130 00         |

## INDEX - CONTINUED

## WP Sequence No.

|                                                   |         |
|---------------------------------------------------|---------|
| Pressure Refuel/Defuel Valve .....                | 0966 00 |
| Pressure Refueling Interconnect Tube .....        | 0971 00 |
| Pressure Refueling Receptacle .....               | 0992 00 |
| Primary Servo Bypass Valve Cap Packing .....      | 1093 00 |
| Primary Servo Control Rods (AVIM) .....           | 1176 00 |
| Primary Servo Four-Point Rig Check .....          | 1042 00 |
| Primary Servo Pressure Switch .....               | 1092 00 |
| Primary Servo .....                               | 1091 00 |
| Prime Fuel Lines .....                            | 1003 00 |
| Prime/Boost Pump Check Valve .....                | 0968 00 |
| Prime/Boost Pump Fuel Breakaway Valve .....       | 0983 00 |
| Prime/Boost Pump Fuel Outlet Valve .....          | 0982 00 |
| Prime/Boost Pump .....                            | 0981 00 |
| Protective Covers .....                           | 1677 00 |
| Pull-Away Electrical Harness <b>CEFS</b> .....    | 1574 13 |
| Pump Package <b>CEFS</b> .....                    | 1574 09 |
| Pump Package Flange Plug <b>CEFS</b> .....        | 1574 16 |
| Pump Package Fuel Pump <b>CEFS</b> .....          | 1574 20 |
| Pump Package Inlet Manifold <b>CEFS</b> .....     | 1574 15 |
| Pump Package Outlet Manifold <b>CEFS</b> .....    | 1574 19 |
| Pump Package Refuel Bypass Hose <b>CEFS</b> ..... | 1574 17 |
| Pump Package Refuel Valve <b>CEFS</b> .....       | 1574 18 |
| Pump Package Relay Box <b>CEFS</b> .....          | 1574 21 |
| Purge Main Fuel Cell .....                        | 1001 00 |

## R

|                                                                        |         |
|------------------------------------------------------------------------|---------|
| Radar Altimeter Dimming Control .....                                  | 0883 00 |
| References .....                                                       | 1800 00 |
| Refuel Adapter and Nipple .....                                        | 0993 00 |
| Remote Circuit Breaker .....                                           | 0874 00 |
| Replace STA 312.0 Upper Elbow <b>CEFS</b> .....                        | 1574 10 |
| Replace Transition Section Step Door Hinge WL 250.0 .....              | 0408 00 |
| Rescue Hoist <b>HH-60A HH-60L HOIST BL-29900-30</b> .....              | 1342 00 |
| Rescue Hoist <b>HH-60A, HH-60L RESCUE HOIST MOTOR EC-23050-1</b> ..... | 1342 01 |
| Rescue Hoist Bus Bar <b>HOIST 42305R1</b> .....                        | 1331 00 |
| Rescue Hoist Cable Bumper Guard .....                                  | 0350 00 |
| Rescue Hoist Control Panel (AVIM) .....                                | 0154 00 |
| Rescue Hoist Control Panel <b>HOIST 42305R1</b> .....                  | 1337 00 |
| Rescue Hoist Control Panel Bracket Assembly <b>HOIST 42305R1</b> ..... | 1336 00 |
| Rescue Hoist Control Panel Cable Assembly <b>HOIST 42305R1</b> .....   | 1339 00 |

## INDEX - CONTINUED

|                                                                                      | WP Sequence No. |
|--------------------------------------------------------------------------------------|-----------------|
| Rescue Hoist Control Panel Diode (AVIM) <b>HOIST 42305R1</b> .....                   | 1355 00         |
| Rescue Hoist Control Panel Electrical Connector (AVIM) <b>HOIST 42305R1</b> .....    | 1357 00         |
| Rescue Hoist Control Panel Indicator Light (AVIM) <b>HOIST 42305R1</b> .....         | 1354 00         |
| Rescue Hoist Control Panel Information Plate <b>HOIST 42305R1</b> .....              | 1340 00         |
| Rescue Hoist Control Panel Information Plate Lamps (AVIM) <b>HOIST 42305R1</b> ..... | 1352 00         |
| Rescue Hoist Control Panel Relay (AVIM) <b>HOIST 42305R1</b> .....                   | 1358 00         |
| Rescue Hoist Control Panel Resistor (AVIM) <b>HOIST 42305R1</b> .....                | 1356 00         |
| Rescue Hoist Control Panel Squib Test Lamp <b>HOIST 42305R1</b> .....                | 1338 00         |
| Rescue Hoist Control Panel Toggle Switches (AVIM) <b>HOIST 42305R1</b> .....         | 1353 00         |
| Rescue Hoist Description and Data.....                                               | 0049 00         |
| Rescue Hoist Dual-Mode Controllable Searchlight <b>HH-60A HH-60L</b> .....           | 0933 00         |
| Rescue Hoist Fuse CL16 <b>HOIST 42305R1</b> .....                                    | 1329 00         |
| Rescue Hoist Fuse Holder <b>HOIST 42305R1</b> .....                                  | 1330 00         |
| Rescue Hoist Installation <b>HOIST 42305R1</b> .....                                 | 1328 00         |
| Rescue Hoist Kit .....                                                               | 0152 00         |
| Rescue Hoist Pendant <b>HH-60A HH-60L HOIST BL-29900-30</b> .....                    | 1346 00         |
| Rescue Hoist Pendant <b>HOIST 42305R1</b> .....                                      | 1341 00         |
| Rescue Hoist Relay K14 <b>HOIST 42305R1</b> .....                                    | 1333 00         |
| Rescue Hoist Relay K14 Bracket Assembly <b>HOIST 42305R1</b> .....                   | 1332 00         |
| Rescue Hoist Relay K14 Suppressor <b>HOIST 42305R1</b> .....                         | 1334 00         |
| Rescue Hoist System <b>HH-60A HH-60L</b> .....                                       | 0153 00         |
| Rescue Hoist Umbilical Cable <b>HOIST 42305R1</b> .....                              | 1335 00         |
| Retirement Schedule .....                                                            | 1741 00         |
| Retractable Landing Light Assembly .....                                             | 0917 00         |
| Retractable Landing Light Lamp.....                                                  | 0916 00         |
| Retractable Landing Light .....                                                      | 0114 00         |
| Right and Left Tie Rod CSI Inspection .....                                          | 1022 00         |
| Right and Left Tie Rods .....                                                        | 1138 00         |
| Right Hand Relay Panel (AVIM) .....                                                  | 0120 00         |
| Right Relay Panel APU Surge Relay, K22 (AVIM).....                                   | 0946 00         |
| Right Relay Panel Current Sensor Right Pitot Heat Transformer, T1 (AVIM).....        | 0943 00         |
| Right Relay Panel DC Essential Bus Fail Relay, K20 (AVIM).....                       | 0944 00         |
| Right Relay Panel Hydraulic Accumulator Relay, K32 (AVIM) .....                      | 0948 00         |
| Right Relay Panel No. 2 Engine Start Relay, K26 (AVIM) .....                         | 0947 00         |
| Right Relay Panel Windshield Anti-Ice Lockout Relay, K21 (AVIM).....                 | 0945 00         |
| Roll Actuator Links and Levers (AVIM) .....                                          | 1168 00         |
| Roll Actuator SAS Actuator (AVIM) .....                                              | 1167 00         |
| Roll Actuator SAS Actuator Bleed Screw and Packing .....                             | 1088 00         |
| Roll Actuator SAS Servovalve (AVIM) .....                                            | 1166 00         |
| Roll Actuator .....                                                                  | 1087 00         |
| Roll SAS Assembly (AVIM) .....                                                       | 0137 00         |

## INDEX - CONTINUED

## WP Sequence No.

|                                                   |         |
|---------------------------------------------------|---------|
| Roll Trim Assembly to Mixer Control Rod.....      | 1118 00 |
| Roll Trim Servo .....                             | 1079 00 |
| Roll Vibration Absorber.....                      | 0223 00 |
| Rotary Input (AVIM) .....                         | 0523 00 |
| Rotating Scissors Bearing (AVIM).....             | 0599 00 |
| Rotating Scissors Inspections .....               | 0540 00 |
| Rotating Scissors Lower Link Bushing (AVIM) ..... | 0600 00 |
| Rotating Scissors.....                            | 0572 00 |
| Rotor Hub Liner Replacement (AVIM) .....          | 0611 01 |
| Rotor Overspeed Reset Switch.....                 | 0797 00 |

## S

|                                                                                 |         |
|---------------------------------------------------------------------------------|---------|
| Sealed Lead Acid Battery Junction Box Relays, K200 and K201 <b>HH-60L</b> ..... | 0936 00 |
| Sealed Lead Acid Battery (SLAB).....                                            | 0931 00 |
| Secondary Bus Current Limiters, CL16 through CL18.....                          | 0846 00 |
| Secondary Light Enclosure Floodlight Lamps.....                                 | 0894 00 |
| Secondary Light Enclosure Switch Panel Lamps .....                              | 0895 00 |
| Secondary Light Enclosure .....                                                 | 0896 00 |
| Selector Valve (AVIM) .....                                                     | 0758 00 |
| Self-Retaining Bolt Inspection.....                                             | 1007 00 |
| Self-Sealing Breakaway Vent Valve .....                                         | 0977 00 |
| Service APU Accumulator .....                                                   | 1605 00 |
| Service Engine Starters 3505300 SERIES .....                                    | 1602 00 |
| Service Engine Starters 36E-144-12A.....                                        | 1602 01 |
| Service Environmental Control System Compressor <b>HH-60A HH-60L</b> .....      | 1627 00 |
| Service Hydraulic Pump Modules.....                                             | 1603 00 |
| Service Main Landing Gear Shock Struts.....                                     | 1597 00 |
| Service Main Landing Gear Tires .....                                           | 1598 00 |
| Service Main Rotor Blade BIM® SYSTEM .....                                      | 1624 00 |
| Service Main Rotor Head Damper.....                                             | 1610 00 |
| Service Rescue Hoist <b>HH-60A HH-60L</b> .....                                 | 1625 00 |
| Service Tail Drive Shaft Viscous Dampers.....                                   | 1611 00 |
| Service Tail Landing Gear Shock Strut .....                                     | 1599 00 |
| Service Tail Landing Gear Tire .....                                            | 1600 00 |
| Service Turret Flir Unit (TFU) <b>HH-60A HH-60L</b> .....                       | 1628 00 |
| Service Winterization Kit APU Accumulator .....                                 | 1606 00 |
| Service/Deservice Environmental Control System <b>HH-60A HH-60L</b> .....       | 1626 00 |
| Service/Drain APU .....                                                         | 1604 00 |
| Service/Drain Engine .....                                                      | 1601 00 |
| Service/Drain Intermediate Gear Box .....                                       | 1608 00 |
| Service/Drain Main Transmission .....                                           | 1607 00 |
| Service/Drain Tail Gear Box .....                                               | 1609 00 |

## INDEX - CONTINUED

|                                                                                        | WP Sequence No. |
|----------------------------------------------------------------------------------------|-----------------|
| Servicing Requirements .....                                                           | 1596 00         |
| Servo to Swashplate Control Rod Nylon Washer.....                                      | 1157 00         |
| Signal Data Converter Description and Data.....                                        | 0023 00         |
| Signal Data Converter Lamp Power Supply (AVIM).....                                    | 0806 00         |
| Signal Data Converter Logic Power Supply (AVIM).....                                   | 0807 00         |
| Signal Data Converter Modules (AVIM) .....                                             | 0805 00         |
| Signal Data Converter No. 1 and No. 2 .....                                            | 0781 00         |
| Signal Data Converter (SDC) (70450-01043-112 or 70450-01043-126) (AVIM).....           | 0095 00         |
| Signal Data Converter (SDC) (70450-21943-110 or 70450-01916-103) (AVIM).....           | 0096 00         |
| Slave Mixer Valve (AVIM).....                                                          | 0472 00         |
| Slave Mixer Valve.....                                                                 | 0456 00         |
| Soundproofing Panel (AVIM) .....                                                       | 0362 00         |
| Soundproofing Panels.....                                                              | 0258 00         |
| Special Inspection Requirements.....                                                   | 1687 00         |
| Spindle Bonded Washer Repair.....                                                      | 0553 00         |
| Spindle Cuff Lug Bushings (AVIM) .....                                                 | 0594 00         |
| Spindle Elastomeric Bearing (AVIM) .....                                               | 0595 00         |
| Spindle Horn Inspection .....                                                          | 0535 00         |
| Spindle Horn .....                                                                     | 0552 00         |
| Spindle Inspections .....                                                              | 0534 00         |
| Spindle Sleeve Bearing Outer Sleeve (AVIM) .....                                       | 0593 00         |
| Spindle.....                                                                           | 0551 00         |
| STA 312.0 Lower Elbow and Extension <b>CEFS</b> .....                                  | 1574 11         |
| Stabilator Actuator Adjustment.....                                                    | 0344 00         |
| Stabilator Actuator Attach Fitting Repair.....                                         | 0430 00         |
| Stabilator Actuator Clevis (AVIM).....                                                 | 0375 00         |
| Stabilator Actuator Grounding Strap <b>UH60A 88-26085 - SUBQ UH60L MWO 50-54</b> ..... | 0345 00         |
| Stabilator Actuator Repair .....                                                       | 0343 00         |
| Stabilator Actuator .....                                                              | 0342 00         |
| Stabilator Attach Fittings .....                                                       | 0340 00         |
| Stabilator Elastomeric Bearing (AVIM).....                                             | 0370 00         |
| Stabilator Electro-Luminescent Formation Lights .....                                  | 0901 00         |
| Stabilator Electrostatic Discharger .....                                              | 0339 00         |
| Stabilator Framing Repair.....                                                         | 0427 00         |
| Stabilator Infrared Formation Lights.....                                              | 0902 00         |
| Stabilator Inspections .....                                                           | 0187 00         |
| Stabilator Plating Repair.....                                                         | 0428 00         |
| Stabilator Position Sensor (AVIM).....                                                 | 0374 00         |
| Stabilator Position Sensor Bracket (AVIM).....                                         | 0376 00         |
| Stabilator Position Transmitter (AVIM) .....                                           | 0372 00         |
| Stabilator Tip Cap Repair .....                                                        | 0429 00         |
| Stabilator Tip Cap .....                                                               | 0341 00         |
| Stabilator.....                                                                        | 0338 00         |
| Standby Compass Lamp .....                                                             | 0774 00         |

## INDEX - CONTINUED

## WP Sequence No.

|                                                                            |         |
|----------------------------------------------------------------------------|---------|
| Standby Compass Light Switch.....                                          | 0775 00 |
| Standby Compass .....                                                      | 0773 00 |
| Starter Speed Switch.....                                                  | 0704 00 |
| Storage of Aircraft .....                                                  | 1745 00 |
| Stores Jettison Control Panel (AVIM).....                                  | 0166 00 |
| Structural Repair General Information .....                                | 0377 00 |
| Submerged Fuel Boost Pump System .....                                     | 0128 00 |
| Sudden Stoppage .....                                                      | 1733 00 |
| Sump Drain Valve.....                                                      | 0967 00 |
| Support Fairings and Cowlings <b>HH-60A HH-60L HOIST BL-29900-30</b> ..... | 1347 00 |
| Swashplate Expandable Pin Repair.....                                      | 0569 00 |
| Swashplate Guide and Shaft Seal.....                                       | 0634 00 |
| Swashplate Inspections .....                                               | 0539 00 |
| Swashplate Link Inspections .....                                          | 1018 00 |
| Swashplate Links .....                                                     | 1129 00 |
| Swashplate Scissors Attachment Retainer Inserts.....                       | 0571 00 |
| Swashplate Scissors Attachment Spherical Bearing .....                     | 0568 00 |
| Swashplate Spherical Bearing (AVIM) .....                                  | 0598 00 |
| Swashplate Spherical Bearing Retainer Inserts.....                         | 0570 00 |
| Swashplate.....                                                            | 0567 00 |
| System Circuit Breakers .....                                              | 0104 00 |

## T

|                                                                          |         |
|--------------------------------------------------------------------------|---------|
| Tail Cone Flight Control Cables.....                                     | 1144 00 |
| Tail Drive Shaft Coupling Alignment Check.....                           | 0689 00 |
| Tail Drive Shaft Coupling Shimming Check .....                           | 0690 00 |
| Tail Drive Shaft Torque Check - 9 to 11 Hours.....                       | 1693 00 |
| Tail Gear Box Chip Detector Particle Inspection .....                    | 0628 00 |
| Tail Gear Box Chip Detector/Temperature Sensor .....                     | 0688 00 |
| Tail Gear Box Housing Repair.....                                        | 0686 00 |
| Tail Gear Box Inboard Retention Plate Torque Check - 9 to 11 Hours ..... | 1694 00 |
| Tail Gear Box Input Seal, Plug Seal and Flange.....                      | 0682 00 |
| Tail Gear Box Inspections .....                                          | 0627 00 |
| Tail Gear Box Oil Filler Plug.....                                       | 0685 00 |
| Tail Gear Box Pulley Guards .....                                        | 0687 00 |
| Tail Gear Box Serviceability Inspection .....                            | 0629 00 |
| Tail Gear Box Sight Plug .....                                           | 0684 00 |
| Tail Gear Box.....                                                       | 0681 00 |
| Tail Incandescent Position Light Lamp and Lens .....                     | 0909 00 |
| Tail Incandescent Position Light .....                                   | 0910 00 |
| Tail Infrared Position Light .....                                       | 0911 00 |
| Tail Landing Gear Axle, Wheel and Tire.....                              | 0465 00 |
| Tail Landing Gear Fairing .....                                          | 0291 00 |



## INDEX - CONTINUED

|                                                                                         | WP Sequence No. |
|-----------------------------------------------------------------------------------------|-----------------|
| Tail Landing Gear Fork - Repair (AVIM) .....                                            | 0475 00         |
| Tail Landing Gear Fork .....                                                            | 0463 00         |
| Tail Landing Gear Lock Mechanism.....                                                   | 0464 00         |
| Tail Landing Gear Shock Strut Air Valves .....                                          | 0461 00         |
| Tail Landing Gear Shock Strut (AVIM).....                                               | 0473 00         |
| Tail Landing Gear Shock Strut Kneeling Valve .....                                      | 0460 00         |
| Tail Landing Gear Shock Strut.....                                                      | 0459 00         |
| Tail Landing Gear Ski.....                                                              | 1544 00         |
| Tail Landing Gear Tire Inspection .....                                                 | 0437 00         |
| Tail Landing Gear Wheel - Repair (AVIM).....                                            | 0476 00         |
| Tail Landing Gear Yoke - Repair (AVIM).....                                             | 0474 00         |
| Tail Landing Gear Yoke Inspection.....                                                  | 0436 00         |
| Tail Landing Gear Yoke.....                                                             | 0462 00         |
| Tail Maintenance Crane .....                                                            | 1591 00         |
| Tail Rotor Balance .....                                                                | 0591 00         |
| Tail Rotor Blade Boot Support (AVIM).....                                               | 0610 00         |
| Tail Rotor Blade Deice Bracket .....                                                    | 0590 00         |
| Tail Rotor Blade Deice Inspections.....                                                 | 1194 00         |
| Tail Rotor Blade Deice Slipring Rotor.....                                              | 1246 00         |
| Tail Rotor Blade Deice Slipring Stator Brush Assembly Electrical Connector .....        | 1250 00         |
| Tail Rotor Blade Deice Slipring Stator Brush Assembly .....                             | 1248 00         |
| Tail Rotor Blade Deice Slipring Stator Brushes and Retainer Board.....                  | 1249 00         |
| Tail Rotor Blade Deice Slipring Stator .....                                            | 1247 00         |
| Tail Rotor Blade Erosion Protection Kit Inspections .....                               | 1379 00         |
| Tail Rotor Blade Inspections .....                                                      | 0546 00         |
| Tail Rotor Blade Pivot Bearing (AVIM).....                                              | 0607 00         |
| Tail Rotor Blade Pivot Bearing Retainer (AVIM).....                                     | 0609 00         |
| Tail Rotor Blade Spar and Horn Fairing (AVIM) .....                                     | 0608 00         |
| Tail Rotor Blade Tip Cap Erosion Protection Kit Polyurethane Coating Installation.....  | 1491 00         |
| Tail Rotor Blade Tip Cap Erosion Protection Kit Polyurethane Coating Remove/Repair..... | 1492 00         |
| Tail Rotor Blade Tip Cap Erosion Protection Kit Polyurethane Tape Installation.....     | 1489 00         |
| Tail Rotor Blade Tip Cap Erosion Protection Kit Polyurethane Tape Removal/Repair .....  | 1490 00         |
| Tail Rotor Blades .....                                                                 | 0585 00         |
| Tail Rotor Boot .....                                                                   | 0588 00         |
| Tail Rotor Cable Tension Check - 9 to 11 Hours.....                                     | 1695 00         |
| Tail Rotor Drive Shaft Coupling.....                                                    | 0670 00         |
| Tail Rotor Drive Shaft Cover Inspections.....                                           | 0185 00         |
| Tail Rotor Drive Shaft Cover .....                                                      | 0327 00         |
| Tail Rotor Drive Shaft Covers Repair.....                                               | 0418 00         |
| Tail Rotor Drive Shaft Inspection .....                                                 | 0624 00         |
| Tail Rotor Drive Shaft Repair .....                                                     | 0674 00         |
| Tail Rotor Drive Shaft Section I .....                                                  | 0666 00         |
| Tail Rotor Drive Shaft Section II.....                                                  | 0667 00         |
| Tail Rotor Drive Shaft Section III.....                                                 | 0668 00         |

## INDEX - CONTINUED

### WP Sequence No.

|                                                                                |         |
|--------------------------------------------------------------------------------|---------|
| Tail Rotor Drive Shaft Section IV .....                                        | 0669 00 |
| Tail Rotor Drive Shaft Support Assembly .....                                  | 0671 00 |
| Tail Rotor Drive Shaft Support (AVIM) .....                                    | 0369 00 |
| Tail Rotor Drive Shaft Support Bearing .....                                   | 0672 00 |
| Tail Rotor Drive Shaft Viscous Damper Inspection .....                         | 0625 00 |
| Tail Rotor Gear Box Fairing.....                                               | 0333 00 |
| Tail Rotor Inspections .....                                                   | 0545 00 |
| Tail Rotor Out of Balance - Loss of Material .....                             | 1734 00 |
| Tail Rotor Pitch Beam Bushings (AVIM).....                                     | 0604 00 |
| Tail Rotor Pitch Beam .....                                                    | 0587 00 |
| Tail Rotor Pitch Control Rod Bearings (AVIM).....                              | 0606 00 |
| Tail Rotor Pitch Control Rods.....                                             | 0586 00 |
| Tail Rotor Pitch Control Shaft Pressed Bushing (AVIM) .....                    | 1189 00 |
| Tail Rotor Pitch Horn Bushing (AVIM).....                                      | 0605 00 |
| Tail Rotor Pylon Cable Pulley Supports Repair .....                            | 0425 00 |
| Tail Rotor Pylon Cambered Fairing .....                                        | 0331 00 |
| Tail Rotor Pylon Canted Hinge Frame Repair.....                                | 0426 00 |
| Tail Rotor Pylon Flight Control Cables .....                                   | 1145 00 |
| Tail Rotor Pylon Framing Repair.....                                           | 0419 00 |
| Tail Rotor Pylon Inspections .....                                             | 0186 00 |
| Tail Rotor Pylon Leading Edge Cover/Antenna .....                              | 0334 00 |
| Tail Rotor Pylon Left Stabilator Attach Fitting .....                          | 0421 00 |
| Tail Rotor Pylon Lower Fairing .....                                           | 0329 00 |
| Tail Rotor Pylon Lower Step.....                                               | 0337 00 |
| Tail Rotor Pylon Plating Repair .....                                          | 0420 00 |
| Tail Rotor Pylon Right Stabilator Attach Fitting.....                          | 0422 00 |
| Tail Rotor Pylon Stabilator Actuator Attach Fitting Bearings.....              | 0424 00 |
| Tail Rotor Pylon Stabilator Actuator Attach Fitting .....                      | 0423 00 |
| Tail Rotor Pylon Stabilator-to-Pylon Fairing .....                             | 0330 00 |
| Tail Rotor Pylon Steps.....                                                    | 0336 00 |
| Tail Rotor Pylon Trailing Edge Fairing/Antenna.....                            | 0332 00 |
| Tail Rotor Pylon .....                                                         | 0328 00 |
| Tail Rotor Quadrant Bearings (AVIM).....                                       | 1190 00 |
| Tail Rotor Quadrant Inspection .....                                           | 1032 00 |
| Tail Rotor Quadrant Repair .....                                               | 1154 00 |
| Tail Rotor Quadrant Spring Cylinder Support Terminal Assembly Inspection ..... | 1033 00 |
| Tail Rotor Quadrant Spring Cylinder Support.....                               | 1156 00 |
| Tail Rotor Quadrant Spring Cylinders .....                                     | 1155 00 |
| Tail Rotor Quadrant Support .....                                              | 1153 00 |
| Tail Rotor Quadrant Upper and Lower Arm Bearings (AVIM).....                   | 1191 00 |
| Tail Rotor Quadrant .....                                                      | 1152 00 |
| Tail Rotor Servo 2nd Stage Shutoff Valve.....                                  | 0735 00 |
| Tail Rotor Servo and Pitch Control Shaft.....                                  | 1148 00 |
| Tail Rotor Servo Connector Self-Sealing Couplings .....                        | 0738 00 |

## INDEX - CONTINUED

|                                                                         | WP Sequence No. |
|-------------------------------------------------------------------------|-----------------|
| Tail Rotor Servo Hydraulic Connectors .....                             | 1151 00         |
| Tail Rotor Servo Pressure Switch.....                                   | 1149 00         |
| Tail Rotor Servo Thermal Relief Valve.....                              | 1150 00         |
| Tail Rotor Servo to Tail Rotor Quadrant Pushrod (AVIM).....             | 1177 00         |
| Tail Rotor Servo to Tail Rotor Quadrant Pushrod.....                    | 1130 00         |
| Tail Rotor System Complete Rig .....                                    | 1038 00         |
| Tail Rotor System Description and Data .....                            | 0013 00         |
| Tail Rotor System Rig Check.....                                        | 1039 00         |
| Tail Wheel Lock System.....                                             | 0071 00         |
| Tailcone Canted Hinge Bulkhead.....                                     | 0417 00         |
| Tailcone Electro-Luminescent Formation Light.....                       | 0899 00         |
| Tailcone Framing Repair.....                                            | 0415 00         |
| Tailcone Infrared Formation Light .....                                 | 0900 00         |
| Tailcone Plating Repair.....                                            | 0416 00         |
| Ten Hour Inspection.....                                                | 1695 01         |
| Tiedown and Moor Helicopter .....                                       | 1676 00         |
| Torque Shaft and Levers Inspection.....                                 | 1015 00         |
| Torque Shaft Support Bearing (AVIM).....                                | 1181 00         |
| Torque Shaft to Servo Control Rods (AVIM).....                          | 1174 00         |
| Torque Shaft Upper Tapered Pins .....                                   | 1098 00         |
| Tow Helicopter.....                                                     | 1674 00         |
| Transfer Defuel External Tanks .....                                    | 1617 00         |
| Transformer Boxes .....                                                 | 0881 00         |
| Transformer, T11 (26 vac).....                                          | 0852 00         |
| Transition Section APU Access Door Screws Repair.....                   | 0413 00         |
| Transition Section Avionics Door <b>EH60A</b> .....                     | 0320 00         |
| Transition Section Avionics Door Eyebolt And Support <b>EH60A</b> ..... | 0322 00         |
| Transition Section Avionics Door Hinge <b>EH60A</b> .....               | 0324 00         |
| Transition Section Avionics Door Latch <b>EH60A</b> .....               | 0326 00         |
| Transition Section Avionics Door Seals <b>EH60A</b> .....               | 0325 00         |
| Transition Section Avionics Door Strut <b>EH60A</b> .....               | 0321 00         |
| Transition Section Avionics Door Strut Lock Fitting <b>EH60A</b> .....  | 0323 00         |
| Transition Section Framing Repair.....                                  | 0405 00         |
| Transition Section Fuel Sump Drain Door .....                           | 0409 00         |
| Transition Section Gravity Refuel Door .....                            | 0410 00         |
| Transition Section Inspections .....                                    | 0184 00         |
| Transition Section Plating Repair.....                                  | 0406 00         |
| Transition Section Pneumatic Ground Start Door .....                    | 0412 00         |
| Transition Section Pneumatic Tubes .....                                | 0699 00         |
| Transition Section Pressure Refuel Door .....                           | 0411 00         |
| Transition Section Step Door Hinge WL 210.0 and WL 230.0 Repair.....    | 0407 00         |
| Transmission Chip Detector, Instruments, and Oil Warning Systems .....  | 0085 00         |
| Transmission System Description and Data.....                           | 0014 00         |

## INDEX - CONTINUED

## WP Sequence No.

|                                                                                  |         |
|----------------------------------------------------------------------------------|---------|
| Transmission System Overspeed .....                                              | 1735 00 |
| Transmission System Overtemperature <b>UH60A EH60A</b> .....                     | 1736 00 |
| Transmission System Overtemperature <b>UH60L</b> .....                           | 1737 00 |
| Transmission System Overtorque <b>UH60A EH60A</b> .....                          | 1738 00 |
| Transmission System Overtorque <b>UH60L</b> .....                                | 1739 00 |
| Trim Servo Control Rod .....                                                     | 1113 00 |
| Troop Commander ICS Floodlight Control Panel .....                               | 0922 00 |
| Troop Seat Restraint System .....                                                | 0234 00 |
| Troop/Cargo Door Fairing Seal .....                                              | 0248 00 |
| Troop/Cargo Door Handles .....                                                   | 0249 00 |
| Troop/Cargo Door Inspections .....                                               | 0179 00 |
| Troop/Cargo Door Latch Assembly .....                                            | 0250 00 |
| Troop/Cargo Door Lock .....                                                      | 0255 00 |
| Troop/Cargo Door Lower Track .....                                               | 0246 00 |
| Troop/Cargo Door Receiver .....                                                  | 0251 00 |
| Troop/Cargo Door Repair .....                                                    | 0401 00 |
| Troop/Cargo Door Roller Supports .....                                           | 0253 00 |
| Troop/Cargo Door Seals .....                                                     | 0247 00 |
| Troop/Cargo Door Stop Mechanism .....                                            | 0252 00 |
| Troop/Cargo Door Upper Fairings .....                                            | 0254 00 |
| Troop/Cargo Door Window Jettison Handle Guard/Window Jettison Handle Strap ..... | 0257 00 |
| Troop/Cargo Door Window Jettison Mechanism .....                                 | 0256 00 |
| Troop/Cargo Door Window .....                                                    | 0245 00 |
| Troop/Cargo Door .....                                                           | 0244 00 |
| Troop/Gunner's Seat Inspections .....                                            | 0177 00 |
| Troop/Gunner's Seat .....                                                        | 0233 00 |
| Turret Flir Unit (TFU) <b>HH-60A HH-60L</b> .....                                | 1556 00 |

## U

|                                                                                                                         |         |
|-------------------------------------------------------------------------------------------------------------------------|---------|
| UH-60A Helicopter Modified By MWO 1-1520-237-50-62 Wire Data List By Reference Designator .....                         | 1767 00 |
| UH-60A Helicopters Aux Cabin Heater Kit Wire Data List By Reference Designator .....                                    | 1763 00 |
| UH-60A Helicopters Aux Cabin Heater Kit Wire Data List By Wire Number .....                                             | 1762 00 |
| UH-60A Helicopters Medevac Kit Wire Data List By Reference Designator .....                                             | 1759 00 |
| UH-60A Helicopters Medevac Kit Wire Data List By Wire Number .....                                                      | 1758 00 |
| UH-60A Helicopters Modified By MWO 1-1520-237-50-62 Wire Data List By Wire Number .....                                 | 1766 00 |
| UH-60A Helicopters Modified By MWO 1-1520-237-50-7 and 1-1520-237-50-62 Wire Data List By Reference Designator .....    | 1755 00 |
| UH-60A Helicopters Modified By MWO 1-1520-237-50-7 and 1-1520-237-50-62 Wire Data List By Wire Number .....             | 1753 00 |
| UH-60A Helicopters Modified By MWO 1-1520-237-55-7 Wire Data List By Wire Number .....                                  | 1752 00 |
| UH-60A Helicopters Modified MWO 1-1520-237-55-7 Wire Data List By Reference Designator .....                            | 1754 00 |
| UH-60A Helicopters Prior to Serial No. 88-24067 Stabilator Slew-Up Switch, Wire Data List By Reference Designator ..... | 1765 00 |

## INDEX - CONTINUED

|                                                                                                                                                                                                                        | WP Sequence No. |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|
| UH-60A Helicopters Rescue Hoist Kit Wire Data List By Reference Designator .....                                                                                                                                       | 1761 00         |
| UH-60A Helicopters Rescue Hoist Kit Wire Data List By Wire Number .....                                                                                                                                                | 1760 00         |
| UH-60A Helicopters Wire Data List By Reference Designator.....                                                                                                                                                         | 1757 00         |
| UH-60A Helicopters Wire Data List By Wire Number .....                                                                                                                                                                 | 1756 00         |
| UH-60A Helicopters* Wire Data List By Wire Number .....                                                                                                                                                                | 1777 00         |
| UH-60A, UH-60A/L, EH-60A Helicopters* Wire Data List By Wire Number.....                                                                                                                                               | 1776 00         |
| UH-60A, UH-60A/L, EH-60A Helicopters* Wire Data List By Wire Number.....                                                                                                                                               | 1778 00         |
| UH-60A/L Helicopters Modified By MWO 1-1520-237-50-75 and MWO 1-1520-237-50-84 Wire Data List<br>By Wire Number .....                                                                                                  | 1798 00         |
| UH-60A/L Helicopters Modified by MWO 1-1520-237-50-75 Wire Data List By Reference Designator .....                                                                                                                     | 1783 00         |
| UH-60A/L Helicopters Modified by MWO 1-1520-237-50-75 Wire Data List by Wire Number .....                                                                                                                              | 1781 00         |
| UH-60A/L Helicopters Modified By MWO 1-1520-237-50-75 Wire Data List Of Wires Removed and ar<br>Terminated and UH-60A/L Helicopters Modified By MWO 1-1520-237-50-84 Wire Data List By Refer-<br>ence Designator ..... | 1799 00         |
| UH-60A/L Helicopters Modified by MWO 1-1520-237-50-75 Wire Data List of Wires Removed and or<br>Terminated by Wire Number .....                                                                                        | 1782 00         |
| UH-60A/L Helicopters Modified By MWO 1-1520-237-50-76 Wire Data List By Reference Designator.....                                                                                                                      | 1791 00         |
| UH-60A/L Helicopters Modified By MWO 1-1520-237-50-76 Wire Data List By Wire Number.....                                                                                                                               | 1790 00         |
| UH-60A/L Helicopters Modified by MWO 1-1520-237-50-78 Wire Data List By Reference Designator .....                                                                                                                     | 1785 00         |
| UH-60A/L Helicopters Modified by MWO 1-1520-237-50-78 Wire Data List By Wire Number .....                                                                                                                              | 1784 00         |
| UH-60A/L, HH-60 ESSS Wire Data List By Reference Designator.....                                                                                                                                                       | 1799 04         |
| UH-60A/L, HH-60 ESSS Wire Data List By Wire Number.....                                                                                                                                                                | 1799 03         |
| UH-60A/L, HH-60 Helicopters Modified By MWO 1-1520-237-50-80 Wire Data List By Reference<br>Designator .....                                                                                                           | 1799 02         |
| UH-60A/L, HH-60 Helicopters Modified By MWO 1-1520-237-50-80 Wire Data List By Wire Number .....                                                                                                                       | 1799 01         |
| UH-60L Helicopters HUD Wire Data List By Reference Designator.....                                                                                                                                                     | 1751 00         |
| UH-60L Helicopters HUD Wire Data List by Wire Number.....                                                                                                                                                              | 1749 00         |
| UH-60L Helicopters Serial No. 89-26149 through 96-26722 and 96-26724 through 96-26737 Wire Data<br>List by Wire Number .....                                                                                           | 1748 00         |
| UH-60L Helicopters Wire Data List By Reference Designator.....                                                                                                                                                         | 1750 00         |
| Upper And Lower Console Lights <b>HH-60A HH-60L</b> .....                                                                                                                                                              | 0124 00         |
| Upper and Lower Console Lights .....                                                                                                                                                                                   | 0106 00         |
| Upper Cabin Links and Levers .....                                                                                                                                                                                     | 1133 00         |
| Upper Console Dimming Controls .....                                                                                                                                                                                   | 0875 00         |
| Upper Console Information Plates .....                                                                                                                                                                                 | 0829 00         |
| Upper Console Switches .....                                                                                                                                                                                           | 0828 00         |
| Upper Deck Main Fuel Hoses .....                                                                                                                                                                                       | 1002 00         |
| Upper ESSS Fitting Fairing And Platform <b>ESSS</b> .....                                                                                                                                                              | 0292 00         |
| Upper Main Landing Gear Fairing <b>ESSS</b> .....                                                                                                                                                                      | 0290 00         |
| Upper Main Landing Gear Fairing <b>W/O ESSS</b> .....                                                                                                                                                                  | 0288 00         |
| Upper Windows.....                                                                                                                                                                                                     | 0224 00         |
| Utility and Maintenance Lights .....                                                                                                                                                                                   | 0109 00         |
| Utility Module Hoses and Fittings .....                                                                                                                                                                                | 0734 00         |
| Utility Module Pressure Switch.....                                                                                                                                                                                    | 0733 00         |

## INDEX - CONTINUED

## WP Sequence No.

## V

|                                                                   |         |
|-------------------------------------------------------------------|---------|
| Vertical Speed Indicator.....                                     | 0770 00 |
| Vertical Support Pylon (VSP) Fuel and Vent Hose <b>CEFS</b> ..... | 1574 06 |
| Vibration Absorber Airframe Cabin Fitting Bearings (AVIM).....    | 0358 00 |
| Vibration Absorber Airframe Cabin Fitting Bushings (AVIM).....    | 0357 00 |
| Vibration Absorber Airframe Nose Fitting Bushings (AVIM) .....    | 0356 00 |
| Vibration Absorber Lower Fitting Bushings (AVIM).....             | 0352 00 |
| Vibration Absorber Spring Bushings (AVIM).....                    | 0355 00 |
| Viscous Damper Tube .....                                         | 0673 00 |
| Volcano Mine Dispensing System Inspections .....                  | 1380 00 |
| Volcano Mine Dispensing System Installation.....                  | 1537 00 |
| Volcano Mine Dispensing System Jettison Cartridges .....          | 1540 00 |
| Volcano Mine Dispensing System Launcher Rack Covers .....         | 1539 00 |
| Volcano Mine Dispensing System Mine Canisters.....                | 1541 00 |
| Volcano Mine Dispensing System Removal .....                      | 1538 00 |

## W

|                                                       |         |
|-------------------------------------------------------|---------|
| Walking Beam Inspections .....                        | 1020 00 |
| Walking Beam .....                                    | 1134 00 |
| Weight and Balance .....                              | 1746 00 |
| Window and Windshield Inspections .....               | 0175 00 |
| Windshield and Window Leak Test.....                  | 0229 00 |
| Windshield Anti-Ice Control Unit .....                | 1214 00 |
| Windshield Anti-Ice Switch.....                       | 1215 00 |
| Windshield Anti-Ice System Description and Data ..... | 0039 00 |
| Windshield Anti-Ice System .....                      | 0144 00 |
| Windshield Wiper Arm and Link .....                   | 1213 00 |
| Windshield Wiper Blade Insert.....                    | 1212 00 |
| Windshield Wiper Blade .....                          | 1211 00 |
| Windshield Wiper Converter .....                      | 1208 00 |
| Windshield Wiper Flexible Drive Shaft.....            | 1210 00 |
| Windshield Wiper Inspections .....                    | 1193 00 |
| Windshield Wiper Motor (AVIM) .....                   | 1259 00 |
| Windshield Wiper Motor .....                          | 1209 00 |
| Windshield Wiper System Description and Data.....     | 0040 00 |
| Windshield Wiper System.....                          | 0143 00 |
| Winterization Kit Description and Data.....           | 0055 00 |
| Winterization Kit Installation .....                  | 1399 00 |
| Winterization Kit Removal .....                       | 1400 00 |
| Wire Strike Cockpit Door Latch Deflector .....        | 0282 00 |
| Wire Strike Main Landing Gear Cutter Clamp.....       | 0276 00 |
| Wire Strike Main Landing Gear Cutter.....             | 0275 00 |

## INDEX - CONTINUED

|                                                           | WP Sequence No. |
|-----------------------------------------------------------|-----------------|
| Wire Strike Main Landing Gear Joint Deflector.....        | 0277 00         |
| Wire Strike Pitot Cutter Guide Channel .....              | 0273 00         |
| Wire Strike Pitot Cutter .....                            | 0272 00         |
| Wire Strike Protection System Inspections .....           | 0181 00         |
| Wire Strike Step Deflector.....                           | 0280 00         |
| Wire Strike Step Extension.....                           | 0281 00         |
| Wire Strike Tail Landing Gear Deflector Clamp .....       | 0279 00         |
| Wire Strike Tail Landing Gear Deflector .....             | 0278 00         |
| Wire Strike Upper Cutter.....                             | 0271 00         |
| Wire Strike Windshield Center Post Deflector Channel..... | 0284 00         |
| Wire Strike Windshield Center Post Deflector Insert ..... | 0283 00         |
| Wire Strike Windshield Wiper Drive Post Deflector.....    | 0274 00         |
| Yaw Boost Assembly (AVIM) .....                           | 0138 00         |

### Y

|                                                               |         |
|---------------------------------------------------------------|---------|
| Yaw Boost Servo Input Control Rod .....                       | 1115 00 |
| Yaw Boost Servo Inspection.....                               | 1012 00 |
| Yaw Boost Servo Pressure Switch and Thermal Relief Valve..... | 1081 00 |
| Yaw Boost Servo SAS Actuator (AVIM).....                      | 1163 00 |
| Yaw Boost Servo SAS Actuator Bleed Screw and Packing.....     | 1082 00 |
| Yaw Boost Servo SAS Servovalve (AVIM) .....                   | 1162 00 |
| Yaw Boost Servo to Mixer Control Rod.....                     | 1119 00 |
| Yaw Boost Servo.....                                          | 1080 00 |
| Yaw Control Pedal Adjuster Bearings (AVIM).....               | 1161 00 |
| Yaw Control Pedal Adjuster Cable and Handle.....              | 1048 00 |
| Yaw Control Pedal Adjuster .....                              | 1047 00 |
| Yaw Control Pedal (AVIM) .....                                | 1158 00 |
| Yaw Control Pedal Boots.....                                  | 1043 00 |
| Yaw Control Pedal Support Assembly (AVIM).....                | 1160 00 |
| Yaw Control Pedal Support Assembly .....                      | 1046 00 |
| Yaw Control Pedal Support Bearings (AVIM) .....               | 1159 00 |
| Yaw Control Pedal Trim Switch.....                            | 1045 00 |
| Yaw Control Pedal .....                                       | 1044 00 |
| Yaw Control Rods (AVIM).....                                  | 1178 00 |
| Yaw Lever and Support Bearings (AVIM) .....                   | 1180 00 |
| Yaw Lever and Support (STA 301.0) Inspection.....             | 1017 00 |
| Yaw Lever and Support (STA 301.0).....                        | 1101 00 |
| Yaw Lever to Forward Quadrant Control Rod .....               | 1124 00 |
| Yaw Push Rod Boot and Shroud.....                             | 0312 00 |
| Yaw Torque Shaft and Levers Inspection .....                  | 1016 00 |
| Yaw Torque Shaft and Levers .....                             | 1097 00 |
| Yaw Trim Servo .....                                          | 1078 00 |





By Order of the Secretary of the Army:

Official:

A handwritten signature in black ink, appearing to read "Joyce E. Morrow". The signature is fluid and cursive, with the first name "Joyce" and last name "Morrow" clearly distinguishable.

JOYCE E. MORROW

*Administrative Assistant to the  
Secretary of the Army*

0815603

GEORGE W. CASEY, JR.  
*General, United States Army  
Chief of Staff*

DISTRIBUTION:

To be distributed in accordance with Initial Distribution Number (IDN) 313749, requirements for TM 1-1520-237-23-20.



## These are the instructions for sending an electronic 2028

The following format must be used if submitting an electronic 2028. The subject line must be exactly the same and all fields must be included; however only the following fields are mandatory: 1, 3, 4, 5, 6, 7, 8, 9, 10, 13, 15, 16, 17, and 27.

From: "Whomever" <whomever@wherever.army.mil>

To: 2028@redstone.army.mil

Subject: DA Form 2028

1. From: Joe Smith
2. Unit: home
3. Address: 4300 Park
4. City: Hometown
5. St: MO
6. Zip: 77777
7. Date Sent: 19--OCT--93
8. Pub no: 55--2840--229--23
9. Pub Title: TM
10. Publication Date: 04--JUL--85
11. Change Number: 7
12. Submitter Rank: MSG
13. Submitter FName: Joe
14. Submitter MName: T
15. Submitter LName: Smith
16. Submitter Phone: 123-123-1234
17. Problem: 1
18. Page: 2
19. Paragraph: 3
20. Line: 4
21. NSN: 5
22. Reference: 6
23. Figure: 7
24. Table: 8
25. Item: 9
26. Total: 123
27. Text:

This is the text for the problem below line 27.





|                                                                                                                                                                                                                   |                                                                                                                   |                 |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------|-----------------|
| TO: (Forward to proponent of publication or form) (Include ZIP Code)<br>Commander, US Army Communications-Electronics Command<br>and Fort Monmouth<br>ATTN: AMSEL-LC-LEO-D-CS-CFO<br>Fort Monmouth, NJ 07703-5006 | FROM: (Activity and location) (Include ZIP Code)<br>MSG, Jane Q. Doe<br>1234 Any Street<br>Nowhere Town, AL 34565 | DATE<br>8/30/02 |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------|-----------------|

PART II – REPAIR PARTS AND SPECIAL TOOL LISTS AND SUPPLY CATALOGS/SUPPLY MANUALS

| PUBLICATION NUMBER                                                                                                                                                                                                                             |          |          |                       | DATE          |            | TITLE    |                                    |                    |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------|----------|-----------------------|---------------|------------|----------|------------------------------------|--------------------|
| PAGE NO.                                                                                                                                                                                                                                       | COLM NO. | LINE NO. | NATIONAL STOCK NUMBER | REFERENCE NO. | FIGURE NO. | ITEM NO. | TOTAL NO. OF MAJOR ITEMS SUPPORTED | RECOMMENDED ACTION |
| <div style="position: relative; width: 100%; height: 100%;"> <div style="position: absolute; top: 50%; left: 50%; transform: translate(-50%, -50%) rotate(-45deg); font-size: 100px; opacity: 0.5; pointer-events: none;">EXAMPLE</div> </div> |          |          |                       |               |            |          |                                    |                    |

PART III – REMARKS (Any general remarks or recommendations, or suggestions for improvement of publications and blank forms. Additional blank sheets may be used if more space is needed.)

EXAMPLE

|                                                     |                                                           |           |
|-----------------------------------------------------|-----------------------------------------------------------|-----------|
| TYPED NAME, GRADE OR TITLE<br>MSG, Jane Q. Doe, SFC | TELEPHONE EXCHANGE/AUTOVON,<br>PLUS EXTENSION<br>788-1234 | SIGNATURE |
|-----------------------------------------------------|-----------------------------------------------------------|-----------|

|                                                                                                                                                                                        |             |                |               |               |                                                     |                                                                                                                           |                                       |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------|----------------|---------------|---------------|-----------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------|---------------------------------------|
| <b>RECOMMENDED CHANGES TO PUBLICATIONS AND<br/>BLANK FORMS</b><br><br><small>For use of this form, see AR 25-30; the proponent agency is ODISC4.</small>                               |             |                |               |               |                                                     | Use Par      reverse) for Repair Parts and Spe-<br>cial Tool Lists (RPSTL) and Supply Catalogs/<br>Supply Manuals (SC/SM) | DATE                                  |
| TO: (Forward to proponent of publication or form)(Include ZIP Code)<br>Commander, U.S. Army Aviation and Missile Command<br>ATTN: AMSAM-MMC-MA-NP<br>Redstone Arsenal, AL 35898 - 5000 |             |                |               |               |                                                     | FROM: (Activity and location)(Include ZIP Code)                                                                           |                                       |
| <b>PART 1 – ALL PUBLICATIONS (EXCEPT RPSTL AND SC/SM) AND BLANK FORMS</b>                                                                                                              |             |                |               |               |                                                     |                                                                                                                           |                                       |
| PUBLICATION/FORM NUMBER<br><br><b>TM 1-1520-237-23</b>                                                                                                                                 |             |                |               |               |                                                     | DATE                                                                                                                      | TITLE<br><br><b>UH-60 Maintenance</b> |
| ITEM<br>NO.                                                                                                                                                                            | PAGE<br>NO. | PARA-<br>GRAPH | LINE<br>NO. * | FIGURE<br>NO. | TABLE<br>NO.                                        | RECOMMENDED CHANGES AND REASON                                                                                            |                                       |
|                                                                                                                                                                                        |             |                |               |               |                                                     |                                                                                                                           |                                       |
| * Reference to line numbers within the paragraph or subparagraph.                                                                                                                      |             |                |               |               |                                                     |                                                                                                                           |                                       |
| TYPED NAME, GRADE OR TITLE                                                                                                                                                             |             |                |               |               | TELEPHONE EXCHANGE/<br>AUTOVON, PLUS EXTEN-<br>SION |                                                                                                                           | SIGNATURE                             |

|                                                                                                                                                                                           |             |             |                          |                                                  |               |                                   |                                             |                    |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------|-------------|--------------------------|--------------------------------------------------|---------------|-----------------------------------|---------------------------------------------|--------------------|
| TO: (Forward direct to addressee listed in publication)<br>Commander, U.S. Army Aviation and Missile Command<br>ATTN: AMSAM-MMC-MA-NP<br>Redstone Arsenal, AL 35898                       |             |             |                          | FROM: (Activity and location) (Include ZIP Code) |               |                                   | DATE                                        |                    |
| PART II - REPAIR PARTS AND SPECIAL TOOL LISTS AND SUPPLY CATALOGS/SUPPLY MANUALS                                                                                                          |             |             |                          |                                                  |               |                                   |                                             |                    |
| PUBLICATION NUMBER<br><b>TM 1-1520-237-23</b>                                                                                                                                             |             |             |                          | DATE                                             |               | TITLE<br><b>UH-60 Maintenance</b> |                                             |                    |
| PAGE<br>NO.                                                                                                                                                                               | COLM<br>NO. | LINE<br>NO. | NATIONAL STOCK<br>NUMBER | REFERENCE<br>NO.                                 | FIGURE<br>NO. | ITEM<br>NO.                       | TOTAL NO.<br>OF MAJOR<br>ITEMS<br>SUPPORTED | RECOMMENDED ACTION |
|                                                                                                                                                                                           |             |             |                          |                                                  |               |                                   |                                             |                    |
| PART III - REMARKS (Any general remarks or recommendations, or suggestions for improvement of publications and blank forms. Additional blank sheets may be used if more space is needed.) |             |             |                          |                                                  |               |                                   |                                             |                    |
|                                                                                                                                                                                           |             |             |                          |                                                  |               |                                   |                                             |                    |
| TYPED NAME, GRADE OR TITLE                                                                                                                                                                |             |             |                          | TELEPHONE EXCHANGE/AUTOVON,<br>PLUS EXTENSION    |               |                                   | SIGNATURE                                   |                    |



## The Metric System and Equivalents

### *Linear Measure*

1 centimeter = 10 millimeters = .39 inch  
 1 decimeter = 10 centimeters = 3.94 inches  
 1 meter = 10 decimeters = 39.37 inches  
 1 dekameter = 10 meters = 32.8 feet  
 1 hectometer = 10 dekameters = 328.08 feet  
 1 kilometer = 10 hectometers = 3,280.8 feet

### *Weights*

1 centigram = 10 milligrams = .15 grain  
 1 decigram = 10 centigrams = 1.54 grains  
 1 gram = 10 decigrams = .035 ounce  
 1 decagram = 10 grams = .35 ounce  
 1 hectogram = 10 decagrams = 3.52 ounces  
 1 kilogram = 10 hectograms = 2.2 pounds  
 1 quintal = 100 kilograms = 220.46 pounds  
 1 metric ton = 10 quintals = 1.1 short tons

### *Liquid Measure*

1 centiliter = 10 milliliters = .34 fl. ounce  
 1 deciliter = 10 centiliters = 3.38 fl. ounces  
 1 liter = 10 deciliters = 33.81 fl. ounces  
 1 dekaliter = 10 liters = 2.64 gallons  
 1 hectoliter = 10 dekaliters = 26.42 gallons  
 1 kiloliter = 10 hectoliters = 264.18 gallons

### *Square Measure*

1 sq. centimeter = 100 sq. millimeters = .155 sq. inch  
 1 sq. decimeter = 100 sq. centimeters = 15.5 sq. inches  
 1 sq. meter (centare) = 100 sq. decimeters = 10.76 sq. feet  
 1 sq. dekameter (are) = 100 sq. meters = 1,076.4 sq. feet  
 1 sq. hectometer (hectare) = 100 sq. dekameters = 2.47 acres  
 1 sq. kilometer = 100 sq. hectometers = .386 sq. mile

### *Cubic Measure*

1 cu. centimeter = 1000 cu. millimeters = .06 cu. inch  
 1 cu. decimeter = 1000 cu. centimeters = 61.02 cu. inches  
 1 cu. meter = 1000 cu. decimeters = 35.31 cu. feet

## Approximate Conversion Factors

| <i>To change</i> | <i>To</i>          | <i>Multiply by</i> | <i>To change</i>   | <i>To</i>     | <i>Multiply by</i> |
|------------------|--------------------|--------------------|--------------------|---------------|--------------------|
| inches           | centimeters        | 2.540              | ounce-inches       | Newton-meters | .007062            |
| feet             | meters             | .305               | centimeters        | inches        | .394               |
| yards            | meters             | .914               | meters             | feet          | 3.280              |
| miles            | kilometers         | 1.609              | meters             | yards         | 1.094              |
| square inches    | square centimeters | 6.451              | kilometers         | miles         | .621               |
| square feet      | square meters      | .093               | square centimeters | square inches | .155               |
| square yards     | square meters      | .836               | square meters      | square feet   | 10.764             |
| square miles     | square kilometers  | 2.590              | square meters      | square yards  | 1.196              |
| acres            | square hectometers | .405               | square kilometers  | square miles  | .386               |
| cubic feet       | cubic meters       | .028               | square hectometers | acres         | 2.471              |
| cubic yards      | cubic meters       | .765               | cubic meters       | cubic feet    | 35.315             |
| fluid ounces     | milliliters        | 29.573             | cubic meters       | cubic yards   | 1.308              |
| pints            | liters             | .473               | milliliters        | fluid ounces  | .034               |
| quarts           | liters             | .946               | liters             | pints         | 2.113              |
| gallons          | liters             | 3.785              | liters             | quarts        | 1.057              |
| ounces           | grams              | 28.349             | liters             | gallons       | .264               |
| pounds           | kilograms          | .454               | grams              | ounces        | .035               |
| short tons       | metric tons        | .907               | kilograms          | pounds        | 2.205              |
| pound-feet       | Newton-meters      | 1.356              | metric tons        | short tons    | 1.102              |
| pound-inches     | Newton-meters      | .11296             |                    |               |                    |

## Temperature (Exact)

|          |                           |                               |                        |           |
|----------|---------------------------|-------------------------------|------------------------|-----------|
| <b>F</b> | Fahrenheit<br>temperature | 5/9 (after<br>subtracting 32) | Celsius<br>temperature | <b>°C</b> |
|----------|---------------------------|-------------------------------|------------------------|-----------|

