


1. Install UPSilon, right click on the UPSilon icon from the tool bar and select "Stop Auto-Portect"

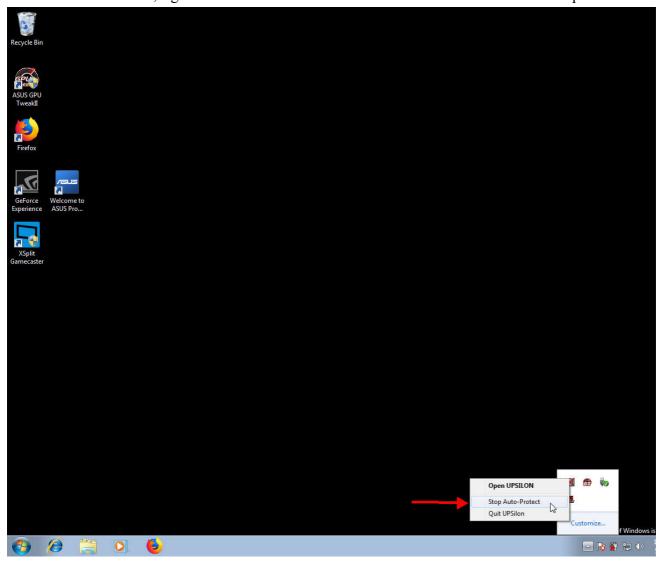


## 2 : Open up UPSilon install directory ( C: \Program Files(x86) /MegaTec/UPSilon 2000 )

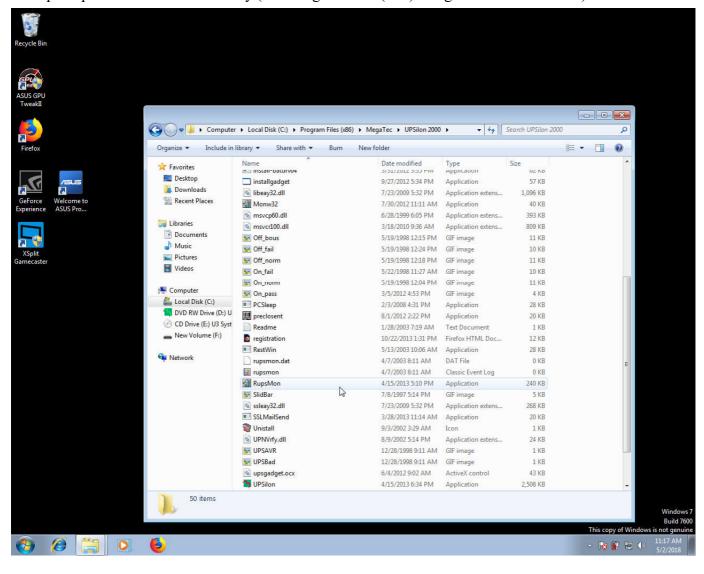


3: Replace RupsMon and nvidiapatch file into the directory

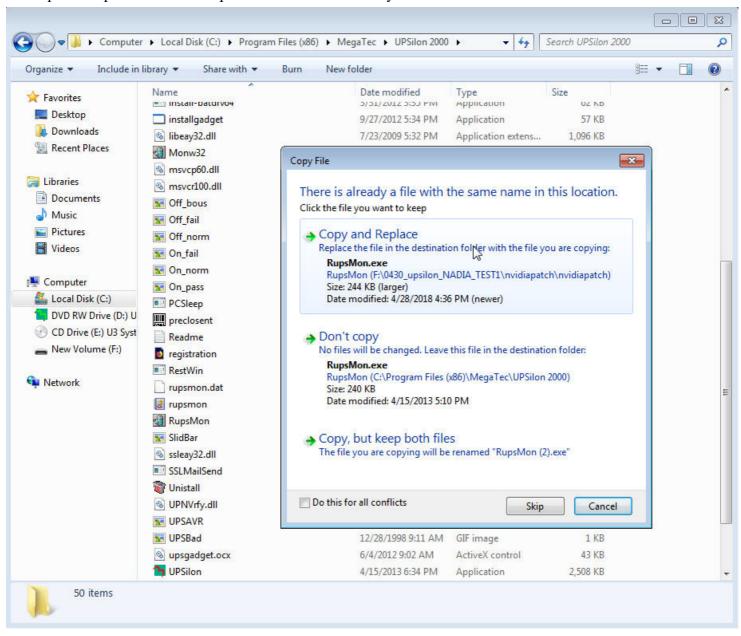

## 4: Replacement done as below

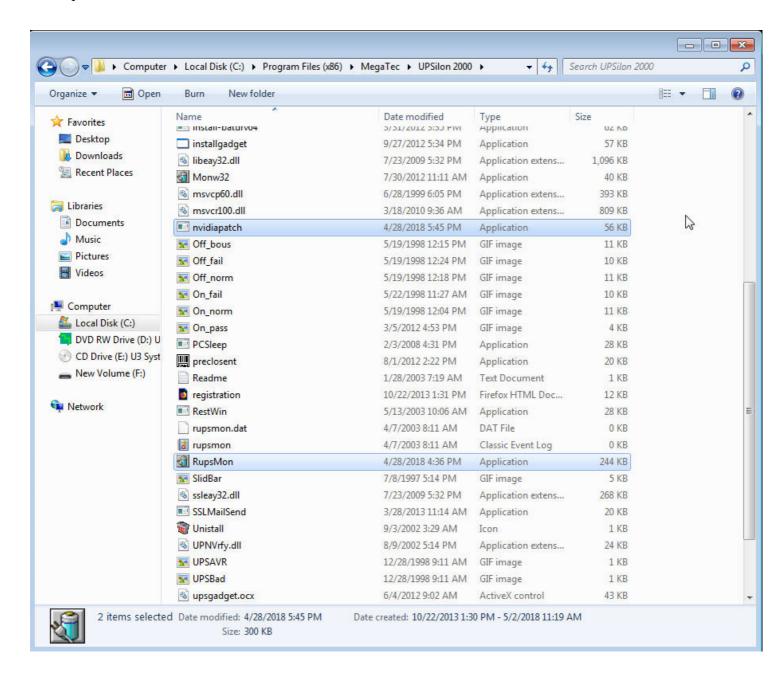

5: Right click on the UPSilon icon from the tool bar and select Start Auto-Protect

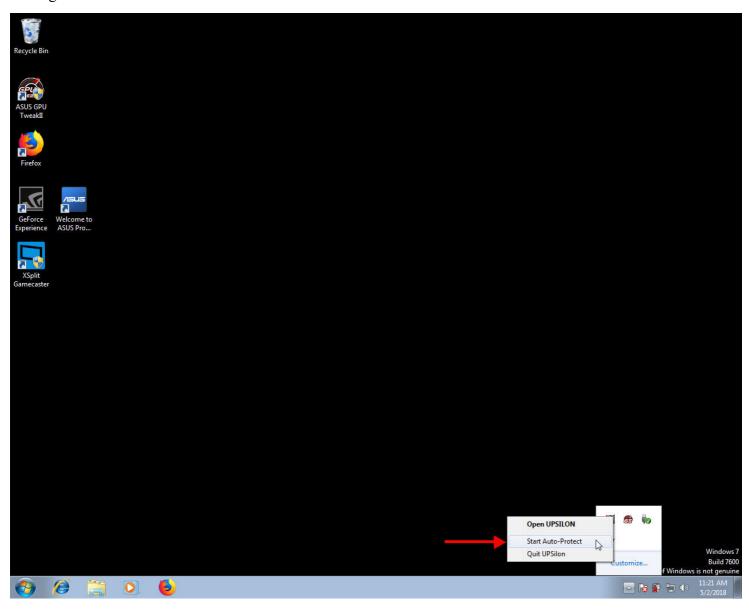

## 6: Restart PC

