

Core1262-868M

From Waveshare Wiki

Jump to: navigation, search

Overview

Introduction

Core1262-868M is a LoRa core module that incorporates a new-generation SX1262 chip. It is mini and features long-range transmission and high anti-interference capability. The module uses the Sub-GHz band, and combined with the LoRa gateway, it can be connected to servers like the TTN server to build the LoRa network.


More (<https://www.waveshare.com/core1262-868m.htm>)

Note:

1. The product's original name is Core1262-868M, later renamed as Core1262-HF, suitable for 850~930MHz frequency band.
2. Add Core1262-LF, suitable for 410~490MHz frequency band.

Features

- The new generation SX1262 has higher power efficiency and longer transmission distance than the SX1278.

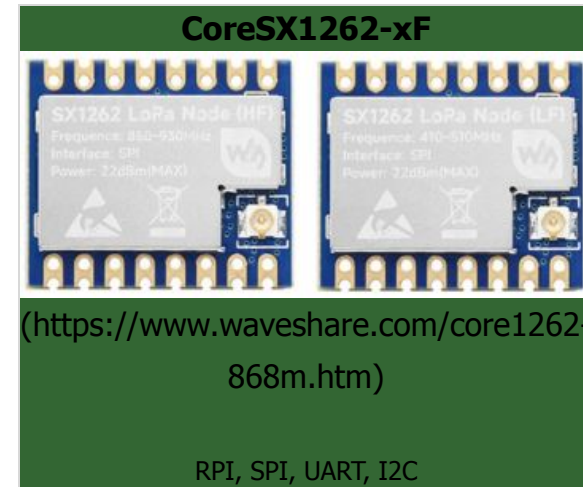

- Suitable for Sub-GHz band, combined with the gateway, quick connect to cloud servers to build LoRa/LoRaWAN network.
- Suitable for the application scenarios such as industry, smart home, and data acquisition.
- Adopts high-quality components such as TCXO for working stably under harsh conditions.
- Comes with online development resources and manual (examples for Raspberry Pi Pico/STM32).

Parameter

Electric	Parameter
RF Chip	SX1262
Operating Frequency	Sub-GHz: Core1262-LF: 410~490MHz Core1262-HF:850~930MHz
Modulation	LoRa/(G)FSK
Emit Power	22dBm@3.3V
Operating Voltage	3.3V
Module Current	Emitting current 45mA@14dBm Receiving current 5.3mA@125KHz
Communication Bus	SPI
Operating Temperature	-40 ~ 85°C

Dimensions

19.00 × 22.00mm

Version Selection

Version Options



Core1262-HF

HF version is 850 ~ 930MHz frequency
Applicable to Europe, North America and Oceania




Core1262-LF

LF version is 410 ~ 510MHz frequency
Applicable to Europe, Asia

* Please select the frequency version according to the local radio regulations before placing order

(/wiki/File:Core1262-868MF.png)

Pinout Definition

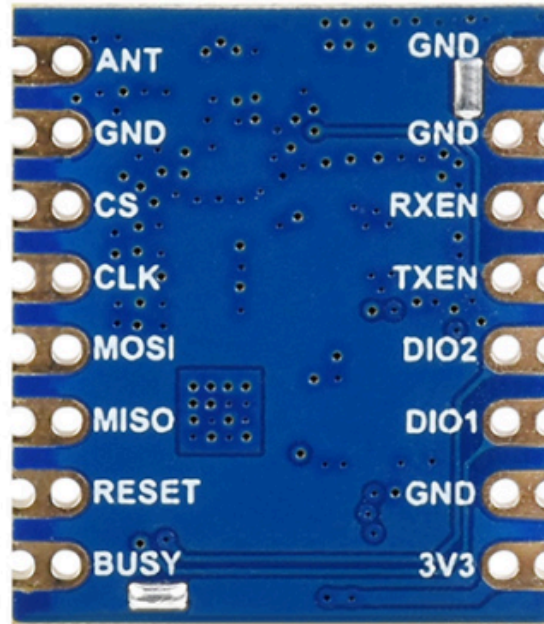

ANT	antenna	GND	ground
GND	ground	GND	ground
CS	SX1262 CS pin	RXEN	RF RX enable
CLK	SX1262 CLK pin	TXEN	RF TX enable
MOSI	SX1262 MOSI pin	DIO2	SX1262 DIO2 pin
MISO	SX1262 MISO pin	DIO1	SX1262 DIO1 pin
RESET	RESET pin	GND	ground
BUSY	SX1262 BUSY pin	3V3	power supply positive

(/wiki/File:Pinout-core.png)

- The ANT pin is an antenna pin, which can be connected to an antenna stand such as SMA when mounting the bottom board.
- CS MOSI MISO CLK is the SPI interface of SX1262, and BUSY is the status pin of SX1262.
 - Use MCU's SPI bus to communicate with Core1262-xF. When MCU reads and writes SX1262 registers, it needs to read and write parameters in the order of Opcode + Address + Data. For more information, please refer to chapters 8, 10, 11, and 12 of the datasheet (https://files.waveshare.com/upload/e/e1/DS_SX1261-2_V1.2.pdf). The maximum SPI speed is 18MHz. The communication is shown in the figure below.
- - When the MCU reads and writes the SX1262 register, it needs to detect the BUSY pin first. The low level indicates that it is idle and can be read and written normally, and the high level indicates that it is busy and cannot read and write the register, as shown in the figure below.

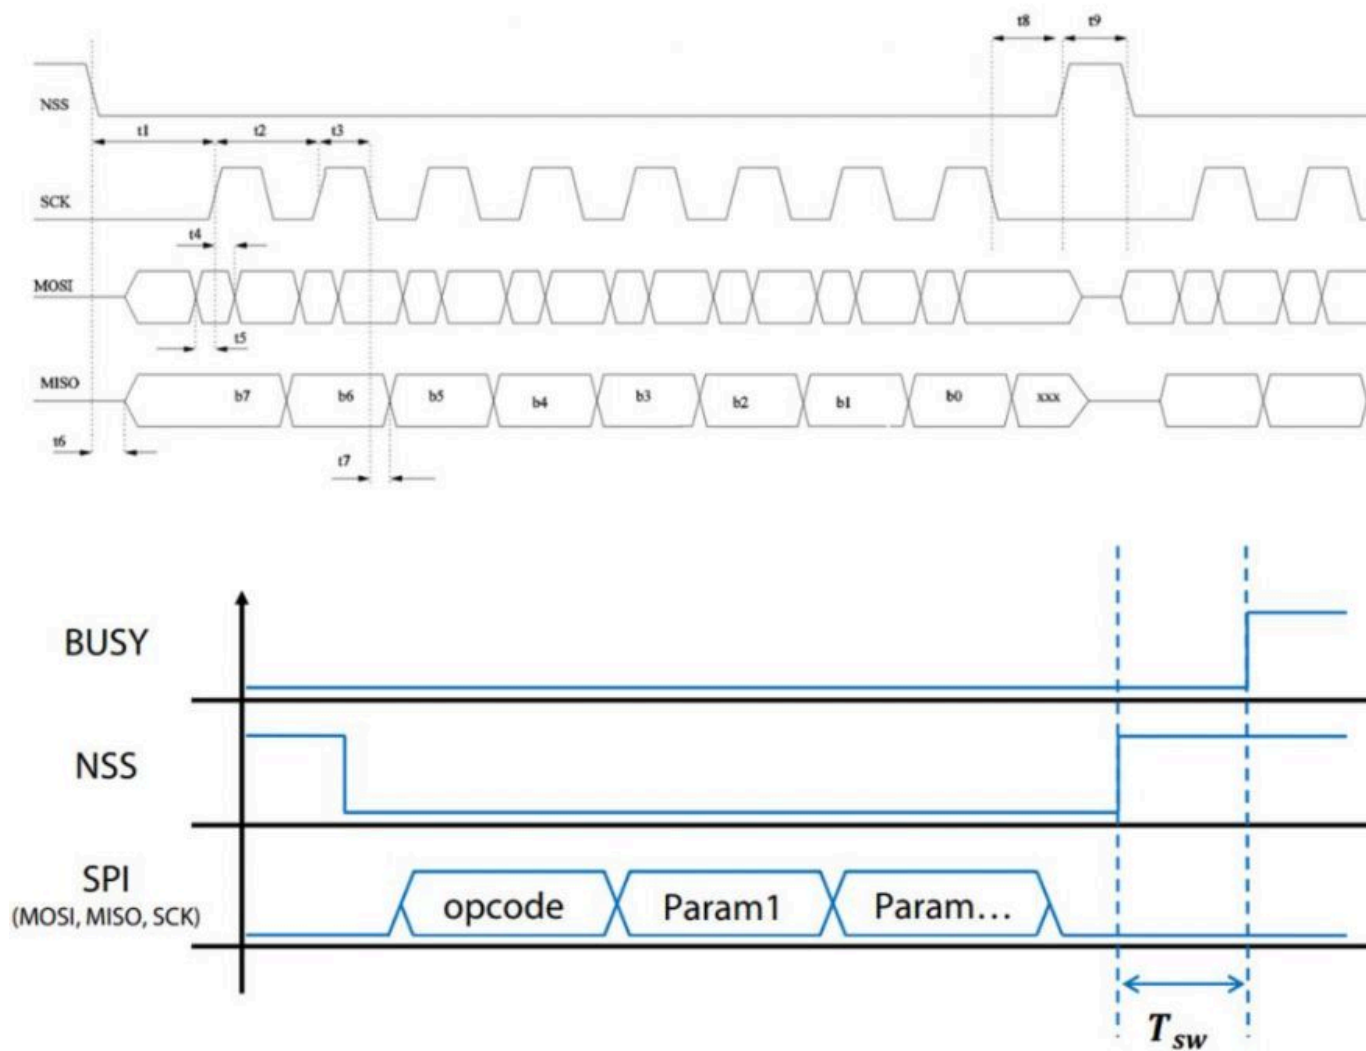


Figure 8-3: Switching Time Definition

Table 11-2: Commands to Access the Radio Registers and FIFO Buffer

Command	Opcode	Parameters	Description
WriteRegister	0x0D	address[15:0], data[0:n]	Write into one or several registers
ReadRegister	0x1D	address[15:0]	Read one or several registers

read/write	offset	address[0:n]	read one or several registers
WriteBuffer	0x0E	offset, data[0:n]	Write data into the FIFO
ReadBuffer	0x1E	offset	Read data from the FIFO

(/wiki/File:Core1262-868M_pin1.jpg)

- RESET is the factory reset pin of SX1262, pull it low for 100us to restore the default parameters of the register, and keep a high level when working.
- RXEN, TXEN are RF single-pole switch (SPDT (<https://files.waveshare.com/upload/c/c6/Datasheet-RTC6603SP-RichWave.pdf>)) pins, RXEN low level, TXE high level, SX1262 is in receiving mode, RXEN high level, TXEN low level, SX1262 is in transmitting mode.
- DIO1, DIO2, and DIO3 are SX1262 functional GPIO pins, which can be set as input and output to indicate various states of SX1262 (8.5 IRQ Handling in the figure below), usually, DIO1 is set as an interrupt output in the state shown in the figure below, and DIO2 is connected to RXEN Set as the control pin of the RF single-pole switch, DIO3 is set to supply power to the TCXO, for details, please refer to Datasheet (https://files.waveshare.com/upload/c/cb/DS_SX1261-2_V1.2_%281%29.pdf) 8.3.2, 8.5 summary.

8.3.2 Digital Input/Output

Any of the 3 DIOs can be selected as an output interrupt source for the application. When the application receives an interrupt, it can determine the source by using the command *GetIrqStatus(...)*. The interrupt can then be cleared using the *ClearIrqStatus(...)* command. The Pin Description is as follows:

DIO1 is the generic IRQ line, any interrupt can be mapped to DIO1. The complete list of available IRQ can be found in [Section 8.4 "Digital Interface Status versus Chip modes" on page 54](#).

DIO2 has a double functionality. As DIO1, DIO2 can be used as a generic IRQ line and any IRQ can be routed through this pin. Also, DIO2 can be configured to drive an RF switch through the use of the command *SetDio2AsRfSwitchCtrl(...)*. In this mode, DIO2 will be at a logical 1 during Tx and at a logical 0 in any other mode.

DIO3 also has a double functionality and as DIO1 or DIO2, it can be used as a generic IRQ line. Also, DIO3 can be used to automatically control a TCXO through the command *SetDio3AsTCXOCtrl(...)*. In this case, the device will automatically power cycle the TCXO when needed.

8.5 IRQ Handling

In total there are 10 possible interrupt sources depending on the selected frame and chip mode. Each one can be enabled or masked. In addition, each one can be mapped to DIO1, DIO2 or DIO3.

Table 8-4: IRQ Status Registers


Bit	IRQ	Description	Modulation
0	TxDone	Packet transmission completed	All
1	RxDone	Packet received	All
2	PreambleDetected	Preamble detected	All
3	SyncWordValid	Valid Sync Word detected	FSK
4	HeaderValid	Valid LoRa® Header received	LoRa®
5	HeaderErr	LoRa® Header CRC error	LoRa®
6	CrcErr	Wrong CRC received	All
7	CadDone	Channel activity detection finished	LoRa®

8	CadDetected	Channel activity detected	LoRa®
9	Timeout	Rx or Tx Timeout	All

For more information on how to setup IRQ and DIOs, refer to the function *SetDioIrqParams()* in [Section 13.3.1 "SetDioIrqParams" on page 79](#).

(/wiki/File:Core1262-868M_pin2.jpg)

Dimensions

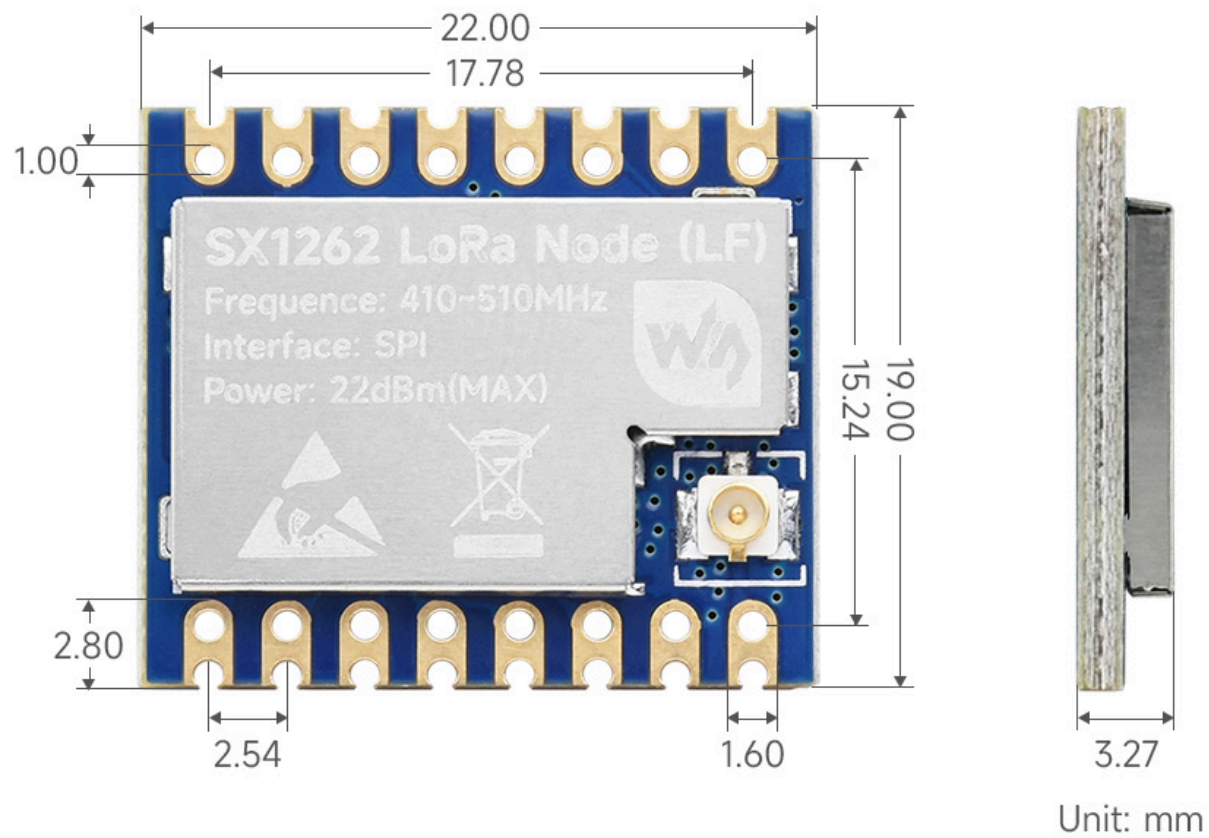

(/wiki/File:Dimensions2.jpg)

LoRa & LoRaWAN

What is LoRa ?

Semtech (<https://www.semtech.com/>)'s LoRa is a long-distance, low-power wireless platform for the Internet of Things (IoT), which generally refers to radio frequency chips using LoRa technology. The main features are as follows


- The spread spectrum modulation technology adopted by LoRa (abbreviation of long range) is derived from Chirp Spread Spectrum (CSS) technology, which is one of the long-distance wireless transmission technology and LPWAN communication technology. Spread spectrum technology uses bandwidth for sensitivity technology, Wi-Fi, ZigBee, etc. all use spread spectrum technology, but the characteristic of LoRa modulation is that it is close to the limit of Shannon's theorem, and the sensitivity can be improved with maximum efficiency. Compared with traditional FSK technology, at the same communication rate, LoRa is more sensitive than FSK by 8 ~12dBm. At present, LoRa mainly operates in the ISM frequency band of Sub-GHz.
- LoRa technology integrates technologies such as digital spread spectrum, digital signal processing, and forward error correction coding, which greatly improves the performance of long-distance communication. LoRa's link budget is better than any other standardized communication technology. The main factors that determine the distance in a given environment.
- LoRa RF chips mainly include SX127X series, SX126X series, SX130X series, of which SX127X, SX126X series are used for LoRa nodes, and SX130X is used for LoRa gateways. For details, please refer to Semtech (<https://www.semtech.com/>)'s product list.

What is LoRaWAN ?

- LoRaWAN (<https://loro-alliance.org/about-lorawan/>) is an open protocol for low-power wide-area networks built on LoRa radio modulation technology. Designed to wirelessly connect battery-powered "things" to the Internet in regional, national, or global networks, and target critical

Internet of Things (IoT) requirements such as two-way directional communication, end-to-end security, mobility, and localized services. The node wirelessly connects to the Internet with network access authentication, which is equivalent to establishing an encrypted communication channel between the node and the server. The LoRaWAN protocol level is shown in the figure below.


- The Class A/B/C node devices in the MAC layer basically cover all the application scenarios of the Internet of Things. The difference among them is that the time slots for nodes to send and receive are different.
- EU868 and AS430 in the Modulation layer show that frequency band parameters are different in different countries. Please click the reference link (https://lora-alliance.org/wp-content/uploads/2019/11/rp_2-1.0.0_final_release.pdf) for regional parameters.

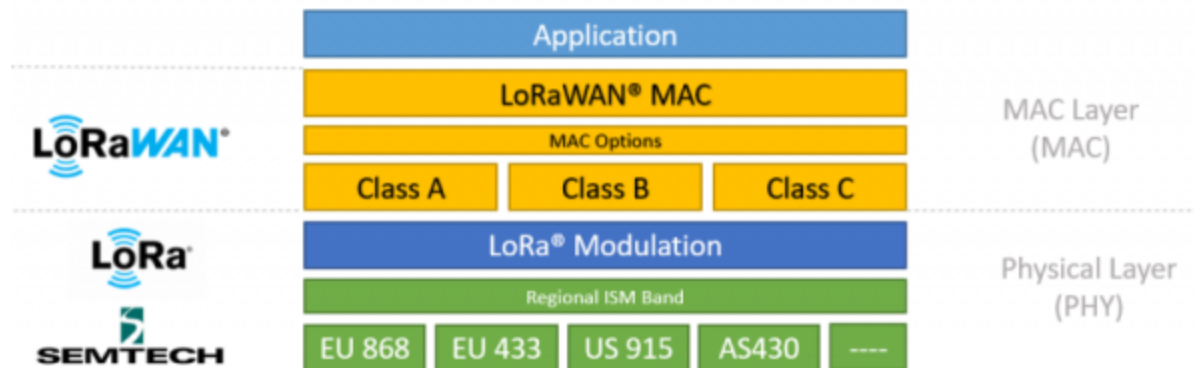

(/wiki/File:SX1262-LoRa-HAT-0201.png)

- To achieve LoRaWAN network coverage in cities or other areas, it needs to be composed of four parts: node (LoRa node radio frequency chip), gateway (or base station, LoRa gateway radio frequency chip), server, and cloud, as shown in the following figure.
 - The DEVICE (node device) needs to initiate a network access request packet to the GATEWAY (gateway) and then to the server. After the authentication is passed, it can send and receive application data with the server normally.
 - GATEWAY (gateway) can communicate with the server through a wired network, 3/4/5G wireless network

- The main operators on the server side are TTN (<https://eu1.cloud.thethings.network/console/>), etc. For building cloud services by yourself, please refer to lorawan-stack (<https://github.com/TheThingsNetwork/lorawan-stack>), chirpstack (<https://www.chirpstack.io/>)

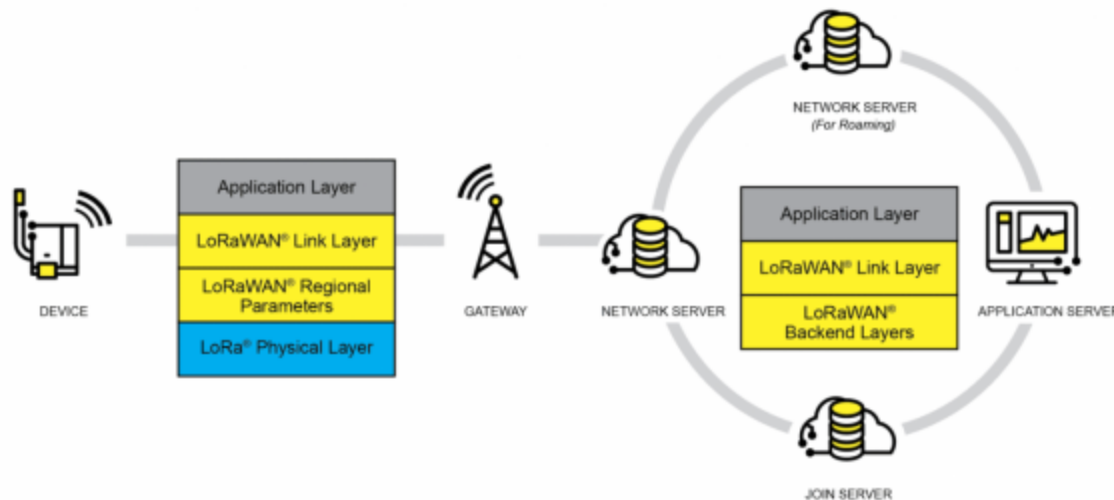


(/wiki/File:1350px-SX1268-LoRa-HAT-021.png)

- There are two methods for Raspberry Pico and Pico-LoRa-SX1262 to connect to the network via LoRaWAN: OTAA (Over-The-Air-Activation) and ABP (Activation By Personalization). Here we use OTAA, as shown below. Also you can refer to link 1 (<https://lora-developers.semtech.com/documentation/tech-papers-and-guides/lora-and-lorawan/>), link 2 (<https://www.thethingsnetwork.org/docs/lorawan/end-device-activation/>) and source code (<https://github.com/Lora-net/LoRaMac-node>).
- Step 1: Please send the "Join-Request" message to the network to be added, and note that the adding process is always initiated by the end device. The join-Request message can be transmitted at any rate and in one of the region-specific join channels. For example: in Europe, the end device can send the join-Request message at 868.10 MHz, 868.30MHz, or 838.50MHz. Also, the message can send to the network server by one or more gateway. In addition, you need to pay attention to choosing the applicable frequency band according to the local radio management regulations. You can refer to link (https://files.waveshare.com/upload/5/5d/Rp_2-1.0.0_final_release.pdf) and LoRa Alliance (<https://lora-alliance.org/>) for the frequency distribution


table. The Join-Request message is combined by the following field, AppEUI, and DevEUI are generated by the server end.

- AppEUI: A 64-bit globally unique application identifier in the IEEE EUI64 address space that uniquely identifies an entity capable of processing Join-Request frames.
- DevEUI: A 64-bit globally unique device identifier that uniquely identifies an end device in the IEEE EUI64 address space.
- DevNonce: A unique random 2-byte value generated by the end device. The web server uses each end device's DevNonce to keep track of their join requests. If the end device sends a join request with the previously used DevNonce (this case is called a replay attack), the network server will reject the join request and will not allow the end device to register with the network.
- Step 2: The web server handles the Join-Request-Message. If the end device is allowed to join the network, the web server will generate two session keys (NwkSKey and AppSKey) and the Join-accept message. The Join-accept message itself is then encrypted using AppKey. The web server uses AES decryption operation in ECB mode to encrypt Join-accept messages.
- Step 3: The network server sends the encrypted join to accept the message back to the end device as a normal downlink.
- Step 4: The end device uses AES to decrypt Join-Accept. And uses AppKey and AppNonce to generate two session keys NwkSKey and AppSKey for subsequent communication with the Networking server. Network Server also saves kSKey, Join server distributes AppSKey to Application Server.

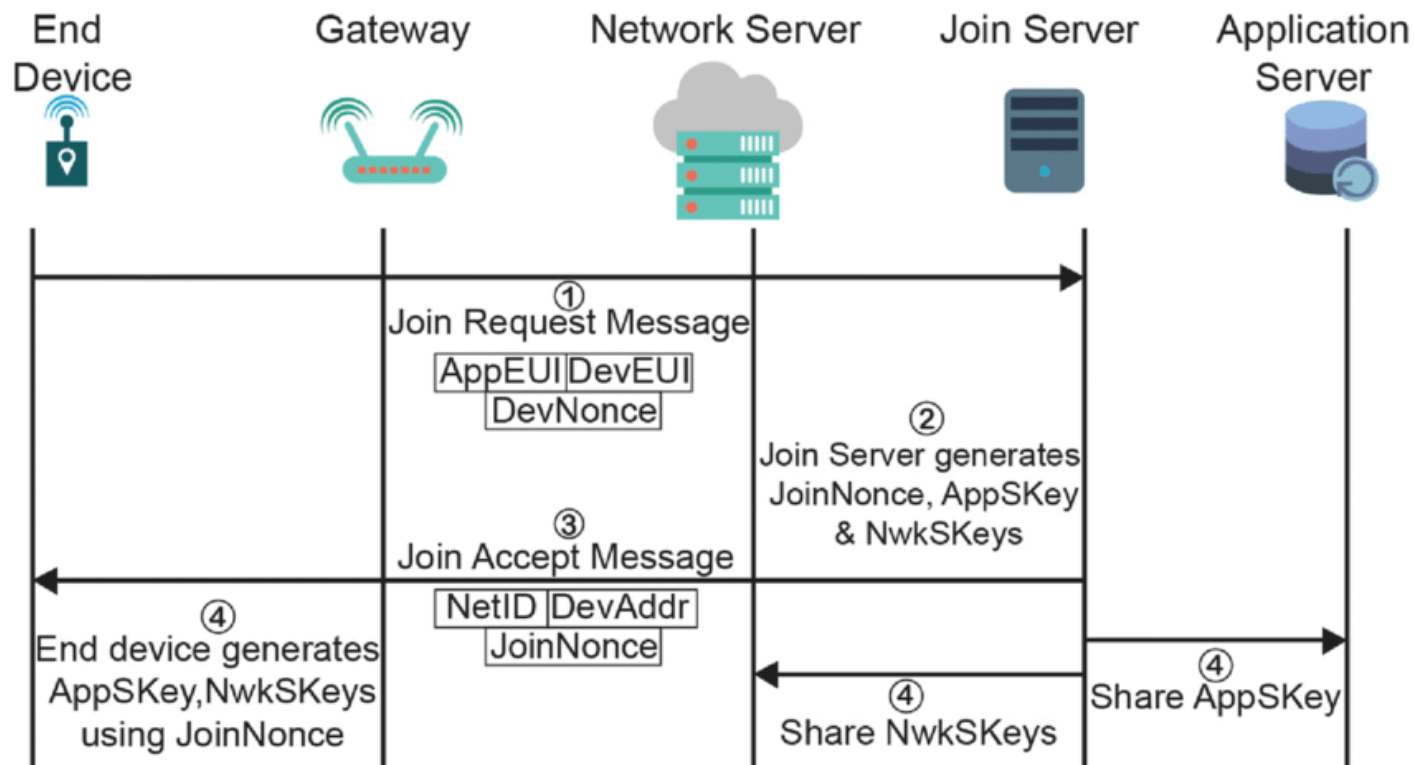

(/wiki/File:Pico-LoRa-SX1262-868M_Spec_11.png)

- The DevEUI and AppEUI parameters used as terminal devices to access the Internet need to be registered and generated by the server. The specific process is as follows:
 - Register an account in TTS (<https://eu1.cloud.thethings.network/console/>) and log in. Create an Application.

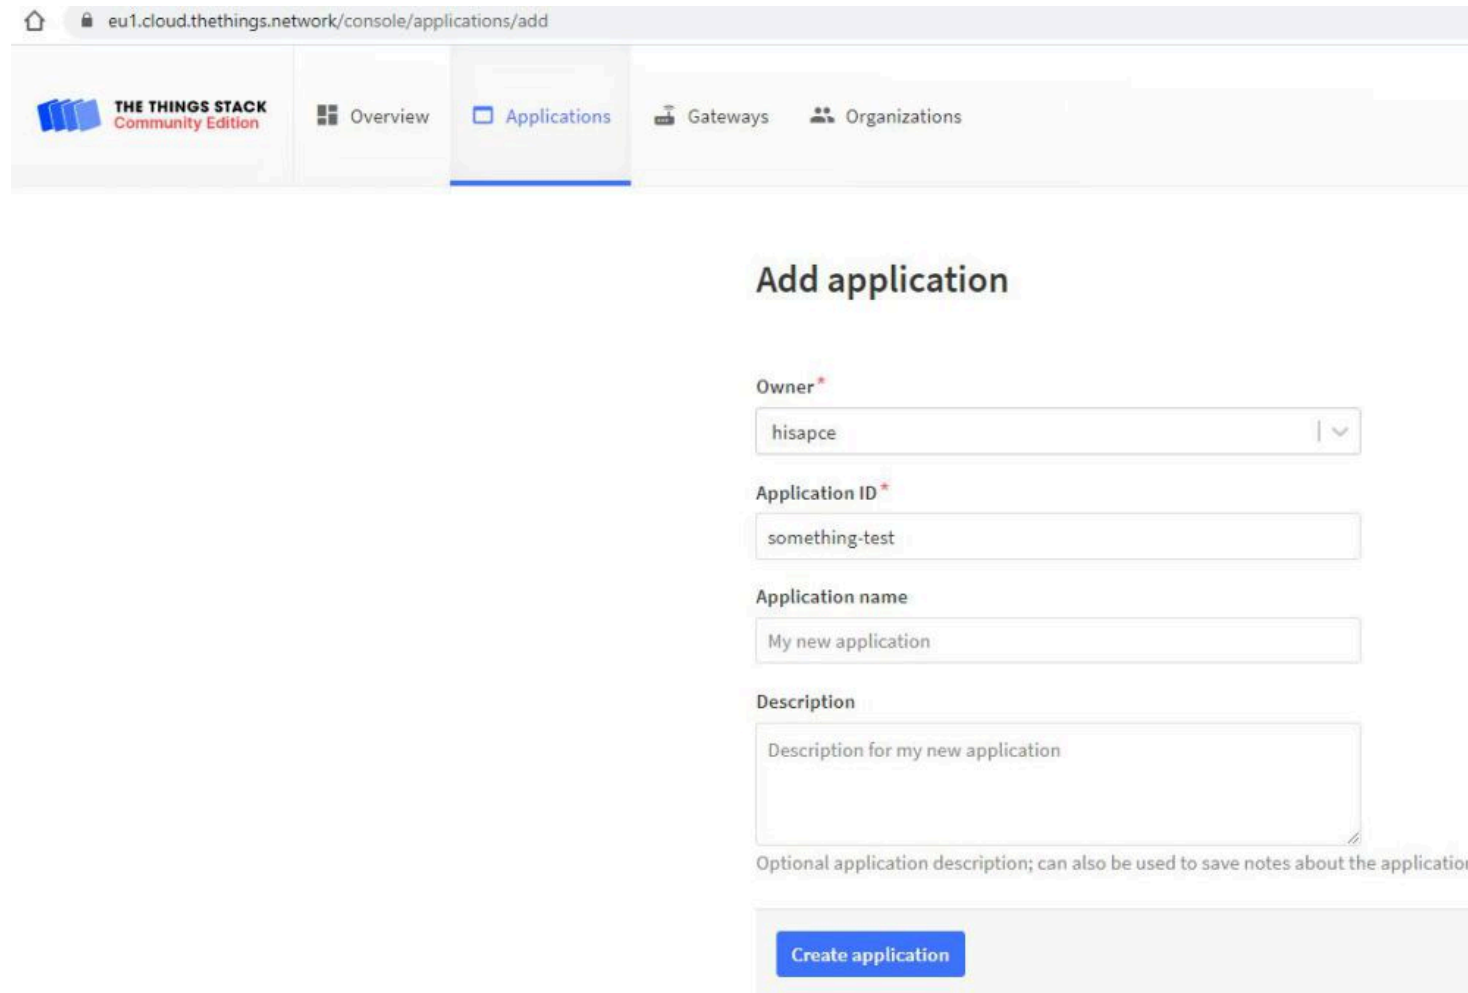


The screenshot shows the 'Add application' page in the The Things Stack Community Edition console. The browser address bar shows 'eu1.cloud.thethings.network/console/applications/add'. The navigation bar includes 'THE THINGS STACK Community Edition', 'Overview', 'Applications' (selected), 'Gateways', and 'Organizations'. The main form has the following fields:

- Owner ***: A dropdown menu with 'hisapce' selected.
- Application ID ***: A text input field containing 'something-test'.
- Application name**: A text input field containing 'My new application'.
- Description**: A text area containing 'Description for my new application'.

Below the description field, a note states: 'Optional application description; can also be used to save notes about the application'. At the bottom of the form is a blue button labeled 'Create application'.

(/wiki/File:Pico-LoRa-SX1262-868M_006.jpg)

- Add an End Device

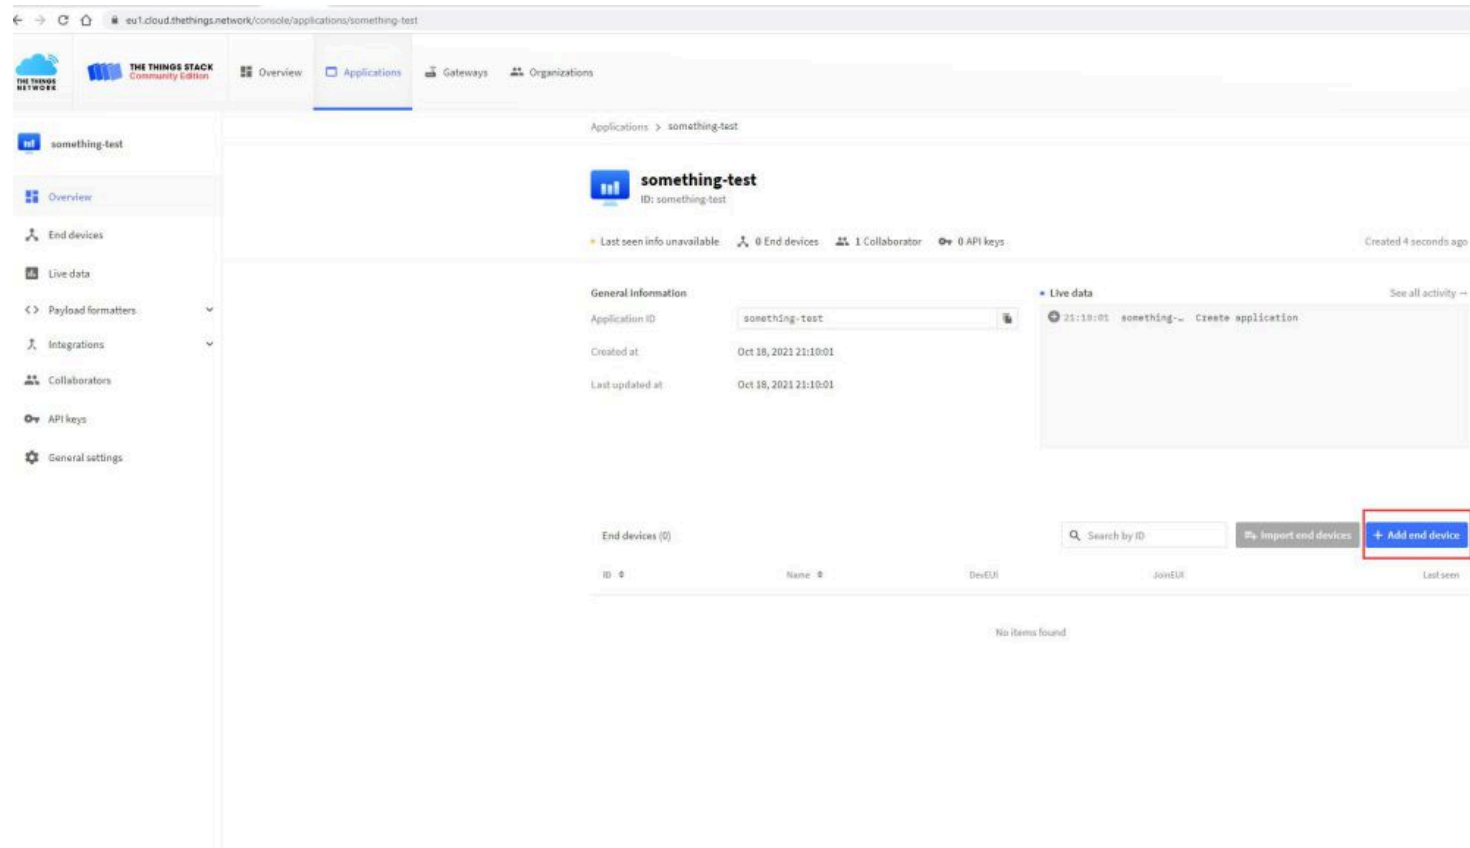

(/wiki/File:Pico-LoRa-SX1262-868M_007.jpg)

- ■ Configure the End Device as in the picture. Please save the DevEUI and the AppKey for further use.

eu1.cloud.thethings.network/console/applications/something-test/devices/add/manual

THE THINGS NETWORK THE THINGS STACK Community Edition Overview Applications Gateways Organizations

something-test

Overview

End devices

Live data

Payload formatters

Integrations

Collaborators

API keys

General settings

Applications > something-test > End devices > Register manually

Register end device

From The LoRaWAN Device Repository **Manually**

step 1

Frequency plan *
Europe 863-870 MHz, 6 channels for roaming (Draft)

LoRaWAN version *
MAC V1.0.2

Regional Parameters version *
PHY V1.0.2 REV A

Show advanced activation, LoRaWAN class and cluster settings

DevEUI *
... .. **step 2** Generate 0/50 used

AppEUI *
... .. **step 3** Fill with zeros

AppKey *
... .. **step 4** Generate

End device ID *
my-new-device
This value is automatically prefilled using the DevEUI

After registration
☒ View registered end device
☐ Register another end device of this type

step 5 Register end device


(/wiki/File:Pico-LoRa-SX1262-868M_008.jpg)

Application

LoRa devices and networks such as LoRaWAN enable smart IoT applications to help solve the planet's formidable challenges in energy management, natural resource reduction, pollution control, infrastructure efficiency, disaster prevention, and more. Semtech's LoRa devices have achieved hundreds of successful use cases in smart cities, homes and buildings, communities, metrology, supply chain, and logistics, agriculture, and more. LoRa networks have covered hundreds of millions of devices in more than 100 countries and are committed to a smarter planet.

Application Example

Industrial Environment, Smart Home, And Data Acquisition...

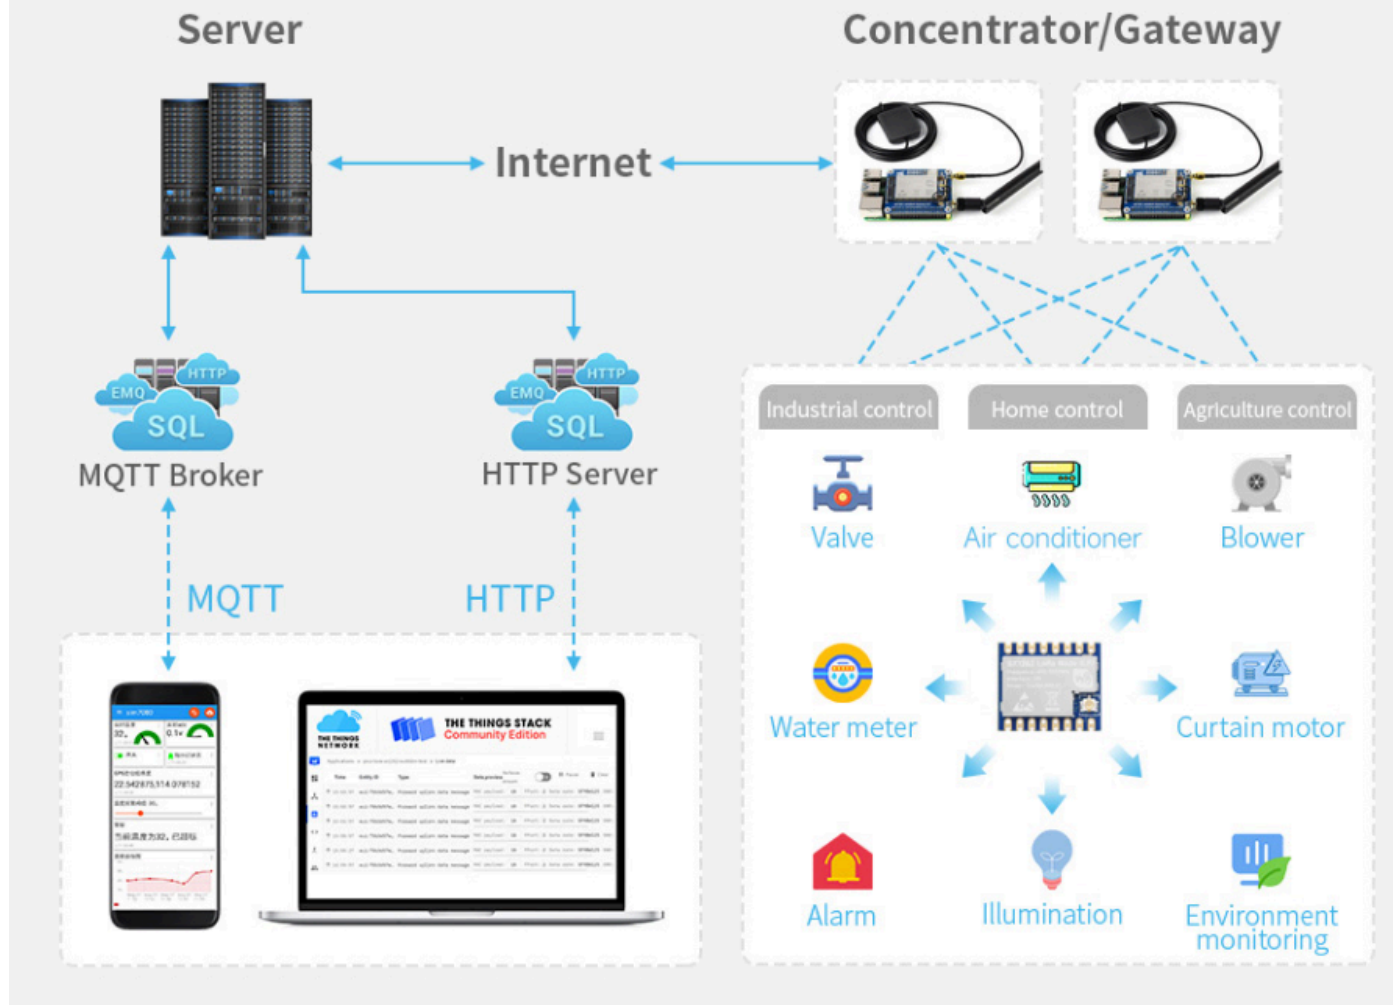

(/wiki/File:Core1262-868M_Spec09.png)

This product test is based on TTS (The THINGS STACK) (https://id.thethingsnetwork.org/oidc/interaction/3-AEVbxQV0A_GmifXaFcS) and Semtech SX1302 official library (https://github.com/Lora-net/sx1302_hal), if users build their own cloud server, please click to refer to lorawan-stack (<https://github.com/TheThingsNetwork/lorawan-stack>), chirpstack (<https://www.chirpstack.io/>).

Resource

Document

- Schematic diagram (https://files.waveshare.com/upload/c/c1/CoreSX1262_Sch.pdf)
- 3D drawings (<https://files.waveshare.com/wiki/Core1262-XXXM/3D/Core126X.zip>)

Demo Example

- Demo (https://files.waveshare.com/upload/0/08/Pico-LoRa-SX1262-868M_Code.zip)
- Github (<https://github.com/siuwahzhong/lorawan-library-for-pico>)

Datasheet

- SX1261-2 (https://files.waveshare.com/upload/e/e1/DS_SX1261-2_V1.2.pdf)
- TTS Document Link (<https://www.thethingsindustries.com/docs/>)
- LoRaWAN Document Link (<https://loro-alliance.org/lorawan-for-developers/>)
- RTC6603SP-RichWave (<https://files.waveshare.com/upload/c/c6/Datasheet-RTC6603SP-RichWave.pdf>)

Support

Technical Support

If you need technical support or have any feedback/review, please click the **Submit Now** button to submit a ticket, Our support team will check and reply to you within 1 to 2 working days. Please be patient as we make every effort to help you to resolve the issue.

Working Time: 9 AM - 6 PM GMT+8 (Monday to Friday)

Submit Now (<https://service.waveshare.com/>)

*Retrieved from "<https://www.waveshare.com/w/index.php?title=Core1262-868M&oldid=69002>
(<https://www.waveshare.com/w/index.php?title=Core1262-868M&oldid=69002>)"*
