Configuring Two SSIDs

1.

Type in the IP address of the Cisco Wireless Access Point in the search bar. The default IP is 10.0.0.2 if you have not changed it. You should be met with the sign in pop-up. Enter the password (default password and username are both Cisco).

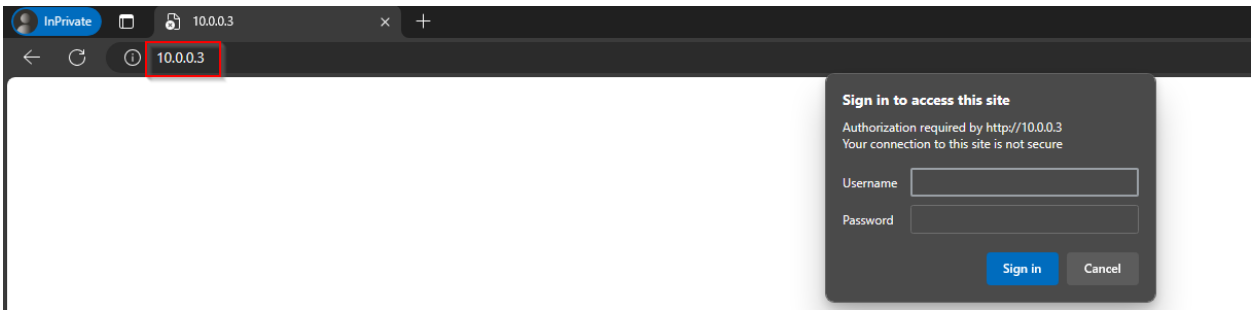

2.

Under the Home tab, enter Easy Setup > Network Configuration.

Create a Host Name, set an IP address if desired and make sure the default gateway is correct.

3.

In the same tab, Under Radio 5GHz configure an SSID, set a VLAN number, and set the universal admin mode to disabled and configure the security to WPA2-PSK. Then set a preshared key. Click Apply when done.

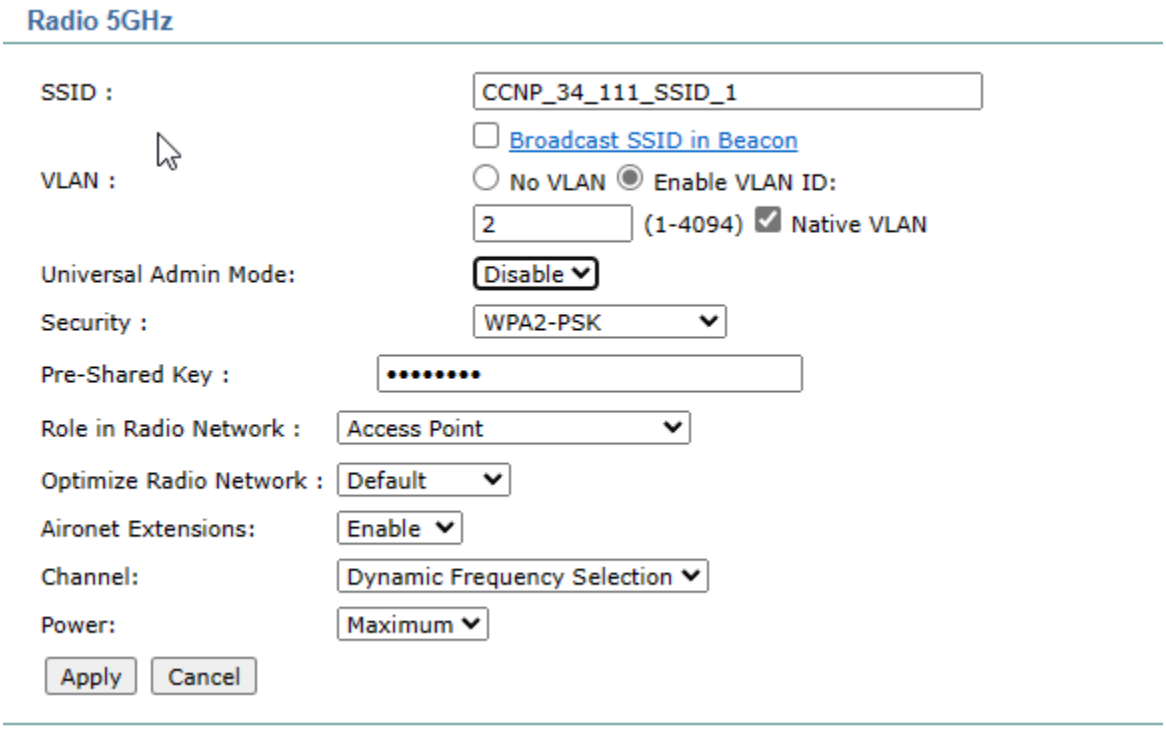

4.

Under the Security Tab, enter SSID Manager. Select the SSID previously configured and make sure the VLAN is set to the correct one and the interface is using 5G.

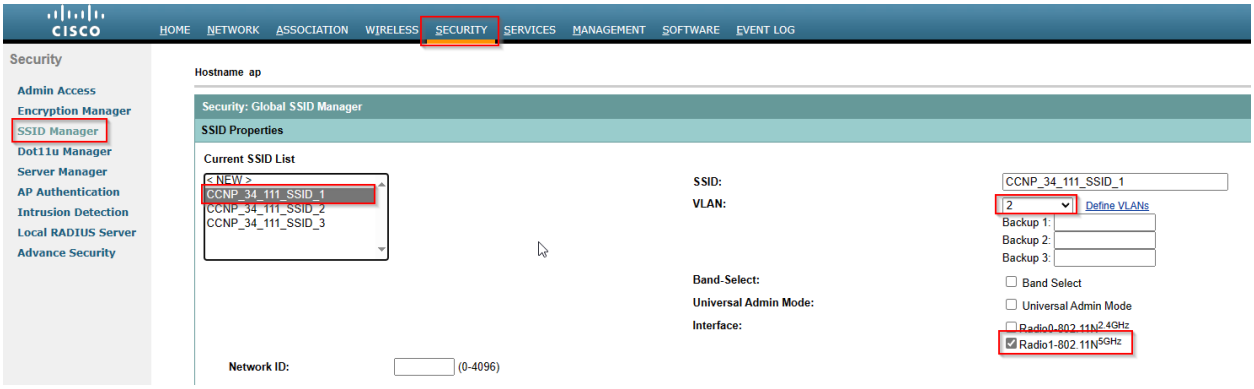

5.

In the same tab, under Client Authentication Settings turn on Open Authentication. This will allow others to connect to the beacon.

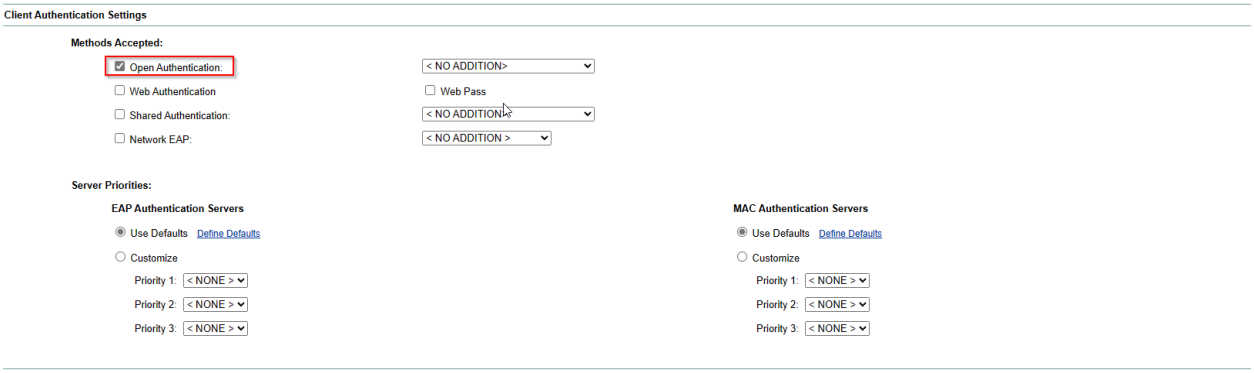

6.

In the same tab, under Client Authenticated Key Management, make sure the Key management is Mandatory and WPA is enabled using WPAv2. The Pre-shared Key should be the one created in step 3.

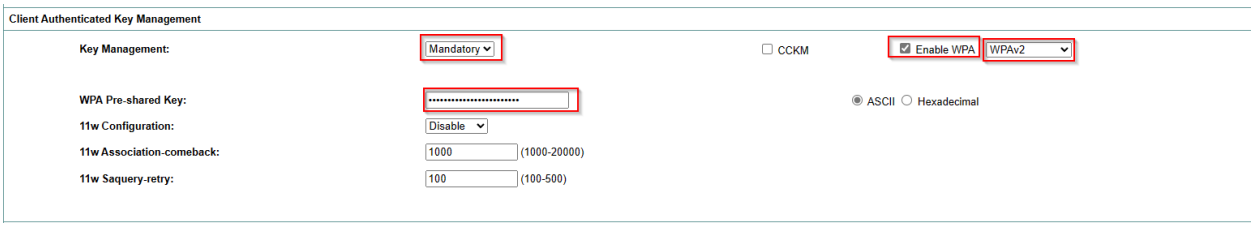

7.

Under Multiple BSSID Beacon Settings, set the SSID as Guest Mode. Then Under Guest Mode/Infrastructure SSID Settings, set the Beacon Mode to Multiple BSSID. This will allow the AP to create multiple SSIDs and broadcast them all.

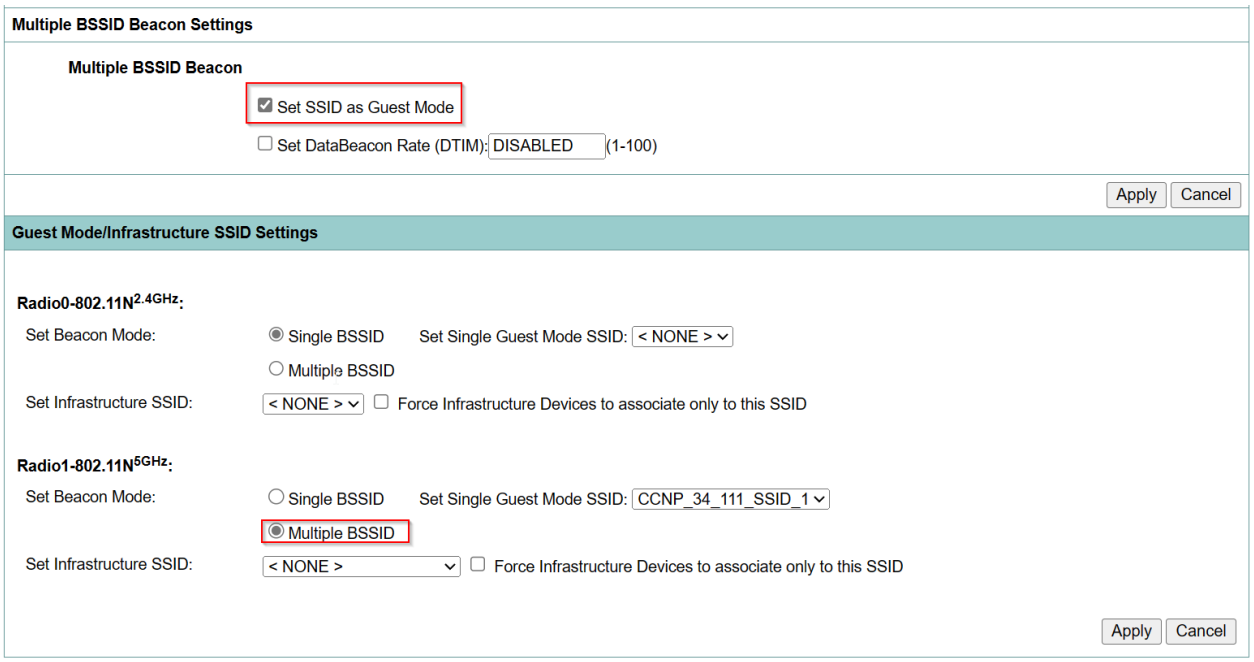

8.

Under the Services tab, enter the VLAN service. Then Create a Native vlan. Bind the native vlan to a VLAN of your choice and then make sure it is set to 5G. Then Click Apply.

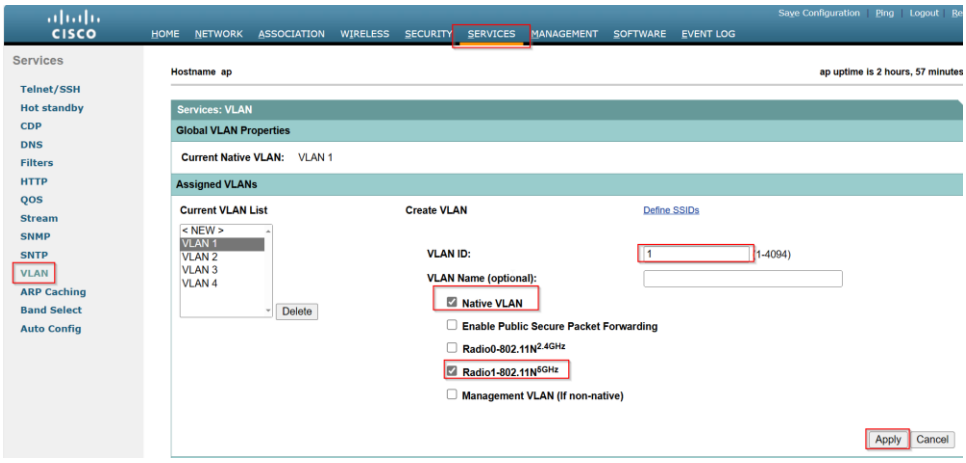

9.

Enter the Switch connected to the Access Point with the default password and username being Cisco.

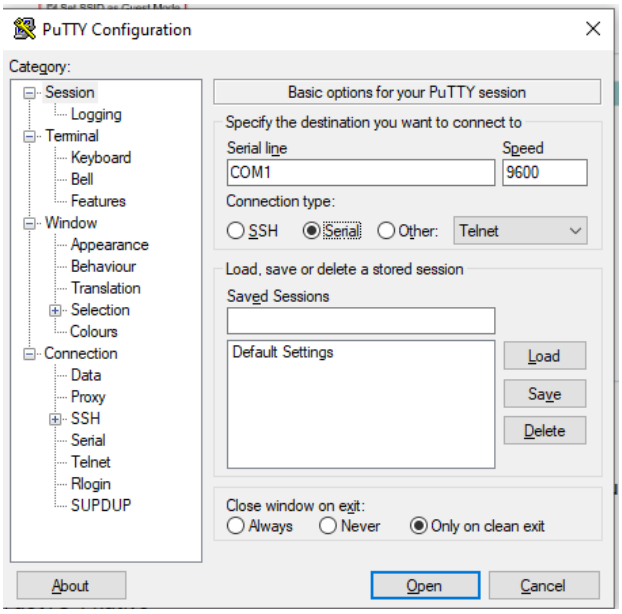

10.

In each of the Dot11Radio1 interfaces created in the Gui, Enter the Native vlan Interface created in step 8 and bind it to the Native VLAN.

interface Dot11Radio1.(vlanNumber)

for instance, since i created VLAN 1 as the native VLAN, i would use

interface Dot11Radio1.1

Then run

encapsulation dot1Q 1 native to bind it to the native VLAN.

11.

Then enter the previously configured VLAN the SSID uses and enter the interface using

interface Dot11Radio(vlan_number)

Then bind it to a normal VLAN that is **not** native using

encapsulation dot1q 1

12. Repeat Steps 1 to 11 to create the second SSID. The second SSID should be identical to the first ID in configuration except for the VLAN bindings and password.