CONNECTING ROD INSPECTION


id011000502800

1. Inspect the connecting rod for bending and distortion using the connecting rod aligner.
   - If it exceeds the maximum specification, replace the connecting rod.

Maximum connecting rod bending
0.050 mm {0.0020 in}

Maximum connecting rod distortion
0.050 mm {0.0020 in}

Connecting rod center-to-center distance
SKYACTIV-G 1.3: 151.3 mm {5.957 in}
SKYACTIV-G 1.5: 149.9 mm {5.902 in}
SKYACTIV-G 2.0: 155.2 mm {6.110 in}
SKYACTIV-G 2.5: 154.8 mm {6.094 in}

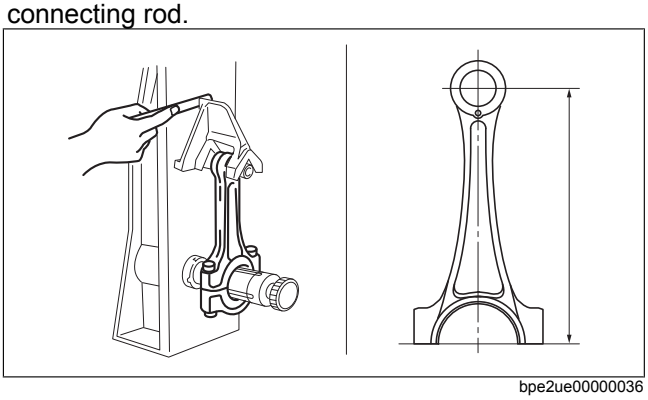

bpe2ue00000036