HIGH CLUTCH HUB INSPECTION

id051700663200

Bushing Inner Diameter Inspection


1. Measure the inner diameter of the bushing in two locations shown in the figure.

Note

- When measuring, measure near the center of the bushing avoiding the oil groove, and then calculate the average value of the X and Y directions as shown in the figure.
- Recommended measuring instrument: Cylinder gauge or caliper gauge

Maximum
16.138 mm {0.63535 in}

- If it is the maximum specification or more, replace the high clutch hub with a new one.

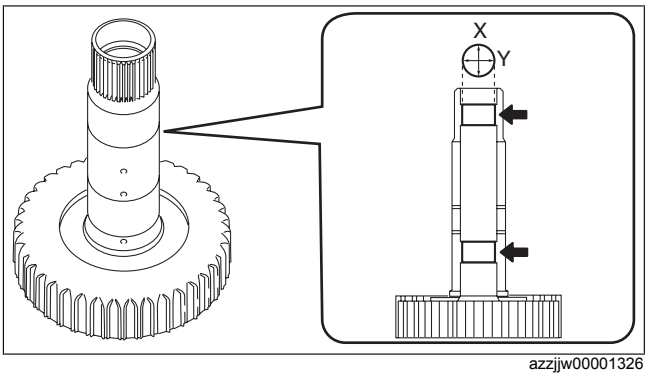

azzjjw00001326