
OIL PUMP ASSEMBLY

id051700663600

Structural view

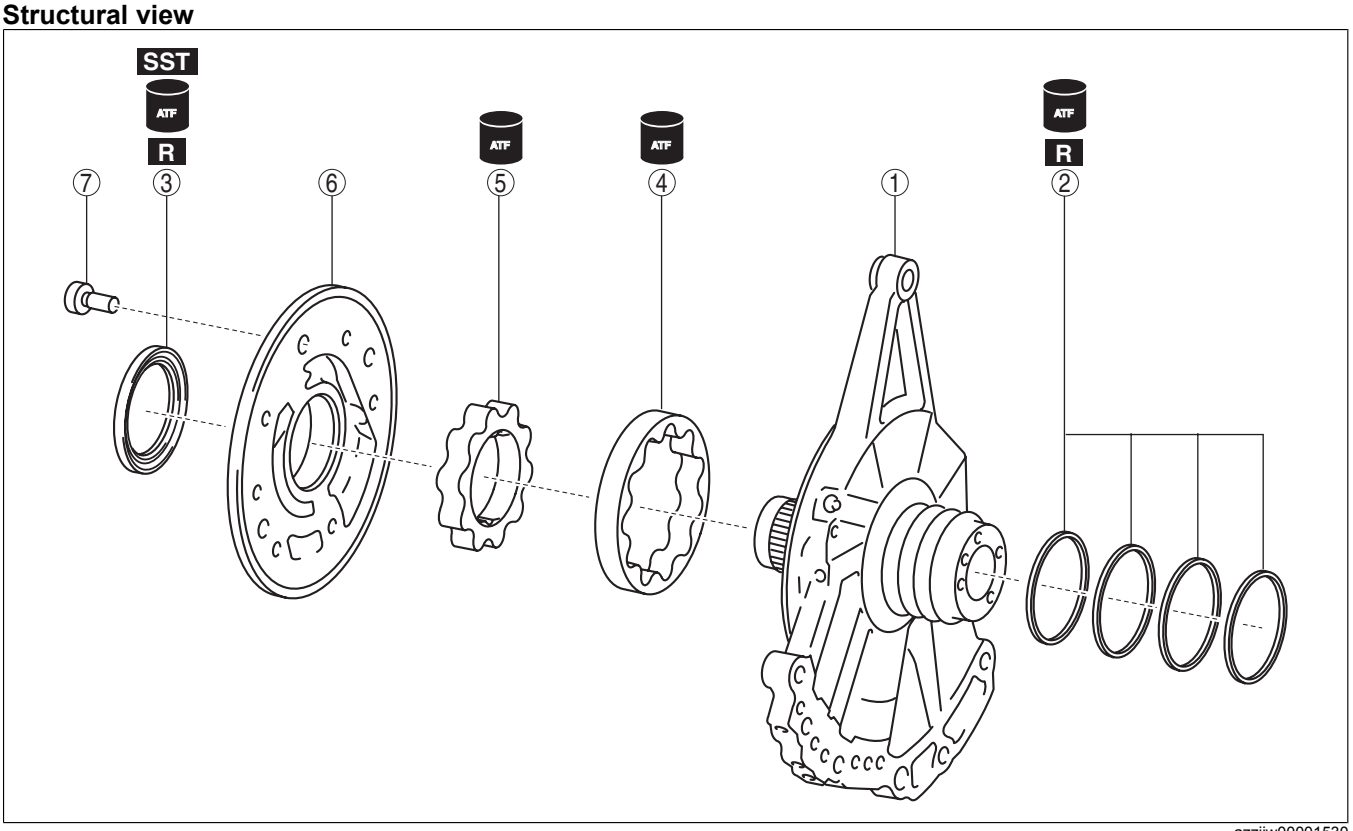

azzjjw00001530

1	Oil pump housing
2	Seal ring (outer diameter approx. 52.5 mm {2.07 in}, thickness approx. 1.5 mm {0.059 in})
3	Oil seal
4	Outer rotor
5	Inner rotor
6	Oil pump cover
7	1 Bolt (M6 x 7 bolt, length approx. 13 mm {0.51 in})

Assembly Procedure

1. Assemble new seal rings using the following procedure:


Caution

- **If a seal ring is reused it could cause ATF leakage, therefore use a new seal ring.**

Note


- Seal ring size: Outer diameter approx. 52.5 mm {2.07 in}, thickness approx. 1.5 mm {0.059 in}

(1) Apply ATF (ATF FZ) to the new seal rings.
(2) Assemble the new seal rings.

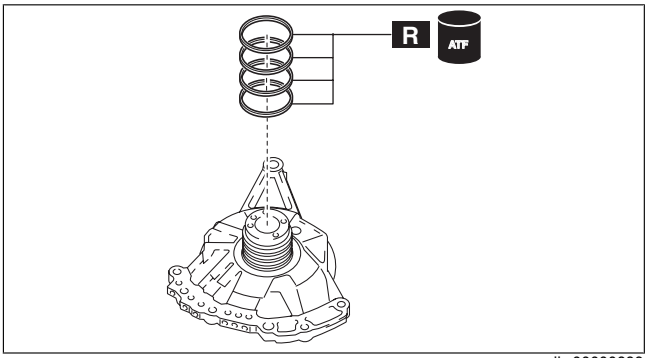

azzjjw00000883

A : Seal ring

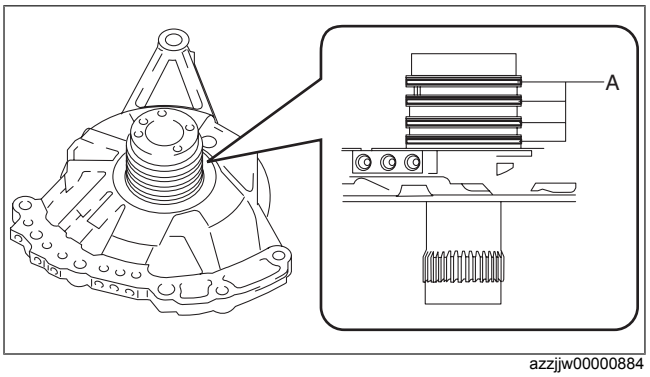


azzjjw00000884


2. Assemble the outer rotor using the following procedure:
   (1) Apply ATF (ATF FZ) to the outer rotor.
   (2) Assemble the outer rotor.

Note
- Assemble so that the outer rotor marking is facing the oil pump housing.

A : Mark
B : Assembly direction (oil pump housing side)

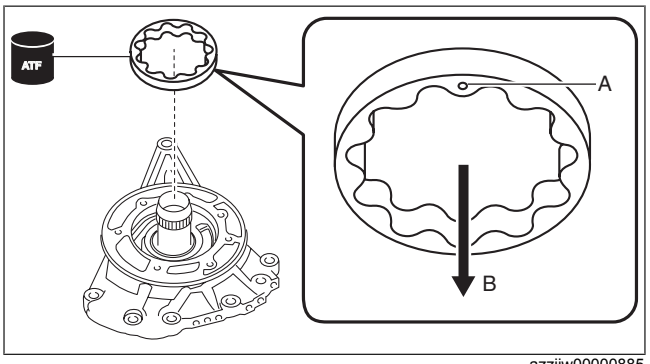

azzjjw00000885

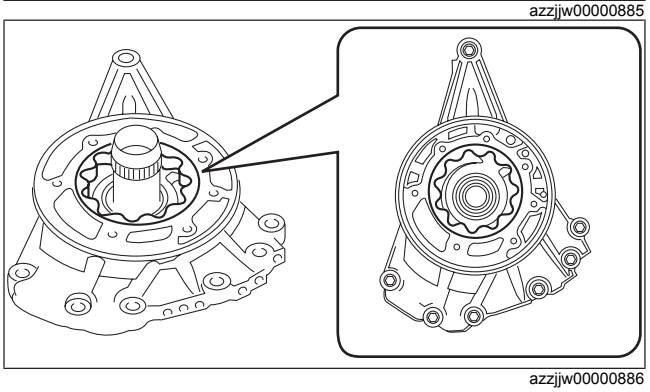


azzjjw00000886


3. Assemble the inner rotor using the following procedure:
   (1) Apply ATF (ATF FZ) to the inner rotor.
   (2) Assemble the inner rotor.

Note
- Assemble so that the inner rotor marking pointed toward the oil pump housing side.

A : Mark
B : Assembly direction (oil pump housing side)

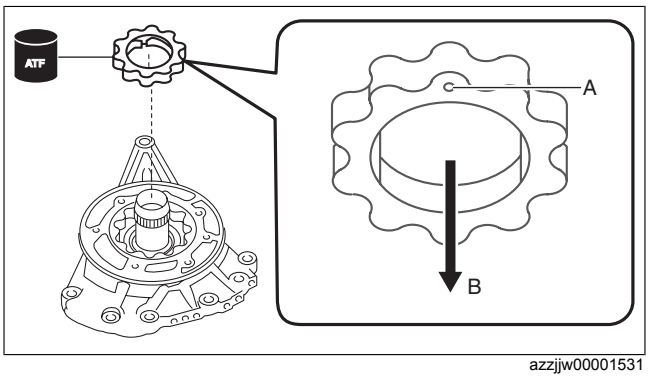

azzjjw00001531

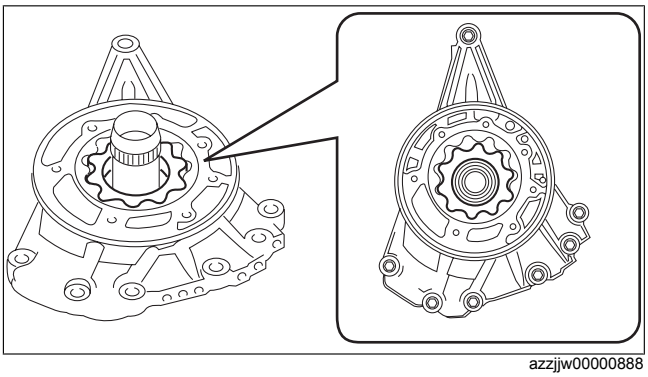


azzjjw00000888

4. Assemble a new oil seal using the following procedure:


Caution
- **If an oil seal is reused it could cause ATF leakage, therefore use a new oil seal.**

(1) Apply ATF (ATF FZ) to the engagement area of the new oil seal and oil pump cover.
(2) Apply ATF (ATF FZ) to the lip of the new oil seal.
(3) Assemble the new oil seal to the position shown in the figure using the SST.

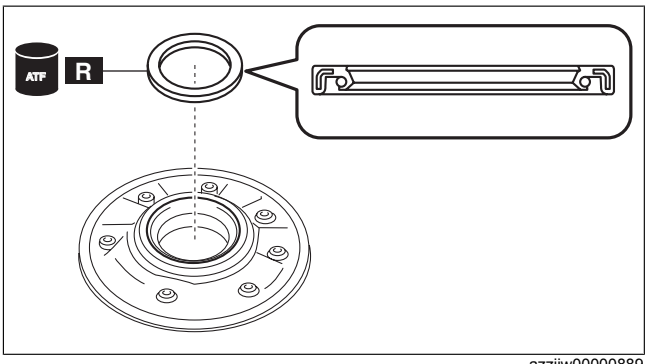


azzjjw00000889

A : 0.00—0.5 mm {0.00—0.01 in}

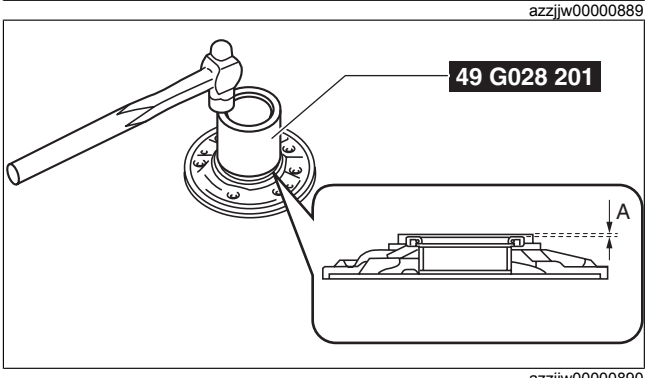


azzjjw00000890

5. Assemble the oil pump cover using the following procedure:

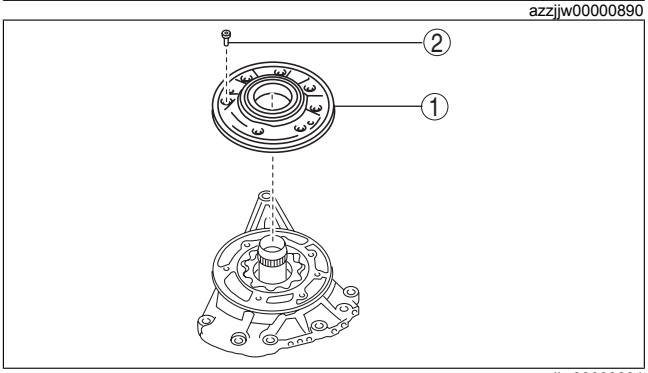


azzjjw00000891

(1) Assemble the oil pump cover.

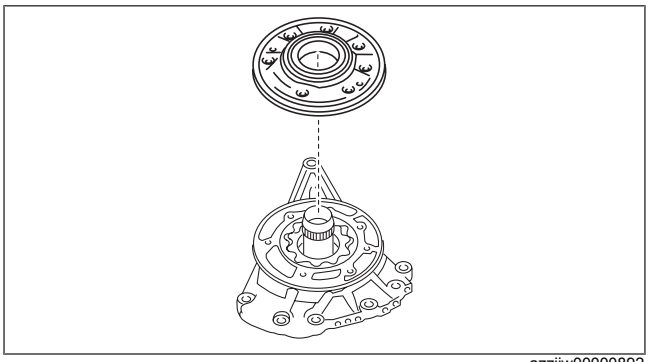

azzjjw00000892

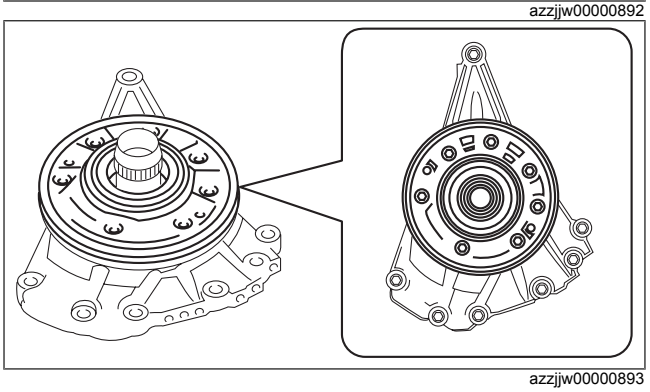


azzjjw00000893

(2) Assemble and tighten the bolts shown in the figure.

Note
- Bolt size: M6 x 1.0 bolt (length approx. 13 mm {0.51 in})

Tightening torque
9—10 N·m {92—101 kgf·cm, 80—88 in·lbf}

1	Oil pump cover
2	7 Bolts (M6 x 1.0 bolt, length approx. 13 mm {0.51 in})

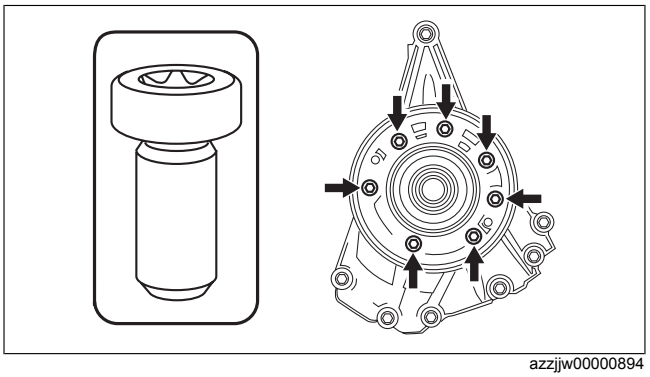

azzjjw00000894