CRANKSHAFT, MAIN BEARING [SKYACTIV-G 1.3, SKYACTIV-G 1.5]

id0110q3000600


Purpose, Function

- The crankshaft converts the reciprocating movement of the piston to a rotational movement via the connecting rod.
- The main bearing forms an oil film on the outer surface of the crankshaft journal to prevent wear due to sliding.

Construction


Crankshaft

- The crankshaft is located inside the cylinder block (crankcase).

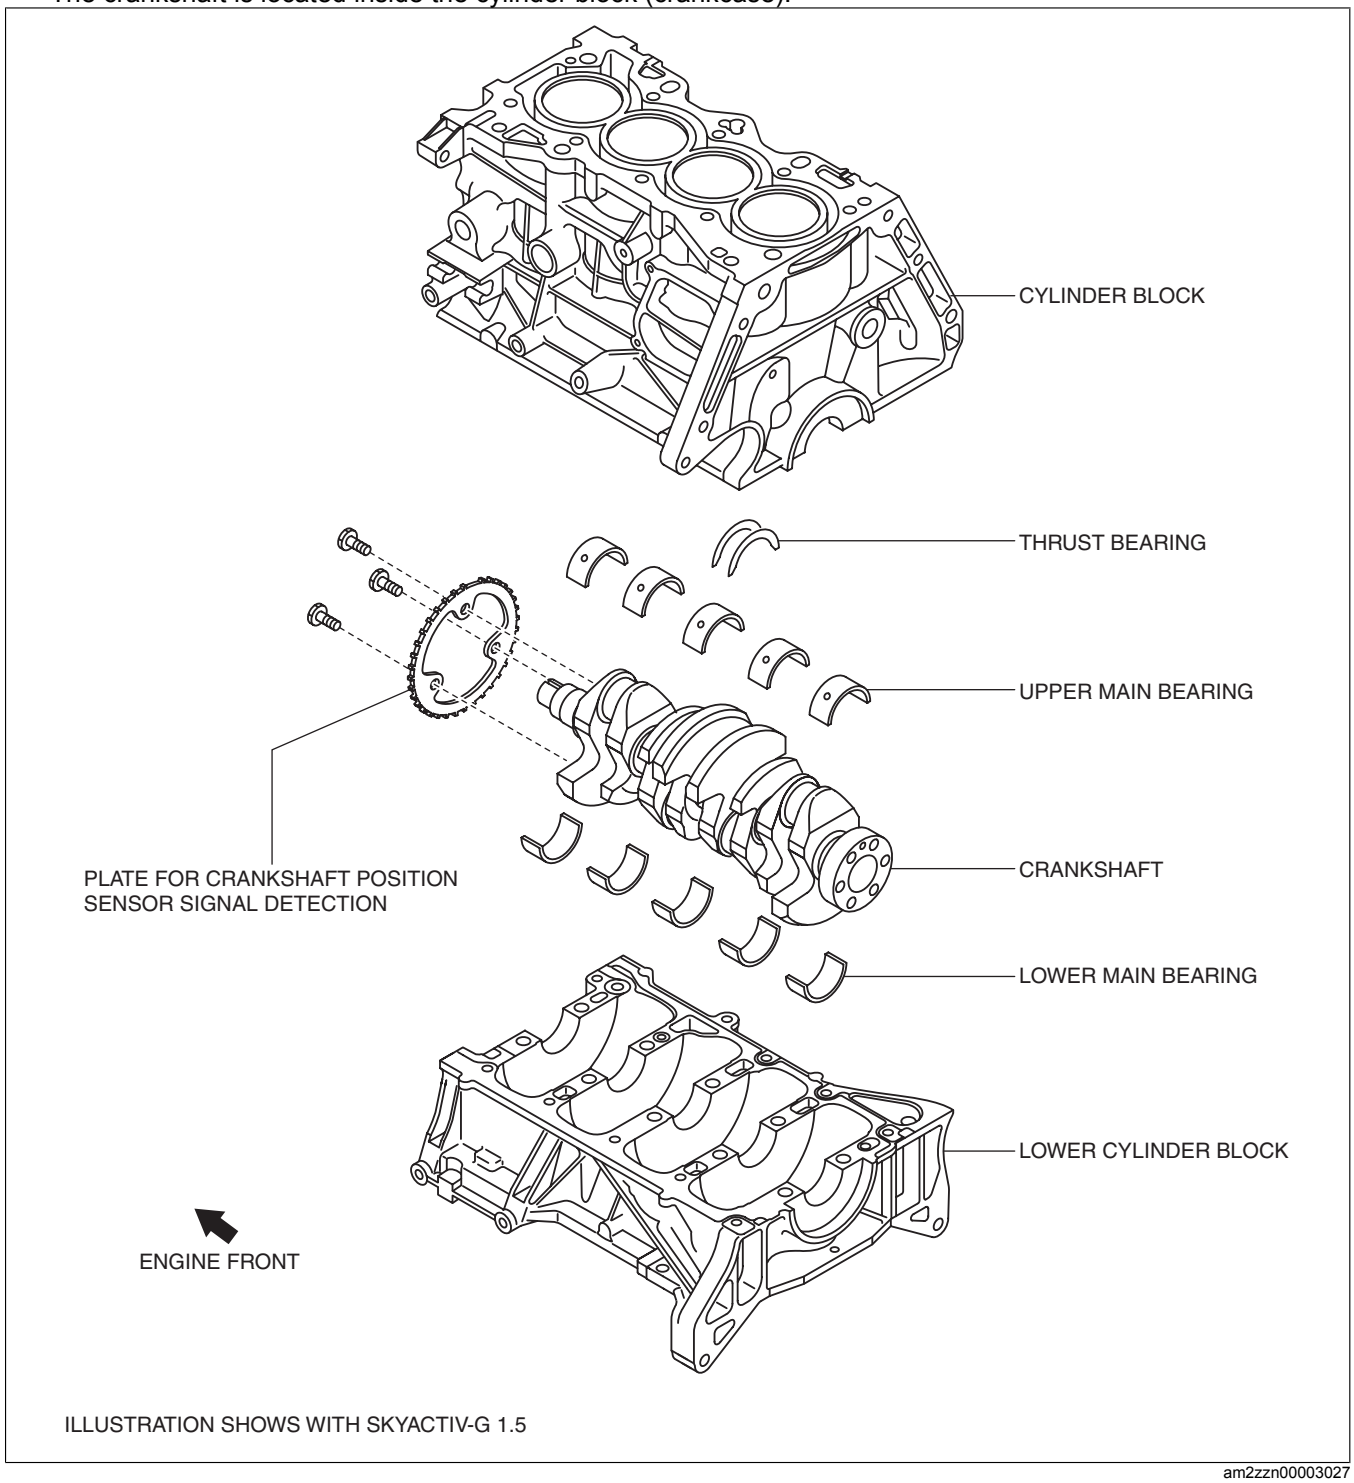

am2zzn00003027


- The crankshaft has a key groove to match timing to the crankshaft pulley.
- The crankshaft has the following parts shown in the figure.

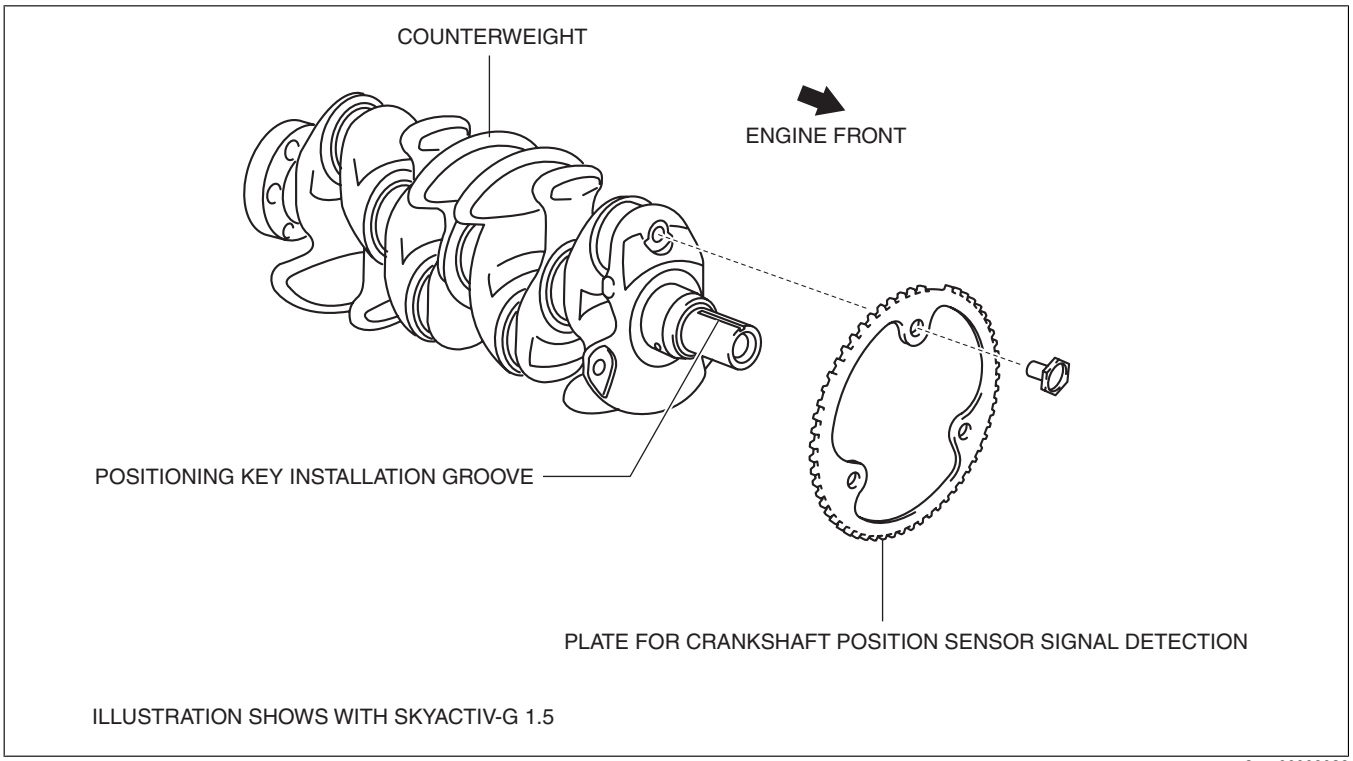

am2zzn00003028


- The sliding resistance and the part mass have been reduced by reducing the crankshaft journal diameter. In addition, rigidity is maintained by optimizing the shaft diameter ratio of the crankshaft journal and crank pin diameters.
- The cast iron crankshaft has five bearings and six counterweights for improved accuracy in the rotational balance. (SKYACTIV-G 1.3)
- The cast iron crankshaft has five bearings and eight counterweights for improved accuracy in the rotational balance. (SKYACTIV-G 1.5)
- Both ends of the fillets of the crankshaft journal and crank pin are roll processed to bear high load.
- The crankshaft has an oil passage for supplying engine oil to the crankshaft journal and crank pin.

SKYACTIV-G 1.3

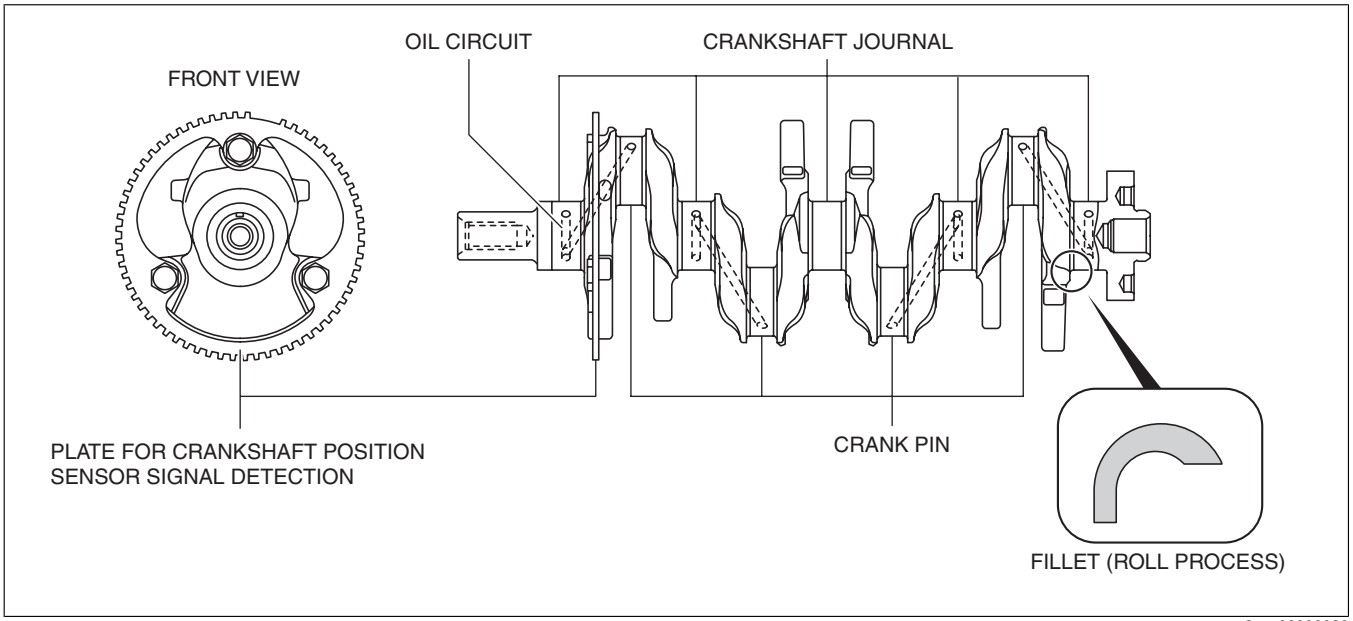

am2zzn00003029

SKYACTIV-G 1.5

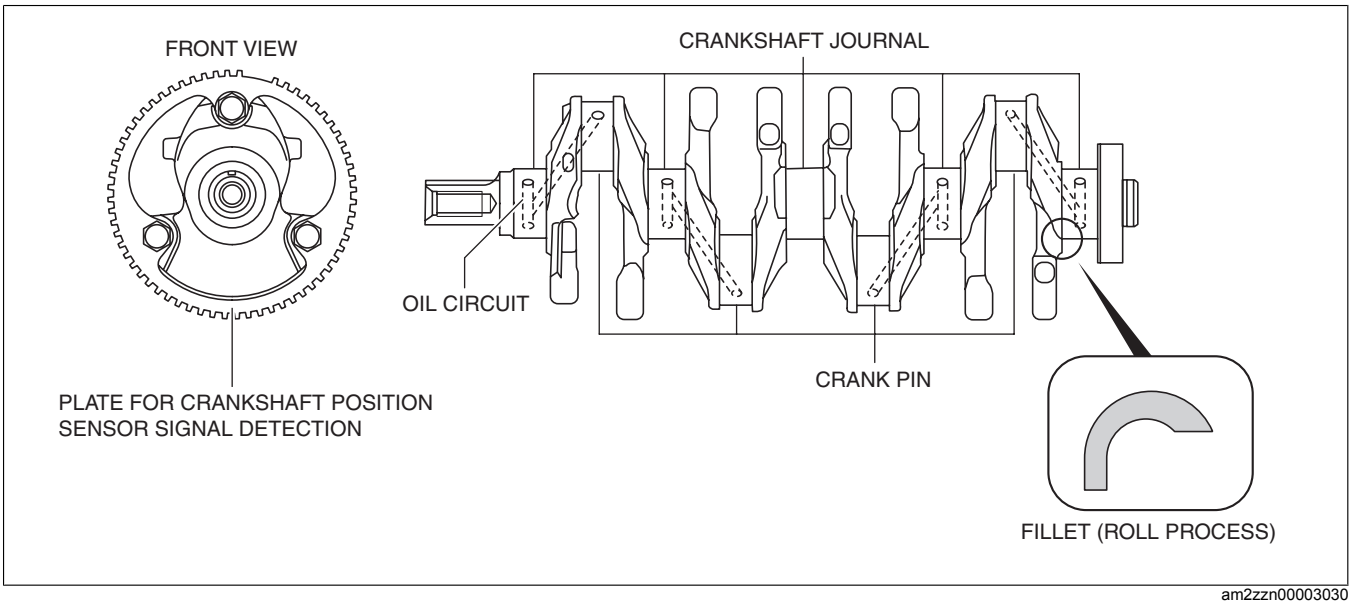

am2zzn00003030

Main bearing

- The main bearing is located on the outer surface of the crankshaft journal.
- The upper main bearing and lower main bearing are made of aluminum alloy.
- The upper main bearing has an oil groove and oil hole.
- Thrust force is suppressed by the thrust bearings on both sides of the No.3 journal.

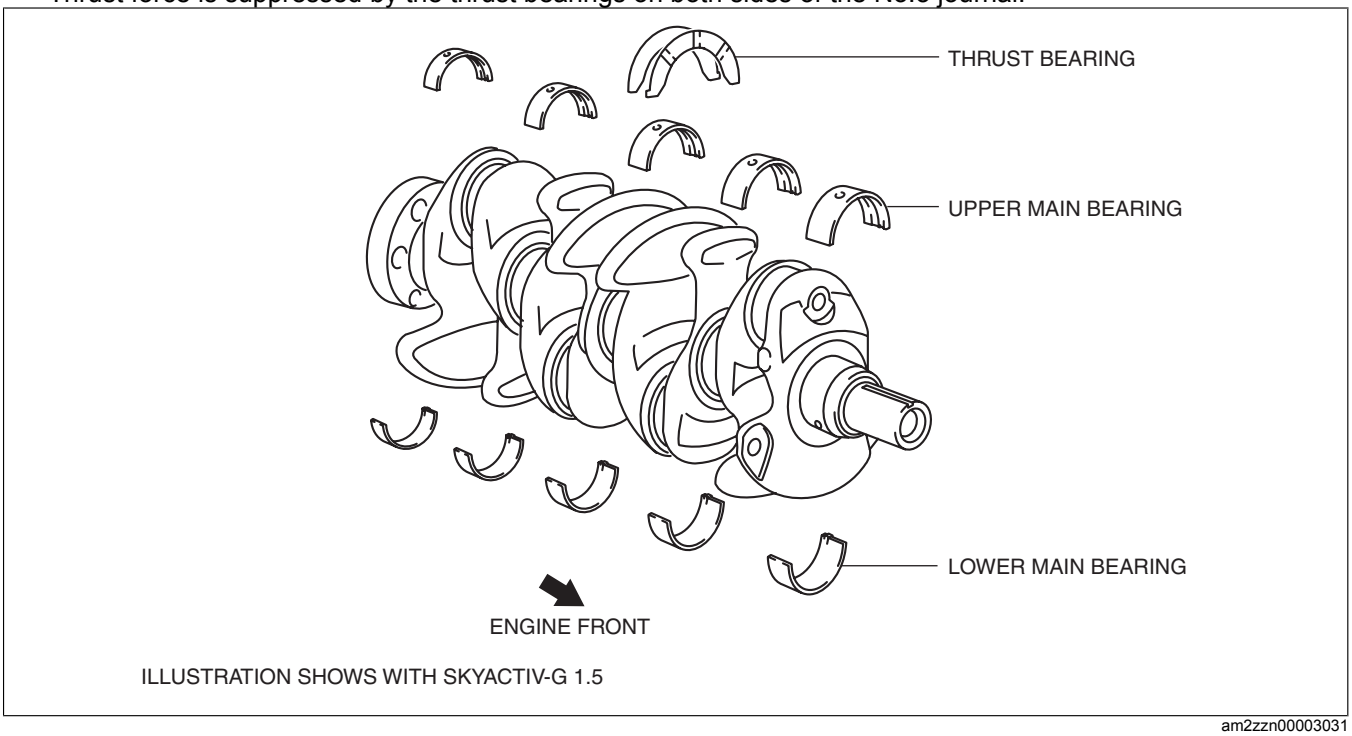


ILLUSTRATION SHOWS WITH SKYACTIV-G 1.5

am2zzn00003031