
FAN CONTROL MODULE INSPECTION [SKYACTIV-D 1.5]

id0112q2801100

1. Connect the M-MDS to the DLC-2.
2. Start and warm up the engine.
3. Monitor the engine coolant temperature with the M-MDS.
4. Measure the voltage at terminal A of the fan control module connector (3 terminals) as shown in the table.
   - If not within the specification, inspect the input signals from the following parts. If all the following parts are normal, replace the fan control module. (See COOLING FAN MOTOR REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)
     — Engine Coolant Temperature (ECT) sensor
     — Refrigerant pressure sensor
     — Battery
     — DSC (HU/CM)

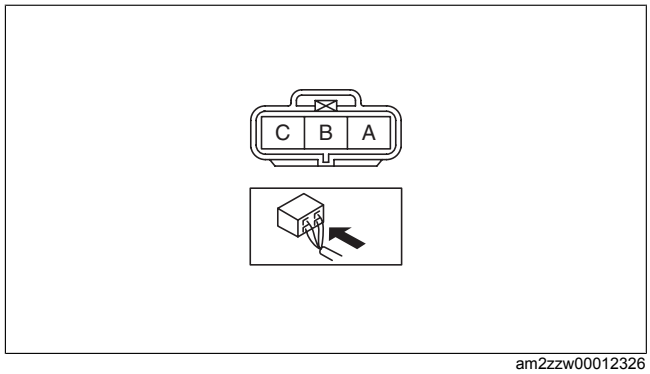

am2zzw00012326

Fan control module [A/C OFF]

Inspection	Result	
Engine coolant temperature (°C {°F})	**PID FAN DUTY (%)**	**Voltage (V)**
100 {212}	30	3.6
100—106 {212—222}	30—75	3.6—9.0
106—108 {223—226}	75	9.0
more than 108 {226}	100	0.4 lower than battery voltage

Fan control module [A/C ON (Engine coolant temperature less than 98 °C {208 °F} and idling)]

Inspection	Result	
Refrigerant pressure (MPa {kgf/cm^2, psi})	**PID FAN DUTY (%)**	**Voltage (V)**
less than 1.0 {10, 145}	30	3.6
1.0—1.7 {11—17, 146—246}	30—75	3.6—9.0
1.7—1.9 {18—19, 247—275}	75	9.0
more than 1.9 {19, 276}	100	0.4 lower than battery voltage