MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR [SKYACTIV-G 1.3, SKYACTIV-G 1.5]


id0140q1006800

Purpose/Function

- Detects the intake air pressure introduced into the cylinder as basic information (mainly used to determine the fuel injection amount) and sends it to the PCM as an intake air pressure signal.


Construction

- Installed on the intake manifold.
- A sealant diaphragm has been adopted as the detecting element for detecting the intake air pressure.

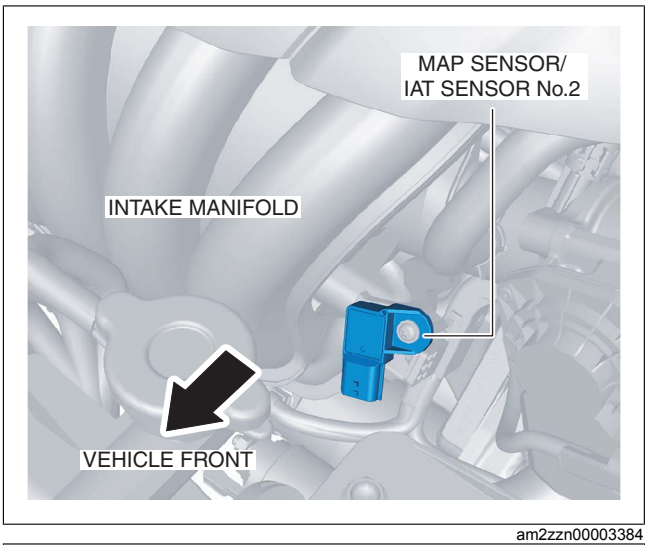

am2zzn00003384


- IAT sensor No.2 is integrated.

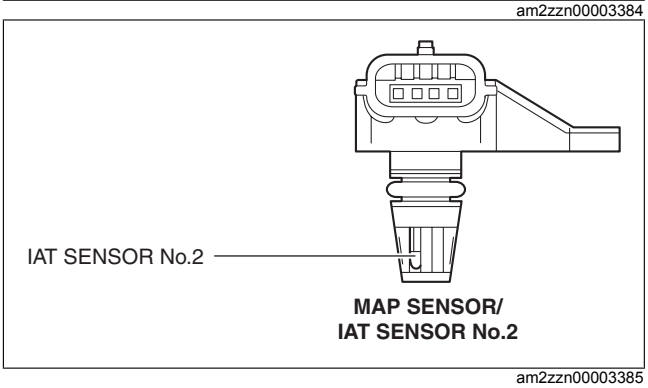

am2zzn00003385


Operation

- Sends the signal, which fluctuates according to the intake air pressure, to the PCM.

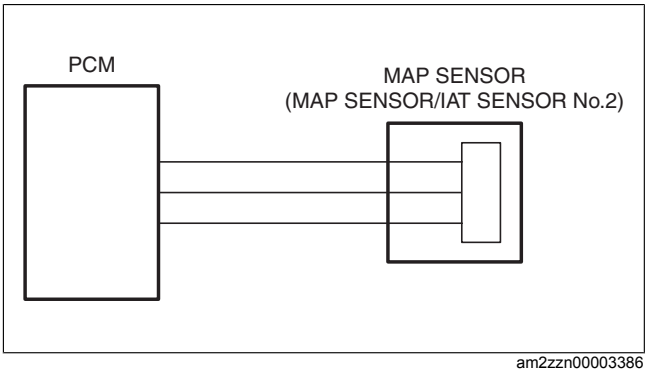

am2zzn00003386

MAP sensor characteristic

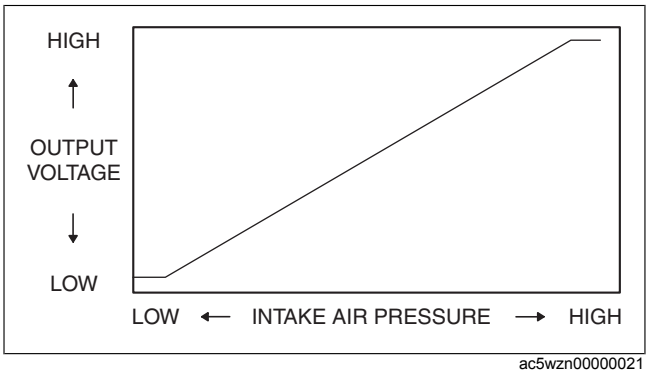

ac5wzn00000021

Fail-safe

DTC No.	Fail-safe function
P0107:00	• Estimates MAP using MAF sensor and engine speed. • Restricts the upper limit of the engine speed. • Inhibits the evaporative purge control.
P0108:00	• Estimates MAP using MAF sensor and engine speed. • Restricts the upper limit of the engine speed. • Inhibits the evaporative purge control.