ACCELERATOR PEDAL POSITION (APP) SENSOR INSPECTION [SKYACTIV-D 1.5]


id0140q2116200

Voltage Inspection

Note
- Because the APP sensor is integrated in the accelerator pedal, replacing the APP sensor includes replacement of the accelerator pedal.

1. Connect the M-MDS to the DLC-2.
2. Switch the ignition ON (engine off).
3. Verify that the APP sensor output voltage (PID: APP1, APP2) increases according to the increase in the accelerator opening angle when the accelerator opening angle is gradually increased. (See ON-BOARD DIAGNOSTIC TEST [SKYACTIV-D 1.5].)
   - If verified, go to the next step.
   - If not as verified, replace the accelerator pedal. (See ACCELERATOR PEDAL REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)
4. Verify that the APP sensor output voltage (PID: APP1, APP2) is within the specification when the accelerator pedal is depressed and not depressed. (See ON-BOARD DIAGNOSTIC TEST [SKYACTIV-D 1.5].)
   - If not as specified, replace the accelerator pedal. (See ACCELERATOR PEDAL REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)

Specification (Reference)

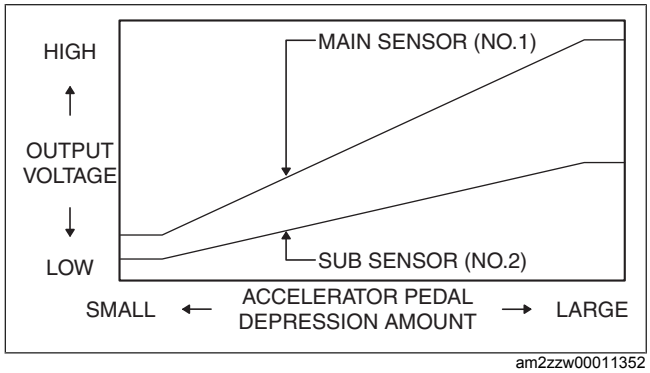

am2zzw00011352