BAROMETRIC PRESSURE (BARO) SENSOR [SKYACTIV-D 1.5]


id0140z5006000

Purpose/Function

- Detects the BARO as basic information for mainly determining the fuel injection amount.
- PCM internally detects atmospheric pressure.

Construction

- Built into the PCM.
- A piezoelectric element has been adopted for detecting the BARO.

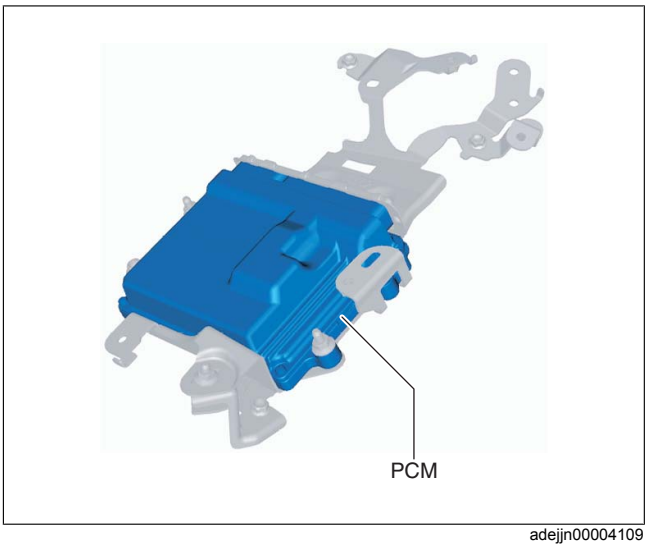


adejjn00004109

Operation

- Sends the signal, which fluctuates according to the BARO, to the PCM.

BARO sensor characteristic

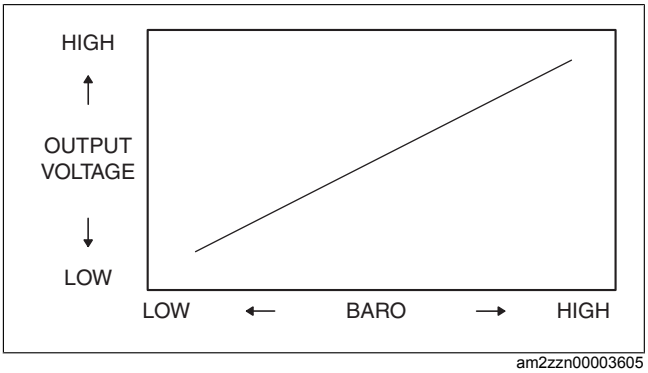

am2zzn00003605

Fail-safe

DTC No.	Fail-safe function
P2228:00	• Limits the engine torque.
P2229:00	• Limits the engine torque. • Limits the upper limit of the engine speed. • Inhibits the EGR control. • Inhibits the auto DPF regeneration control. • Inhibits the compulsory DPF regeneration control. • Inhibits engine-stop by operating the i-stop function. • PCM restricts engine-transaxle integration control. (ATX)