
FRONT SHOCK ABSORBER AND COIL SPRING REMOVAL/INSTALLATION

id021300800200

Caution


- **Performing the following procedures without first removing the front ABS wheel-speed sensor may possibly cause an open circuit in the wiring harness if it is pulled by mistake. Before performing the following procedures, disconnect the front ABS wheel-speed sensor wiring harness (axle side) and fix the wiring harness to an appropriate place where it will not be pulled by mistake while servicing the vehicle.**

1. Remove the front ABS wheel-speed sensor from the steering knuckle.

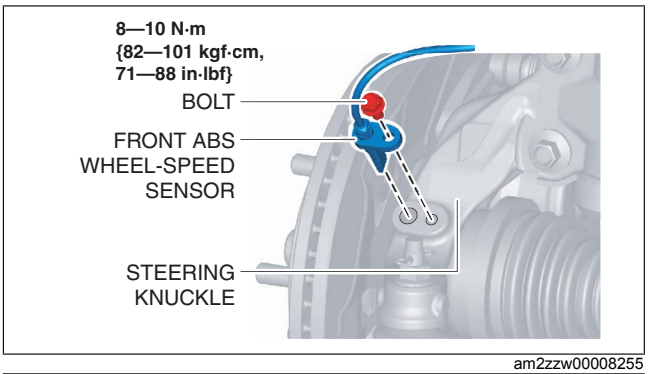


am2zzw00008255

2. Remove the front ABS wheel-speed sensor wiring harness from the front shock absorber and set it aside so that it does not interfere with the servicing.
3. Remove in the order indicated in the table.
4. Install in the reverse order of removal.

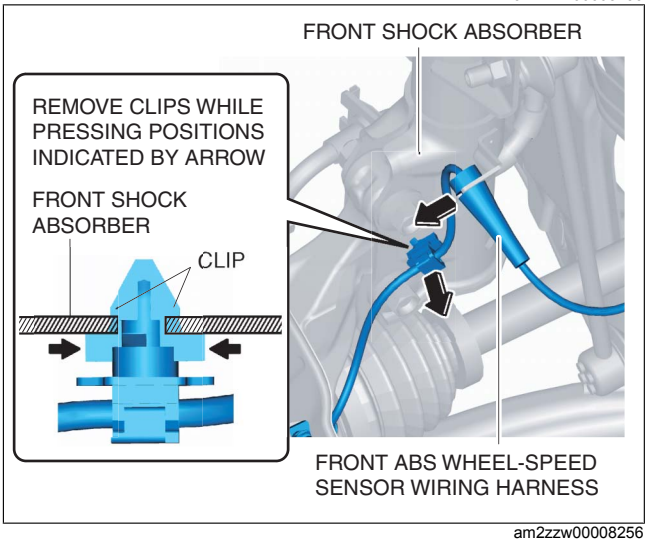


am2zzw00008256

5. Install the front ABS wheel-speed sensor wiring harness as shown in the figure.

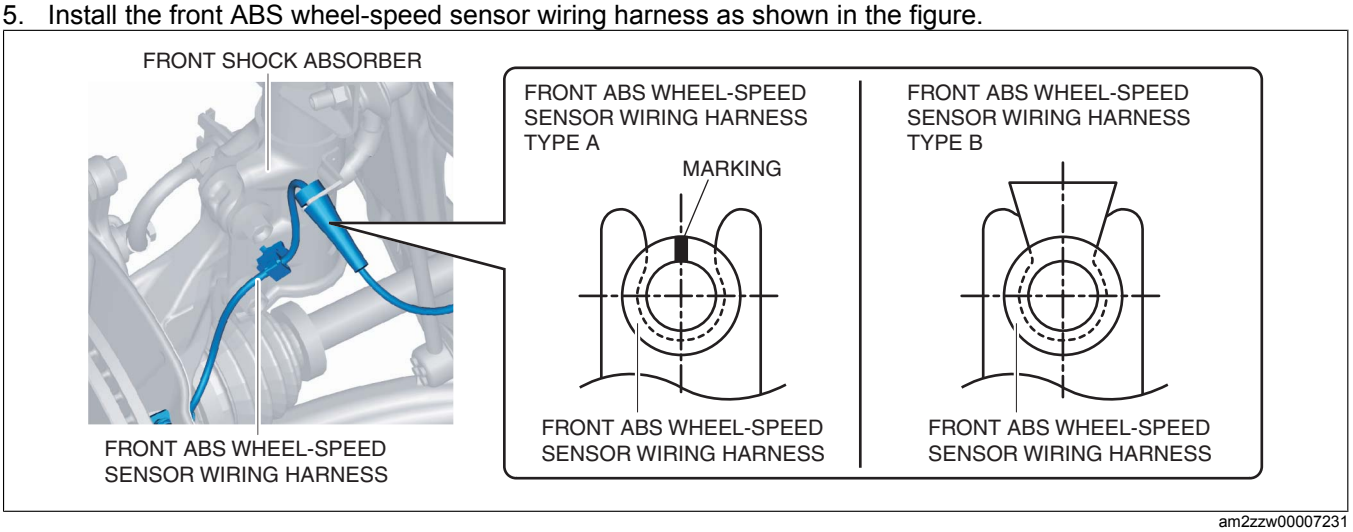

am2zzw00007231

6. Inspect the wheel alignment and adjust it if necessary. (See FRONT WHEEL ALIGNMENT.)

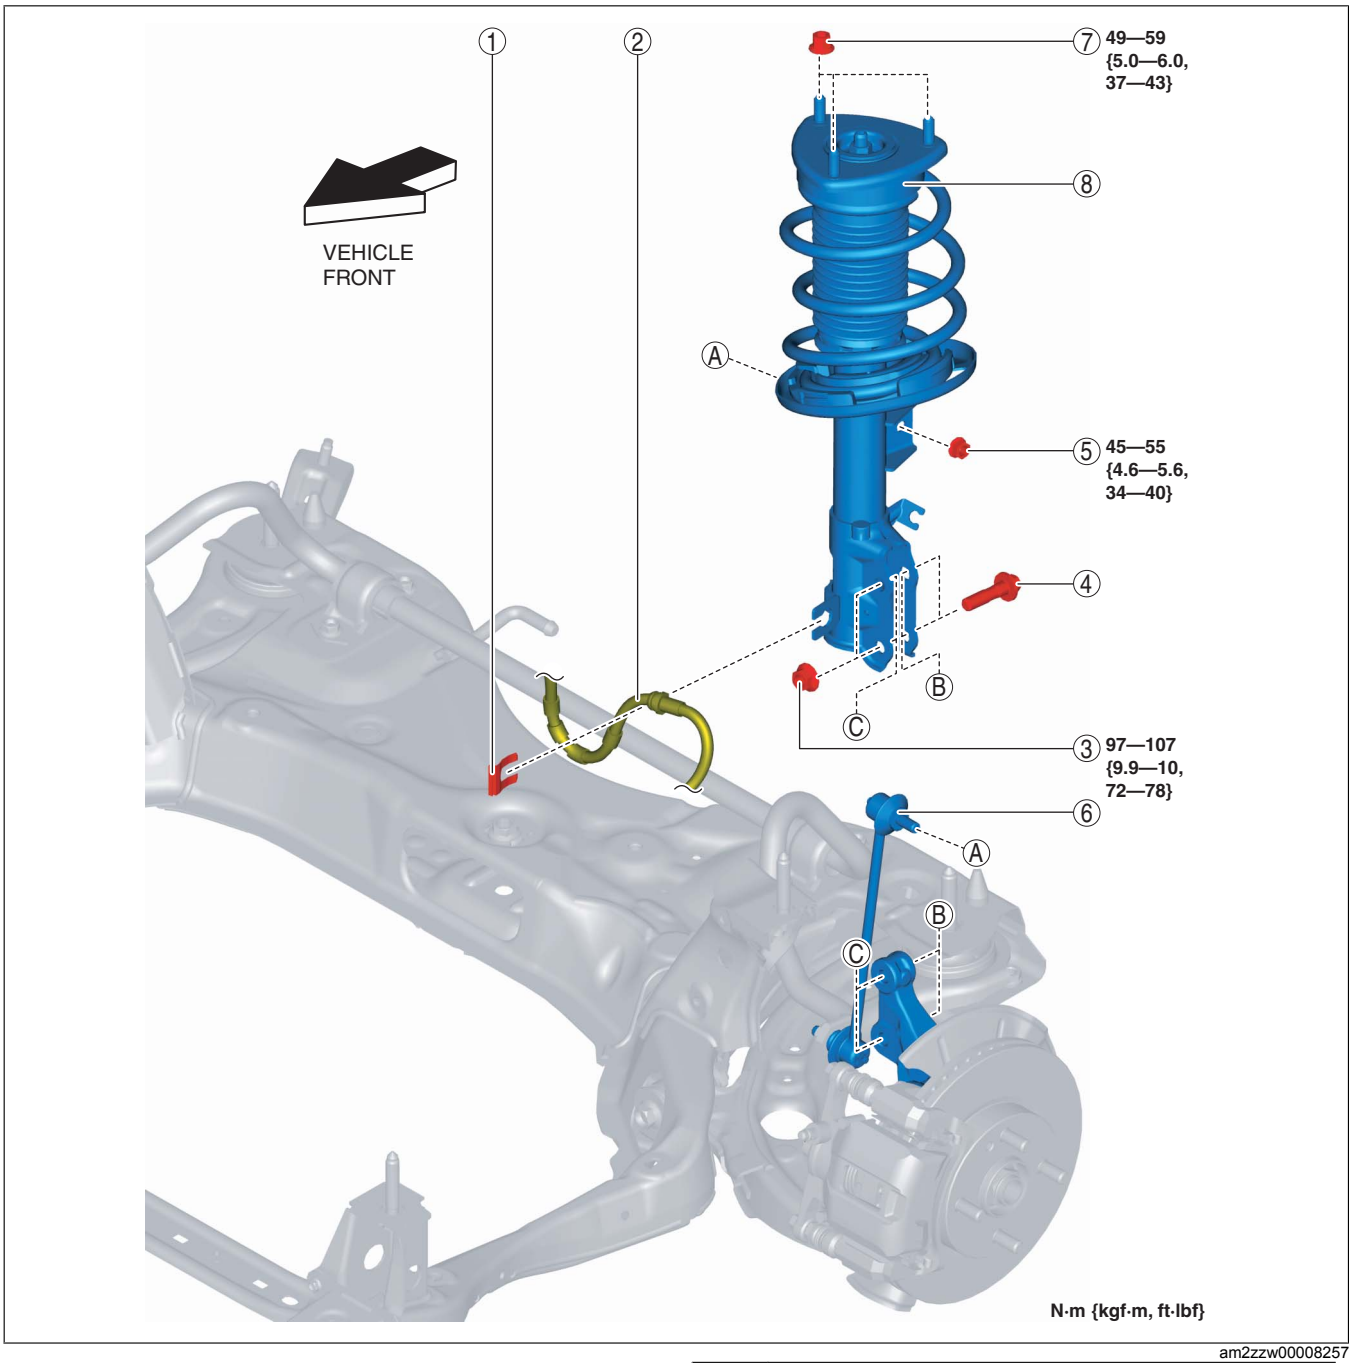

am2zzw00008257

1	Clip (front brake hose)
2	Front brake hose
3	Nut (front shock absorber lower side)
4	Bolt (front shock absorber lower side) (See Bolt (Front Shock Absorber Lower Side) Installation Note.)

5	Nut (front stabilizer control link upper side)
6	Front stabilizer control link
7	Nut (front shock absorber upper side)
8	Front shock absorber and coil spring

Bolt (Front Shock Absorber Lower Side) Installation Note

1. Install the steering knuckle to the front shock absorber, insert the bolts from the direction indicated as follows, then tighten them to the specified torque.
   - — Vehicle right side: Insert the bolts from the vehicle front.
   - — Vehicle left side: Insert the bolts from the vehicle rear.