REAR SHOCK ABSORBER DISASSEMBLY/ASSEMBLY [REAR BRAKE (DRUM)]


id0214c9900000

Vehicle Identification Number (VIN): Except 3MD**

Note
- The rear shock absorber cannot be disassembled.

Vehicle Identification Number (VIN): 3MD**

1. Remove the rear shock absorber. (See REAR SHOCK ABSORBER REMOVAL/INSTALLATION [REAR BRAKE (DRUM)].)
2. Remove in the order indicated in the table.
3. Install in the reverse order of removal.

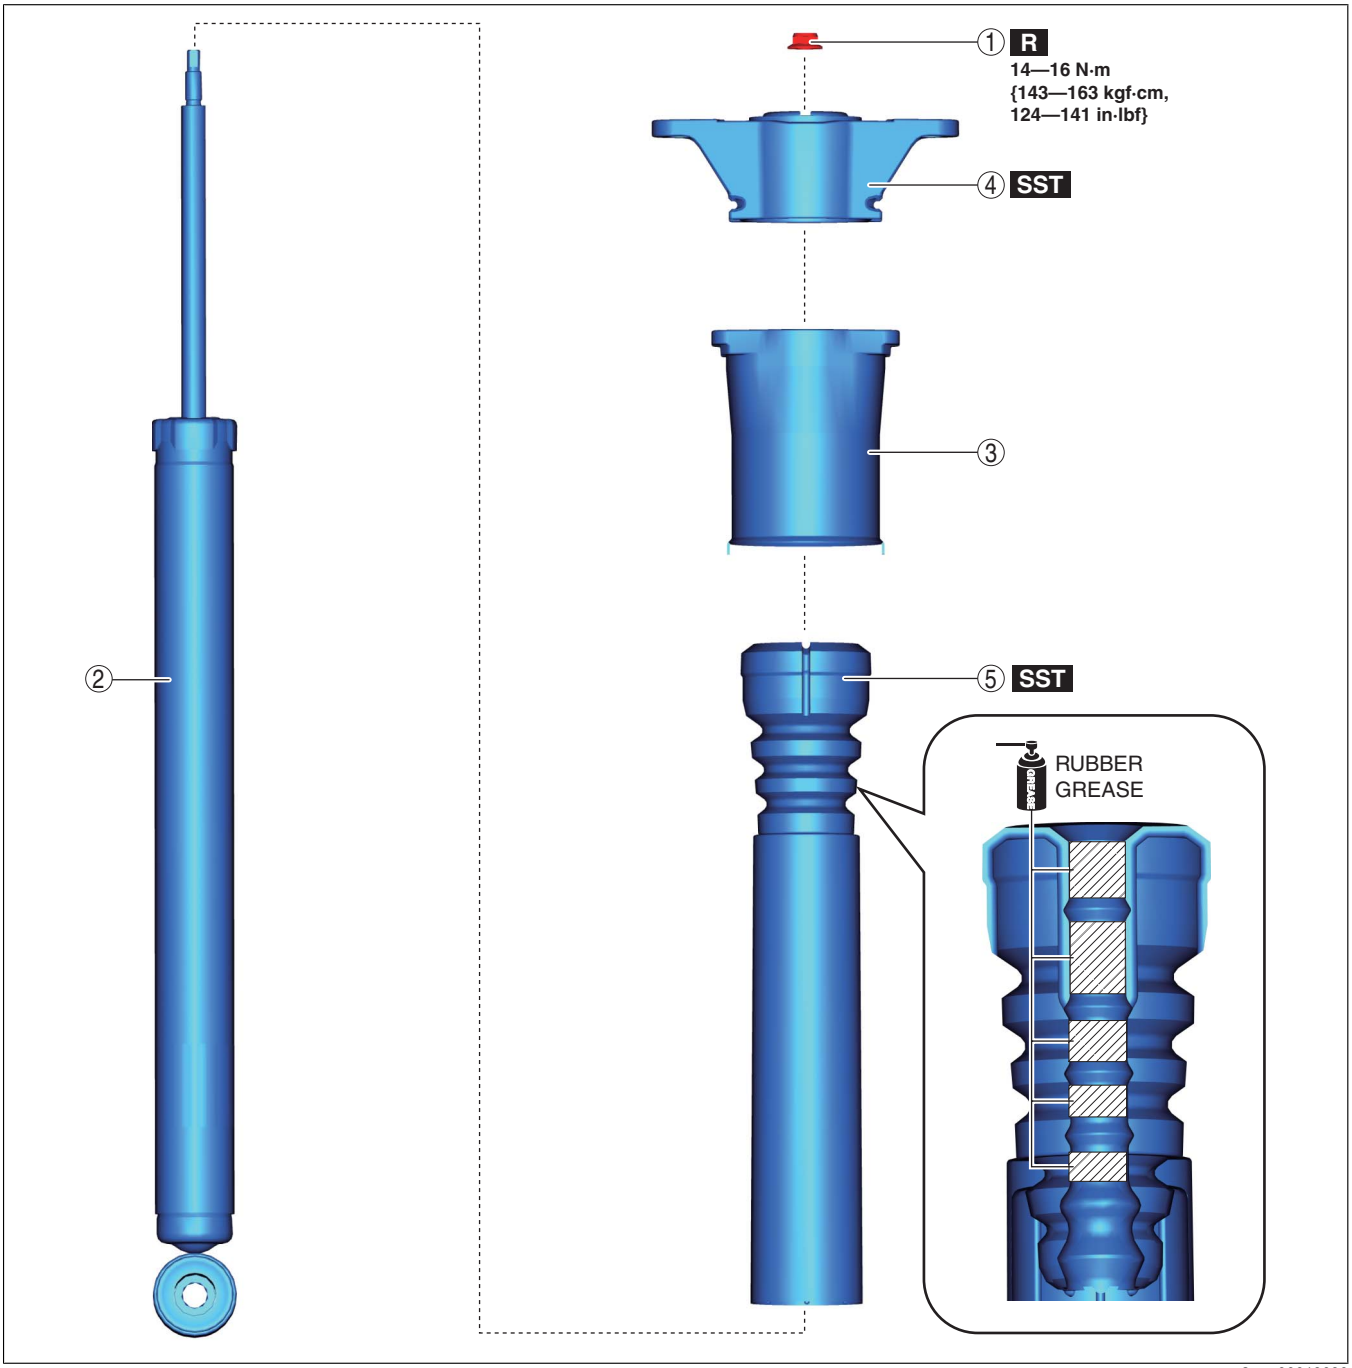

am2zzw00013039


1	Piston rod nut
2	Rear shock absorber
3	Dust boot (See Dust boot assembly note.)
4	Mounting rubber (See Bound stopper component and mounting rubber assembly note.)

5	Bound stopper component (See Bound stopper component and mounting rubber assembly note.)

Bound stopper component and mounting rubber assembly note


1. Wipe off grease on the bound stopper component using a cloth.
2. Apply rubber grease to the inside of the bound stopper component.

   Grease application amount
   0.2—0.5 g {0.008—0.017 oz}

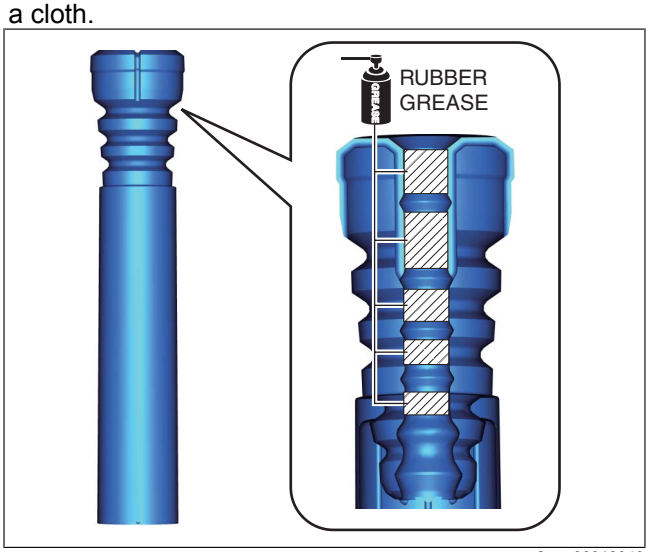

am2zzw00013040

3. Assemble the bound stopper component and the mounting rubber using the SSTs and a press.

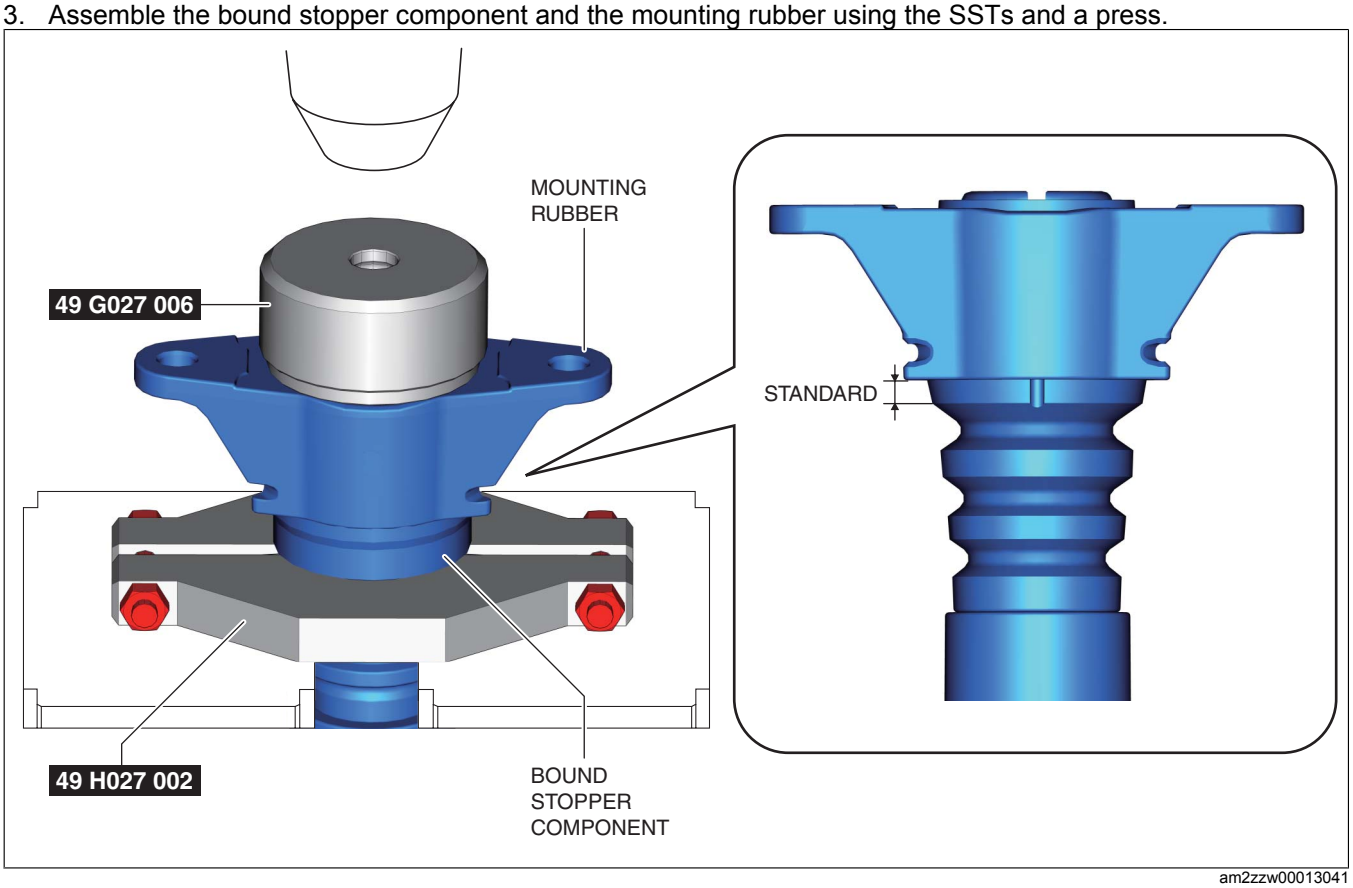


am2zzw00013041

4. Verify that the assembly position of the bound stopper component and the mounting rubber is within the standard.

   Standard
   10.0 mm {0.394 in} or less

Dust boot assembly note

1. Assemble the dust boot to position A shown in the figure.

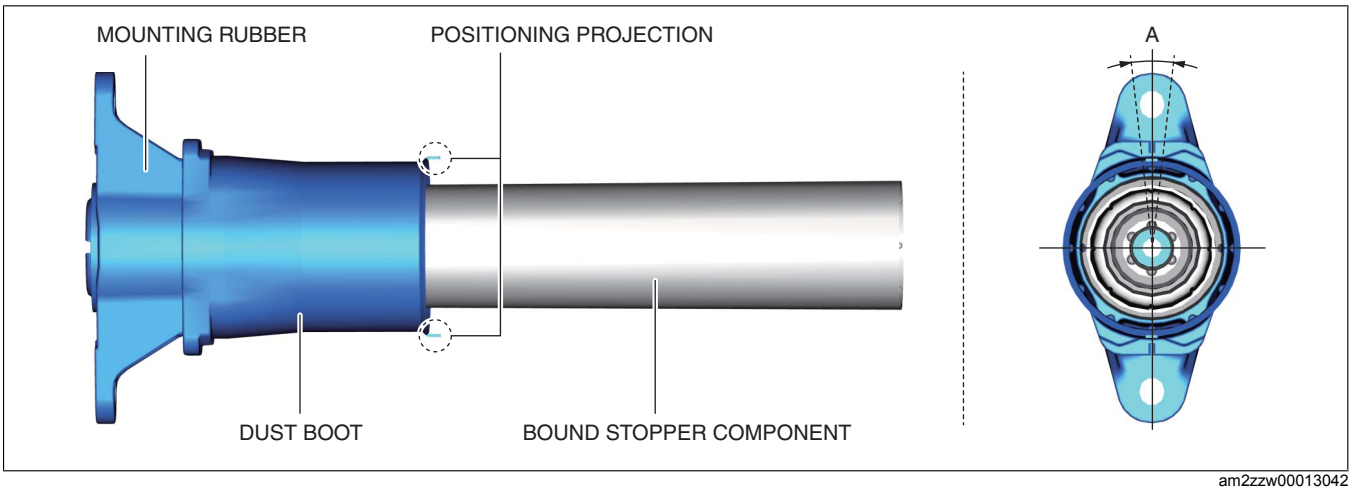

am2zzw00013042

A:0°±6.5°