

DISC PAD (FRONT) REPLACEMENT

id041100800700

1. Remove the clip from the front shock absorber.
2. Remove the front brake hose from the front shock absorber.
3. Remove in the order indicated in the table.
4. Install in the reverse order of removal.
5. After installation, depress the brake pedal a few times, rotate the wheel by hand, and verify that the brake does not drag.

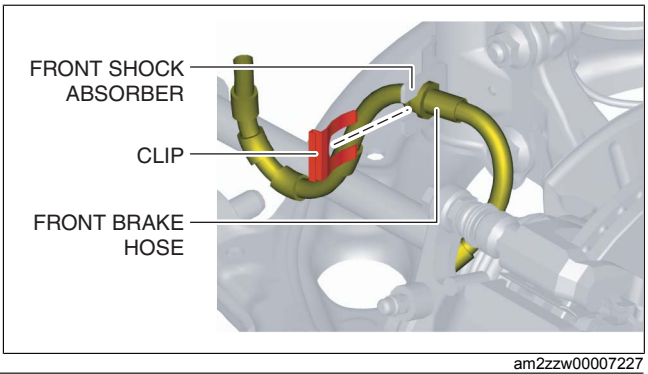

am2zzw00007227

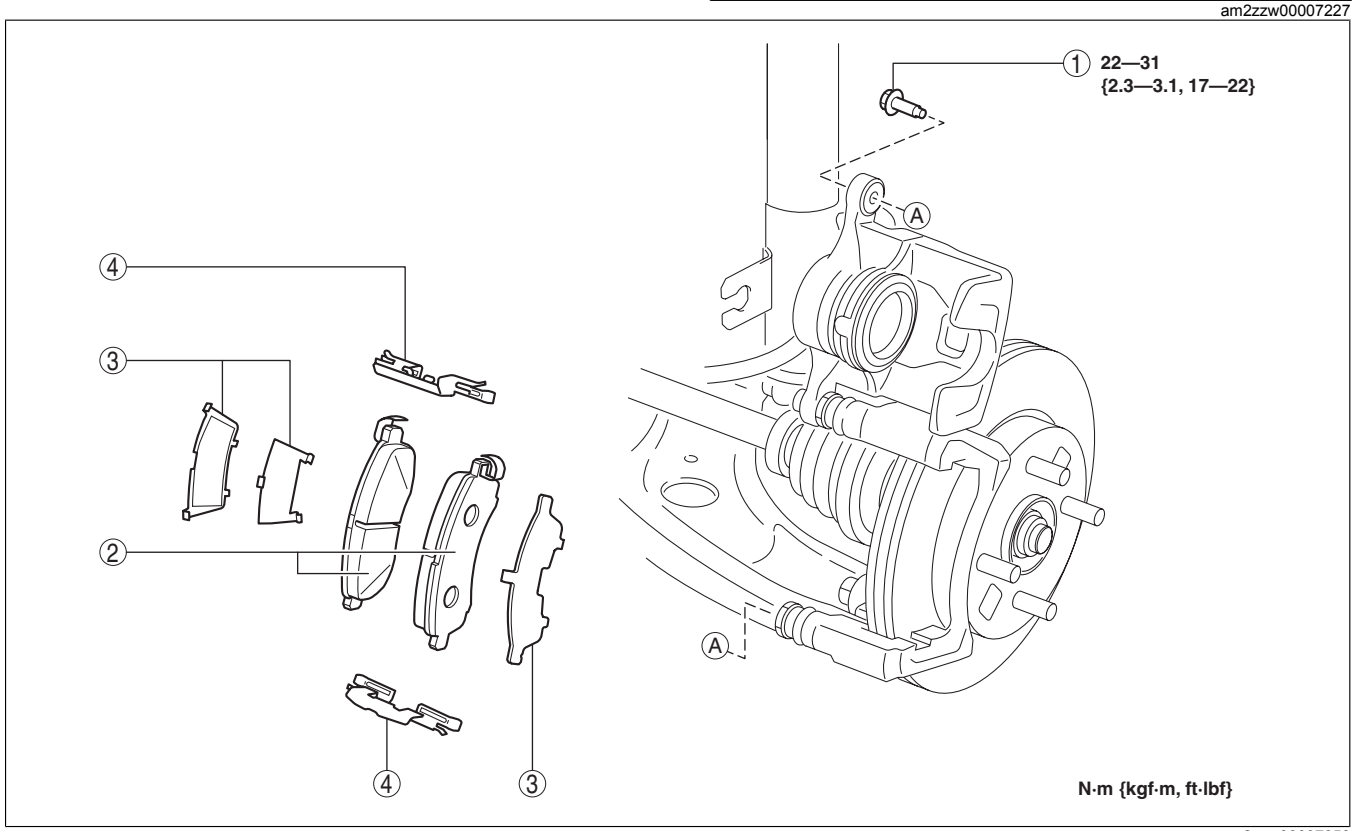


am2zzw00007353

1	Caliper installation bolt (See Caliper Installation Bolt Removal Note.) (See Disc Pad Installation Note.)
2	Disc pad (See Caliper Installation Bolt Removal Note.)
3	Shim
4	Guide plate

Caliper Installation Bolt Removal Note

1. Remove the caliper installation bolt shown in the figure and lift up the caliper.

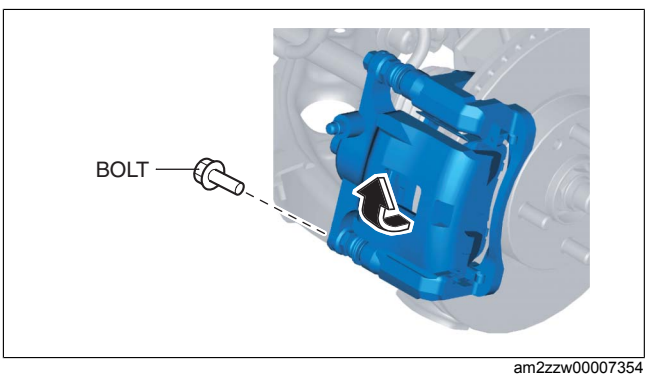


am2zzw00007354

Disc Pad Installation Note

1. Clean the exposed area of the piston.

2. Push the piston in using the commercially available disc brake expand tool.
3. Install the disc pads to the mounting support.

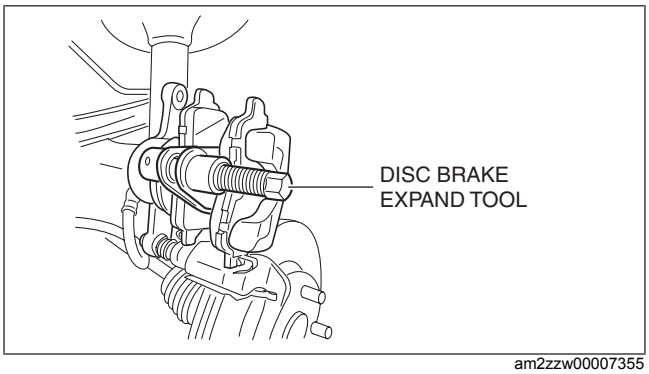

am2zzw00007355

Caliper Installation Bolt Installation Note

1. Return the caliper to the original position and install the caliper installation bolt.