
MASTER CYLINDER REMOVAL/INSTALLATION [R.H.D.]

id041100801352

Caution


- **When removing/installing the master cylinder, be careful not to spill brake fluid on the power brake unit vacuum sensor. Otherwise, brake fluid may get on the power brake unit vacuum sensor and damage it.**

1. For SKYACTIV-D 1.5, perform the following procedure:
   (1) Remove the windshield wiper arm and blade. (See WINDSHIELD WIPER ARM AND BLADE REMOVAL/INSTALLATION.)
   (2) Remove the cowl grille. (See COWL GRILLE REMOVAL/INSTALLATION.)
   (3) Remove the windshield wiper motor and link. (See WINDSHIELD WIPER MOTOR AND LINK REMOVAL/INSTALLATION.)
   (4) Remove the cowl panel. (See COWL PANEL REMOVAL/INSTALLATION.)
   (5) Remove the insulator.

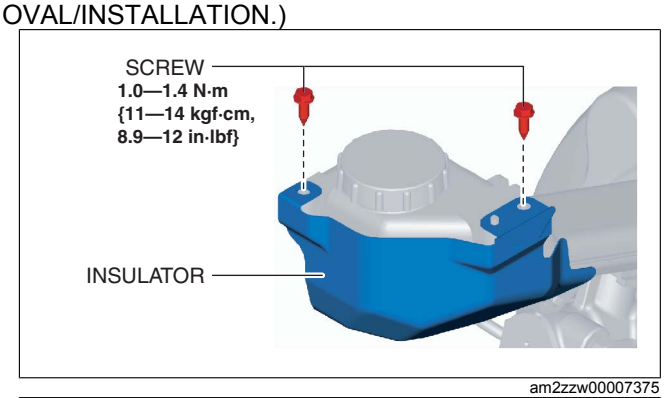

am2zzw00007375

2. Remove the insulator.

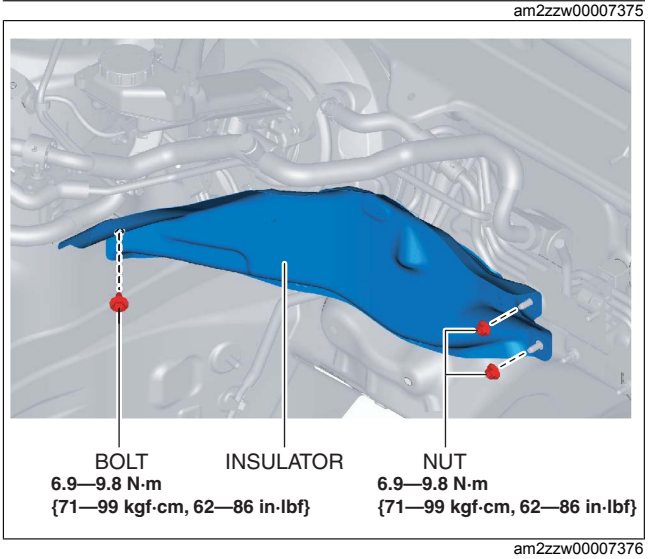


am2zzw00007376


3. For SKYACTIV-G 1.3 or SKYACTIV-G 1.5, perform the following procedure:
   (1) Remove the plug hole plate. (See PLUG HOLE PLATE REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)

(2) Remove the cooler hose (LO) installation nut. (See REFRIGERANT LINE REMOVAL/ INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
(3) Set the cooler hose (LO) out of the way.

4. Remove in the order indicated in the table.
5. Install in the reverse order of removal.
6. After installation, add brake fluid, bleed the air, and inspect for fluid leakage. (See BRAKE FLUID AIR BLEEDING.)

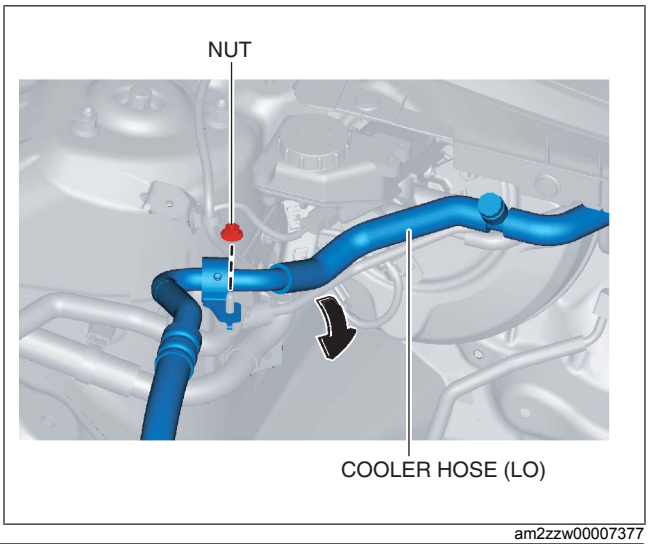

am2zzw00007377

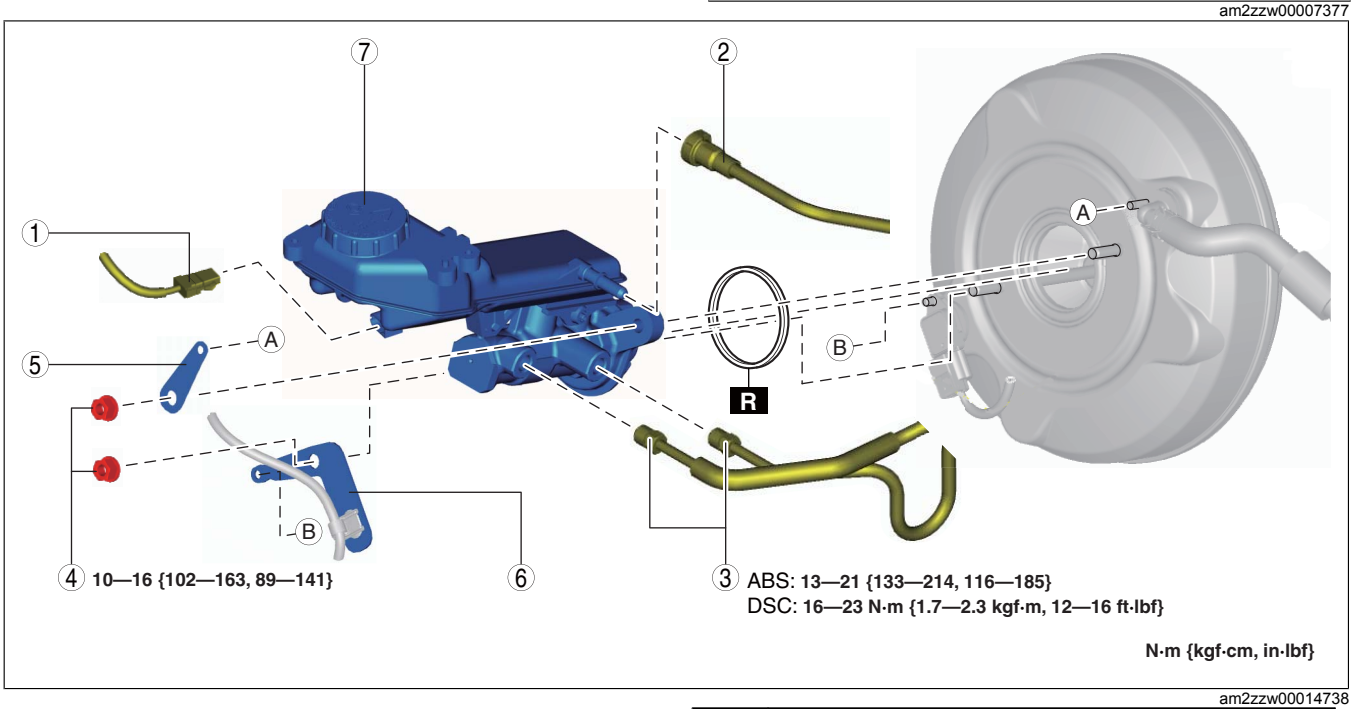


am2zzw00014738

1	Brake fluid level sensor connector
2	Clutch reserve hose (MTX) (See Clutch Reserve Hose Removal Note (MTX).) (See Clutch Reserve Hose Installation Note (MTX).)
3	Brake pipe

4	Nut
5	Bracket
6	Bracket
7	Master cylinder

Clutch Reserve Hose Removal Note (MTX)

1. Disconnect the clutch reserve hose in the order shown in the figure.

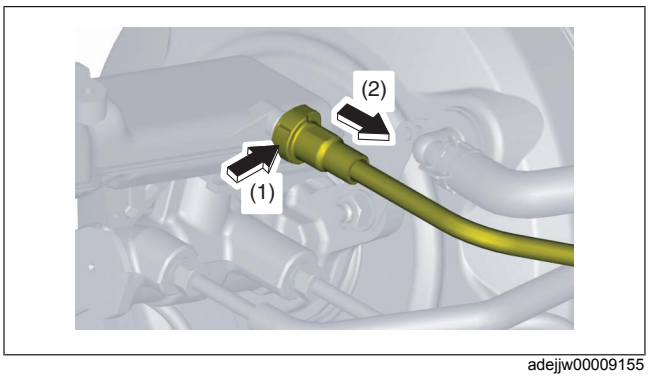

adejjw00009155

Clutch Reserve Hose Installation Note (MTX)

1. Insert the clutch reserve hose into the master cylinder.

2. Pull the clutch reserve hose to verify that it does not come off, and reinsert it completely.