PARKING BRAKE LEVER INSPECTION


id041200800900

Stroke Inspection

1. Pump the brake pedal a few times.
2. Pull the parking brake lever two to three times.
3. Inspect the parking brake stroke by slowly pulling at point A **50 mm {2.0 in}** from the end of the parking brake lever with a force of **98 N {10 kgf, 22 lbf}** and counting the number of notches (clicking sound).

   Parking brake lever stroke when pulled at 98 N {10 kgf, 22 lbf}
   2—3 notches

   - If not within the specification, adjust the parking brake lever. (See PARKING BRAKE LEVER ADJUSTMENT.)

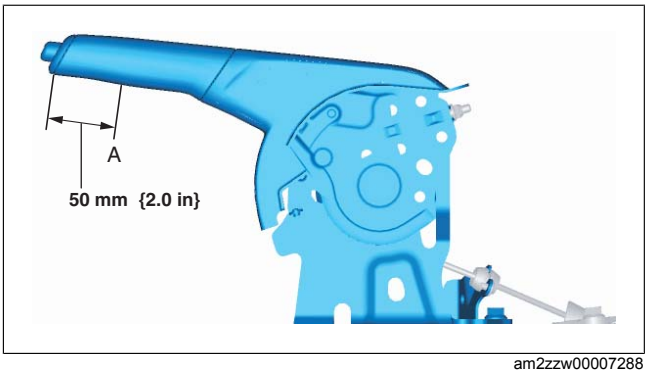

am2zzw00007288