

FRONT PARKING BRAKE CABLE REMOVAL/INSTALLATION

id041200801200

1. Remove the following parts:
   (1) Center console tray (See CENTER CONSOLE TRAY REMOVAL/INSTALLATION.)
   (2) Shift bezel (See SHIFT BEZEL REMOVAL/INSTALLATION.)
   (3) Upper panel (See UPPER PANEL REMOVAL/INSTALLATION.)
2. Remove the adjusting nut from the parking brake lever. (See PARKING BRAKE LEVER REMOVAL/INSTALLATION.)
3. Remove the insulator (middle No.2) installation nuts and set them aside in front of the vehicle. (See EXHAUST SYSTEM REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See EXHAUST SYSTEM REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)
4. Remove the front parking brake cable from the equalizer.
5. Remove in the order indicated in the table.
6. Install in the reverse order of removal.
7. After installation, inspect the parking brake lever stroke. (See PARKING BRAKE LEVER INSPECTION.)

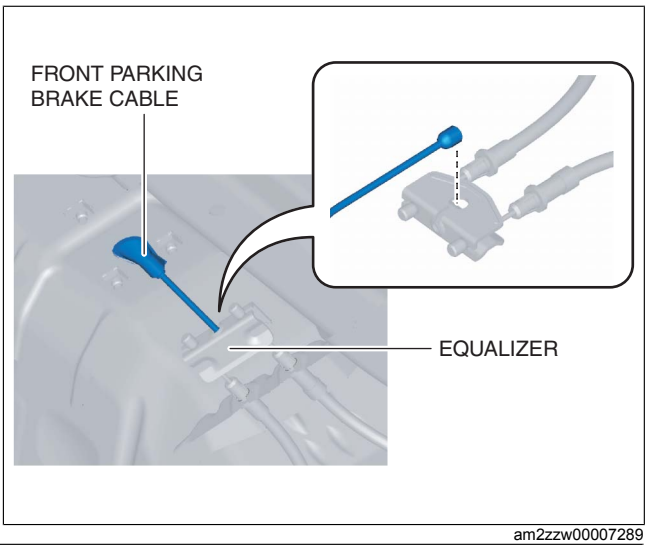

am2zzw00007289

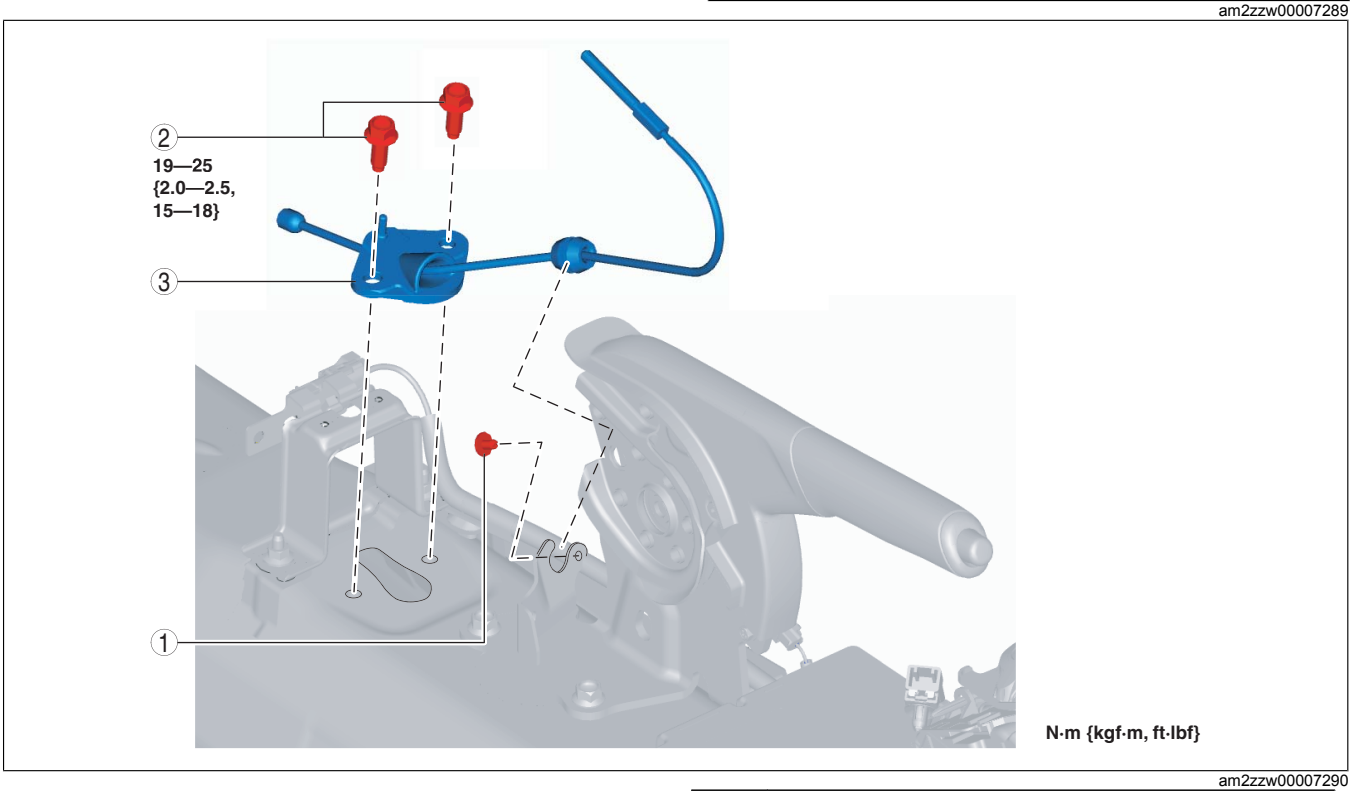

am2zzw00007290

1	Clip
2	Bolt
3	Front parking brake cable