
STEERING GEAR AND LINKAGE ASSEMBLY

id061300802100


1. Assemble in the order shown in the figure.
2. Install the steering gear and linkage. (See STEERING GEAR AND LINKAGE REMOVAL/INSTALLATION.)

L.H.D.

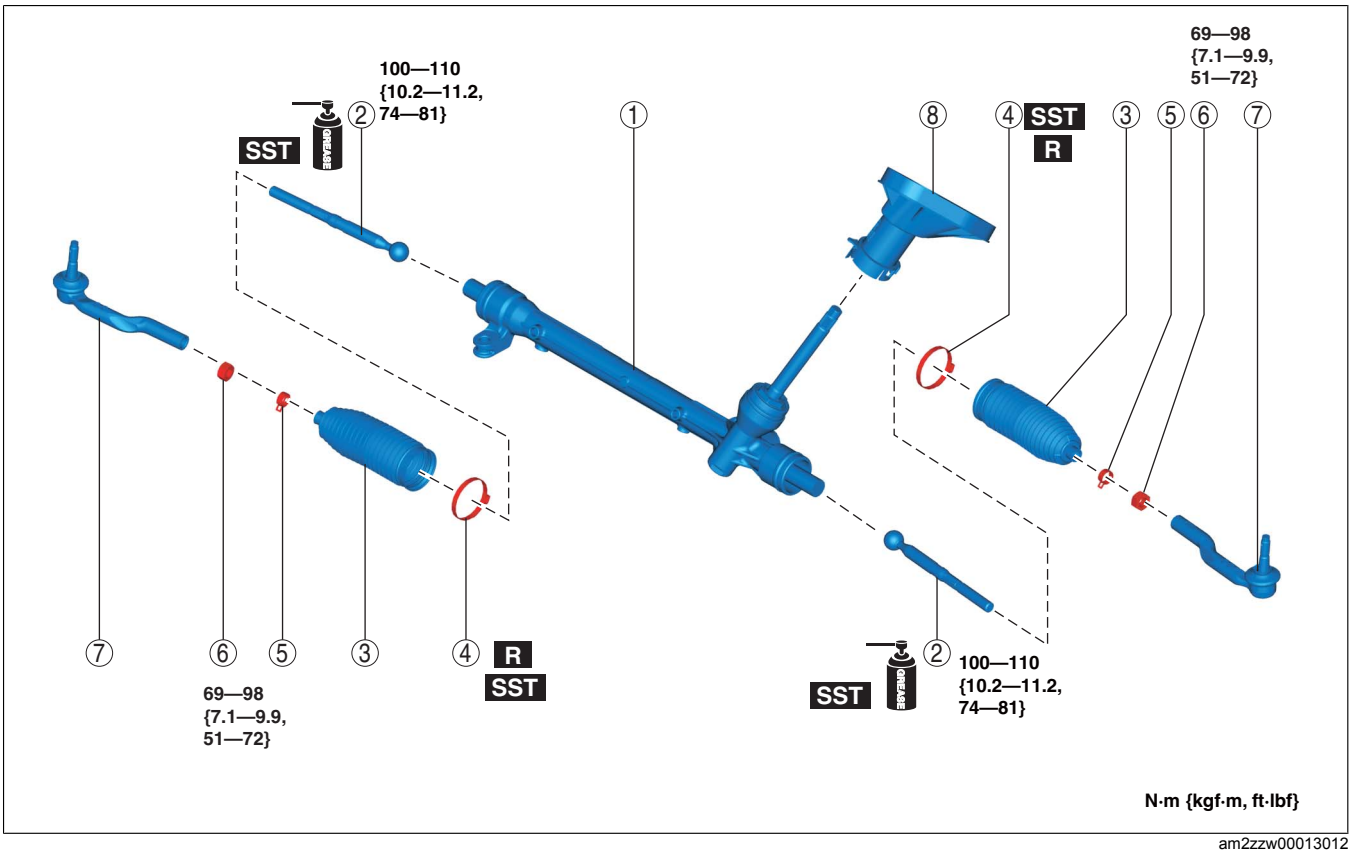

am2zzw00013012

R.H.D.

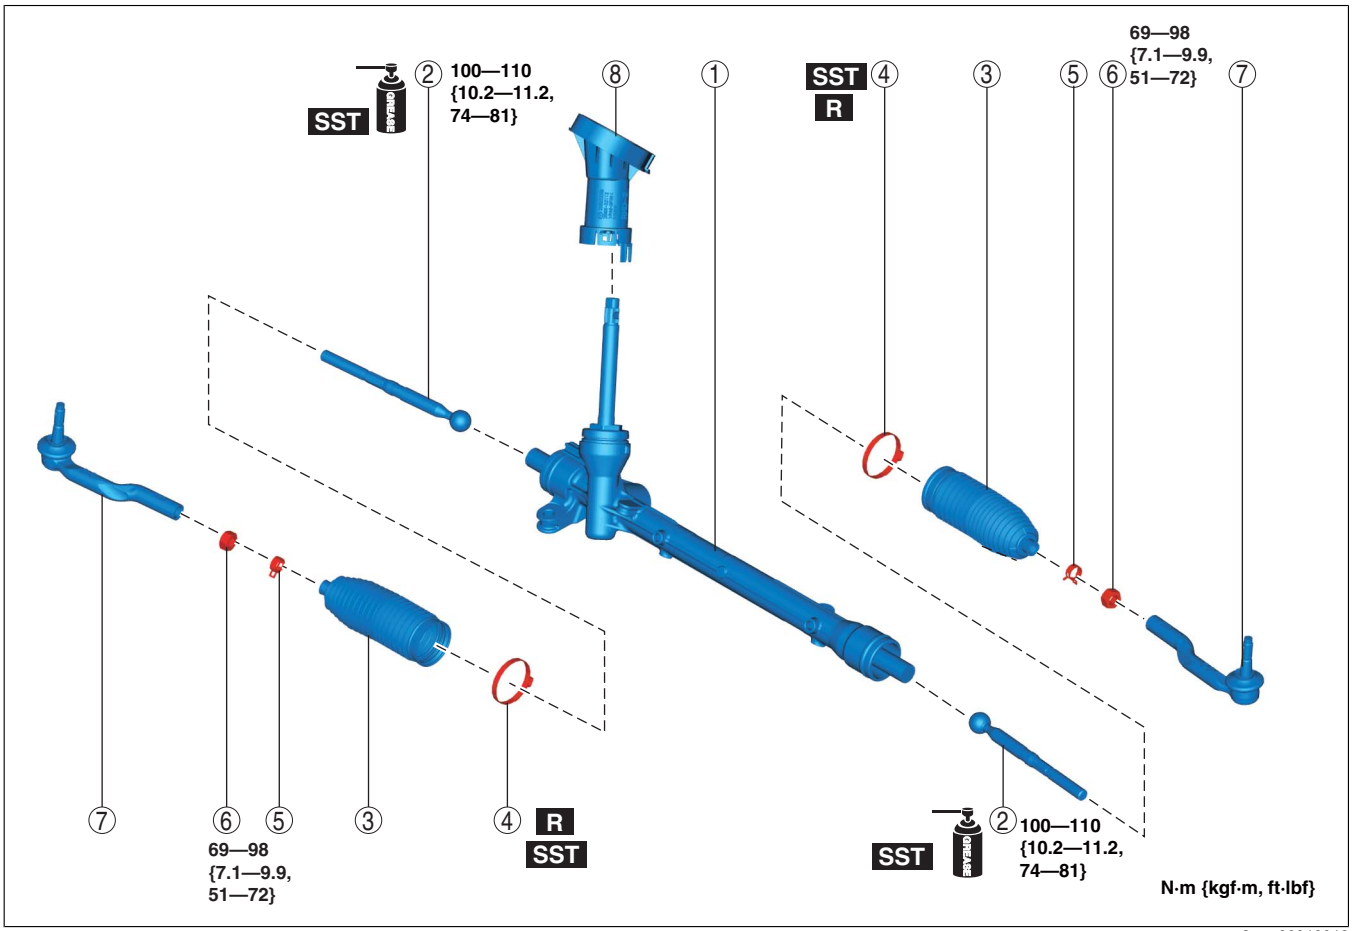


am2zzw00013013

1	Steering gear
2	Tie Rod (See Tie Rod Assembly Note.)
3	Boot
4	Boot band (See Boot Band Assembly Note .)

5	Boot clamp
6	Locknut
7	Tie-rod end (See Tie-rod End Assembly Note.)
8	Dust cover

Tie Rod Assembly Note


1. Install the **SST** to the torque wrench as shown in the figure, set it on the tie rod, and measure dimensions A and L shown in the figure.

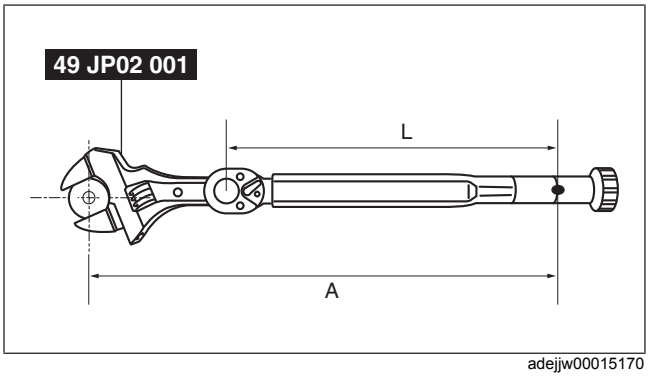

adejjw00015170

2. Tighten the tie rod after calculating the tightening torque using the following formula.


   Tightening torque
   100—110 N·m {10.2—11.2 kgf·m, 74—81 ft·lbf}
   Calculation formula
   T×(L/A)
   T:Tightening torque (100—110 N·m {10.2—11.2 kgf·m, 74—81 ft·lbf})
   L:Torque wrench effective length
   A:Length from center of tie rod to grip

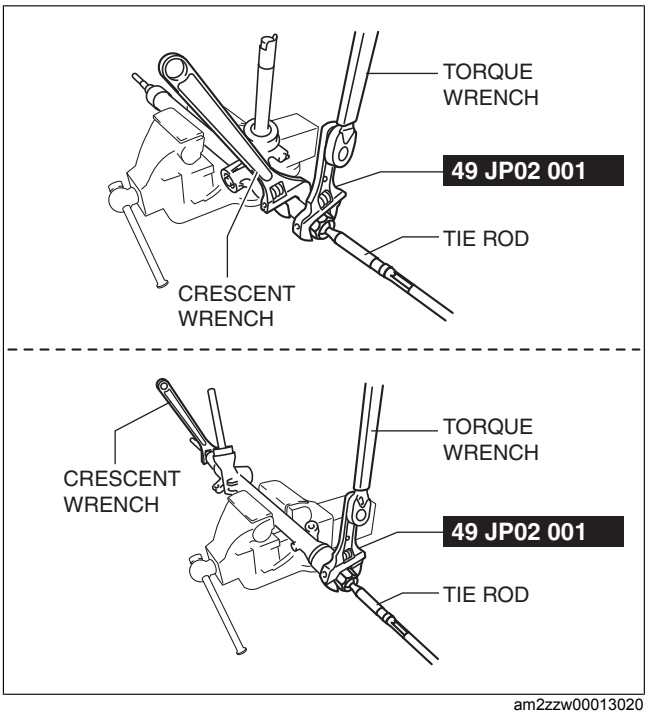

am2zzw00013020

Boot Band Assembly Note
1. Assemble the boot band to the boot.
2. Crimp the boot band using the **SST**.
3. Verify that the crimping clearance A is within the specification.
   - If crimping clearance A exceeds the specification, reduce **SST** clearance, and crimp the boot band again.
   - If crimping clearance A is less than the specification, increase **SST** clearance, and crimp a new boot band.


   Specification
   1.5—2.5 mm {0.060—0.098 in}

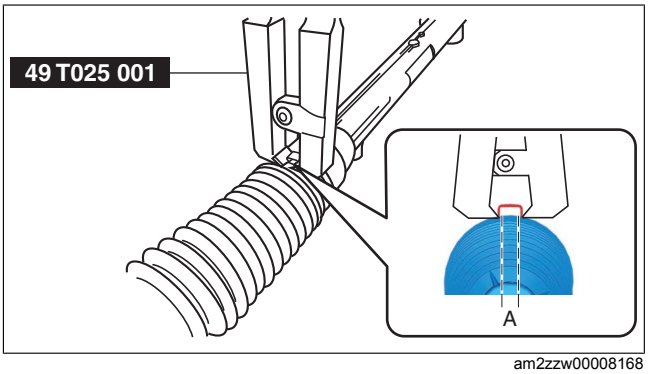

am2zzw00008168

4. Rotate the by hand and verify that it is securely installed to the boot band.


Tie-rod End Assembly Note
1. Align the marks that were made before removing the tie-rod end, and assemble the tie-rod end to the tie rod.

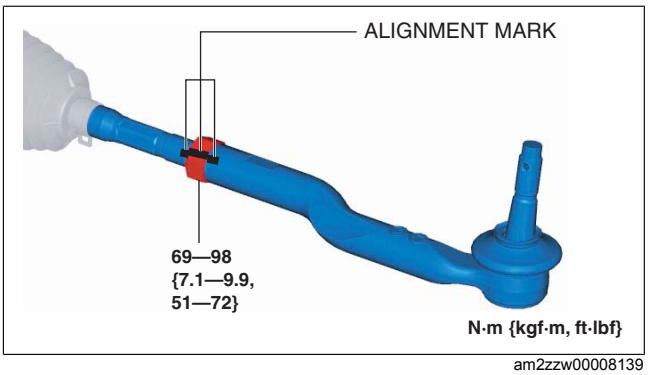

am2zzw00008139


Note

- When newly replacing a tie-rod end, place alignment marks on the new part in the same position as the remove tie-rod end.

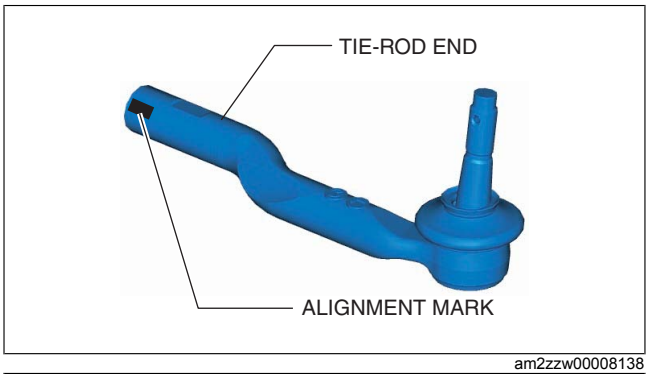

am2zzw00008138

- "R" is inscribed on the right side of the tie-rod end and "L" is inscribed on the left side of the tie-rod end. Verify if the part is for the left or right side before installation because the left and right parts of the tie-rod end have different shapes.

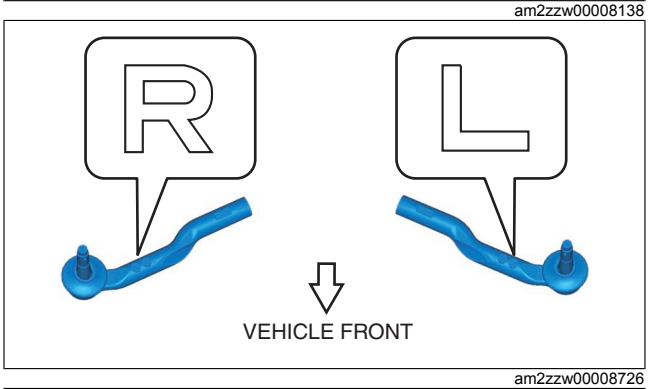


am2zzw00008726

2. Verify that dimension A shown in the figure is within the specification.

   Specification
   14.8—27.8 mm {0.59—1.09 in}

   - If not within the specification, make adjustments so that dimension A is within the specification.

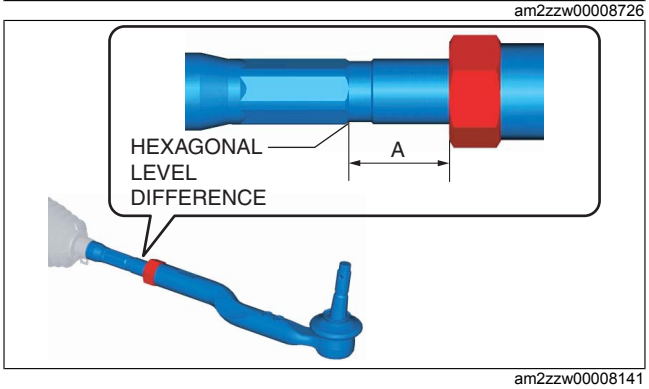

am2zzw00008141