
REFRIGERANT SYSTEM GENERAL PROCEDURES

id071000800300

1. Fully close the valves of the manifold gauge.
2. Connect the charging hoses to the high- and low-pressure side joints of the manifold gauge.

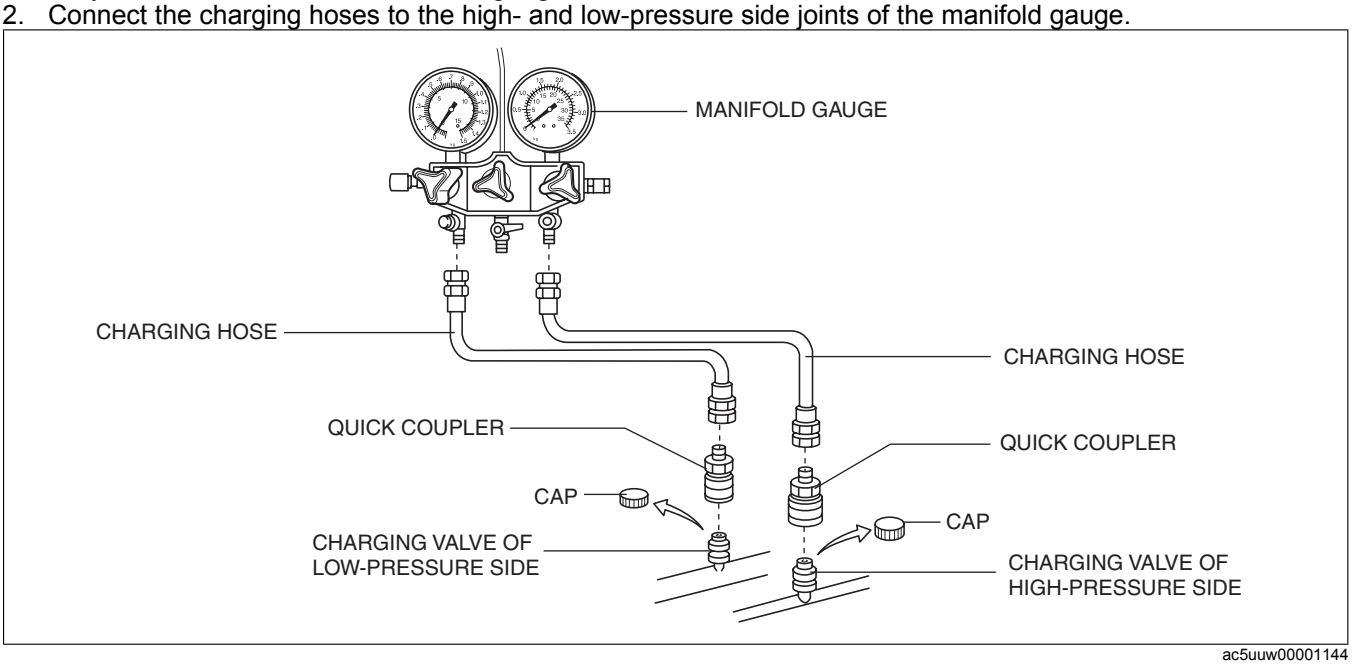

ac5uuw00001144

3. Connect the quick couplers to the ends of the charging hoses.
4. Connect the quick couplers to the charging valves.