
REFRIGERANT LINE REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5]

id07110080301

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Discharge the refrigerant. (See REFRIGERANT RECOVERY.)(See REFRIGERANT CHARGING.)
3. Remove the plug hole plate. (See PLUG HOLE PLATE REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
4. Remove the bolt and disconnect the engine ground.

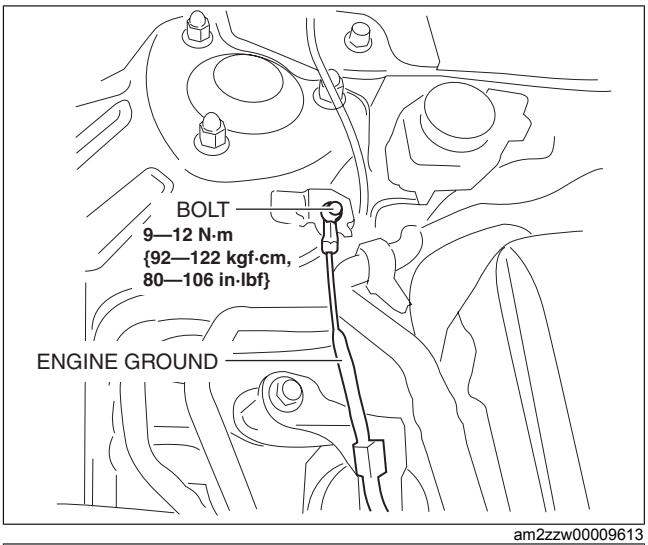


am2zzw00009613


5. Disconnect the refrigerant pressure sensor connector.
6. Remove in the order indicated in the table. Do not allow compressor oil to spill.

Caution

- **If moisture or foreign matter enters the refrigeration cycle, cooling ability will be lowered and abnormal noise will occur. Always immediately plug all open fittings after removing any refrigeration cycle parts to keep moisture or foreign matter out of the cycle.**

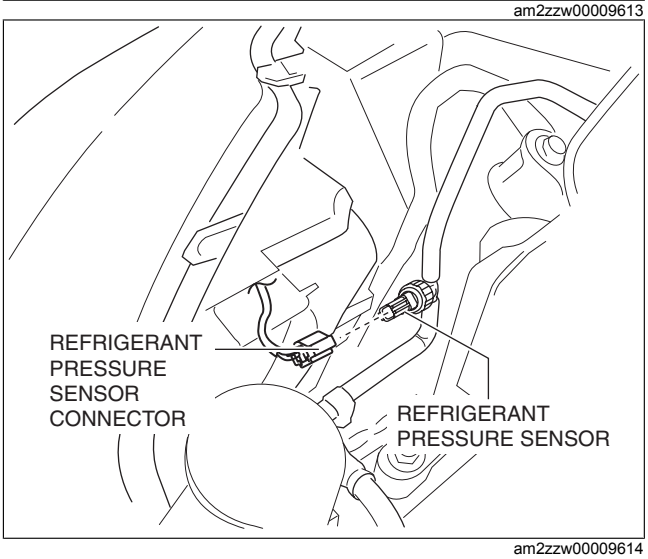

am2zzw00009614

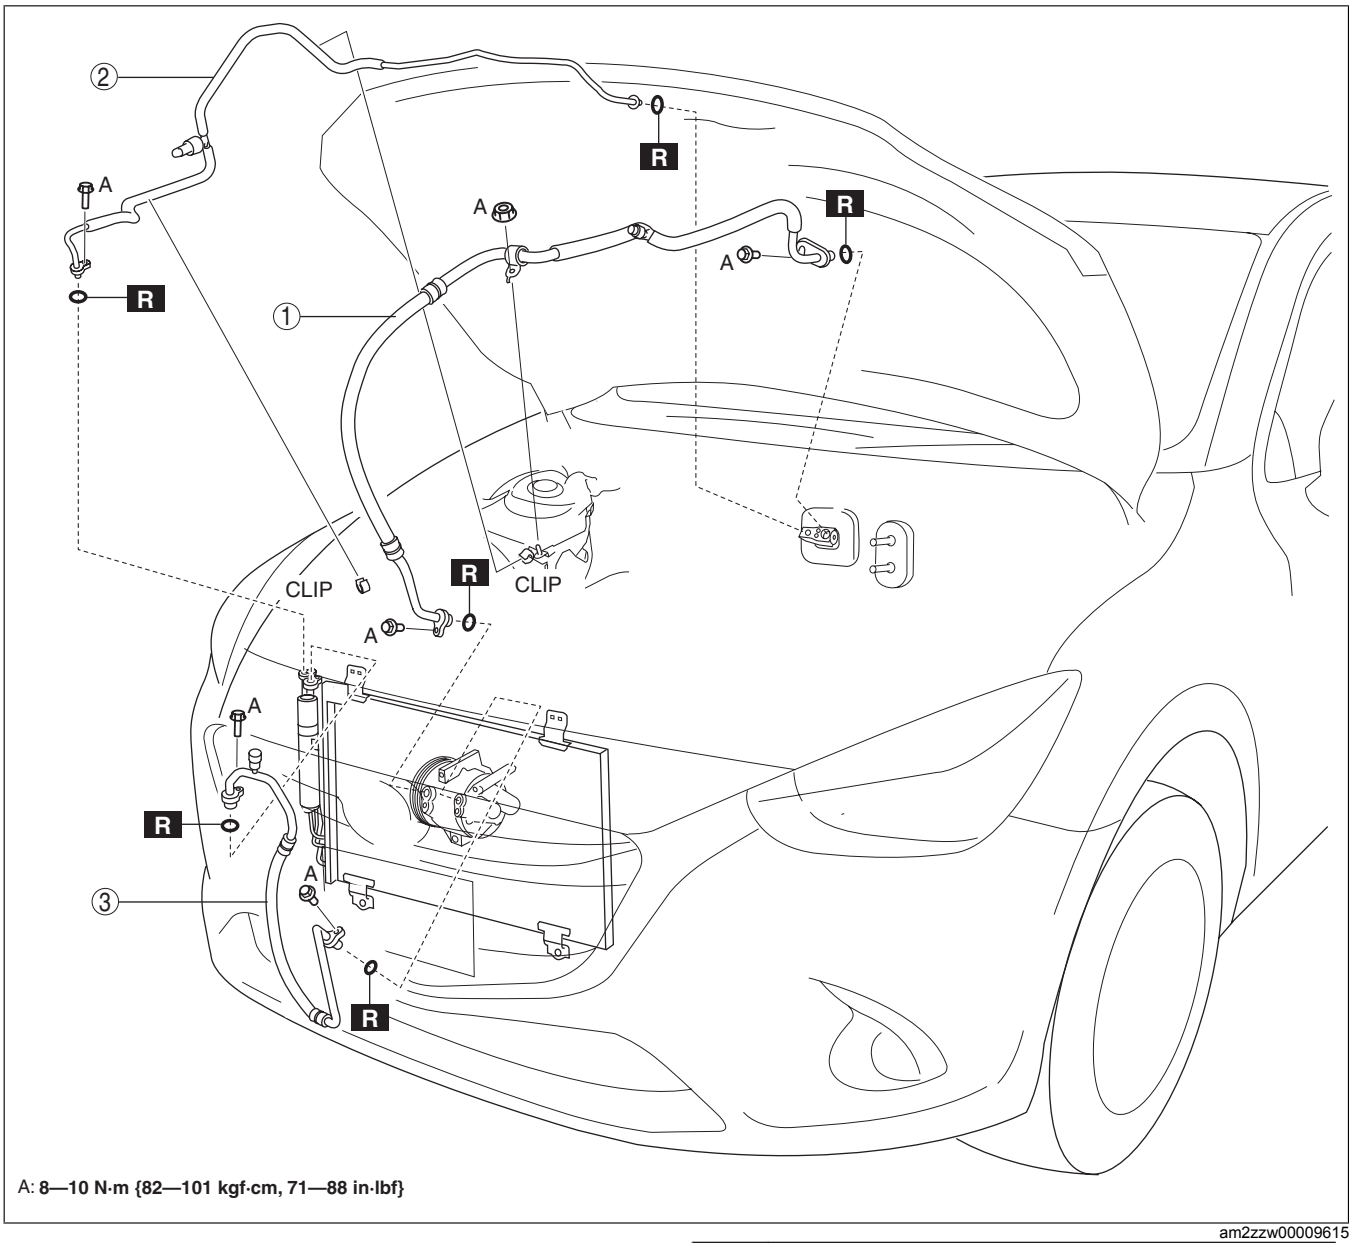

A: **8—10 N·m {82—101 kgf·cm, 71—88 in·lbf}**


am2zzw00009615

1	Cooler hose (LO) (See Refrigerant line removal note.) (See Refrigerant line installation note (1).) (See Refrigerant line installation note (2).)
2	Cooler pipe (See Refrigerant line removal note.) (See Refrigerant line installation note (1).) (See Refrigerant line installation note (2).)
3	Cooler hose (HI) (See Refrigerant line removal note.) (See Refrigerant line installation note (1).) (See Refrigerant line installation note (2).)

7. Install in the reverse order of removal.
8. Perform the refrigerant system performance test. (See REFRIGERANT SYSTEM PERFORMANCE TEST.)

Refrigerant line removal note


1. Disconnect the block joint type pipes by grasping the female side of the block with pliers or similar tool and holding firmly, then tighten the connection bolt.

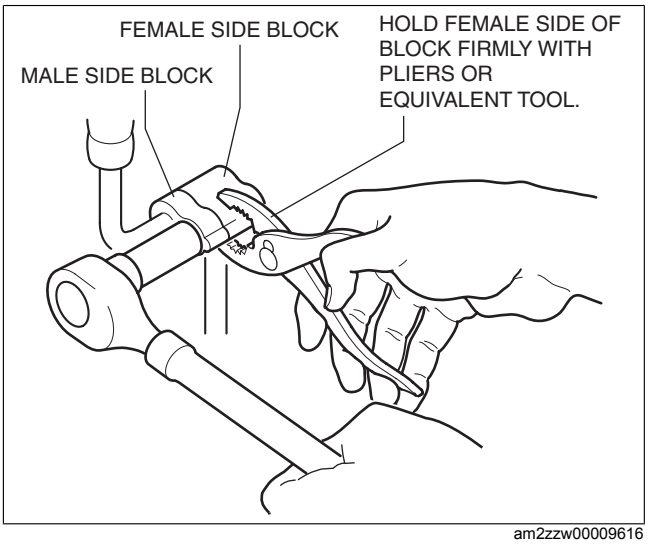

am2zzw00009616

Refrigerant line installation note (1)

1. Apply compressor oil to the O-rings and connect the joints.
2. Tighten the joint bolt by hand.
3. Connect the block joint type pipes by grasping the female side of the block with pliers or similar tool and holding firmly, then tighten the connection bolt.

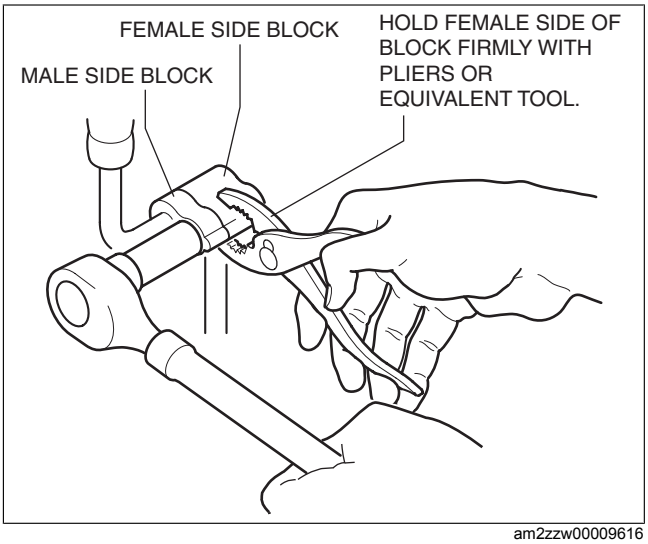

am2zzw00009616

Refrigerant line installation note (2)

1. After replacing the refrigerant line, add compressor oil to the refrigeration cycle.
   - After replacing the cooler hose (HI)
     Supplemental compressor oil amount (approx. quantity)
     — 4 ml {4 cc, 0.1 fl oz}
   - After replacing the cooler hose (LO)
     Supplemental compressor oil amount (approx. quantity)
     — 1 ml {1 cc, 0.03 fl oz}
   - After replacing the cooler pipe
     Supplemental compressor oil amount (approx. quantity)
     — 1 ml {1 cc, 0.03 fl oz}