

PASSENGER AIR BAG DEACTIVATION (PAD) SWITCH INSPECTION [TWO-STEP DEPLOYMENT CONTROL SYSTEM]

id0810b1804000

1. Disconnect the negative battery cable and wait for **1 min or more**. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
2. Remove the glove compartment (See GLOVE COMPARTMENT REMOVAL/INSTALLATION.)
3. Remove the PAD switch. (See PASSENGER AIR BAG DEACTIVATION (PAD) SWITCH REMOVAL/INSTALLATION [TWO-STEP DEPLOYMENT CONTROL SYSTEM].)
4. Verify that the continuity between the PAD switch terminals is as indicated in the table.
   - If not as indicated in the table, replace the PAD switch. (See PASSENGER AIR BAG DEACTIVATION (PAD) SWITCH REMOVAL/INSTALLATION [TWO-STEP DEPLOYMENT CONTROL SYSTEM].)

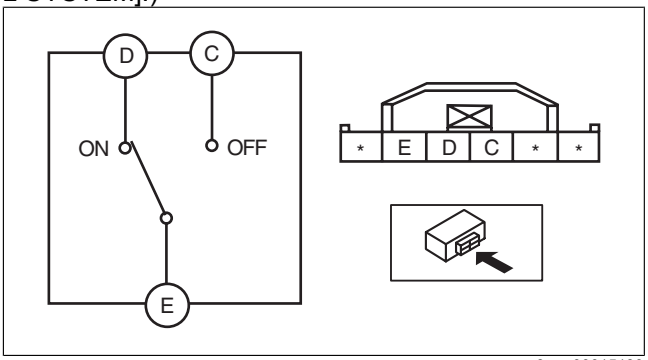

am3zzw00015180

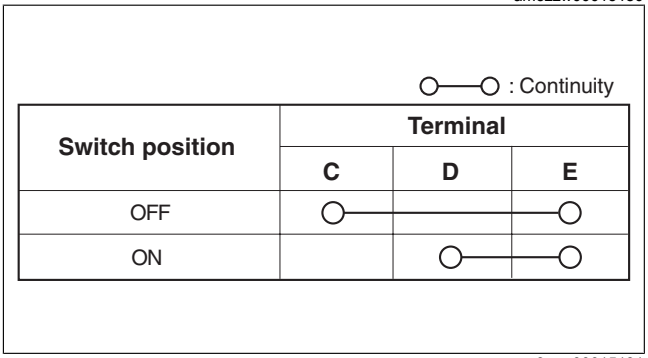

Switch position	Terminal		
	C	D	E
OFF	○		○
ON		○	○

am3zzw00015181