SEAT BELT

id081100500100

Outline

With two-step deployment air bag control system

- Three-point front seat belts with the following functions for front seat passengers have been adopted.
  - — Front pre-tensioner seat belt (See FRONT PRE-TENSIONER SEAT BELT [TWO-STEP DEPLOYMENT CONTROL SYSTEM].)
  - — ELR (Emergency Locking Retractor: emergency locking mechanism)
  - — Load limiter
- Three-point rear seat belts with the following functions for rear seat (left and right seats) passengers adopted.
  - — Rear pre-tensioner seat belt (See REAR PRE-TENSIONER SEAT BELT [TWO-STEP DEPLOYMENT CONTROL SYSTEM].)
  - — ELR
  - — Load limiter
  - — ALR (Automatic Locking Retractor: child-restraint seat locking mechanism) (Australian specs.)
- Three-point rear seat belt with the following function for rear seat passenger (center seat) adopted.
  - — ELR

With standard deployment air bag control system

- Three-point front seat belts with the following functions for front seat passengers have been adopted.
  - — Front pre-tensioner seat belt (See FRONT PRE-TENSIONER SEAT BELT [STANDARD DEPLOYMENT CONTROL SYSTEM].)
  - — ELR
  - — Load limiter
- Three-point rear seat belts with the following functions for rear seat (left and right seats) passengers adopted.
  - — ELR
- Three-point rear seat belt with the following function for rear seat passenger (center seat) adopted. (With three-point rear center seat belt)
  - — ELR
- Two-point rear seat belt for rear seat passenger (center seat) adopted. (With two-point rear center seat belt)

Function

- The seat belts are belt type safety devices which restrain the occupants in their seats.
- The seat belt prevents the driver and the passenger from being thrown from the seat and injured due to an emergency vehicle stop or impact by being hit.
- The specifications for each seat belt are as indicated in the table.


With two-step deployment air bag control system

Seat belt	Type	Function
Front seat belt (Driver-side, passenger-side)	Three-point	• Front pre-tensioner seat belt • ELR • Load limiter
Rear seat belt (LH, RH)	Three-point	• Rear pre-tensioner seat belt • ELR • Load limiter • ALR (Australian specs.)
Rear seat belt (Center)	Three-point	• ELR

With standard deployment air bag control system

Seat belt	Type	Function
Front seat belt (Driver-side, passenger-side)	Three-point	• Front pre-tensioner seat belt • ELR • Load limiter
Rear seat belt (LH, RH)	Three-point	• ELR
Rear seat belt (Center) (With three-point rear center seat belt)	Three-point	• ELR
Rear seat belt (Center) (With two-point rear center seat belt)	Two-point	—


Structural View

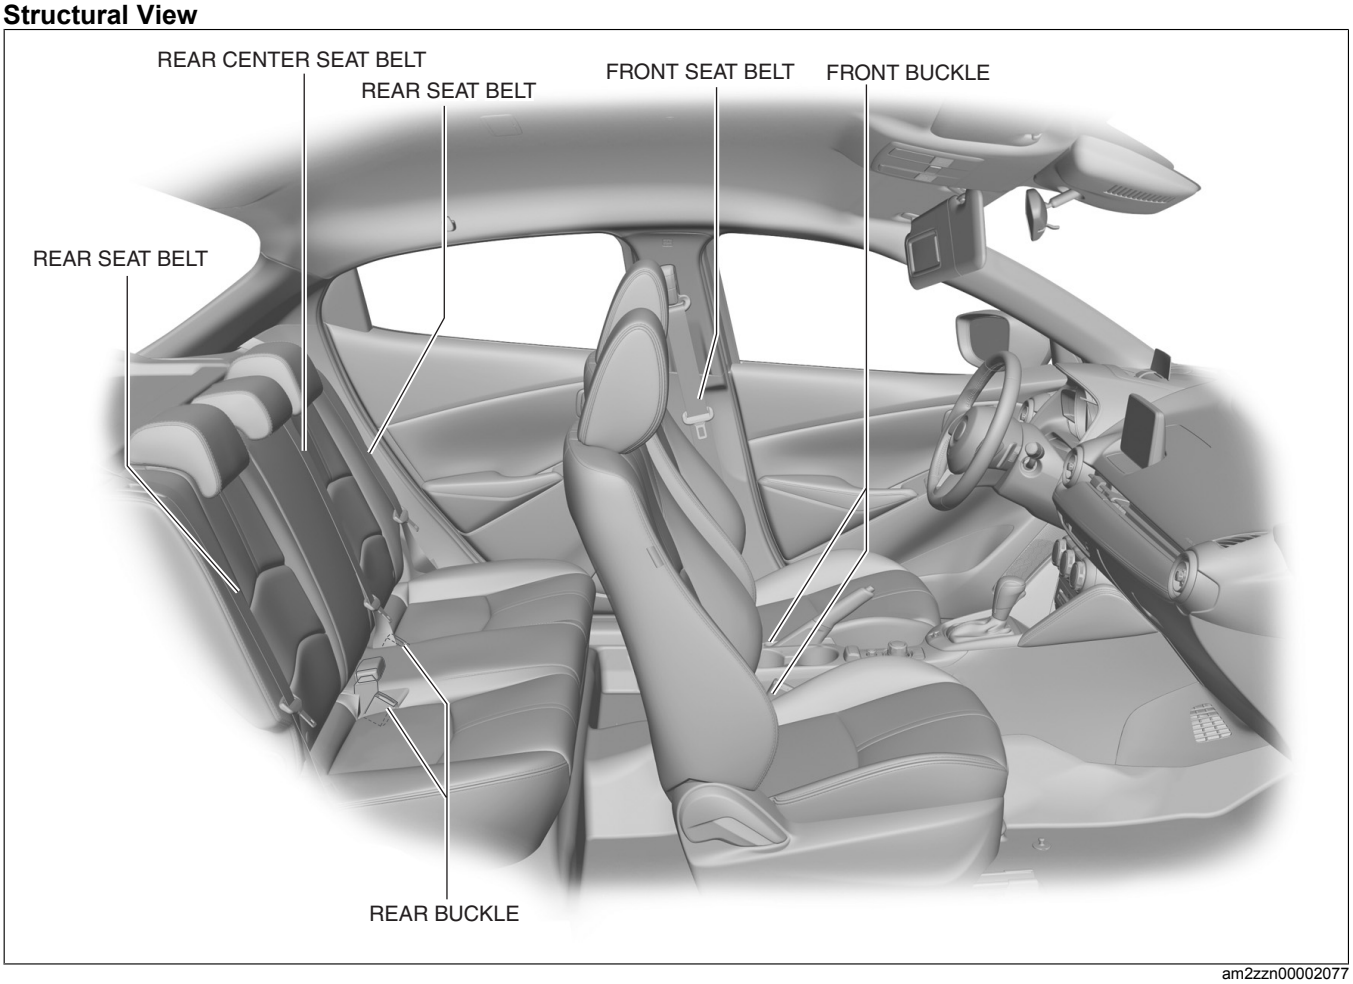

am2zzn00002077

Construction/Operation


- For the three-point seat belt, the seat belt is secured to the drum in the retractor and wrapped.
- The seat belt is pulled out or retrieved by the rotation of the drum to adjust the length of the seat belt.

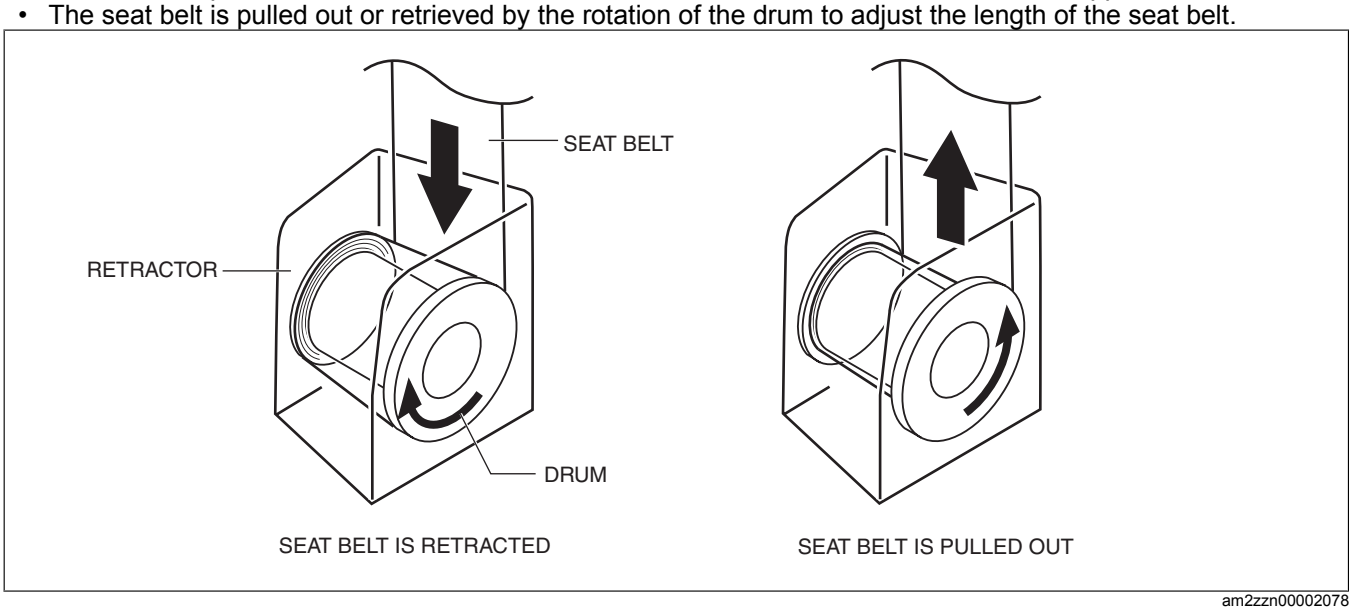

am2zzn00002078

Load limiter

- When a certain amount of force is applied to the seat belt by an occupant moving forward by inertia force after the pre-tensioner seat belt operates, the locking base in the retractor is unlocked, the seat belt pulls out to mediate the pressure of the seat belt against the occupant.

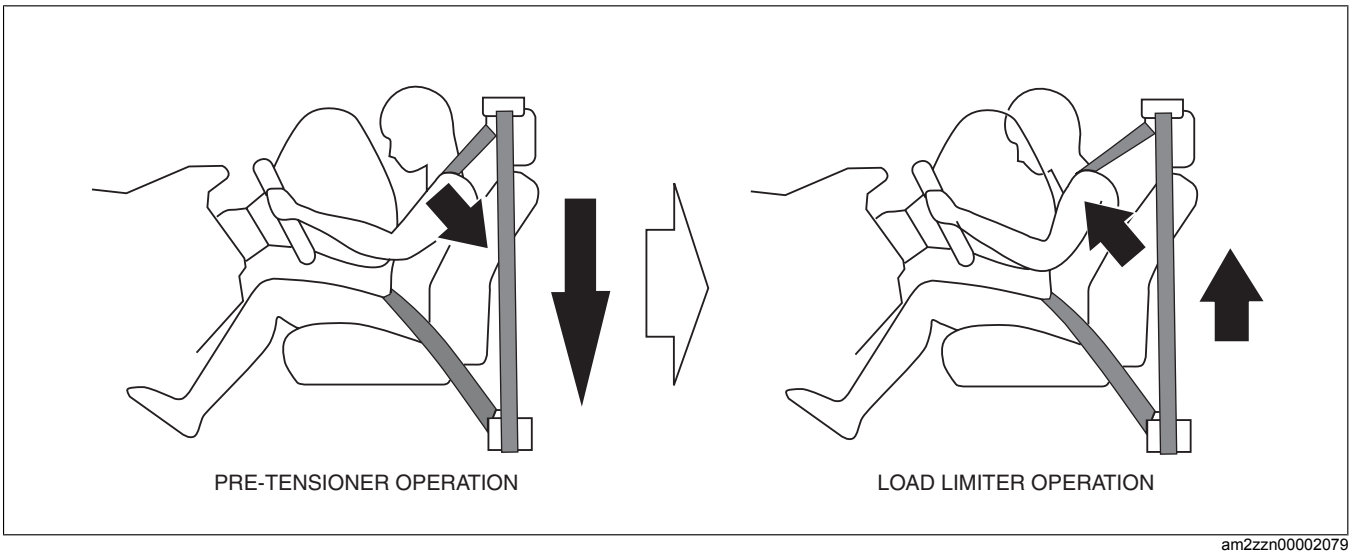

am2zzn00002079

ELR (Emergency Locking Retractor)

- If a sudden force is applied to a seat belt by an occupant moving forward by inertia force due to a vehicle collision or sudden braking, the locking base in the retractor is locked to prevent (lock) the seat belt from being pulled out.

Front pre-tensioner seat belt

- For the front pre-tensioner seat belt construction/operation, refer to the FRONT PRE-TENSIONER SEAT BELT. (See FRONT PRE-TENSIONER SEAT BELT [STANDARD DEPLOYMENT CONTROL SYSTEM].) (See FRONT PRE-TENSIONER SEAT BELT [TWO-STEP DEPLOYMENT CONTROL SYSTEM].)

Rear pre-tensioner seat belt

- For the rear pre-tensioner seat belt construction/operation, refer to the REAR PRE-TENSIONER SEAT BELT. (See REAR PRE-TENSIONER SEAT BELT [TWO-STEP DEPLOYMENT CONTROL SYSTEM].)

Fail-safe

- Not applicable