
## ABNORMAL SOUND DURING DOOR GLASS OPENING/CLOSING [POWER WINDOW SYSTEM]

id0903a0480600

| Description | Abnormal sound during door glass opening/closing |
|---|---|
| **Possible Causes** | • Installation screw is loose between the door glass and carrier plate.<br>• Deformity in the power window regulator plastic part due to use.<br>— Scratching, wear marks to the power window regulator resin part due to twisting of the cable.<br>— Gear deformity in the power window motor.<br><br>**Note**<br>• Identify the location of the noise using a stethoscope or similar device. |

### Diagnostic procedure

| Noise type | Time of occurrence | Possible cause | Location of noise | Action |
|---|---|---|---|---|
| Clanking noise | Door glass begins to move | Insufficiently tightened installation screw between the door glass and carrier plate. | Between door glass lower edge and carrier plate. | Securely tighten the installation screw. |
| Groaning noise (Sound increases due to use) | While door glass is operating | Vibration caused by wear on the resin part from cable twisting due to use of the power window regulator.<br><br>**Note**<br>• Noise does not occur if a roller is equipped to power window regulator resin part. | Power window regulator | Replace the power window regulator (See FRONT POWER WINDOW REGULATOR REMOVAL/ INSTALLATION.) (See REAR POWER WINDOW REGULATOR REMOVAL/ INSTALLATION.) |
| Whining noise | | Gear inside power window motor is deformed due to use. | Gear in power window motor | Replace the power window motor (See FRONT POWER WINDOW MOTOR REMOVAL/ INSTALLATION.) (See REAR POWER WINDOW MOTOR REMOVAL/ INSTALLATION.) |
| Clicking noise (Periodic noise) | | | | |

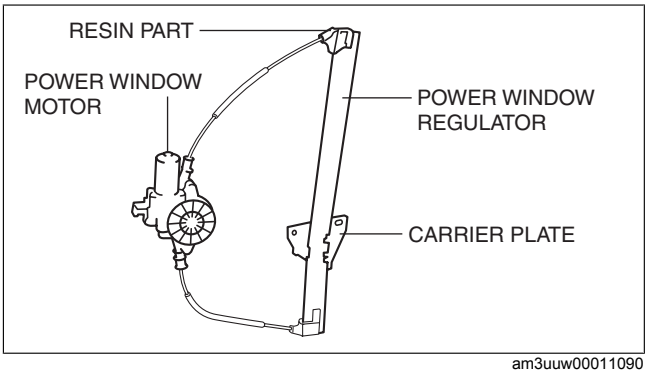


am3uuw00011090