
FRONT FENDER PANEL REMOVAL/INSTALLATION


id091000801000

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Remove the following parts:
   (1) Front bumper (See FRONT BUMPER REMOVAL.) (See FRONT BUMPER INSTALLATION.)
   (2) Front combination light (See FRONT COMBINATION LIGHT REMOVAL/INSTALLATION.)
   (3) Front bumper slider (See BUMPER SLIDER REMOVAL/INSTALLATION.)
   (4) Front fender molding (See FRONT FENDER MOLDING REMOVAL/INSTALLATION.)
3. Remove the fasteners.

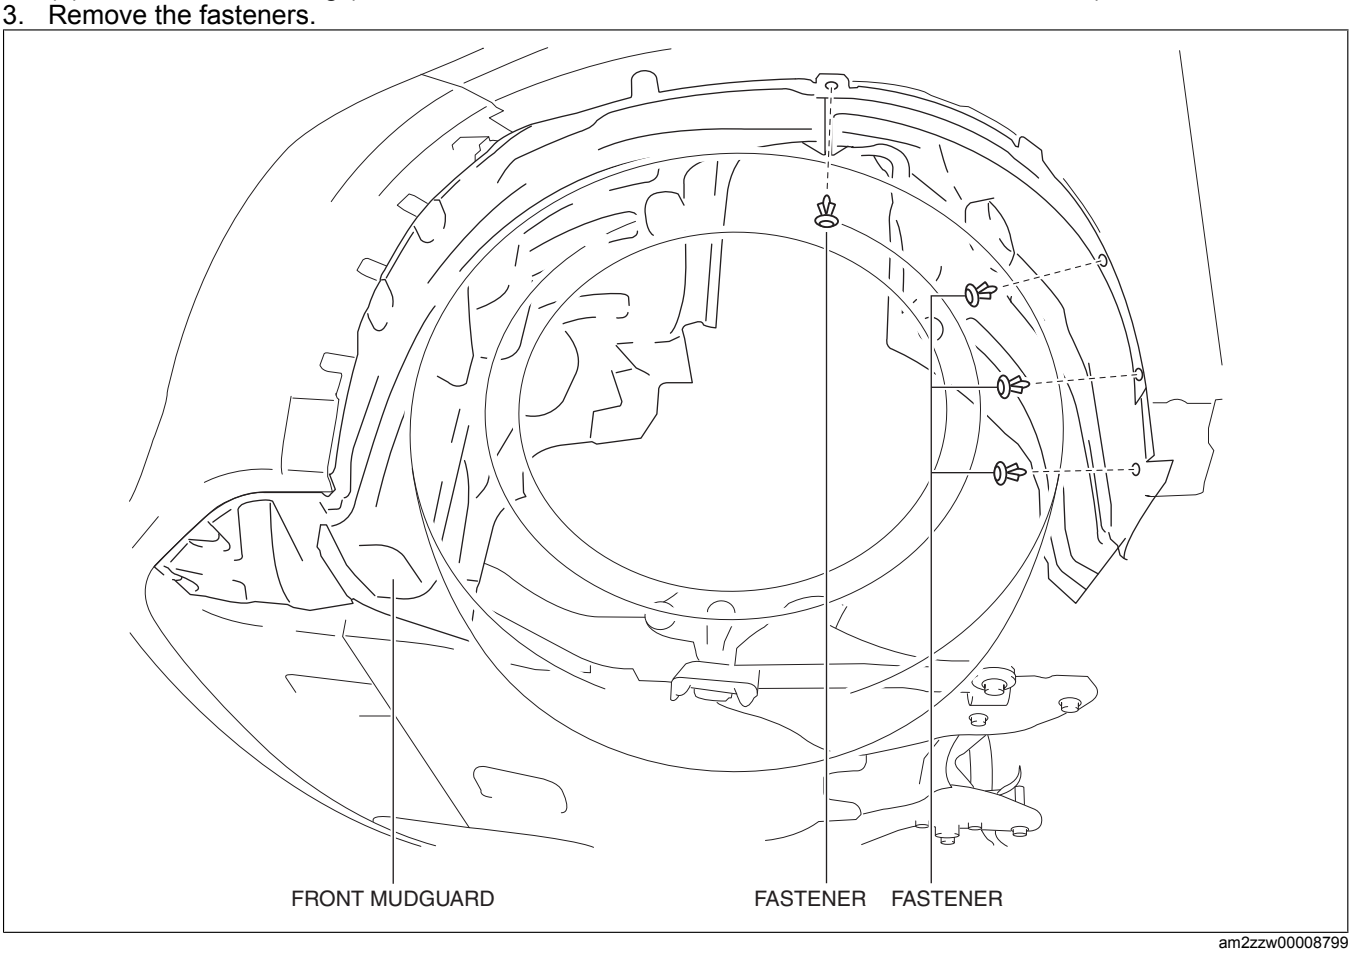


am2zzw00008799

4. Partially peel back the front mudguard.
5. Remove the clip. (with stone guard)

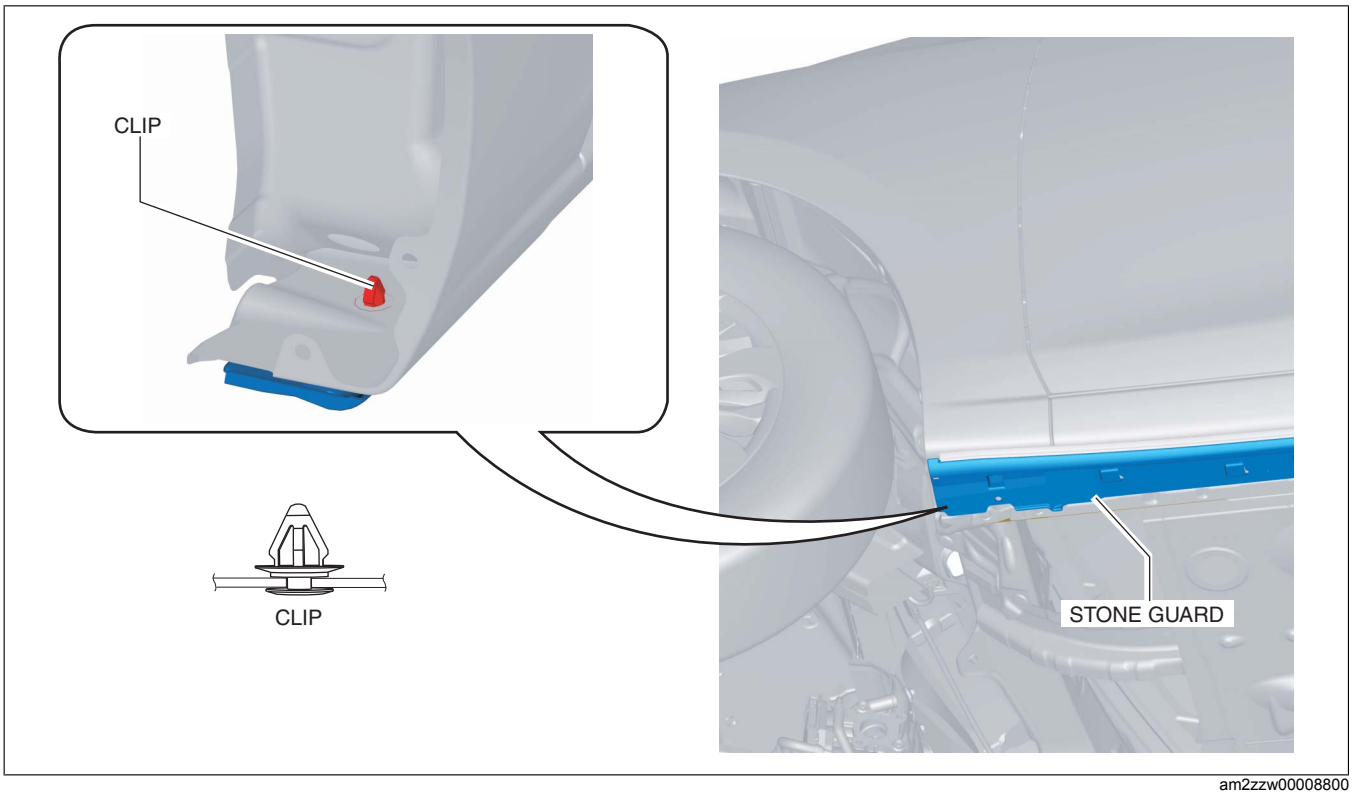


am2zzw00008800

6. Affix the protective tape to the position shown in the figure to prevent scratches and damage.

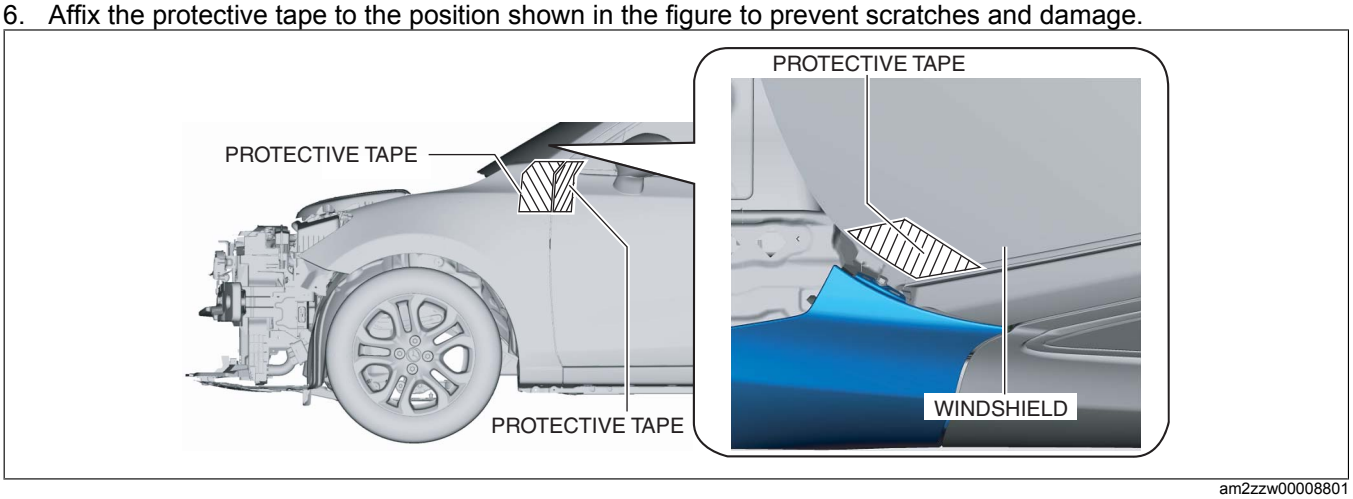

am2zzw00008801

7. Remove the bolts.

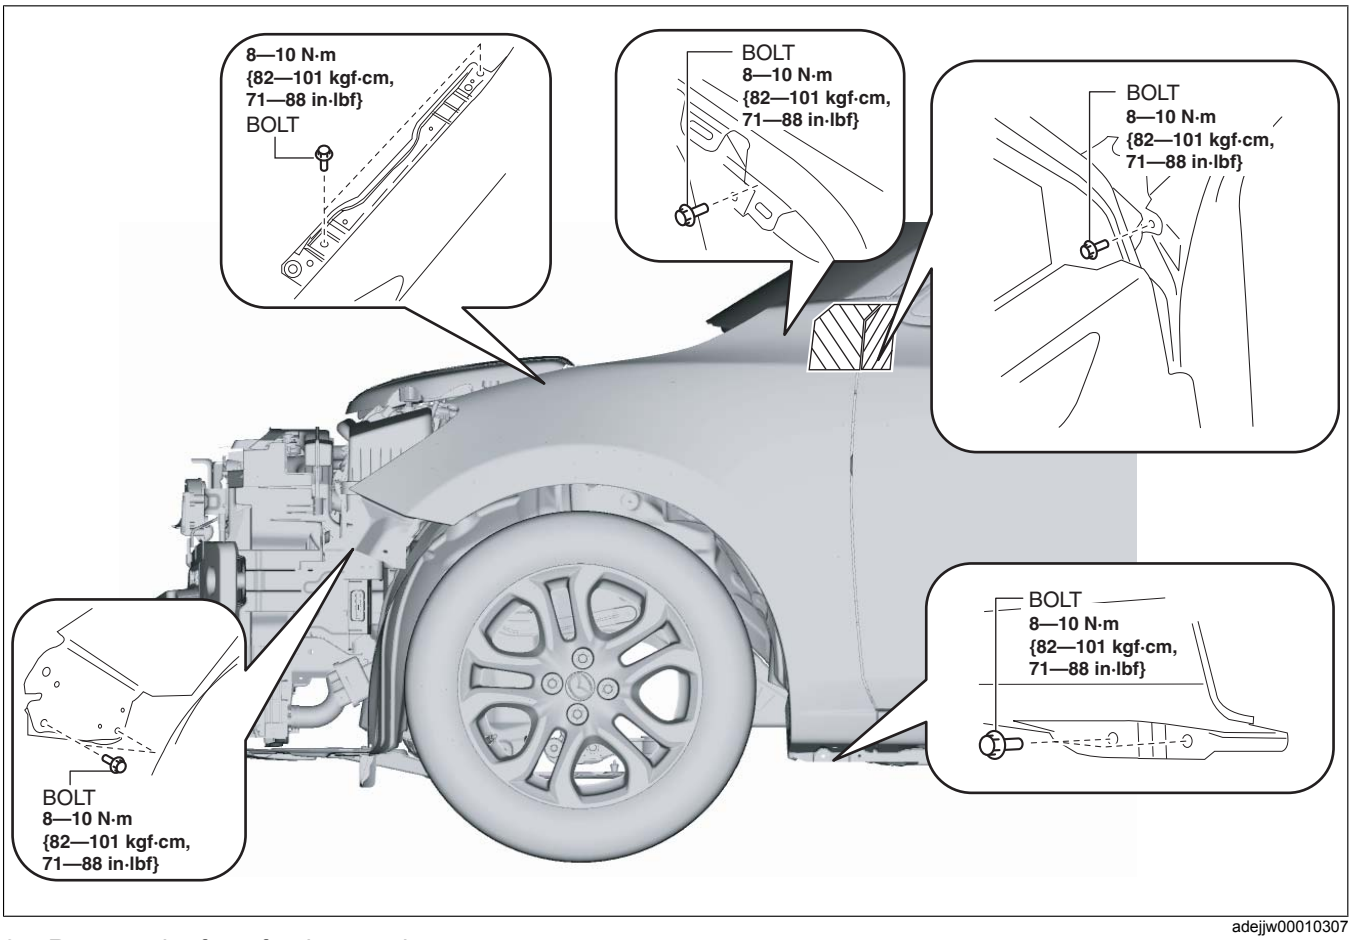

adejjw00010307


8. Remove the front fender panel.
9. Install in the reverse order of removal. (See Front Fender Panel Replacement Note.)

Front Fender Panel Replacement Note


Note

- A protector is not installed to a new front fender panel. If the front fender panel is replaced with a new one, install a protector using the following procedure.

1. Verify the up/down direction of the protector and align the end of the protector with the position shown in the figure of the front fender panel.

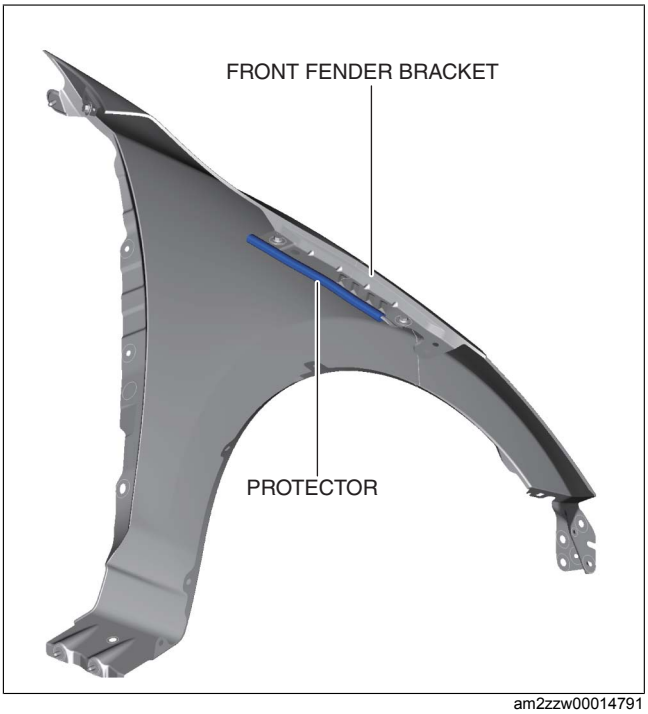


am2zzw00014791

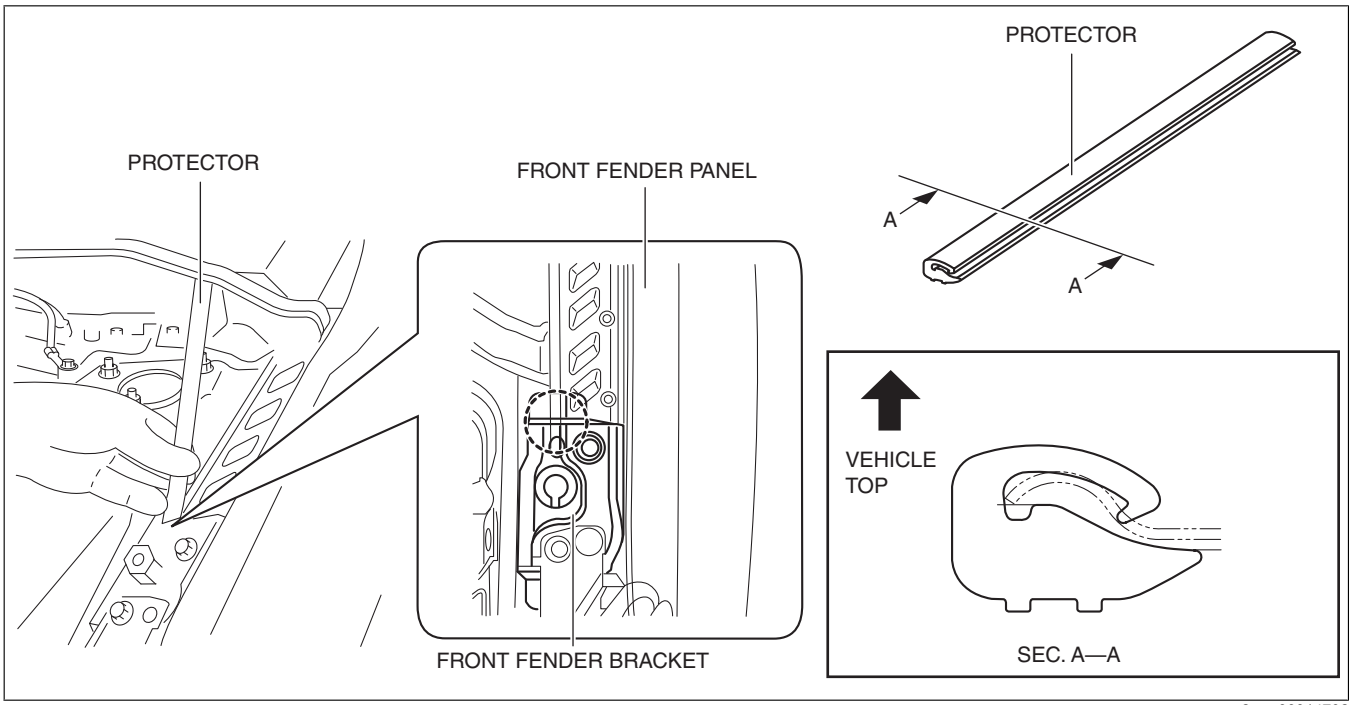


am2zzw00014792

2. Install the protector using the following procedure.

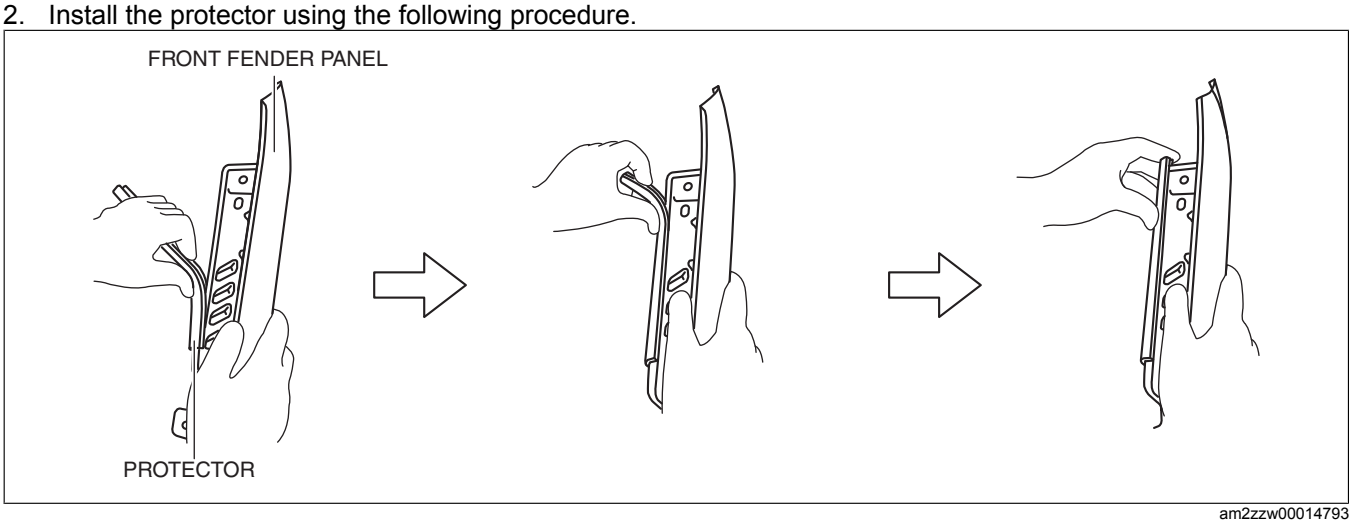

am2zzw00014793

3. Verify that the protector is under the following conditions.
   - The clearance between the front fender bracket and the front end of the protector is 5 mm {0.2 in} or less.
   - The rear end of the front fender panel is covered with the protector.

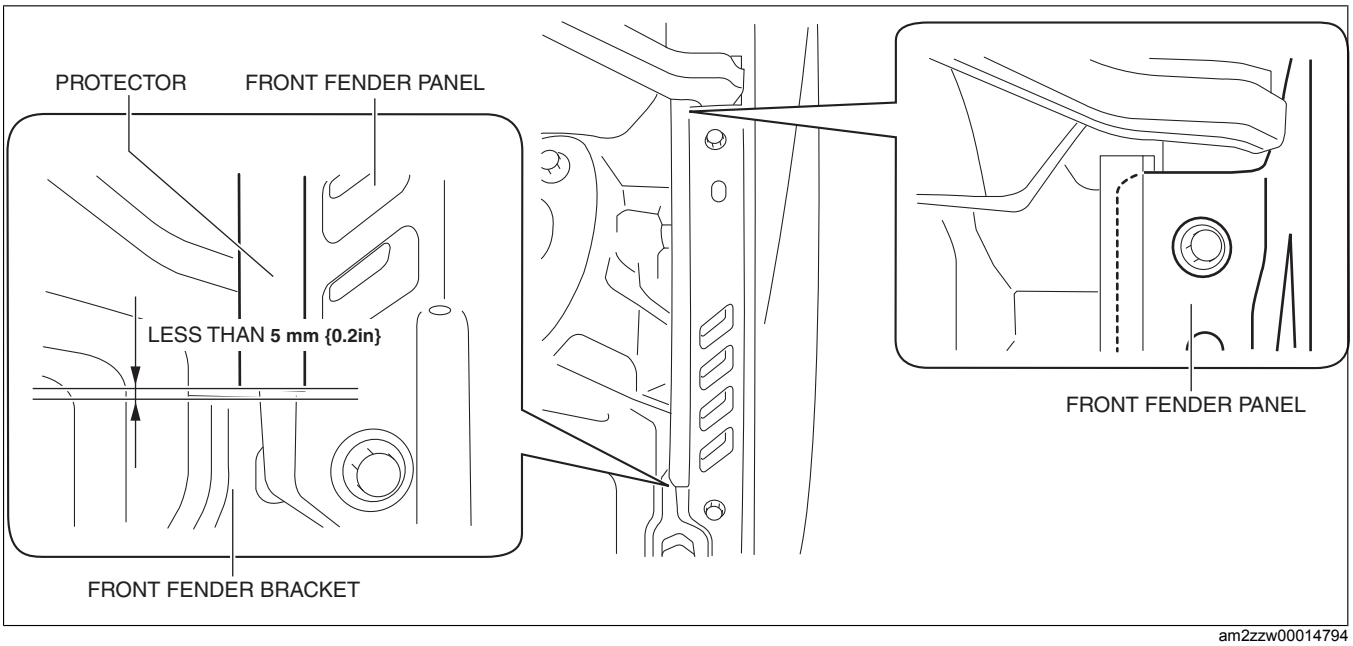

am2zzw00014794