
FRONT FENDER STAY REMOVAL/INSTALLATION

id091000803900

LH


1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Remove the front bumper. (See FRONT BUMPER REMOVAL.) (See FRONT BUMPER INSTALLATION.)
3. Remove the front combination light. (See FRONT COMBINATION LIGHT REMOVAL/INSTALLATION.)
4. Disconnect the service plug. (See SERVICE PLUG DISCONNECTION/CONNECTION [i-ELOOP].)
5. Remove the capacitor. (with i-ELOOP) (See CAPACITOR (i-ELOOP) REMOVAL/INSTALLATION [i-ELOOP].)
6. Remove the fastener.

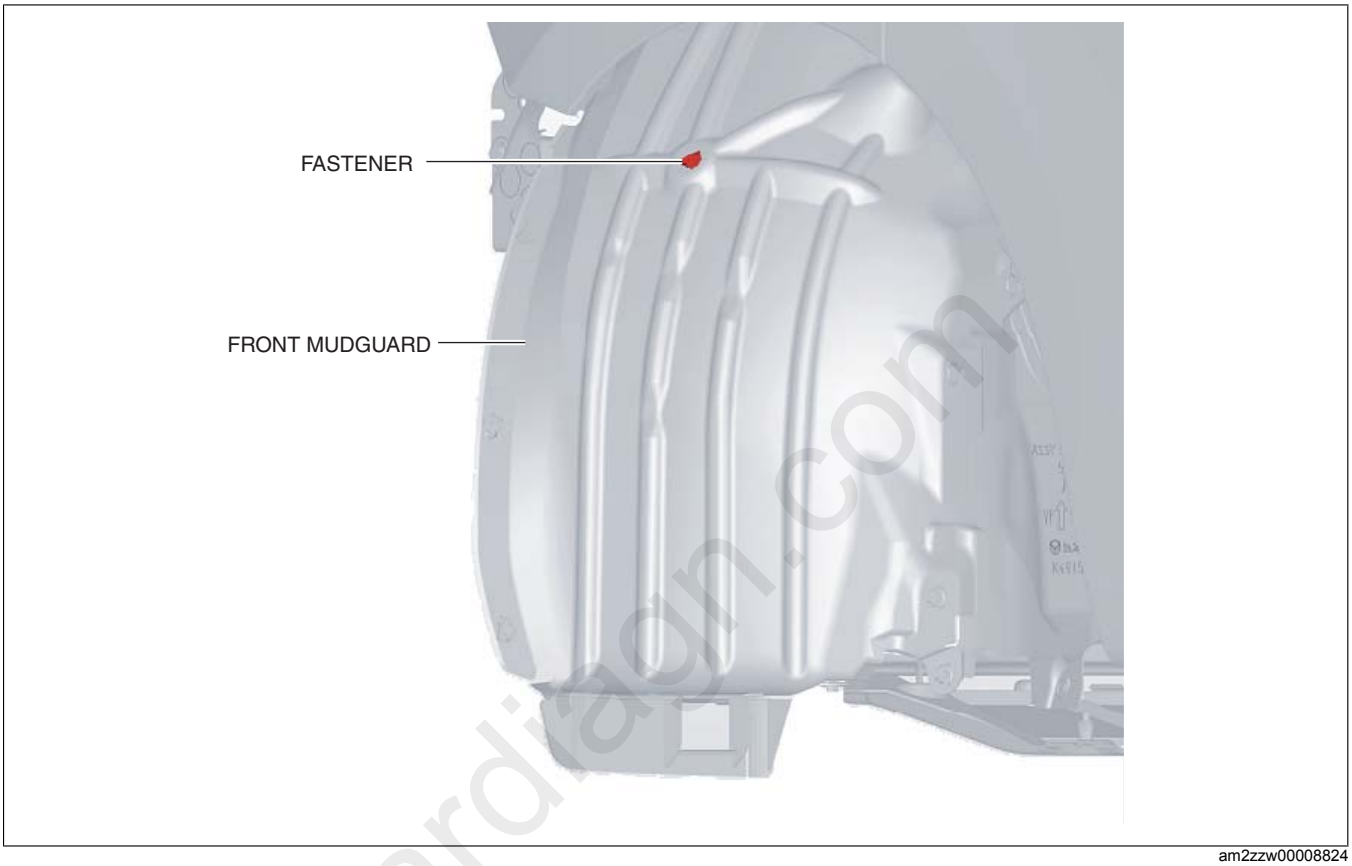

am2zzw00008824


7. Remove the bolts shown in the figure and then remove ground cables.

cardiagn.com

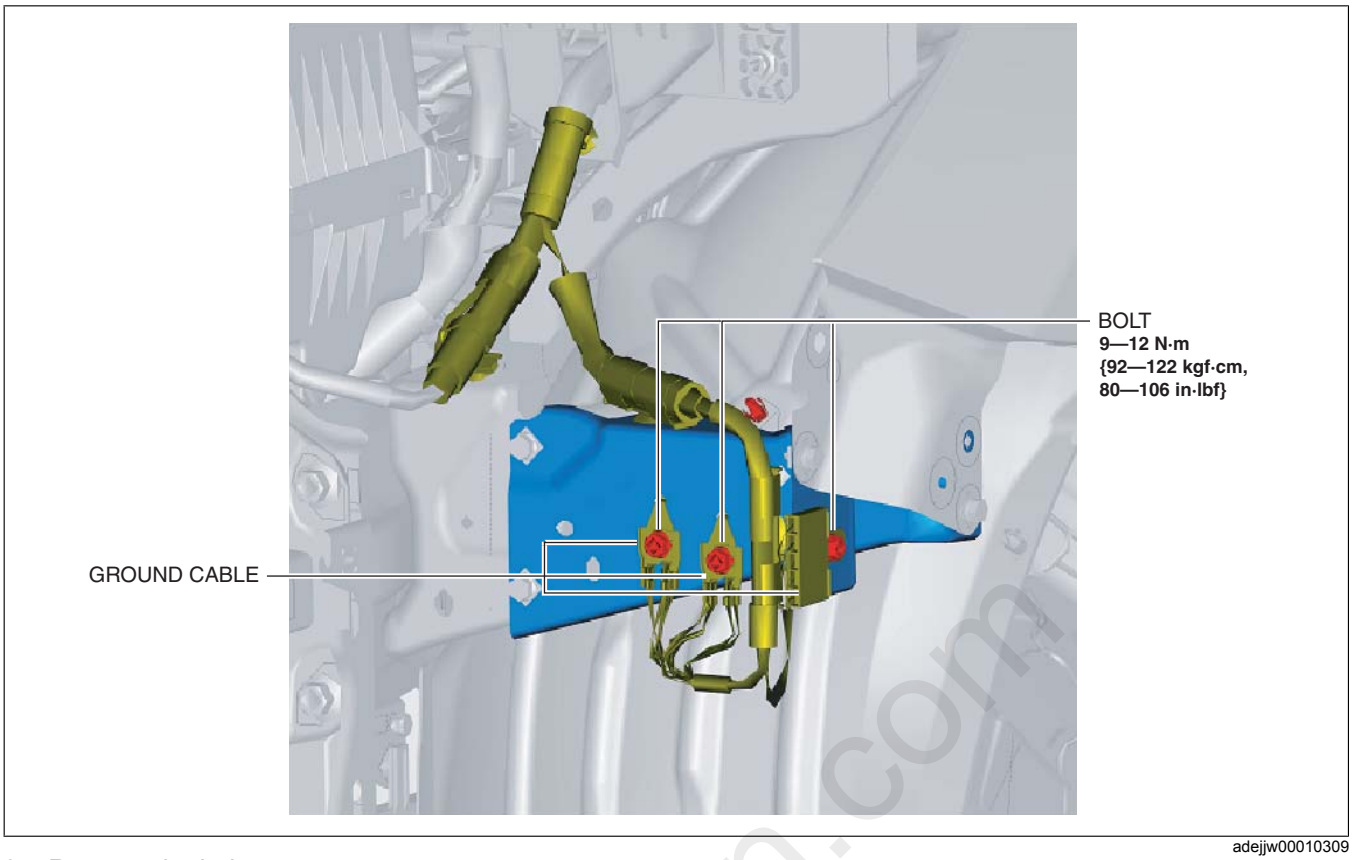

adejjw00010309

8. Remove the bolts.

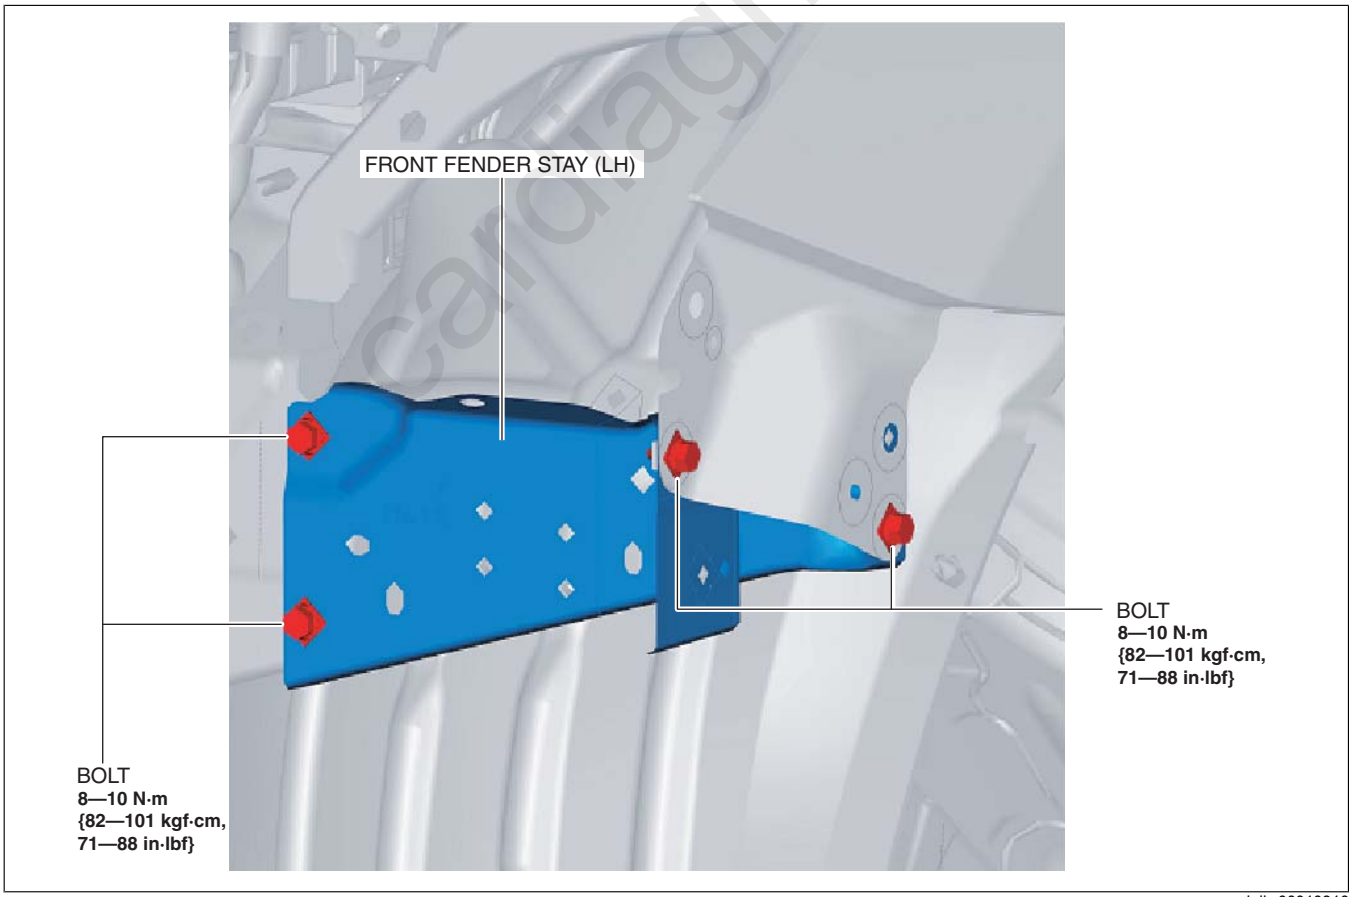


adejjw00010310

9. Remove the front fender stay.
10. Install in the reverse order of removal. (See Front Fender Stay Paint Note.)

RH


1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Remove the following parts:
   (1) Front bumper (See FRONT BUMPER REMOVAL.) (See FRONT BUMPER INSTALLATION.)
   (2) Front combination light (See FRONT COMBINATION LIGHT REMOVAL/INSTALLATION.)
   (3) Washer tank (See WASHER TANK REMOVAL/INSTALLATION.)
3. Remove the fastener.

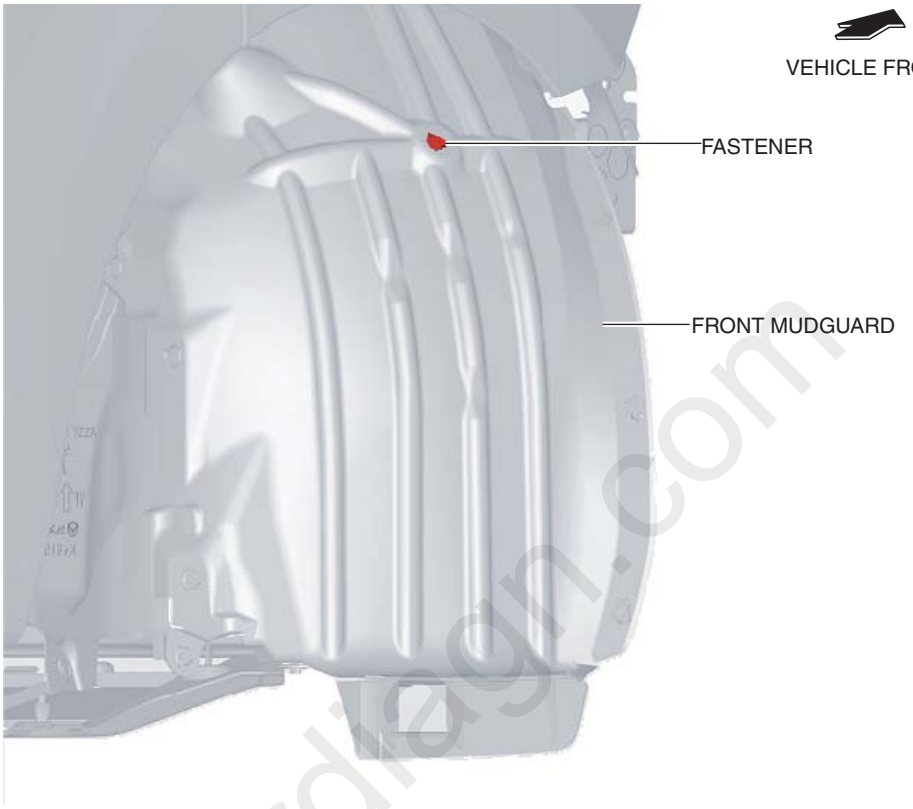

am2zzw00008825


4. Remove the bolts shown in the figure and then remove body grounds.

cardiagn.com

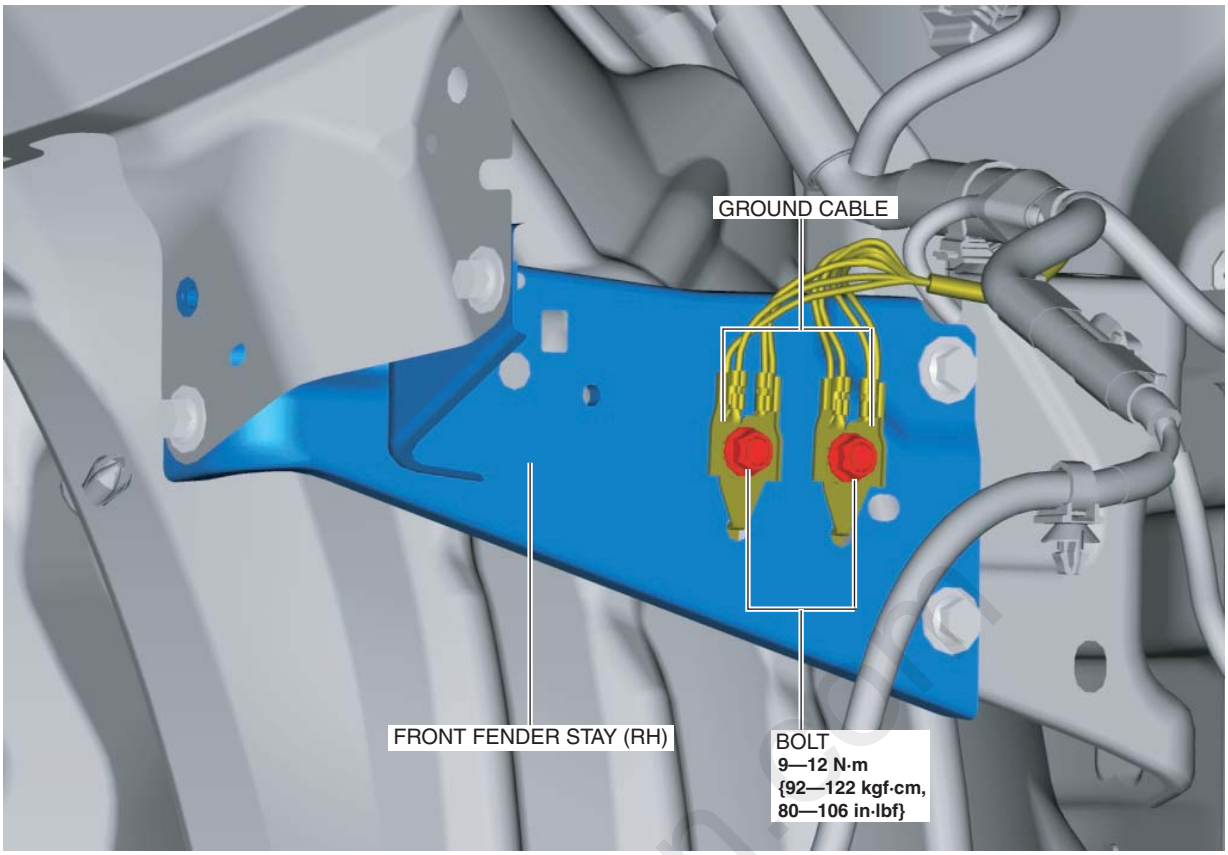

adejjw00012538

5. Remove the bolts.

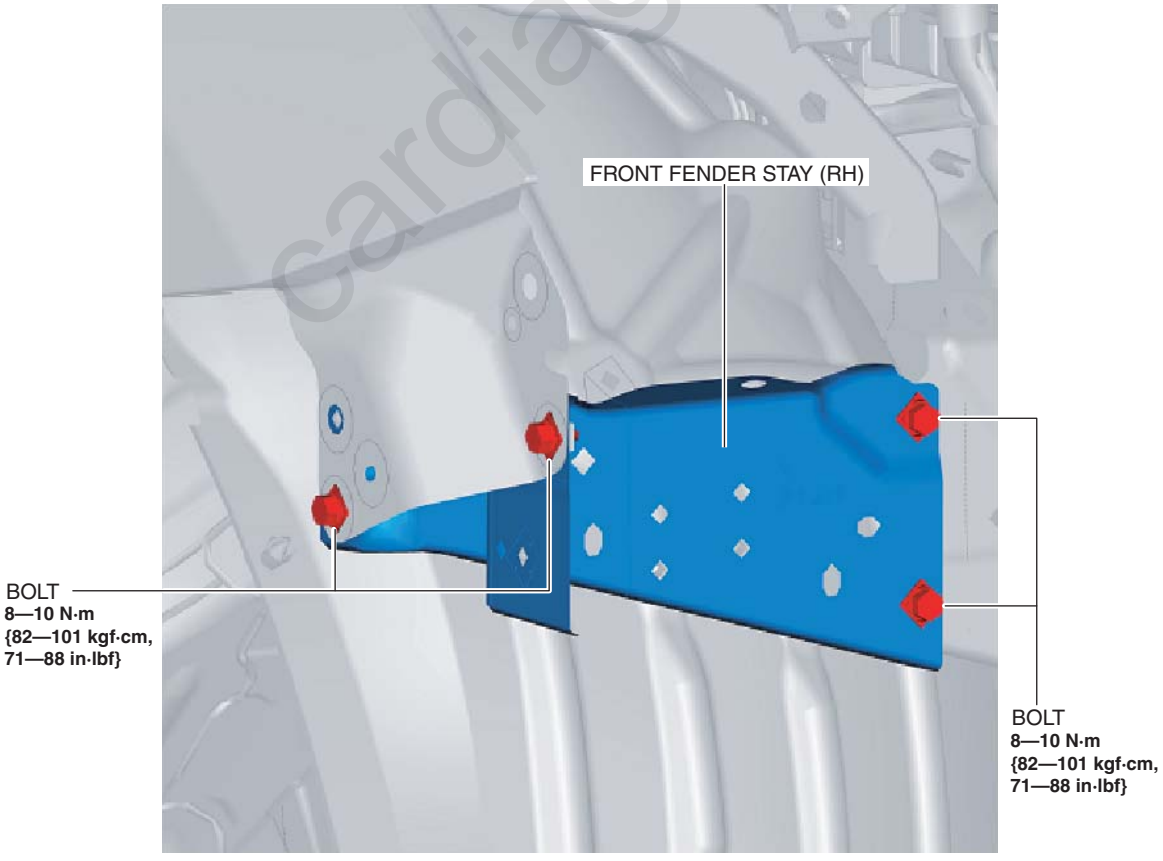

am2zzw00008826

6. Remove the front fender stay.
7. Install in the reverse order of removal. (See Front Fender Stay Paint Note.)

Front Fender Stay Paint Note

Caution

- **If the bolt connection area is painted when the front fender stay is replaced, it could cause a malfunction in the PCM. Before painting the replaced front fender stay, refer to the [Paint Procedure For Replaced Front Fender Stay] in the bodyshop manual.**

cardiagn.com