
ENERGY-ABSORBING FORM REMOVAL/INSTALLATION

id091000888800

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Remove the front bumper. (See FRONT BUMPER REMOVAL.) (See FRONT BUMPER INSTALLATION.)
3. Remove the fasteners.

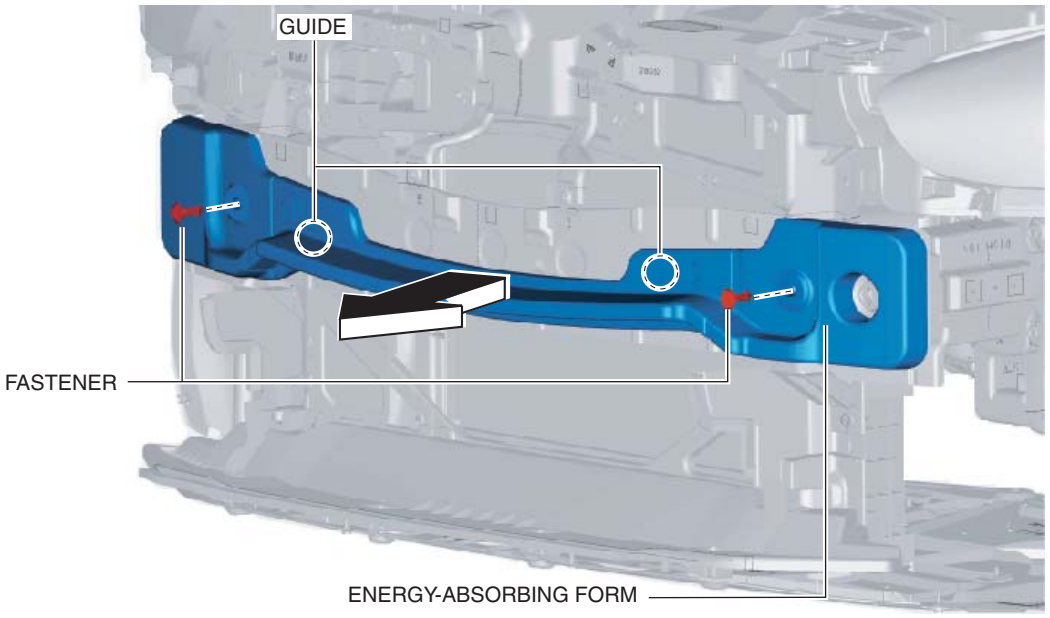

adejjw00009826

4. Pull the energy-absorbing form in the direction of the arrow shown in the figure while detaching guides.
5. Install in the reverse order of removal.