
STONE GUARD REMOVAL/INSTALLATION


id091600806500

1. Remove the rear deflector. (See DEFLECTOR REMOVAL/INSTALLATION.)
2. Remove the fasteners.

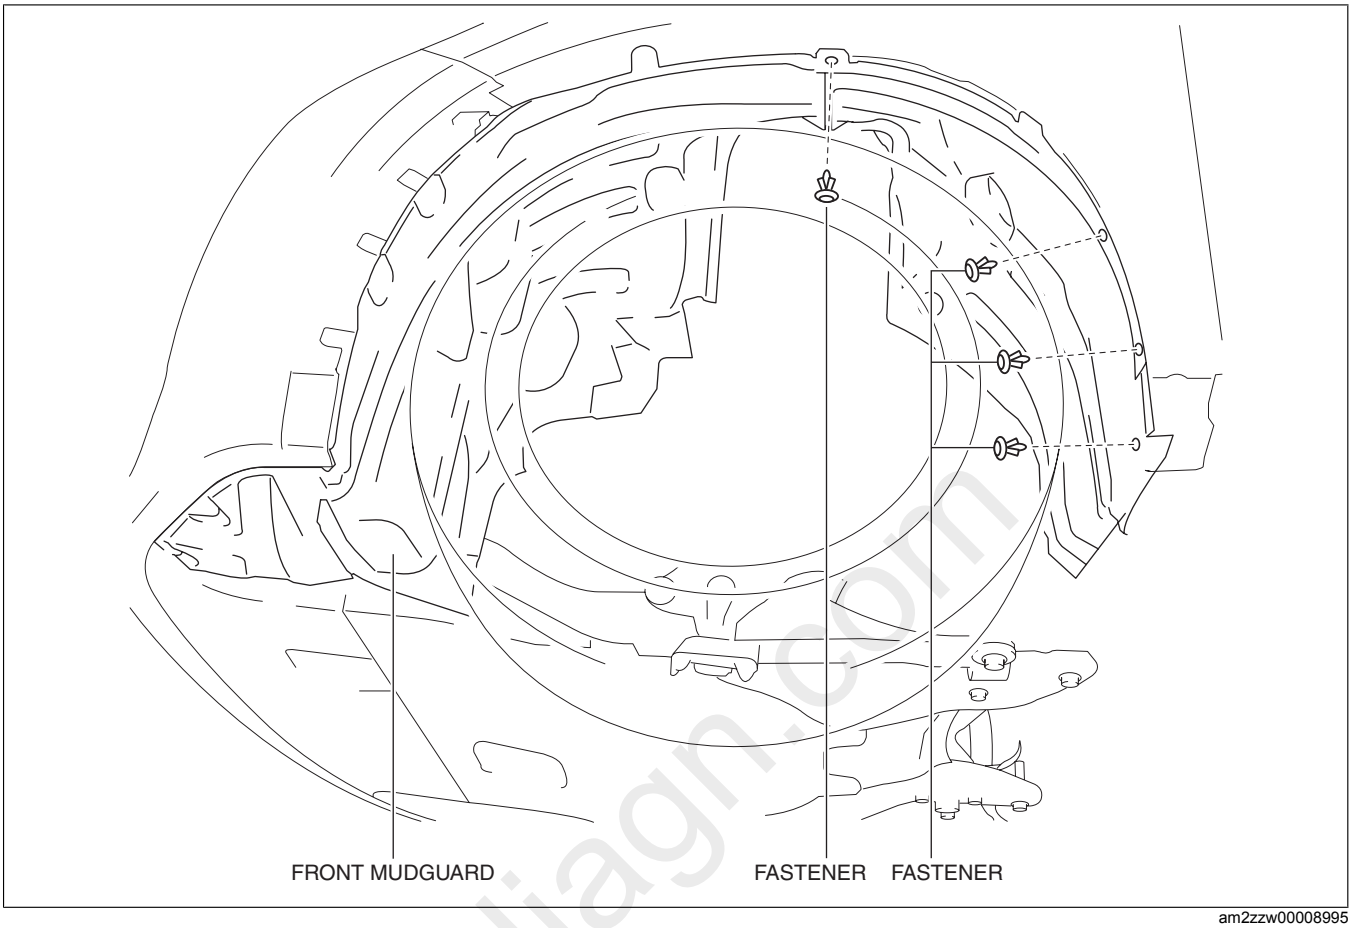


am2zzw00008995

3. Partially peel back the front mudguard and remove the clip.

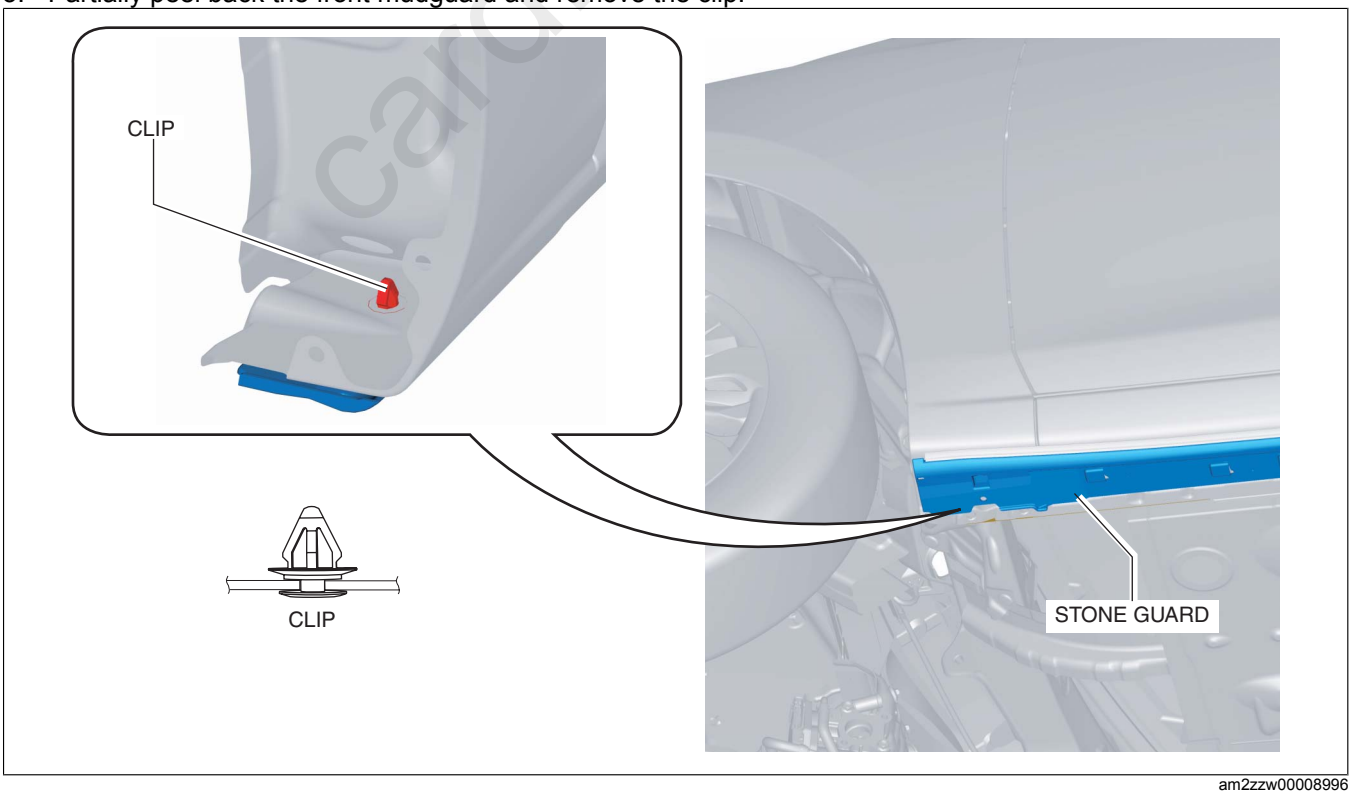

am2zzw00008996

4. Move the stone guard in the direction of the arrow shown in the figure and remove it.

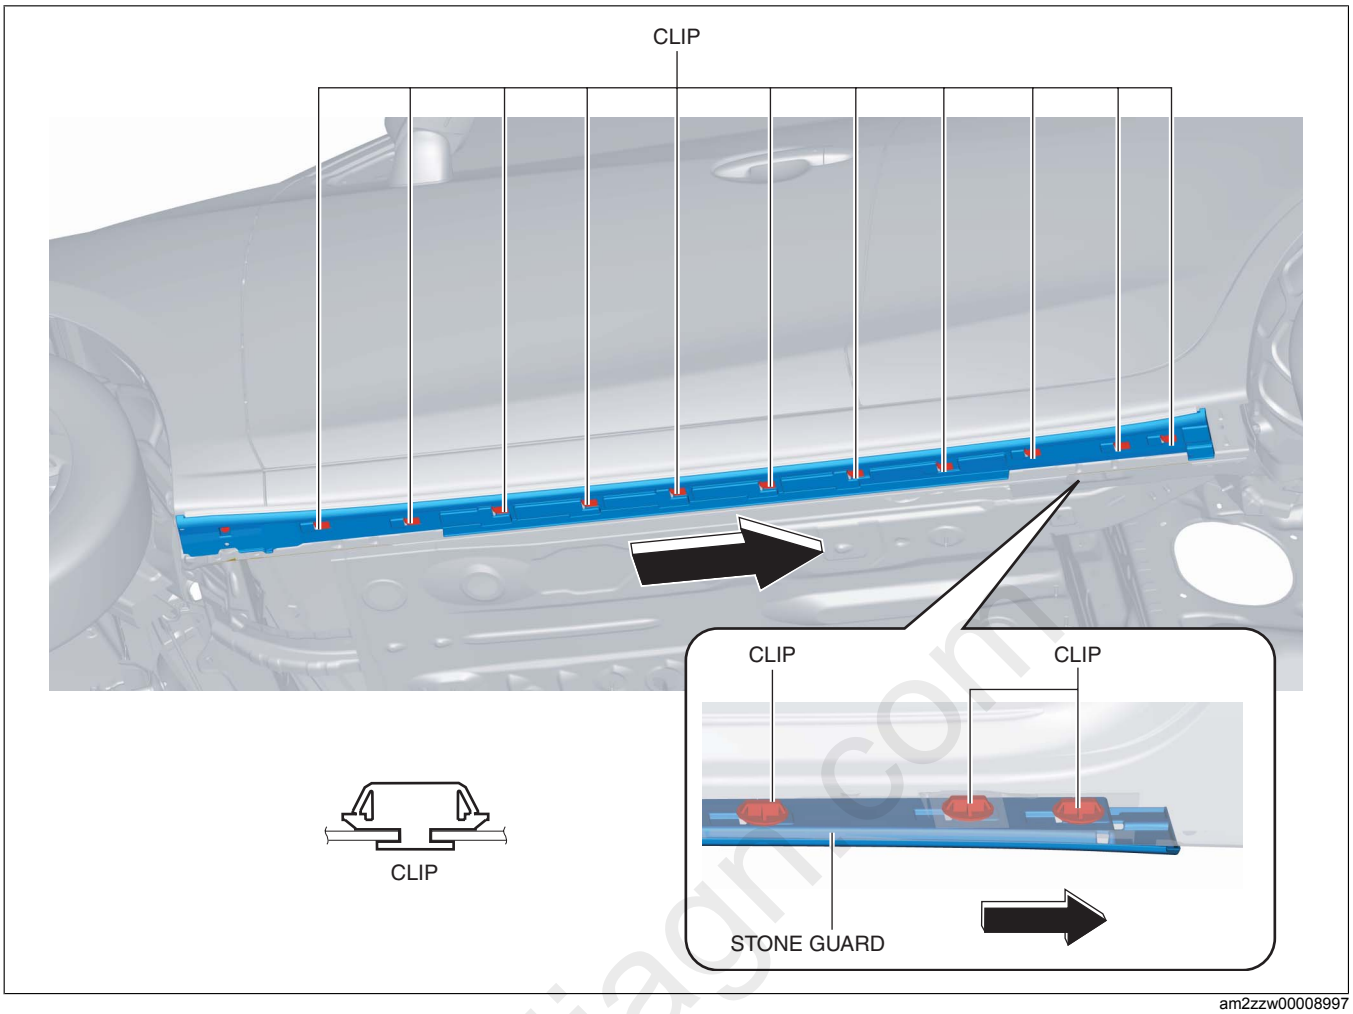


am2zzw00008997

5. After removing the stone guard, remove clips from the body using a fastener remover.
6. Install in the reverse order of removal. (See Stone Guard Installation Note.)

Stone Guard Installation Note

1. Install the clip A and clips B to the stone guard.

carquest.com

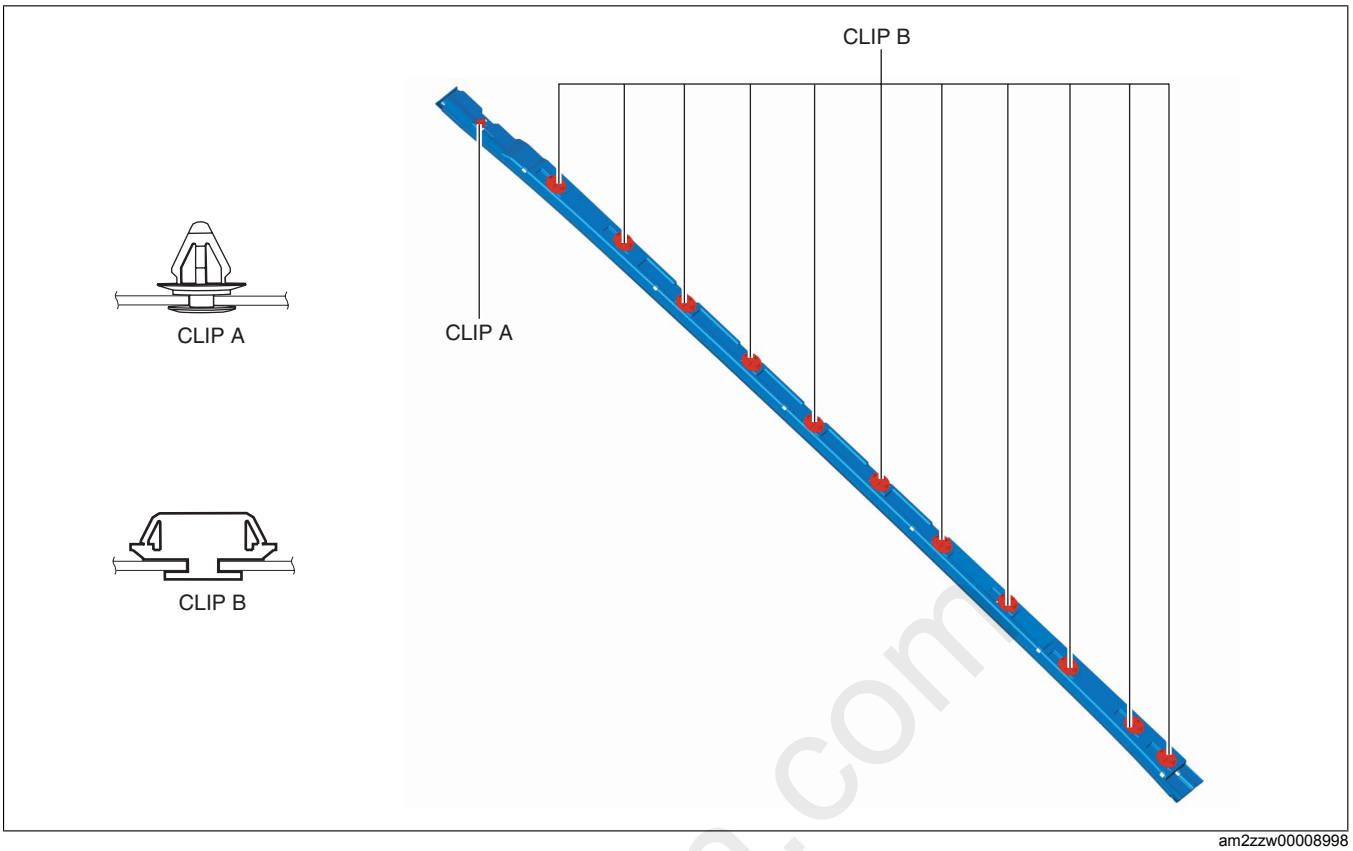

am2zzw00008998

cardiagn.com