
ORNAMENT INSTALLATION

id091600994300

4SD


1. Remove any grease or dirt from the ornament installation surface of the trunk lid.

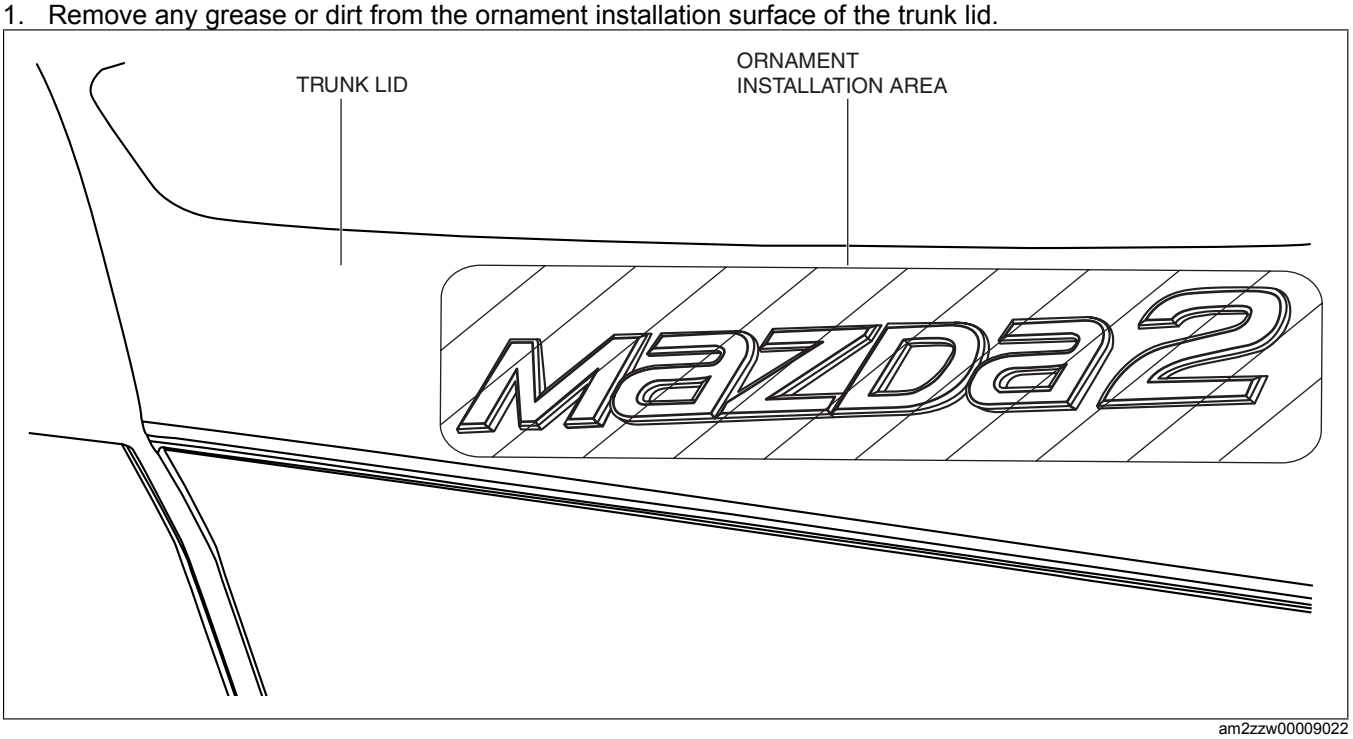

am2zzw00009022


2. Warm the ornament installation area to between 15 °C {59 °F} and 40 °C {104 °F} using a hot air drier.
3. Install the ornament to the position shown in the figure.

LH

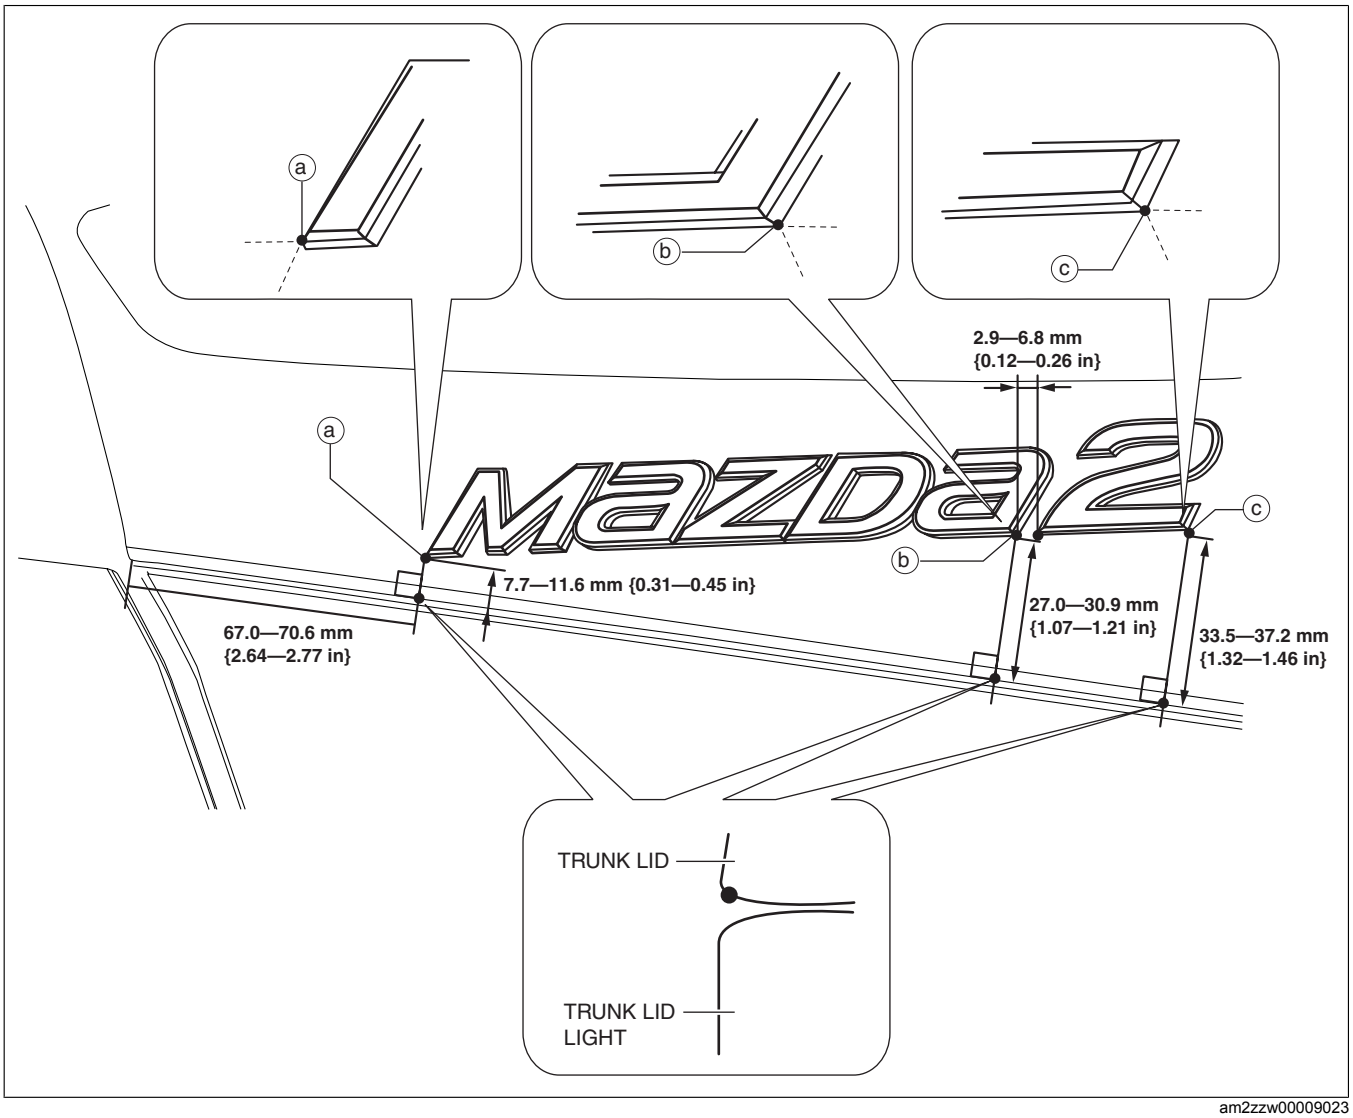

am2zzw00009023

RH

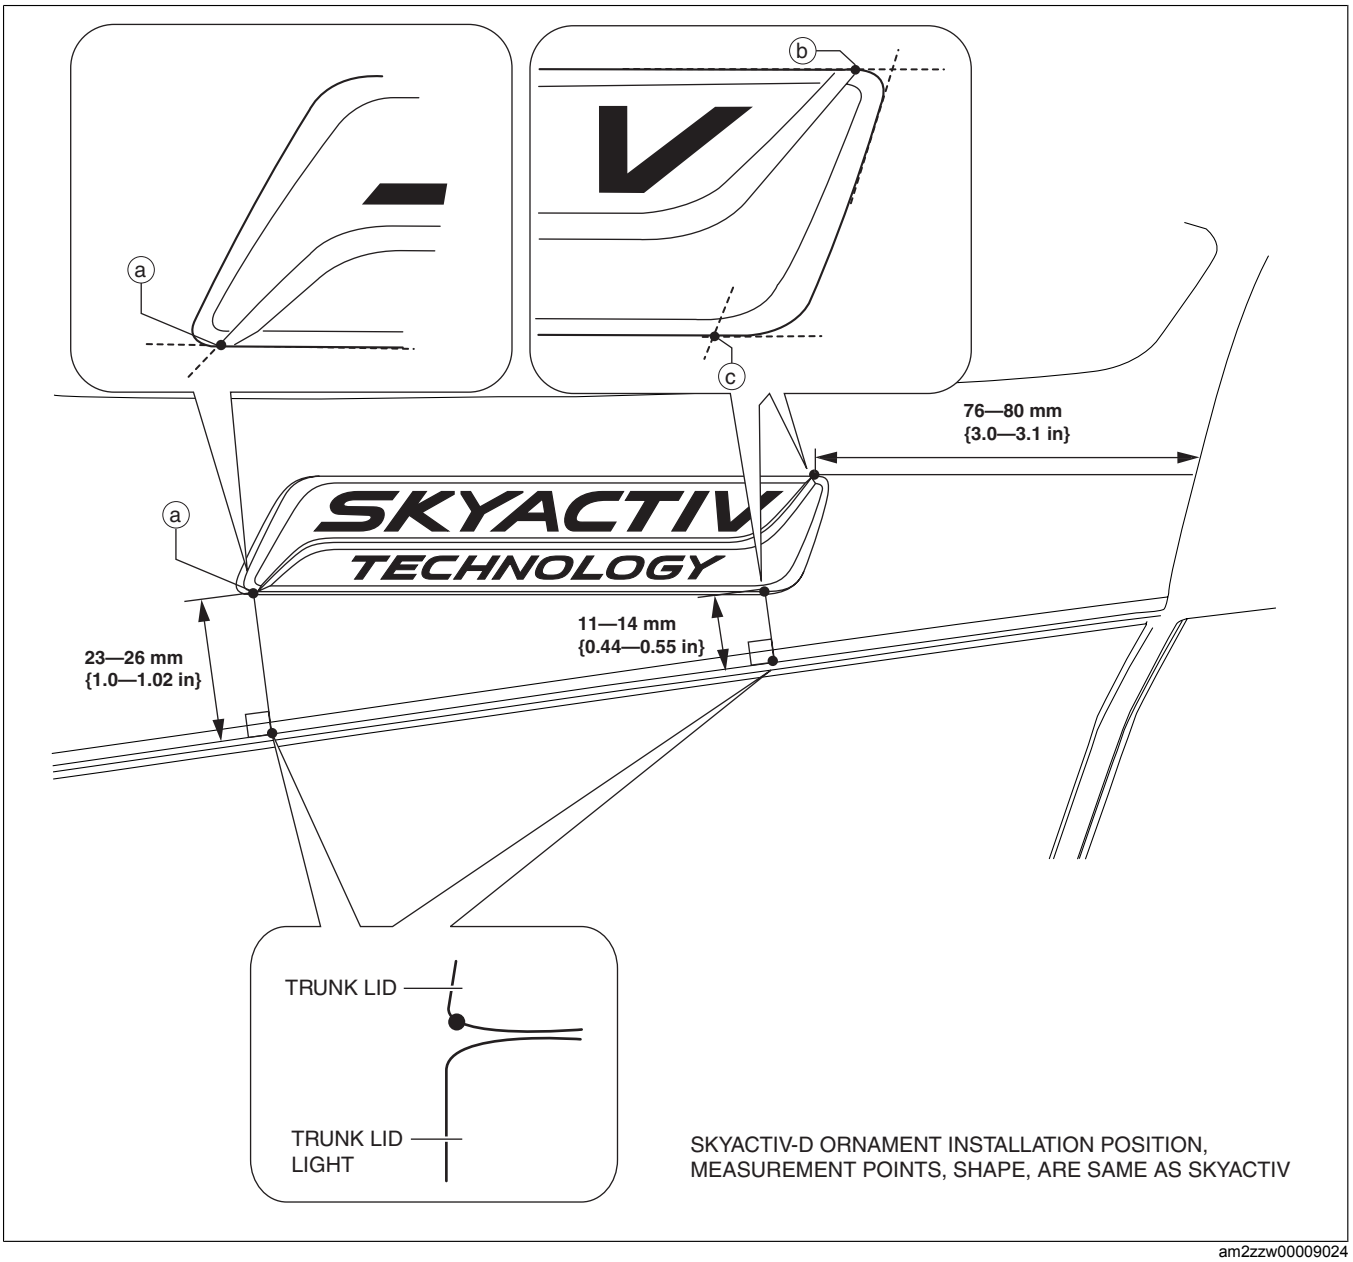


am2zzw00009024

4. Press the ornament to adhere the double-sided adhesive tape to the ornament installation area.

5HB


1. Remove any grease or dirt from the ornament installation surface of the liftgate.

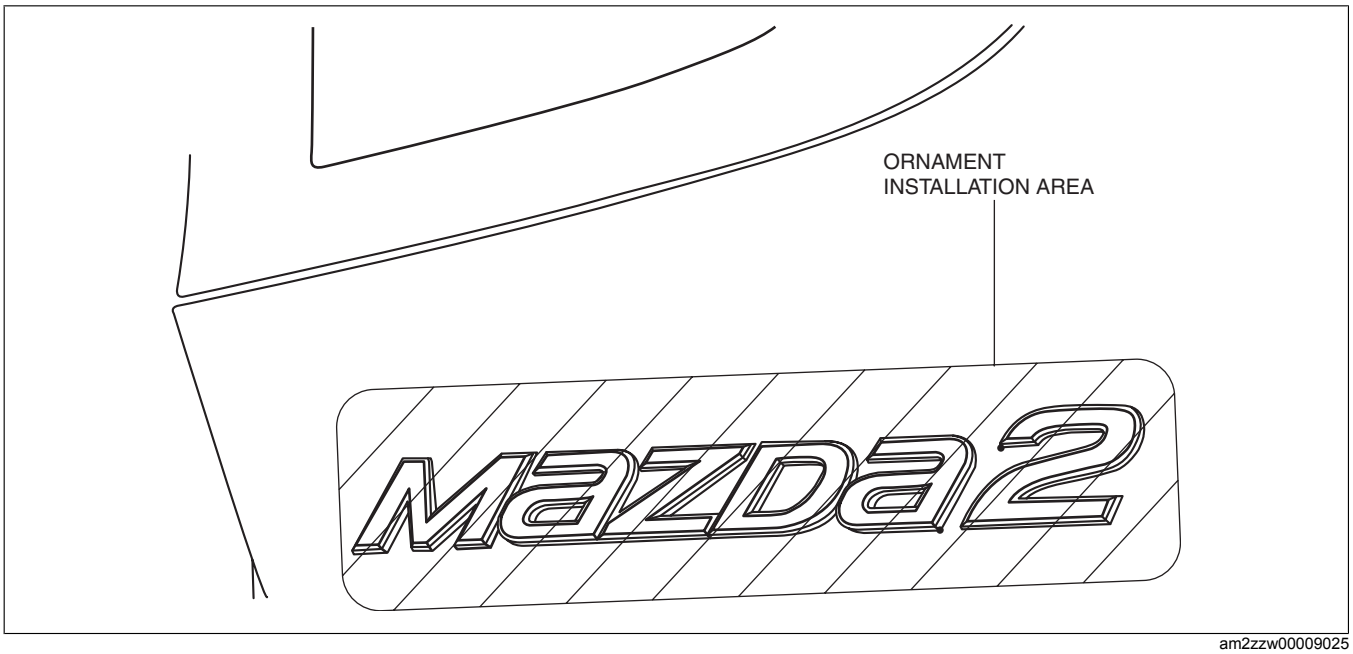

am2zzw00009025


2. Warm the ornament installation area to between 15 °C {59 °F} and 40 °C {104 °F} using a hot air drier.
3. Install the ornament to the position shown in the figure.

LH

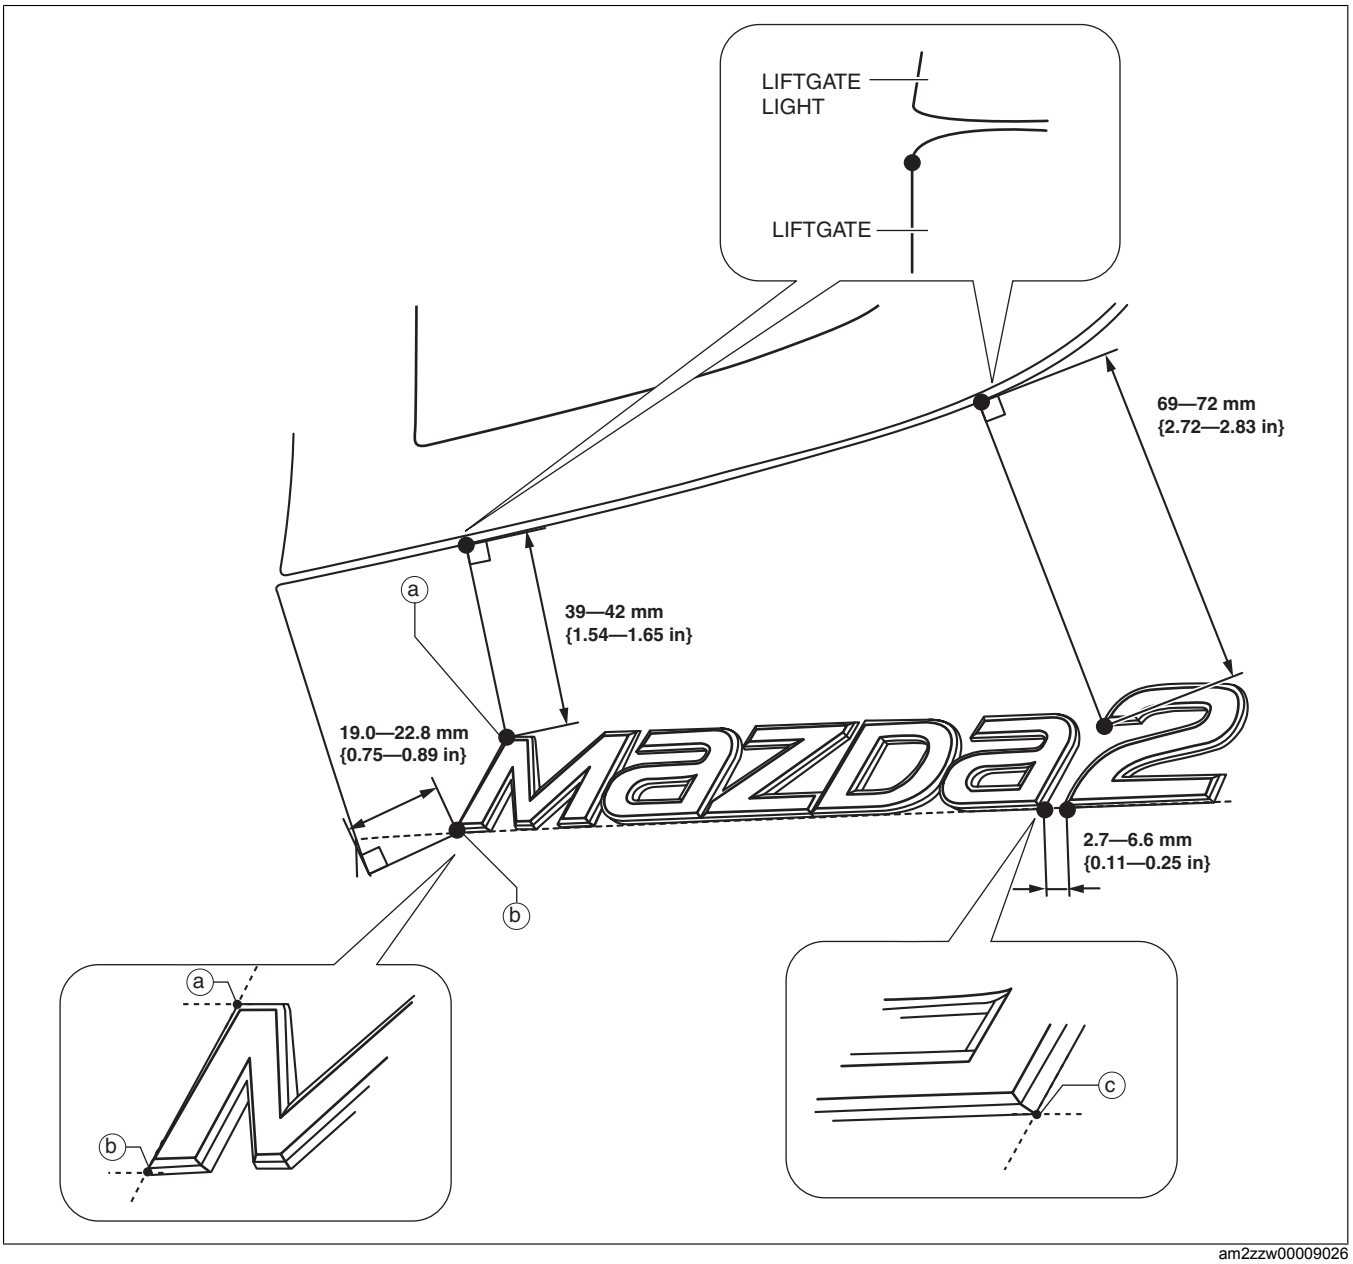

am2zzw00009026

RH

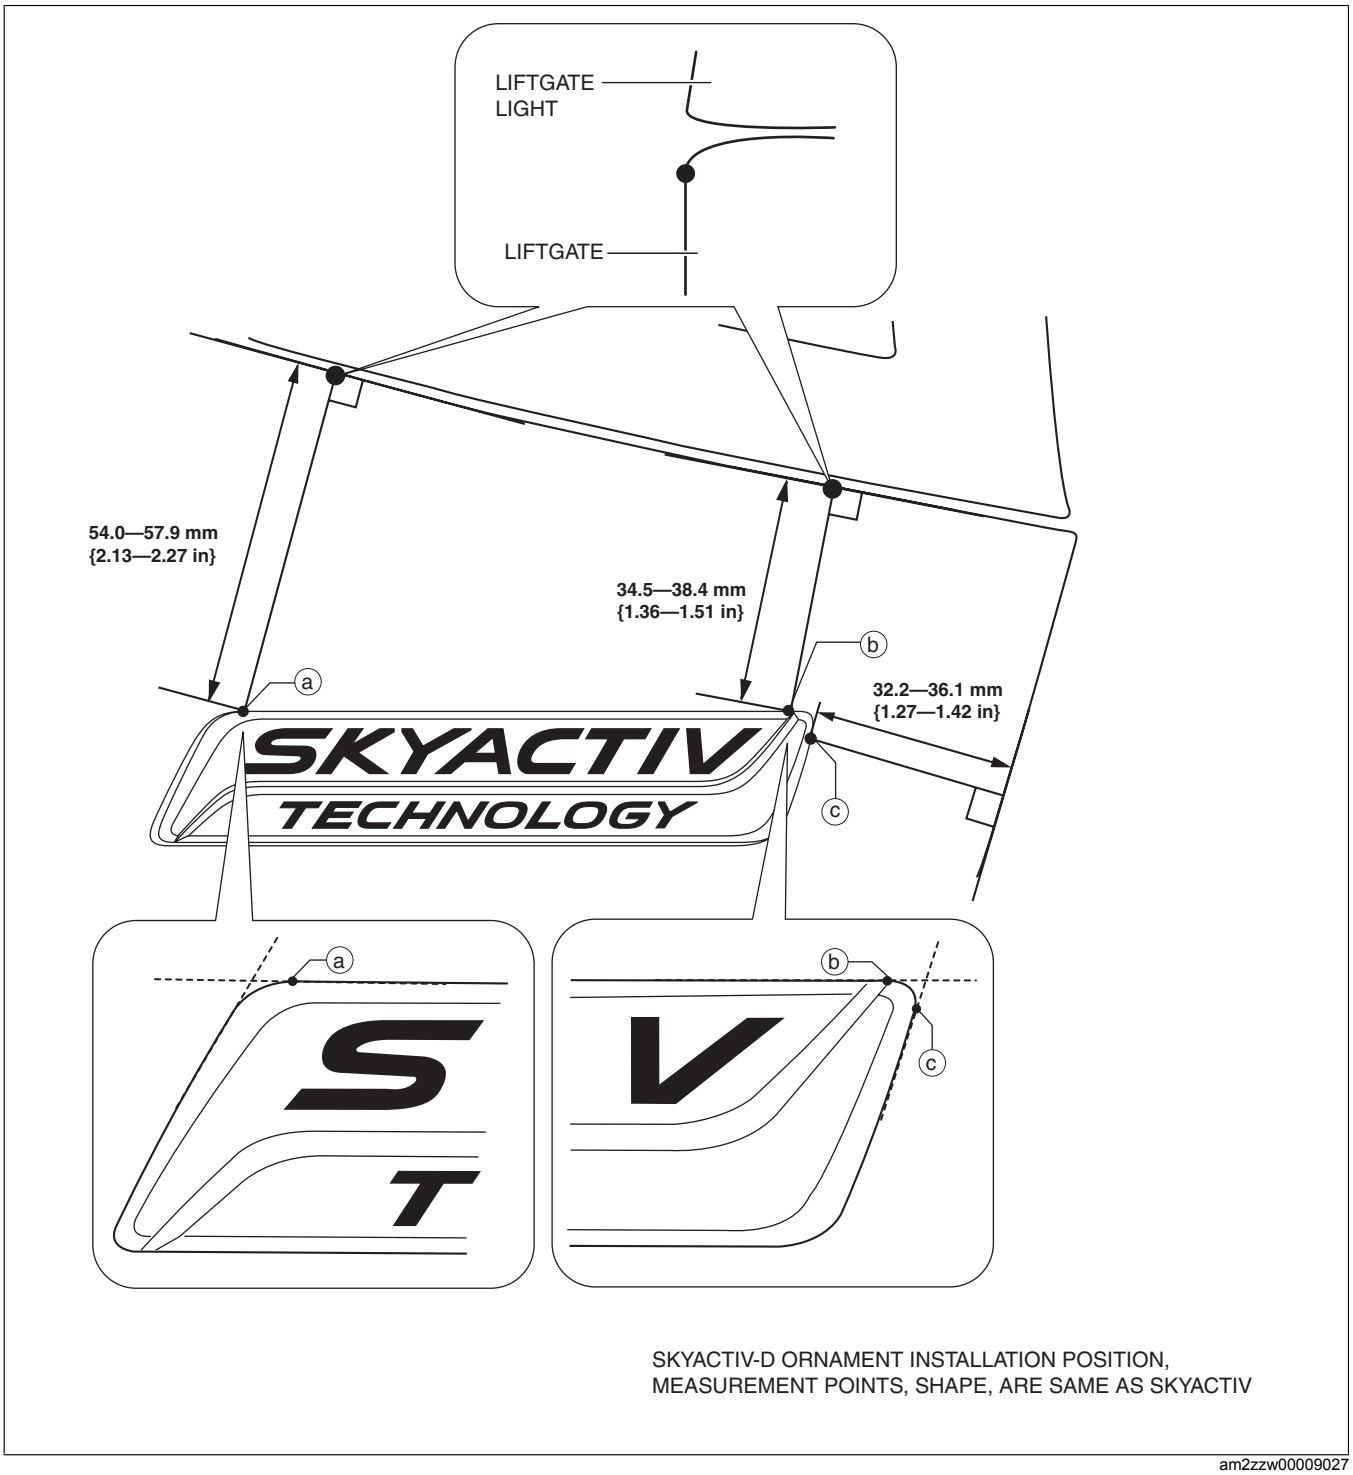

am2zzw00009027

4. Press the ornament to adhere the double-sided adhesive tape to the ornament installation area.