
A-PILLAR TRIM REMOVAL/INSTALLATION


id091700602700

1. Partially peel back the seaming welt.
2. Grasp the shaded areas shown in the figure, and pull the A-pillar trim in the direction of the arrow while detaching clips A, clip B.

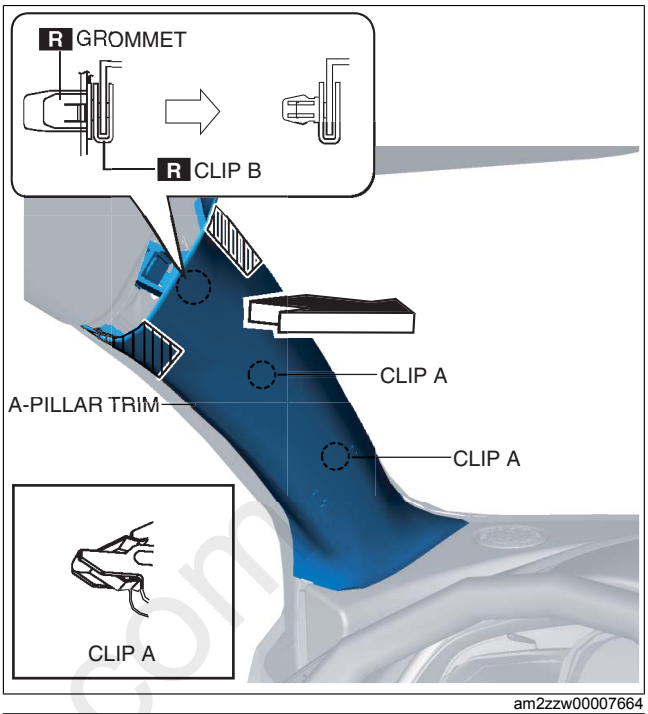


am2zzw00007664

3. Cut the lead wire connecting clip B and grommet using a nipper.

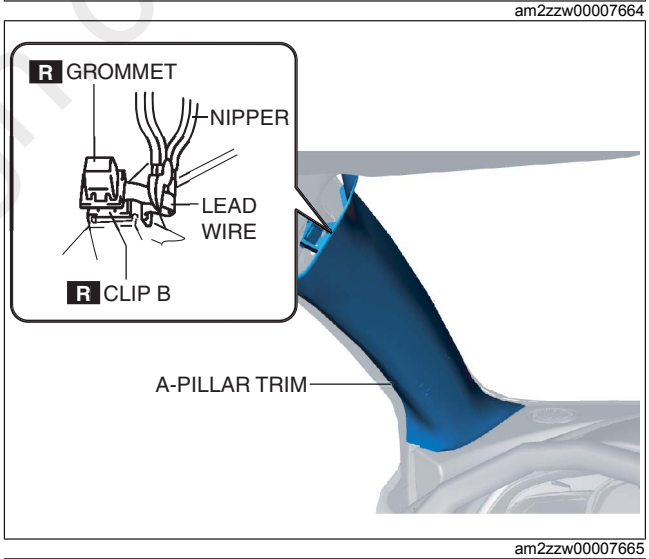

am2zzw00007665


4. Pull the A-pillar trim in the direction of the arrow shown in the figure while detaching the guides.

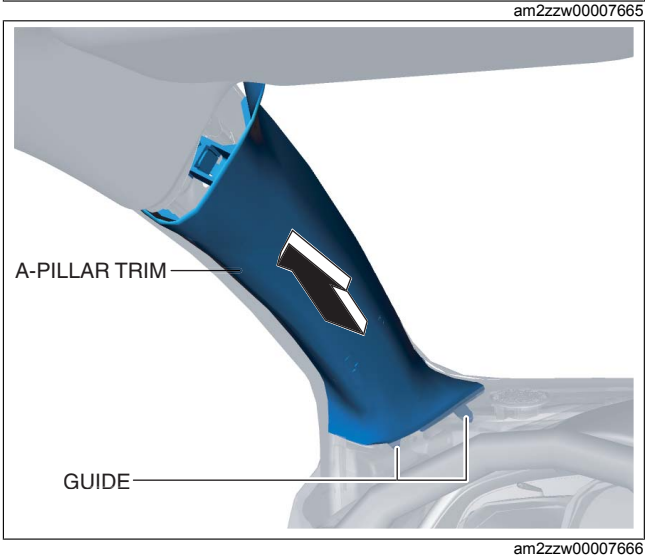

am2zzw00007666


cardiagn.com

5. Move the hook in the direction of arrow shown in the figure using a tape-wrapped flathead screwdriver and detach it from the front pillar inner panel.

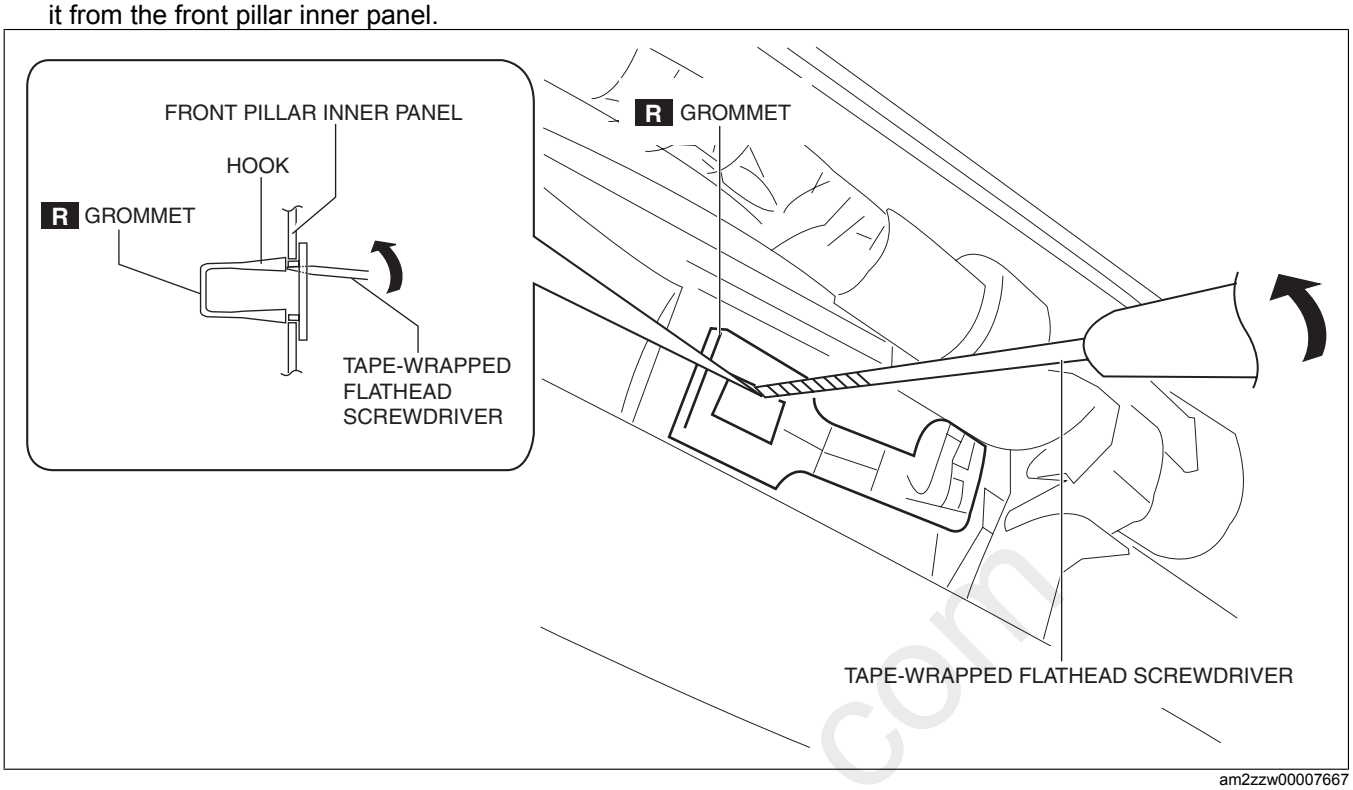

am2zzw00007667

6. Move the hook in the direction of arrow (1) shown in the figure using a tape-wrapped flathead screwdriver and detach it from the front pillar inner panel.

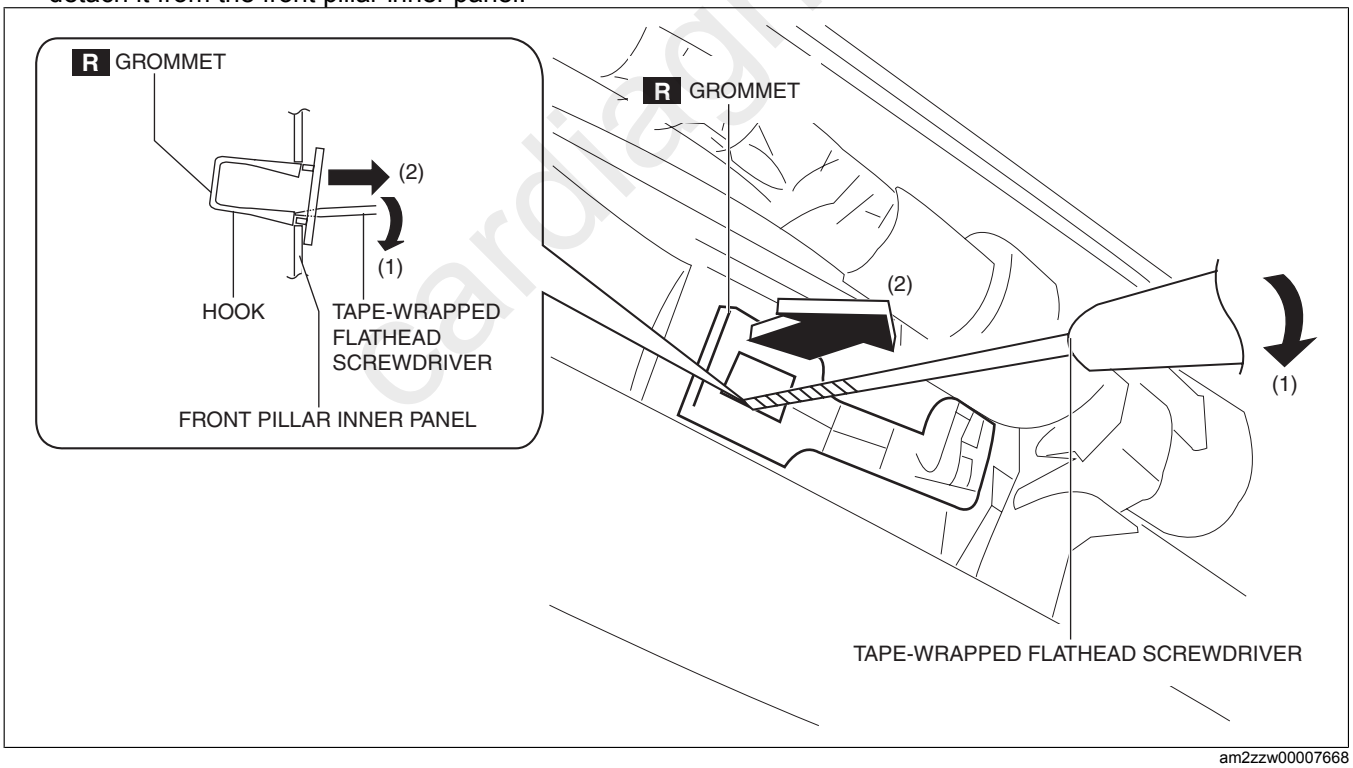

am2zzw00007668

7. Remove the grommet in the direction of the arrow (2) shown in the figure.
8. When installing the A-pillar, install new clips B and grommet to the A-pillar trim in advance.
9. Install in the reverse order of removal.