C-PILLAR TRIM REMOVAL/INSTALLATION


id091700603000

5HB

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
2. Remove the following parts:
   (1) Rear package tray (See REAR PACKAGE TRAY REMOVAL/INSTALLATION.)
   (2) Trunk covering (See TRUNK COVERING REMOVAL/INSTALLATION.)
   (3) Trunk board (See TRUNK BOARD REMOVAL/INSTALLATION.)
   (4) Trunk end trim (See TRUNK END TRIM REMOVAL/INSTALLATION.)
   (5) Rear seat cushion (See REAR SEAT CUSHION REMOVAL/INSTALLATION.)
   (6) Rear seat belt lower anchor installation bolt (See REAR SEAT BELT REMOVAL/INSTALLATION.)
   (7) Rear scuff plate (See REAR SCUFF PLATE REMOVAL/INSTALLATION.)
   (8) Trunk side trim (See TRUNK SIDE TRIM REMOVAL/INSTALLATION.)


   Note
   - Do not remove the trunk side trim completely but peel back a certain range of the area so that the cargo compartment light connector can be disconnected (LH only) and the C-pillar trim can be removed.

3. Partially peel back the seaming welt.
4. Pull the C-pillar trim in the order of arrows (1) and (2) shown in the figure and detach clips A and the pin.

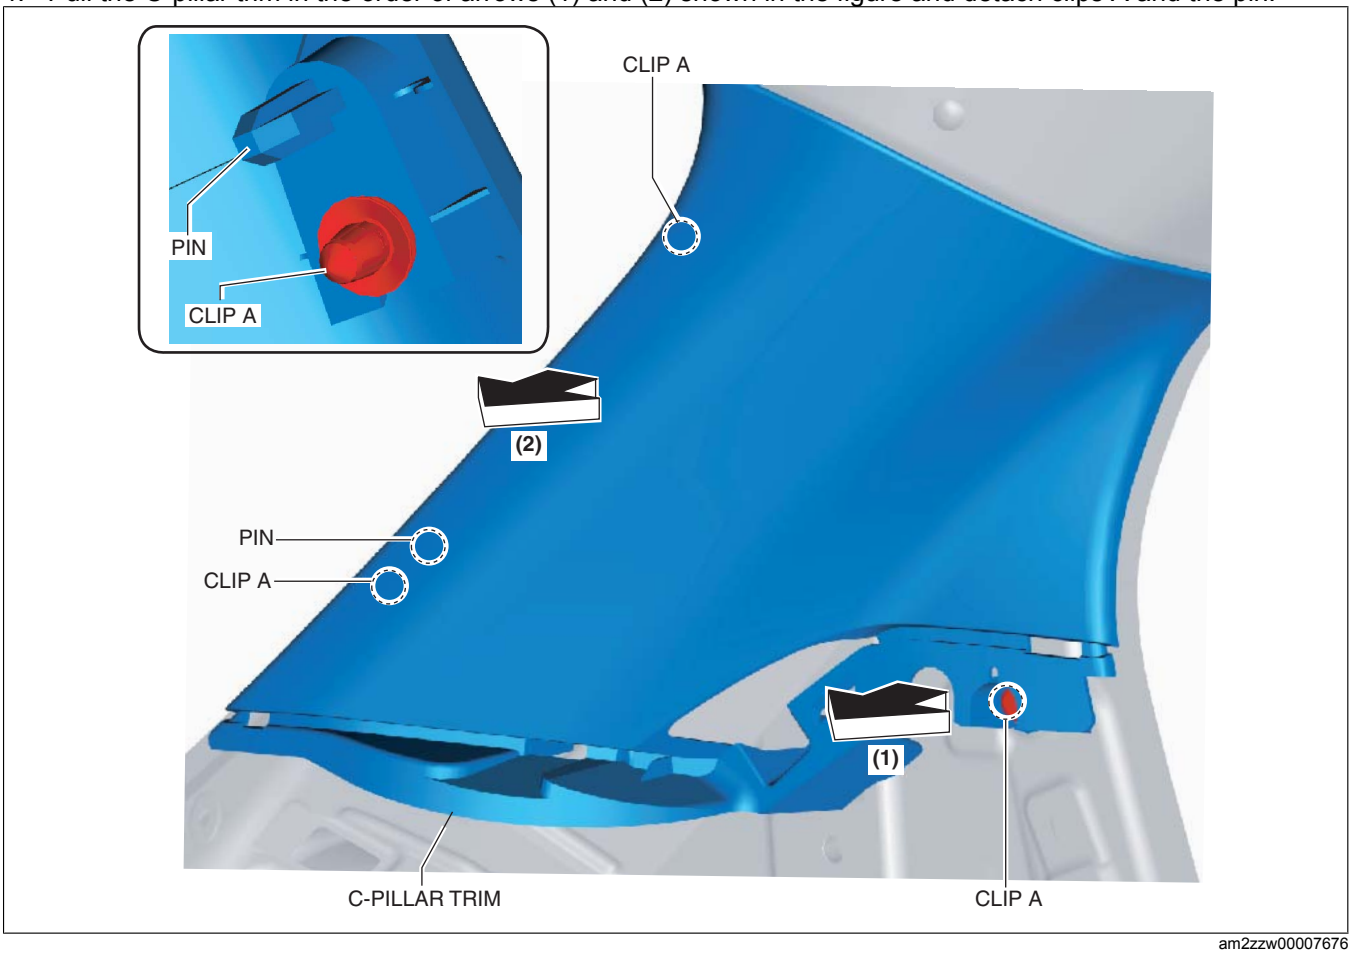


am2zzw00007676

5. Pull the C-pillar trim in the direction of the arrow shown in the figure and detach the clip from the grommet.

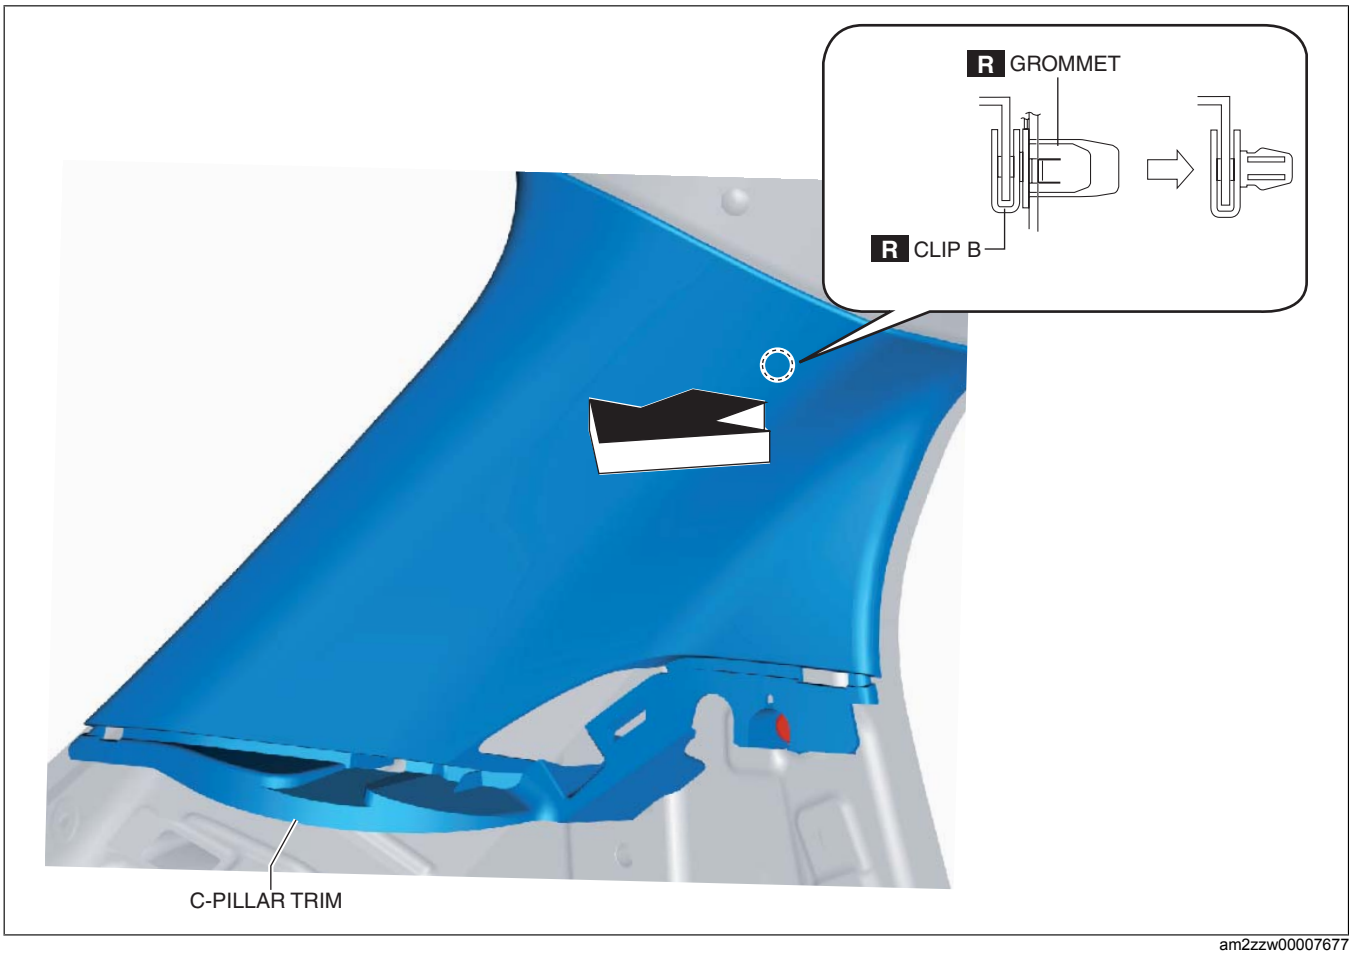


am2zzw00007677

6. Cut the lead wire connecting clips B and grommet using a nipper.

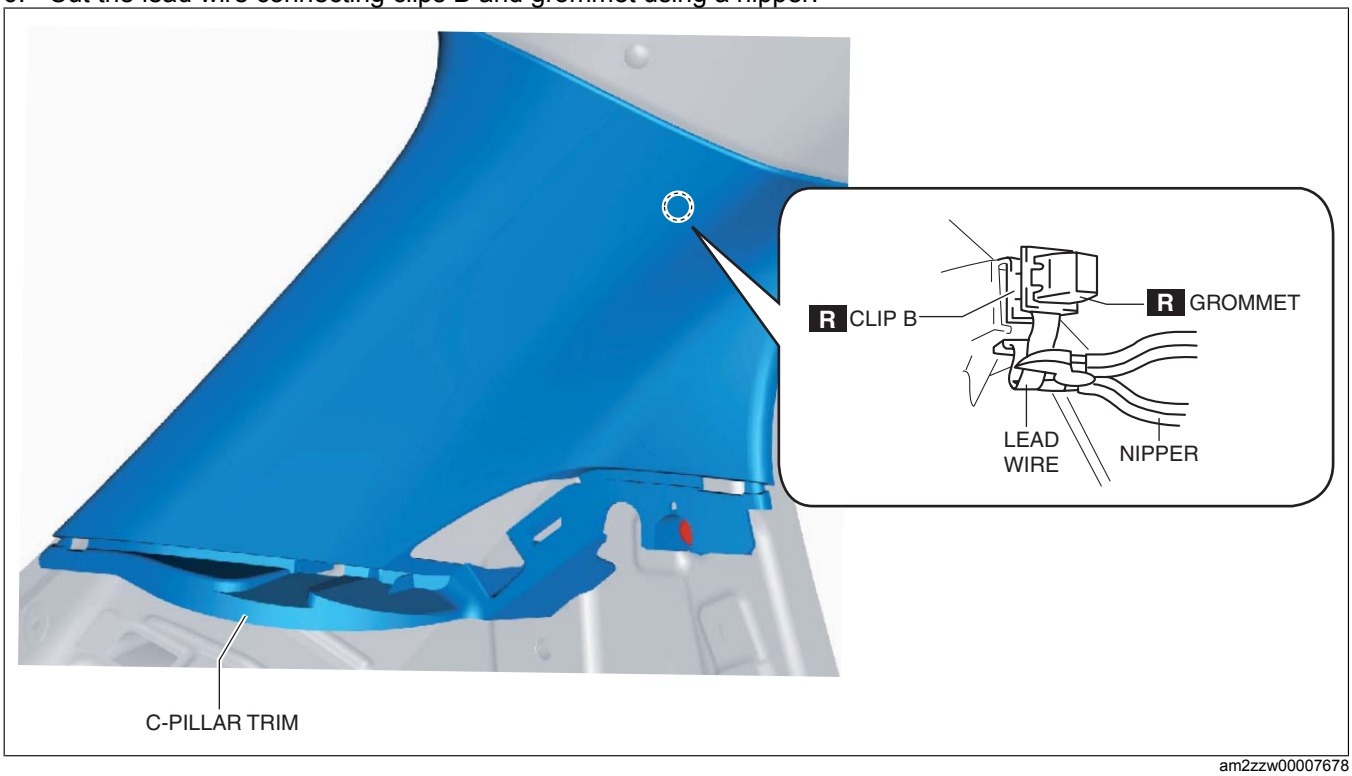


am2zzw00007678

7. Pull out the rear seat belt.
8. Move the hook in the direction of arrow shown in the figure using a tape-wrapped flathead screwdriver and detach it from the inner panel.

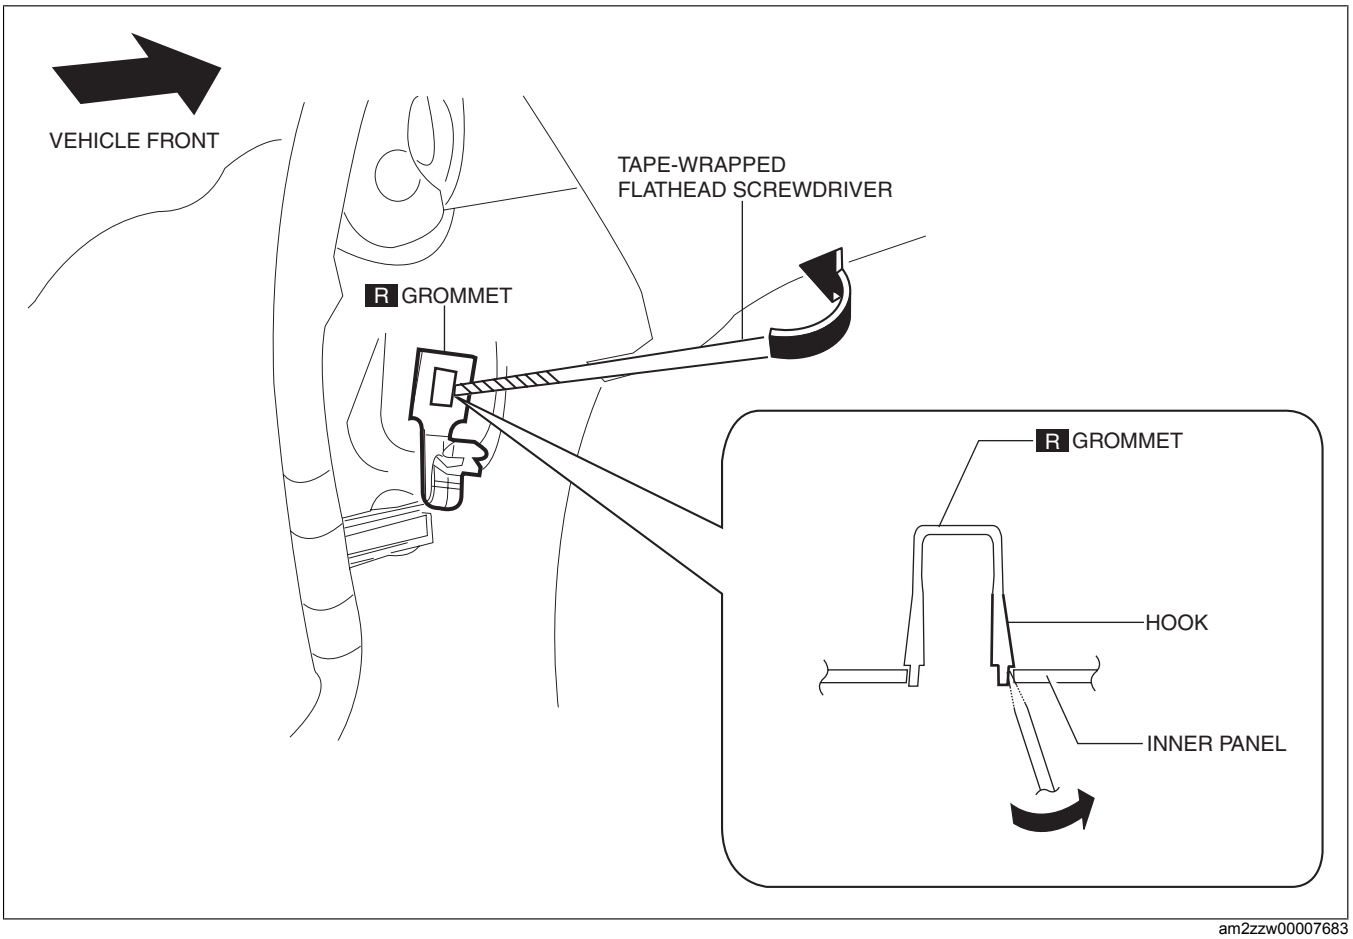

am2zzw00007683

9. Move the hook in the direction of arrow shown in the figure using a tape-wrapped flathead screwdriver and detach it from the inner panel.

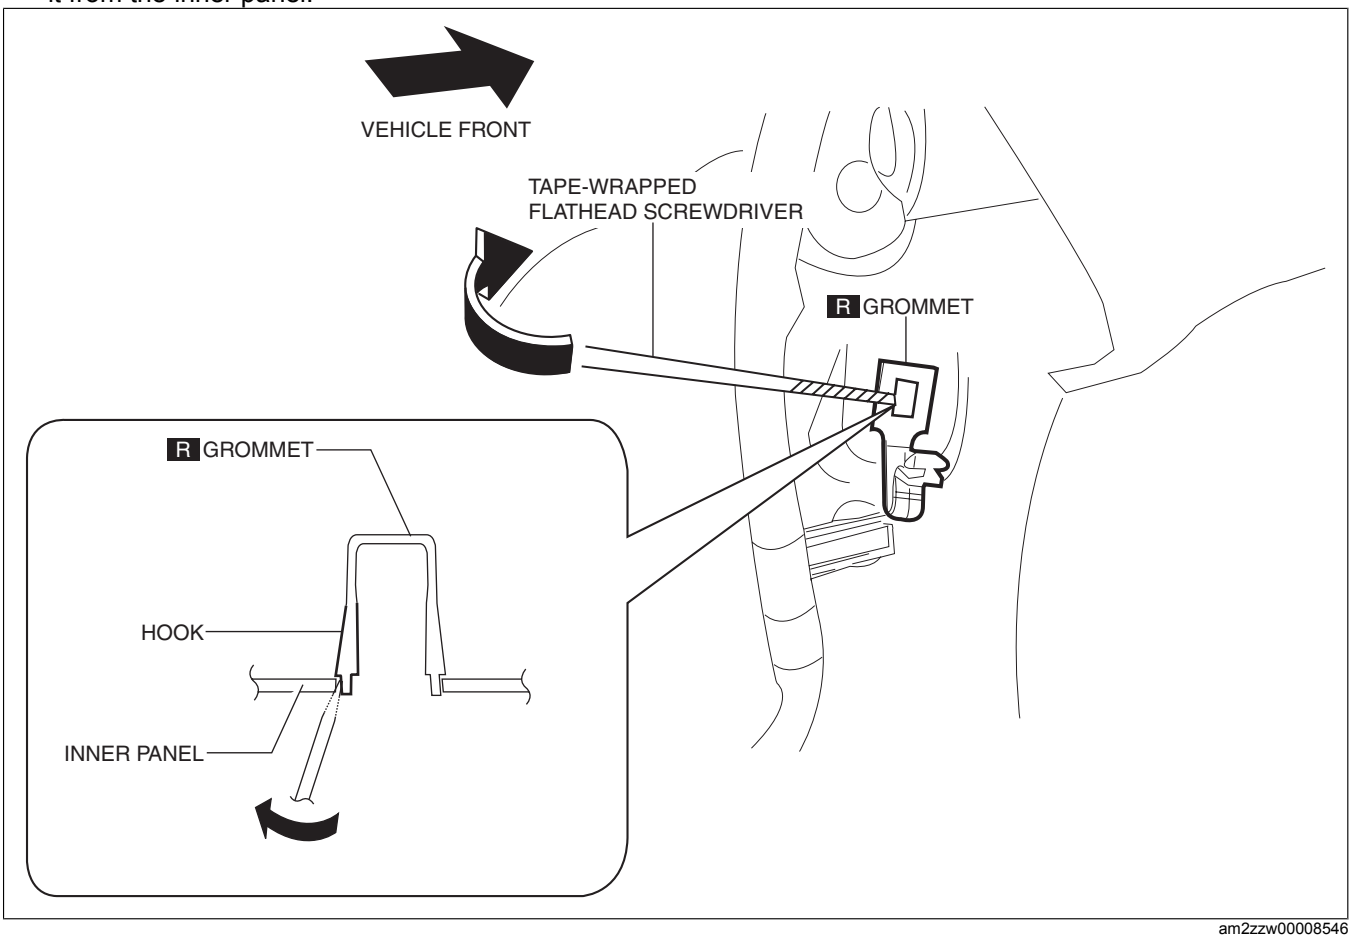


am2zzw00008546

10. When installing the C-pillar, install new clips B and grommet to the C-pillar trim in advance.
11. Install in the reverse order of removal.


4SD

1. Lower the rear seat back.
2. Partially peel back the seaming welt.
3. Remove the fastener.

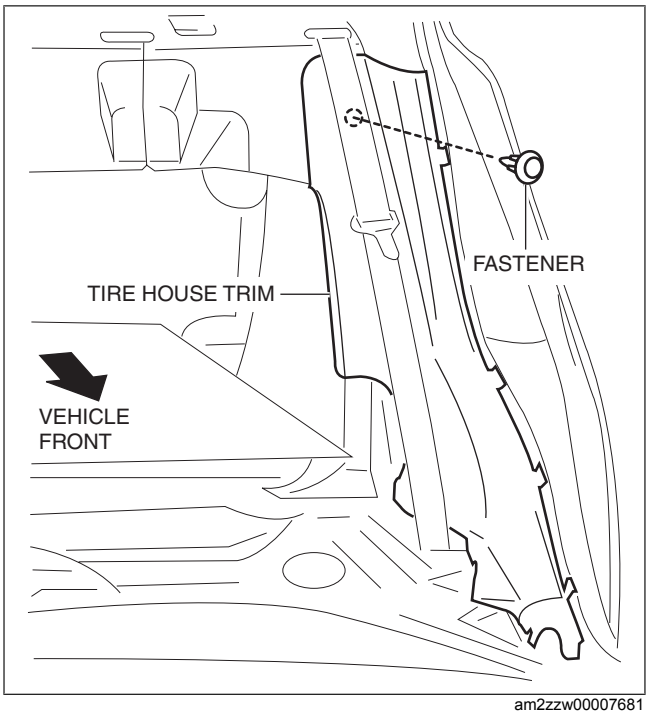


am2zzw00007681

4. Move the tire house trim in the direction of the arrow shown in the figure and peel it back partially until the hooks and clips A and B are detached.

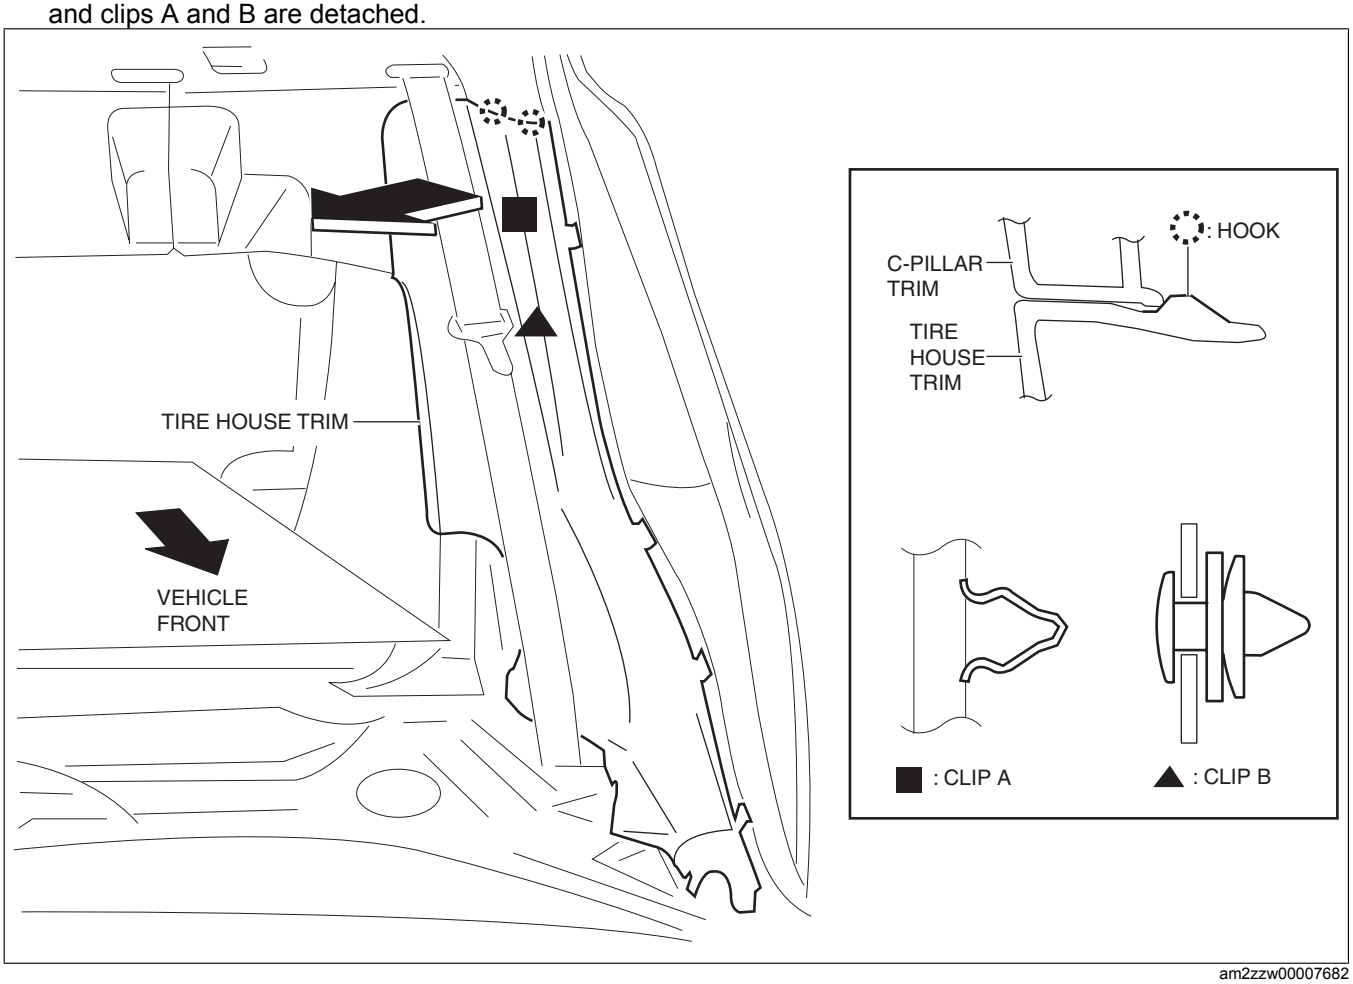


am2zzw00007682

5. Pull the C-pillar trim in the direction of the arrow in the order of (1), (2) while detaching clips A, clip B and clip C.

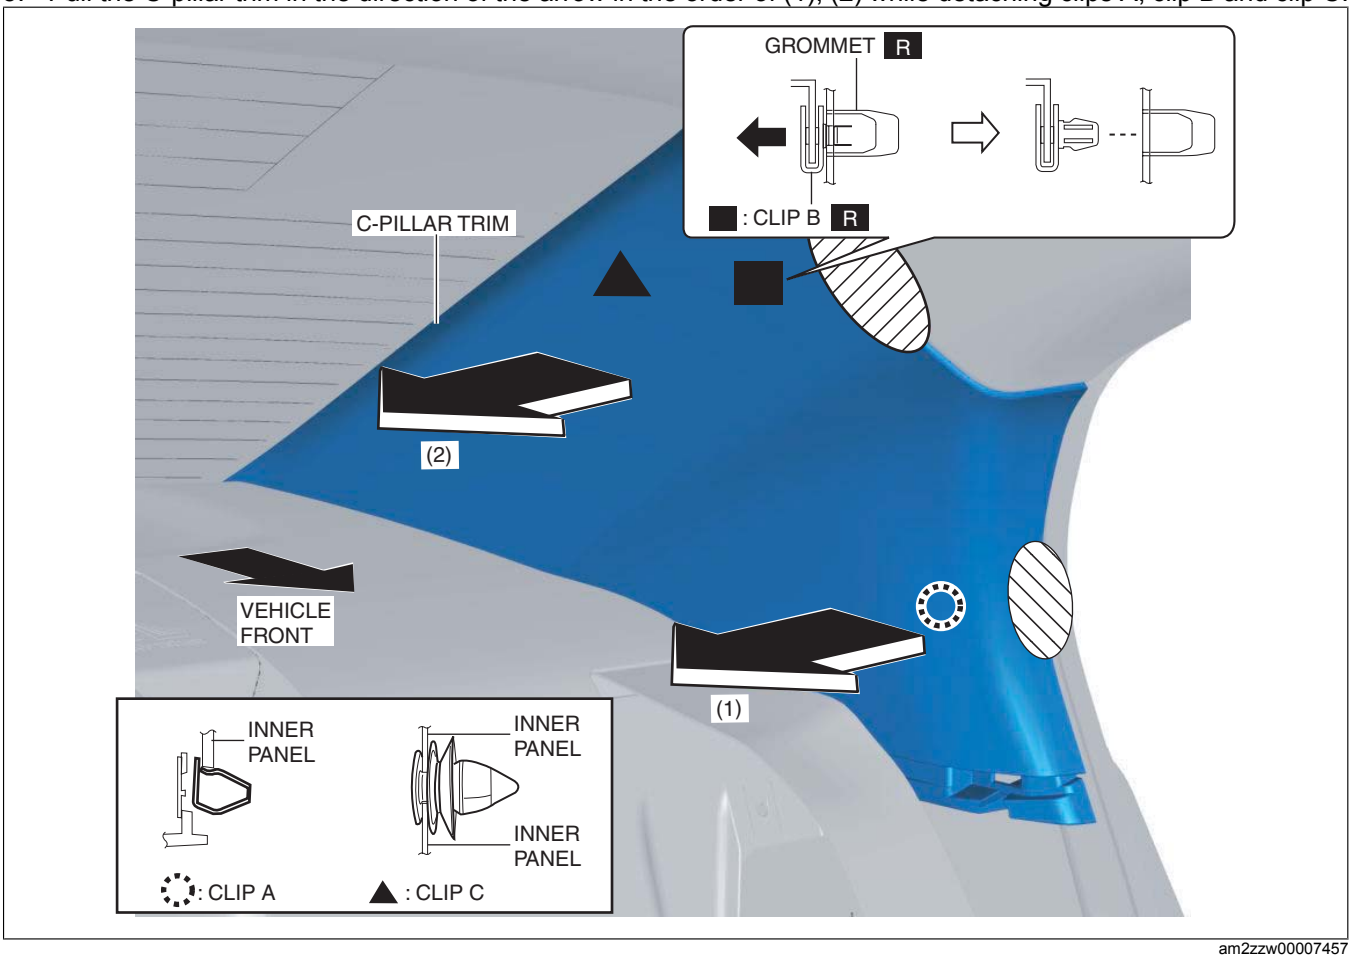


am2zzw00007457

6. Cut the lead wire connecting clips B and grommet using a nipper.

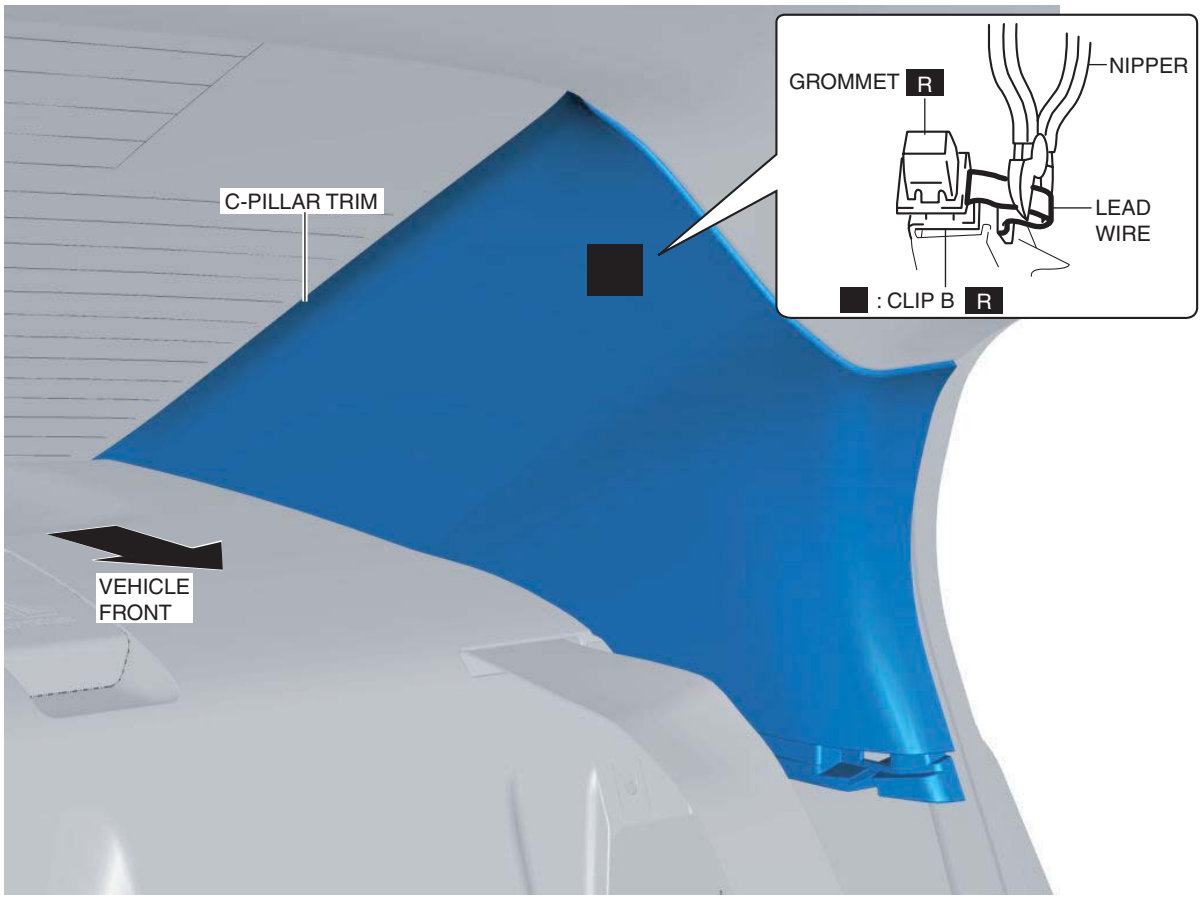


am2zzw00007458

7. Remove the C-pillar trim in the direction of the arrow in the order of (1), (2) while detaching guide A, guide B, and guide C.

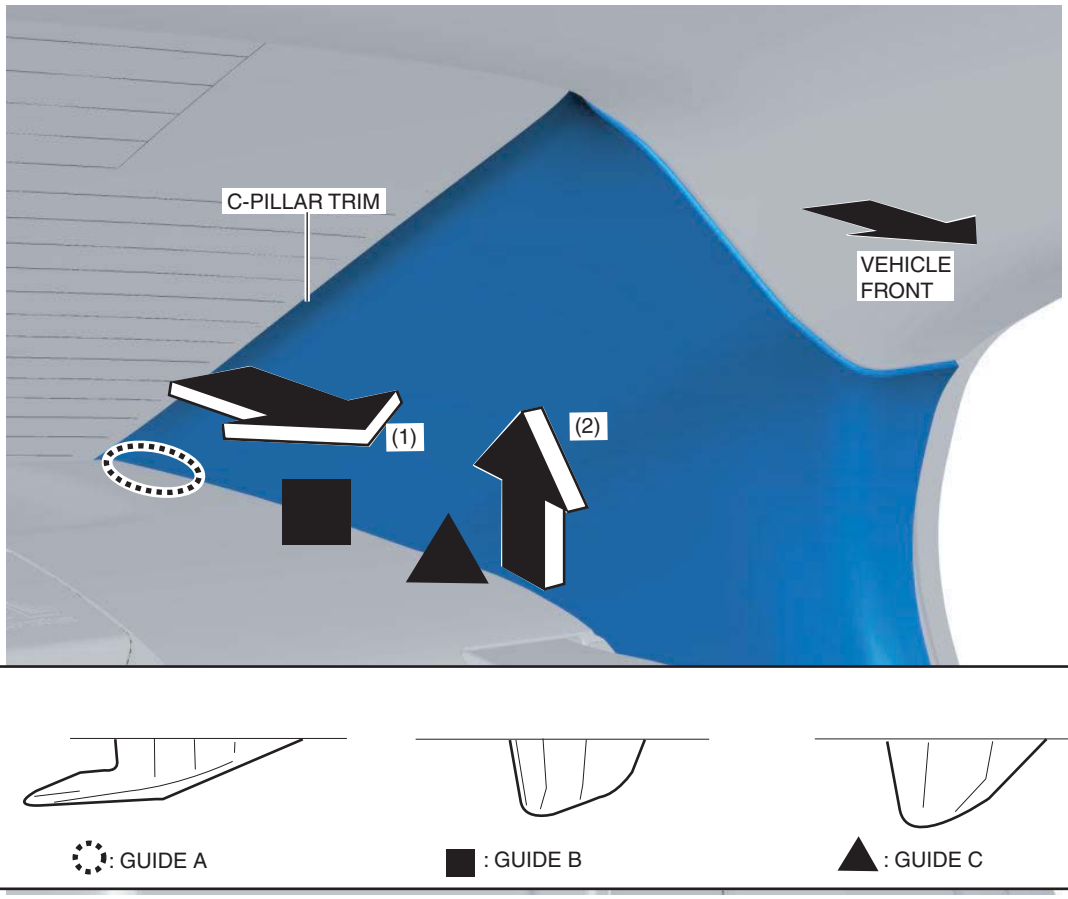


am2zzw00007459

8. Move the hook in the direction of arrow shown in the figure using a tape-wrapped flathead screwdriver and detach it from the inner panel.

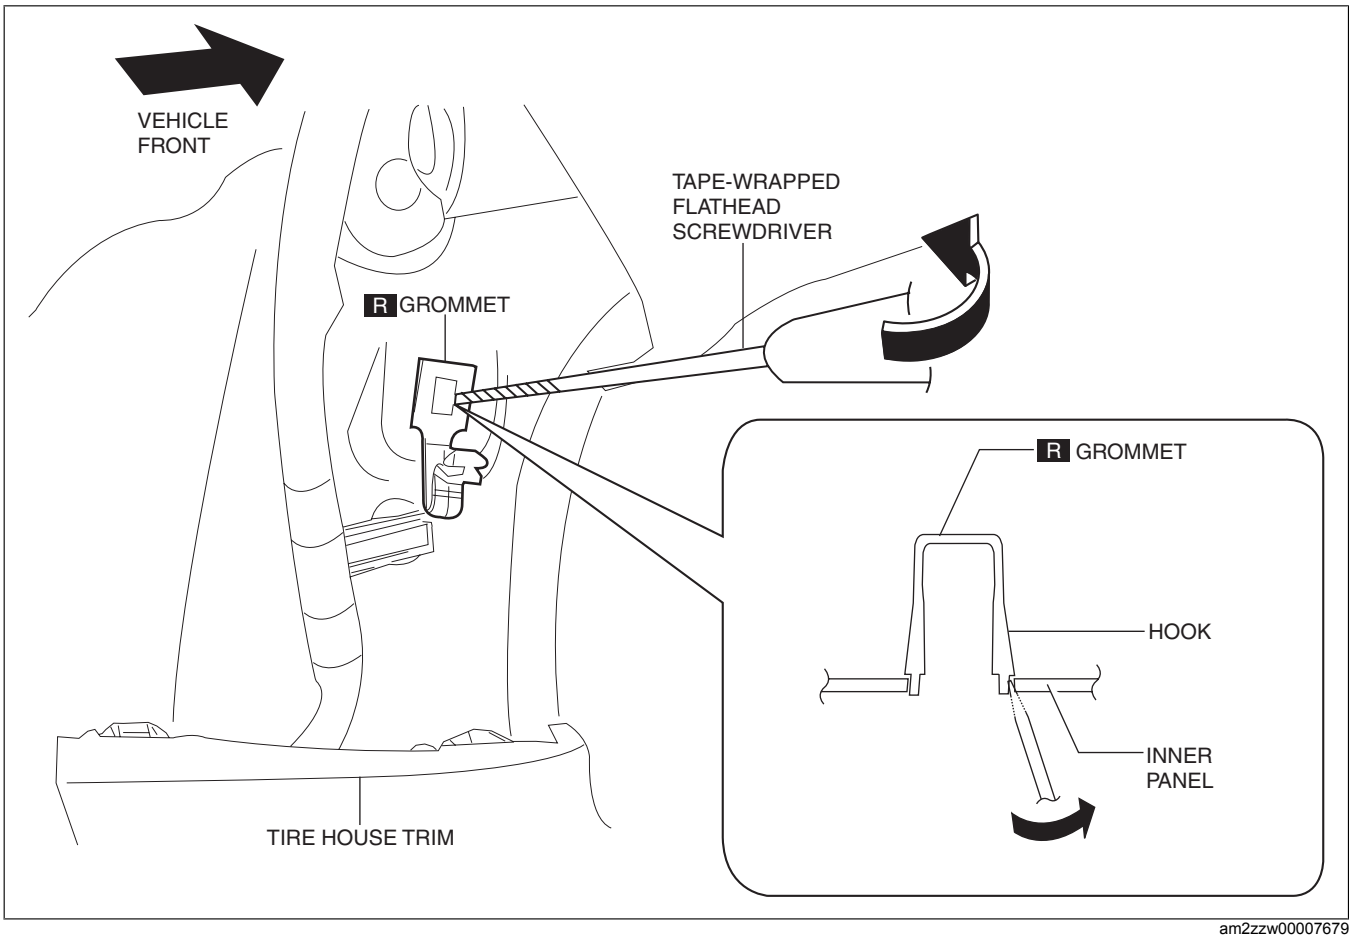

am2zzw00007679

9. Move the hook in the direction of arrow shown in the figure using a tape-wrapped flathead screwdriver and detach it from the inner panel.

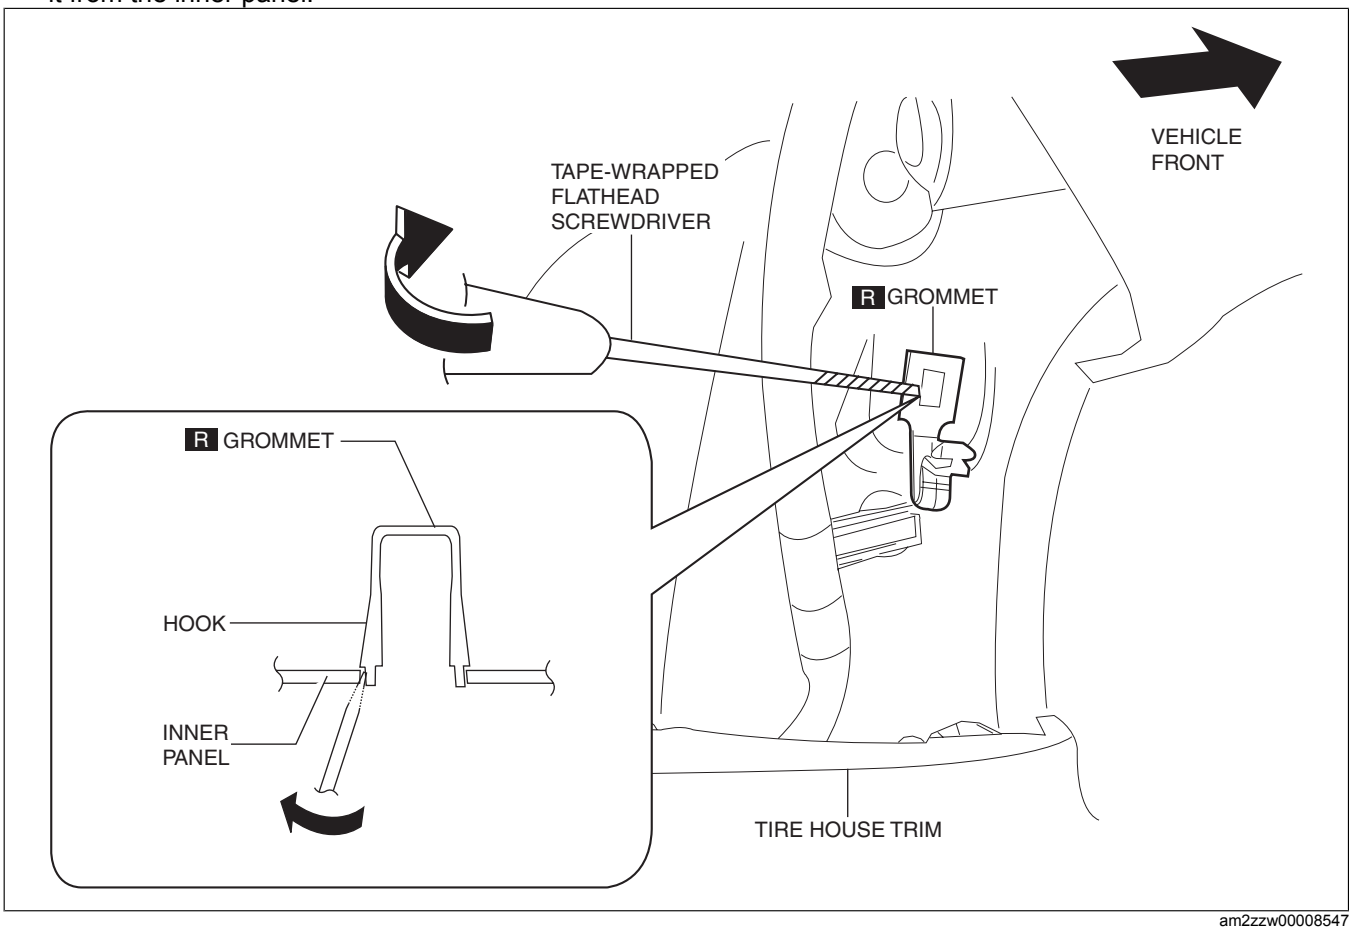

am2zzw00008547

10. When installing the C-pillar, install new clips B and grommet to the C-pillar trim in advance.
11. Install in the reverse order of removal.