
PASSENGER-SIDE LOWER PANEL REMOVAL/INSTALLATION

id091700606300


Removal

1. Remove the following parts:
   (1) Passenger-side front scuff plate (See FRONT SCUFF PLATE REMOVAL/INSTALLATION.)
   (2) Passenger-side front side trim (See FRONT SIDE TRIM REMOVAL/INSTALLATION.)
   (3) Glove compartment (See GLOVE COMPARTMENT REMOVAL/INSTALLATION.)
   (4) Center panel (See CENTER PANEL REMOVAL/INSTALLATION.)
   (5) Dashboard under cover (See DASHBOARD UNDER COVER REMOVAL/INSTALLATION.)
2. Partially peel back the seaming welt.
3. Remove the bolt.

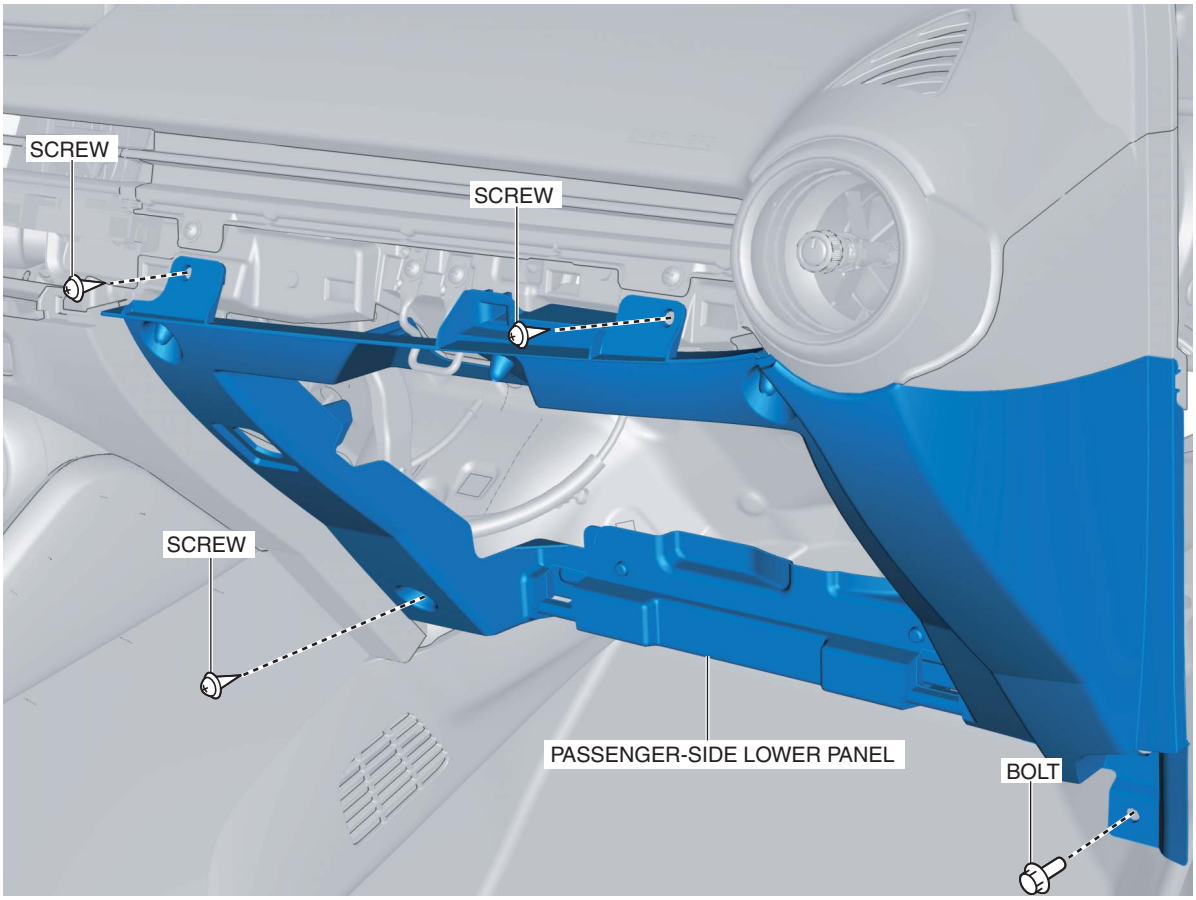

am2zzw00007611


4. Remove the screws.
5. Move the passenger-side lower panel in the order of arrows (1), (2), (3), and (4) shown in the figure, and detach the clips, hooks, tab, and guide from the dashboard.

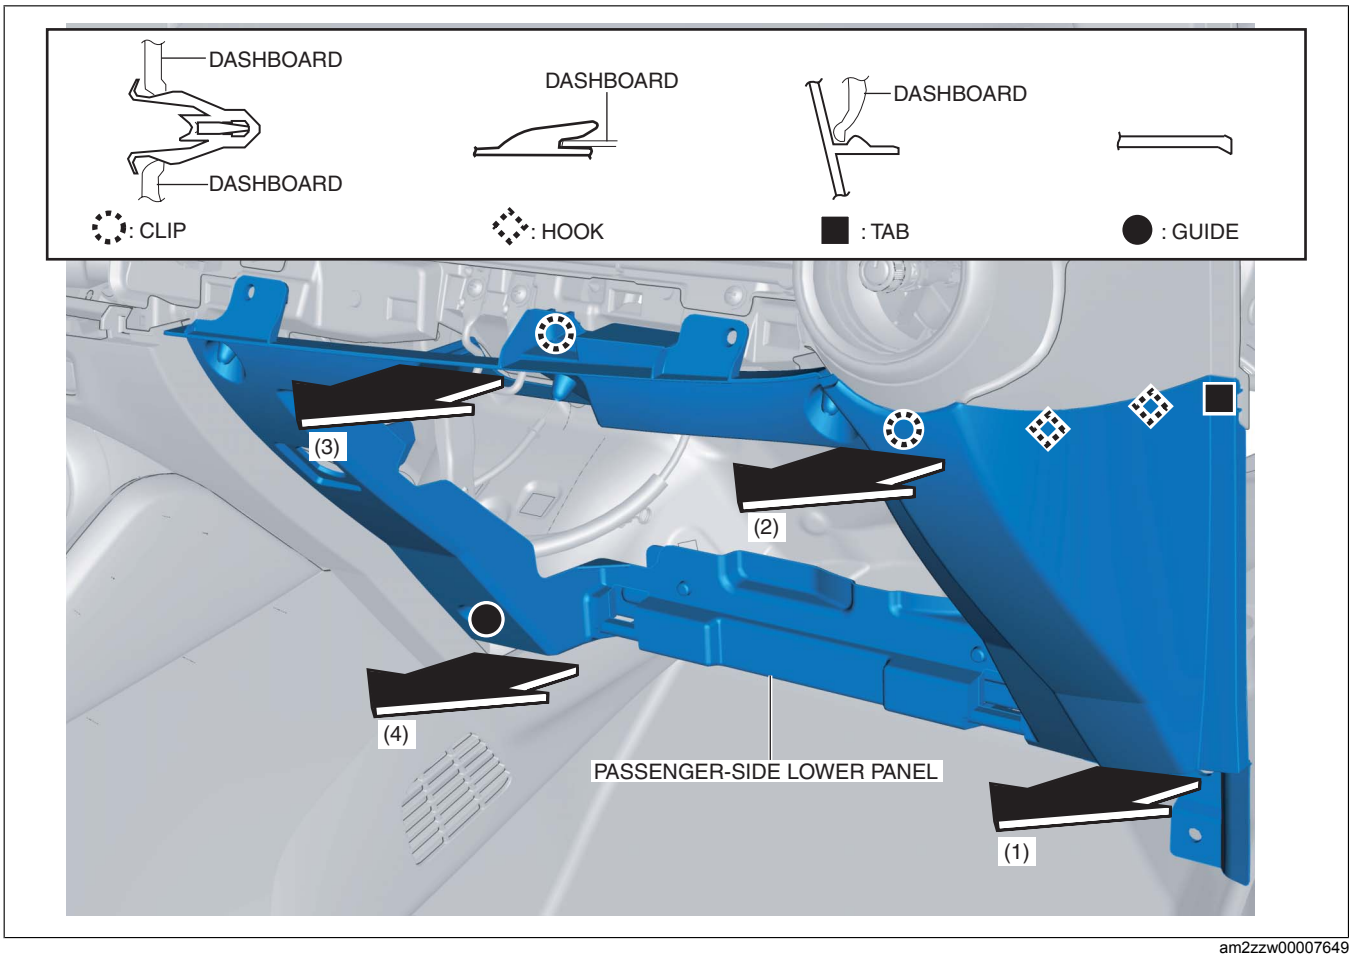

am2zzw00007649


Installation

1. Move the passenger-side lower panel in the order of arrows (1), (2), (3), and (4) shown in the figure, and attach the clips, hooks, tab, and guide to the dashboard.

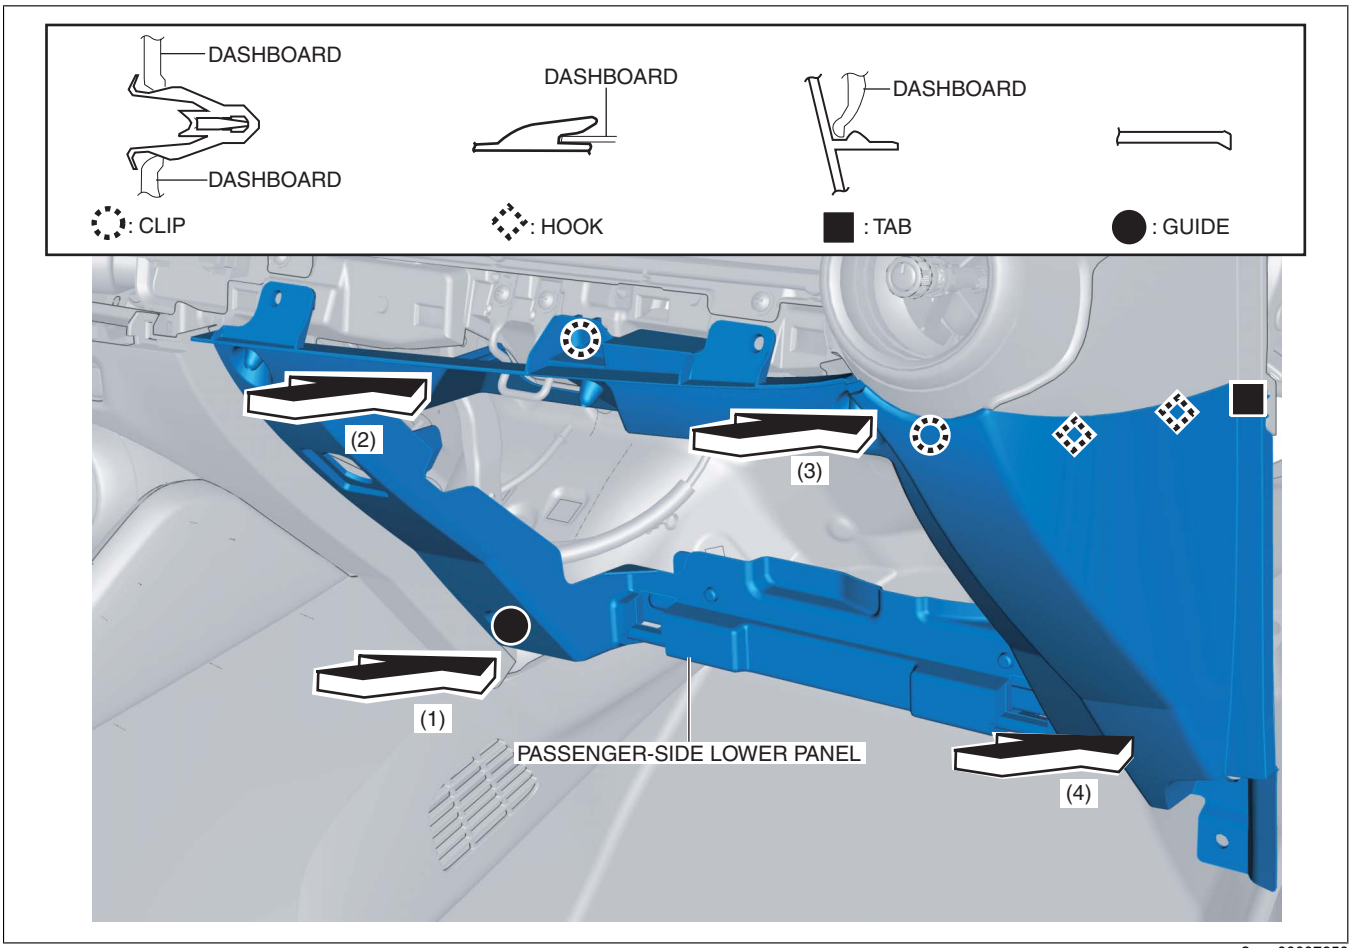


am2zzw00007650

2. Assemble the passenger-side lower panel to the dashboard and tighten the bolt and screws temporarily.

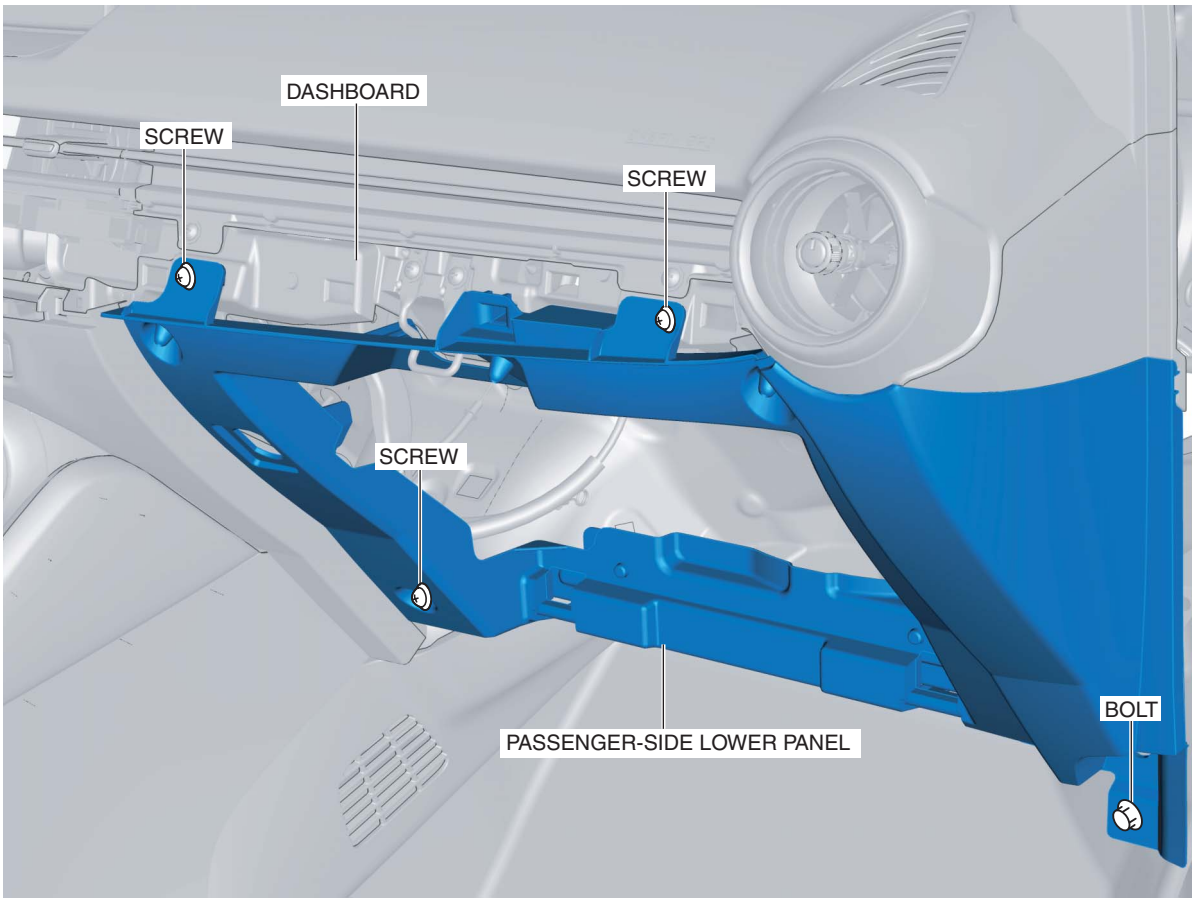


am2zzw00007614

3. Install the glove compartment. (See GLOVE COMPARTMENT REMOVAL/INSTALLATION.)
4. Measure the gaps between the glove compartment and the passenger-side lower panel and verify that the measured value is within the standard value.
   - If not within the standard value, move the passenger-side lower panel and adjust the installation position.

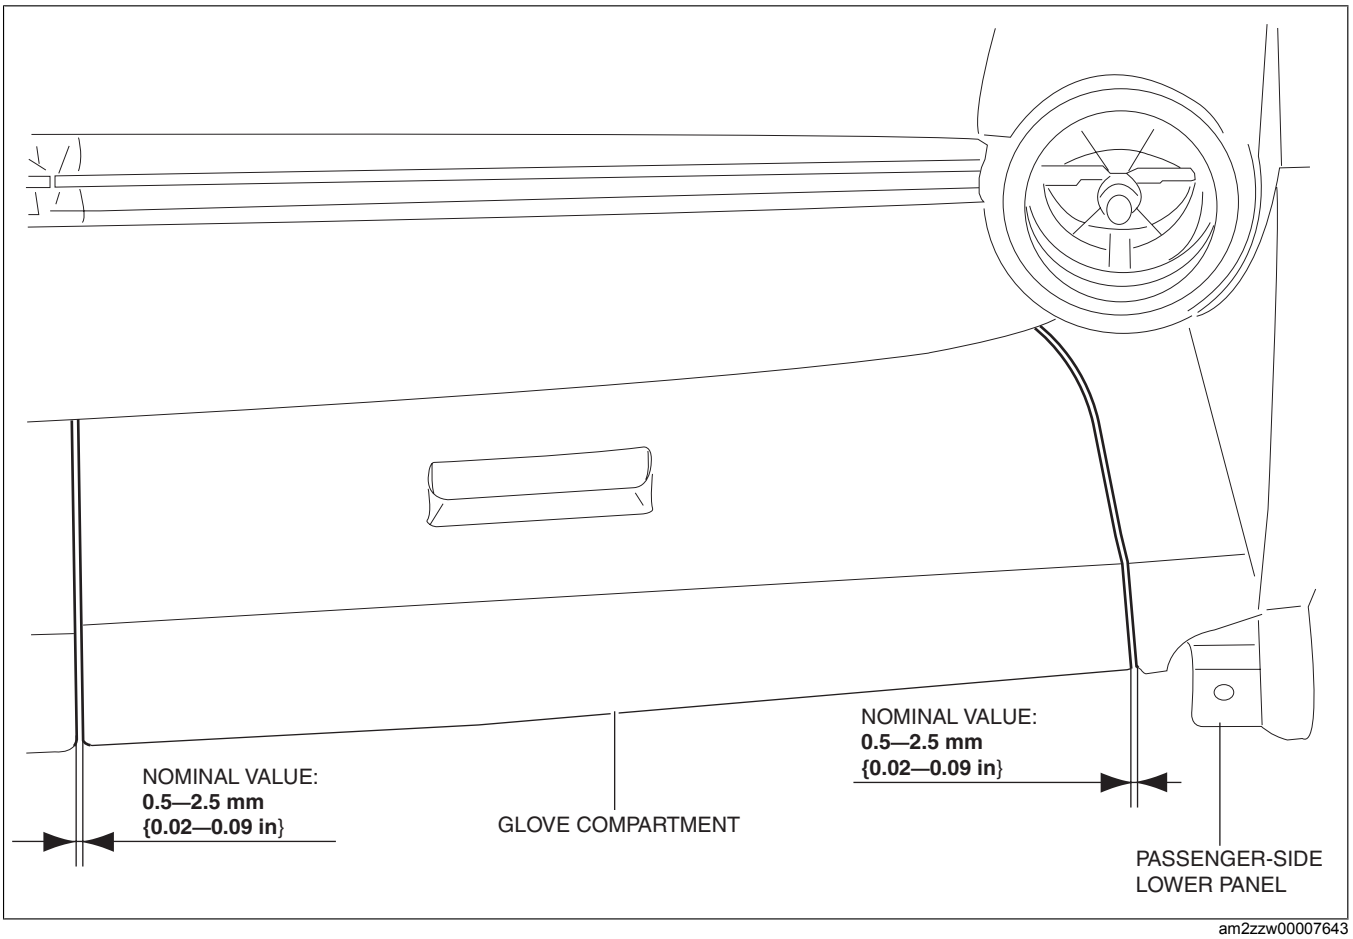

am2zzw00007643

5. Remove the glove compartment. (See GLOVE COMPARTMENT REMOVAL/INSTALLATION.)
6. Tighten the bolt and screws completely.

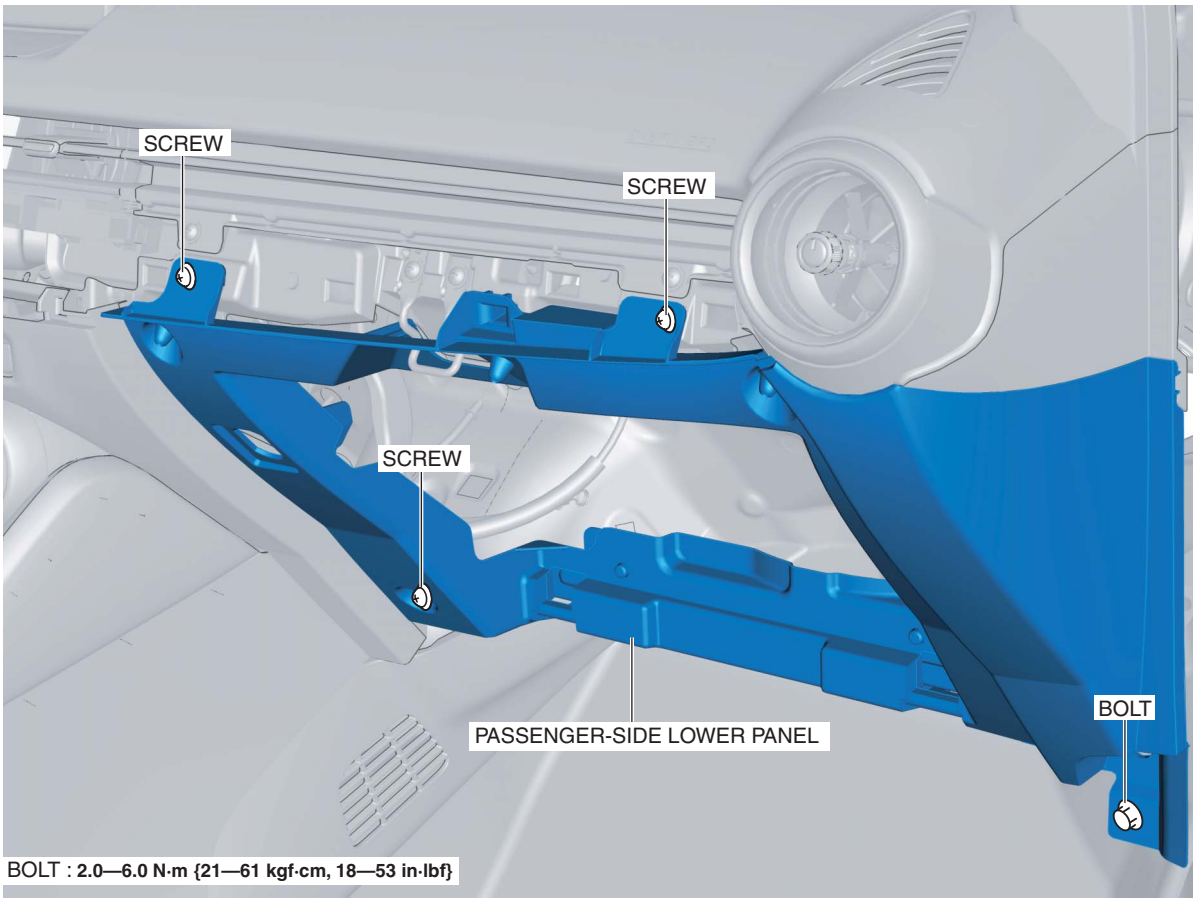

am2zzw00007616

7. Install the following parts:
   (1) Dashboard under cover (See DASHBOARD UNDER COVER REMOVAL/INSTALLATION.)
   (2) Center panel (See CENTER PANEL REMOVAL/INSTALLATION.)
   (3) Glove compartment (See GLOVE COMPARTMENT REMOVAL/INSTALLATION.)
   (4) Passenger-side front side trim (See FRONT SIDE TRIM REMOVAL/INSTALLATION.)
   (5) Passenger-side front scuff plate (See FRONT SCUFF PLATE REMOVAL/INSTALLATION.)