
## REAR COMBINATION LIGHT SHORT-CORD REMOVAL/INSTALLATION

id091800025100

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Remove the rear combination light. (See REAR COMBINATION LIGHT REMOVAL/INSTALLATION.)
3. Partially peel back the trunk side trim. (See TRUNK SIDE TRIM REMOVAL/INSTALLATION.)
4. Disconnect the connector.

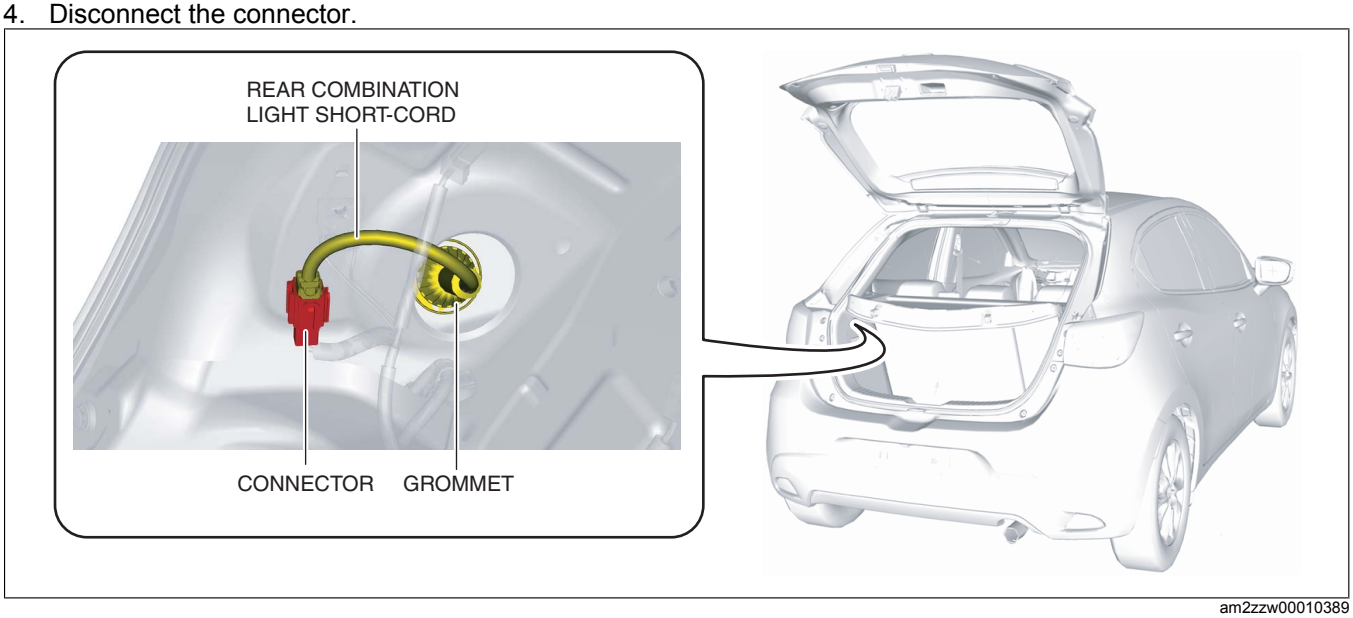


am2zzw00010389

5. Press the grommet to the outside from inside the body.
6. Remove the rear combination light short-cord.
7. Install in the reverse order of removal.