REAR COMBINATION LIGHT SHORT-CORD INSPECTION

id091800025200


Rear Combination Light (Bulb Type)

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
2. Remove the rear combination light. (See REAR COMBINATION LIGHT REMOVAL/INSTALLATION.)
3. Partially peel back the trunk side trim. (See TRUNK SIDE TRIM REMOVAL/INSTALLATION.)
4. Remove the rear combination light short-cord. (See REAR COMBINATION LIGHT SHORT-CORD REMOVAL/INSTALLATION.)
5. Verify that the continuity between the rear combination light short-cord terminals is as indicated in the table.

: Bulb

Test condition	Rear wiring harness connector terminal			
	A	B	C	E
Under any condition	○		○	○
		○	○	○
			○	○

am2zzw00010769

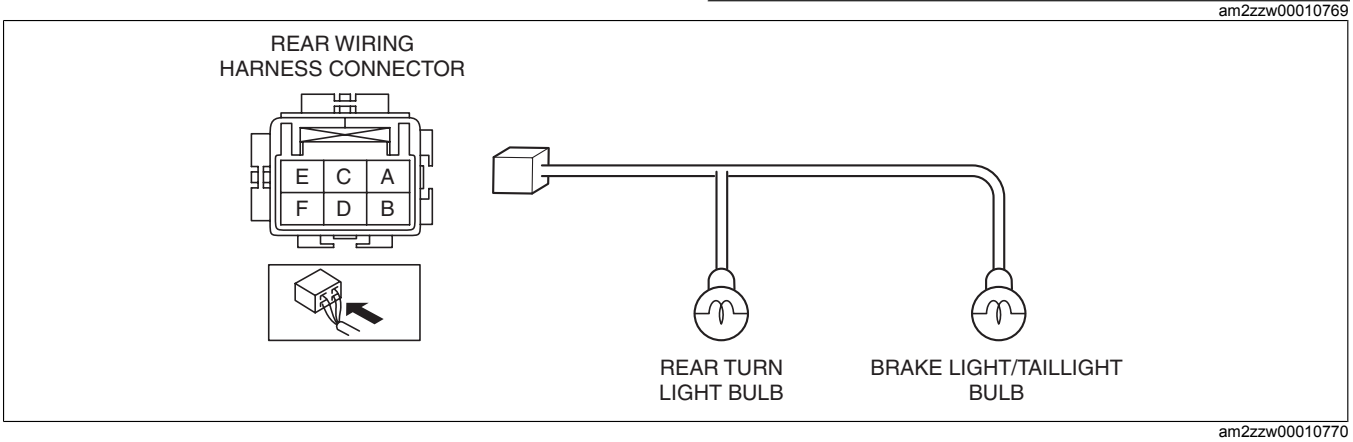

am2zzw00010770

- If not as indicated in the table, replace the rear turn light bulb, the brake light/taillight bulb or the rear combination light short-cord. (See REAR TURN LIGHT BULB REMOVAL/INSTALLATION.) (See BRAKE LIGHT/TAILLIGHT BULB REMOVAL/INSTALLATION.) (See REAR COMBINATION LIGHT SHORT-CORD REMOVAL/INSTALLATION.)

Rear Combination Light (LED Type)


1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
2. Remove the rear combination light. (See REAR COMBINATION LIGHT REMOVAL/INSTALLATION.)
3. Partially peel back the trunk side trim. (See TRUNK SIDE TRIM REMOVAL/INSTALLATION.)
4. Remove the rear combination light short-cord. (See REAR COMBINATION LIGHT SHORT-CORD REMOVAL/INSTALLATION.)

5. Verify that the continuity between the rear combination light short-cord terminals is as indicated in the table.

: Bulb
: Continuity

Test condition	Rear wiring harness connector terminal				Brake light/taillight connector terminal		
	A	B	C	E	A	B	C
Under any condition	○—(∩)—○			○			
	○	○		○	○		
			○		○	○	
				○			○

am2zzw00010771

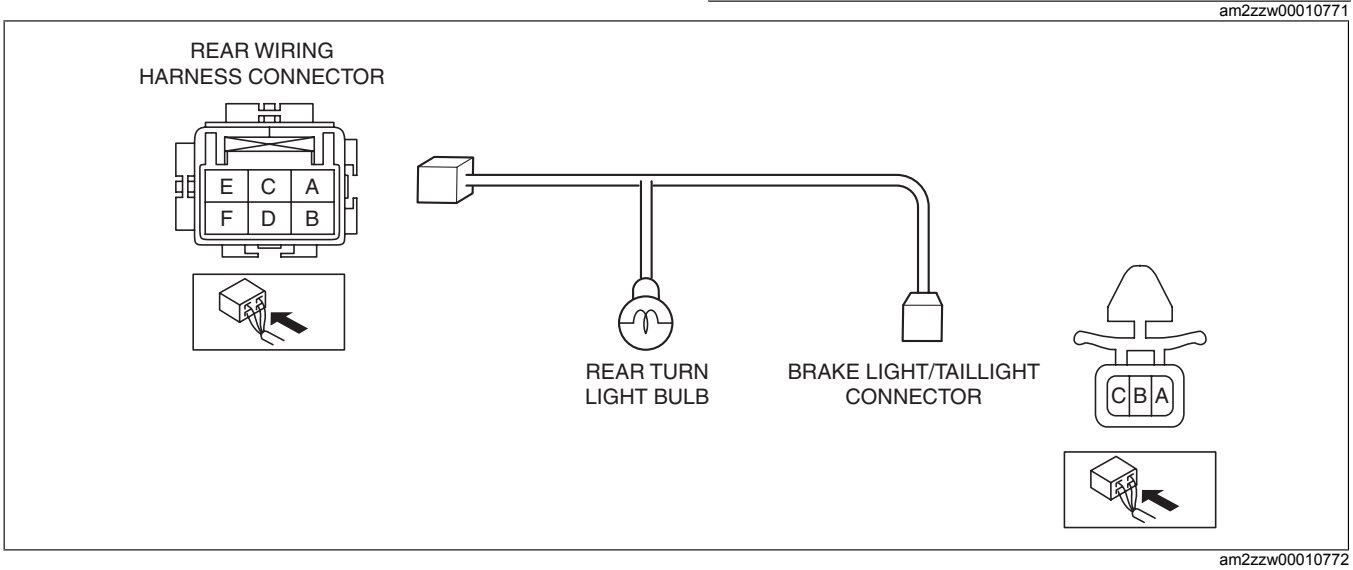

am2zzw00010772

- If not as indicated in the table, replace the rear turn light bulb or the rear combination light short-cord. (See REAR TURN LIGHT BULB REMOVAL/INSTALLATION.) (See REAR COMBINATION LIGHT SHORT-CORD REMOVAL/INSTALLATION.)