
LICENSE PLATE LIGHT SHORT-CORD REMOVAL/INSTALLATION

id091800025300


1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Remove the following parts:
   (1) Rear combination light (See REAR COMBINATION LIGHT REMOVAL/INSTALLATION.)
   (2) Rear splash shield (See SPLASH SHIELD REMOVAL/INSTALLATION.)
   (3) Rear bumper (See REAR BUMPER REMOVAL.) (See REAR BUMPER INSTALLATION.)
3. Disconnect the connectors.

L.H.D.

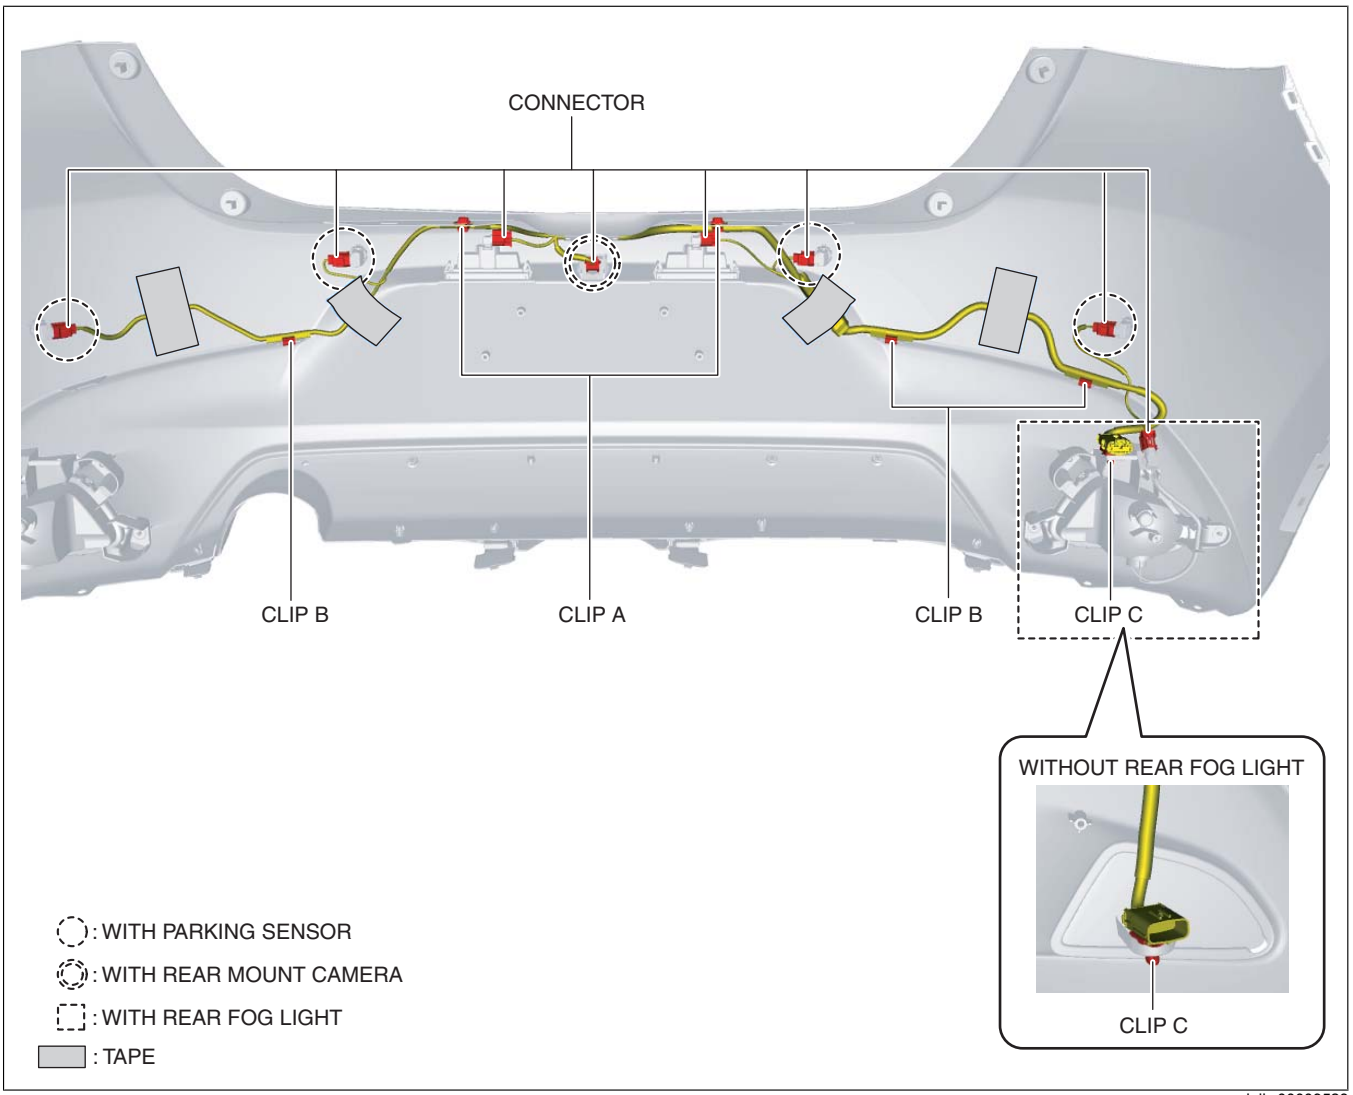


adejjw00009523

R.H.D.

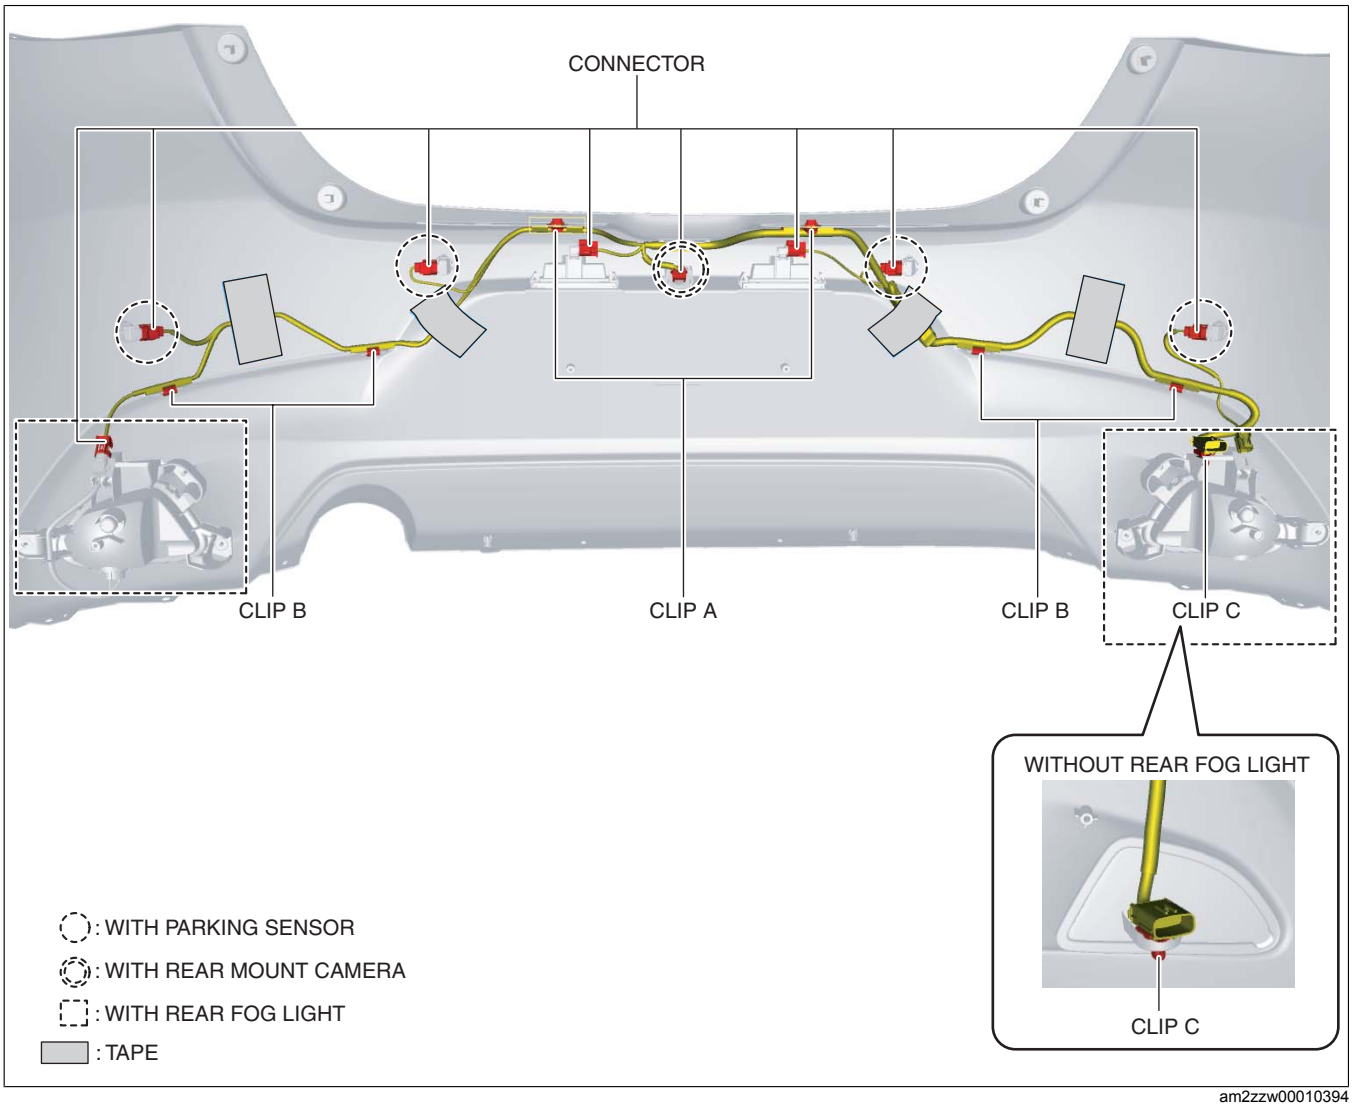

am2zzw00010394

4. While pressing the clip A tabs in the direction of arrows (1) shown in the figure, press the clip A in the direction of arrow (2) to remove it from the rear bumper.

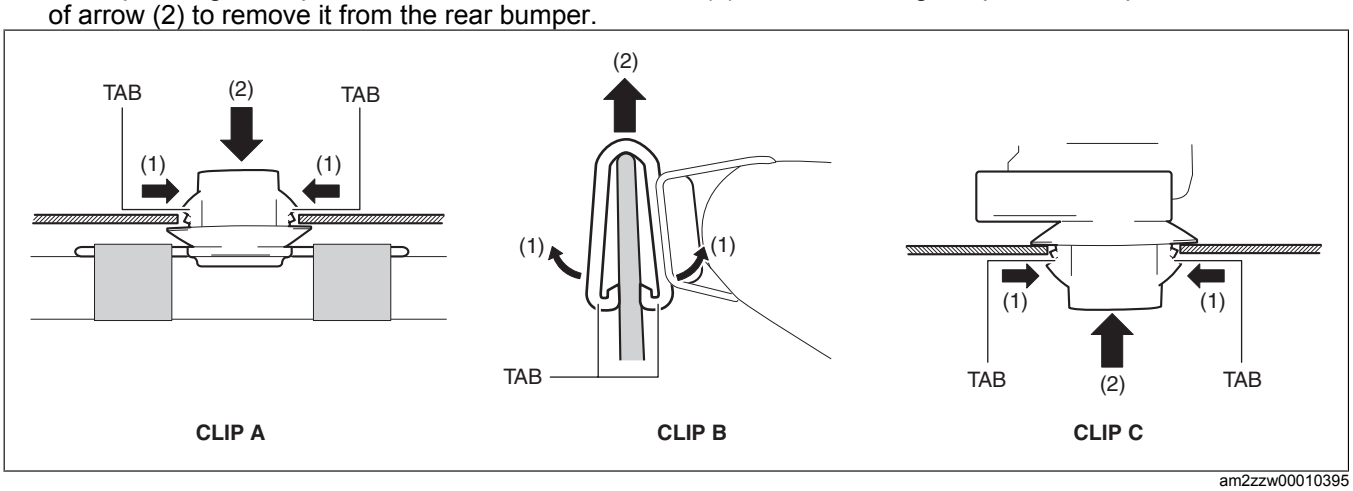

am2zzw00010395

5. While pulling the clip B tabs in the directions of arrows (1) shown in the figure, pull clip B in the direction of arrow (2) and remove it from the rear bumper.
6. While pressing the clip C tabs in the direction of arrows (1) shown in the figure, press the clip C in the direction of arrow (2) to remove it.
7. Remove the tape.
8. Remove the license plate light short-cord.
9. Install in the reverse order of removal.